## **COMP2611: Computer Organization**

# **Data Representation**


# Binary numbers and 2's Complement

- Bits: are the basis for binary number representation in digital computers
- ☐ What you will learn here:
  - □ How to represent negative integer numbers?
  - □ How to represent fractions and real numbers?
  - What is a representable range of numbers in a computer?
  - □ How to handle numbers that go beyond the representable range?
- ☐ To be covered in Computer Arithmetic:
  - □ Arithmetic operations: How to add, subtract, multiply, divide binary numbers
  - □ How to build the hardware that takes care of arithmetic operations

- Numbers can be represented in any base
  - □ Human: decimal (base 10, has 10 digits 0,1,...,9)
  - □ Computer: binary (base 2, has 2 digits, 0,1)
- □ Positional Notation: value of the ith digit d is d x Basei

$$1101_2 = (1 \times 2^3) + (1 \times 2^2) + (0 \times 2^1) + (1 \times 2^0)_{10} = 13_{10}$$

- $\square$  Bits are grouped and numbered 0, 1, 2, 3 ... from <u>right</u> to the <u>left</u>:
  - □ Byte: a group of 8 bits
  - □ Word: a group of 32 or 64 bits

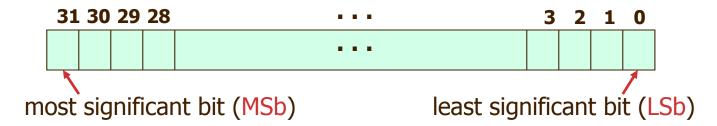

□ Value of the 32-bit integer binary numbers =

$$(b_{31} \times 2^{31}) + (b_{30} \times 2^{30}) + ... + (b_1 \times 2^1) + (b_0 \times 2^0)$$

How can we represent negative integer values in binary?

- □ All computers use 2's complement representation for signed numbers
- ☐ The most significant bit is called the sign bit:
  - □ When it is 0 the number is non-negative
  - □ When it is 1 the number is negative
  - The positive half uses the same representation as before
  - ☐ The negative half uses the conversion from the positive value illustrated below:
  - □ Ex: What is the representation of -6 in 2's complement on 4 bits?

```
i) Start from the representation of +6 0110_2 = 6_{10}ii) Invert bits to get 1's complement 1001_2 = -7_{10}iii) Add 1 to get 2's complement 1010_2 = -6_{10}
```

■ Ex: What is the representation of -6 in 2's complement on 8 bits?

```
i) Representation of +6 0000 \ 0110_2 = 6_{10}
ii) Invert: 1111 \ 1001_2 = -7_{10}
iii) Add 1 1111 \ 1010_2 = -6_{10}
```

■ Ex: What is the representation of -6 in 2's complement on 32 bits?

```
i) Start from the representation of +6 0000\ 0000\ 0000\ 0000\ 0000\ 0000\ 00110_2 = 6_{10} ii) Invert bits to get 1's complement 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 11111\ 1111\ 1111\ 1111\ 1111\ 11111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 11111\ 11111\ 11111\
```

- **□ 1's complement** 
  - MSb as in sign
  - □ Invert all the other bits
  - ☐ Given a positive number, negate all bits to get negative equivalent

Decimal	Signed	1's complement	2's complement
number	magnitude		
3	011	011	011
2	010	010	010
1	001	001	001
0	000	000	000
-0	100	111	
-1	101	110	111
-2	110	101	110
-3	111	100	101
-4			100


- We don't need 2 representations for 0
- □ 2's complement = 1's complement + 1

 $\square$  In One's Complement we have: if  $\mathbf{X} = \mathbf{0}$  then  $\mathbf{X} = \mathbf{1}$ 

$$x + \bar{x} = 1111...111_2$$

 $\square$  In 2's complement 111...111<sub>2</sub> = -1, therefore

$$x + x = 1111...111_2 = -1$$
  
 $x + 1 = -x$ 

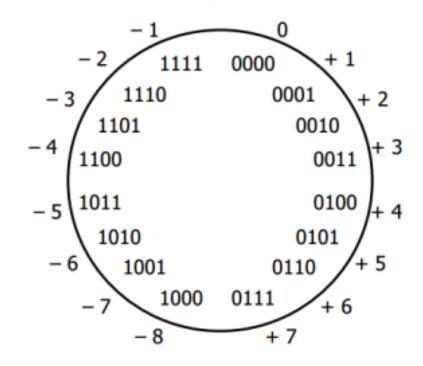

- □ Largest integer represented by a 32 bit word:
- ☐ Smallest integer represented by a 32 bit word:

```
1000 0000 0000 0000 0000 0000 0000 _2 = -2^{31}_{10} = -2,147,483,648_{10}
```


- Example: what is largest and smallest integer represented by 8 bits (16 bits)
  - □ Largest integer

```
0111 1111<sub>2</sub> = 0x7F = 127 = 128 - 1 = 2^7 - 1
0111 1111 1111<sub>2</sub> = 0x7FFF = 32767 = 32768 - 1 = 2^{15} - 1
```

□ Smallest integer

```
1000\ 0000_2 Invert and add 1: 0111\ 1111_2\ + 1 = 1000\ 0000_2\ = 2^7 = 128 => -128 1000\ 0000\ 0000\ 0000_2 Invert – add 1: 0111\ 1111\ 1111\ 1111_2\ + 1 = 0x8000\ = 2^{15} = 32768 => -32768
```

- ☐ Given the number of bits used in representing a signed integer
  - □ **Overflow** (signed integer)
  - The value is bigger than the largest integer that can be represented
  - □ **Underflow** (signed integer)
  - The value is smaller than the smallest integer that can be represented

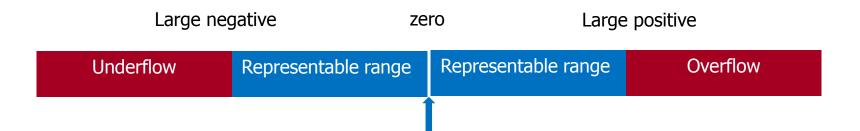

- **□** Signed numbers
  - negative or non-negative integers, e.g. int in C/C++
- **□** Unsigned numbers
  - non-negative integers, e.g. unsigned int in C/C++
- **□** Ranges for signed and unsigned numbers
  - ☐ 32 bit words signed:
    - from

- to
  - **1**000 0000 0000 0000 0000 0000 0000<sub>2</sub> =  $-2^{31}_{10}$  =  $-2,147,483,648_{10}$
- □ 32 bit words unsigned:

  - to  $1111 \ 1111 \ 1111 \ 1111 \ 1111 \ 1111 \ 1111_2 = (2^{32} 1)_{10} = 4,294,967,295_{10}$

□ Consider using a cast in C/C++ on a 32 bit machine

- ☐ What are the values of upper 24 bits in i?
- ☐ Similar things happen in hardware when an instruction loads a 16 bit number into a 32 bit register (hardware variable)
- ☐ Bits 0~15 of the register will contain the 16-bit value
- $\square$  What should be put in the remaining 16 bits (16~31) of the register?
- □ **Zero extension** fills missing bits with 0
  - ☐ Bitwise logical operations (e.g. bitwise AND, bitwise OR)
  - Casting unsigned numbers to larger width
- □ **Sign extension** is a way to **extend signed integer** to more bits

- $\square$  Bits  $0\sim15$  of the register will contain the **16bit value**
- $\square$  What should be put in the remaining 16 bits (16~31) of the register?

31	. 30	29	28	 <b>15</b>	• • •	3	2	1	0
	?	?	?	 1	1	1	1	1	0

- ☐ Depends on the sign of the 16 bit number
  - ☐ If sign is 0 then fill with 0
  - $\ \square$  If sign is 1 then fill with 1
- ☐ For example:
- □ Does sign extension preserve the same value?

# 2. Floating Point Numbers

- ☐ In addition to signed and unsigned integers, we also need to represent
  - Numbers with fractions (called real numbers in mathematics)
    - e.g. 3.1416
  - Very small numbers
    - e.g., 0.0000000001
  - Very large numbers
    - e.g., 1.23456 x 10<sup>10</sup> (a number a 32-bit integer can't represent)
- ☐ In decimal representation, we have **decimal point**
- > In binary representation, we call it binary point

$$101.11_2 = (1 \times 2^2) + (0 \times 2^1) + (1 \times 2^0) + (1 \times 2^{-1}) + (1 \times 2^{-2})_{10} = 5.75_{10}$$

- ☐ Such numbers are called **floating point** in computer arithmetic
- > Because the binary point is not fixed in the representation

## **Scientific Notation & Normalized Scientific Notation 16**

- **□** Scientific notation
  - A single digit to the left of the decimal point
  - $\Box$  e.g. 1.23 x 10<sup>-3</sup>, 0.5 x 10<sup>5</sup>
- Normalized scientific notation
  - Scientific notation with no leading 0's
  - $\Box$  e.g. 1.23 x 10<sup>-3</sup>, 5.0 x 10<sup>4</sup>
- ☐ Binary numbers can also be represented in scientific notation
- □ All normalized binary numbers always start with a 1

$$1.xxx...xx_{two} \times 2^{yyy...yyy_{two}}$$

 $\square$  Example  $101.11_2 = 1.0111_2 \times 2^{10_2}$ 

- ☐ Single-precision uses 32 bits
- ☐ Sign-and-magnitude representation:

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

S	exponent	Significand/Mantissa
1 bit	8 bits	23 bits

- Interpretation
  - $\square$  S = sign; F = significand; E = exponent
  - □ Value represented =  $(-1)^s x F x 2^E$
  - Roughly gives 7 decimal digits in precision
  - $\square$  Exponent scale of about  $10^{-38}$  to  $10^{+38}$
- □ Compromise between sizes of exponent and significand fields:
  - $\square$  Increase size of **exponent**  $\Rightarrow$  increase representable range
  - □ Increase size of **significand**  $\Rightarrow$  increase accuracy

- Double-precision floating-point uses 64 bits
  - In 32 bit architectures like MIPS, each double-precision number requires two MIPS words
  - □ 11 bits for exponent, 52 bits for significand

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

s	Exponent	Significand/Mantissa
1 bit	11 bits	20 bits

#### Significand/Mantissa (continued)

32 bits

- ☐ Provides precision of about 16 decimals
- $\Box$  Exponent scale from  $10^{-308}$  to  $10^{+308}$

- Most computers use this standard for both single and double precision
- Why use a standard floating-point representation?
- > Simplify porting floating-point programs across different computers
- □ To pack even more bits into the significand
  - ☐ This standard makes the leading 1 bit (in 1.xx ... xxx) implicit
  - □ Interpretation: (-1)<sup>s</sup> x (1 + 0.significand) x 2<sup>E</sup>
  - Effective number of bits used for representing the significand:
    - 24 (i.e., 23 + 1) for single precision
    - 53 (i.e., 52 + 1) for double precision
  - Special case:
    - Since 0 has no leading 1, it is given the reserved exponent value 0 so that the hardware does not attach a leading 1 to it

#### **□** Computation of significand:

Significand = 
$$s_1 \times 2^{-1} + s_2 \times 2^{-2} + s_3 \times 2^{-3} + ...$$

 $\square$  The significand bits are denoted as  $s_1, s_2, s_3, ...,$  from left to right

### **☐** To allow quick comparisons in hardware implementation:

- The sign is in the most significant bit
- The exponent is placed before the significand (Comparisons mean "less than", "greater than", "equal to zero")

#### □ How to represent a NEGATIVE exponent?

Biased exponent: a bias is implicitly added to the exponent

$$(-1)^{s}$$
 x  $(1 + 0.significand)$  x  $2^{(E-bias)}$ 

- $\Box$  bias = 127 for single precision, bias = 1023 for double precision
- $\Box$  The most negative exponent =  $0_2$ , the most positive =  $11...11_2$

■ What decimal number is represented by this word (single precision)?

#### □ Answer:

$$(-1)^{s} \times (1 + Significan d) \times 2^{(E-Bias)}$$

$$= (-1)^{1} \times (1 + 0.25) \times 2^{(129-127)}$$

$$= -1 \times 1.25 \times 2^{2}$$

$$= -1.25 \times 4$$

$$= -5.0$$

 $\square$  Give the binary representation of -0.75<sub>10</sub> in single & double precisions

#### □ Answer

- $0.75_{10} = -0.11_{2}$  0.75 \* 2 =**1.50**, S1 =**1** 
  - 0.50 \* 2 = 1.00, S2 = 1; stop because the fraction is 0.00
- □ Scientific notation: -0.11<sub>2</sub> x 2<sup>0</sup>
- □ Normalized scientific notation: -1  $\xrightarrow{1}$  x  $2^{-1}$  Sign = 1 (negative), exponent = -1
- Single precision:

$$S = 1$$
,  $E = 011111110$ , significand = 100...00 (23 bits)  
= -1+127, (127 is the bias)

Double precision:

$$S = 1$$
,  $E = 0111111111110$ , significand =  $100...00$  (52 bits) =  $-1+1023$ , (1023 is the bias)


Single precision:	Denormalized	Normalized		
Exponent Significand	0	1 - 254	255	
0	0	s F_127	$(-1)^{S} \times (\infty)$	
<b>≠</b> 0	$(-1)^{s} \times (0.F) \times (2)^{-126}$	$(-1)^{S} \times (1.F) \times (2)^{E-127}$	non-numbers e.g. $0/0$ , $\sqrt{-1}$	

#### Double precision:

Exponent Significand	0	1 - 2046	2047
0	0	$(-1)^{S} \times (1.F) \times (2)^{E-1023}$	$(-1)^{S} \times (\infty)$
<b>≠</b> 0	$(-1)^{s} \times (0.F) \times (2)^{-1022}$		non-numbers e.g. $0/0$ , $\sqrt{-1}$


```
\mathbf{0}
-0
+ infinity
- infinity
        NaN (Not a Number)
0 | 11111111 | 0100110001000100001000 =
1 | 11111111 | 0100110001000100001000 =
        NaN
```

- □ Overflow (floating-point)
  - A positive exponent becomes too large to fit in the exponent field
- Underflow (floating-point)
  - A negative exponent becomes too large to fit in the exponent field

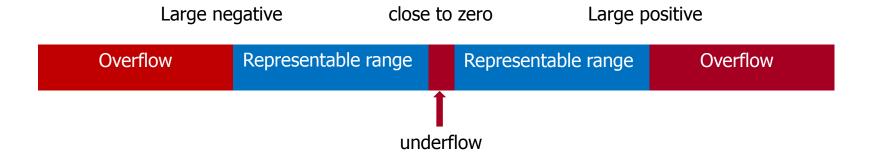

## **Communicating with People**

- **☐** How to represent Characters
  - Characters are unsigned bytes e.g., in C++ Char
  - Usually follow the ASCII standard
  - ☐ Uses 8 bits unsigned to represent a character

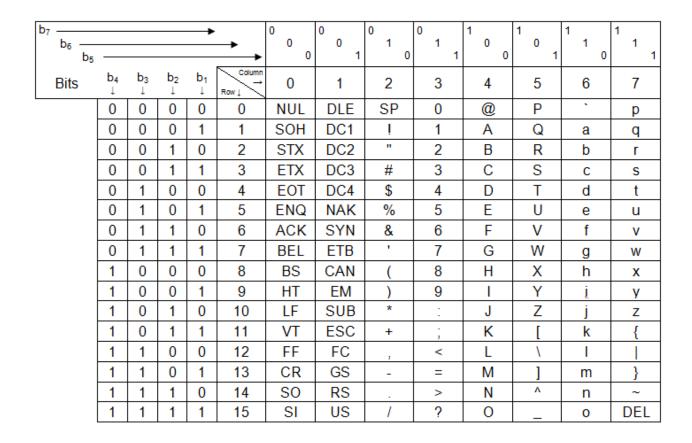

- What does the following 32 bit pattern represent: 0x32363131
  - ☐ If it were a 2's complement integer

```
the MSb is 0 therefore this is a positive number evaluation left as an exercise
```

□ An unsigned number

```
Same value as above
```

□ A sequence of ASCII encoded bytes: 2611

```
Checking the ascii table gives:
```

```
0x32 = code for character '2'
```

0x36 = code for character '6'

0x32 = code for character '1'

0x32 = code for character '1'

□ A 32 bit IEEE 754 floating point number

```
s= 0, E = 01100100, S = 01101100011000110001
This is a normalized number so E is biased.
```

- □ Consider building a floating point number system like the IEEE754 standard on 8 bit only, with 3 bits being reserved for the exponent.
  - What is the value of the bias?

3

□ What is the representation of 0?

```
0 000 0000
```

□ What is the representation of -4?

```
-4 = -1.0 \times 2^2
```

S=1, F= 0 and the biased exponent must be

$$E - 3 = 2 \text{ or } E = +5$$

So 
$$-4 = 1 101 0000$$

□ What is the next value representable after – 4?

```
1 101 0001 = - 4.25 so we can see that 4 bits for the significand is not accurate enough
```

- □ What does the byte 1 111 1011 represent? NAN
- □ What is the representation of  $-\infty$ ? 1 111 0000

- □ 2's complement representation for signed numbers
- □ Floating-point numbers
  - Representation follows closely the scientific notation
  - □ Almost all computers, including MIPS, follow IEEE 754 standard
- □ **Single-precision** floating-point representation takes 32 bits
- □ **Double-precision** floating-point representation takes 64 bits
- □ Overflow and underflow in signed integer and floating number