


Buzzer Experiment

Introduction to buzzer

Some appliances often buzz when in an electric state, this is actually from a buzzer, and the annoying bell at school is but a larger buzzer. There are two kinds of buzzers. One is active buzzer, the other is passive buzzer. "active" and "passive" don't mean the common power source, but a buzzer with or without internal oscillators. Active buzzer will buzz as long as you electricity it, but the frequency is fixed. Passive buzzer, buzzer without internal oscillators, will not buzz when electrified internal oscillators, it requires 2~5 kHz square wave to actuate, then wave forms in different frequency can buzz with corresponding sound.

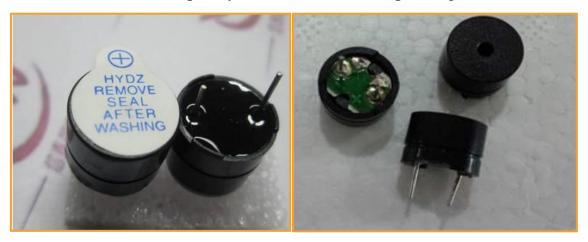

Active buzzer

Passive buzzer

Experiment Purpose

Arduino can be used to create a lot of interactive work, the most common and most commonly is the display of sound and light. We have been used LEDs in experiments before, now we use PWM to drive buzzer to play sound of two frequencies. As long as the frequency matches the music score, we can hear wonderful music.


Component List

- Keywish Arduino Uno Mainboard
- Breadboard
- USB cable
- Passive buzzer*1
- Several jumper wires



Wiring of Circuit

Arduino UNO R3	buzzer
9	+
GND	-

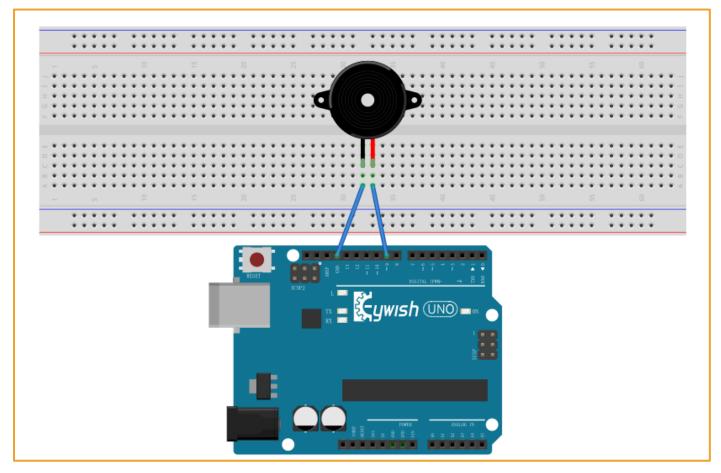

Notice that a buzzer has both a cathode and an anode. We can see the buzzer with two kinds of wiring, red and black, in the right physical diagram below. The connection of circuit and programming are quite simple, the program is similar to the former. Due to the control interface in the buzzer is also digital interface, high and low level from output will control the sound of the buzzer.



Code

Active buzzer:

```
int buzzer = 9;
void setup()
{
    pinMode(buzzer,OUTPUT);
}
void loop()
{
    digitalWrite(buzzer,HIGH); //sound production
    delay(1000);
    digitalWrite(buzzer,LOW);
    delay(1000);
}
```




Passive buzzer:

```
int buzzer = 9;  // set buzzer out pin
void frequence_1(void) // 1k HZ
   int i ;
   for(i=0;i<80;i++) {</pre>
      digitalWrite(buzzer,HIGH);
      delay(0.5);
      digitalWrite(buzzer,LOW);
      delay(0.5);
   }
void frequence_2(void) // 250 HZ
   int i ;
   for(i=0;i<100;i++) {</pre>
      digitalWrite(buzzer,HIGH);
      delay(2);
      digitalWrite(buzzer,LOW);
      delay(2);
   }
void setup()
   pinMode(buzzer,OUTPUT);
void loop()
   frequence 1();
   delay(100);
   frequence_2();
   delay(100);
}
```




Exeripment Result

Active buzzer:

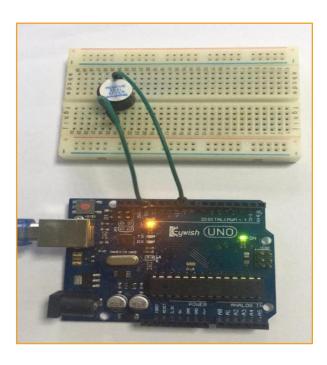

Passive buzzer:

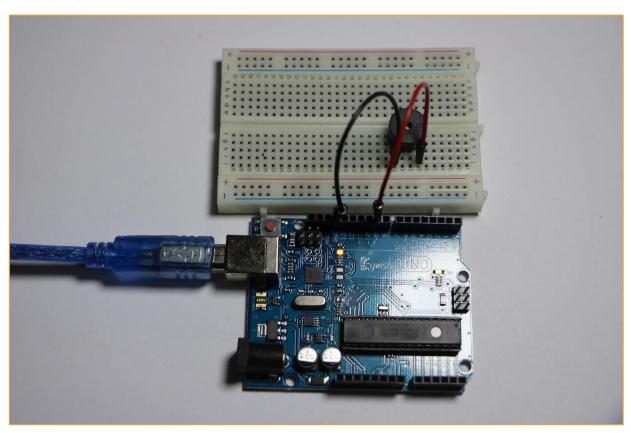

Once the program is downloaded, we can hear the sound of two kinds of frequencies from the buzz.



Mblck programming program

he program prepared by mBlock is shown in the figure below:

Active buzzer

```
sensor Program

forever

set digital pin 9 output as HIGH

wait 1 secs

set digital pin 9 output as LOW

wait 1 secs
```

Passive buzzer

```
sensor Program

forever

repeat 80

set digital pin 8 output as HIGH

wait 0.001 secs

set digital pin 8 output as LOW

wait 0.001 secs

repeat 100

set digital pin 8 output as HIGH

wait 0.002 secs

set digital pin 8 output as LOW


wait 0.002 secs

set digital pin 8 output as LOW


wait 0.002 secs
```

You can also open the program file directly with mblock, which is a. Sb2 file. Here are the steps to open it:



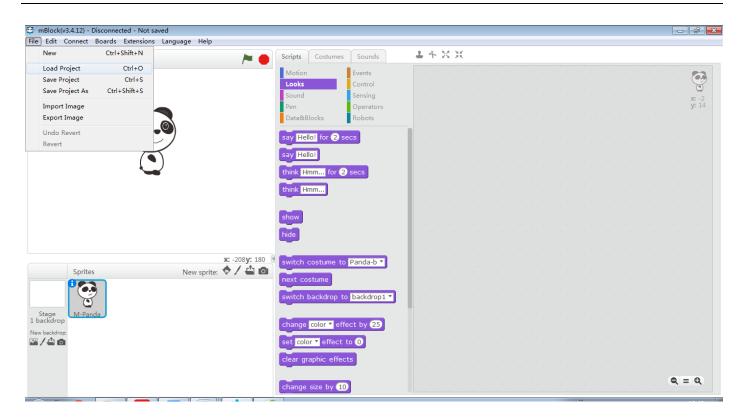


Active buzzer

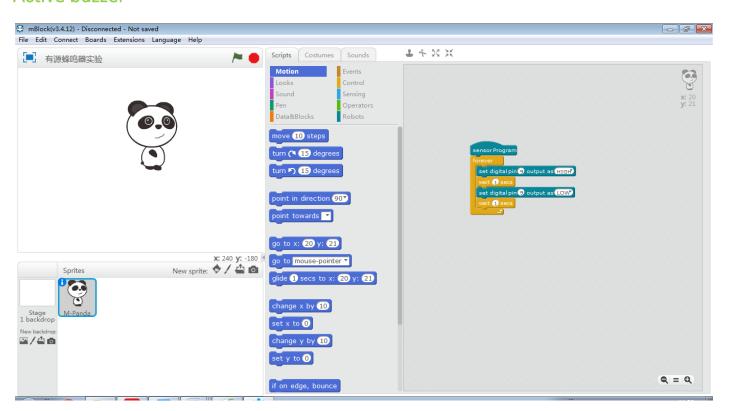


Passive buzzer



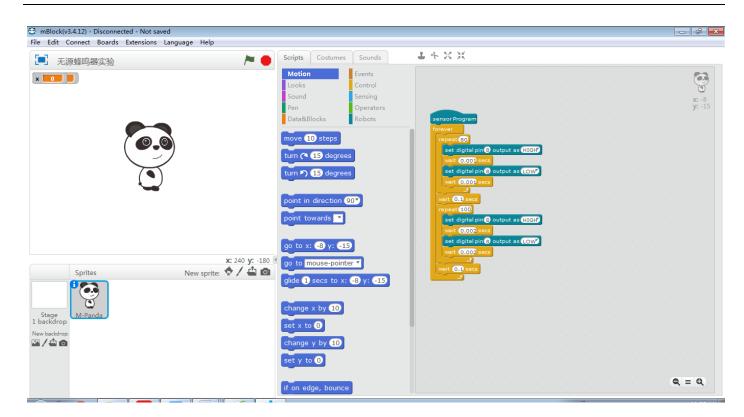

Mixly graphical programming program

Active buzzer module:

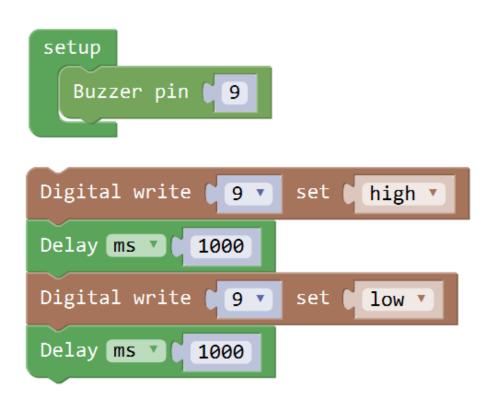

Passive buzzer module:



```
frequence_1
    count with i from 1 to 800 step 1
      DigitalWrite PIN# 🔰 🤊 🔻
                               Stat ( HIGH ▼
        Delay ms 🔻 🕽 0.5
                              Stat LOW *
        DigitalWrite PIN# ( 9 ▼
        Delay ms V 00.5
frequence_2
    count with i from 1 to 800
        DigitalWrite PIN# 9 v
                               Stat ( HIGH
        Delay ms 7 1 2
        DigitalWrite PIN# 9 7
        Delay ms 🕶 📜 2
do frequence_1
Delay ms 🔻 📜 1000
do frequence_2
Delay ms 🔻 📜 1000
```

MigicBlock graphical programming program

Active buzzer module:



```
Pin 9 ▼ Mode Output ▼
loop

Digitalwrite 9 ▼ HIGH ▼

Wait 1000 Millisecond

Digitalwrite 9 ▼ LOW ▼
```

passive buzzer module: