96-Place 16-17mm Acrylic Test Tube Rack

Assembly Instructions

Last updated: 24 July 2020



Copyright © 2020 Aaron Beckman


Permission is hereby granted, free of charge, to any person obtaining a copy of this hardware, software, and associated documentation files (the "Product"), to deal in the Product without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Product, and to permit persons to whom the Product is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Product.

THE PRODUCT IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE PRODUCT OR THE USE OR OTHER DEALINGS IN THE PRODUCT.


1. Parts List

Before starting, ensure that you have the following materials. Quantities are listed for 1 rack and 50 racks (in parentheses), as the laser cut acrylic will likely be arriving in batches of 50 or more.

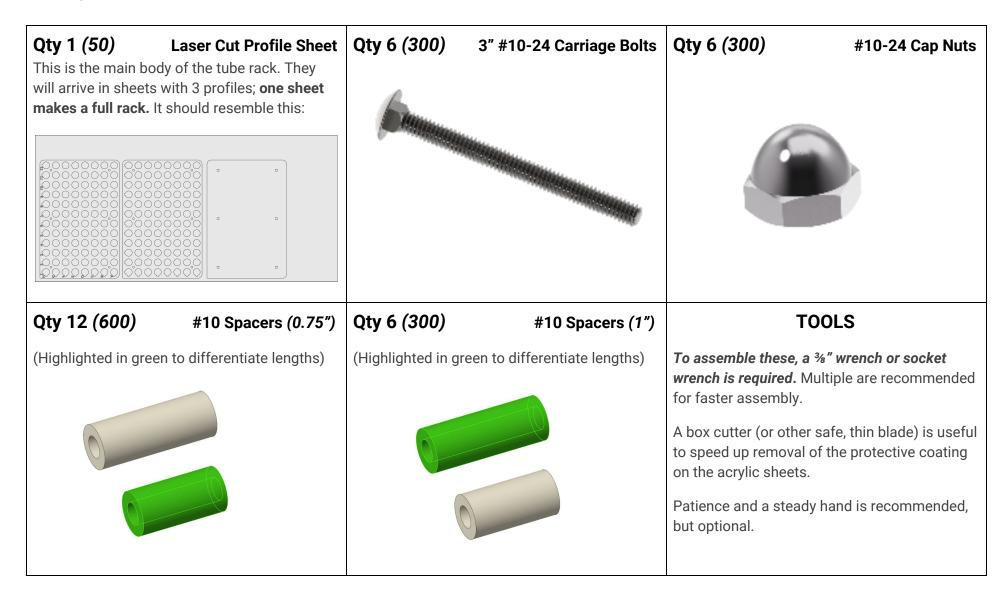

2. Acrylic Sheet Preparation

The laser cut sheets will arrive with a paper protective coating on both sides, and an additional adhesive coating on one side. First, remove the (potentially blue colored?) tape holding the whole sheet together. Remember, only the 3 main rectangular profiles are required (shown on right). The "off-cuts" should be set aside for disposal (the large outer part and all the small circles inside). These cannot be recycled with standard recycling services, but there may be some special services that can recycle acrylic (which is recommended as there will be a lot of waste from these parts).

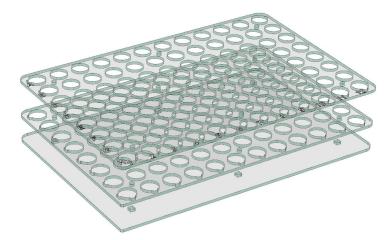

To remove the protective paper coating, follow the steps on the video link or QR code on the right.

The video demonstrates a fast process for removal of the paper coatings, which is otherwise a very tedious process, even for just a few sheets. **Organize these in 3-sheet stacks once finished. There should be one of each sheet shown below**

| HOLES + LABELS | I | HOLES | I | BASE |
|--|---|----------|---|------|
| 0000000 | | 0.000000 | | |
| \$000000 \$000000 \$000000 \$000000 | | 0000000 | | |
| | | 000000 | | |




https://youtu.be/8Ke5vbl900E

3. Main Assembly


Once parts are organized, assembly is only a few steps. Sheets are labeled as HOLES + LABELS | HOLES | BASE like the previous page.

1. Put the 6 bolts into the BASE sheet. As the bolts need to be standing upright for step 2, an easy way to do this is to put bolts in the holes from the bottom one at a time with the sheet off the side of a table/surface, sliding that part of the sheet onto the supporting table/surface once the bolt is in place. Note: make sure to align the square part underneath the head of the bolt with the square in the BASE sheet!

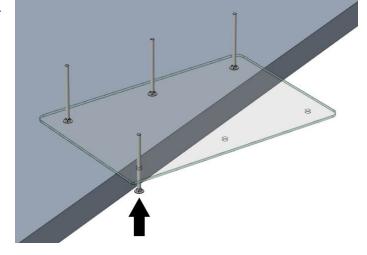

A bolt properly installed in the **BASE** sheet →

- 2. Put one **1**" spacer on each bolt, followed by the **HOLES** sheet, with the "sharp" corner lined up with the sharp corner on the **BASE** sheet. Remember, this sheet does **not** have any engraved numbers/letters on it, as it's more difficult to see than the top sheet.
- 3. Put two **0.75**" spacers on each bolt, followed by the **HOLES + LABELS** sheet. The bottom left corner is the "sharp" one, with the engravings readable from the top. It should look like **this image** →
- 4. Finally, screw a cap nut onto each bolt. **Note: the bolt is held from the bottom square part, meaning any excessive torque may cause the base acrylic to fracture.** To avoid this, screw each one on by hand (without tightening), and tighten *carefully* with a 3/8" wrench/socket wrench. I'm not able to give exact values, but just use your discretion when tightening. The acrylic can take a surprising amount of torque and be OK based on our revision 1 prototype test.

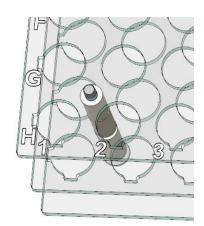

4. Final Checks

Several different drawings are provided to ensure the final racks match the original design. Use these to verify the orientation, and then the racks are complete!



