# **VLIW Processors**

CS/COE 1541 (Fall 2020) Wonsun Ahn



## Limits of Deep Pipelining

- Ideally, CycleTime<sub>Pipelined</sub> = CycleTime<sub>SingleCycle</sub> / Number of Stages
   In theory, can indefinitely improve performance with more stages
- Limitation 1: Cycle time does not improve indefinitely
  - With shorter stages, delay due to latches become significant
  - With many stages, hard to keep stage lengths perfectly balanced
- Limitation 2: CPI tends to increase with deep pipelines
  - Penalty due to branch misprediction increases
  - Stalls due to data hazards cause more bubbles
- Limitation 3: Power consumption increases with deep pipelines
  - Wires for data forwarding increases quadratically with depth
- Is there another way to improve performance?



#### What if we improve CPI?

• Remember the three components of performance?

$$\frac{\text{instructions}}{\text{program}}$$
 X  $\frac{\text{cycles}}{\text{instruction}}$  X  $\frac{\text{seconds}}{\text{cycle}}$ 

- Pipelining focused on seconds / cycle, or cycle time
- Can we improve cycles / instruction, or CPI?
  - O But the best we can get is CPI = 1, right?
  - O How can an instruction be executed in less than a cycle?



# Wide Issue Processors



#### From CPI to IPC

- How about if we **fetch two** instructions each cycle?
  - Maybe, fetch one ALU instruction and one load/store instruction


Instruction type		Pipe stages						
ALU or branch instruction	IF	ID	EX	MEM	WB			
Load or store instruction	IF	ID	EX	MEM	WB			
ALU or branch instruction		IF	ID	EX	MEM	WB		
Load or store instruction		IF	ID	EX	MEM	WB		
ALU or branch instruction			IF	ID	EX	MEM	WB	
Load or store instruction			IF	ID	EX	MEM	WB	
ALU or branch instruction				IF	ID	EX	MEM	WB
Load or store instruction				IF	ID	EX	MEM	WB

- Then, **IPC** (Instructions per Cycle) = 2
  - And by extension, CPI = 1 / IPC = 0.5!
- Wide-issue processors can execute multiple instructions per cycle



## Pipeline design for previous example

One pipeline for ALU/Branches and one for loads and stores

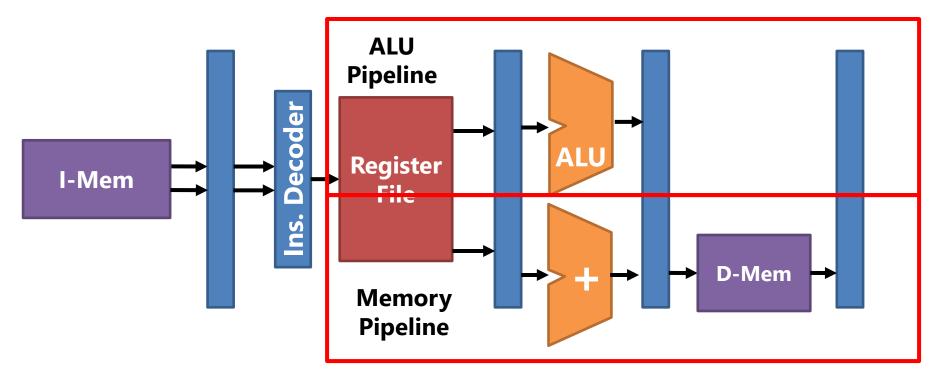


• Now new opportunities for structural hazards abound!




#### Structural Hazard in Storage Locations

- Two instructions must be fetched from instruction memory
  - → Add extra read ports to the instruction memory
- Two ALUs must read from the register file at the same time
  - → Add extra read ports to the register file
- Two instructions must writeback to register file at WB stage
  - → Add extra write ports to the register file

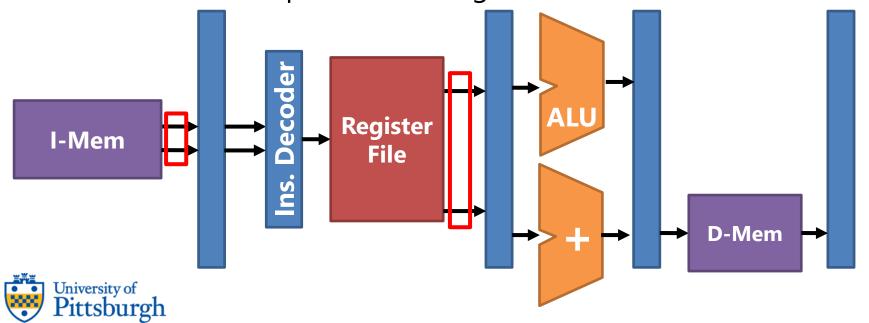

#### Structural Hazard in Functional Units

- Structural hazard on EX units
  - Top ALU can handle all arithmetic (+, -, \*, /)
  - Bottom ALU can only handle +, needed for address calculation
- Structural hazard on MEM unit
  - Top ALU pipeline does not have a MEM unit to access memory

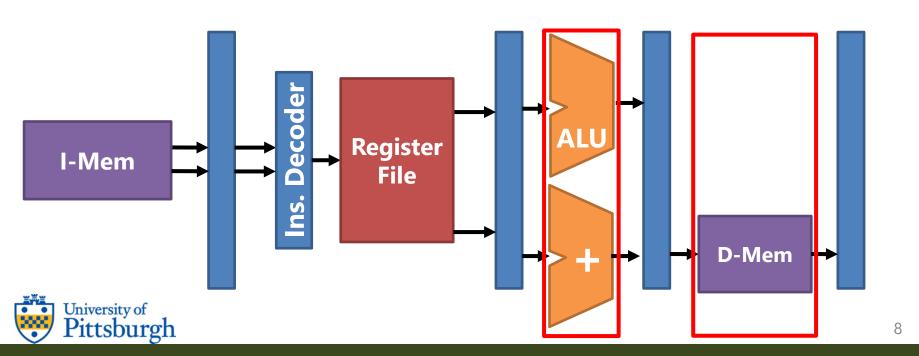

#### Structural Hazard in Functional Units

Code on the left will result in a timeline on the right
If it were not for the bubbles, we could have finished in 4 cycles!

1w	\$t0,	0(\$s1)
<b>1</b> w	\$t1,	-4(\$s1)
addi	\$t2,	\$t0, -8
add	\$t3,	\$t0, \$s1
add	\$t4,	\$s1, \$s1
SW	\$t5,	8(\$t3)
SW	\$t6,	4(\$s1)

CC	ALU Pipeline	Mem Pipeline
1		lw t0
2	addi t2	lw t1
3	add t3	
4	add t4	sw t5
5		sw t6



#### Structural Hazard Solution: Reordering

Of course we can come up with a better schedule
 While still adhering to the data dependencies

<b>1</b> w	\$t0,	0(\$	s <b>1</b> )
1w	\$t1,	-4(\$	s <b>1</b> )
addi	\$t2,	\$t0,	-8
add	\$t3,	\$t0,	<b>\$s1</b>
add	\$t4,	<b>\$</b> s1,	<b>\$s1</b>
SW	\$t5,	8(\$t3	3)
SW	\$t6.	4(\$s:	1)

CC	ALU Pipeline	Mem Pipeline
1		lw t0
2	addi t2	lw t1
3	add t3	
4	add t4	sw t5
5		sw t6



#### Why not just duplicate all resources?

- Have two full ALUs, have MEM units at both pipelines ...
  - That way, we can avoid those structural hazards in the first place
  - But that means more transistors and importantly more power
- Most processors have specialized pipelines for different instructions
  - o Integer ALU pipeline, FP ALU pipeline, Load/Store pipeline, ...
  - With smart scheduling, can still achieve high utilization
- Who does the scheduling? Well, we talked about this already ...
  - Compiler: Static scheduling
  - Processor: Dynamic scheduling



#### VLIW vs. Superscalar

- There are two types of wide-issue processors
- If the compiler does static scheduling, the processor is called:
  - VLIW (Very Long Instruction Word) processor
  - This is what we will learn this chapter
- If the processor does dynamic scheduling, the processor is called:
  - o **Superscalar** processor
  - This is what we will learn next chapter



# VLIW Processors



#### VLIW Processor Overview

- What does Very Long Instruction Word mean anyway?
  - o It means one instruction is very long!
  - Why? Because it contains multiple operations in one instruction
- A (64 bits long) VLIW instruction for our example architecture:

ALU/Branch Operation (32 bits) Load/Store Operation (32 bits)

• An example instruction could be:

addi \$t2, \$t0, -8 lw \$t1, -4(\$s1)


Or another example could be:

nop lw \$t1, -4(\$s1)



#### A VLIW instruction is one instruction

For all purposes, a VLIW instruction acts like one instruction
 It moves as a unit through the pipeline

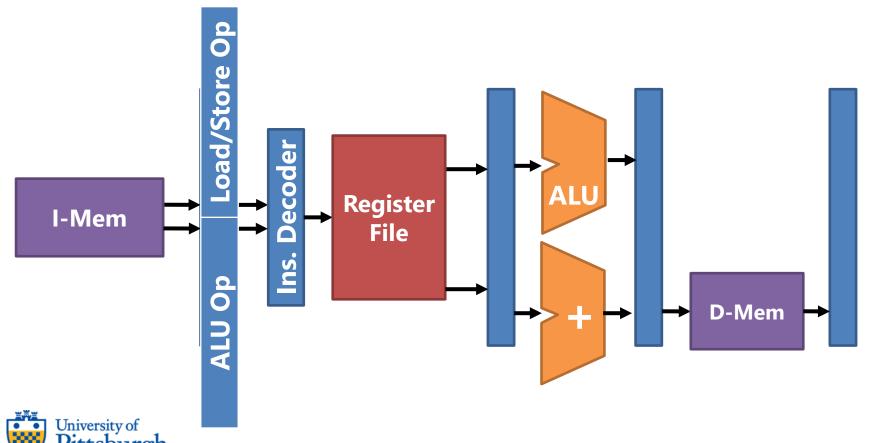

### VLIW instruction encoding for example

```
nop
lw $t0, 0($s1)

addi $t2, $t0, -8
lw $t1, -4($s1)

add $t3, $t0, $s1
nop
```

add	\$t4,	\$s1, \$s1
SW	\$t5,	8(\$t3)

```
nop
sw $t6, 4($s1)
```

Inst	ALU Op	Load/Store Op
1	nop	lw t0
2	addi t2	lw t1
3	add t3	nop
4	add t4	sw t5
5	nop	sw t6

- Each square is an instruction. (There are 5 instructions.)
- Nops are inserted by the compiler.



## VLIW instruction encoding (after reordering)

```
add $t4, $s1, $s1
lw $t0, 0($s1)
```

```
add $t3, $t0, $s1
sw $t6, 4($s1)
```

```
nop
sw $t5, 8($t3)
```

Inst	ALU Op	Load/Store Op
1	add t4	lw t0
2	addi t2	lw t1
3	add t3	sw t6
4	nop	sw t5

Same program with 4 instructions!



#### VLIW Architectures are (Very) Power Efficient

- All scheduling is done by the compiler offline
- No need for the Hazard Detection Unit
  - Nops have already been inserted by the compiler
- No need for a dynamic scheduler
  - Which can be even more power hungry than the HDU
- Will still need the Forwarding Unit
  - Unless you are willing to suffer data hazard stalls
  - But VLIW processors aren't typically deeply pipelined
     (They get performance out of wide execution, not frequency)



### VLIW Software is not very Portable

- Q: Wouldn't this tie the ISA to a particular processor design?
  - One that is 2-wide and has an ALU unit and a Load/Store unit?
  - O What if future processors are wider or have different designs?
- Drawback of VLIW: ties binary to a particular processor
  - Code must be recompiled repeatedly for future processors
  - Not suitable for releasing general purpose software
  - Reason VLIW is most often used for embedded software (Because embedded software is not expected to be portable)
- Is there a way to get around this problem?



#### Future Proofing VLIW Software

- There are mainly two ways VLIW software can become portable
- 1. Create bundles, not instructions
  - A bundle is a group of operations that can execute together
  - Wider processors can fetch multiple bundles in one cycle
    - A "stop" bit tells processor to stop fetching the next bundle
  - Intel Itanium EPIC(Explicitly parallel instruction computing)
- 2. Binary translation
  - Have firmware translate binary to new VLIW ISA on the fly
  - Open't this go against the power efficiency of VLIWs?
    - Yes, but if SW runs for long time, one-time translation is nothing
  - o Transmeta Crusoe converted x86 to VLIW so it can run x86 apps



#### Success of VLIW depends on the Compiler

- Up to the compiler to create schedule with minimal nops
  - Use reordering to fill nops with useful operations
- All the challenges of static scheduling apply here too
  - Compiler must know about the pipeline (already discussed this)
  - Length of MEM stage is hard to predict (due to Memory Wall)
  - o Data dependencies are hard to figure out by the compiler
- But these challenges become especially acute for VLIW
  - o For 4-wide VLIW, need to find 4 operations to fill one bubble!
  - Operations in one instruction must be data independent
    - Data forwarding will not work within one instruction!



### Predicates Help in Compiler Scheduling

- Use of predicates can be a big help in finding useful operations
   Control dependencies (as well as data deps) prevent reordering
  - lw \$t1, 0(\$s0)
    addi \$t1, \$t1, 1
    bne \$s1, \$s2, else
    Can only reorder within this block
    then:
     else:
     li \$t0, 1
     li \$t0, 0


o Predicates can convert if-then-else code into straight-line code

```
pne $p1, $s1, $s2
lw $t1, 0($s0)
li.p $t0, 1, !$p1
li.p $t0, 0, $p1
addi $t1, $t1, 1
- Can reorder within a larger window!
```



# But Loops are Particularly Challenging

- Loops are particularly challenging to the compiler. Why?
  - Scheduling is limited to within the loop
  - o For tight loops, not much compiler can do with a handful of insts

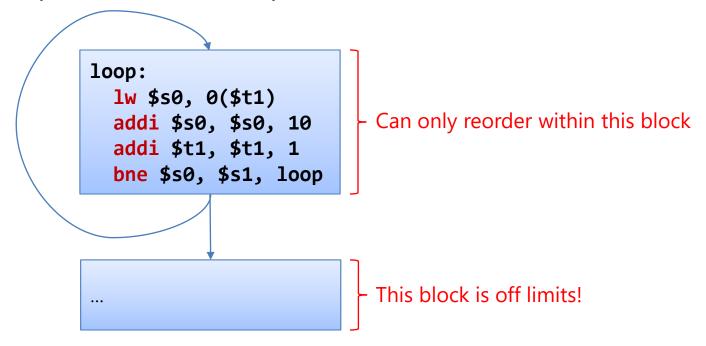



#### Compiler Scheduling of a Loop

Suppose we had this example loop (in MIPS):

• It's basically iterating over an array adding \$s2 to each element



#### Compiler Scheduling of a Loop

Let's first reschedule to hide the use-after-load hazard

```
Loop:
                         Loop:
     $t0, 0($s1)
                           lw
 lw
                                 $t0, 0($s1)
 add $t0, $t0, $s2
                            addi $s1,
                                      $$1,
 sw $t0, 0($s1)
                           add $t0, $t0, $s2
                                $t0, 4($s1)
 addi $s1, $s1,
                            SW
      $s1, $zero, Loop
                                $s1, $zero, Loop
                            bne
```

- Now the dependence on \$t0 is further away
- Note we broke a WAR (Write-After-Read) dependence between:
  - o sw \$t0, 0(\$s1)
  - o addi \$s1, \$s1, -4
- But we compensated by changing the sw offset to 4:
  - SW \$t0, 4(\$s1)
    University of

#### Compiler Scheduling of a Loop

Below is the VLIW representation of the rescheduled MIPS code:

Loop:		
lw	\$t0,	0(\$s1)
addi	<b>\$s1</b> ,	\$s1, -4
add	\$t0,	\$t0, \$s2
SW	\$t0,	4(\$s1)
bne	<b>\$s1</b> ,	\$zero, Loop

	ALU/Branch Op	Load/Store Op
Loop:	addi \$s1, \$s1, -4	lw \$t0, 0(\$s1)
	nop	nop
	add \$t0, \$t0, \$s2	nop
	bne \$s1, \$0, Loop	sw \$t0, 0(\$s1)

- We can't fill any further nops due to data hazards
- In terms of MIPS instructions, IPC = 5/4 = 1.25
  - o Ideally, IPC can reach 2 so we are not doing very well here
- Is there a way compiler can expand the "window" for scheduling?
  - o Idea: use multiple iterations of the loop for scheduling!



# Loop unrolling



#### What is Loop Unrolling?

- Loop unrolling: a compiler technique to enlarge loop body
  - By duplicating loop body for an X number of iterations

- What does this buy us?
  - More instructions inside loop to reorder and hide bubbles
  - But less instructions to execute as a whole
    - Less frequent loop branches
    - Two i++ are merged into one i+= 2



#### Let's try unrolling our example code

• If you unroll the left loop 2X, you get the right loop:

```
Loop:

lw $t0, 0($s1)

addi $s1, $s1, -4

add $t0, $t0, $s2

sw $t0, 4($s1)

bne $s1, $zero, Loop
```

```
Loop:

lw $t0, 0($s1)

lw $t1, -4($s1)

addi $s1, $s1, -8

add $t0, $t0, $s2

add $t1, $t1, $s2

sw $t0, 8($s1)

sw $t1, 4($s1)

bne $s1, $zero, Loop
```

- Most instructions are duplicated but using \$t1 instead of \$t0
- Duplicates of addi \$s1, \$s1, -4 are merged into one instruction:
  - o addi \$s1, \$s1, -8



#### Let's try unrolling our example code

2X Unrolled loop converted to VLIW:

```
Loop:

lw $t0, 0($s1)

lw $t1, -4($s1)

addi $s1, $s1, -8

add $t0, $t0, $s2

add $t1, $t1, $s2

sw $t0, 8($s1)

sw $t1, 4($s1)

bne $s1, $zero, Loop
```

	ALU/Branch Op	Load/Store Op
Loop:	nop	<pre>lw \$t0, 0(\$s1)</pre>
	addi \$s1, \$s1, -8	lw \$t1, -4(\$s1)
	add \$t0, \$t0, \$s2	nop
	add \$t1, \$t1, \$s2	sw \$t0, 8(\$s1)
	<pre>bne \$s1, \$0, Loop</pre>	sw \$t1, 4(\$s1)

- Now we spend 5 cycles for 2 iterations of the loop
  - $\circ$  So, 5 / 2 = 2.5 cycles per iteration
  - O Much better than the previous 4 cycles for 1 iteration!



#### Let's try unrolling our example code 4X

4X Unrolled loop converted to VLIW:

	ALU/Branch Op	Load/Store Op	Inst
Loop:	addi \$s1, \$s1, -16	lw \$t0, 0(\$s1)	1
	nop	lw \$t1, 12(\$s1)	2
	add \$t0, \$t0, \$s2	lw \$t2, 8(\$s1)	3
	add \$t1, \$t1, \$s2	lw \$t3, 4(\$s1)	4
	add \$t2, \$t1, \$s2	sw \$t0, 16(\$s1)	5
	add \$t3, \$t1, \$s2	sw \$t1, 12(\$s1)	6
	nop	sw \$t2, 8(\$s1)	7
	bne \$s1, \$0, Loop	sw \$t3, 4(\$s1)	8

- Now we spend 8 cycles for 4 iterations of the loop
  - $\circ$  So, 8 / 4 = 2 cycles per iteration
  - o Even better 2.5 cycles per iteration for 2X unrolling



#### What happens when you unroll 8X?

8X Unrolled loop converted to VLIW:

	ALU/Branch Op	Load/Store Op	Inst
Loop:	addi \$s1, \$s1, -32	lw \$t0, 0(\$s1)	1
	nop	<pre>lw \$t1, 28(\$s1)</pre>	2
	•••	•••	•••
	add \$t1, \$t1, \$s2	lw \$t7, 4(\$s1)	8
	add \$t2, \$t1, \$s2	sw \$t0, 32(\$s1)	9
	add \$t3, \$t1, \$s2	sw \$t1, 28(\$s1)	10
	•••	•••	•••
	bne \$s1, \$0, Loop	sw \$t7, 4(\$s1)	16

- Now we spend 16 cycles for 8 iterations of the loop
  - $\circ$  So, 16 / 8 = 2 cycles per iteration (no improvement over 4X)
  - 2 is minimum because you need one lw and one sw per iteration



## When should the compiler stop unrolling?

- Obviously when there is no longer a benefit as we saw just now
- But there are other constraints that can prevent unrolling
- 1. Limitation in number of registers
  - o More unrolling uses more registers \$t0, \$t1, \$t2, ...
  - o For this reason, VLIW ISAs have many more registers than MIPS
    - Intel Itanium has 256 registers!
- 2. Limitation in code space
  - More unrolling means more code bloat
  - Embedded processors don't have lots of code memory
  - Matters even for general purpose processors because of caching (Code that overflows i-cache can lead to lots of cache misses)

