CPU Pipelining

CS/COE 1541 (Fall 2020) Wonsun Ahn




Clocking Review


Stuff you learned in CS 447



Logic components


Do you remember what all these do?

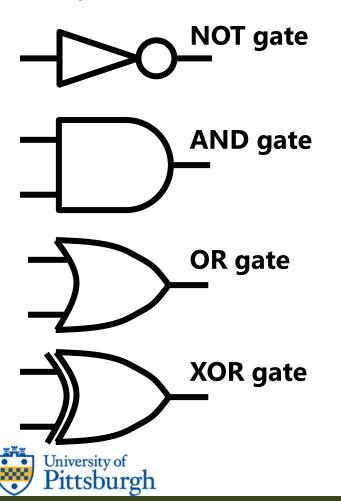

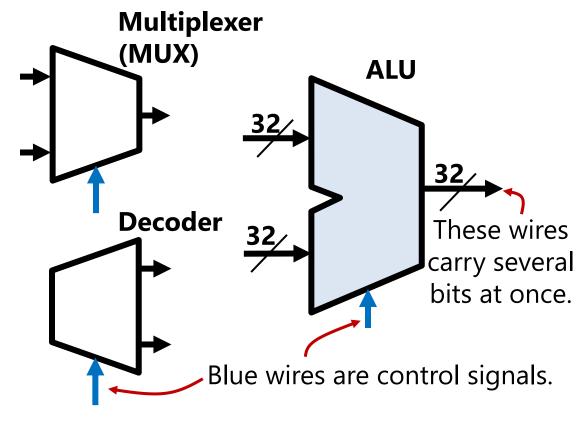

Uses of a Decoder

- Decodes an instruction to a bunch of control signals.
 - E.g. a binary decoder:

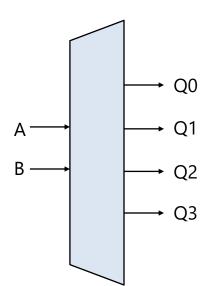

Truth Table for Decoder


Α	В	Q0	Q1	Q2	Q3
0	0	1	0	0	0
0	1	0	1	0	0
1	0	0	0	1	0
1	1	0	0	0	1

You can come up with any truth table and make a decoder for it!




Uses of a Multiplexer

No problem in fanning out one signal to two points

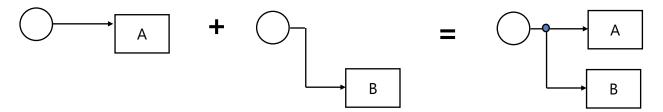


- Cannot connect two signals to one point
 - Must use a multiplexer to select between the two

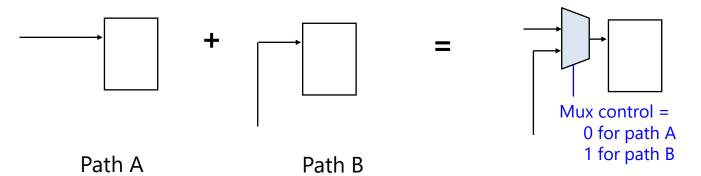



The clock signal

• The clock is a signal that alternates regularly between 0 and 1:

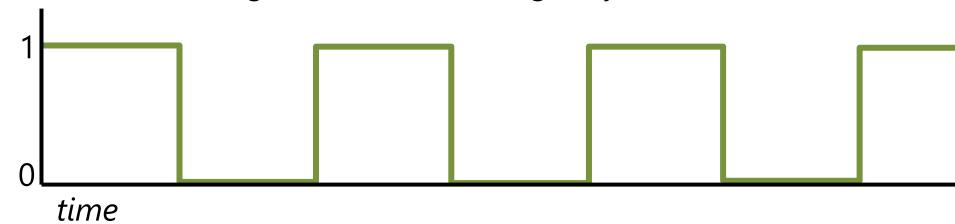

- Bits are latched on to registers and flip-flops on rising edges
- In between rising edges, bits propagate through the logic circuit
 - o Composed of ALUs, muxes, decoders, etc.
 - o Propagation delay: amount of time it takes from input to output



Critical Path

- Critical path: path in a circuit that has longest propagation delay
 Determines the overall clock speed.
 - A D Q D Q OUT Select
 - The ALU and the multiplexer both have a 5 ns delay
- How fast can we clock this circuit?
 - \circ Is it 1 / 5 ns (5 × 10⁻⁹s) = 200 MHz?
 - \circ Or is it 1 / 10 ns (10 × 10⁻⁹s) = 100 MHz? \checkmark



MIPS Review

Stuff you learned in CS 447



The MIPS ISA - Registers


- MIPS has 32 32-bit registers, with the following usage conventions
 - o But really, all are general purpose registers (nothing special about them)

Name	Register number	Usage
\$zero	0	the constant value 0 (can't be written)
\$at	1	assembler temporary
\$v0-\$v1	2-3	values for results and expression evaluation
\$a0-\$a3	4-7	function arguments
\$t0-\$t7	8-15	unsaved temporaries
\$s0-\$s7	16-23	saved temporaries (like program variables)
\$t8-\$t9	24-25	more unsaved temporaries
\$k0-\$k1	26-27	reserved for OS kernel
\$gp	28	global pointer
\$sp	29	stack pointer
\$fp	30	frame pointer
\$ra	31	return address



The MIPS ISA - Memory

- MIPS is a RISC (reduced instruction set computer) architecture
- It is also a *load-store* architecture
 - All memory accesses performed by load and store instructions
- Memory is a giant array of 2³² bytes

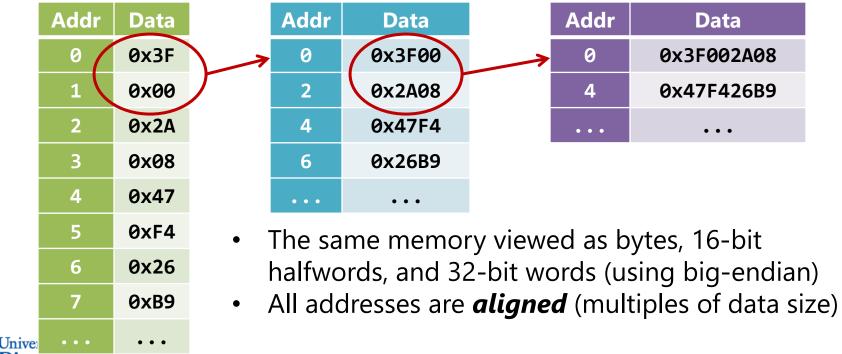


The MIPS ISA - Memory

• Loads move data *from* memory *into* the registers.

This is the address, and it means "the value of \$s4 + 8."

• Stores move data *from* the registers *into* memory.

\$t0 is the SOURCE!

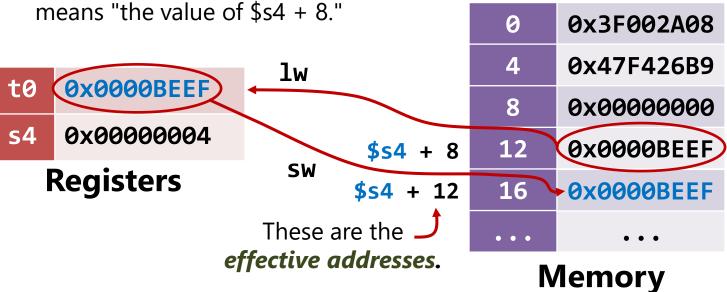



The MIPS ISA – Flow control

• Jump and branch instructions change the flow of execution.

- **j** : jumps *unconditionally*
- jumps to _top

```
li $s0, 10
—loop:

# ....
addi $s0, $s0, -1
bne $s0, $zero, _loop
jr $ra
```

```
bne : jumps conditionally
If $s0 != $zero, jumps to _loop
If $s0 == $zero, continues to jr $ra
```




Phases of instruction execution

- In most architectures, there are five phases:
 - **1. IF** (Instruction Fetch) get next instruction from memory
 - 2. ID (Instruction Decode) figure out what instruction it is
 - **3. EX** (Execute ALU) do any arithmetic
 - **4. MEM** (Memory) read or write data from/to memory
 - **5. WB** (Register Writeback) write any results to the registers
- Sometimes these phases are chopped into smaller stages



A simple single-cycle implementation

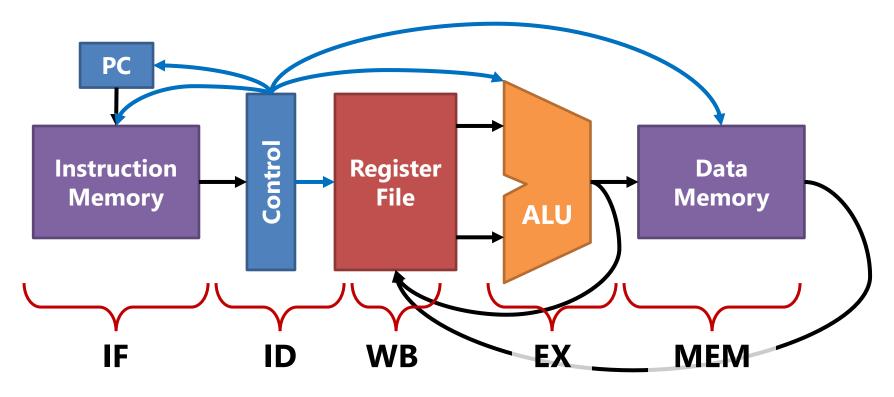

• An instruction goes through IF/ID/EX/MEM/WB in one cycle



"Minimal MIPS"



It's a "subset" of MIPS


- For pedagogical (teaching) purposes
- Contains only a minimal number of instructions:
 - o lw, sw, add, sub, and, or, slt, beq, and j
 - Other instructions are mostly variations on these
- Let's review the Minimal MIPS CPU focusing on the control signals
 - o Again, these control signals are decoded from the instruction



The Minimal MIPS single-cycle CPU

University of **Pittsburgh**

• A more detailed view of the 5-phase implementation

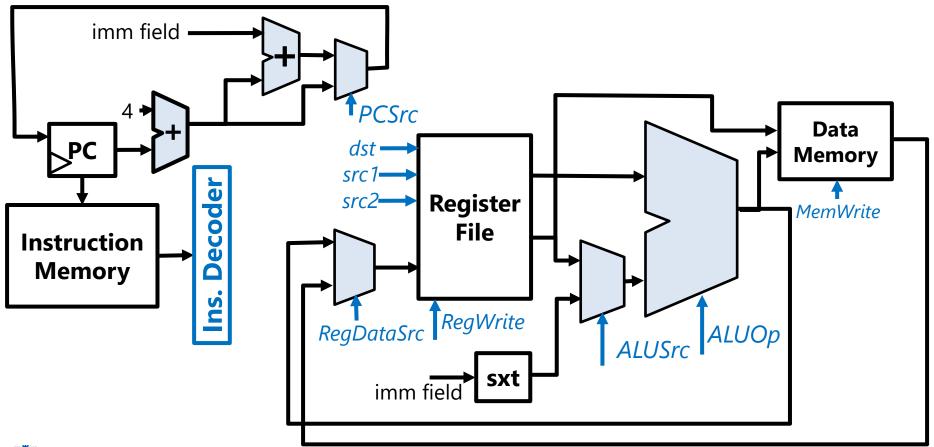


Control signals


- Registers
 - RegDataSrc: controls source of a register write (ALU / memory)
 - RegWrite: enables a write to the register file
 - o src1, src2, dst: the register number for each respective operand
- ALU
 - ALUSrc: whether second operand of ALU is a register / immediate
 - ALUOp: controls what the ALU will do (add, sub, and, or etc)
- Memory
 - MemWrite: enables a write to data memory
- PC
 - PCSrc: controls source of next PC (PC + 4 / PC + 4 + imm)
- → All these signals are decoded from the instruction!




How an add/sub/and/or/slt work

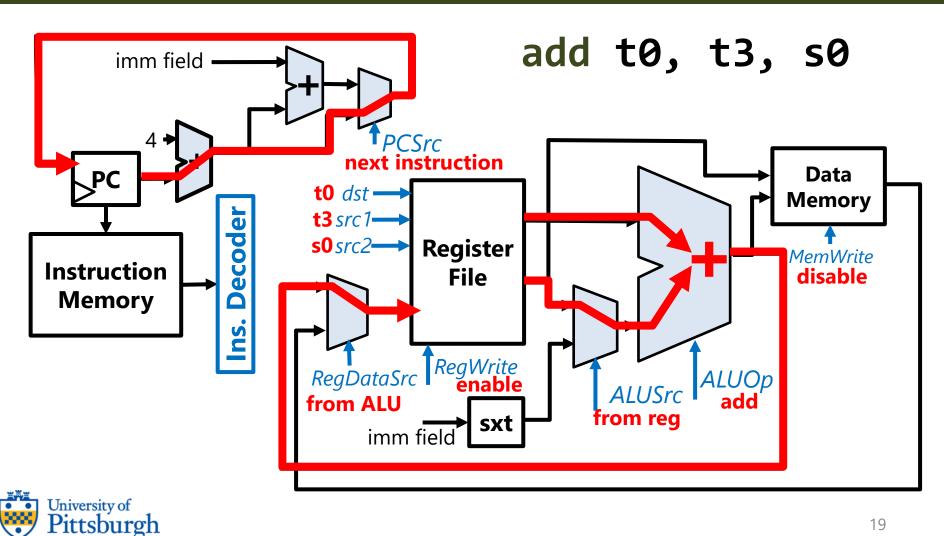

How an **Iw** works

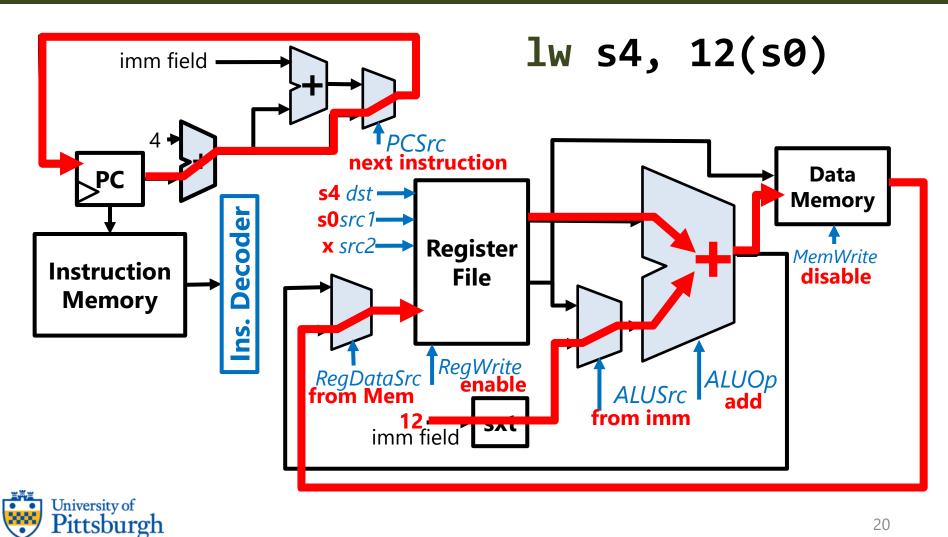


How an **sw** works

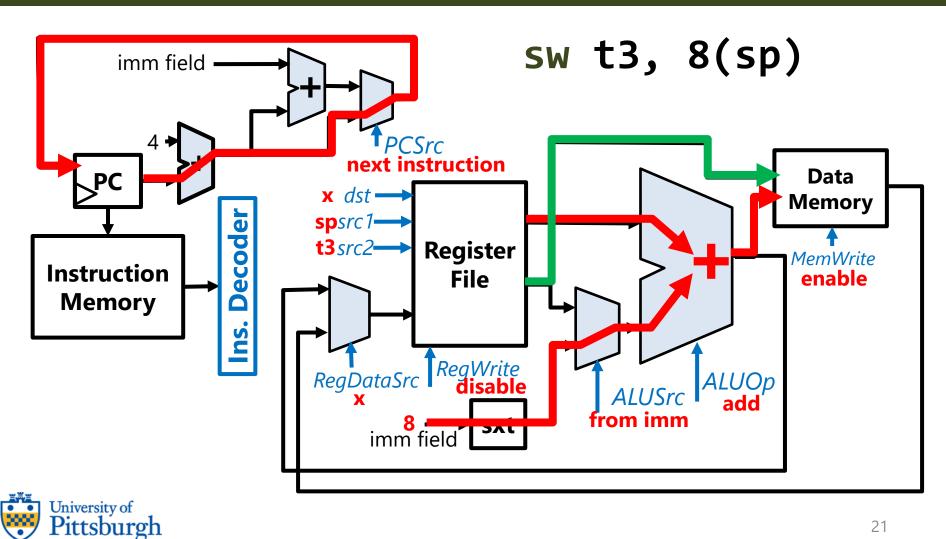

What about **beq**?


- Compares numbers by subtracting and see if result is 0
 - If result is 0, we set PCSrc to use the branch target.
 - Otherwise, we set PCSrc to PC + 4.

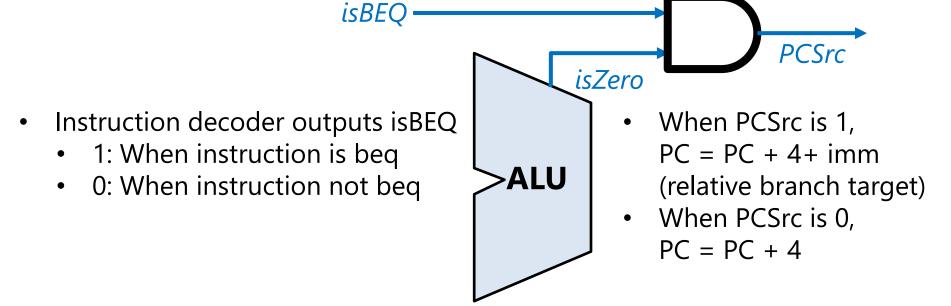



How a **beq** works


Pittsburgh

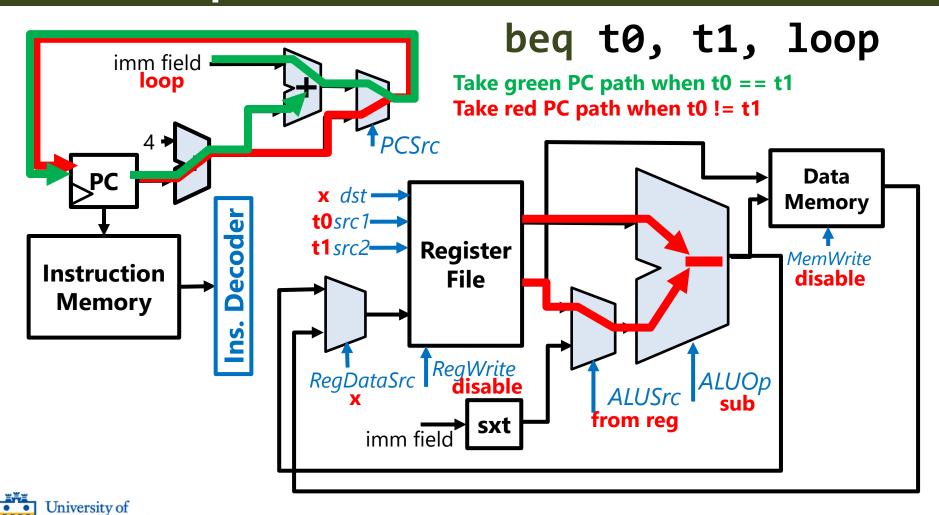

What about j?


• We have to add another input to the PCSrc mux.

j top

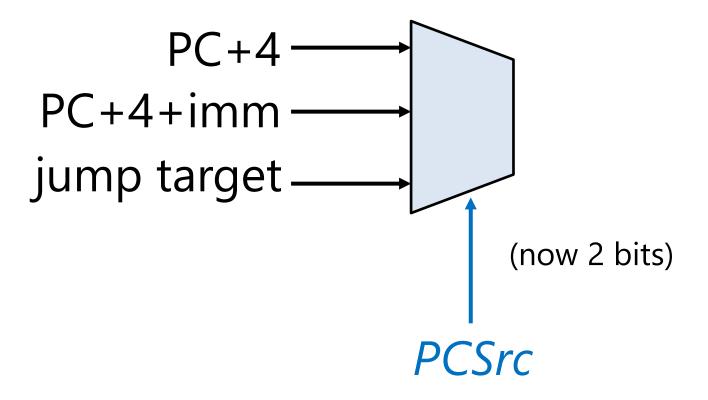



A Single-cycle Implementation is not Optimal

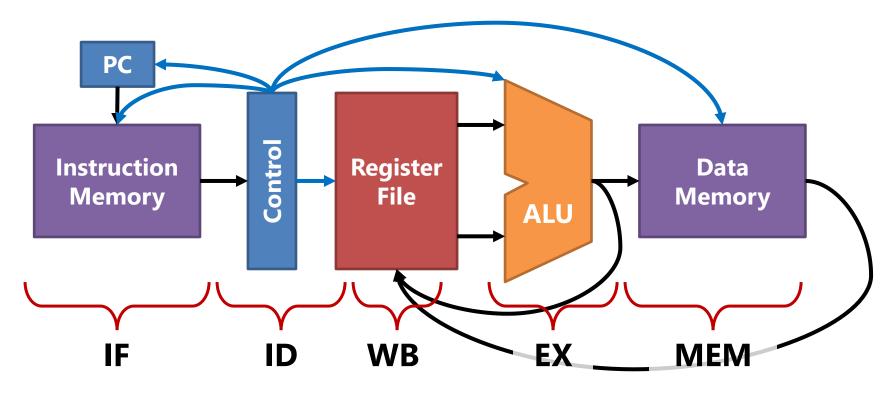

- Why? Since the *longest* critical path must be chosen for cycle time
 - And there is a wide variation among different instructions




A Single-cycle Implementation is not Optimal

- In our CPU, the **lw** instruction has the longest critical path
 - Must go through all 5 stages: IF/ID/EX/MEM/WB
 - Whereas add goes through just 4 stages: IF/ID/EX/WB
- If each phase takes 1 ns each, cycle time must be 5 ns:
 - Because it needs to be able to handle lw, which takes 5 ns
 - o **add** also takes 5 ns when it could have been done in 4 ns
- Q) If **Iw** is 1% and **add** is 99% of instruction mix, what is the average instruction execution time?
- A) Still 5 ns! Even if add is 99% of instructions!



A Multi-cycle Implementation

• It takes one cycle for each phase through the use of internal latches

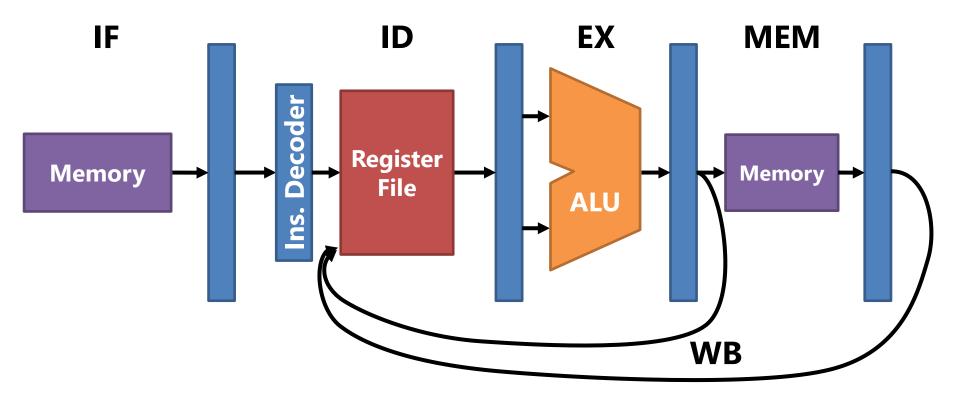



A Multi-cycle Implementation is Faster!

- Now each instruction takes different number of cycles to complete
 - Iw takes 5 cycles: IF/ID/EX/MEM/WB
 - o add takes 4 cycles: IF/ID/EX/WB
- If each phase takes 1 ns each as before:
 - Iw takes 5 ns and add takes 4 ns
- Q) If **lw** is 1% and **add** is 99% of instruction mix, what is the average instruction execution time?
- A) 0.01 * 5 ns + 0.99 * 4 ns = 4.01 ns (25% faster than single cycle)
- * Caveat: there is some delay due to the added latches but net win



And we can do even better!

- Did you notice?
 - When an instruction is on a particular phase (e.g. IF) ...
 - o ... other phases (ID/EX/MEM/WB) are not doing any work!
- Our CPU is getting chronically underutilized!
 - If CPU is a factory, 80% (4/5) of the workers are idling!
- Car factories create an assembly line to solve this problem
 - No need to wait until a car is finished before starting on next one
 - Our CPU is going to use a *pipeline* (similar concept)



Pipelining Basics



Improving Washer / Dryer / Closet Utilization


If washer works on next load immediately after passing on to dryer
 → Washer gets higher utilization → Improves overall throughput!





Multi-cycle instruction execution


• Let's watch how an instruction flows through the datapath.

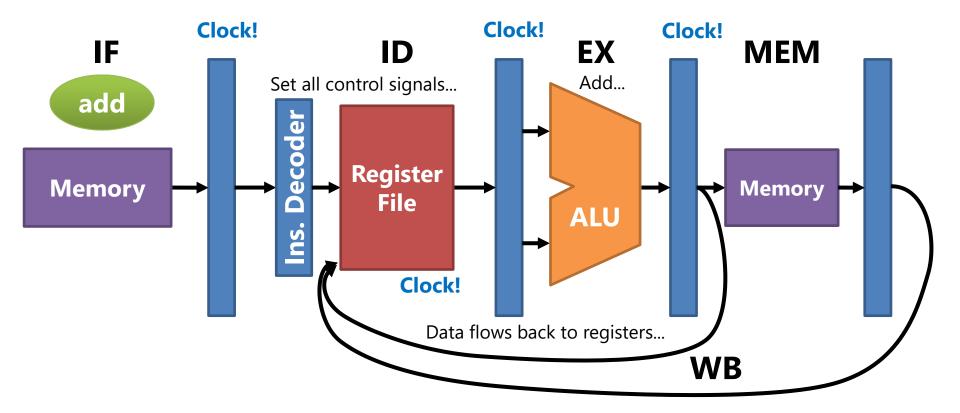



Pipelined instruction execution


• Pipelining is just an extension of that idea!

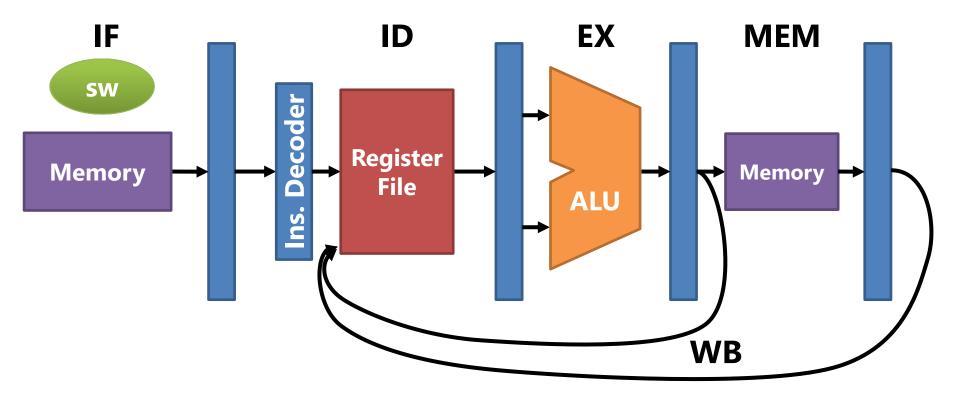



Pipelining Timeline

• This type of parallelism is called *pipelined parallelism*.

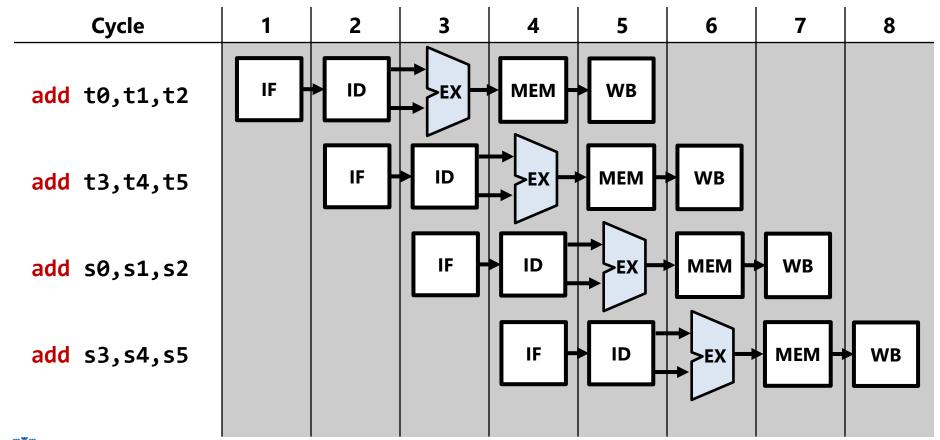



A Pipelined Implementation is even Faster!

- Again each instruction takes different number of cycles to complete
 - Iw takes 5 cycles: IF/ID/EX/MEM/WB
 - o add takes 4 cycles: IF/ID/EX/WB
- If each stage takes 1 ns each:
 - Iw takes 5 ns and add takes 4 ns
- Q) The average instruction execution time (given 100 instructions)?
- A) (99 ns + 5 ns) / 100 = 1.04 ns
 - Assuming last instruction is a **lw** (a 5-cycle instruction)
 - A ~5X speed up from single cycle!



Pipelined vs. Multi-cycle vs. Single-cycle

What happened to the three components of performance?

$$\frac{\text{instructions}}{\text{program}}$$
 X $\frac{\text{cycles}}{\text{instructions}}$ X $\frac{\text{seconds}}{\text{cycle}}$

Architecture	Instructions	СРІ	Cycle Time (1/F)
Single-cycle	Same	1	5 ns
Multi-cycle	Same	4~5	1 ns
Pipelined	Same	1	1 ns

- Compared to single-cycle, pipelining improves clock cycle time
 - Or in other words CPU clock frequency
 - o The deeper the pipeline, the higher the frequency will be
- * Caveat: latch delay and unbalanced stages can increase cycle time
- * Caveat: pipeline hazards and memory delay can increase CPI



Pipeline Hazards



Pipeline Hazards

- For pipelined CPUs, we said CPI is practically 1
 - But that depends entirely on having the pipeline filled
 - o In real life, there are *hazards* that prevent 100% utilization


• Pipeline Hazard

- When the next instruction cannot execute in the following cycle
- Hazards introduce "bubbles" into the pipeline timeline
- Architects have some tricks up their sleeves to avoid hazards
- But first let's briefly talk about the three types of hazards:
 Structural hazard, Data hazard, Control Hazard



Structural hazards


Two instructions need to use the same hardware at the same time.

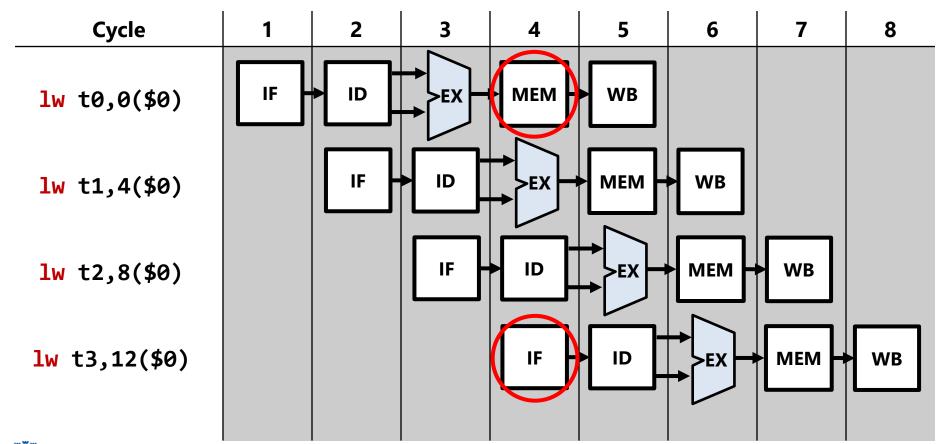



Structural hazards


Two instructions need to use the same hardware at the same time.

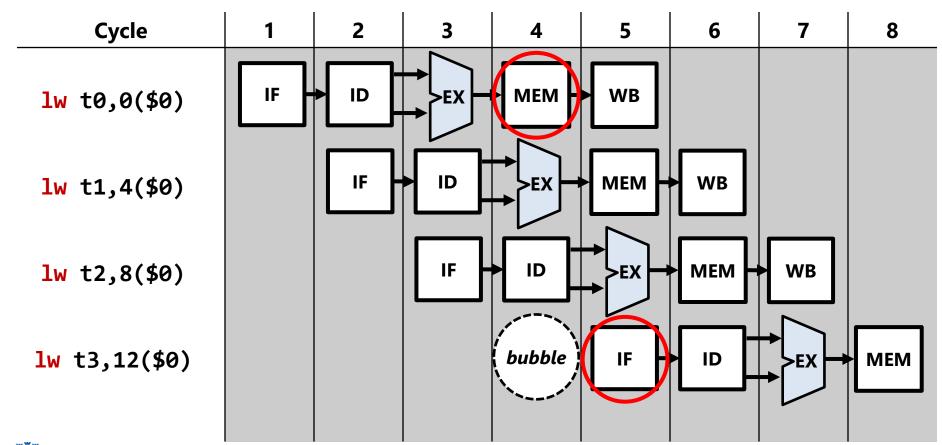




Data hazards

• An instruction depends on the output of a previous one.

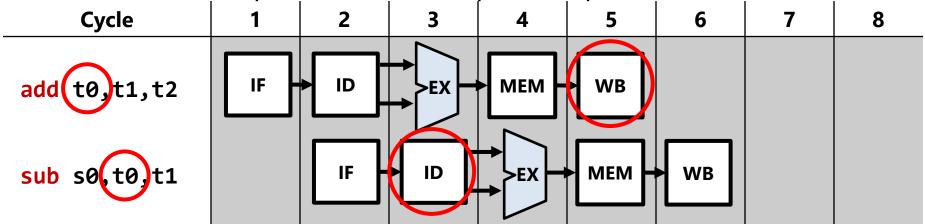


• sub must wait until add's WB phase is over before doing its ID phase

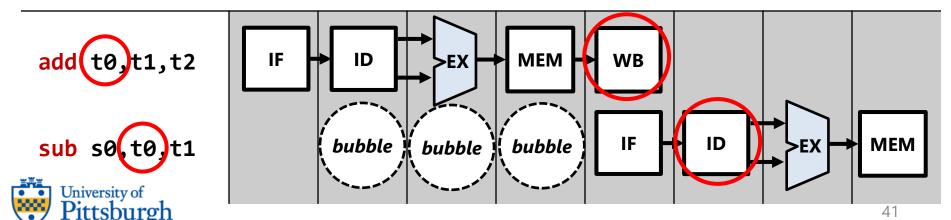

Control hazards

You don't know the outcome of a conditional branch.

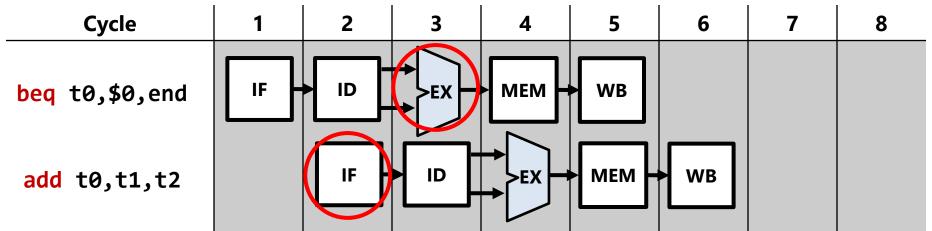

• add must wait until beq's EX phase is over before its IF phase

