

# Raspberry Pi





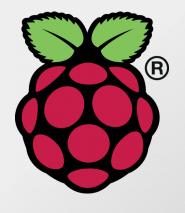

# Connecting Raspberry Pi to Arduino using I2C

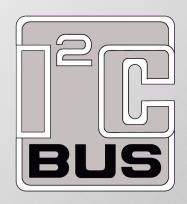

This work is licensed under the Creative Commons Attribution-ShareAlike 4.0 International License. To view a copy of this license, visit http://creativecommons.org/licenses/by-sa/4.0/.

#### What is I2C?

The Inter-IC Bus (I-IC or  $\underline{I}^2\underline{C}$ ) standard defines the hardware and electrical characteristics of the interface between nearby devices using only two wires (and a third for ground reference).

SMBus was introduced by Intel as a tight subset of I<sup>2</sup>C, strictly defining the interface between devices.

It is commonly used in televisions, computer components, and many ADC and DAC and GPS devices.

The Raspberry Pi most commonly uses an *SMBus implementation* in *Python 2.x*, and this is what we will concentrate on in this document.

# Connecting Devices

Identify SDA, SCL, and GND pins on both Raspberry Pi and the Arduino.


Connect SDA to SDA, SCL to SCL, and GND to GND between the two devices.

If no level shifter is being used, the Arduino must always be a slave, and the Raspberry Pi must always be Master. This would be the typical configuration, so this is not a serious limitation.

# Voltage Levels

The Raspberry Pi is a 3.3V device while the Arduino is a 5V device, but because both devices are connected in open-drain configuration with relatively high pull-up resistor values, it is unlikely damage will occur. This does not necessarily hold true for other devices. If in doubt, use a level shifter.

A level shifter isolates the two different voltages, while transmitting on/off information in both directions.

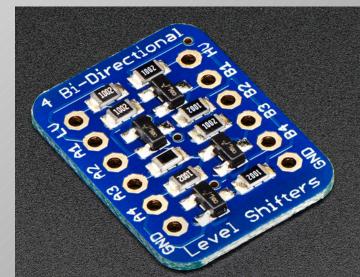

# Setting Up Raspberry Pi

#### Getting the tools for Python2 and/or Python3...

- 1. Open a terminal window.
  Enter "sudo apt-get install python-smbus" (2.x)
  Or "sudo apt-get install python3-smbus" (3.x)
  And "sudo apt-get install i2c-tools"
  Reboot the Pi.
- 2. Open "Raspberry Pi Configuration" in the GUI or use a terminal to enter 'sudo raspi-config'. Enable I2C, save, and reboot.

4. Edit file 'etc/modprobe.d/raspi-blacklist.comf' using GUI editor or

Enter "sudo nano etc/modprobe.d/raspi-blacklist.conf". If these two lines exist, make sure a '#' is placed before them, or delete them altogether..

#blacklist spi-bcm2708 #blacklist i2c-bcm2708 And save.

5. Finally, enter "sudo nano /boot/config.txt'. These two lines should appear:

dtparam=i2c1=on
dtparam=i2c\_arm=on
If not, make them so, and save.

Reboot.

# Testing Raspberry Pi

Enter "i2cdetect -y 1" in a terminal window to check that the I2C bus is available and running on the Pi.

If everything is good, it will show a table of addresses. If any I2C devices are available, their addresses will be shown in hexadecimal.

It is worth entering "i2cdetect -F 1" to see which SMBus calls are supported. It will save hours of debugging to know that "SMBus Block Read" is not supported, but "I2C Block Read" is supported, and that "Block Process Call" is meaningless as it is also not supported.

```
File Edit Tabs Help
oi@OKOMB ~ $ i2cdetect -F 1
Functionalities implemented by /dev/i2c-1:
SMBus Quick Command
SMBus Send Byte
                                  yes
SMBus Receive Byte
                                  yes
SMBus Write Byte
                                  yes
SMBus Read Byte
                                  yes
SMBus Write Word
                                  yes
SMBus Read Word
                                  yes
SMBus Process Call
                                  yes
SMBus Block Write
                                  yes
SMBus Block Read
                                  no
SMBus Block Process Call
                                  no
SMBus PEC
                                  yes
I2C Block Write
                                  yes
                                  yes
pi@OKOMB ~ $
```

# Preparing the Raspberry Pi

These instructions are for Python 2. Python 3 may have small differences.

Start Python, and create a new file.

Import the SMBus library.
Create an SMBus object linked to I2C port 1.
Define the slaves address(es) to connect to.

Collect the data to be transmitted, or prepare the data variables for reading back from the slave.

```
import smbus
i2c object = smbus.SMBus(1)
# Link to SMBus(0) on older Pi
addrSlave1 = 8
command = 0
dataList = [1, 2, 3, 4, 5]
i2c object.write i2c block data(addrSlave1,
                    command,
                    DataList)
getDataList = i2c object.read i2c block data(
                    addrSlave1,
                    command)
```

### Preparing the Arduino

#### Start Arduino IDE

Include the Wire.h standard library for Arduino.

Set up the slave address.

Register a Wire function that will run when the interrupt for receiving information from the Master triggers.

The event is onReceive(function)

This event will react to information coming from the master, and prepare for sending data back to the master, if necessary.

Register a Wire function that will run when the interrupt for returning data to the Master triggers. This event is on onRequest(function) When the interrupt fires, send data to the Master that was requested.


```
#include <Wire.h>
const byte slaveAddr = 8;
void setup() {
     Wire.begin(slaveAddr);
     Wire.onReceive(i2cReceive);
     Wire.onRequest(i2cTransmit);
void loop() {
void i2cReceive(int numBytes) {
     byte rxByte;
     while Wire.available() {
          rxByte = Wire.read();
          // Do something with the byte
Void i2cTransmit() {
      Wire.write(...) // send requested data
```

# Example Project

Using a Raspberry Pi 2 and an Arduino Leonardo, we will connect up the I2C bus, and connect an RGB LED to the Arduino. The LED color and brightness will be controlled by a Python program running on the Pi.

We will also simulate analog data to send back to the Pi from the Arduino, a temperature sensor and a light-level sensor.

This drawing was created in Fritzing.
http://fritzing.org/learning/get-starte d/

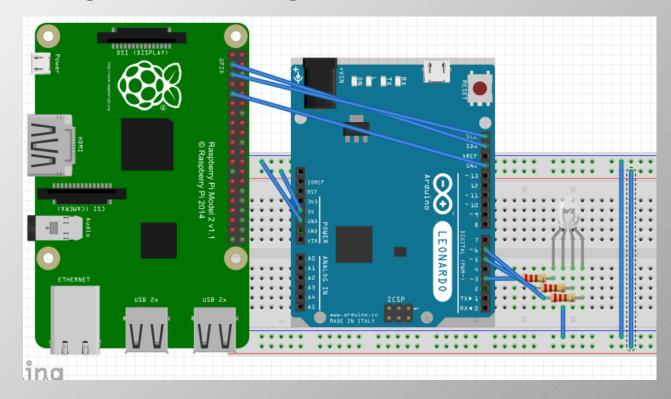

### Interface Specification

Before we can communicate with the Arduino, we need an interface specification which describes, in detail, how and what data should be moved over the bus from Master to Slave, and from Slave to Master.

#### **Arduino Internal Data Table**

Туре	Description	Access
Byte	Command	private
Byte	Control	private
Real	Temperature	Read Only
Real	Light Level	Read Only
Byte	Brightness Red	Read/Write
Byte	Brightness Green	Read/Write
Byte	Brightness Blue	Read/Write

Command	Action
0x81	Read Temperature. Return int(round(temperature*100))
0x82	Read Light. Return int(round(light*100))
0x0A	Write three bytes for brightness RGB
0x0B	Write single byte, brightness Red channel
0x0C	Write single byte, brightness Green channel
0x0D	Write single byte, brightness Blue channel
0x90	Read three bytes brightness RGB
0x91	Read single byte, brightness Red channel
0x92	Read single byte, brightness Green channel
0x93	Read single byte, brightness Blue channel
Read, no command	Return Slave Address, one Byte
Write, No command	Master interrogating slave presence. Ignore
Other commands	Ignore. Master software has to deal with communication exceptions, if any.

#### Arduino Software

```
//The full software can be found on github at
// github project address
//This is a simplified collection of
//the most important parts.
#include <Wire.h>
#define rxFault 0x80
#define txFault 0x40
#define slaveAddress 8
struct {
  byte volatile command;
  byte volatile control;
  float volatile temperature;
  float volatile light;
  byte volatile brightR;
  byte volatile brightG;
  byte volatile brightB;
 commsTable;
byte volatile txTable[32];
// prepare data for sending over I2C
Void setup() {
  Wire.begin(slaveAddress);
  Wire.onReceive(i2cReceive);
  Wire.onRequest(i2cTransmit);
Void loop() {
```

```
void i2cReceive(int byteCount) {
  if (byteCount == 0) return;
  byte command = Wire.read();
  commsTable.command = command:
  if (command < 0x80) {
    i2cHandleRx(command, byteCount - 1);
  } else {
    i2cHandleTx(command);
byte i2cHandleRx(byte command, int numBytes) {
  switch (command) {
    case 0x0A:
      if (Wire.available() == 3)
        commsTable.brightR = Wire.read();
        commsTable.brightG = Wire.read();
        commsTable.brightB = Wire.read();
        result = 3;
      } else {
        result = 0xFF:
      break:
// and so on, one case for each command according to the
Interface Specification
    default:
      result = 0xFF;
  if (result == 0xFF) commsTable.control |= rxFault;
  return result:
```

#### Arduino Software, cont'd

```
void i2cTransmit() {
// byte *txIndex = (byte*) &txTable[0];
 byte numBytes = 0;
 int t = 0;
 switch (commsTable.command) {
   case 0x00: // send slaveAddress.
     txTable[0] = slaveAddress;
     numBvtes = 1;
     break;
   case 0x81: // send temperature
     t = int(round(commsTable.temperature*100));
     txTable[1] = (byte)(t >> 8);
     txTable[0] = (byte)(t & 0xFF);
     numBytes = 2;
     break:
    case 0x91: // send RGB Red channel
     txTable[0] = commsTable.brightR;
     numBytes = 1;
     break;
// Again, create a case statement for each legal command
    default:
     commsTable.control |= txFault;
 if (numBytes > 0) {
   Wire.write((byte *)&txTable, numBytes);
```

```
byte i2cHandleTx(byte command) {
    // If you are here, the I2C Master has requested information

    // If there is anything we need to do before the interrupt // for the read takes place, this is where to do it.
    return 0;
}
```

### Python Software

```
import smbus
import time
i2c = smbus.SMBus(1)
addr = 8 # address of the arduino I2C
##/* Interface Specification
     Data in a table thus:
##
       byte purpose
##
       0: command
       1: control
      2-5: Current Temperature (read-only)
      6-9: Current light level (read only)
##
      10: Brightness for RED r/w
      11: Brightness for GREEN r/w
##
      12: Brightness for BLUE r/w
##
      Commands:
##
      Write with no command: Ignore
##
      Read with no command: Return slave address
##
      Command 0x81: read temperature;
##
           Integer returned, int(round(temp*100))
##
      Command 0x82: read light level;
##
           Integer returned, int(round(lux*100))
##
      Command 0x0A: Write three bytes to RGB
##
      Command 0x0B: Write single byte brightness red;
      Command 0x0C: Write single byte brightness green;
##
      Command 0x0D: Write single byte brightness blue;
##
      Command 0x90: read three bytes brightness RGB
##
      Command 0x91: read single byte brightness red;
##
      Command 0x92: read single byte brightness green;
##
      Command 0x93: read single byte brightness blue;
##
##
      All other values are ignored, no data returned.
```

```
RGB = [20, 200, 128]
temperature = 0
light level = 0
i2c.write quick(addr) # no data expected back
time.sleep(0.5)
print i2c.read byte(addr) # expect the slave address
time.sleep(0.5)
print i2c.read word data(addr,0x81)/100.0 # temperature
time.sleep(0.5)
print i2c.read word data(addr,0x82)/100.0 # light level
time.sleep(0.5)
i2c.write byte data(addr, 0x0B, 12) # write Red value
time.sleep(0.5)
print i2c.read byte data(addr, 0x91) # write Green value
time.sleep(0.5)
i2c.write byte data(addr, 0x0C, 123) # write Blue value
time.sleep(0.5)
print i2c.read byte data(addr, 0x92) # get Green value
time.sleep(0.5)
i2c.write byte data(addr, 0x0D, 234) # write Blue value
time.sleep(0.5)
print i2c.read byte data(addr, 0x93) # get Blue value
time.sleep(0.5)
print i2c.read i2c block data(addr, 0x90, 3) # get RGB
time.sleep(0.5)
i2c.write i2c block data(addr, 0x0A, RGB) # set all RGB
time.sleep(0.\overline{5})
print i2c.read i2c block data(addr, 0x90, 3) # get all RGB
time.sleep(0.5)
print i2c.read i2c block data(addr, 0x10, 3) # force error
time.sleep(0.5)
```

# The Python Results

```
Python 2.7.9 results.
>>>
23.95
6.97
12
123
234
[12, 123, 234]
[20, 200, 128]
[0, 255, 255]
>>>
No event for write quick()
Got back the slave Address.
Got the simulated temperature
Got the simulated light level
Set and read back Red channel
Set and read back Green channel
Set and read back Blue channel
Got back RGB values as a list.
Set new RGB values from a list
Read back the RGB values as a list
Forced a read error by sending wrong command.
```

```
RGB = [20, 200, 128]
i2c.write quick(addr) # no data expected back
print i2c.read byte(addr) # expect the slave address
print i2c.read word data(addr,0x81)/100.0 # temperature
print i2c.read word data(addr,0x82)/100.0 # light level
i2c.write byte data(addr, 0x0B, 12) # write Red value
print i2c.read byte data(addr, 0x91) # get Red value
i2c.write byte data(addr, 0x0C, 123) # write Green value
print i2c.read byte data(addr, 0x92) # get Green value
i2c.write byte data(addr, 0x0D, 234) # write Blue value
print i2c.read byte data(addr, 0x93) # get Blue value
print i2c.read i2c block data(addr, 0x90, 3) # get RGB
i2c.write i2c block data(addr, 0x0A, RGB) # set all RGB
print i2c.read i2c block data(addr, 0x90, 3) # get all RGB
print i2c.read i2c block data(addr, 0x10, 3) # force error
```

#### Instructions in Detail

Master (Rpi, Python)	Slave (Arduino
Bus.write_quick(slave) Used to check presence, or trigger event in slave without data	Wire.onReceive() event triggered, but no data is sent.
transfer.	Bytes received: 0. Bytes returned: 0.
Bus.write_byte(slave, data) Can be used to instruct the slave to do any of up to 255 different actions, or to place this byte in one predefined byte variable.	Wire.onReceive() event triggered. Single byte received. Bytes received: 1. Bytes returned: 0.
ByteValue = Bus.read_byte(addr) Read slave status or a single predefined value	Wire.onRequest() event triggered only. No data received. Slave must return one defined byte. Bytes received: 0. Bytes returned: 1.
Bus.write_byte_data(addr, command, byteValue) Send slave some information to accompany a command.	Wire.onReceive() event triggered. Two bytes sent. First byte is a command, second byte is the byte data to accompany it. Bytes received: 2. Bytes returned: 0.
ByteValue = Bus.read_byte_data(addr, command) Interrogate a slave about a specific piece of information	Wire.onReceive event triggered. One byte sent, a command for which byte is requested from slave. Wire.onRequest() then triggered, and one byte to be returned.  Bytes received: 1. Bytes returned: 1

#### Instructions in Detail

Master (Rpi, Python)	Slave (Arduino
Bus.write_word_data(addr, command, integerVal) Send slave extra information accompanying a specific command	Wire.onReceive() event triggered, three bytes send. First byte is command, second is LSB, third is MSB of integer. Bytes received: 3. Bytes returned: 0.
WordValue = Bus.read_word_data(addr, command) Retrieve two bytes, first LSB, then MSB of an integer. Python knows to rebuild the integer. Retrieve integer data from slave.	Wire.onReceive() event triggered. Single byte received, a command. Wire.onRequest() event triggered, slave must send back two bytes, first LSB, then MSB, of an integer. Bytes received: 1. Bytes returned: 2.
Bus.write_block_data(addr, command, [list of bytes]) Sending unstructured data.	Wire.onReceive() event triggered. Several bytes sent. First byte is command, second is number of following bytes, remainder of bytes must be processes according to interface list. Bytes received: > 2. Bytes returned: 0.
Bus.write_i2c_block_data(addr, command, [list of bytes]) Use this to fill a table of related bytes quickly.	Wire.onReceive() event triggered. Several bytes sent. First byte is a command, remaining bytes to be processed according to interface. Bytes received: > 1. Bytes returned: 0.
ByteList = Bus.read_i2c_block_data(addr, command) Use this to read a table of related bytes quickly	Wire.onReceive event triggered. One byte sent, a command for which byte is requested from slave. Wire.onRequest() then triggered, requested bytes returned as per interface list. Bytes received: 1. Bytes returned: > 1

#### Instructions in Detail

Master (Rpi, Python)	Slave (Arduino
List = bus.read_block_data(addr, command, bytes) will fail. Always returns the empty list. Do not use this function.	Wire.onReceive() event triggered, two bytes send. First byte is command, second is number of bytes to return. OnRequest() event is triggered, sending back the correct number of bytes Bytes received: 2. Bytes returned: > 1.
Bus.block_process_call(addr, command, [vals]) Following the protocol, it reads the correct number of bytes sent back, but random data appears in the list returned. Do not use.	Wire.onReceive() event triggered. Several bytes received, first command, then count of bytes in [vals], then vals. Wire.onRequest() triggered, return first count, then number of bytes Bytes received: > 2. Bytes returned: > 2.
process_call(addr, command, val) does sent the integer 'val', but does not trigger the interrupt to return data, so it returns the empty list	Wire.onReceive() event triggered. Three bytes sent. First byte is command, second is LSB and last is MSB. SMBus Specification is to return two byte integer, but onRequest() event never triggered. Bytes received: 3. Bytes returned: n/a.

#### Conclusions

Communication over I2C is quite simple to implement using the SMBus library on the Raspberry Pi, and the Wire.h library on the Arduino..

Knowing what each SMBus Write and Read instruction sends to the Arduino and what data the Arduino is expected to send back is crucial to successful implementation of the I2C/SMBus protocol.

Before coding, have a clear Interface Specification with a list of commands to be sent to the Arduino, and clear instructions of what should happen with the data sent and how to return requested data.

It is also important to specify the reaction to bad data.

The SMBus protocol document can be found at http://smbus.org/specs/smbus20.pdf
The linux Python implementation document can be found at https://www.kernel.org/doc/Documentation/i2c/smb

us-protocol

Some of the SMBus protocol is not fully programmed in the existing SMBus python libraries, even though the functions are available to include in the program.

These functions do not appear to work with the arduino:

- read block data(addr, command, bytes)
- block process call(addr, command, [vals])
- process call(addr, command, val)

All the other functions appear to operate according to the specification.

Compiled by Mike Ochtman.
Find me at
https://za.linkedin.com/in/mikeochtman



This work is licensed under the Creative Commons Attribution-ShareAlike 4.0 International License. To view a copy of this license, visit http://creativecommons.org/licenses/by-sa/4.0/.