# PhotoElectroChemistry Theoretical Background

M. Skocic, PhD Electrochemistry and Materials

February 13, 2025

## Contents

1	Intr	roduction	2
2	Bas 2.1 2.2 2.3	Electronic Band Structure	2 4 7
3	Application Examples 9		
	3.1 3.2 3.3	Identification of minor oxides	9 9 9
$\mathbf{R}^{\mathbf{c}}$	efere	nces	9
$\mathbf{L}_{i}^{t}$	ist o	of Figures	
	1	Schematic representation of the electronic band structure [1]: a) conductor, b) semiconductor, c) isolator	3
	2	Schematic representation of the mechanisms generating charge carriers in semi- conductors [2]: a) thermal excitation, b) photoexcitation, c) doping	3
	3	Schematic representation of the Fermi level with respect to the semiconduction type [2]: a) intrinsic, b) n-type, c) p-type	4
	4	Potential gradient at semiconductor/electrolyte interface [3]. $\Phi_{sc}$ and $\Phi_{el}$ correspond to the potentials of the semiconductor and the electrolyte, respectively. $\Delta Phi_{sc/el}$ corresponds to the potential difference between the semiconductor and the electrolyte. $w_{sc}$ and $w_H$ correspond to the widths of the space charge and the electrical double layer, respectively	4
	5	Schematic representation of the space charge in depletion of majority charge carriers for a semiconductor in contact with an electrolyte [4, 5]: a) n-type, b)	5
	6	p-type	9
	-	tors in contact with an electrolyte [4, 5]: a) $U = U_{fb}$ , b) $U > U_{fb}$ , c) $U < U_{fb}$ .	6
	7	Schematic representation of the mechanism generating a photocurrent [4, 5]	7
	8	Photocurrent density $i_{ph}$ and dark current density $i_d$ with respect to the potential	
		in a case of GaAs semiconductor [6]: a) n-type, b) p-type	7

#### 1 Introduction

In the course of the last 30 years, photoelectrochemical techniques have been shown to be useful tools for characterizing oxidation layers. Interdisciplinary theoretical underpinnings were built [7–11] such as the Gärtne-Butler model [12, 13] which has been proven to be a simple and robust model for the photocurrent generation. Technical progresses were achieved, allowing to study oxide layers at macroscopic, mesoscopic, and microscopic scales [14, 15], or in-situ in high temperature corrosion conditions [16, 17].

First, this paper presents the theoretical background on which the photoelectrochemical techniques rely on. Examples of application are also presented in a second part.

#### 2 Basics

PEC takes advantage of the photovoltaic effect, discovered by Becquerel [18] in 1839, that occurs at the interface of a semiconductor and an electrolyte. In fact, the first experience showed the occurrence of a photopotential and a photocurrent under illumination when a silver electrode, covered with an oxide layer, was immersed in an acidic medium and connected to a platinum electrode. Nonetheless, the first studies focused on the understanding of the interfacial processes were performed much later [9, 19, 20].

The basics of photoelectrochemistry and application examples are presented in the following sections and they are largely described in the literature [3–5, 7, 21, 22]. Several hypotheses are needed in order to apply the theoretical concepts:

- semiconductor are considered to be ideal i.e. crystallized and homogeneous
- the dielectric constant of the semiconductor is independent of the light wavelength
- the capacity of the Helmholtz layer is greater than the capacitance of the space charge capacitance
- the potential drop in the Helmholtz layer is independent of the applied potential and is negligible

The hypotheses are rarely fully respected in the case of oxides or passive films formed on industrial alloys. Nonetheless, the literature shows that the developed models can be applied to non-ideal systems such as oxides and passive films.

#### 2.1 Electronic Band Structure

Solids are generally classified into three groups: conductors, semiconductors and isolators. Each category can be illustrated with a specific band structure as shown in figure 1. Valence and conduction bands correspond to allowed energy states for the electrons. The lowest energy level of the conduction band is labeled  $E_c$  and the highest energy level of the valence band is labeled  $E_v$ . They are separated by a band gap,  $E_g$ , with no allowed energy states. The repartition of the electrons among both bands are described by the position of the Fermi Level,  $E_F$ , which represents the highest energy state that can be occupied level at 0K. It is equivalent to the electrochemical potential in solid phases.

The electronic conduction is due to the movement either of the negatively charged electrons in the conduction band or of the positively charged holes in the valence band or both simultaneously. Consequently, the conduction depends on the number of available charge carriers in the conduction band and in the valence band. In conductors, an overlap of the conduction and the valence bands occurs which means that the highest allowed energy band is partially filled. The distinction between a semiconductor and an isolator is less obvious because the conduction

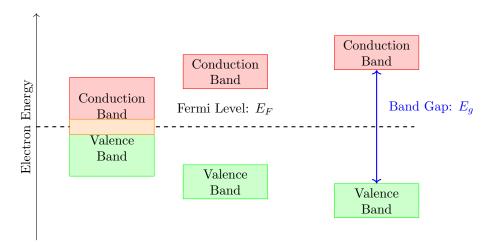


Figure 1: Schematic representation of the electronic band structure [1]: a) conductor, b) semi-conductor, c) isolator

depends on the band gap and the energy provided by the environment to the electrons from the valence band in order to jump into the conduction band.

In semiconductors, charge carriers can be generated by three mechanisms: thermal excitation, photoexcitation and doping as shown in figure 2. In the case of very low band gaps, thermal excitation can be enough in order to eject an electron from the valence band to the conduction band. Photoexcitation ejects electrons from the valence band to the conduction band when an incident photon, with energy greater than the band gap, is absorbed. Doping introduces additional energy level located in between the conduction and valence bands.

Doping occurs when the stoichiometry is altered or when impurities are introduced in the crystallographic lattice of the semiconductor. In the case of n-type semiconductors, the donor energy levels  $E_d$  lie just under the conduction band. The electrons from the donor levels are ejected by thermal excitation. Consequently, the majority charge carriers are negatively charged electrons in the band conduction. Similarly, the acceptor energy levels  $E_a$ , of p-type semiconductors, lie just above the band valence. The latter trap electrons from the valence band and therefore create holes. Consequently, the majority charge carriers are positively charged holes.

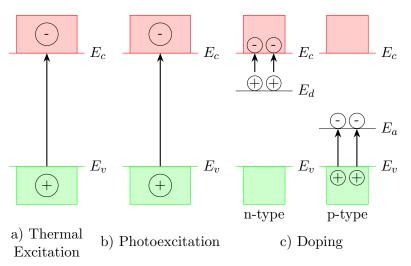


Figure 2: Schematic representation of the mechanisms generating charge carriers in semiconductors [2]: a) thermal excitation, b) photoexcitation, c) doping

The Fermi level  $E_F$  in intrinsic semiconductors is located at the mid-gap. The n-type and

p-type doping shift the Fermi level towards band edges  $E_c$  and  $E_v$ , respectively. The figure 3 shows the position of the Fermi level with respect to the semiconductor type.

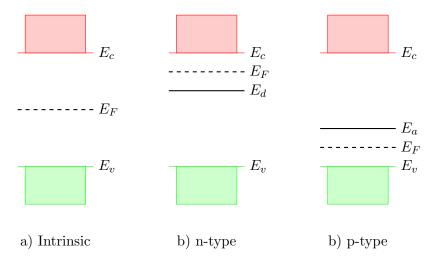


Figure 3: Schematic representation of the Fermi level with respect to the semiconduction type [2]: a) intrinsic, b) n-type, c) p-type.

#### 2.2 Semiconductor/electrolyte interface in dark condition

A potential gradient occurs when a semiconductor comes into contact with an electrolyte as shown in figure 4. The position of the Fermi level in the electrolyte with respect to the conduction and valence band edges leads to three different situations after a transient charge transfer. The flat band situation occurs when the Fermi level in the electrolyte matches the Fermi level in the semiconductor. Consequently, there is no potential gradient in the semiconductor. In a case of Fermi level mismatch, a band bending occurs in the semiconductor near the semiconductor/electrolyte interface. The band bending leads to either depletion or accumulation of majority charge carriers near the semiconductor/electrolyte interface. The spatial extension of the depletion/accumulation zone is called space charge as shown in figure 5.

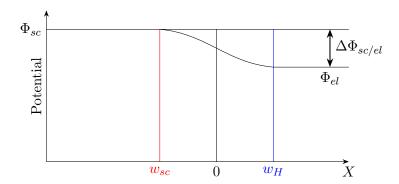


Figure 4: Potential gradient at semiconductor/electrolyte interface [3].  $\Phi_{sc}$  and  $\Phi_{el}$  correspond to the potentials of the semiconductor and the electrolyte, respectively.  $\Delta Phi_{sc/el}$  corresponds to the potential difference between the semiconductor and the electrolyte.  $w_{sc}$  and  $w_H$  correspond to the widths of the space charge and the electrical double layer, respectively.

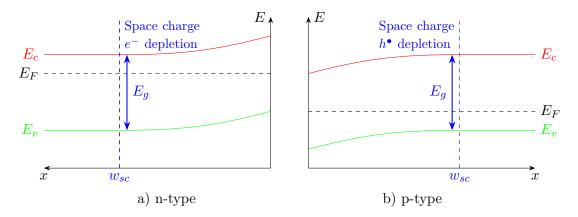


Figure 5: Schematic representation of the space charge in depletion of majority charge carriers for a semiconductor in contact with an electrolyte [4, 5]: a) n-type, b) p-type.

Depletion and accumulation as well as band bending can be obtained by polarizing the semiconductor. As long as the hypothesis described in the introduction paragraph stand, the polarization does not modify the surface band edges  $E_{cs}$  and  $E_{vs}$ . Consequently, the polarization will only alter the band bending in the space charge. Depending on the applied potential, U, with respect to the flat band potential,  $U_f b$ , three different situations will occur as shown in figure 6:

- $U = U_{fb}$ : flat band situation no matter the semiconductor type
- $U > U_{fb}$ : depletion (accumulation) in a case of n-type (p-type) semiconductor
- $U < U_{fb}$ : accumulation (depletion) in a case of n-type (p-type) semiconductor

Without illumination, cathodic (anodic) currents are favored in a case of accumulation of electrons (holes) for an n-type (p-type) semiconductor. In fact, the majority charge carriers of n-type (p-type) semiconductors are electrons (holes). Reciprocally, anodic (cathodic) currents are not favored in a case of depletion of electrons (holes) for an n-type (p-type) semiconductor. The junction between a semiconductor and an electrolyte acts like a Schottky diode.

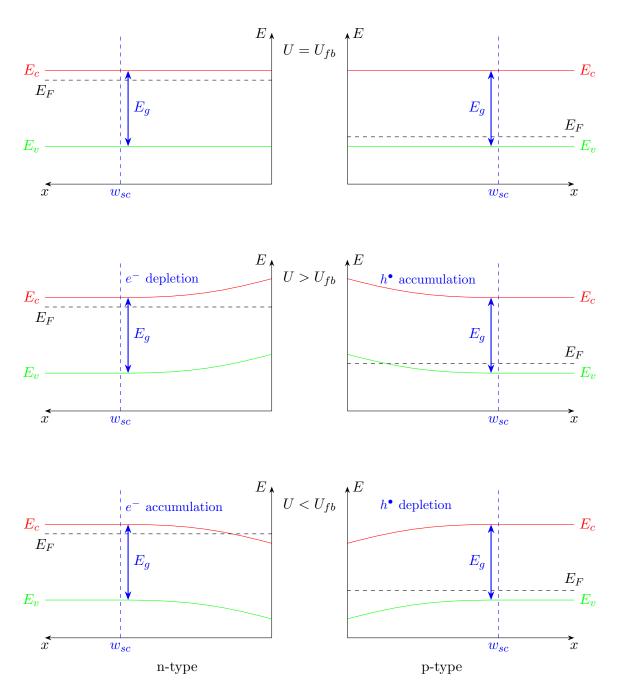


Figure 6: Schematic representation of the band bending in p-type and n-type semiconductors in contact with an electrolyte [4, 5]: a)  $U = U_{fb}$ , b)  $U > U_{fb}$ , c)  $U < U_{fb}$ .

#### 2.3 Semiconductor/electrolyte interface under illumination

The illumination of the semiconductor/electrolyte interface, with photons having an energy greater than the band gap,  $E_g$ , creates electron/hole pairs in the semiconductor. By applying the adequate potential the pairs can be separated. As a consequence, the majority charge carriers are attracted to the semiconductor bulk whereas the minority charge carriers are drawn to the semiconductor/electrolyte interface where they can be transferred to a RedOx species creating an additional current called photocurrent.

Figure 7 illustrates schematically the mechanism leading to the creation of a photocurrent. n-type (p-type) semiconductors generate anodic (cathodic) photocurrents where the electrons (holes) move towards the external circuit whereas the holes (electrons) move towards the interface. The photocurrent is significant when the semiconductor/electrolyte junction is in depletion. Figure 8 shows the anodic (cathodic) photocurrent for a GaAs n-type (p-type) semiconductor.

Therefore, the applied potential on n-type (p-type) semiconductors is greater (lower) than the flat band potential.

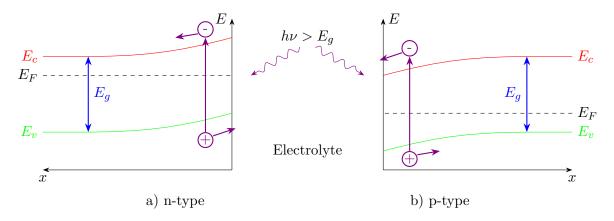


Figure 7: Schematic representation of the mechanism generating a photocurrent [4, 5].

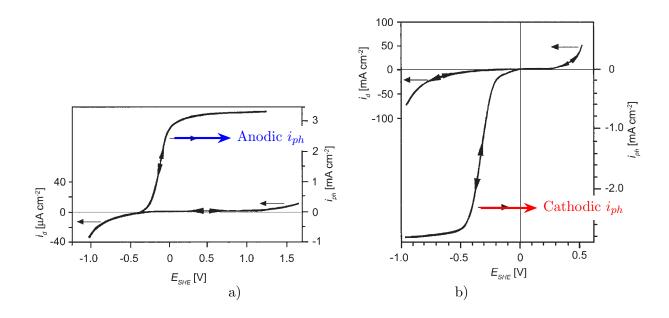


Figure 8: Photocurrent density  $i_{ph}$  and dark current density  $i_d$  with respect to the potential in a case of GaAs semiconductor [6]: a) n-type, b) p-type.

Gärtner [12] and Butler [13] proposed a simple and robust model for describing the photocurrent considering that the recombination of the photogenerated electron/hole pairs does not occur in the space charge. Therefore, the photocurrent is proportional to the photon flux  $\Phi_0$ . Moreover, the photocurrent depends on the relative ratio between the space charge width,  $w_{sc}$ , the depth of photon penetration given by the inverse of the absorption coefficient,  $\alpha$ , and the average diffusion length,  $L_{cc}$ , of the minority charge carriers. In other words, all absorbed photons generate electron/hole pairs and the minority charge carriers are transferred to the electrolyte and therefore contribute to the photocurrent whose expression is given by the equation 1.

$$I_{ph} = \phi_0 \left[ 1 - \frac{\exp(-\alpha_{sc} \cdot w_{sc})}{1 + \alpha_{sc} \cdot L_{cc}} \right]$$
 (1)

When  $\alpha_{sc} \cdot w_{sc} \ll 1$  and  $\alpha \cdot L_{cc} \ll 1$ , the photocurrent is approximated by the equation 2.

$$I_{ph} = \phi_0 \cdot \alpha \cdot w_{sc} \tag{2}$$

The expression of the space charge width,  $w_{sc}$ , in depletion is given by the equation 3 according to the Mott-Schottky theory.  $N_{cc}$  represents the number of majority charge carriers, supposed to be equal to the doping, e corresponds to the elementary charge of an electron., U represents the applied potential,  $U_{fb}$  represent the flat band otential,  $\epsilon$  and  $\epsilon_0$  represent the relative and the vacuum permittivity, respectively.

$$w_{sc} = \sqrt{\frac{2\epsilon\epsilon_0}{eN_{cc}}(U - U_{fb} - \frac{kT}{e})}$$
 (3)

The expression of the absorption coefficient  $\alpha_{sc}$  with respect to the light energy  $h\nu$  is shown in equation 4. The value of n depends on the band-band transition type. n takes discreet values of 0.5 or 2 when direct or indirect transitions are allowed, respectively.

$$\alpha_{sc} = const \frac{(h\nu - E_g)^n}{h\nu} \tag{4}$$

The complete expression of the photocurrent is therefore given by the equation 5. The latter is obtained by substituting the absorption coefficient  $\alpha_{sc}$  and the space charge width  $w_{sc}$  from the equation 2 by the equations 3 and 4, respectively

$$I_{ph} = \phi_0 \cdot const \frac{(h\nu - E_g)^n}{h\nu} \cdot \sqrt{\frac{2\epsilon\epsilon_0}{eN_{cc}}(U - U_{fb} - \frac{kT}{e})}$$
 (5)

The linear transform with respect to the energy of the equation 5 is shown in equation 6 and it is used for determining the band gaps. The linear transform with respect to the potential is shown in equation 7 and it is used for determining the semiconduction type, the flat band potential, and the number of majority charge carrier.

$$\left[\frac{I_{ph} \cdot h\nu}{\phi_0}\right]^{1/n} = const \cdot (h\nu - E_g) \tag{6}$$

$$I_{ph}^2 = const \cdot (U - U_{fb} - \frac{kT}{e}) \tag{7}$$

### 3 Application Examples

- 3.1 Identification of minor oxides
- 3.2 Identification of semiconduction type
- 3.3 High temperature PEC

#### References

- [1] J.-F. Marucco, Chimie Des Solides. Paris: EDP Sciences, 2006.
- [2] H. Finklea, "Photoelectrochemistry: Introductory concepts," *Journal of Chemical Education*, vol. 60, no. 4, p. 325, 1983.
- [3] P. Marcus and F. Mansfield, Analytical Methods in Corrosion Science and Engineering. Boca Raton, FL: CRC Press, 2006.
- [4] R. Memming, Semiconductor Electrochemistry. Weinheim: WILEY-VCH Verlag GmbH, 2008.
- [5] A. J. Bard and M. Stratmann, Fundamentals of Semiconductors Electrochemistry and Photoelectrochemistry. Wiley-VCH, 2002.
- [6] W. Plieth, Electrochemistry for Materials Science. Amsterdam: Elsevier, 2008.
- [7] S. R. Morrison, Electrochemistry at Semiconductor and Oxidized Metal Electrodes. New York: Plenum Press, 1980.
- [8] A. K. Vijh, "Correlation between bond energies and forbidden gaps of inorganic binary compounds," *Journal of Physics and Chemistry of Solids*, vol. 30, pp. 1999–2005, 1969.
- [9] U. Stimming, "Photoelectrochemical studies of passive films," *Electrochimica Acta*, vol. 31, no. 4, pp. 415–429, 1986.
- [10] F. Di Quarto, C. Sunseri, S. Piazza, and C. Sunseri, "Semiempirical Correlation between Optical Band Gap Values of Oxides and the Difference of Electronegativity of the Elements. Its Importance for a Quantitative Use of Photocurrent Spectroscopy in Corrosion Studies," Journal of Physical Chemistry, vol. 101, pp. 2519–2525, 1997.
- [11] Y. Wouters, A. Galerie, and J.-P. Petit, "Photoelectrochemical Study of Oxides Thermally Grown on Titanium in Oxygen or Water Vapor Atmospheres," *Journal of The Electrochemical Society*, vol. 154, no. 10, pp. C587–C592, 2007.
- [12] W. W. Gärtner, "Depletion-Layer Photoeffects in Semiconductors," *Physical Review*, vol. 116, no. 1, pp. 84–87, 1959.
- [13] M. Butler, "Photoelectrolysis and physical properties of the semiconducting electrode WO<sub>3</sub>," *Journal of Applied Physics*, vol. 48, no. 5, p. 1914, 1977.
- [14] R. Benaboud, P. Bouvier, J.-P. Petit, Y. Wouters, and A. Galerie, "Comparative study and imaging by PhotoElectroChemical techniques of oxide films thermally grown on zirconium and Zircaloy-4," *Journal of Nuclear Materials*, vol. 360, no. 2, pp. 151–158, 2007.
- [15] A. Srisrual, J.-P. Petit, Y. Wouters, C. Pascal, and A. Galerie, "Photoelectrochemical investigations on individual ferritic and austenitic grains of a duplex stainless steel oxidized in water vapour.," *Materials at High Temperatures*, vol. 28, no. 4, pp. 349–354, 2011.
- [16] M. Bojinov, P. Kinnunen, T. Laitinen, K. Mäkelä, T. Saario, and P. Sirkiä, "Photocurrent response of the passive film on iron in a high-temperature aqueous electrolyte," *Electro-chemistry Communications*, vol. 4, pp. 222–226, 2002.

- [17] M. Skocic, "Etude (photo)-électrochimique en réacteur simulé du phénomène de shadow corrosion des alliages de zirconium," Ph.D. dissertation, Université de Grenoble Alpes, Grenoble, May 2016.
- [18] E. Becquerel, "Mémoire sur les effets électriques produits sous l'influence des rayons solaires," Comptes Rendus des Séances Hebdomadaires, vol. 9, pp. 561–567, 1839.
- [19] H. Gerischer, "Electrochemical Behavior of Semiconductors under Illumination," *Journal of The Electrochemical Society*, vol. 113, no. 11, pp. 1174–1182, 1966.
- [20] A. W. Copeland, O. D. Black, and A. B. Garrett, "The Photovoltaic Effect," *Chemical Reviews*, vol. 31, no. 1, pp. 177–226, 1942.
- [21] H. Gerischer, "Semiconductor electrodes and their interaction with light," in *Photoelectrochemistry*, *Photocatalysis and Photoreactor*, M. Schiavello, Ed., Dordrecht: D. Reidel Publishing Company, 1985, pp. 39–106.
- [22] N. Sato, Electrochemistry at Metal and Semiconductors Electrodes. Amsterdam: Elsevier Science, 1998.