**CONFIDENTIAL B** 



## MediaTek IoT SmartDevice App Introduction

### **Outline**

- Overview
- SmartDevice Features
  - User Scenario
  - BTNotify
  - Connection
  - Features (Notification Push/FOTA/FMP/BAS/EPO)
  - About
- Health Features
  - Overview
  - Health Feature



## **Overview**



# SmartDevice App (1/3)


 MediaTek SmartDevice App is an Android application used for MediaTek IoT device (based on MT2523/MT2533 chip).

It doesn't only apply to MediaTek IoT Bluetooth device (MT2523/MT2533), but also for Smart Health Device (MT2523 + MT2511, watch\_ref\_design project).




# SmartDevice App (2/3)

### App GUI

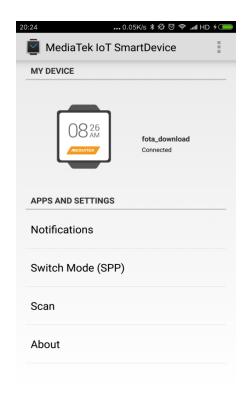

(Connected with IoT Device, disable Health Feature)

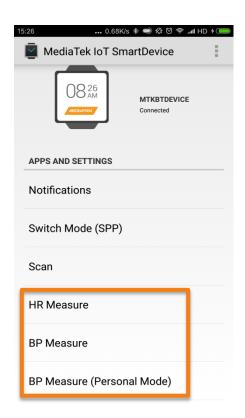

(Connected with 2511 health device, enable Health Feature)



# SmartDevice App (3/3)

- The APK includes below features:
  - Scan nearby BT Devices
  - Switch Mode (SPP/GATT)
  - Connection (Based on MTK BTNotify transport protocol)
  - Notification Push
  - FOTA (Firmware Over-The-Air by BTNotify transport)
  - EPO Download (only applies for MTK IoT GNSS Porject)
  - Find Me & BAS (only enable in GATT mode)
  - MT2511 Health Feature (only enable for health device)
    - Heart Rate Measure
    - Blood Pressure Measure
    - Blood Pressure Calibration & Personal Mode
    - Heart Rate Multi-connect & Comparison




### **SmartDevice Features**




### **SmartDevice Main UI**

Main Activity

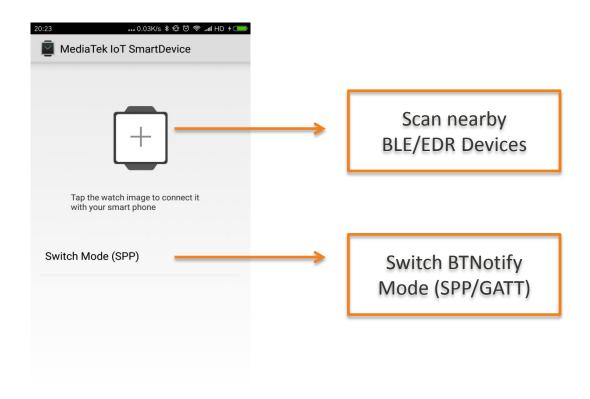



### **User Scenario**

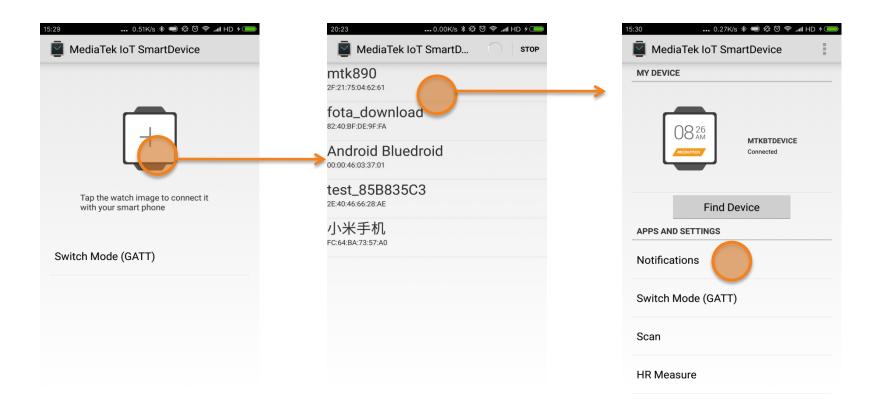

MainActivity
Scan nearby BLE Device

DeviceScanActivity
Each scan only 60 seconds

MainActivity
Connect successfully




# BTNotify (1/2)

### BTNotify

- BTNotify: MTK BT Transport Protocol
- Handshake: APK must handshake to confirm that the remote device is MTK Smart Device (based on BTNotify) after connect BT device successfully.
- Two Mode
  - SPP (Based on BT SPP Profile)
  - GATT (i.e. DOGP Mode, Based on MTK defined BLE GATT Profile - DOGP - Data over GATT Profile)


# BTNotify (2/2)

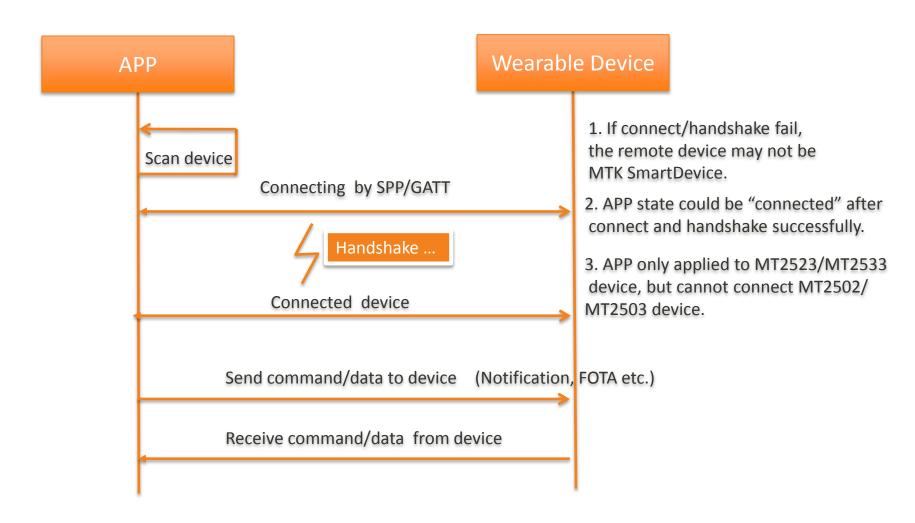

# Connection (1/3)

### Switch Mode

- Support SPP and GATT mode.
- SPP and GATT cannot coexist.
- APK will connect only BTNotify SPP profile
   in SPP mode, but will not connect BT A2DP/HFP profiles.
- APK will connect BLE profiles
   (BTNotify DOGP/FMP/BAS) in GATT mode.
- APK can switch mode in disconnected state.
- APK cannot switch to GATT mode if SP don't support BLE.
- APK will keep the last mode when SP or APK reboot.

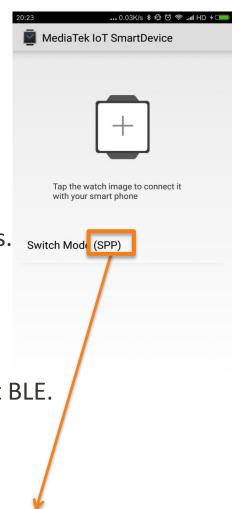

Current mode is SPP, APP will switch to GATT mode after click "Switch Mode".

## Connection (2/3)

#### Scan

- Show EDR/DUAL devices in SPP mode.
- Show bonded device in SPP mode directly.
- Show LE/DUAL devices in GATT mode.



## Connection (3/3)

#### Auto Reconnect

- GATT/SPP auto reconnect the last GATT/SPP connection address,
   GATT/SPP will auto connect after reboot BT, SP, Remote Device.
- GATT/SPP doesn't auto connect after user disconnect GATT/SPP connection by click operation. (i.e. Code call disconnect API)




### **SmartDevice Features**


- SmartDevice main features:
  - Notification Push
  - FOTA
  - FMP
  - BAS
  - EPO

## **Notification Push (1/3)**

### Enable:


 If you don't activate Notification Push, APK will ask you to activate it in System Setting UI.

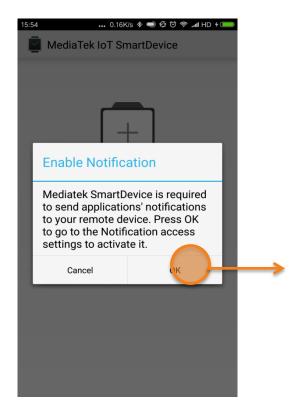

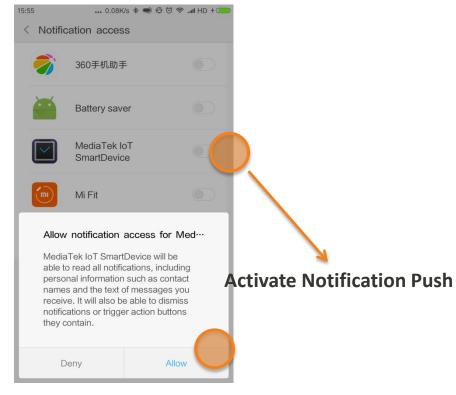

# Notification Push (2/3)

- Notification App List:
  - You can disable the APP that if you don't want to sync its notification to device.

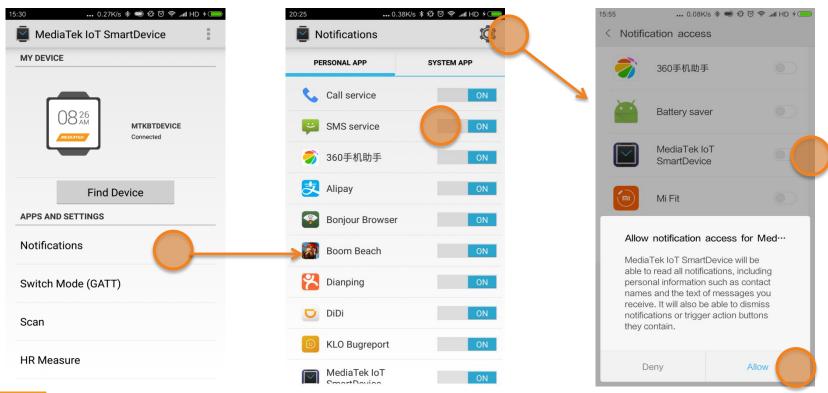

# **Notification Push (3/3)**

- SmartDevice will listen new arrived info/notification and push them to remote device, such as:
  - Notification: Normal android application notification.
     User can block some app's notification in APK. So when receive new notification of this app, the APK will don't push it to remote device.
  - Message: If receive new SMS, APK will push it to remote device.
  - Missed call: If miss a call, APK will notify to remote device.
  - Low battery warning: If SP changes to low battery status, APK will notify to remote device.



# FOTA (1/3)

#### FOTA

 Firmware Over-The-Air , send Firmware data to remote device for Firmware Upgrade.


### Workflow

- Get current version from remote device via BTNotify.
- Choose firmware upgrade file from local file system.
- Transfer firmware data via BTNotify.
- Remote device starts to upgrade after transfer completely.
- Feedback the upgrade result to APK after remote device reboot and BTNotify auto reconnect successfully.




# FOTA (2/3)

### FOTA Flow

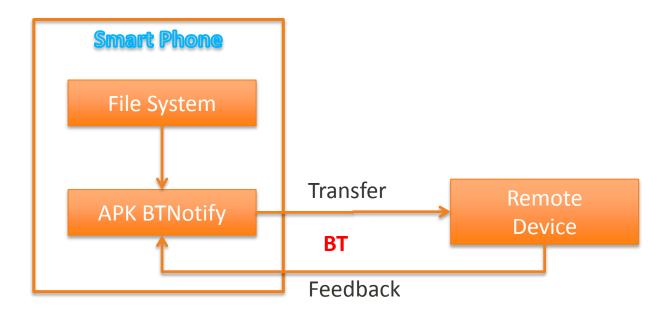


# FOTA (3/3)

- FOTA UI
  - FOTA menu will be available after connected successfully.
  - FOTA could send full device bin, or GNSS bin(only for GNSS project) to remote device.

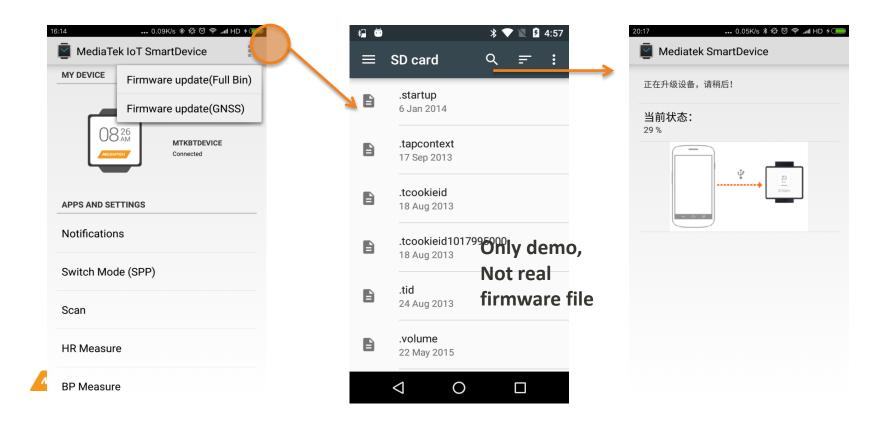


# FMP (1/3)

- Find Me Profile (FMP)
  - When a button is pressed on one device to cause an alerting signal on a peer device.
  - Find Phone
    - Press button on watch, the phone will alert out

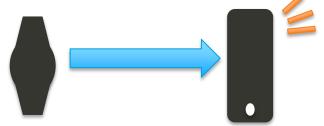


- Find watch
  - Press button on Phone, the watch will alert out

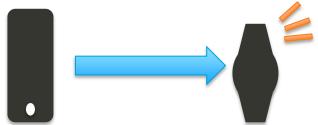

# **FMP (2/3)**

### FMP UI

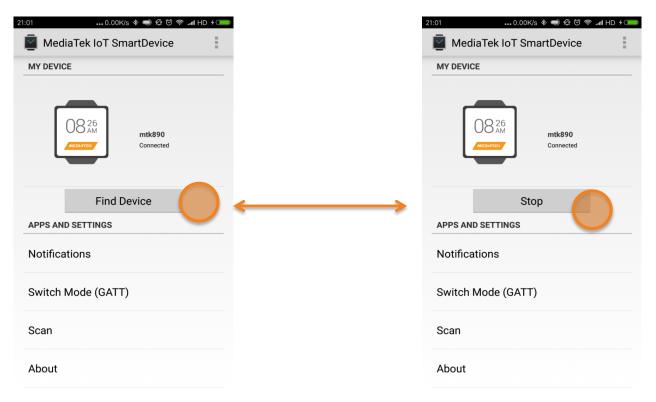


SP APK initiates "Find Me" alert/stop to find device.

(Only enable in MT2533 Device)



# FMP (3/3)

### FMP UI

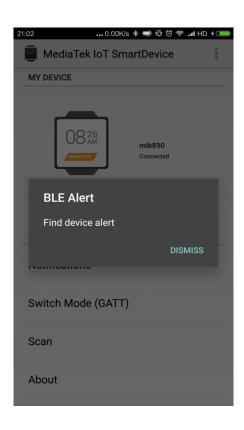

Remote Device initiates "Find Me" alert to find Smart Phone. (Enable in MT2523/MT2533 related project)

# **BAS (1/2)**

- The Battery Service (BAS) exposes the state of a battery within a device
  - SP Read battery level from device when connected.




When device battery level change, it should notify phone.



# **BAS (2/2)**

- BAS UI
  - SmartDevice APP working as BAS Client.

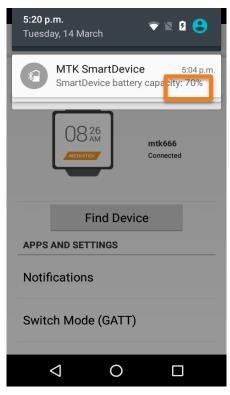



(Only enable in MT2533 Device)


### **EPO**

#### EPO

- EPO: A file be used to assistant location in GNSS.
- The EPO file will be download from network server and send to device once request and SP has been connected to the internet.
- Only enable in MT2523 GNSS project.

# **About (1/2)**


### About GUI

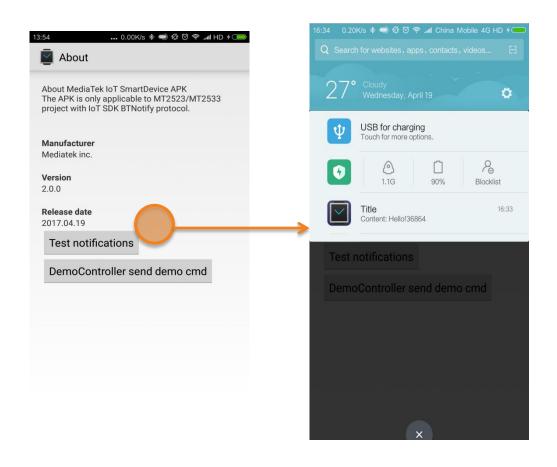

SmartDevice APK send a notification to testing notification push feature.

## **About (2/2)**

### About GUI

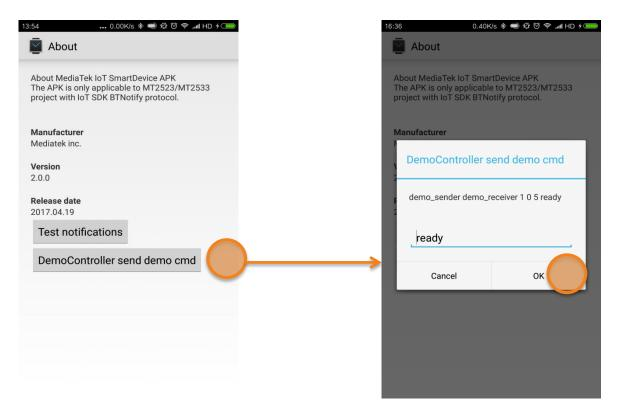

SmartDevice APK send a demo command by using DemoController.



## **Health Features**



# Overview (1/3)

#### MT2511

- Bio-AFE support PPG (photoplethysmography) / ECG (electrocardiography) signal.
- MT2523/2533 can communicate with MT2511 bio-sensor via I2C and SPI.

#### IoT Device SW

- Use IoT SDK "project\mt2523\_watch\apps\watch\_ref\_design"
- Feature
  - HR (PPG + Motion)
  - Blood Pressure (PPG + ECG)
  - Touchgfx GUI




# Overview (2/3)

### APP Health Feature

- Add record Transfer personal profile to device
- HR Measure measure heart rate
- BP measure
  - General Mode Measure personal blood pressure
  - Personal Mode Measure bp with saved personal model, which created from calibration process.
- Multiple connect Add reference device for heart rate comparison

# Overview (3/3)

### APP GUI

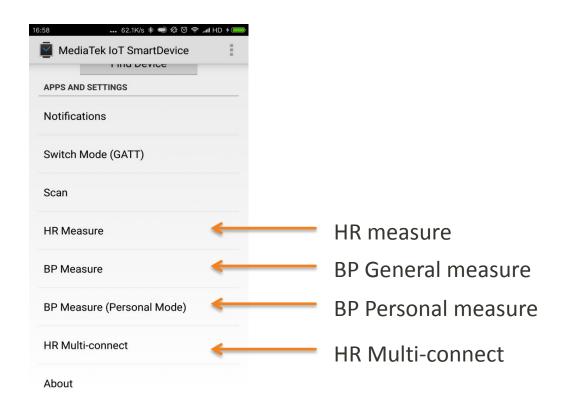




### **Add Record**


### Add Record

- Fill in the personal profiles and transfer to device, which will be used when measuring HR/BP.
- Note: This is mandatory option when measuring BP.

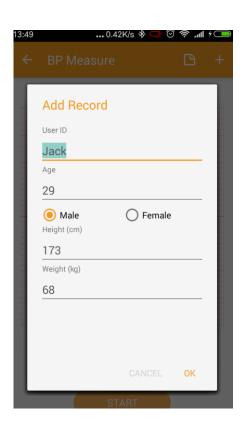

# HR Measure (1/2)


- Present bio-sensor data
  - Entry or Turn on heart rate measurement on your device, you will see PPG chart, HR BPM and confidence level on the screen.
  - Confidence level
    - 0 ~ 1: low confidence level
    - 2 ~ 3: high confidence level
  - If you would like to edit the personal profile,
     click on the "+" (upper right of the screen).

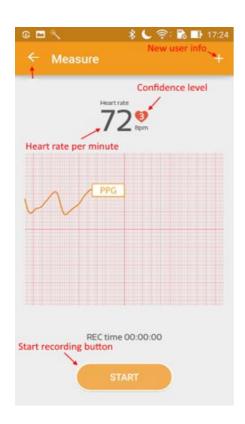

# HR Measure (2/2)

### Store raw data

- Tap on the "START" button on the bottom of the screen will start a recording session.
- Tap on the same button (which should be showing "STOP" now) again will stop the recording session and save the result to the local storage on the smart phone. (/sdcard/CatchLog).

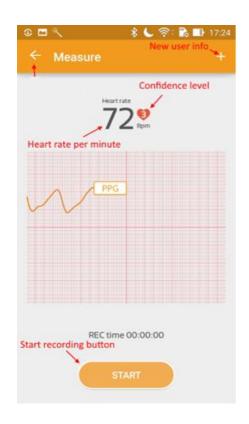

### BP Measure – General Mode (1/3)

#### Present bio-sensor data

 Turn on blood pressure measurement on your device and wait for a few seconds, you can see both PPG and ECG chart on the measurement area.

#### Store raw data


- Tap "START" button will start a recording session.
- If you have a golden device, use the second button to the upper right to enter the golden measurement result as a record for debugging usage.





#### BP Measure – General Mode (2/3)

- Present blood pressure result
  - Show systolic BP, diastolic BP, and HR BPM.
  - Show PWTT chart.

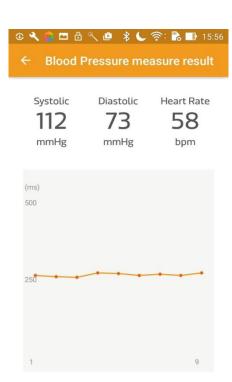

#### BP Measure – General Mode (3/3)


#### SNR

- If user store raw data ("Start" recording),
   SNR10 for PPG and SNR40 for ECG would be computed and be shown on screen.
- User can evaluate the signal quality with the SNR values.




#### BP Measure – Personal Mode (1/6)

- In personal mode, user can either creates a new personal model or chooses a personal model which had been stored in APK.
- User will execute a calibration process when he/she decided to create a personal model.

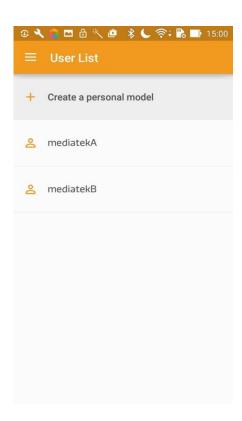

#### BP Measure – Personal Mode (2/6)


- There are 4 steps in calibration process,
  - Create a personal model
  - 2. Input Golden
  - 3. Calibration
  - 4. Input Golden again
- User can create his own personal model through these steps.
- The first step is simple, just like general mode, user has to input profiles such as birth year, gender, height, and weight.

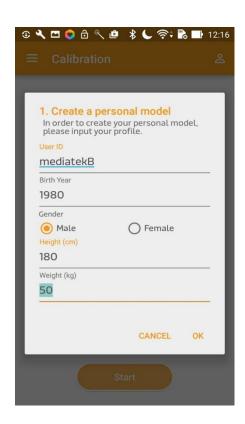




#### **BP Measure – Personal Mode (3/6)**

- During calibration process, user need to use a sphygmomanometer as a golden device to measure his/her current blood pressure.
- In the second step, input the measure result from the golden device.

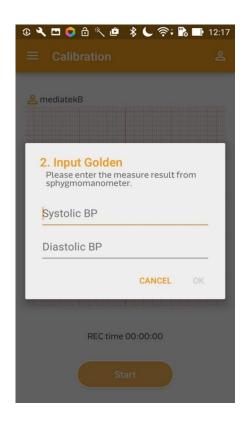

#### **BP Measure – Personal Mode (4/6)**


- In third step, user would switch features to select BP measure or calibrate mode.
- When user selects it, the measure of personal model will start and measuring personal model for 25 seconds.
- During the measurement process, EKG and PPG raw data will be transferred to SP through BT and the waveforms will be shown in APK screen.

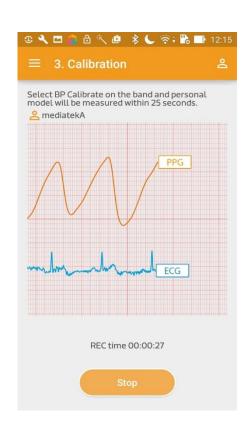



#### **BP Measure – Personal Mode (5/6)**


- Finally, after the personal calibration parameter had been measured and transferred to SP, user will be asked to input the measured result from golden device again.
- When user press OK, all the personal model data will be stored in APK.
- The calibration process is completed and user can measure blood pressure with their own model.

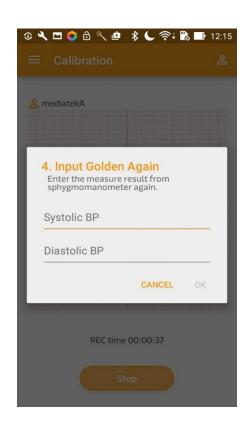



#### **BP Measure – Personal Mode (6/6)**

- When user chooses a personal model to measure blood pressure, his personal model would be set to the device.
- User can measure his blood pressure based on the personal model which he had created before through calibration process.
- Just like the process in general mode.

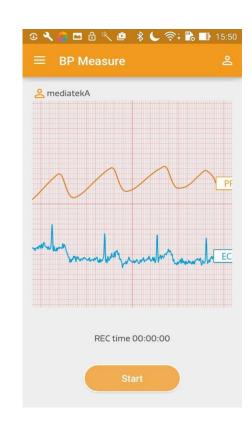



## Multiple Connect (1/4)

- Multiple connect feature
  - Select the reference device in the list and tap the "CONNECT" button.
  - Make sure the device is discoverable and support SIG BLE HR Profile.



## Multiple Connect (2/4)

Multiple connect feature

 Heart rates from both devices will now show in the measure screen.

Tap the "START" button to start a recording session.

MT2511 Health Device.


Reference HR Device.





# Multiple Connect (3/4)

- Multiple connect feature
  - The AP5 and AP10 percentage during the recording period will be calculated and shown on the screen.

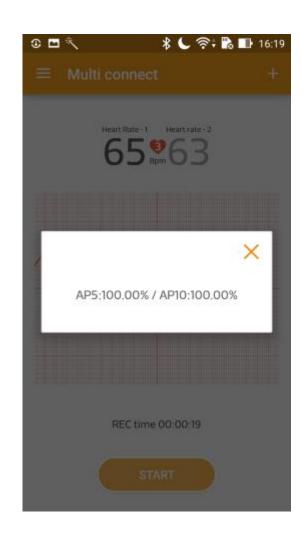



### Multiple Connect (4/4)

#### Multiple connect feature

- Formula:
  - Diff Count (total number about our hr bpm is difference from golden bpm be measured from reference device)
  - AP5 Count (total number of our hr bpm differ 5~10 from golden bpm)
  - AP10 Count (total number of our hr bpm differ 10 or higher from golden bpm)
  - AP5: 1- (AP5 Count ) / (Diff Count)
  - AP10: 1 ((AP5 Count ) / (Diff Count)) \* ((AP10 Count ) / (Diff Count))



#### **Contact US**

(If you have any questions, comments, or suggestions, please contact us by MTK ACS, or send mail to <a href="mailto-smartDevice-App@mediatek.com">SmartDevice-App@mediatek.com</a>)



# MEDIATEK

# everyday genius