Control Systems Engineering Chapter 2: Modeling in the Frequency Domain

Dr.-Ing. Witthawas Pongyart

Chapter 2: Modeling in the Frequency Domain Learning Outcomes:

- Find the Laplace transform of time functions and the inverse Laplace transform (Sections 2.1-2.2)
- Find the <u>transfer function</u> from a differential equation and solve the differential equation using the transfer function (Section 2.3)
- Find the transfer function for
 - linear, time-invariant electrical networks (Section 2.4)
 - linear, time-invariant translational mechanical systems
 - time-invariant rotational mechanical systems
 - gear systems with no loss and for gear systems with loss

Chapter 2: Modeling in the Frequency Domain Learning Outcomes: (cont.)


- Find the transfer function for
 - linear, time-invariant electrical networks (Section 2.4)
 - linear, time-invariant translational mechanical systems
 - time-invariant rotational mechanical systems
 - gear systems with no loss and for gear systems with loss
 - electromechanical systems
 - Produce analogous electrical and mechanical circuits
 - Linearize a nonlinear system in order to find the transfer function

Chapter 2: Modeling in the Frequency Domain Case Study:

- Given the antenna azimuth position control system shown on the front endpapers, you will be able to find the <u>transfer function</u> of each subsystem.
- Given a model of a human leg or a nonlinear electrical circuit, you will be able to linearize the model and then find the transfer function.

What is the Transfer Function?

• Transfer function is the ratio of the Laplace transform of the output signal to the input signal with the initial conditions as zero.

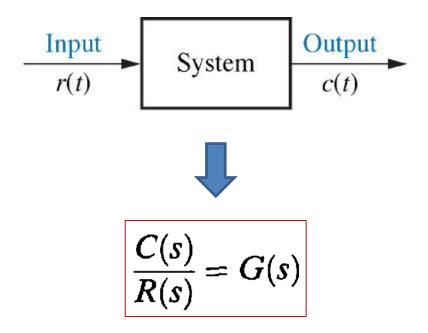

Example 2.4: Transfer Function for a Differential Equation

PROBLEM: Find the transfer function represented by

$$\frac{dc(t)}{dt} + 2c(t) = r(t) \tag{2.55}$$

SOLUTION: Taking the Laplace transform of both sides, assuming zero initial conditions, we have


$$sC(s) + 2C(s) = R(s)$$
 (2.56)

The transfer function, G(s), is

$$G(s) = \frac{C(s)}{R(s)} = \frac{1}{s+2}$$
 (2.57)

Note:
$$\mathscr{L}\left[\frac{df}{dt}\right] = sF(s) - f(0-)$$

$$\mathscr{L}\left[\frac{d^2f}{dt^2}\right] = s^2F(s) - sf(0-) - f'(0-)$$

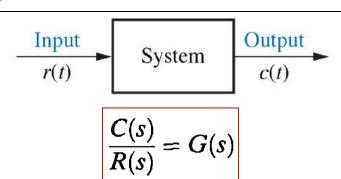

Example 2.6: Find the transfer function relating the *capacitor*


voltage, $v_C(t)$, to the *input voltage*, v(t).

<u>Solution</u>: *Assuming all initial conditions* = 0

- Apply KVL

$$L\frac{di(t)}{dt} + Ri(t) + \frac{1}{C} \int_0^t i(\tau) d\tau = v(t)$$

$$L\frac{di(t)}{dt} + Ri(t) + v_C(t) = v(t)$$

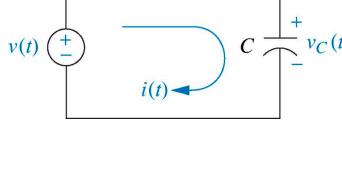

$$LC\frac{d^2v_C(t)}{dt^2} + RC\frac{dv_C(t)}{dt} + v_C(t) = v(t) \implies \text{Differential Eq.}$$

 $i_C(t) = C \frac{dv_C(t)}{dt} = i(t)$

$$LCs^2V_C(s) + RCsV_C(s) + V_C(s) = V(s)$$
 \Rightarrow Algebraic Eq.

Example 2.6: Find the transfer function relating the capacitor

voltage, $V_c(s)$, to the input voltage, V(s).


Solution: Assuming all initial conditions = 0

- Apply KVL

$$L\frac{di(t)}{dt} + Ri(t) + v_C(t) = v(t)$$

$$LC\frac{d^2v_C(t)}{dt^2} + RC\frac{dv_C(t)}{dt} + v_C(t) = v(t)$$

$$i_C(t) = C\frac{dv_C(t)}{dt} = i(t)$$

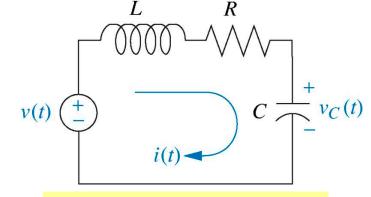

$$i_C(t) = C \frac{dv_C(t)}{dt} = i(t)$$

$$LCs^2V_C(s) + RCsV_C(s) + V_C(s) = V(s) \implies \text{Algebraic Eq.}$$

$$(LCs^2 + RCs + 1)V_C(s) = V(s)$$

$$\frac{V_C(s)}{V(s)} = \frac{1}{(LCs^2 + RCs + 1)} \qquad \qquad V(s) \qquad \qquad V_C(s)$$

Example 2.6: Find the transfer function relating the capacitor

voltage, $V_c(s)$, to the input voltage, V(s).

Solution: Assuming all initial conditions = 0

- Apply KVL


$$L\frac{di(t)}{dt} + Ri(t) + v_C(t) = v(t)$$

$$LC\frac{d^{2}v_{C}(t)}{dt^{2}} + RC\frac{dv_{C}(t)}{dt} + v_{C}(t) = v(t)$$

$$LCs^2V_C(s) + RCsV_C(s) + V_C(s) = V(s)$$

$$(LCs^2 + RCs + 1)V_C(s) = V(s)$$

$$\frac{V_C(s)}{V(s)} = \frac{1}{(LCs^2 + RCs + 1)}$$

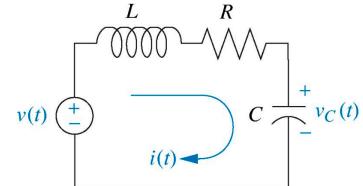

- 1. Write the differential equations for the system.
- 2. Apply Laplace Transform
- 3. Solve the equations for the Transfer function.

$$\begin{array}{c|c}
\hline
V(s) \\
\hline
V(t)
\end{array}$$

$$\begin{array}{c|c}
\hline
G(s) \\
\hline
V_c(s) \\
\hline
V_c(t)
\end{array}$$

Electrical Network Transfer Functions

 Let us now develop a <u>technique for simplifying</u> the solution for future problems. Assuming zero initial conditions.

TABLE 2.3 Voltage-current, voltage-charge, and impedance relationships for capacitors, resistors, and inductors

Component	Voltage-current	Current-voltage	Voltage-charge	Impedance $Z(s) = V(s)/I(s)$	Admittance $Y(s) = I(s)/V(s)$
— (— Capacitor	$v(t) = \frac{1}{C} \int_0^1 i(\tau) d\tau$	$i(t) = C \frac{dv(t)}{dt}$	$v(t) = \frac{1}{C}q(t)$	$\frac{1}{Cs}$	Cs
\\\\\- Resistor	v(t)=Ri(t)	$i(t) = \frac{1}{R}v(t)$	$v(t) = R \frac{dq(t)}{dt}$	R	$\frac{1}{R} = G$
	$v(t) = L \frac{di(t)}{dt}$	$i(t) = \frac{1}{L} \int_0^1 v(\tau) d\tau$	$v(t) = L \frac{d^2 q(t)}{dt^2}$	Ls	$\frac{1}{Ls}$

Note: The following set of symbols and units is used throughout this book: v(t) - V (volts), i(t) - A (amps), q(t) - Q (coulombs), C - F (farads), $R - \Omega$ (ohms), $G - \Omega$ (mhos), L - H (henries).

Electrical Network Transfer Functions

 Let us now develop a technique for simplifying the solution for future problems. <u>Assuming zero initial conditions.</u>

For the capacitor,

$$V(s) = \frac{1}{Cs}I(s) \tag{2.67}$$

For the resistor,

$$V(s) = RI(s) \tag{2.68}$$

For the inductor,

$$V(s) = LsI(s) (2.69)$$

Now define the following transfer function:

All of the elements have this form.

Example 2.6: Find the transfer function relating the capacitor

voltage, $V_c(s)$, to the input voltage, V(s).

<u>Solution</u>: Assuming all initial conditions = 0

- Apply KVL


$$sLI(s) + RI(s) + \frac{1}{sC}I(s) = V(s)$$

$$I(s) = sCV_C(s)$$

$$LCs^{2}V_{C}(s) + RCsV_{C}(s) + V_{C}(s) = V(s)$$

$$(LCs^2 + RCs + 1)V_C(s) = V(s)$$


$$\frac{V_C(s)}{V(s)} = \frac{1}{(LCs^2 + RCs + 1)}$$

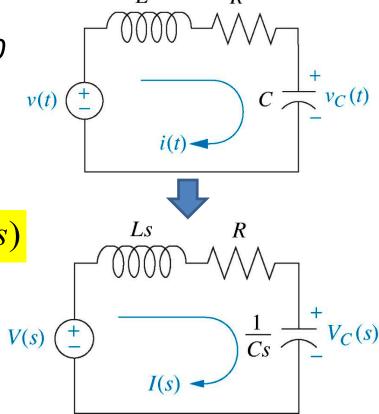

$$\begin{array}{c|c} V(s) & & V_c(s) \\ \hline v(t) & & & \\ \hline \end{array}$$

Electrical Network Transfer Functions

- We summarize the steps as follows:
- 1. Redraw the original network showing <u>all time variables</u>, such as v(t), i(t), and $v_c(t)$, as Laplace transforms V(s), I(s), and $V_c(s)$, respectively. Assuming zero initial conditions.
- 2. Replace the component values with their impedance values. This replacement is similar to the case of dc circuits, where we represent resistors with their resistance values.
- 3. Solve the equations for the transfer function.

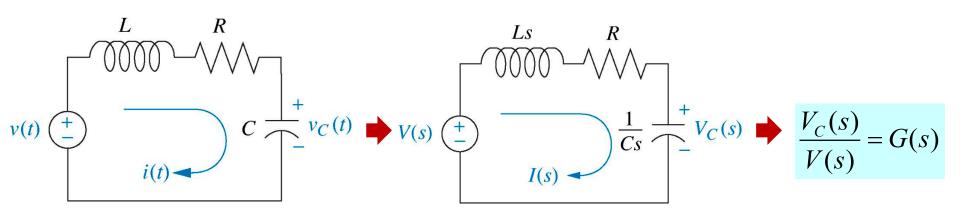


Electrical Network Transfer Functions

 Note: Not only the KVL and KCL, we can also use the Mesh and Nodal analysis to determine the transfer function.

Example 2.8: Repeat Example 2.6 using **nodal analysis** and <u>without</u> writing a differential equation.

<u>Solution</u>: We assume that currents leaving the node are positive and currents entering the node are negative. Hence,

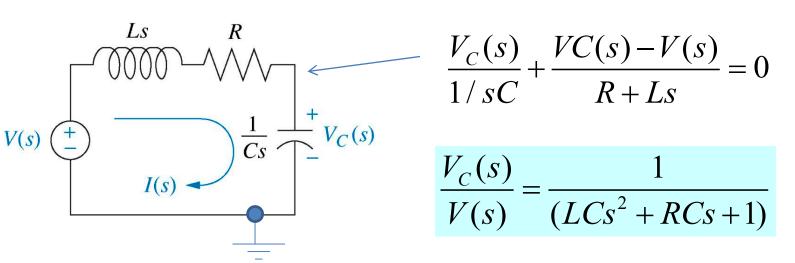

Electrical Network Transfer Functions

- For some simple circuit, the transfer function can be determined via voltage division.
- **Example 2.9:** Repeat Example 2.6 using <u>voltage division</u> and the transformed circuit.

<u>Solution</u>: We assume that currents leaving the node are positive and currents entering the node are negative. Hence,

$$V_{C}(s) = \frac{1/sC}{(R+Ls+1/sC)}V(s)$$

$$V_{C}(s) = \frac{1/sC}{(R+Ls+1/sC)}V(s)$$


$$V_{C}(s) = \frac{1}{(LCs^{2}+RCs+1)}$$

Electrical Network Transfer Functions

- To solve complex electrical networks—those with multiple loops and nodes — using mesh analysis, we can perform the following steps:
- 1. Replace passive element values with their impedances.
- 2. Replace all sources and time variables with their Laplace transform.
- 3. Assume a transform current and a current direction in each mesh.
- 4. Write Kirschoff's voltage law around each mesh.
- 5. Solve the simultaneous equations for the output.
- 6. Form the transfer function.


• **Example 2.10:** Given the network of Figure 2.6(a), find the transfer function, $I_2(s)/V(s)$.

<u>Solution</u>: Assuming all initial conditions = 0, and draw the transformed circuit.

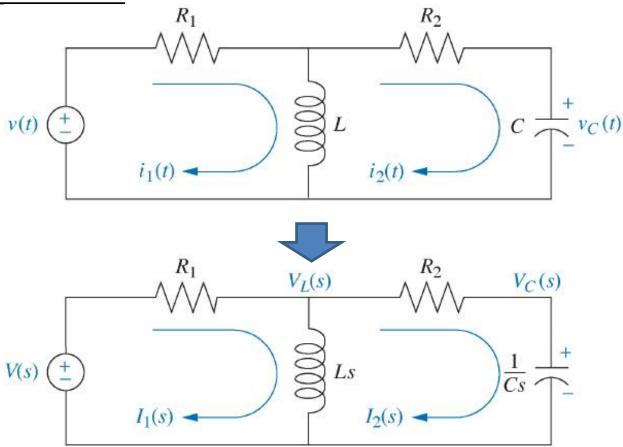

• Example 2.10: Given the network of Figure 2.6(a), find the transfer function, $I_2(s)/V(s)$.

Solution: Write Kirchoff's voltage law around each mesh.

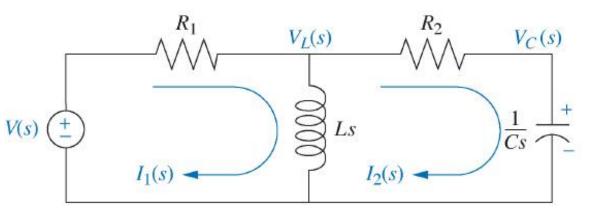


$$R_{1}I_{1}(s) + LsI_{1}(s) - LsI_{2}(s) = V(s)$$

$$LsI_{2}(s) + R_{2}I_{2}(s) + \frac{1}{sC}I_{2}(s) - LsI_{1}(s) = 0$$

$$\frac{I_{2}(s)}{V(s)} = ?$$

• Example 2.10: Given the network of Figure 2.6(a), find the transfer function, $I_2(s)/V(s)$.

Solution: Write Kirschoff's voltage law around each mesh.

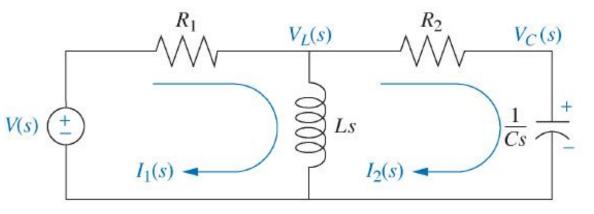


$$R_1I_1(s) + LsI_1(s) - LsI_2(s) = V(s) \Rightarrow (R_1 + Ls)I_1(s) = V(s) + LsI_2(s)$$

$$LsI_2(s) + R_2I_2(s) + \frac{1}{sC}I_2(s) - LsI_1(s) = 0$$

$$I_1(s) = \frac{V(s) + LsI_2(s)}{(R_1 + Ls)}$$

• Example 2.10: Given the network of Figure 2.6(a), find the transfer function, $I_2(s)/V(s)$.

Solution: Write Kirschoff's voltage law around each mesh.

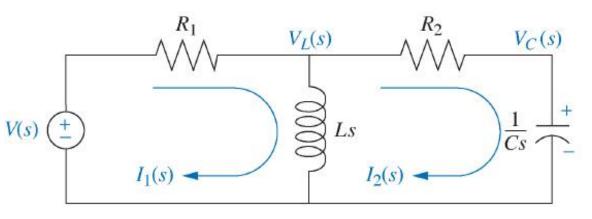

$$R_1I_1(s) + LsI_1(s) - LsI_2(s) = V(s) \Rightarrow$$

$$I_1(s) = \frac{V(s) + LsI_2(s)}{(R_1 + Ls)}$$

$$LsI_{2}(s) + R_{2}I_{2}(s) + \frac{1}{sC}I_{2}(s) - Ls(\frac{V(s) + LsI_{2}(s)}{R_{1} + Ls}) = 0$$

• Example 2.10: Given the network of Figure 2.6(a), find the transfer function, $I_2(s)/V(s)$.

Solution: Write Kirchoff's voltage law around each mesh.


$$LsI_{2}(s) + R_{2}I_{2}(s) + \frac{1}{sC}I_{2}(s) - Ls(\frac{V(s) + LsI_{2}(s)}{R_{1} + Ls}) = 0$$

$$(R_{1} + Ls)(LsI_{2}(s) + R_{2}I_{2}(s) + \frac{1}{sC}I_{2}(s)) = Ls(V(s) + LsI_{2}(s))$$

$$(R_{1} + Ls)(R_{2}I_{2}(s) + \frac{1}{sC}I_{2}(s)) + R_{1}LsI_{2}(s) = LsV(s)$$

$$\frac{V(s)}{(R_{1} + R_{2})LCs^{2} + (R_{1}R_{2}C + L)s + R_{1}}$$

• **Example 2.10:** Before leaving the example, we notice a pattern first illustrated by Eq. (2.72). The form that Eq. (2.80) take is.

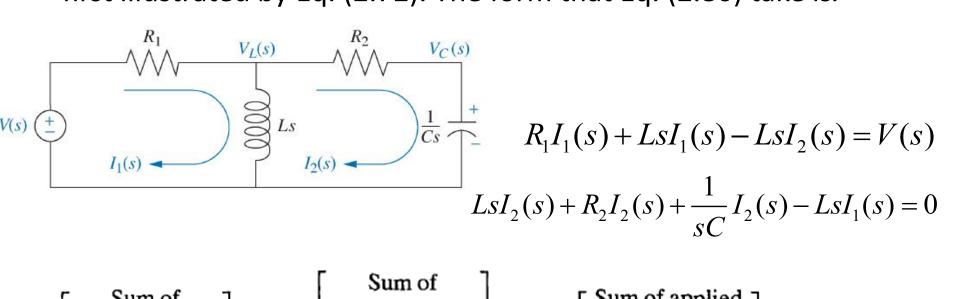

$$\begin{bmatrix} \operatorname{Sum} \text{ of } \\ \operatorname{impedances} \\ \operatorname{around} \operatorname{Mesh} 1 \end{bmatrix} I_1(s) - \begin{bmatrix} \operatorname{Sum} \text{ of } \\ \operatorname{impedances} \\ \operatorname{common} \text{ to the } \\ \operatorname{two} \text{ meshes} \end{bmatrix} I_2(s) = \begin{bmatrix} \operatorname{Sum} \text{ of applied } \\ \operatorname{voltages} \text{ around } \\ \operatorname{Mesh} 1 \end{bmatrix}$$


$$- \begin{bmatrix} \operatorname{Sum} \text{ of } \\ \operatorname{impedances} \\ \operatorname{common} \text{ to the } \\ \operatorname{two} \text{ meshes} \end{bmatrix} I_1(s) + \begin{bmatrix} \operatorname{Sum} \text{ of } \\ \operatorname{impedances} \\ \operatorname{around} \operatorname{Mesh} 2 \end{bmatrix} I_2(s) = \begin{bmatrix} \operatorname{Sum} \text{ of applied } \\ \operatorname{voltages} \text{ around } \\ \operatorname{Mesh} 2 \end{bmatrix}$$

Electrical Network Transfer Functions

- In order to handle multiple-node electrical networks using nodal analysis, we can perform the following steps:
- 1. Replace passive element values with their admittances.
- 2. Replace all sources and time variables with their Laplace transform.
- 3. Replace transformed voltage sources with transformed current sources.
- 4. Write Kirschoff's current law at each node.
- 5. Solve the simultaneous equations for the output.
- 6. Form the transfer function.

• Example 2.11: Find the transfer function, Vc(s)/V(s), for the circuit in Figure 2.6(b). Use nodal analysis.

Solution: Write Kirschoff's current law for each node.

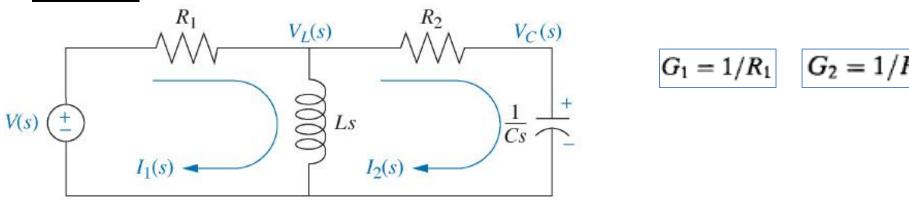


$$\frac{V_L(s) - V(s)}{R_1} + \frac{V_L(s)}{Ls} + \frac{V_L(s) - V_C(s)}{R_2} = 0 \qquad CsV_C(s) + \frac{V_C(s) - V_L(s)}{R_2} = 0$$

$$\left(G_1 + G_2 + \frac{1}{Ls}\right) V_L(s) - G_2 V_C(s) = V(s) G_1$$

$$-G_2 V_L(s) + (G_2 + Cs) V_C(s) = 0$$

• **Example 2.11:** Find the transfer function, Vc(s)/V(s), for the circuit in Figure 2.6(b). Use nodal analysis.

Solution: Write Kirschoff's current law for each node.

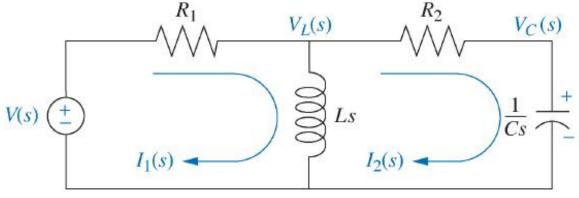

$$\left(G_1 + G_2 + \frac{1}{Ls}\right) V_L(s) - G_2 V_C(s) = V(s) G_1$$

$$-G_2 V_L(s) + (G_2 + Cs) V_C(s) = 0$$


$$G_1=1/R_1$$

$$G_2 = 1/R_2$$

$$\frac{V_C(s)}{V(s)} = \frac{\frac{G_1G_2}{C}s}{\frac{G_1G_2}{C}s + \frac{G_1G_2L + C}{S + \frac{G_2}{C}}} \xrightarrow{V(s)} \frac{\frac{G_1G_2}{C}s}{\frac{G_1G_2L + C}{LC}s + \frac{G_2}{LC}} \xrightarrow{V_C(s)}$$


Transfer Function: Operational Amplifiers

- An operational amplifier, pictured in Figure 2.10(a), is an electronic amplifier <u>used as</u> a basic building block to implement <u>transfer functions</u>. It has the following characteristics:
- 1. Differential input: $v_2(t) v_1(t)$
- 2. High input impedance: $Z_i = \infty$ (ideal)
- 3. Low output impedance: $Z_o = 0$ (ideal)
- 4. High constant gain amplification: $A = \infty$ (ideal)
- The output, $v_o(t)$, is given by $v_o(t) = A(v_2(t) v_1(t))$

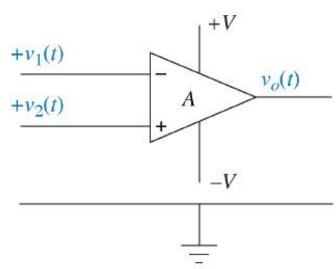

Transfer Function: Operational Amplifiers

 To build the transfer function, the operational amplifiers are mostly applied in the following circuit:

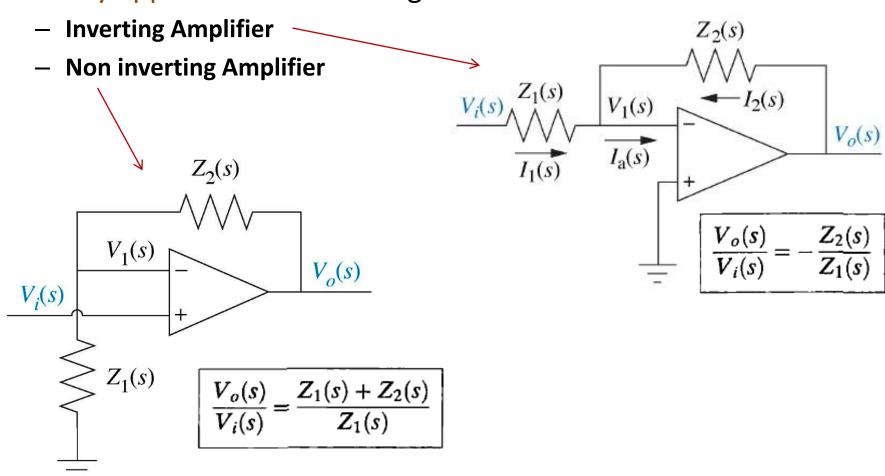


Transfer Function: Inverting Operational Amplifier Circuit

- Example 2.14 Find the transfer function, $V_o(s)/V_i(s)$, for the circuit given in Figure 2.11. $R_2 = C_2 =$
- Solution

$$\frac{V_o(s)}{V_i(s)} = -\frac{Z_2(s)}{Z_1(s)}$$

$$Z_1(s) = \frac{1}{C_1 s + \frac{1}{R_1}} = \frac{1}{5.6 \times 10^{-6} s + \frac{1}{360 \times 10^3}} = \frac{360 \times 10^3}{2.016s + 1}$$

$$Z_2(s) = R_2 + \frac{1}{C_2 s} = 220 \times 10^3 + \frac{10^7}{s}$$

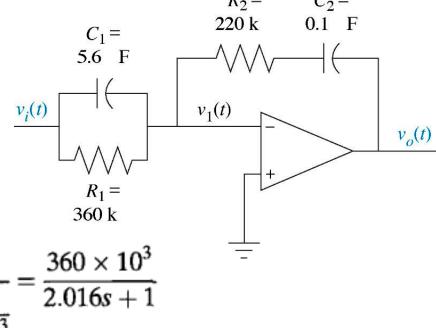


$$\frac{V_o(s)}{V_i(s)} = -1.232 \frac{s^2 + 45.95s + 22.55}{s}$$

Transfer Function: Inverting Operational Amplifier Circuit

- Example 2.14 Find the transfer function, $V_o(s)/V_i(s)$, for the circuit given in Figure 2.11. $R_2 = C_2 =$
- Solution

$$\frac{V_o(s)}{V_i(s)} = -\frac{Z_2(s)}{Z_1(s)}$$


$$\frac{V_o(s)}{V_i(s)} = -1.232 \frac{s^2 + 45.95s + 22.55}{s}$$

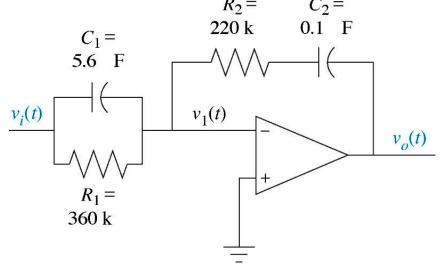

<u>Note</u>: The resulting circuit is called a <u>PID controller</u> and can be used to improve the performance of a control system.

Transfer Function: Noninverting Operational Amplifier Circuit

- **Example 2.15** Find the transfer function, $V_o(s)/V_i(s)$, for the circuit given in Figure 2.13.
- Solution

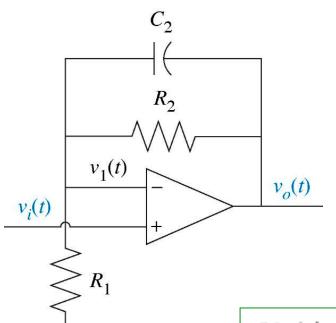

$$\frac{V_o(s)}{V_i(s)} = \frac{Z_1(s) + Z_2(s)}{Z_1(s)}$$

$$Z_1(s) = R_1 + \frac{1}{C_1 s}$$

$$Z_2(s) = \frac{R_2(1/C_2s)}{R_2 + (1/C_2s)}$$

$$\frac{V_o(s)}{V_i(s)} = \frac{C_2 C_1 R_2 R_1 s^2 + (C_2 R_2 + C_1 R_2 + C_1 R_1) s + 1}{C_2 C_1 R_2 R_1 s^2 + (C_2 R_2 + C_1 R_1) s + 1}$$


Electrical Network Transfer Functions

Conclusion:

- In this section, we found transfer functions for multiple-loop and multiple-node electrical networks, as well as operational amplifier circuits.
- In the next section we begin our work with mechanical systems.
 We will see that many of the concepts applied to electrical networks can also be applied to mechanical systems.
- This revelation will give you the confidence to move beyond this textbook and study systems not covered here, such as hydraulic or pneumatic systems.

Mechanical System Transfer Functions

- Since there are two types of the movement in mechanical system, this topic is separated in two groups:
 - 1. Translational Mechanical System Transfer Functions
 - 2. Rotational Mechanical System Transfer Functions
- However, both of them are based on the same concept.

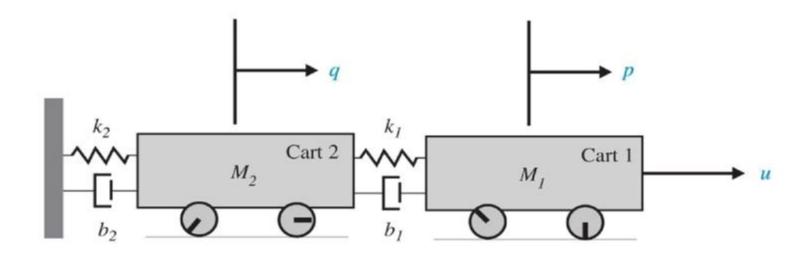

Mechanical System Transfer Functions


- The mechanical systems are mostly composed of three components, namely: Mass, Spring and Damper.
- The properties or the components are listed in the table 2.4.

Component	Force-velocity	Force-displacement	Impedence $Z_M(s) = F(s)/X(s)$
Spring $v(t)$ $f(t)$ K	$f(t) = K \int_0^t v(\tau) d\tau$	f(t) = Kx(t)	K
Viscous damper $x(t)$ $f(t)$	$f(t) = f_{\nu} v(t)$	$f(t) = f_{\nu} \frac{dx(t)}{dt}$	$f_{v}s$
Mass $X(t)$ $M \longrightarrow f(t)$	$f(t) = M \frac{dv(t)}{dt}$	$f(t) = M \frac{d^2 x(t)}{dt^2}$	Ms^2

Mechanical System Transfer Functions

- The **spring constant** *K* determines the relationship between the displacement x(t) and the force f(t).



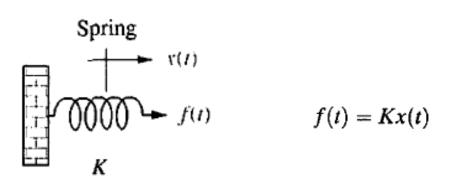


Mechanical System Transfer Functions


The **damping constant** *or coefficient of viscous friction* f_v determines the relationship between the velocity v(t) and the force f(t).

Feature	Damper structure	Damping force-speed characteristics
An oil damper that is equipped with a sole pressure regulating valve and delivers damping force as represented by the F = CV straight line.	Compressed side Street	ched side sure chamber Speed [mm/s]

Mechanical System Transfer Functions


The **damping constant** *or coefficient of viscous friction* f_v determines the relationship between the velocity v(t) and the force f(t).



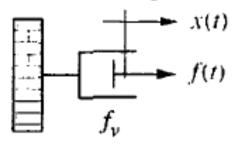

$$f(t) = f_{\nu} v(t)$$

$$f(t) = f_{\nu} \frac{dx(t)}{dt}$$

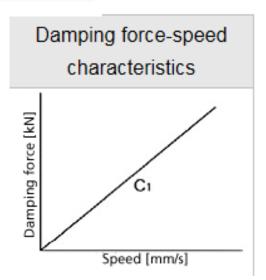


Mechanical System Transfer Functions

- The damper are always used along with the spring, to provide

good oscillation!






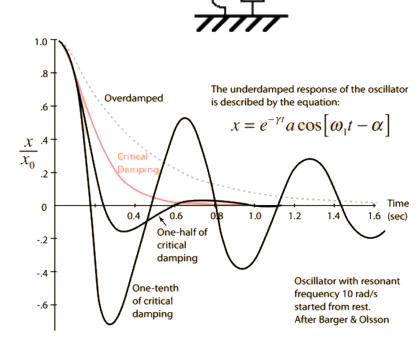

 \mathbf{M}

Mechanical System Transfer Functions

The relationship between the displacement x(t) and the force f(t) are determined according to Newton's 2nd Law.

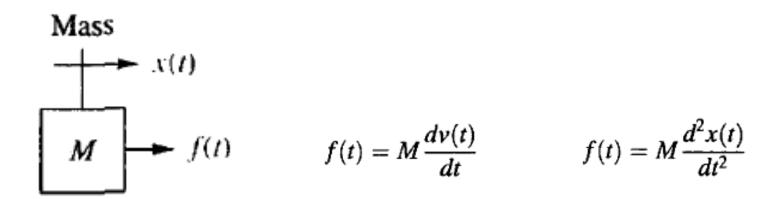

Mechanical System Transfer Functions

• The force-displacement relationships for springs, viscous dampers, and mass are listed in the table 2.4.


Component	Force-velocity	Force-displacement	Impedence $Z_M(s) = F(s)/X(s)$	
Spring $r(t)$ $f(t)$ K	$f(t) = K \int_0^t v(\tau) d\tau$	f(t) = Kx(t)	K	
Viscous damper $x(t)$ $f(t)$	$f(t) = f_{\nu} \nu(t)$	$f(t) = f_{\nu} \frac{dx(t)}{dt}$	$f_{\nu}s$	
Mass $x(t)$ $M \rightarrow f(t)$	$f(t) = M \frac{dv(t)}{dt}$	$f(t) = M \frac{d^2 x(t)}{dt^2}$	Ms^2	

Transfer Function—One Equation of Motion

• Example 2.11: Find the transfer function, X(s)/F(s), for the system in the figure. (Ignore the force due to the gravity)

Solution:


- 1. Draw the free-body diagram
- 2. Place on the mass all forces felt by the mass



shown on the mass

$$\sum f(t) = m \frac{d^2 x(t)}{dt^2}$$


$$M\frac{d^2x(t)}{dt^2} + f_{\nu}\frac{dx(t)}{dt} + Kx(t) = f(t)$$

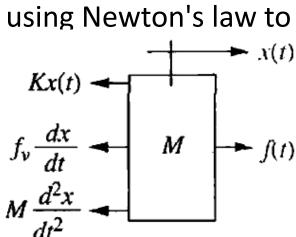

 $\rightarrow x(t)$

Transfer Function—One Equation of Motion

Example 2.11: Find the transfer function,
 X(s)/F(s), for the system in the figure.
 (Ignore the force due to the gravity)

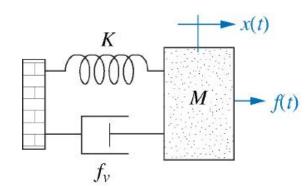

Solution: (cont.)

- 4. Taking the Laplace transform, assuming zero initial conditions
- 5. Solve the equation for the transfer function yields

$$M\frac{d^2x(t)}{dt^2} + f_v \frac{dx(t)}{dt} + Kx(t) = f(t)$$

$$Ms^2X(s) + f_v sX(s) + KX(s) = F(s)$$

$$(Ms^2 + f_v s + K)X(s) = F(s)$$

$$\frac{F(s)}{Ms^2 + f_v s + K} \qquad X(s) \qquad G(s) = \frac{X(s)}{F(s)} = \frac{1}{Ms^2 + f_v s + K}$$

Concept of Mechanical Impedance

Now can we parallel our work with electrical networks by circumventing the writing of differential equations and by defining impedances for mechanical components? If so, we can apply to mechanical systems the problem-solving techniques learned in the previous section. Taking the Laplace transform of the force-displacement column in Table 2.4, we obtain for the spring,

$$F(s) = KX(s) \tag{2.112}$$

for the viscous damper,

$$F(s) = f_{\nu}sX(s) \tag{2.113}$$

and for the mass,

$$F(s) = Ms^2 X(s) \tag{2.114}$$

If we define impedance for mechanical components as

$$Z_M(s) = \frac{F(s)}{X(s)} \tag{2.115}$$

Concept of Mechanical Impedance

If we define impedance for mechanical components as

$$Z_M(s) = \frac{F(s)}{X(s)} \tag{2.115}$$

and apply the definition to Eqs. (2.112) through (2.114), we arrive at the impedances of each component as summarized in Table 2.4 (Raven, 1995).⁷

Replacing each force in Figure 2.16(a) by its Laplace transform, which is in the format

$$F(s) = Z_M(s)X(s) \tag{2.116}$$

we obtain Figure 2.16(b), from which we could have obtained Eq. (2.109) immediately without writing the differential equation. From now on we use this approach.

Note:

Finally, notice that Eq. (2,110) is of the form


[Sum of impedances]X(s) = [Sum of applied forces]

(2.117)

which is similar, but not analogous, to a mesh equation (see footnote 7).

Transfer Function—Two Degrees of Freedom

Example 2.17: Find the transfer function, $X_2(s)/F(s)$, for the system.

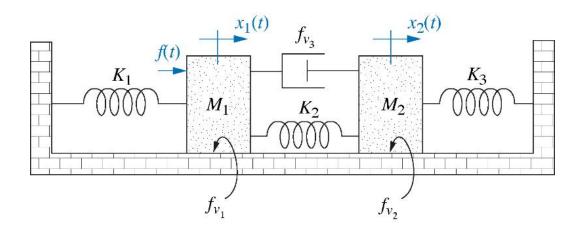


Solution:


- The <u>system has two degrees of freedom</u>, since each mass can be moved in the horizontal direction while the other is held still.
- Thus, two simultaneous equations of motion will be required to describe the system.

Transfer Function—Two Degrees of Freedom

Example 2.17: Find the transfer function, $X_2(s)/F(s)$, for the system.

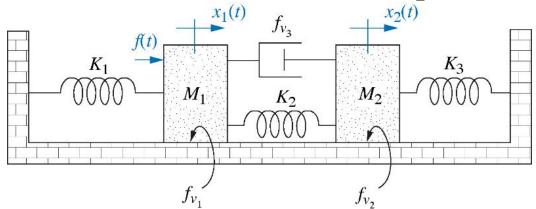


Solution: (For the M_1) If we hold M_2 still and move M_1 to the right. Then hold M_1 still and move M_2 to the right

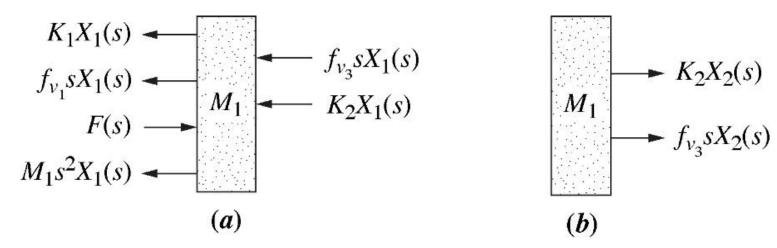

Transfer Function—Two Degrees of Freedom

Example 2.17: Find the transfer function, $X_2(s)/F(s)$, for the system.

Solution: The total force on M_1 is the superposition.

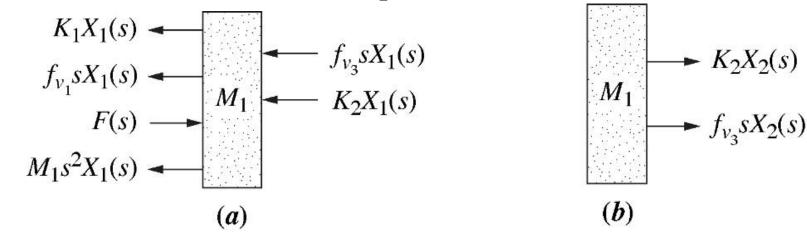

$$(K_1 + K_2)X_1(s) \longrightarrow K_2X_2(s)$$

$$(f_{v_1} + f_{v_3})sX_1(s) \longrightarrow M_1$$


$$F(s) \longrightarrow f_{v_3}sX_2(s)$$

$$M_1s^2X_1(s) \longrightarrow f_{v_3}sX_2(s)$$


$$[M_1s^2 + (f_{v1} + f_{v3})s + (K_1 + K_2)]X_1(s) - (f_{v3}s + K_2)X_2(s) = F(s)$$

Transfer Function—Two Degrees of Freedom

Example 2.17: Find the transfer function, $X_2(s)/F(s)$, for the system.

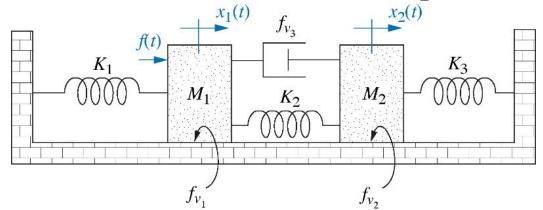


Solution: (For the M_2) If we hold M_1 still and move M_2 to the right. Then hold M_2 still and move M_1 to the right

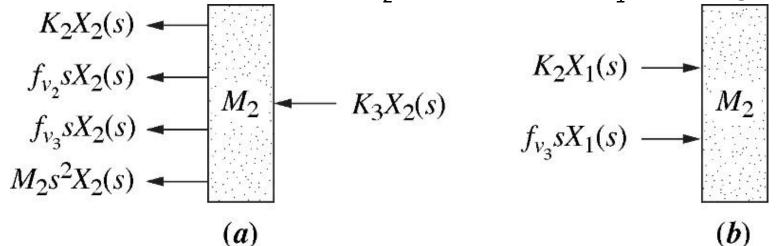

Transfer Function—Two Degrees of Freedom

Example 2.17: Find the transfer function, $X_2(s)/F(s)$, for the system.

Solution: The total force on M_2 is the superposition.

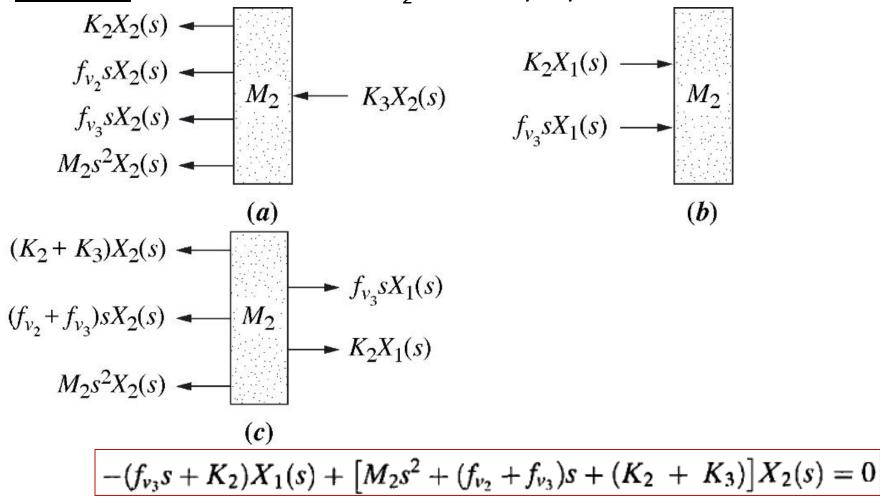

Transfer Function—Two Degrees of Freedom

Example 2.17: Find the transfer function, $X_2(s)/F(s)$, for the system.

Solution: The total force on M_2 is the superposition.

$$(K_{2} + K_{3})X_{2}(s) \longrightarrow f_{v_{3}}sX_{1}(s)$$

$$(f_{v_{2}} + f_{v_{3}})sX_{2}(s) \longrightarrow K_{2}X_{1}(s)$$

$$(f_{v_{2}} + f_{v_{3}})sX_{2}(s) \longrightarrow K_{2}X_{1}(s)$$

$$M_{2}s^{2}X_{2}(s) \longrightarrow M_{2}$$

$$M_{2}s^{2}X_{2}(s) \longrightarrow M_{2}s^{2}X_{2}(s)$$

$$[M_1s^2 + (f_{v1} + f_{v3})s + (K_1 + K_2)]X_1(s) - (f_{v3}s + K_2)X_2(s) = F(s)$$


$$-(f_{\nu_3}s + K_2)X_1(s) + [M_2s^2 + (f_{\nu_2} + f_{\nu_3})s + (K_2 + K_3)]X_2(s) = 0$$

$$\frac{X_2(s)}{F(s)} = G(s) = \frac{(f_{\nu_3}s + K_2)}{\Delta} \qquad \qquad \underbrace{F(s)}_{K_2(s)}$$

Transfer Function—Two Degrees of Freedom

Example 2.17: Find the transfer function, $X_2(s)/F(s)$, for the system.

Solution: The total force on Mass is the superposition.

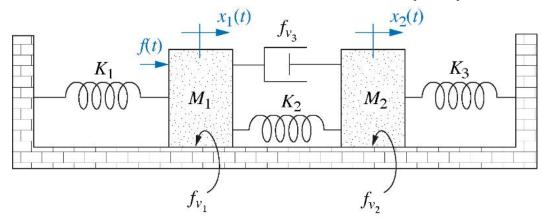

$$[M_1s^2 + (f_{v1} + f_{v3})s + (K_1 + K_2)]X_1(s) - (f_{v3}s + K_2)X_2(s) = F(s)$$


Note: The form of the equations is similar to electrical mesh equations:

$$\begin{bmatrix} \text{Sum of impedances connected to the motion at } x_1(s) - \begin{bmatrix} \text{Sum of impedances between } x_1 \text{ and } x_2 \end{bmatrix} X_2(s) = \begin{bmatrix} \text{Sum of applied forces at } x_1 \end{bmatrix}$$

Transfer Function—Two Degrees of Freedom

Example 2.17: Find the transfer function, $X_2(s)/F(s)$, for the system.

Solution: The total force on Mass is the superposition.

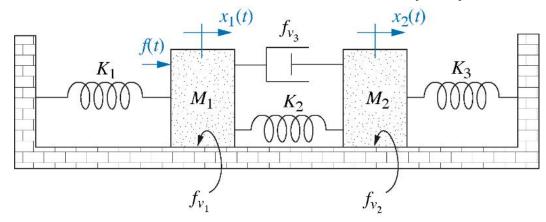


$$-(f_{\nu_3}s + K_2)X_1(s) + [M_2s^2 + (f_{\nu_2} + f_{\nu_3})s + (K_2 + K_3)]X_2(s) = 0$$

Note: The form of the equations is similar to electrical mesh equations:

$$-\begin{bmatrix} \text{Sum of impedances between } \\ x_1 \text{ and } x_2 \end{bmatrix} X_1(s) + \begin{bmatrix} \text{Sum of impedances connected to the motion } \\ x_1 \text{ and } x_2 \end{bmatrix} X_2(s) = \begin{bmatrix} \text{Sum of applied forces at } x_2 \end{bmatrix}$$

Example 2.18: Equations of Motion by Inspection

Write the equations of motion for the mechanical network.

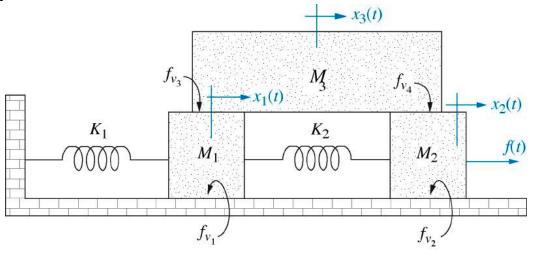


$$\begin{bmatrix} \text{Sum of impedances connected to the motion at } x_1(s) - \begin{bmatrix} \text{Sum of impedances between } \\ x_1 \text{ and } x_2 \end{bmatrix} X_2(s) - \begin{bmatrix} \text{Sum of impedances between } \\ x_1 \text{ and } x_2 \end{bmatrix} X_3(s) = \begin{bmatrix} \text{Sum of impedances between } \\ x_1 \text{ and } x_3 \end{bmatrix}$$

$$[M_1s^2 + (f_{\nu_1} + f_{\nu_3})s + (K_1 + K_2)]X_1(s) - K_2X_2(s) - f_{\nu_3}sX_3(s) = 0$$

Example 2.18: Equations of Motion by Inspection


Write the equations of motion for the mechanical network.

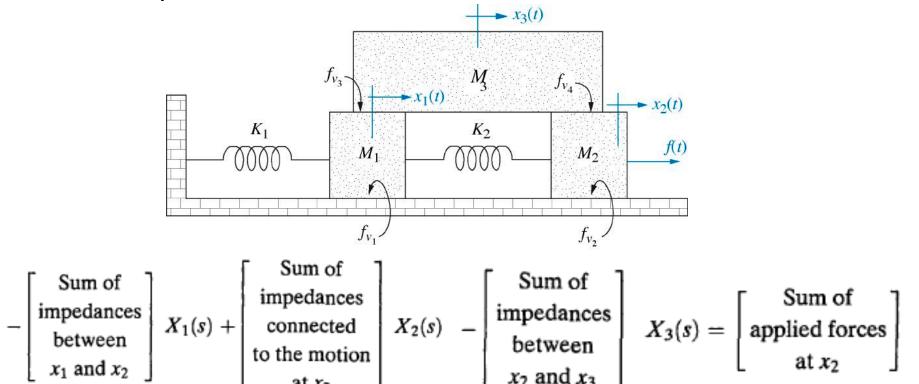

$$-K_2X_1(s) + [M_2s^2 + (f_{\nu_2} + f_{\nu_4})s + K_2]X_2(s) - f_{\nu_4}sX_3(s) = F(s)$$

Example 2.18: Equations of Motion by Inspection

Write the equations of motion for the mechanical network.

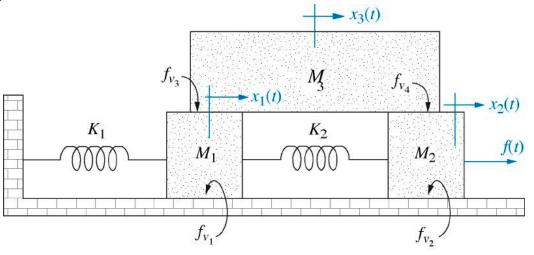

$$-\begin{bmatrix} \operatorname{Sum} \operatorname{of} \\ \operatorname{impedances} \\ \operatorname{between} \\ x_1 \operatorname{and} x_3 \end{bmatrix} X_1(s) - \begin{bmatrix} \operatorname{Sum} \operatorname{of} \\ \operatorname{impedances} \\ \operatorname{between} \\ x_2 \operatorname{and} x_3 \end{bmatrix} X_2(s) + \begin{bmatrix} \operatorname{Sum} \operatorname{of} \\ \operatorname{impedances} \\ \operatorname{connected} \\ \operatorname{to} \operatorname{the} \operatorname{motion} \\ \operatorname{at} x_3 \end{bmatrix} X_3(s) = \begin{bmatrix} \operatorname{Sum} \operatorname{of} \\ \operatorname{applied} \operatorname{forces} \\ \operatorname{at} x_3 \end{bmatrix}$$

$$-f_{\nu_3}sX_1(s) - f_{\nu_4}sX_2(s) + [M_3s^2 + (f_{\nu_3} + f_{\nu_4})s]X_3(s) = 0$$