



#### Introduction

The Kionix Android logger's purpose is to collect sensor data over Bluetooth low energy connection.

Installation A

Download the Android logger alpha version from google play: <a href="https://play.google.com/store/apps/details?id=com.kionix.datalogger">https://play.google.com/store/apps/details?id=com.kionix.datalogger</a> Installation B

The Android logger can be found in <a href="https://github.com/RohmSemiconductor/Kionix-IoT-Evaluation-Kit/raw/master/Kionix-IoT-Logger/Android/kionix-logger-latest-release.apk">https://github.com/RohmSemiconductor/Kionix-IoT-Logger/Android/kionix-logger-latest-release.apk</a> . The ADB tool and the Google USB driver need to be installed before setting up the logger application.

#### **Install USB driver and ADB tool**


Install ADB tool to PC

Install <u>Google USB driver</u> to PC Connect the Android phone to the PC via USB.

### **Enable developer mode from Android device**

On Android 4.2 and higher, the Developer options screen is hidden by default. To make it visible, go to **Settings > About phone** and tap **Build number** seven times. Return to the previous screen to find the **Developer options** at the bottom. On some devices, the Developer options screen may be located or named differently.

To use the adb socket connection, you must enable **USB debugging** in the device system settings, under **Developer options**.

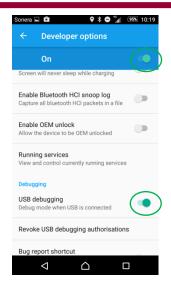

## Set adb.exe to system path

Control panel -> system -> advanced system settings:

- Open environmental variables
- Highlight the **Path** variable in the "System variables" section and click the **Edit** button. Add the path line with the paths you want the computer to access.

#### **Test connection**

After running the "adb devices" command the device should found

```
adb.exe devices

List of devices attached
TA10408MVK device
```

## Set-up Android data logger

The Data logger can be installed using the following command adb.exe install "apk name".

The CSV -log files are written to the phone's internal storage under the "download/KionixLogs" folder.

The Logger configuration files can be found in the phone's internal storage under the "kionix" folder. Files can be manually edited and copied to the kionix folder.





## **Using Android data logger**

### **Android application**

1. Launch the Kionix logger by pressing the logger icon. When the application is started for the first time the configuration files are downloaded and extracted to the phone's internal storage (to kionix folder).



License agreement, access rights and battery optimization permission are requested from the user and must be accepted to guarantee the correct functionality of the logger software.

2. Press the Bluetooth "scan" icon to detect the Kionix IoT devices. Make sure that the Kionix IoT device is powered on.



3. Kionix IoT device(s) should appear on the list. Select the device from the list to make the BLE connection.



4. When the device is successfully connected; the Bluetooth connection icon is changes to blue and the list view shows the "connected device" text.

Press the folder icon to select the configuration files to initialize device for logging.



5. Select the proper board and logging configuration files according the IoT node hardware characteristics. Press the "set configure" button to start the IoT board initialize phase.



6. When the initializing is done successfully the "record" icon will be enabled and the logging can be started by pressing the icon.





7. Pressing the "record" icon the logging can be either started or stopped. When the icon is pressed for starting, the stream activation messages are sent to the Kionix IoT device and the logging has started. The status of the activation messages can be seen in the list view. The status bar at bottom of the indicates; active screen channel(s) ODR and also the total packets received via BLE. If Stream is not activated the protocol error is seen in the list view.



The log file is stored to the Phone's internal storage download/KionixLogs folder.

8. With a swipe the user can navigate through the different views. The main view is the "Logger Main". Swipe to the right from the main view to see the settings view. The raw data view can be enabled by toggling the Phone screen switch. The logging to file can be disabled by toggling the internal memory switch.




9. Swipe left from the "main view" to see the raw data view.






 Press three dot menu to see register dump or share actions. Register dump action can be seen if the register item is/are defined in the stream configuration file (register dump section).

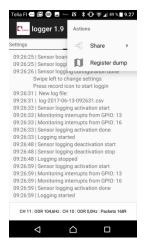

Through the share action the log files can be shared via different media options e.g. email or cloud. When using the share action, some file browser needs to be installed in the phone.







# **Download log -files to PC**

- 1. Connect Android phone to the PC via USB cable.
- 2. Select MTP or USB mass storage mode from the phone for a file transfer.
- 3. Go to PC file explorer and select your Android device. Browse \internal storage\Download\KionixLogs folder. Copy log(s) file to PC.