

MobileDOAS v6.4

Software Manual

Optical Remote Sensing Group, Department of Radio and Space Sciences, Chalmers University of Technology, Göteborg, Sweden

Last updated 2021-12-21

Santiago Arellano Chalmers University Optical Remote Sensing Group santiago.arellano@chalmers.se

Christoph Kern USGS Volcano Disaster Assistance Program ckern@usgs.gov

Diana Norgaard USGS Volcano Disaster Assistance Program dnorgaard@usgs.gov

Table of Contents

MobileDOAS v6.4	1
Software Manual	
1. Overview	5
1.1 Required Devices	5
1.2 Computer Requirements	5
1.2.1 High DPI Displays	6
1.3 Software Installation	7
1.3.1 Java 8	7
1.3.2 OmniDriver	8
1.3.3 Spectrometer Driver	8
1.3.4 GPS Driver	11
1.3.5 MobileDOAS	11
1.4 Execution	12
2. Configuration	12
2.1 Spectrometer	12
2.2 GPS	14
2.3 Evaluation	16
2.3.1 Fit Window	16
2.3.2 Fit Parameters	16
2.3.3 Misc	16
2.3.4 References	17
2.4 Directory	19
2.5 Calibration	20
2.5.1 Instrument Line Shape	22
2.5.2 References	22
3. Performing Flux Measurements Using MobileDOAS	23
3.1 Collecting Spectra	23
3.1.1 STEP 1 - Verify Configurations	23
3.1.2 STEP 2 - Initial Setting	23
3.1.3 STEP 3 - Start Data Collection	23
3.2 Real-Time Results	24
3.2.1 The Main Window	24
3.2.2 Real-time route Graph	25
3.2.3 Spectrum Fit Window	25
3.2.4 Column Error	25
4. Flux Calculation	25
4.1 Flux Formula	25
4.2 Real-time Flux	25
4.3 Calculating Flux From File	26

4.3.1 STEP 1 – Set Wind Parameters and Source Coordinate	26
4.3.2 STEP 2 – Delete Bad Points	27
4.3.3 STEP 3 – Calculate Flux	29
4.4 Importing a Modeled Wind Field	30
5. Re-Evaluation of Spectra	31
5.1 STEP 1 – Selecting the Evaluation Log	31
5.1.1 Dark Spectra	32
5.1.2 Saturated Spectra	33
5.1.3 Wavelength Range	33
5.2 STEP 2 – The Sky Spectrum	33
5.3 STEP 3 – The Fit Window	34
5.3.1 Storing Fit Window Settings	35
5.4 STEP 4 – Re-Evaluating	35
5.5 Scripting the Re-Evaluation (Advanced)	37
6. Instrument Calibration	38
6.1 Instrument line shape from measured mercury spectra	38
6.2 wavelength calibration and instrument line shape from traverse data	41
6.2.1 Required input	41
6.2.2 Setting up the instrument calibration	41
6.2.3 Running the instrument calibration procedure	43
6.3 Creating references from instrument calibration	44
6.3.1 Creating a single reference	46
6.3.2 Creating standard references	46
7. Other Measurement Modes	47
7.1 Viewing Spectra Directly From the Spectrometer	47
8. Other Functions	48
8.1 Viewing Collected Spectra	48
8.2 The Route Dialog	49
8.2.1 View Options	50
8.2.2 Zoom	50
8.2.3 Distance and Bearing Calculation	51
8.2.4 Landmarks	51
8.3 Exporting Evaluated Results to Google Earth	51
8.4 Testing the GPS Connection	52
8.5 Plot Setting	52
8.6 Pause and Exit	52
9. File Formats	53
9.1 Parameters	53
9.1.1 Intensity Section	53
9.1.2 GPS Section	54
9.1.3 The Offset section	54
9.1.4 The Fit Window Section	55
9.2 Example of Configuration File	56

10.	Reference File	57
11.	Spectrum File	57
12.	Evaluation Log File	57
	Example of Evaluation Log File	
13.	Flux Calculation File	58
13.1	Sample Content of Flux Calculation File	59
14.	File Format to Import Modeled Wind-Field	59
14.1	Example of a Small Wind-Field Data File	60
15.	Troubleshooting	60
10.	11 oubleshooting	

1. Overview

The software MobileDOAS described in this user manual is a software package developed by Chalmers University of Technology in Sweden as an easy-to-use software package for performing gas flux measurements using the mobile DOAS technique.

The software is tested with the following spectrometers from Ocean Optics Inc.:

- S2000
- USB2000+
- USB2000
- USB4000
- HR2000
- HR4000
- MAYAPRO

1.1 REQUIRED DEVICES

Table 1 Required Devices

Spectrometer	Collect Spectra
GPS receiver (with USB interface)	Record GPS time and GPS coordinates
USB cable	Communication with and power to spectrometer
Fiber and telescope	Connected to the spectrometer to expand the visible scope
Laptop or desktop computer	Run the program to collect data from spectrometer and GPS receiver

Before running the software, please make sure that the equipment is properly connected to the computer.

1.2 COMPUTER REQUIREMENTS

CPU	Pentium III 550 MHz or higher	

Memory	128 MB or more
Operating system	Windows XP, Windows 7, or Windows 10
Screen Resolution	1024 by 768 pixels or better

1.2.1 High DPI Displays

MobileDOAS dialog windows may not display properly on a high DPI display. In this case, you can override high DPI scaling behavior in the application's Properties->Compatibility settings:

- 1. Right Click on MobileDOAS.exe (or MobileDOAS_x64.exe)
- 2. Select Properties
- 3. Select Compatibility tab
- 4. Check the box next to 'Override high DPI scaling behavior.'
- 5. Select 'System' in drop down under 'Scaling performed by:'

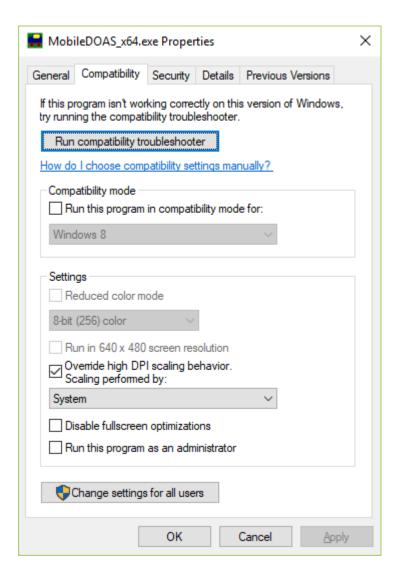


Figure 1 Disabling high DPI scaling behavior

1.3 SOFTWARE INSTALLATION

MobileDOAS does not have an installer but require other programs to be installed as a pre-requisite for use: Java 8, Ocean Optic's OmniDriver, spectrometer driver, and GPS driver. Install either the 32 or 64-bit versions of the software depending on your OS (you can only install 32-bit on 32-bit OS) and the version of MobileDOAS you want to run.

1.3.1 Java 8

Java is a commonly used software so your PC may already have it installed. Look under *C:\Program Files\Java* for 64-bit installation (or *C:\Program Files* (x86)\Java for 32-bit installation). You should see jre1.8.0_xxx or jdk1.8.0_xxx in the directory. If you do, Java is already installed on your PC. If you do not have Java installed on your PC download the JRE from Oracle website (http://www.oracle.com/technetwork/java/javase/downloads/jre8-downloads-2133155.html) and install.

MobileDOAS has not been tested with Java 6 or Java 7 but it may work with these older versions also.

1.3.2 OmniDriver

If OmniDriver is not provided download from Ocean Insights (former Ocean Optics) website (https://www.oceaninsight.com/support/software-downloads/omnidriver-and-spam/) and double click on it to run it. Select all default options when prompted by installer. License to use the OmniDriver is not required unless you are planning to do software development against it. You should now have an Ocean Optics/OmniDriver directory (e.g. C:\Program Files (x86)\Ocean Optics\OmniDriver).

If you see the error message "Error running RegAsm64.exe ...: Program ended with an error exit code." – then you are missing the .NET framework on your computer. You can download the installer for .NET 4.0 from the Ocean Optics OmniDriver download page under Miscellaneous Tools and Utilities.)

1.3.3 Spectrometer Driver

After installing OmniDriver, connect your spectrometer to the computer. Then go to Control Panel - > Device Manager. Look for your spectrometer under "Ocean Optics USB Devices". It is also possible that your computer does not recognize the device and it will be under "Other devices" as an "Unknown device"

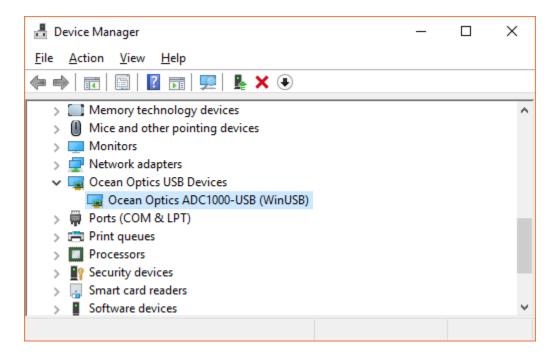


Figure 2 Ocean Optics spectrometer in Device Manager

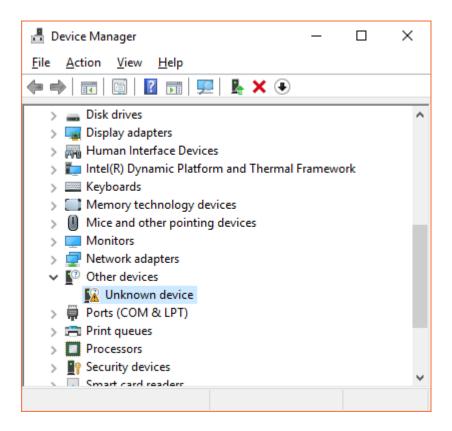


Figure 3 Spectrometer listed as "Unknown device"

Right click on the spectrometer name (or "Unknown device" depending on the case) and select either "Install Driver" or "Update Driver".

Select the second, "Browse my computer for driver software" option.

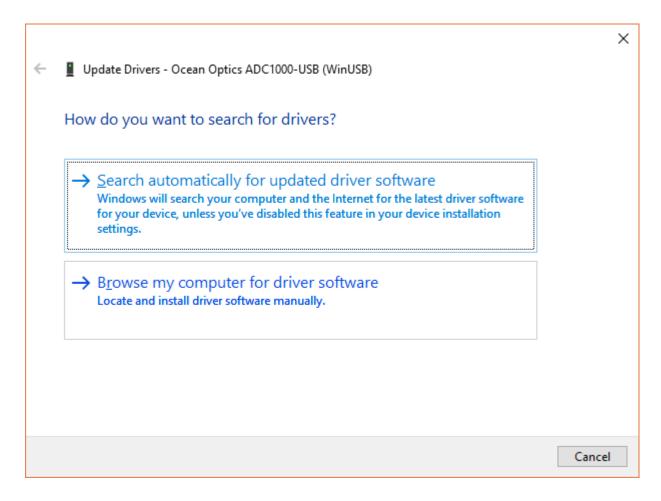


Figure 4 Update spectrometer driver

Enter *C:\Program Files\Ocean Optics\OmniDriver\winusb_driver* in box under "Search for drivers in this location:". Then click Next.

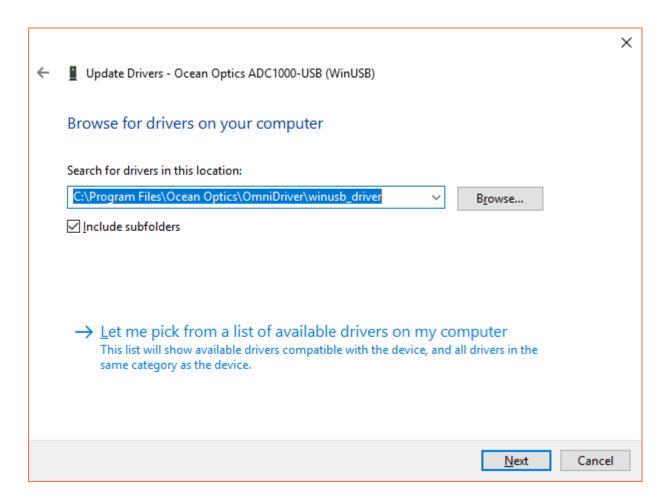


Figure 5 Install/update Ocean Optics driver

1.3.4 GPS Driver

The GPS that uses PL2303 driver, it can be found at http://prolificusa.com/pl-2303hx-drivers/ under Drivers & Softwares. Click on the 'Download' link next to "Windows Driver Installer Setup Program", unzip the file, and follow the instructions in *How To Install USB Driver.pdf*.

It is also suggested that users install the GPSinfo program by running the GPSInfoSetup.exe found in the "GPSInfo Utility For Windows" folder. You can use this program to see if your GPS driver was successfully installed and that your GPS is working.

MobileDOAS supports NMEA 0183 protocol for GPS data output.

1.3.5 MobileDOAS

Create a directory, e.g. C:\\MobileDOAS, and place the MobileDOAS executable (i.e. MobileDOAS.exe or MobileDOAS_x64.exe) in it. If there is a configuration file from previous version of MobileDOAS, i.e. cfg.xml¹, copy it into this directory also.

1.4 EXECUTION

Click the *MobileDOAS.exe* to start the 32-bit version of the program.

Click the *MobileDOAS_x64.exe* to start the 64-bit version of the program.

2. Configuration

MobileDOAS must be configured prior to collecting Spectra. Select menu "Configuration \Rightarrow Operation Setting" or click on the toolbar to open the *Configuration Dialog*. If *cfg.xml* exists in the working directory, the configuration dialog will read the existing configurations and allow the user to edit them. If *cfg.xml* does not exist, then it will warn the user that one does not exist. The software will have to be configured through the dialog.

The dialog contains four tabs:

- **Spectrometer** Configure spectrometer connection and exposure time of spectra.
- **GPS** Configure GPS port and baud rate.
- **Evaluation** Configure how to evaluate the collected spectra.
- **Directory** Configure real-time analysis from directory.

When you are done configuring the settings, press the button "Save" to store the settings to *cfg.xml* or press "Cancel" to close the dialog without writing anything to file.

2.1 SPECTROMETER

-

¹ MobileDOAS version 4.4 and below used cfg.txt as configuration file. If you are upgrading from these older versions, it is recommended that you create cfg.xml using the configuration dialog per section 2.

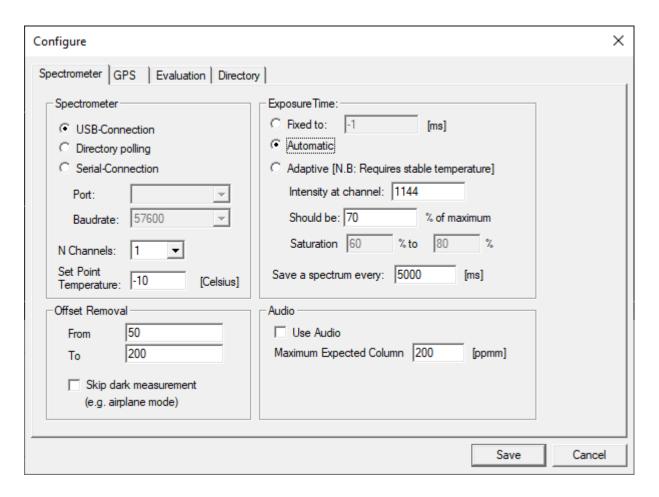


Figure 6 Spectrometer tab of Configuration Dialog

This page is divided into the following groups:

• **Spectrometer Setting** – Choose "USB" if an USB-cable is used for communicating with the spectrometer. If the "Serial-Connection" option is used, select the correct COM port and baud rate for the spectrometer. Then select the number of channels that you wish to use on the spectrometer. If the spectrometer supports it (e.g., QE65000), you can also specify the set point for the CCD temperature.

"Directory polling" is a special option that will perform real-time analysis by looking for spectrum files in a directory. This option is used when the spectra are acquired outside of MobileDOAS software. If this option is selected the N Channels and Set Point Temperature options are ignored. Only one channel is supported in this mode.

- **Exposure Time** It is possible to set the exposure time manually or let the program calculate it automatically from the received level of light.
 - Fixed You can manually set the exposure time to use in the measurement with this
 option. This exposure time will be used for every collected spectrum in the
 measurement.

- Automatic (recommended) If this is set, then the exposure time will be calculated when the sky spectrum is collected, in the beginning of the measurement. This exposure time will then be used for every collected spectrum in the measurement. The calculation is based on the values in the two edit boxes. The first specifies pixel on the spectrometer's detector where the light-level will be measured. The second is the desired saturation ratio at that pixel.
- Adaptive (advanced users only): It is also possible to let the software calculate the
 optimal exposure time for each spectrum in the measurement. This gives better quality
 spectra but requires a stable temperature of the spectrometer. Notice that when
 selecting adaptive exposure time, the program will start the measurement by collecting
 a dark-current and offset spectrum which can take 5 to 10 minutes.
- Offset Removal. The software calculates and subtracts an offset from each spectrum with the purpose of reducing stray light and compensate for a changing offset. These values should be a range of pixels which you know should be dark (i.e., covering wavelengths where there really is not supposed to be any light). If you are using a S2000 or USB2000 spectrometer covering the wavelength range 280 to 420nm then these values should be 50 and 200.
- Audio. To make it easier to make measurements alone, the software can play a sound for each measured column with increasing pitch (or volume if pitch is not supported by audio device) for high measured gas columns. The value to enter under 'Maximum expected column' is the maximum value that you expect to have in a measurement. Measured values at this column or higher will be played at the maximum pitch or volume.

2.2 GPS

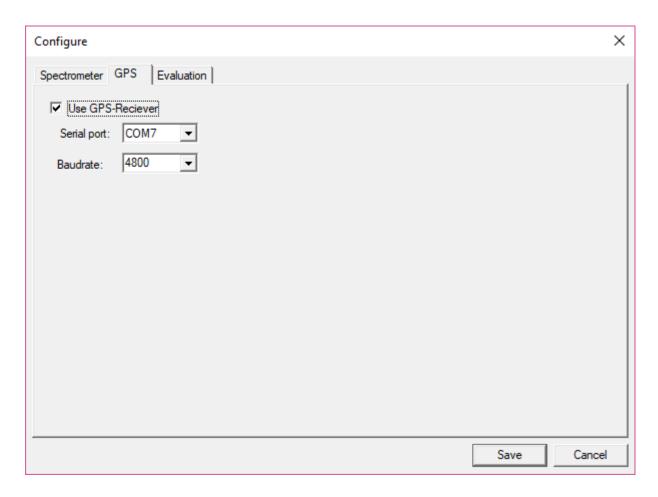


Figure 7 GPS tab of Configuration Dialog

If you use GPS receiver, the checkbox of "Use GPS Receiver" should be clicked. The COM port and baud rate (usually 4800 bps) should be chosen according to the GPS receiver. *Note: if the GPS is not used then no flux can be calculated from the measurement!*

If you are unsure of how to configure the GPS, go to "Control->Test the GPS" menu item. It will tell you the COM port and baud rate if one is connected:

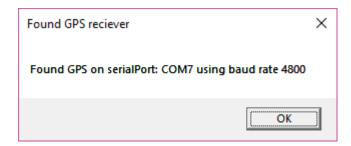


Figure 8 Pop-up from GPS test

2.3 EVALUATION

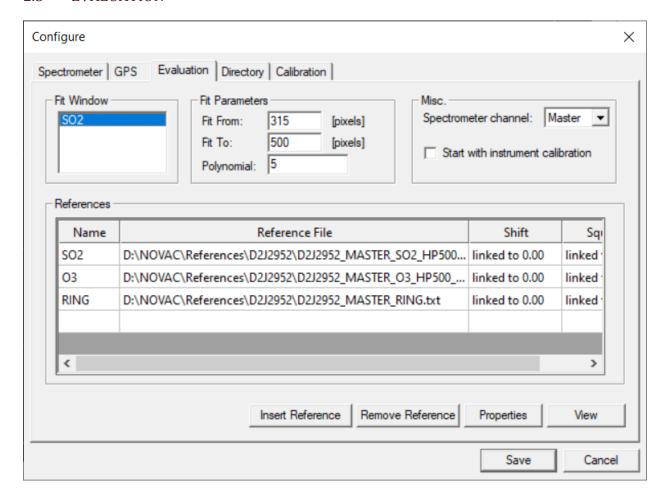


Figure 9 Evaluation tab of Configuration Dialog

In this tab you will select the parameters for the evaluation of the measured spectra.

2.3.1 Fit Window

The Fit Window box lists the real-time DOAS analysis routines that are configured. Typically, only a single DOAS analysis for evaluating SO_2 will be configured, and this box will only have one entry. This analysis will be performed on each spectrum as it is acquired, and the results will be displayed by the software as the measurements are taken. If desired, additional DOAS analyses can be set up by right-clicking in the box and selecting 'Insert'. For example, an analysis for bromine monoxide (BrO) could be configured that would then also run in real-time as the data is acquired.

2.3.2 Fit Parameters

You should first specify the range of pixels to use for the evaluation, this is done in the two edit boxes 'Fit From' and 'Fit To'.

2.3.3 Misc

As of version 6.4 of MobileDoas, it is possible to start the measurement with an automatic instrument calibration where the properties the instrument is determined from a measured

spectrum and new references for SO_2 , O_3 and Ring are automatically generated based on these properties. In order to use the option 'Start with instrument calibration' you will also need to configure the Calibration, see section 2.5 below.

Currently it is not possible to specify separate evaluation parameters for more than one channel. Users should leave the 'Spectrometer channel' option as the default value of 'Master'.

2.3.4 References

To derive gas column densities from the measured spectra, the absorption cross-sections of various trace gases are fit to the differential optical depth acquired during the measurement. Here, the reference absorption cross-sections that will be used in the fit are listed.

Each reference cross-section is specified by a separate file. The reference files are simple ASCII files that either have a *.txt or a *.xs extension. Each file must contain the same number of lines as the spectrometer has pixels. The file can have one or two columns separated by a tab. If the file has only one column, the number in that column lists the differential absorption cross-section of the respective trace gas in units of 2.5e15 cm²/molecule at the wavelength of the corresponding spectrometer pixel. If the file has two columns, the first column lists the wavelength of the respective pixel in nm, while the second column lists the differential absorption cross-section.

The supplied absorption cross-sections must be prepared individually for each spectrometer and take into account the spectrometer's instrument line shape and optical resolution. This is typically done by convolving a high-resolution absorption cross-section with the instrument line shape, which is in turn determined by measuring a mercury vapor lamp. This process is somewhat complex, and if you are uncertain of which reference file to use, ask the supplier of your mobile DOAS system.

In order for the evaluation to work, at least one reference file must be specified. If you have not specified any reference files (that is; you don't see anything in the box with references) then press the 'Insert Reference' button in the lower part of the page. This will open a dialog that makes it possible to select a reference file to use. If you wish to change the setup, then select the reference file you wish to remove in the list and press the button 'Remove reference'. You can specify any number of references that you wish in the list of references but only the fit result of the first one will be shown on the screen when making a measurement.

To see the options for a reference, select the reference in the list and press the 'Properties' button. This will show the dialog seen in Figure 10. It is here possible to change how the given reference file will be used in the fitting. For example, you can specify a constant or variable shift and/or squeeze of the reference in wavelength space.

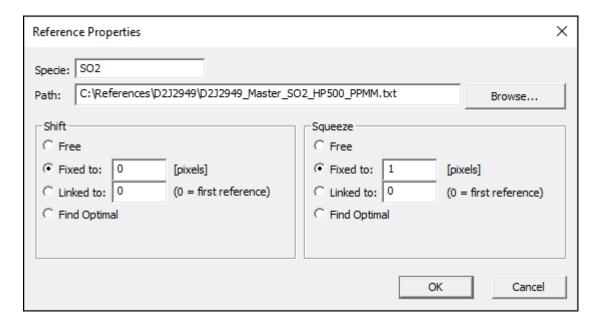


Figure 10 Reference Properties dialog

You can check the reference files that you have specified by pressing the button 'View', this will open the reference file window. In this window you can see the size of the reference files over the range of pixels specified by "Fit From" and "Fit To". If you don't see any red line in the graph, the red lines are flat or identical to each other, then you should check your reference files.

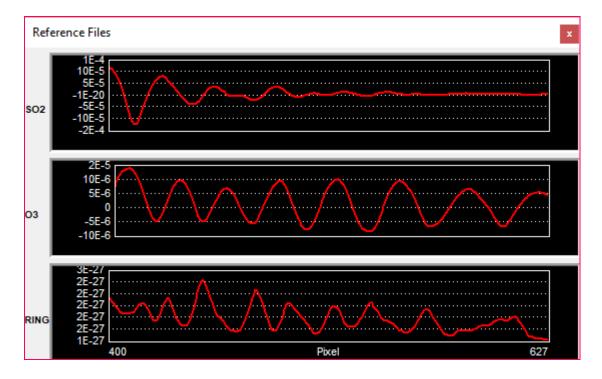


Figure 11 Reference File view window

Click "Save" to save the new configuration or "Cancel" to close the dialog without saving anything.

2.4 DIRECTORY

MobileDOAS can view and analyze spectra collected externally by watching a directory for new spectrum (.std) files. This feature is enabled by selecting the 'Directory polling' option in the Spectrometer settings. The Directory tab are configurations used in this mode. The "directory to watch" is where the software will look for spectrum files. Since MobileDOAS is not directly connected to a spectrometer, the dynamic range of the spectrometer must be specified. If there are no files in the directory to watch, it will sleep for the number of milliseconds specified in the 'Time in ms to sleep..." setting.

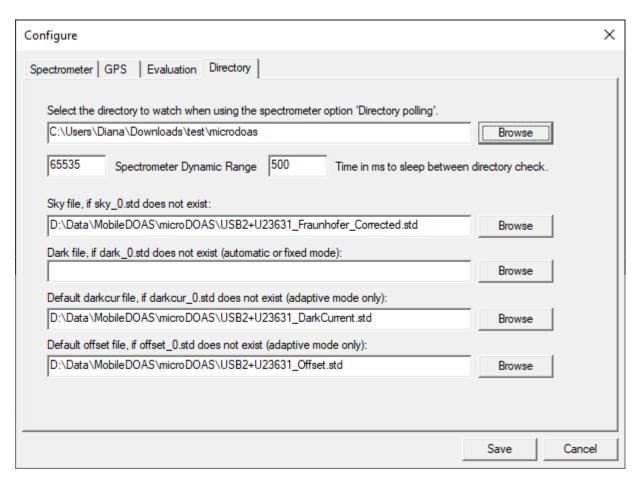


Figure 12 Configurations for real-time analysis from a directory

When this mode of collection is started, it first looks for starting files in the directory specified in the "Directory" tab of the configuration dialog. For automatic and fixed exposure time modes, the program requires sky (sky_0.std) and dark (dark_0.std) files. If the files are in the watch directory when collection is initiated, it will use those files. Otherwise, it will use the default files specified in the "Directory" configuration. For adaptive mode, the program will similarly look for sky, darkcur (darkcur_0.std), and offset (offset_0.std) files. After the required files are read, the program will check the watch directory for normal spectrum files (e.g., 00001_0.std). If a file is found it will read the file, analyze it, and plot the spectra and column. After a file is processed it will wait X milliseconds, where X is the value specified for sleep time in the configuration, and check the

directory for a new file. During each check, only the newest spectrum file is read and plotted. Whenever a new file is not found, it will wait and periodically check the directory for it.

2.5 CALIBRATION

MobileDOAS can automatically determine the spectral properties of the spectrometer being used for measurements by running an instrument calibration as the first step of a measurement. This calibration is useful if the references supplied with the MobileDOAS system are old or if the spectrometer is highly sensitive to temperature changes (certain models). The automatic calibration is an advanced option and should only be used by experienced users.

For MobileDOAS to be able to automatically generate new references there must be a set of .xs and .xml files located in a folder named *StandardCrossSections* in the same folder as the MobileDOAS executable file. If these files are missing, please contact the supplier of your mobile DOAS system.

If the check box 'Start with instrument calibration' was selected in the Evaluation tab (see section 2.3.3 above) then the settings for this must be setup in the Calibration tab, or an error message will be shown when starting the measurement.

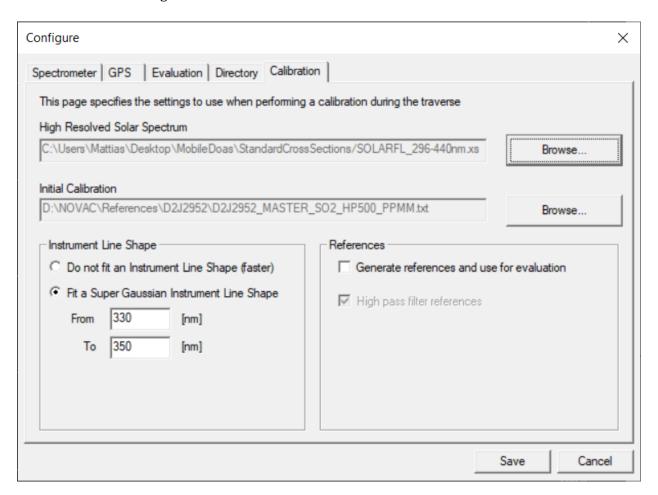


Figure 13. Setting up automatic instrument calibration

Firstly, a high resolved solar spectrum needs to be supplied and filled in to the first field. There should be one supplied with your MobileDOAS installation and located in the *StandardCrossSections* subdirectory – if this has been found by the program then this first field will already be filled in. If you wish to use another high resolved solar spectrum then click on the button Browse next to the first field and select a high resolved solar spectrum file. Notice that this file must be a text file containing two columns of data, the first column being a wavlength in nm (air) and the second being solar spectrum intensity at each listed wavelength.

The program will need an initial calibration which provides the starting point for the calibration. To supply this click on the button *Browse* next to the Initial Calibration label. This will bring up a dialog as shown in Figure 14 below. There are two options for the Format here:

- Wavelength Calibration & Measured Instrument Line Shape
 Select this option if you have not previously run an instrument calibration using
 MobileDOAS. There are two input files which can be selected here:
 - Wavelength Calibration: This must be a text file containing one or two columns where the first (or the only) column defines the wavelength (in nanometers) for each pixel on the spectrometer detector. An old reference file used for evaluation can be used if this contains two columns of data. This file is mandatory.
 - o Instrument Line Shape: This must be a text file containing an instrument line shape description in the .SLF format used by QDOAS, i.e. containing two columns of data where the first column is a differential wavelength and the second is the instrument line shape This file is optional.

Extended Std File

Select this option if you have previously performed either an automatic instrument calibration or created an instrument calibration using the *Calibrate Spectrometer* Dialog (found under Main menu item Analysis — Calibrate spectrometer) and saved the instrument calibration from there. This is then a spectrum file which contains both an instrument wavelength calibration and an instrument line shape.

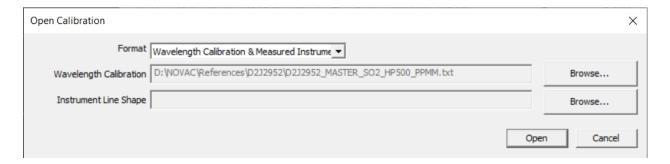


Figure 14. Selecting an initial calibration for the automatic calibration

2.5.1 Instrument Line Shape

This part of the Calibration settings page defines what type of instrument line shape should be fitted to the measured spectrum:

- *Do not fit an Instrument Line Shape* select this option if you have supplied an instrument line shape to the initial calibration setup above, either through an extended STD file or through an SLF file. If no initial instrument line shape is supplied and this option is selected, then a gaussian instrument line shape will be approximated which will produce a lower quality result than fitting a super gaussian instrument line shape (the second option).
- Fit a Super Gaussian Instrument Line Shape select this option to fit an instrument line shape approximated by a Super Gaussian profile.

2.5.2 References

Select the option *Generate references and use for evaluation* to replace the references selected in the *Evaluation* tab with the automatically generated references. If this option is not selected then an references will be generated and saved but not used for the actual evaluation.

Notice: performing the automatic instrument calibration will generate new references which will be saved in the current measurement directory and will, if selected to replace the configured references, only be used for the current measurement. To use the automatically generated references for future measurements, the references listed in the 'Evaluation' tab needs to be changed to the generated references.

Notice: The automatic instrument calibration will create new references and use these instead of the user-supplied references, setup on the 'Evaluation' tab, no other properties of the fit will be altered, including the 'Fit From' or 'Fit To'.

3. Performing Flux Measurements Using MobileDOAS

To perform a flux-measurement using MobileDOAS ensure that the equipment listed in section 1.1 is connected to a computer running MS Windows and has been configured as described in section 2.

3.1 COLLECTING SPECTRA

3.1.1 STEP 1 - Verify Configurations

Prior to each collection, double check the configurations previously created through the Configuration Dialog (see section 2.)

3.1.2 STEP 2 - Initial Setting

After checking the configurations; set wind speed, wind direction, and base name for the measurement in the main window. The wind speed and the wind direction parameters are used by the real-time calculation of flux. So, if you are not sure about the wind speed and the wind direction, you can leave them as the default values.

The base name is the name you give to the measurement and is used when saving the spectra.




Figure 15 Initial setting in the main window

3.1.3 STEP 3 - Start Data Collection

Click button "Start" (shown in Figure 15) or click in the toolbar to start data collection.

You can also start data collection by clicking menu "Control \rightarrow Start Traverse".

When the data collection starts, the program tests the connections to determine if the spectrometer and GPS are connected to the computer. The software creates a folder with the name of the current date (taken from the computer's time) inside which all measurements will be stored, with one subfolder for each measurement performed.

The measurement starts with setting the exposure time of the spectrometer and the telescope must therefore in the beginning be pointing to the zenith. Once the exposure time is set, the number of exposures to add before storing one spectrum is calculated based on the desired time-resolution and the calculated exposure time. The dark-current of the spectrometer detector is then measured

at the set exposure time; to do this the entrance of the telescope must be covered. When the dark-spectrum is measured, the program measures one "sky" spectrum, which is also sometimes referred to as Fraunhofer-reference or control spectrum. This is the reference spectrum to which all the evaluated column values will be relative, hence if this spectrum contains pollutants such as SO₂ then the evaluated column values can be negative.

Each measured spectrum after the sky-spectrum is evaluated, using the dark and the sky measurements and the result is shown in the main-window and also appended to the evaluation log file in the output folder. The measured spectra, including the sky and the dark spectra, are also stored in the output – folder. The program stores the collected spectra as STD-files and it creates one evaluation log containing the results of the evaluations.

3.2 REAL-TIME RESULTS

To make sure that the data-collection runs as it should, the MobileDOAS program shows running information which makes it possible to inspect the collection of data.

3.2.1 The Main Window

The main-plot in the main-window shows the evaluated columns of the last measured spectrum (by default as red columns), the intensity of the last spectrum (by default as white squares) and the last spectrum measured (by default as a green line for the master-channel of the spectrometer and as a red line for the slave-channel of the spectrometer, if one exists).

In the lower part of the main-window, additional information about the collected spectra is shown. The 'Spectrometer Information' – panel shows the following information about the last measured spectrum

- The exposure time, in milliseconds
- The evaluated column and the column error, in ppmm
- The shift used in the evaluation, normally 0
- The number of spectra measured and saved so far
- The number of exposures which are co-added in the last measurement
- The squeeze used in the evaluation, normally 1

The 'GPS-Information' – panel shows the following information about the last reading from the GPS-receiver:

- GPS-time in UTC
- Latitude in degrees

- Longitude in degrees
- # Satellites the number of satellites that can be seen by the GPS-receiver. A minimum of three is required for the calculation of latitude and longitude.

If the GPS – receiver loses the connection with the satellites, the 'GPS-Information' - panel will give a warning by turning red.

3.2.2 Real-time route Graph

The real-time route graph can be opened from the menu in the main window through the menu option 'View -> Real-time Route'. If there is a GPS-receiver connected to system, then the real-time route window shows the location of the so-far collected spectra in a latitude-longitude plot.

3.2.3 Spectrum Fit Window

The Spectrum-fit window can be opened from the menu in the main-window through 'View -> Spectrum Fit'. The spectrum-fit window shows the last differentiated measured spectrum together with a scaled cross-section provided from the given reference-file. This can be used to visually inspect the quality of the DOAS fit.

3.2.4 Column Error

The error bars of the retrieved columns can be shown in the real-time graph. The menu option 'View -> Column Error' toggles the error bars on or off. The graph will be updated when the next spectrum is collected.

4. Flux Calculation

4.1 FLUX FORMULA

The flux is calculated using the measured gas columns, the spatial distance between two sample points, the wind speed and the wind direction. The formula is:

Flux = column * distance * wind speed* wind factor

The wind factor is calculated by the travel direction and the wind direction:

Wind factor = cos(travel angle- wind angle+ 3\pi/2).

The flux can be calculated in two ways, either in real-time directly from the measurement or off-line after the measurement has been done. The real-time calculation does not allow for any inspection of the data used and should only be used to give an indication of the size of the flux.

4.2 REAL-TIME FLUX

During the measurement you can check the real-time flux. Select the menu option "Control -> Realtime Flux", the flux value will be shown. The real-time flux calculation uses the raw column values and the wind speed and wind direction that was given when the measurement started.

4.3 CALCULATING FLUX FROM FILE

After the measurement is finished you can calculate the flux using the post flux calculation dialog in MobileDOAS. click on the menu "Analysis -> Calculate Flux From File" or click on the button on the toolbar to open the "Post Flux Calculation" dialog.

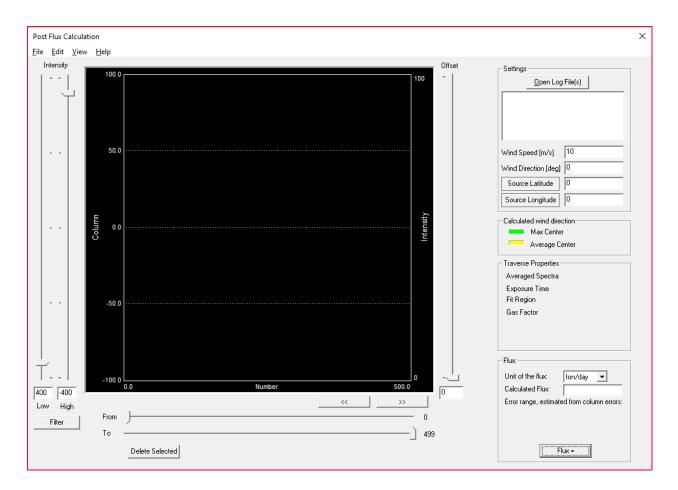


Figure 16 Post Flux Calculation dialog

4.3.1 STEP 1 – Set Wind Parameters and Source Coordinate

First open the evaluation log file from the measurement you want to process by pressing the button "Open Log File(s)" in the upper right corner of the dialog. The program will now read the data in the evaluation log file and show some data on the screen.

In the small list-box just below the "Open Log File(s)" button you can see which log files are currently opened and select which one to process. The main graph in the dialog shows the columns from the currently selected measurement. Notice that when a measurement has been evaluated with several references (e.g. SO₂ and O₃) then this will be listed as two or more evaluation logs –

each one starting with the name of the trace gas. Make sure that you select the trace gas you wish to calculate the flux for!

To calculate a flux, you need to fill in the wind speed and wind direction (in degrees) at the time of the measurement in the white boxes below the evaluation log list.

MobileDOAS can also calculate a wind direction for you. If you wish use this feature, then you need to supply the latitude and longitude of the source. The wind direction is then calculated as the direction of the line directly from the source to the point where the center of the gas plume is found.

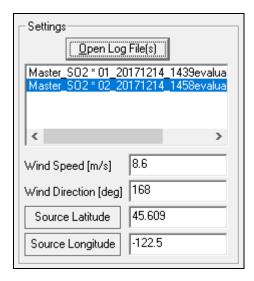


Figure 17 Post Flux Calculation Wind Settings

Note: There is one line for every reference that was included in the evaluation of the spectra. Be sure to select the specie you wish to calculate the flux for.

The wind speed and wind direction can also be imported from a text-file, see section 4.4.

4.3.2 STEP 2 - Delete Bad Points

Check the column plot to see whether there are any "bad points". The "bad points" are spectra with very low or very high intensity and are usually caused by trees or buildings which are blocking the light to your telescope during the measurement or by bright clouds sending too much light into the telescope. In below example, several measurements have very low intensity caused by trees blocking the light. The intensity of each spectrum are plotted as white squares and the error in the derived gas columns.

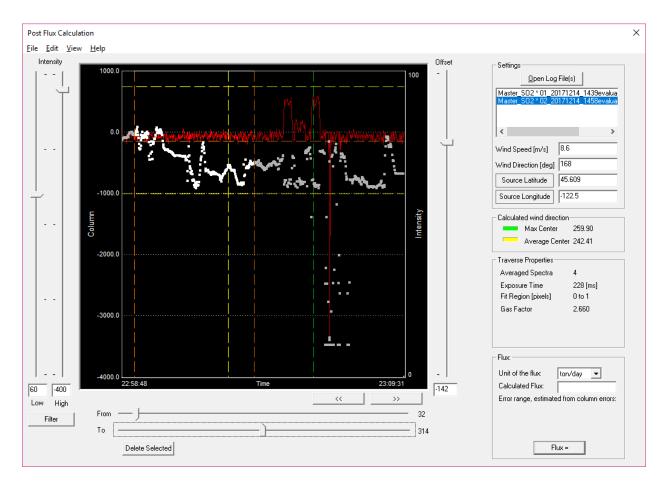


Figure 18 Example of readings with bad measurements

If you cannot see the white squares use the menu-item 'View -> Show Intensity' or right-click on the graph and select 'Show Intensity' to show the white squares. You can also see the error of each derived gas column in the plot by selecting 'View -> Show Column Error' or right clicking in the graph and selecting 'Show Column Error'.

A "bad point" can be either a very low or very high concentration value, which introduces very large errors into the flux calculation.

The "bad points" can be deleted in two ways:

- By index: Use the "From" and "To" sliders to enclose the location of the "bad point", note that points which are not in the selected range will be grayed out. The indices at which the 'From' and 'To' sliders are pointing is shown to the right of each slider. Clicking the button "Delete Selected" will delete the points between the two sliders.
- By intensity: Use the "Intensity" sliders on the left hand side of the window to define a limit on the intensity of the spectra. When you click the "Filter" button all measurements with intensity lower and higher than the defined thresholds will be deleted and a message box will inform you of the number of points deleted.

Below image shows the data from Figure 18 after deleting bad points and filtering on intensity.

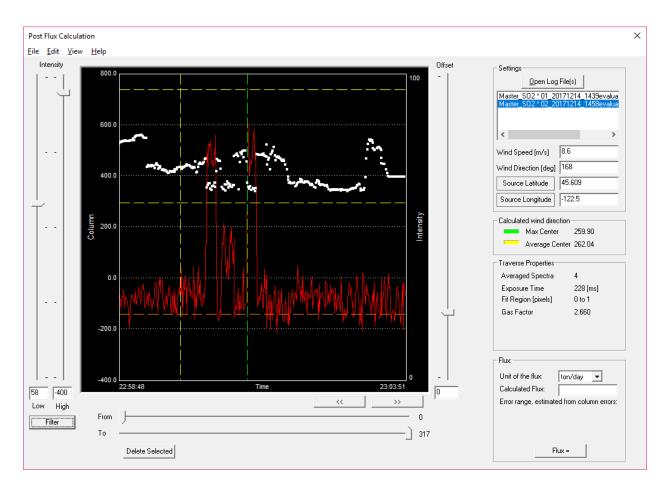


Figure 19 After deleting points

4.3.3 STEP 3 - Calculate Flux

Move "From" and "To" sliders to enclose the scope where you want to calculate flux. If the traverse is very long, not all measurements will be shown in the plot. You can then move the plot using the

buttons. Move the "Offset" slider to set the column offset for flux calculation. Usually the offset value can be set to the lowest column value. Select the unit you want to have the flux in then click the button "Flux = " to get the flux result. After the calculation the program generates a log file called *fluxCalculation.txt* which locates in the same place with the evaluation log file.

4.4 IMPORTING A MODELED WIND FIELD

In cases where the traverse extends over a larger area a modeled wind field can give a more accurate result. The modeled wind fields can provide a different wind speed and wind direction for each measurement point. To import the result from a model, first open the evaluation log for which the flux shall be calculated in the post-flux dialog. Then select 'Edit -> Import Wind field' from the menu. This will open the 'Include Wind Field' dialog below.

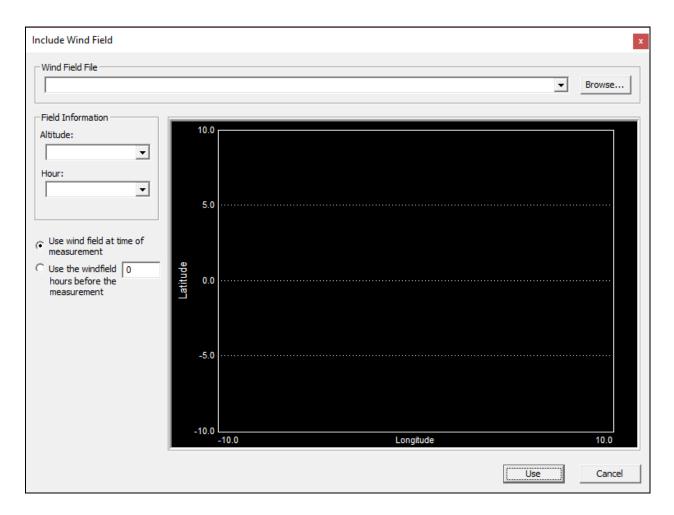


Figure 20 Include Wind Field dialog

The text-file containing the modeling can be selected by pressing the 'Browse' – button. If the file contains data for several altitudes and times, then the two combo-boxes in the left side of the dialog will contain all altitudes and hours for which the data is valid. Selecting a combination of one altitude and one hour will display the wind-field in the graph in the 'Include Wind field' dialog. The wind field is displayed as lines pointing to the direction in which the wind comes from and the relative length of each line shows the strength of the wind at that point compared to the other points. Finally, pressing the 'Use' button in the lower part of the dialog will import the data from the wind-field to the currently selected evaluation log.

Note:

- Only the data for the altitude selected in the 'Altitude' combo-box will be used.
- The time of the measurement will be compared to the time of the data points in the wind field and the correct time will be chosen automatically.
- If a measurement point does not exactly correspond to any point in the wind field file, then the closest point will be selected.
- The time-stamp for each wind data-point can only be an integer hour. Measurements made in between two integer hours will be interpolated in time. E.g. for a measurement made at 13:25 the wind field will be a linear interpolation between the wind-field at 13:00 and at 14:00.

For a detailed description of the format of the files that can be imported, see section 14.

5. Re-Evaluation of Spectra

If the real-time evaluation of the spectra was not adequately good, the spectra can be evaluated again by using the spectrum ReEvaluation module of MobileDOAS. There are many options for how to re-evaluate a measurement. The options are organized into tabs in the ReEvaluation dialog. For most re-evaluations, the values already filled in when the dialog is opened are ok.

The ReEvaluation-dialog is reached by:

- The menu in the main-window by selecting 'Analysis -> ReEvaluate Traverse'
- By pressing the button on the toolbar

5.1 STEP 1 – SELECTING THE EVALUATION LOG

The first step is to select the evaluation log from the performed measurement. The evaluation log should stay in the same directory as where it was created, i.e. in the same directory as all the spectra in the measurement. The evaluation log is selected by pressing the 'Browse' button in the 'Evaluation log' top part of the dialog, as shown in Figure 21. When the evaluation log is correctly opened, the measured columns in the log-file will be shown in red in the plot in the lower left part of the dialog.

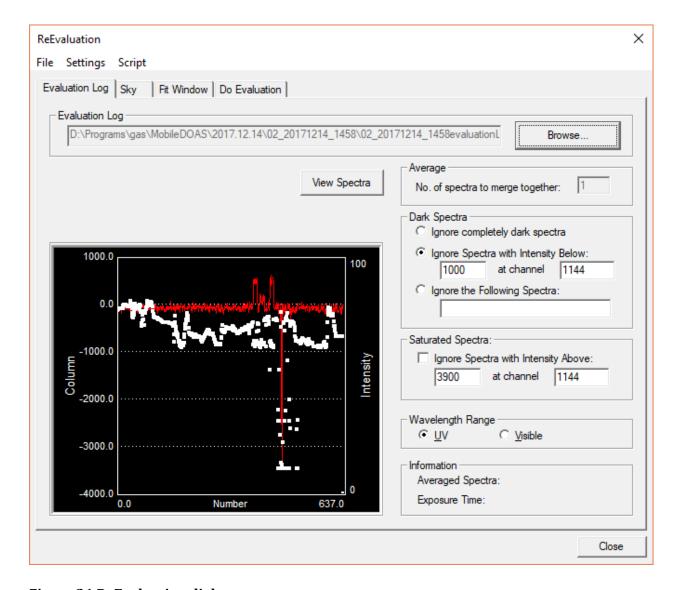


Figure 21 ReEvaluation dialog

It is possible to view the spectra in the measurement by pressing the button 'View Spectra', more about this in section 7.1.

There are several groups in the first page, their function is as follows:

5.1.1 Dark Spectra

Here it is possible to select if some spectra shall not be evaluated. For example, spectra with very low intensity will give very bad values, and it can therefore be justified to ignore some measurement points already in the evaluation instead of removing them later, in the post-flux calculation. There are three options:

- **Ignore completely dark spectra**. Only spectra where there is no light whatsoever will be ignored.
- **Ignore Spectra with Intensity below:** Lets the user select the channel at which the intensity should be judged and a desired threshold intensity for ignoring spectra.

• **Ignore the Following Spectra:** If the user knows the indices of some spectra that should be ignored, their indices can be typed into the edit-box as a comma, or space separated list.

5.1.2 Saturated Spectra

Similar to the 'Dark Spectra' box above, but here the user can select to ignore spectra with too much light. Spectra with too high light-level are saturated and does not contain any information in the saturated regions. The user has here the possibility to specify a pixel/channel to judge the intensity and the desired maximum level of intensity that should be allowed at that pixel/channel. *Saturated spectra will only be ignored if the checkbox is checked.*

5.1.3 Wavelength Range

In the evaluation of a spectrum, the spectra will automatically be corrected for stray-light using a simple heuristic method. This correction is different if the spectrum starts in the deep UV-region or in the (near) visible region. **Select the 'UV' – radio button of the spectrometer starts at a wavelength of 300 nm or less.**

5.2 STEP 2 – THE SKY SPECTRUM

The measurement is evaluated using one spectrum as 'sky' reference. This spectrum is used to remove Fraunhofer structures in the measured spectra, and all evaluated values will be relative to this spectrum. The sky spectrum can be selected in several ways, and the different options will give different qualities of the resulting measurement value.

- **Use fist spectrum as sky reference** The default option, this is also the behavior for the real-time evaluation.
- **Use average of all spectra as sky reference** An average value of all spectra will be used as sky reference. This can improve the quality of the fit, if all spectra in the measurement are good.
- **Use the following spectrum:** A specified spectrum will be used as sky-reference. This can improve or worsen the fit, depending on which spectrum is chosen. This can make it easier to compare several measurements.

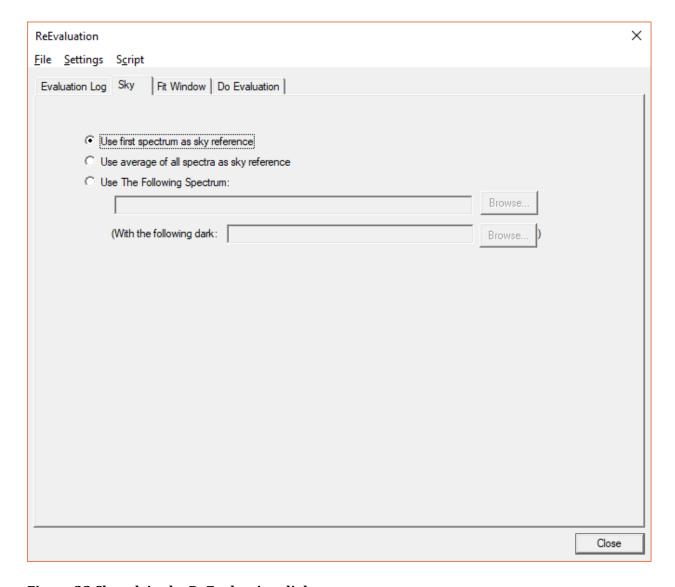


Figure 22 Sky tab in the ReEvaluation dialog

5.3 STEP 3 – THE FIT WINDOW

The most important step in the ReEvaluation dialog is to select the parameters for the evaluation of the measured spectra. The settings here are similar to that of the Evaluation tab in the Configure dialog. Refer to section 2.3 on usage.

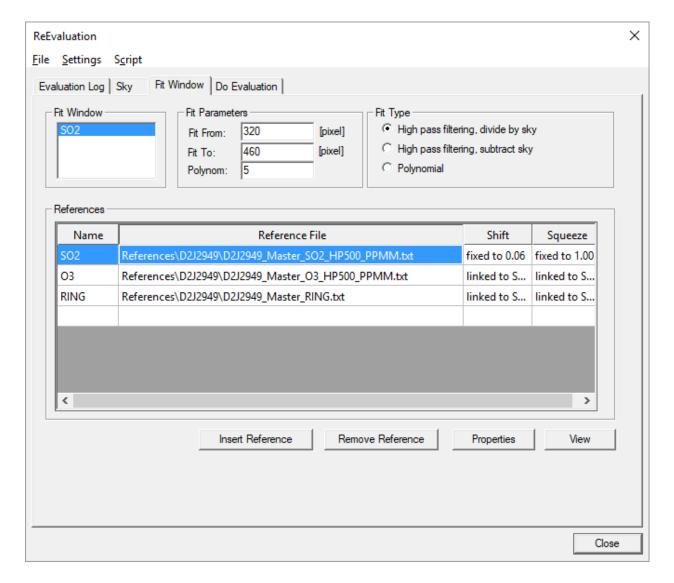


Figure 23 The Fit Window tab of the ReEvaluation dialog.

5.3.1 Storing Fit Window Settings

When you have configured a set of parameters that works well for your spectrometer then you can save these settings to a file (so that you don't have to type in the same things the next time). To do so select the menu option 'Settings \rightarrow Save Settings to File' and select where to store the file. The next time you open the re-evaluation dialog these settings can be re-read from the file by selecting the menu option 'Settings \rightarrow Load Settings from File'. Notice that it is good to make sure that the settings actually work well for your spectrometer before storing them to file. This can be done by running the re-evaluation as described below and when this is done (and all looked fine) select the menu option 'Settings \rightarrow Save Settings to File'. The stored files will have the file extension of 'rxml'.

5.4 STEP 4 – RE-EVALUATING

The final page in the ReEvaluation – dialog is the 'Do Evaluation' – page. Pressing the 'Evaluate NOW' button will cause the program to evaluate all the spectra in the measurement using the

chosen settings. The spectral fit of each evaluated spectrum will be shown in the graph in the upper right part of the page, and any messages will be shown in the text-box in the upper left part of the page.

Pressing the 'Pause' – button will cause the re-evaluation to make a pause after the evaluation of each spectrum, to enable visual inspection of the fit. The fit will continue after pressing the 'Next...' button, which replaces the 'Evaluate NOW' button.

Pressing the 'Cancel' – button to the right of the 'Evaluate NOW' button will cause the program to stop the ReEvaluation.

Note – do not press the 'OK', 'Cancel' or 'Close' buttons in the lower right part of the dialog when spectra are evaluating.

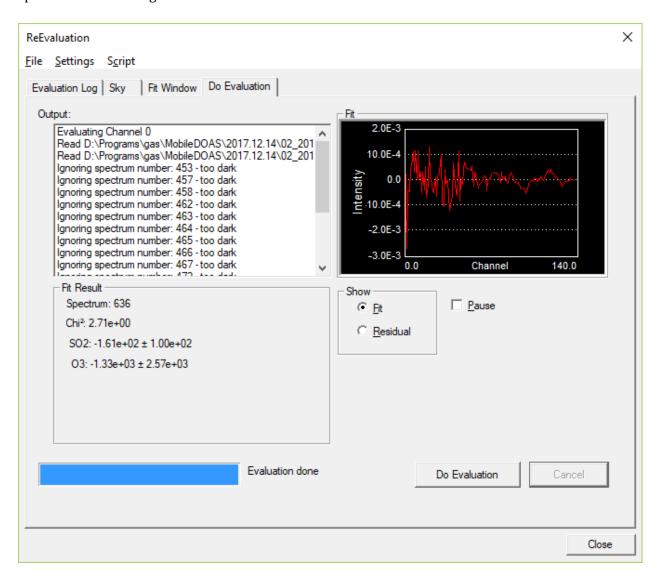


Figure 24 Do Evaluation tab in Evaluation dialog

5.5 SCRIPTING THE RE-EVALUATION (ADVANCED)

If you have a large set of MobileDOAS measurements that you need to ReEvaluate then the possibility to create ReEvaluation scripts can prove useful. You need to prepare this by saving the settings in the fit window page to file (see section 5.3.1). The scripts are created through the ReEvaluation Script dialog which is accessed from the ReEvaluation dialog by the menu option 'Script-Create Script', this opens the dialog shown in Figure 21.

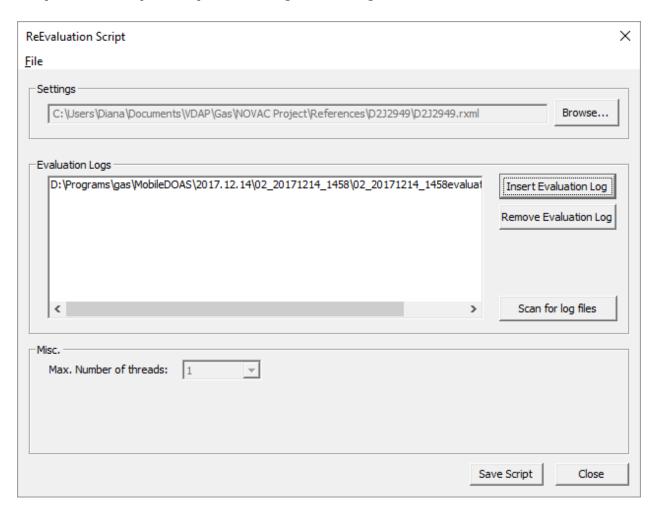


Figure 25 ReEvaluation Script dialog

Begin by selecting the file containing the settings from the fit window page by pressing the button 'Browse' and select the RXML – file created earlier. You then need to specify the evaluation logs from the measurements you wish to re-evaluate. There are two ways to do this;

- 1) Press the 'Insert Evaluation Log' button and select an evaluation log file that you wish to process. Press this button again for each evaluation log file you wish to include.
- 2) Press the 'Scan for log files' button and select a directory. This will scan the directory structure for evaluation log files and automatically insert all evaluation log files in all subdirectories to the one you chose.

You can always remove an evaluation log file from the list by selecting it in the list of files and pressing the button 'Remove Evaluation Log'.

When you are happy with your settings, press the button 'Save Script' in the bottom of the dialog to store the script to file. The file is given the file-ending .rs. You can later open this script again by opening the same dialog and selecting the menu option 'File→Load Script'.

To run a ReEvaluation script, go to the ReEvaluation dialog and select the menu option 'Script→Run Script'. This will automatically start the re-evaluation of the spectra and the results of the spectral fitting will be shown in the graph in the 'Do Evaluation' page. Notice that it can take a very long time for the script to finish.

6. Instrument Calibration

As of version 6.4 of MobileDOAS there is an instrument calibration dialog, found by selecting *Analysis→Calibrate Spectrometer* in the menu of the main window. This dialog makes it possible to create new references both from measured mercury spectra or from measured traverse data in an easy way. This dialog is easy to navigate through but does still require some background insight into the underlying spectroscopy for understanding the final result.

There are two things which needs to be determined in order to create a reference for a particular spectrometer; the wavelength calibration of the device (aka the pixel-to-wavelength mapping) and the instrument line shape. The wavelength calibration says which wavelength (measured in nanometers, nm) each pixel on the spectrometer's detector corresponds to and makes it possible to determine where in the spectrum the absorption features of e.g., SO_2 should be located. The instrument line shape says how much the spectrometer smoothens the measured spectra and makes it possible to determine the expected shape of the absorption features of e.g., SO_2 which we are measuring.

6.1 INSTRUMENT LINE SHAPE FROM MEASURED MERCURY SPECTRA

In this first tab of the dialog, you can create an initial instrument calibration from a measured mercury spectrum. This dialog first and foremost determines the instrument line shape, but a rough wavelength calibration can be determined at the same time. The instrument line shape may be approximated using a Gaussian or Super Gaussian profile, or be taken directly from the measured spectrum. Approximating the instrument line shape using a function may have the advantage of reducing the noise in the measurement but also having the downside of distorting the instrument line shape if the measurement does not fit well to the theoretical profile.

Start by selecting a measured mercury spectrum, and if applicable also a dark measurement which corresponds to this spectrum. This measured spectrum should be a text file containing one or two columns of data. Once a measured mercury spectrum has been opened, the dialog should look similar to what is displayed in Figure 26 below, with single isolated peaks (emission lines) in the spectrum. Some of these emission lines may be saturated but it is not possible to create an instrument line shape from a saturated peak, hence not all lines may be saturated.

When the measured mercury spectrum has been opened, the main plot of the graph will display the measured spectrum in red and highlight some of the found peaks with white or gray squares. White squares represent peaks which may be selected for the instrument line shape. Gray squares represent peaks which are not suitable for instrument line shapes, either due to the peak being saturated (too high intensity) or that the peak itself corresponds to a not fully resolved double emission line in the mercury spectrum.

The plot will show the measured spectrum against the wavelength of the measured spectra. If the check box 'Auto determine from found Mercury lines' is not selected then the horizontal axis in the plot will be the wavelength calibration as it was read from the file, if no calibration was found in the file, then the horizontal axis will be displayed in pixels and a label will appear in the upper right corner saying 'No calibration in file, using pixels.'. If the check box 'Auto determine from found Mercury lines' is selected however the program will attempt to determine the wavelength calibration of the device by comparing the found peaks against a list of known mercury emission lines. This auto determination of the wavelength calibration may fail and the program will in that case show an error message informing you of this and then use a horizontal axis of the wavelength calibration as it was read from the file.

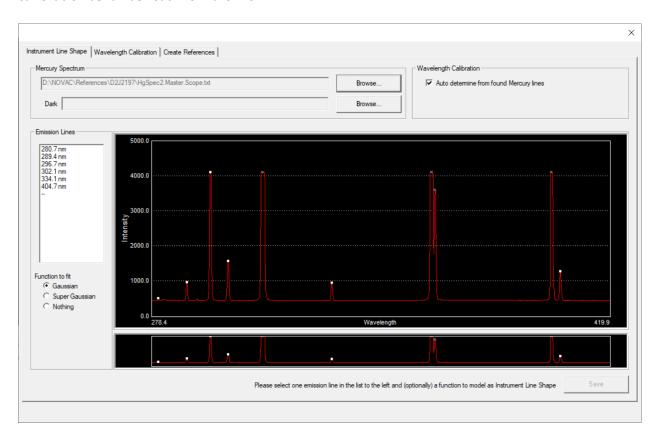


Figure 26 Selecting emission lines in a measured mercury spectrum

To the left of the plot is a list of found emission lines which may be possible to use for determining an instrument line shape for the spectrometer. These are displayed in the same unit as the horizontal axis of the plot, i.e., either pixels or nanometer. Below the list is a selection of functions to fit to the measured peak. Selecting a peak in this list will cause the plot to zoom in on the region

around this particular emission line, as can be seen in Figure 27 below. The measured spectrum is still displayed in red, and the fitted instrument line shape is displayed in green in the vicinity around the measured peak. Changing the selected peak or the selected function to fit will automatically update the plot. Select the two dashed lines which are the last element in the list of emission lines to unselect the current peak and go back to the original display. Below the main plot is a smaller plot displayed which is showing the full measured spectrum together with a highlight of the region currently shown in the main plot.

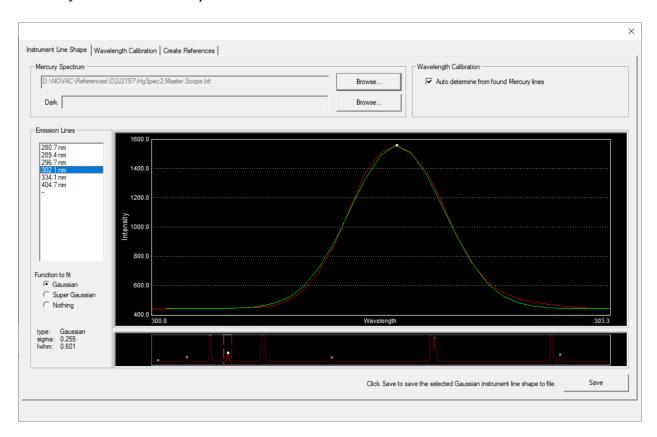


Figure 27. A selected emission line in the measured mercury spectrum.

Once a peak has been selected, the fitted instrument line shape is displayed in the main graph and the parameters of the fitted function are displayed below the list of emission lines. If there exists a remaining baseline in the area around the selected emission line, e.g., due to missing dark spectrum, then this baseline will be removed before the instrument line shape is saved to file. For creating references for SO_2 retrievals, it is recommended to use the emission line at 302.1 nm, as this is the closest one to the region where SO_2 is measured. Once you are happy with your selection of emission line and function, click on the button 'Save' to save the result to a file. There are two options for file format:

1. Extended Standard File: This will save the selected instrument line shape to a file in the STD file format. This file will also contain the wavelength calibration of the measured mercury spectrum as it is displayed in the main graph, i.e., either the calibration as it was read in from the mercury spectrum file or the automatically determined wavelength calibration. This file can also be used in the DOASIS Software for creating references there.

2. QDOAS Calibrations: This will save two files; the instrument line shape will be located in a file with .SLF file ending and the wavelength calibration will be located in a file with .CLB file ending. This set of files can then be read in to the QDOAS software for creating references there.

Both selections of file formats can be used in the later stages of creating references in MobileDOAS.

6.2 WAVELENGTH CALIBRATION AND INSTRUMENT LINE SHAPE FROM TRAVERSE DATA

In the *Wavelength Calibration* tab, it is possible to create an instrument calibration from a measured spectrum. The input spectrum should be a measured spectrum from a regular MobileDOAS traverse with a good intensity (not too dark and not close to being saturated). The spectrum should be collected under as clean sky conditions as possible, that is to say that if the spectrum is collected as part of a regular MobileDOAS traverse then a spectrum safely outside of any plume should be selected for calibration.

6.2.1 Required input

The *Wavelength Calibration* tab makes use of the *StandardCrossSections* setup which should be located in a sub folder named *StandardCrossSections* in the same folder as the MobileDOAS executable file. If these files are missing, please contact the supplier of your mobile DOAS system.

The algorithm behind the instrument calibration requires a high-resolution Fraunhofer spectrum as input. This spectrum is already part of the *StandardCrossSections* setup but the user is free to select another high-resolution Fraunhofer spectrum as well. If another spectrum is selected, make sure that the wavelength calibration of this spectrum is in nanometers air.

The algorithm also requires an initial wavelength calibration of the device. This can be determined from a measured mercury spectrum in the *Instrument Line Shape* tab, provided by the manufacturer of the device or extracted from an already existing reference.

The algorithm can use an initial instrument line shape as input to the instrument calibration. This instrument line shape can be determined from a measured mercury spectrum using the *Instrument Line Shape* tab. If no instrument line shape is provided then the instrument calibration routine will create an approximate Gaussian line shape from the structures present in the measured spectrum and use this as an initial instrument line shape. If no instrument line shape is fitted then this Gaussian line shape will be the resulting instrument line shape of the routine.

6.2.2 Setting up the instrument calibration

Start by selecting a measured spectrum and the dark spectrum collected in the same traverse by clicking on the button *Browse* next to the Measured Spectrum field and Dark field in the upper left corner of the dialog. Notice that the plot here will not update until the calibration has been performed.

Once a spectrum has been selected, then setup the required parameters for the calibration routine by clicking on *Setup* in the upper right corner of the dialog. This will bring up the dialog shown in Figure 28

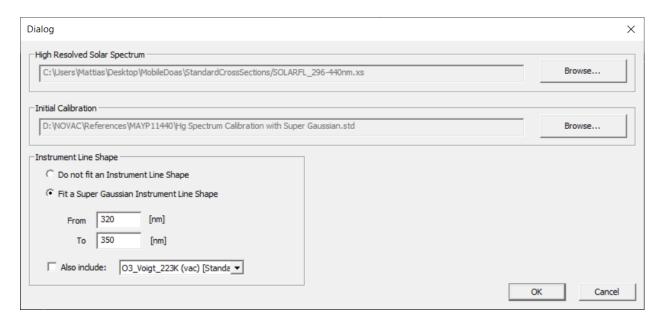


Figure 28. Setup dialog for the instrument calibration

The high resolved solar spectrum should here be filled in automatically by the solar spectrum reference in the supplied *StandardCrossSections*.

The MobileDOAS requires an initial wavelength calibration of the device in order to perform the instrument calibration. This is selected by clicking on the button *Browse* next to the Initial Calibration. This will bring up a dialog as shown in Figure 29. There are two options for input here

- 1. Extended Std File: This is an STD file which must a least contain a wavelength calibration for the device. This should preferably be saved from the *Instrument Line Shape* tab in the Instrument calibration dialog since the file will in that case also contain an instrument line shape. Only the first field named *Calibration* can be filled in here, the other field will be ignored if it is filled in.
- 2. Wavelength Calibration & Measured Instrument Line Shape: The file selected as the *Calibration* should here point to a file containing a wavelength calibration for the device. This must be a text file containing one or two columns of data where the first (or only) column is the wavelength calibration of the device. A reference file used for evaluation will do here if the file contains two columns of data. The file selected as *Instrument Line Shape* must point to a file containing the instrument line shape in the SLF used by QDOAS, preferably saved from the *Instrument Line Shape* tab in the Instrument calibration dialog. Only the field named *Calibration* is required.

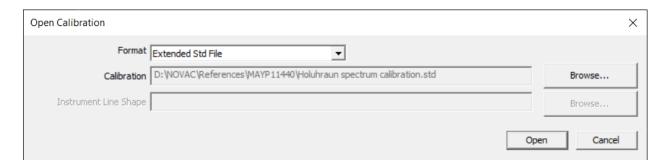


Figure 29. Opening an instrument calibration

Lastly, select if an instrument line shape should be fitted to the measured spectrum in the instrument calibration routine, it is here recommended to select *Fit a Super Gaussian Line Shape* as this gives the best calibration result. If you have provided a measured instrument line shape and are confident that this instrument line shape is correct then the option *Do not fit an Instrument Line Shape* can also be selected.

Finally, there is also an option to include the cross section of O_3 (or other absorbing gases) into the procedure where the instrument line shape is fitted to the measured spectrum. This does not need to be selected in the ordinary case, but is an option to which makes it possible to correct for the effects of ozone absorption in the region where the instrument line shape is fitted. This is expected to only make a difference when the measured spectrum is collected when the sun is close to the horizon and the absorption of O_3 in the measured spectrum is extremely high.

6.2.3 Running the instrument calibration procedure

When all the setup has been done, the instrument calibration procedure can be run by clicking on the button 'Run' in the lower right corner. If something is incorrectly setup then a message box will appear with information on what is not correctly setup such that this can be corrected. If not, then the calibration procedure will start. Notice that the instrument calibration can take up to a minute to run and while the procedure is running are the button *Run* disabled.

When the instrument calibration is complete, the buttons in the dialog will be enabled again and a graph will appear in the plot area of the dialog. The graph shows different aspects of the result of the instrument calibration and different types of information can be selected by clicking on the different plot type names in the *Result* selection box to the left of the graph. Select the graph type *Spectra & Polynomial* in the selector in order to view the measured spectrum and the created Fraunhofer reference spectrum in a combined plot. This plot shows several pieces of information which is useful to assess whether the instrument calibration was successful or not:

- 1. The spectrum drawn in red is the measured, dark-corrected, spectrum.
- 2. The spectrum drawn in green is the synthetic Fraunhofer spectrum. This has been created using the calculated wavelength calibration and instrument line shape and should match the measured spectrum well over the entire wavelength range.

3. The single solid line drawn across the plot represents the calculated wavelength calibration mapping and the white squares on top of these are the selected points in the spectrum which were used to create the wavelength calibration.



Figure 30. Resulting instrument calibration

Once the calibration routine is complete, the resulting instrument calibration can be saved to file by clicking on the button *Save Calibration* in the lower right corner of the dialog. There are two options for file format here; *Extended STD file* where the calibration is saved into a single STD file, which can be read into DOASIS for reference creation, or *QDOAS Calibrations* where the calibration is saved into a pair of files, a CLB file storing the wavelength calibration and a SLF file storing the instrument line shape. Both of these types of files can be used to create references for the instrument, as described in section 6.3 below.

It is also possible to create a standard set of references for the spectrometer directly by clicking on the button *Save References*. This will bring up the dialog shown in Figure 32 where the processing option for creating the references is locked to *high-pass-filter* and the unit is set to *ppmm* as this is the standard for references in MobileDOAS. See section 6.3.2 for more information.

6.3 CREATING REFERENCES FROM INSTRUMENT CALIBRATION

Once an instrument calibration, with both a wavelength calibration and an instrument line shape, have been determined this can be used to create new references for use in MobileDOAS. Open the last tab in the instrument calibration dialog, with the title *Create References*.

This dialog makes use of the *StandardCrossSections* setup which should be located in a sub folder named *StandardCrossSections* in the same folder as the MobileDOAS executable file. If these files are missing, please contact the supplier of your mobile DOAS system.

Start by opening an instrument calibration by clicking on the button *Select*. This will bring up the dialog shown in Figure 29 above where an instrument calibration can be opened. Unlike the previous tab, an instrument line shape is required here and when selecting an *Extended STD File*, the file must be produced by any of the prior tabs in the Instrument Calibration Dialog in MobileDOAS.

Once a valid instrument calibration has been selected the main plot of the dialog will look similar to what is shown in Figure 31 below. The selection box in the upper right corner of the dialog (with the title *High Resolution Cross Section*) controls which absorber the reference is to be created for. This selector will by default list all the settings found in the *StandardCrossSections* setup of the program. If this is empty, please contact the supplier of your mobile DOAS system. If you wish to create a reference for an absorber which is not listed in the standard setup, click on the button *Browse* below the selector to select a high-resolution cross section to be used.

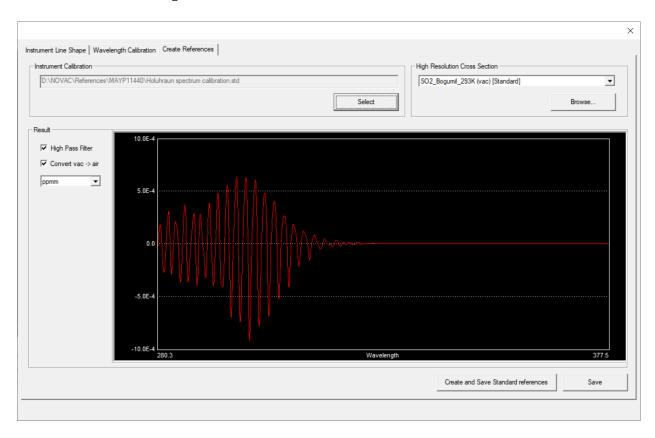


Figure 31. Creating a reference for SO₂ in MobileDOAS

To the left of the graph are three controls which controls how the references are created:

1. *High Pass Filter* if checked then the created reference will be high-pass filtered before being saved. This is the default setup for references created for MobileDOAS.

- 2. *Convert vac→air* references to be used in MobileDOAS needs to be in nanometer air, if the high-resolution cross section is in vacuum then the wavelength of the reference needs to be converted to air before it can be used. NOTICE: for the standard cross sections included with MobileDOAS the program knows the wavelength unit of the cross section, hence *do not change the state of this check box unless you really know what you are doing*.
- 3. *Unit* here the selection can be done to create references in ppmm (which is the standard in MobileDOAS) or to use molecules/cm2. This selector cannot be changed for the included Ring spectrum.

6.3.1 Creating a single reference

The default setup in the *Create References* tab allows for creating and inspecting one reference at a time. Select the high-resolution cross section in the selector in the upper right corner, make sure that the reference looks reasonable and the click on the button *Save* in the lower right corner of the dialog. This saves the reference in a .txt file format which makes it possible to use directly in the evaluation setup (see Figure 9 or Figure 23).

Notice that references created for use in real time evaluation in MobileDOAS (i.e., to be inserted into the dialog shown in Figure 9) must be set to use *High Pass Filter* and have the unit *ppmm* selected (with the exception of the Ring spectrum where no unit can be selected).

6.3.2 Creating standard references

To more quickly create a set of the most commonly used references for MobileDOAS, make sure to select *High Pass Filter* and the unit *ppmm* (these are the defaults) and then click the button *Create* and *Save Standard references* in the bottom right corner of the dialog. This will open a new dialog as seen in Figure 32 below.

Start by selecting the directory where you want to save the new references, enter the name of the instrument in the input field below and optionally a suffix of the file names (e.g., the date the calibration was made, or other information such that the references can be identified later on). Once this is done, verify that the file names listed in the dialog are reasonable and make sure that the names for the SO_2 and O_3 references do include $HP500_PPMM$ (if they do not then close the dialog to go back to the *Create References* dialog, select *High Pass filter* and *ppmm* and click on *Create and Save Standard references* again). Clicking on the button *Create and Save* will create the listed reference files and close the dialog.

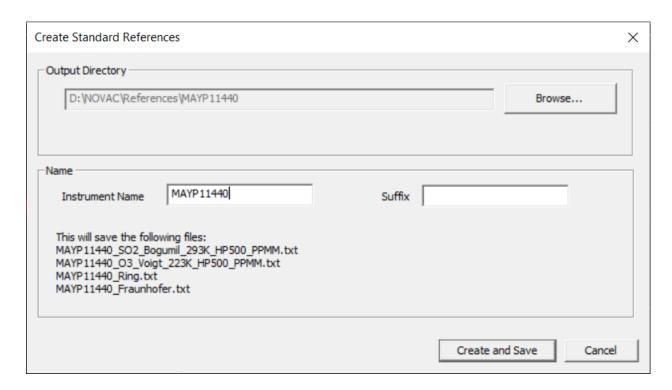


Figure 32. Creating a standard set of references for MobileDOAS

7. Other Measurement Modes

7.1 VIEWING SPECTRA DIRECTLY FROM THE SPECTROMETER

Sometimes it is useful to be able to view spectra directly from the spectrometer without saving the spectra, e.g., when checking the light level, adjusting the optics of the instrument or checking that the fiber is not damaged. There is a special measurement mode in MobileDOAS which does this, to start this click "Control View Spectrometer Output" in the main menu or click the button in the toolbar. This will open two new windows, as can be seen in Figure 22.

In this measurement mode are spectra continuously collected using the settings that are found in the "Spectrum collection settings" window. To exit this mode, press the stop button in the toolbar or close the program.

The window "Spectrum collection settings" allow you to change the exposure time that is used when acquiring spectra and the number of spectra that are averaged together. If more than one spectrometer is connected to the computer, you can also select which spectrometer should be used. Pressing the button "Save spectrum" allows you to save the last acquired spectrum (the one shown on the screen).

The window "Spectrum scale" modifies the scaling of the plot.

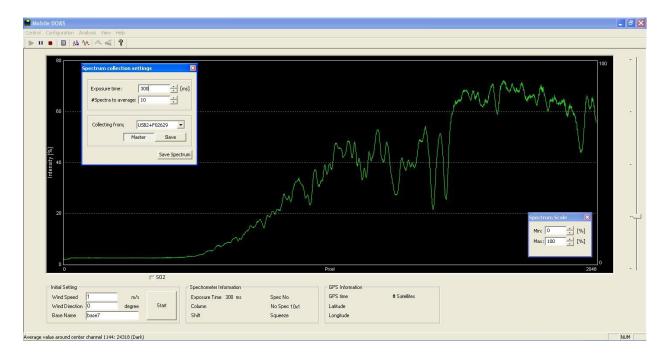


Figure 33 Real-time spectra viewing

8. Other Functions

8.1 VIEWING COLLECTED SPECTRA

It is possible to view the spectra collected in a measurement by opening the Spectrum Inspection Dialog. This can be found by either:

- Clicking on the menu option 'Analysis → View Measured Spectra' from the menu in the main window.
- Opening the ReEvaluation dialog, selecting an evaluation log file and pressing the 'View Spectra' button.

In this dialog you can select an evaluation log file by pressing the 'Browse' button. Once the evaluation log file is opened you can see each of the measured spectra and the properties for each single spectrum. The spectra can be browsed through by moving the slider bar just above the spectrum graph. Notice that the evaluation log file must be in the same directory as the measured spectra.

It is possible to zoom in the spectrum by clicking and dragging with the left mouse button in the graph. Clicking the right mouse button will restore the zoom level to its original value.

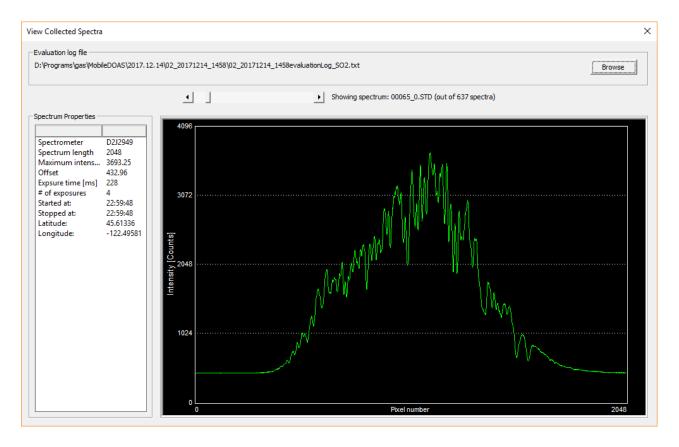


Figure 34 View Collected Spectra dialog

8.2 THE ROUTE DIALOG

You can see a plot of the route traversed during a measurement by first opening the measurement in the Post Flux Calculation dialog then pressing the menu option 'View→Show Route Map' or by right-clicking in the graph and clicking the menu option 'Show Route Map'. The route graph shows the position for each measured spectrum on a square latitude-longitude plot. The start point of the traverse is marked with a big green square

The graph can also show the position of the source as a red square if the check button "Show Source" is checked and a latitude and longitude is typed into the "Lat" and "Lon" boxes.

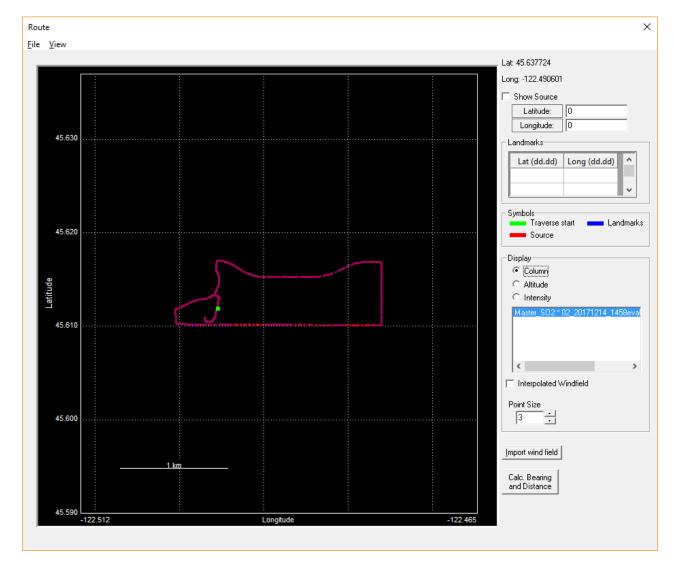


Figure 35 Route dialog opened from Post Flux Calculation dialog

On the right hand side in the window there is are three radio buttons in the "Display" section. Checking the radio button "Column" will make the graph show the measured column values using a color range varying from blue as the lowest values ranging to red as the highest values. Using the radio buttons the plot can also be made to show the Column error or the altitude of the measurement, on a relative scale.

8.2.1 View Options

In the menu 'View' found in the route dialog there are many options for how to draw the graph, e.g. can the column values in the graph be shown either by color (with blue indicating the lowest values, and red as the highest) or by size of the squares (larger squares correspond to higher values).

8.2.2 **Zoom**

It is possible to zoom the graph by clicking and dragging the mouse cursor in the graph. Starting the click from the upper left corner and dragging the cursor to the bottom right corner increases the

zoom (i.e. zooms in). Starting the click from the lower right corner and dragging the cursor to the upper left corner decreases the zoom (i.e. zooms out). The original zoom-level is restored by right clicking anywhere in the graph.

8.2.3 Distance and Bearing Calculation

It is possible to calculate the distance and bearing between any two points on the graph. Start by pressing the "Calc. Bearing and Distance" button on the right. The program will tell you to click on the first point in the graph. When clicking on the second point in the graph the program will tell you the distance and initial bearing between the two points.

8.2.4 Landmarks

To mark other points on the route graph, type in their latitude and longitude in the grid under 'Landmarks'. If a wind-field has been imported for the currently shown measurement, the direction of the wind at each measurement-point can be shown by marking the checkbox 'Interpolated Windfield' found in the 'Display' group on the right-hand side of the dialog. The colors of the background, the grid and the lines displaying the wind-field can be changed. The entire plot can be saved to an image file from the 'File -> Save Graph as Image' menu.

8.3 EXPORTING EVALUATED RESULTS TO GOOGLE EARTH

The gas columns from a measurement with MobileDOAS can be exported to KML for viewing in Google Earth. This is done by opening the evaluation log file in the Post Flux Calculation dialog and selecting the menu option "File→Export traverse to Google Earth". This will bring up a dialog asking for a file name and where to store the file. After pressing "Save" here another dialog will pop up asking for which scaling height to use in the file. The scaling height is the height that the highest column in the measurement will take, what value you should use depends on the terrain around the measurement and the size of the measurement. You can try this process several times with different scaling heights and try which one looks good for you.

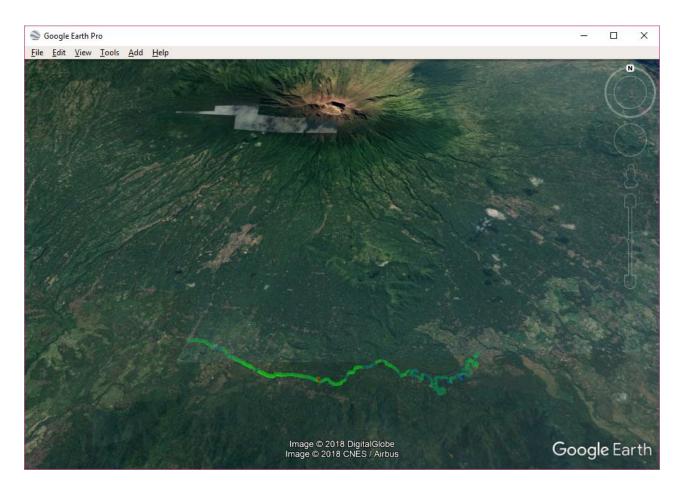


Figure 36 Measurement made in MobileDOAS exported to KML and displayed in Google Earth

8.4 TESTING THE GPS CONNECTION

When using a GPS-receiver with USB-port that simulates a serial-port there can sometimes be an uncertainty of which serial-port contains the GPS-receiver. This can be tested by pressing 'Control→Test The GPS' in the menu in the main-window. This will sequentially run through the serial-ports 1 to 10 and test each one for the presence of a GPS-receiver. When a GPS-receiver is found, the user will be informed of the name and number of the serial-port through a message-box.

8.5 PLOT SETTING

You can set the background color and the plot color. Choose "Plot Setting->Set Background Color" to change background color. Choose "Plot Setting->Set Plot Color" to change the histogram color.

8.6 PAUSE AND EXIT

Click on the toolbar to pause the program.

Click on the toolbar to exit the program.

9. File Formats

Software versions prior to 4.4 used *cfg.txt* as the configuration file. This file format has been deprecated and it is recommended that the configuration file is recreated using the latest version of MobileDOAS.

MobileDOAS version 4.4 and higher uses *cfg.xml* as the configuration file. All versions of MobileDOAS are capable of reading the old file format (*cfg.txt*) however as from version 4.4 MobileDOAS can only write the new file format (*cfg.xml*).

9.1 PARAMETERS

The configuration file consists of a number of parameter definitions and a number of sections. These are all described below. An example of a cfg.xml file can be seen in section 9.2.

Parameter	Description	Scope	Example
serialPort	The port ot use, normally USB but can also be any COM port.	USB, COM1, COM2,	USB
timeResolution	Time between two consecutive spectra measurements in milliseconds. Used for the exposure time calculation.	>500	5000
nchannels	Number of channels to use in the spectrometer	1 or 2	1
maxColumn	Beep volume = (current column/max column)*max volume		200

9.1.1 Intensity Section

The parameters described in the intensity section are used to determine the exposure time for the spectra. The parameters used are:

Parameter	Description	Scope	Example
Channel	The pixel around which to measure the intensity of the spectrum.	1 to 2047	1150

Percent	The desired intensity of the spectrum around the pixel specified by Channel in percent.		80
FixExpTime	How to calculate the exposure time: 0 – Automatic exposure time >0 – Fixed exposure time in milliseconds < 0 – Adaptive exposure time		0

9.1.2 GPS Section

The GPS section defines how (and if) MobileDOAS should communicate with the GPS receiver.

Parameter	Description	Scope	Example
use	Use GPS receiver or not	1 – use GPS receiver;	1
		0 – do not use GPS receiver	
baudrate	The baud rate to use when communicating with the GPS	1200 to 115200	4800
Port	The serial port to use when communicating with the GPS	COM1, COM2,	COM4

9.1.3 The Offset section

The offset section defines how MobileDOAS should correct for the offset of the spectra. This feature enables a first level compensation for stray-light in the spectrometer but can also compensate for a changing offset level (for spectrometers which have a problem with this).

If both from and to are set to 0 then no offset correction will be performed.

Parameter	Description	Scope	Example
from	The lowest pixel to use when calculating offset	1 to 2048	50

to	The highest pixel to use when calculating offset	1 to 2048	200	

9.1.4 The Fit Window Section

The fit window section defines how to evaluate the spectra that are collected in the measurement. There can be several fit windows defined, they must however differ either in the channel they use or in the name.

The fit window section also contains a number of Reference-sections, each defining how to fit a single reference file to the spectrum.

Parameter	Description	Scope	Example
name	The name of the fit window	Any string	S02
fitLow	The lowest pixel to use when performing the DOAS fit	1 to 2048	340
fitHigh	The highest pixel to use when performing the DOAS fit	1 to 2048	561
spec_channel	The channel on the spectrometer that this fit window is valid for	0 or 1	0
polynomial	The order of the polynomial to include in the DOAS fit	0 to 5	5

The parameters of the reference section:

Parameter	Description	Scope	Example
name	The name of the reference	Any string	SO2
path	The full path to the reference file, including directory and file name.	Any string	C:\spec\SO2_reference.xs
gasFactor	The conversion factor to convert from ppmm to mg/m2	>0 (depends on the gas)	561

shift	The shift to apply to the reference when performing the DOAS fit	fix to 0.0
squeeze	The squeeze to apply to the reference when performing the DOAS fit	fix to 1.0

9.2 EXAMPLE OF CONFIGURATION FILE

```
<?xml version="1.0" encoding="ISO-8859-1"?>
<!-- This is the configuration file MobileDOAS -->
<Configuration>
      <serialPort>USB</serialPort>
      <timeResolution>1000</timeResolution>
      <nchannels>1</nchannels>
      <maxColumn>1500.00</maxColumn>
      <Intensity>
            <Percent>70</Percent>
            <Channel>1144</Channel>
            <FixExpTime>0</FixExpTime>
      </Intensity>
      <GPS>
            <use>1</use>
            <baudrate>4800
            <port>COM3</port>
      </GPS>
      <Offset>
            < from > 50 < / from >
            <to>100</to>
      </Offset>
      <FitWindow>
            <name>SO2</name>
            <fitLow>400</fitLow>
            <fitHigh>628</fitHigh>
            <spec channel>0</spec channel>
            <polynomial>5</polynomial>
            <Reference>
                  <name>SO2</name>
      <path>C:\References\D2J2949\D2J2949 Master SO2 HP500 PPMM.txt</path>
                  <gasFactor>2.66</gasFactor>
                  <shift>fix to 0.00</shift>
                  <squeeze>fix to 1.00</squeeze>
            </Reference>
            <Reference>
                  <name>03</name>
      <path>C:\References\D2J2949\D2J2949 Master O3 HP500 PPMM.txt</path>
                  <gasFactor>1.99</gasFactor>
                  <shift>link to 0</shift>
                  <squeeze>link to 1</squeeze>
            </Reference>
            <Reference>
                  <name>RING</name>
                  <path>C:\References\D2J2949\D2J2949 Master RING.txt</path>
```

10. Reference File

The reference files should contain the differential cross section of 1 ppmm of a single specie of interest e.g. SO₂ or NO₂.

The reference files that are used should be in ASCII format and contain only one or two columns. If the file contains only one column, then this should specify the magnitude of the reference cross section. If the file contains two columns then the left should specify the wavelength.

The file can end with .txt or .xs.

11. Spectrum File

The program records all the spectra in the extended STD file format, which is a human readable ASCII – file format.

- The sky spectrum is stored as sky.STD file.
- The dark spectrum is stored in dark.STD file.
- All other spectra are stored in STD files named with continuous numbers.

If using multi-channel spectrometers, the spectra from the master channel will end with "_0.STD" and the spectra from the slave channel will end with "_1.STD".

12. Evaluation Log File

The program generates the evaluation file in which evaluation results are stored.

The beginning of the file is the copy of configuration. After that comes a table containing the GPS time, latitude, longitude, altitude (from the GPS), number of spectra averaged in each saved spectrum, exposure time of the spectrum (in ms), average intensity, column, column error and the name and path to the spectrum file.

12.1 EXAMPLE OF EVALUATION LOG FILE

Desktop Mobile Program
VERSION=6.0
FILETYPE=evaluationlog
BASENAME=test39
WINDSPEED=8.000000
WINDDIRECTION=0.000000

```
***copy of related configuration file ***
SERIALPORT=USB
GPSBAUD=4800
GPSPORT=COM4
TIMERESOLUTION=1000
FIXEXPTIME=0
FITFROM=400
FITTO=628
POLYNOM=5
FIXSHIFT=1
FIXSQUEEZE=1
SPECCENTER=1144
PERCENT=0.700000
MAXCOLUMN=1500.000000
GASFACTOR=2.660000
REFFILE=C:\Users\Diana\Documents\VDAP\Gas\NOVAC
Project\References\D2J2949\D2J2949 Master SO2 HP500 PPMM.txt
REFFILE=C:\Users\Diana\Documents\VDAP\Gas\NOVAC
Project\References\D2J2949\D2J2949 Master O3 HP500 PPMM.txt
REFFILE=C:\Users\Diana\Documents\VDAP\Gas\NOVAC
Project\References\D2J2949\D2J2949 Master RING.txt
***Spectrometer Information***
SERIAL=D2J2949
DETECTORSIZE=2048
DYNAMICRANGE=4096
MODEL=ADC1000-USB
#Time Lat
          Long Alt NSpec ExpTime
                                      Intens (Master)
     Master Column SO2
                          Master ColumnError SO2
                                                       Master Column 03
     Master ColumnError O3 Master Column RING
     Master ColumnError RING
                                 STD-File (Master)
           45.618945 -122.477610
                                      89.0 270
23:51:08
                                                 3
                                                       395
                                                            0.000000
                         0.000000
                                      0.000000
     0.000000 0.000000
                                                 0.000000
     C:\Users\Diana\git\MobileDOAS\x64\Debug\2018.01.04\test39 2018010
4 1550\00000 0.STD
23:51:11
          45.618945 -122.477610
                                      89.0 270
                                                            0.000000
                                                       395
     0.000000 0.000000 0.000000
                                      0.000000
                                                 0.000000
     C:\Users\Diana\git\MobileDOAS\x64\Debug\2018.01.04\test39 2018010
4 1550\00001 0.STD
           45.618945 -122.477610
23:51:15
                                      89.0 270
                                                 3
                                                       395
     0.000000
                0.000000 0.000000
                                      0.000000
                                                 0.000000
     C:\Users\Diana\git\MobileDOAS\x64\Debug\2018.01.04\test39 2018010
4 1550\00002 0.STD
```

13. Flux Calculation File

Flux calculation file (fluxCalculations.txt) is generated after the post flux calculation. It is located in the same directory with the evaluation log file that has been calculated.

SAMPLE CONTENT OF FLUX CALCULATION FILE

524.547038 [ton/day]

Processed file: C:\Evaluation

Logs\TEST05 20171202 0909evaluationLog SO2.txt

Processed time: 2017.12.21 15:01:24

Wind Speed=10.000000 Wind Direction=0.000000 Source latitude=0.000000 Source longitude=0.000000 Column offset=-8.276690PlumeWidth=97 [m]

TraverseLength=31155 [m]

14. File Format to Import Modeled Wind-Field

The MobileDOAS can import the results from meteorological models into the post-flux calculation in order to improve the quality of the calculated flux. The wind field is in plain ASCII for simplicity. The ordering is primarily on position, with one paragraph for each position. Each paragraph starts with the line:

```
Lat=XX.XXXX Long=YY.YYYYYY
```

The latitude is positive on the northern hemisphere and the longitude is positive in the eastern hemisphere.

The following line is a header-line for the data-table for that position. The header-line should have the following format:

```
Altitude
         Hour WD [deg]
                       WS [m/s]
                                   Hour WD [deg]
                                                 WS [m/s]
```

Where the three strings 'Hour WD [deg] WS [m/s]' is repeated once for each time-stamp available for that altitude. Notice that each item is separated by tabs, except for the separation between the item ('WD' or 'WS') and their unit which are separated by spaces.

The data-table is sorted with one altitude per line and three columns for each time-stamp. An example of a line in the data-table matching the above given header-line:

```
98.07 21
          140.58
                     10.85 22
                                 147.84
                                            11.36
```

The unit of the altitude is optional, this is only to give the data meaning to the user and is not used in the flux calculation. The unit of the wind speed must be meters per second and the wind direction must be in degrees.

Each paragraph is followed by one or more empty lines, marking the end of the paragraph. There cannot be more than 24 time-values for each altitude (each accompanied with one wind direction and one wind speed) and no more than 50 altitudes for each measurement point.

14.1 EXAMPLE OF A SMALL WIND-FIELD DATA FILE

Altitude Hour	WD [deg]	WS [m/s]	Hour	WD [deg]	WS [m/s]
28.55 21	136.77 9.35	22 144.89	9.74		
98.07 21	140.58 10.85	22 147.84	11.36		
192.71 21	143.82 11.06	22 150.58	11.62		
313.09 21	147.63 10.86	22 153.99	11.41		

Lat=19.493700 Long=-99.015380

Altitud	e Hour	WD [deg]	WS [m	/s]	Hour	WD [deg]	WS [m/s]
28.55	20	140.08	6.74	21	136.77	9.35		
98.07	20	143.00	7.73	21	140.58	10.85		
192.71	20	145.26	7.84	21	143.82	11.06		
313.09	20	147.86	7.66	21	147.63	10.86		

Lat=19.512640 Long=-99.014650

Altitude Hour	WD [deg]	WS [m/s]	Hour	WD [deg]	WS [m/s]
28.54 21	140.11 8.86	22 147.05	9.92		
98.03 21	142.39 10.34	22 149.01	11.57		
192.61 21	144.40 10.57	22 151.06	11.82		
312.93 21	146.89 10.40	22 153.81	11.60		

15. Troubleshooting

All suggestions presented in this chapter aim to allow the users to solve the most common problems they may encounter.

Communication problem, restart data collection

 $Description \qquad \hbox{The communication between the spectrometer and the computer does not work or}$

the spectrometer has no power.

Solution Check whether the serial cable is well connected and whether the spectrometer has

power.

Timeout

Description The communication between the spectrometer and the computer does not work or

the spectrometer has no power.

Solution Check whether the serial cable is well connected and whether the spectrometer has

power.

Spectra are collecting

Description You have clicked the "Start" button a second time.

Solution This does not affect the operation of the program.

First byte of transmission is incorrect

Description The communication between the spectrometer and the computer does not work

correctly. This only happens when communicating with the spectrometer through a

serial cable.

Solution Check the physical connection and restart the program.

Cannot handle more than X channels. Changed number of channels to 2

Description You have specified too many channels in the configuration file.

Solution This will change your settings to use only two channels. Next time change the

settings before starting the program.

A negative amount of channels defined in the configuration file. This does not make sense, will change number of channels to 1

or

Zero channels defined in the configuration file. This does not make sense, will change number of channels to 1

Description You have specified an illegal number of channels in the configuration file.

Solution Revise the settings and restart.

There are no reference-files defined in the configuration file. Please check settings and restart.

Description You have not specified any references in the cfg.xml file or there are errors in

cfg.xml.

Solution Check the settings and restart.

Cannot open reference file: XYZ for reading

or

Cannot read reference file XYZ Please check the file location and restart collection

Description One of the reference files specified in cfg.xml is in the wrong format, not readable or

not existing.

Solution Check the settings and restart.

There are X columns in the reference file. This programs wants reference files with one or two columns.

Description One of the reference files specified in cfg.xml is in the wrong format.

Solution Check the reference files specified in cfg.xml and restart.

Length of the reference file is: X values. Cannot handle references with more than Y datapoints.

Description One of the reference files specified in cfg.xml is too long.

Solution Check the reference files specified in cfg.xml and restart.

Could not open evaluation log file. No data was written!

or

Could not write log file: XYZ. Not enough free space?

Description The evaluation log file could not be opened for writing.

Solution Check that the disk is not full and that you have write access permission to the

directory. (Attempt to make file manually to verify.)

Could not create output directory.

Description The output directory could not be created in the directory where MobileDOAS

executable resides.

Solution Check that the disk is not full and that you have write access permission to the

directory. (Attempt to make file manually to verify.)

No spectrometer found. Make sure that the spectrometer is attached properly to the USB-port and re-start the program.

Description The program could not contact the spectrometer.

Solution Check that the spectrometer is plugged in. If it is then unplug it, wait a little and plug it

in again to see if it helps.

Cfg.txt specifies 2 channels to be used but spectrometer can only handle one. Changing configuration to handle only one channel.

Description The configuration specifies that two channels are to be used but the spectrometer only

has one.

Solution Check cfg.xml and restart.

Fit exception

Description The evaluation procedure is not correct.

Solution Check that the reference file is correct, that the fit range is valid and that you have not

specified the same reference file twice in a fit window.

Failed to initialize spectrometer

or

NAK1

or

TimeoutX

Description This can happen when using the serial port to communicate with the spectrometer.

Either a failure in the serial cable or in the power supply to the spectrometer.

Solution Check the physical connection to the spectrometer, check that the spectrometer has

power and restart the program.

Could not communicate with GPS. No GPS-data can be retrieved!

Description The communication with the GPS failed for some reason.

Solution Stop the program. Check the physical connection to the GPS receiver, check that the

correct baud rate and serial port has been entered in the settings.

Illegal GPS-Port. No GPS-data can be retrieved!

Description The serial port for the GPS receiver that is specified in the configuration does not exist

on this computer.

Solution Check the settings and restart.

It seems like the dark spectrum is not completely dark, consider restarting the program.

Description MobileDOAS tries to judge if the collected dark spectrum is actually dark.

Solution Look at the dark-current spectrum that is drawn on the screen (typically in green). If

this is not a dark spectrum, then restart the program and try again. If this is a dark

spectrum then you can continue the measurement.

It seems like the sky spectrum is dark, consider restarting the program

Description MobileDOAS tries to judge if the collected sky spectrum has enough intensity to be

useful.

Solution Look at the spectrum that is drawn on the screen (typically in green). If this indeed has

too little light, then restart the program and try again. If this is an ok spectrum then

you can continue the measurement.

Length of the reference file is: X values. Cannot handle references with more than Y datapoints.

Description	One of the reference files sp	pecified in cfg.xml is too long.
Description	one of the reference mes sp	pecifica in eiginin is too long.

Solution Check the reference files specified in cfg.xml and restart.