
Things You Will Need

1	1 Dropper of Universal pH indicator	
2	A Cuvette and pipe	
3	A smartphone with the ffem apps installed, and an alignment sticker	(G ₀)
4	A 10ml measuring tube	
5	A sample of soil extract to test	


Note: Before testing, you must have a solution of **soil extract**. refer to the link for instructions on how to prepare it for pH.

Steps


1. Open the ffem Collect app, and select "Fill Blank Form". Select the form you need to fill out.

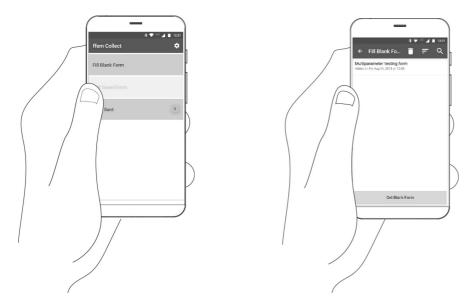


2. Answer all the questions in the form, swiping left to go to the next questions. When you reach the Soil quality questions, launch the test for pH

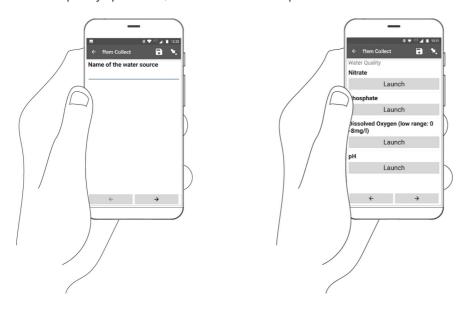

3. Rinse the empty cuvette and measuring tube twice with the sample to remove any traces of previous solutions. Measure 10 ml of the sample with the measuring tube.

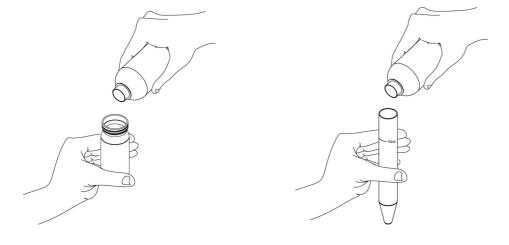

4. Add 10 drops of pH reagent to the measuring tube. Close the lid of the measuring tube and shake it to ensure proper mixing of the reagent and sample.

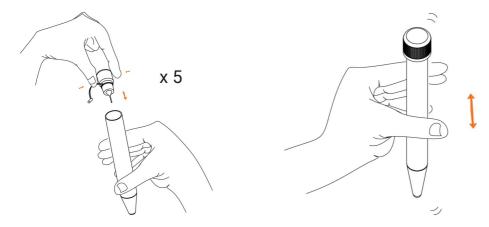

5. Pour the contents of the mixing tube into the provided cuvette. Close the lid and fit the cuvette into the pipe.




6. Launch the test for on the app.






7. Place the phone face down, and use the sticker to help center the cuvette over the camera. Wait for about a minute for the test to complete - you will hear 6 beeps and a "Test Completion" sound.

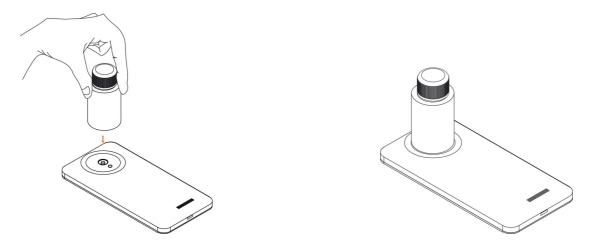

8. You should receive a pH value. Tap Accept Result to return to the survey.

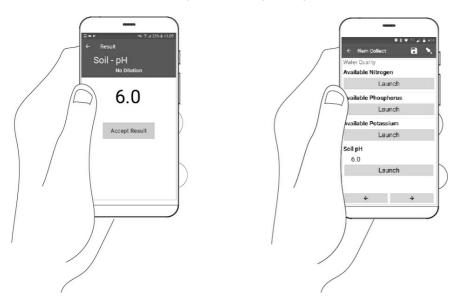

9. Complete the rest of the survey, and submit it once you have filled in all the forms. Empty the contents of the cuvette and rinse it once.

