

Indoor Helium Hotspot Overview

The Nebra Indoor Helium Hotspot is a compact & elegant solution to provide Helium LongFi coverage and start mining HNT with ease.

Quick Specifications

Specification	Nebra Indoor Hotspot	
RRP	f250 ex VAT	
Case	Plastic (ABS)	
Ingress Protection	IP40	
Dimensions	150x150x50 mm (Excluding Antenna)	
Weight	0.4 Kg	
Power Requirement	9-16V DC @ 15W	
Average Power Consumption	~8W*	
Annual Power Consumption	~70kWh	
Maximum TX Power	24-27dBm**	
Network Connectivity	10/100 Ethernet, 2.4Ghz 802.11N Wi-Fi	
Antenna Connection	RP-SMA Female	
Rated Ambient Temperature	20-30C	
Base SOM	Raspberry Pi CM3+	
CPU Specification	Broadcom BCM2837B0, Quad Core	
CFO Specification		
High Fodusoos Stasoos	Cortex-A53 (ARMv8) 64-bit SoC @ 1.2GHz	
High Endurance Storage	32GB	
RAM	1GB LPDDR2 SDRAM	
Internal PCB Dimensions	~ 139x139x30 mm	

^{*} Average Power Consumption Measured At Mains,

Package Contents

- The Nebra Helium Indoor Hotspot
- RP-SMA LoRa Antenna
- Worldwide 12V 1.5A Power Adapter + Adaptors
- 1M CAT5 Ethernet Cable

Please note the above image is for illustrative purposes only, colours of some parts may change.

Supported Regions

The Nebra Indoor Hotspot comes in three hardware versions:

^{**} Maximum TX Power may be capped to a lower amount in some regions.





Figure 1: Indoor Hotspot Included



Frequency	Supported Regions		
470 Mhz	CN470		
868 Mhz	EU868, IN865, RU864		
915 Mhz	US915, AU915, AS923, KR920		

The frequency is set upon initialisation by the Helium Network.

Antenna Specifications

Specification	470Mhz Model	868 & 915Mhz Models	
Frequency Range	420-480	860-930 Mhz	
Peak Gain	3 dBi	3 dBi	
VSWR	< 2.3	< 1.8	
Input Impediance	50 Ohms	50 Ohms	
Length	17.2CM	20.7CM	

Dimensions

The Nebra Indoor Hotspot is 150x150x50MM In size when nothing is connected.

Approximatley 175x150x50MM space is required when accounting in space required for connectors.

Interfaces

Connectors

- 1. 9-16V @ 15W DC 6.5MMx2.0MM Barrel Jack
- 2. LED Indicator.
- 3. Interface Button
- 4. RP-SMA LoRa Connector
- 5. Ethernet Connector

Status Indicator

The Nebra Indoor Hotspot has a status indicator as shown above.

The Top LED will act accordingly:

- Off Software has not started yet.
- On Operating as normal
- Slow Blinking Bluetooth Pairing is enabled
- Fast Blinking There is potentially a fault. Please check diagnostics page.

The Bottom LED acts accordingly:





Figure 2: Indoor Hotspot Connectors

- Off Unit is receiving no power.
- On Unit is powered up.

Button

The Nebra Indoor Hotspot has a button on the back of the unit.

This is used to re-enable bluetooth pairing on the hotspot, hold the button in for approximately 15 seconds then release to start pairing. The top light should start blinking slowly if successful.

Firmware

The Nebra Hotspots run a customised software to provide high reliability and ensure your units are as up to date as they can be.

Approximately your hotspot will update once a week in an automatic process, we will announce updates via various social media platforms when they happen.

The software is open source at https://github.com/nebraltd/helium-miner-software

Unit Information

Each unit has a sticker located on the base of the unit.

This includes important Information including:





Figure 3: Indoor Hotspot Base



- Frequency of the Unit
- Ethernet MAC address
- Nebra Serial Number
- Raspberry Pi Serial Number

You will require some of this information when linking your unit to our Dashboard.

Certifications

We are working on getting the Nebra Indoor Hotspot certified in multiple regions. As we have results from the certification process we will post them here.


Certification List

Approval	Countries Covered	Hardware Frequency	Status	Frequency Plans
CE	European Economic Area	868 Mhz	In Progress	EU 868
UKCA	United Kingdom	868 Mhz	In Progress	EU 868
FCC	United States of America	915 Mhz	In Progress	US 915
ISED	Canada	915 Mhz	In Progress	US 915
RCM	Australia & New Zealand	915 Mhz	In Progress	AU 915
MIC	Japan	915 Mhz	In Progress	AS920 (AS1)
SRRC	China	470 Mhz	In Progress	CN 470
EAC	Russia	868 Mhz	In Progress	RU 864
WPC	India	868 Mhz	In Progress	IN 865

Block Diagram

Below is a block diagram showing the key components of the Nebra Indoor Hotspot.



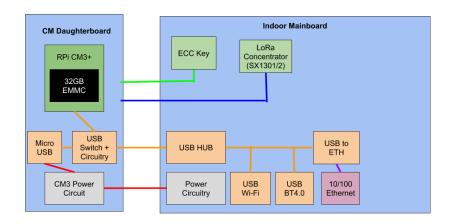

- Connectivity Key:

 USB Orange
 Power Red
 I2C Green
 SPI Blue
 Ethernet Purple

Indoor Gateway Block Diagram

Figure 4: Indoor Hotspot Block Diagram