# Demo Application UI Guide (Audio Player)

Version 0.35.0

# **Display Audio**

Solution Team



#### Release information

The following changes have been made to this document.

#### **Change History**

Date	Change
06 Dec 2017	First release for v0.1.0
15 Dec 2017	Update Storage Event v0.2.0
07 Feb 2018	Update scenario v0.3.0
14 Nov 2018	PlayList null point fix v0.4.0 Storage Remove fix v0.4.0. Player library null point fix v0.4.0.
15 Feb 2019	Automatically adjust UI Size (1024x600, 1920x720) v0.5.0

서식 있음: 들여쓰기: 첫 줄: 0.5 글자

#### **Proprietary Notice**

Information in this document is provided solely to enable system and software implementers to use Nexell products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Nexell reserves the right to make changes without further notice to any products herein.

Nexell makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Nexell assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters which may be provided in Nexell data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. Nexell does not convey any license under its patent rights nor the rights of others. Nexell products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Nexell product could create a situation where personal injury or death may occur. Should Buyer purchase or use Nexell products for any such unintended or unauthorized application, Buyer shall indemnify and hold Nexell and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Nexell was negligent regarding the design or manufacture of the part.

Copyright© 2017 Nexell Co.,Ltd. All rights reserved.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electric or mechanical, by photocopying, recording, or otherwise, without the prior written consent of Nexell.

#### Contact us

[11595] BundangYemiji Bldg. 12F, 31 Hwangsaeul-ro 258 beon gil, Bundang-gu, Sungnam-city, Gyeonggi-do, Korea.



TEL: 82-31-698-7400 FAX:82-31-698-7455 http://www.nexell.co.kr



# Contents

Chap 1.	Overview	1
	1.1 Overview	1
	1.2 UI Guide	1
	1.2.1 Features	1
	1.2.2 Execute	1
	1.2.3 UI Details	2
	1.2.4 UI Playlist Details	<u>42</u>
	1.3 Flow	4 <del>3</del>
	1.3.1 Application Overall	<u>4</u> 3
	1.3.2 Application Switching	<u>5</u> 3
Chap 2.	GUI Guide	<u>7</u> 4
	2.1 Status Bar	74
	2.1.1 Home	74
	2.1.2 Back	74
	2.2 Media Player Control	84
	2.2.1 Initialization	84
	2.2.2 Progress Bar	<u>95</u>
	2.2.3 Prev Button	<u>95</u>
	2.2.4 Play Button 2.2.5 Pause Button	106
	2.2.6 Next Button	10 <del>6</del> 10 <del>7</del>
	2.2.7 Stop Button	117
	2.2.8 Playlist Button	<u>11</u> 8
Chap 3.	Storage Event	129
	3.1 OverView	<u>129</u>
	3.2 Flow	129
	3.2.1 Removing Storage Event	129
	3.2.2 Inserting Storage Event	<u>13</u> 9
Chap 4.	Known Issues	1410
	4.1 To Do List	14 <del>10</del>
Chap 1.	<u>Overview</u>	1
	1.1 Overview	1
	1.2 UI Guide	1
	1.2.1—Features	1
	1.2.2—Execute	1
	1.2.3 UI Details	2
	1.2.4—UI Playlist Details	2

	1.3 Flow	3
	1.3.1—Application Overall	3
	1.3.1 Application Overall 1.3.2 Application Switching	3
Chan 2	GUI Guide	4
<del>Chap 2.</del>		<del>4</del>
	2.1 Status Bar	4
	2.1.1 Home	4
	2.1.2— <u>Back</u>	4
	2.2 Media Player Control	4
	2.2.1 Initialization	4
	2.2.2 Progress Bar	5
	2.2.3 Prev Button	5
	2.2.4 Play Button	6
	2.2.5 Pause Button	<del>6</del>
	2.2.6 Next Button	7 7
	2.2.7 Stop Button 2.2.8 Playlist Button	8
	Z.Z.8 Playlist Button	8
Chap 3.	Storage Event	9
	3.1 OverView	0
	3.2 Flow	<del>9</del>
	3.2.1—Removing Storage Event	9
	3.2.2—Inserting Storage Event	9
Chap 4.	Known Issues	10
Chap 4.		
	<u>4.1 To Do List</u>	10
Chara 4	Overview	1
Chap 1.	<u>Overview</u>	
	1.1 Overview	1
	1.2 UI Guide	1
	1.2.1 Features	1
		1
	7 0 0 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2
	1.2.3 UI Details 1.2.4 UI Playlist Details	2
	1.3 Flow	_
	1.3.1—Application Overall	3
	1.3.2—Application Switching	3
	1.0.2 Application Owitoning	-3
Chap 2.	GUI Guide	4
	2.1 Status Bar	4
	2.1.1—Home	
	2.1.2—Back	4
	2.2 Media Player Control	
		<del>5</del>
	2.2.1 Initialization 2.2.2 Volume Bar	<del>5</del>

	2.2.3—Progress Bar	5
	2.2.4 Prev Button	-6
	2.2.5 Play Button	6
	2.2.6 Pause Button	7
	2.2.7 Next Button	7
	2.2.8—Stop Button	8
	2.2.9 Playlist Button	8
		_
Chap 3.	Storage Event	9
	3.1 OverView	9
		_
	3.2 Flow	9
	3.2.1 Removing Storage Event	-9
	3.2.2—Inserting Storage Event	9
Chan 4	Known Issues	1
Chap 4.	KHOWH 155de5	-
	41 To Do List	1/

# Chap 1. **Overview**

# 1.1 Overview

This document describes how to use NxAudioPlayer application.

 $Nx Audio P layer\ makes\ audio\ file\ list\ by\ using\ sqlite utils\ that\ reads\ database\ written\ by\ media\ scanner.$ 

 $Nx Audio P layer \ also \ makes \ xml \ file \ that \ stores \ last \ p laying \ information \ to \ p lay \ again \ from \ last \ state.$ 

# 1.2 UI Guide

#### 1.2.1 Features


- Audio file play, seek, pause, and resume
- Make audio file list including USB and SD-card.
- Auto play from last state, if available.
- Shows media information such as artist, thumbnail, and so on, if available.

# 1.2.2 Execute

NxAudioPlayer is executed by clicking icon in the launcher.

When some application is clicked, launcher hides from screen and clicked application appears.



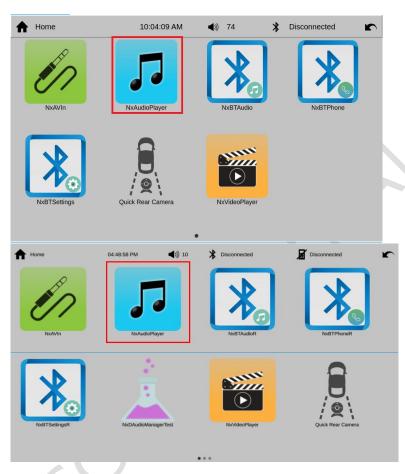

# 1.2.3 UI Details

GUI is shown like below picture after NxAudioPlayer is executed.

 $\label{eq:continuous} % \end{constraints} %$ 




Overview



#### 1.2.4 UI Playlist Details

Playlist UI is shown by clicking playlist button.

List can be scrolled down, and items in list can be played by double-clicking or select(item click) and Ok button.

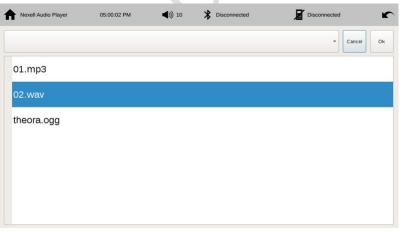

● Nexell Audio Player 09

006 멜로망스 - You.mp3

007 멜로망스 - 욕심 .mp3

008 마마무 - 별이 빛나는 밤 .mp3

009 iKON - 사랑을 했다 (LOVE SCENARIO)

#### 1.3 Flow

# 1.3.1 Application Overall

 $\underline{NxAudioPlayer\ communicates\ through\ NxLauncher}.$ 


NEXELL

Copyright © 2017 Nexell Co.,Ltd. All rights reserved.

**서식 있음:** 표준

 $\underline{RequestVideoFocus\ is\ needed,\ when\ application\ wants\ to\ appear\ on\ screen.}$ 

In particular, to use an Audio Device, must return RequestAudioFocus.

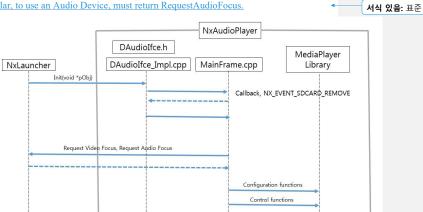

#### 1.3.1


NxAudioPlayer makes IPC server by using libnxdaudioipe to communicate with-NxDAudioManager.

All function about IPC in NxAudioPlayer is from libnxdaudioipe.

All NX\_RequestCommand function should return NX\_REPLY\_DONE.

NX\_REQUEST\_FOCUS\_VIDEO is needed, when application wants to appear on screen.

Especially, NX\_REQUEST\_FOCUS\_AUDIO must return NX\_REPLY\_DONE in order to use Audio Device.

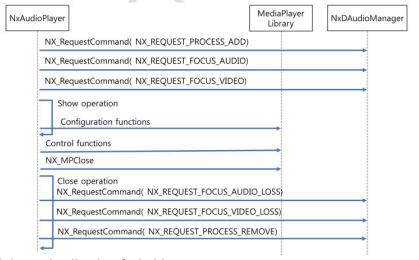

#### 1.3.2 **Application Switching**

Each application has IPC server to communicate with NxDAudioManager.


서식 있음: 들여쓰기: 첫 줄: 0.5 글자


PacpClient is used for changing Z-order of application.

IPC callback ( NX\_REQUEST\_PROCESS\_SHOW) is pended until-

NX\_PacpClientRequestRaise() is done Each application communicates with NxLauncher.

NxLauncher is used for changing Z-order of application-

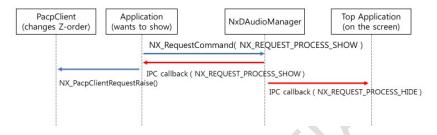

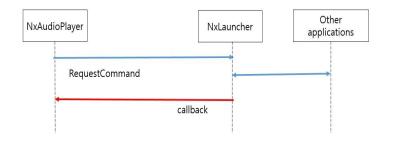



# Chap 2. **GUI Guide**

#### 2.1 Status Bar


NxStatusBar is used for Status Bar.

#### 2.1.1 Home

When Home button clicked, current application disappears by changing launcher's Z-order to top.

In the home button callback function of NxStatusBar, NxAudioPlayer uses NxLauncher to request to display the program. In NxStatusBar's Home button callback function, NxAudioPlayer requests NxDAudioManager to show launcher by using IPC.

#### 2.1.1.1 Flow

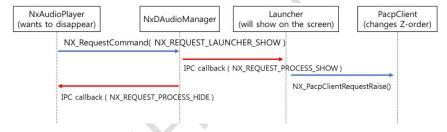




#### 2.1.2 Back

When Back button clicked, NxAudioPlayer closes, and other application(previously top) appears.

In the nearest routine, NxAudioPlayer uses NxLauncher to signal loss of audio focus, loss of video focus, and process removal. In close routine, NxAudioPlayer informs NxDAudioManager of Audio focus loss, Video focus loss, and process remove by using IPC.

#### 2.1.2.1 Flow

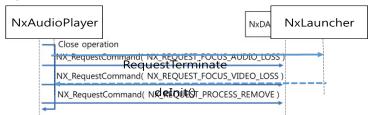

# 2.2 Media Player Control

In NxAudioPlayer application, Media Player library is wrapped by CNX\_MoviePlayer class.

#### 2.2.1 Initialization


NxAudioPlayer must get Audio Focus successfully before initialize Media Player lib.

Media Player Initialization is done by CNX\_MoviePlayer->InitMediaPlayer

 $In it Media Player\ function\ uses\ Media\ Player\ library's\ Configuration\ functions\ in\ following\ order, NX\_MPOpen,\ NX\_MPSetUri,\ NX\_MPGetMediaInfo,\ and\ NX\_MPAddAudioTrack.$ 

All Media Player library functions must return MP\_ERR\_NONE.

#### 2.2.1.1 Flow

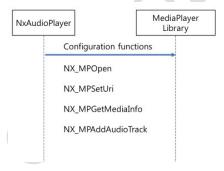


#### 2.2.2 Volume Bar

When Volume Bar is clicked, Bar UI and audio volume are changed to corresponding value.

NX\_MPSetVolume in Media Player library is used.


#### 2.2.2.1 Flow

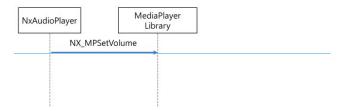

# 2.2.32.2.2 Progress Bar

When Progress Bar is clicked, Bar UI and audio position are changed to corresponding value. NX\_MPSeek in Media Player library is used.

#### 2.2.3.1 2.2.2.1 Flow

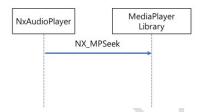

# 2.2.42.2.3 Prev Button

When prev button is clicked, NxAudioPlayer stops playing and plays previous audio file.


Index of audio file list is set to previous audio file.

 $NX\_MPStop$  and  $NX\_MPClose$  in Media Player library are used.

Initialization with previous audio file like above explanation.

NX\_MPPlay in Media Player library is used after Initialization is succeed.

# 2.2.4.1<u>2.2.3.1</u> Flow

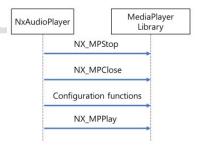

#### 2.2.52.2.4 Play Button

When play button is clicked, NxAudioPlayer plays audio file.

In NxAudioPlayer application, play button sequence contains Initialization of Media Player library


Just after Initialization of Media Player lib is done, NxAudioPlayer updates UI information such as, progress bar, thumbnail, and so on.

If Initialization is failed, NX\_MPClose in Media Player library is called and Initialization is tried again with next audio file in  $\overline{\text{list}}$ .

When NxAudioPlayer is already playing audio file, play button does nothing.

When NxAudioPlayer is in pause, play button just call NX\_MPPlay without Initialization.

#### 2.2.5.12.2.4.1 Flow

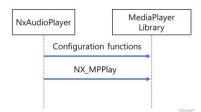


# 2.2.62.2.5 Pause Button

When pause button is clicked, NxAudioPlayer pauses audio playing.

NX\_MPPause in Media Player library is used.

# 2.2.6.12.2.5.1 Flow

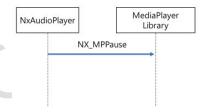

# 2.2.72.2.6 Next Button

When next button is clicked, NxAudioPlayer stops playing and plays next audio file.


Index of audio file list is set to next audio file.

NX\_MPStop and NX\_MPClose in Media Player library are used.

Initialization is done with next audio file like above explanation.

NX MPPlay in Media Player library is used.


# 2.2.7.1 2.2.6.1 Flow

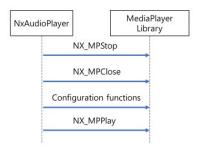

# 2.2.82.2.7 Stop Button

When stop button is clicked, NxAudioPlayer stops playing audio. NX\_MPStop in Media Player library is used.

# 2.2.8.1<sub>2.2.7.1</sub> Flow

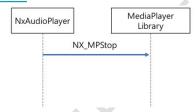

# 2.2.92.2.8 Playlist Button


When playlist button is clicked, NxAudioPlayer shows playlist UI.

If NxAudioPlayer was playing audio, it continues until some audio file is selected.

If file is selected, NxAudioPlayer stops playing audio and plays selected audio file.

#### 2.2.9.12.2.8.1 Flow

The case that file is selected.

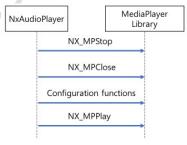

# Chap 3. Storage Event

# 3.1 OverView

NxAudioPlayer detects storage events.

Used storage events are removing external storage(USB, SD-card) and media scan done.

Media scan done event is received, whenever storage status is changed such as inserting and removing.


If removing storage event is received, NxAudioPlayer is closed.


If media scan done event is received, NxAudioPlayer refreshes media file list.

# 3.2 Flow

# 3.2.1 Removing Storage Event


 $\label{eq:nx_event_special} NX\_EVENT\_USB\_REMOVE \ are \ used.$ 

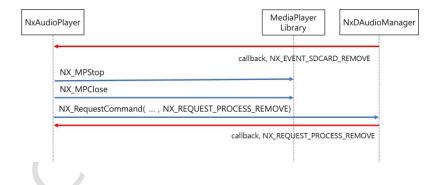

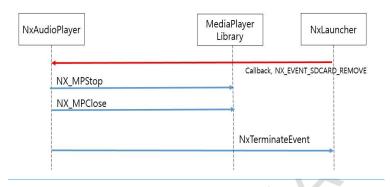

# 3.2.2 Inserting Storage Event

When NX\_EVENT\_MEDIA\_SCAN\_DONE is received, media file list is refreshed.

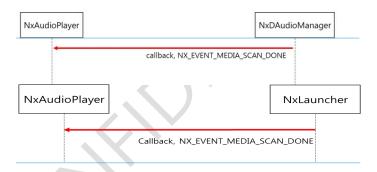

# Chap 4. Known Issues

# 4.1 To Do List

Supporting Multi Language for audio information and playlist UI.

Storage Event might be improvable.

