

### **EPSON OPOS ADK for .NET Manual**

# **Application Development Guide**

LineDisplay (DM-D110 / D210)

Version 1.14.6 Dec. 2017

#### Notes

- (1) Reproduction of any part of this documentation by any means is prohibited.
- (2) The contents of this documentation are subject to change without notice.
- (3) Comments and notification of any mistakes in this documentation are gratefully accepted.
- (4) This software cannot be used with other equipment that the specified.
- (5) EPSON will not be responsible for any consequences resulting from the use of any information in this documentation.

#### **Trademarks**

Microsoft®, Windows®, Windows Server® and Windows Vista® are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. IBM® and PC/AT® are trademarks or registered trademarks of International Business Machines Corporation in the United States, other countries, or both. Epson® and ESC/POS® are registered trademarks of Seiko Epson Corporation. Other product and company names used herein are for identification purposes only and may be trademarks or registered trademarks of their respective companies. Epson disclaims any and all rights in those marks.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by SEIKO EPSON is under license. Other trademarks and trade names are those of their respective owners.

## **Contents**

Chapter 1 Introduction 1
1.1 Terminology1
Chapter 2 Before Using LineDisplay 2
2.1 Device Setting
2.2 Notes and Restrictions
2.2.1 General
2.2.2 DM-D210 Only
Chapter 3 Properties and Methods 4
3.1 Properties4
3.1.1 CapPowerReporting property4
3.1.2 PowerState property4
3.1.3 DeviceEnabled property4
3.1.4 BlinkRate property5
3.1.5 CharacterSet property5
3.1.6 DeviceBrightness property5
3.1.7 DeviceWindows property5
3.2 Methods6
3.2.1 Claim method6
3.2.2 CheckHealth method6
3.2.3 DirectIO method8
3.2.4 ResetStatistics Method9
3.2.5 ResetStatistic Method
3.2.6 RetrieveStatistics Method10
3.2.7 RetrieveStatistic Method11
3.2.8 UpdateStatistics Method12
3.2.9 UpdateStatistic Method13
3.2.10 CreateWindow method14
3.2.11 DisplayText method14
3.2.12 DisplayTextAt method14
3.2.13 DefineGlyph method14
3.2.14 ReadCharacterAtCursor method15

Appendix A Revision history	<u> 16</u>
A.1 EPSON OPOS ADK for .NET 1.14.6	16
A.2 EPSON OPOS ADK for .NET 1.12.26	16
A.3 EPSON OPOS ADK for .NET 1.12.23	16
A.4 EPSON OPOS ADK for .NET 1.12	16
A.5 EPSON OPOS ADK for .NET 1.11	16
A.6 EPSON OPOS ADK for .NET 1.9	16
A.7 EPSON OPOS ADK for .NET 1.8	16
Appendix B SetupPOS Settings	18
B.1 "Connection Type" combobox	18
B.2 "Connected Printer/PC" combobox	19
Appendix C Hardware Settings	20
C.1 DM-D110/ DM-D210	20
Appendix D Default Values of Properties	22
D.1 DM-D110	22
D.2 DM-D210	24
Appendix E DeviceStatistics	26

## **Chapter 1 Introduction**

This section explains how to use LineDisplay when using EPSON OPOS ADK for .NET, including any related information and special notes regarding the device.

For details on the POS for .NET API, refer to the "UnifiedPOS Retail Peripheral Architecture Version 1.14.1" specification and the MSDN "POS for .NET v1.14.1 SDK Documentation": http://www.omg.org/retail/unified-pos.htm

https://msdn.microsoft.com/en-us/library/bb429024(v=winembedded.4).aspx

## 1.1 Terminology

- "Unified POS Retail Peripheral Architecture Version 1.14.1" may be abbreviated as "UPOS".
- "Microsoft POS for .NET" may be abbreviated as "POS.NET".
- "EPSON OPOS ADK for .NET Version 1.14.6" may be abbreviated as "OPOS.NET".
- "LineDisplay" may be abbreviated as "the device".
- "The ServiceObject of LineDisplay provided by OPOS.NET" may be abbreviated as "ServiceObject".
- "ErrorCode properties of PosControlException" may be abbreviated as "ErrorCode".
- "ErrorCodeExtended properties of PosControlException" may be abbreviated as "ErrorCodeExtended".
- "Exception" indicates "PosControlException".
- The EPSON original device constant used with this device is defined in "jp.co.epson.uposcommon.EpsonUPOSConst" and "jp.co.epson.uposcommon.EpsonLineDisplayConst".

## **Chapter 2 Before Using LineDisplay**

This chapter explains how to set up LineDisplay, as well as notes and restrictions on using it.

### 2.1 Device Setting

After checking the hardware model and the hardware settings, select the correct device using the SetupPOS utility. Refer to "Appendix C Hardware settings" for information on setting the hardware, and "Appendix B SetupPOS Settings" for information on how to use the SetupPOS utility.

#### 2.2 Notes and Restrictions

#### 2.2.1 General

- The flow control of the device supports only DTR/DSR.
- As the device is not equipped with the power recovery function, when rebooting, the Claim method is to be executed after the Release method.
- When the device is to be rebooted, turn off the power supply for at least 5 second before powering up.
- In the event that the device is rebooted in the midst of executing methods involved in transmitting to device, the data displayed may be corrupted.
- Because data transmitted by utilizing the DISP\_DI\_OUTPUT command of the DirectIO method is not checked by the ServiceObject, the ServiceObject may be obstructed and may lead to unexpected results.
- All the character codes (Unicode) expressed in strings are converted to single-byte codes based on the values set in the **CharacterSet** property. When doing byte-code conversions, sufficient care should be exercised if extended ASCII codes are specified.
- If the same port where POSPrinter is connected is used, the communication conditions of POSPrinter and LineDisplay should be adjusted.
- If used with POSPrinter connected, the status of the LineDisplay may become
  OFFLINE depending on the status of the POSPrinter. In this state, the methods
  involved in transmitting to the device (such as DisplayText method) will fail.

- If used with POSPrinter connected and when the Display connector of POSPrinter is used, set the DIP switch of "LineDisplay connection status" of POSPrinter or the memory switch to ON.
- If the LineDisplay is connected to IR-700 using the display connector, specify stand-alone connection in the COM4 port of SetupPOS setting.
- The device does not support blinking of display by character units. The setting and cancellation of blinking display apply to the whole screen.
- The escape sequence (ESC|kC) for performing blinking display is ignored.
   Similarly, the escape sequence (ESC|N) for canceling blinking display does not cancel out the blinking of display.
- The setting of the Attribute parameter of the DisplayText(At) method executed in the marquee initialization mode is reflected when coming out of the marquee initialization mode.

#### 2.2.2 DM-D210 Only

Periods and commas between characters are not supported.

## **Chapter 3 Properties and Methods**

## 3.1 Properties

The properties that differ from those functions described in UPOS are shown below.

#### 3.1.1 CapPowerReporting property

#### **Description**

The notification capability of the device is identified.

This property is set to one of the following values.

Value	Meaning
PowerReporting.Standard	ServiceObject can determine between
	and provide notification of the two power
	statuses: OFF_OFFLINE (the device is
	turned off or offline) and ONLINE.

#### 3.1.2 PowerState property

#### **Description**

The power supply status of the device is identified.

However, if the LineDisplay is connected to the POSPrinter, the value of this property may get updated depending on the power status of the POSPrinter.

#### 3.1.3 DeviceEnabled property

#### **Description**

When set to "true", the operation of the marquee mode and teletype mode is resumed based on the properties set at that time.

When set to "false", the operation of the marquee mode and teletype mode is halted.

#### 3.1.4 BlinkRate property

#### **Description**

The blinking synchronization of the device is set.

The values that can be set for this property are positive numbers of 1 and above. Actually, the value is corrected to the nearest setting value supported by the device. The correction is performed during the setting of the **BlinkRate** property. On this occasion the setting value after correction is reflected also in the blinking cycle of the device.

The correction methods for the setting value are as follows:

- Setting values are corrected to the nearest value that is divisible by 100. For example, the values of 50 – 149 are corrected to 100, the values of 150 – 249 to 200, and so on. However, the values of 1 – 49 are corrected to 100.
- The largest setting value after correction is 25400. If the value is set to greater than 25400, it is corrected to 25400.

#### 3.1.5 CharacterSet property

#### **Description**

The values that can be set are limited to the values found in the **CharacterSetList** property. If the property value is set to 932, the display for ASCII code 0x5C is changed to the yen symbol "¥".

#### 3.1.6 DeviceBrightness property

#### **Description**

The device brightness is set in terms of percentages from 0 to 100.

The relation between brightness set at the device and the property setting value is as follows:

DeviceBrightness property	Device brightness	
0 – 19	0%	
20 – 39	20%	
40 – 59	40%	
60 – 79	60%	
80 – 100	100%	

#### 3.1.7 DeviceWindows property

#### **Description**

This property is always set to 4.

#### 3.2 Methods

The methods that differ from those functions described in UPOS are shown below.

#### 3.2.1 Claim method

#### **Description**

When the **Claim** method is executed, the connection of the port to which the device is connected, and the acquisition and setting of device information are performed.

If the acquisition and setting of device information, or port connection fails, an exception is thrown.

The execution of the **Claim** method after executing the **Release** method redraws the contents that were displayed when the **Release** method was executed. However, if the **Close** method or the **Open** method was executed prior to executing the **Claim** method, there is no redrawing.

For pass-through connections, a time-out might occur causing an OFFLINE error to be returned for the **Claim** method. This is affected by the length of the serial cable, and occurs more frequently with longer cables (3m or longer). If this error occurs, execute the **Claim** method again.

#### 3.2.2 CheckHealth method

#### **Description**

This ServiceObject supports only "HealthCheckLevel.Interactive".

It can be executed when all the windows are in Immediate mode.

When "HealthCheckLevel.Interactive" is executed, the following dialog box appears.



The operations when the respective buttons are clicked are as follows:

#### • [Display] button

It performs testing.

The following character strings are displayed to the device:

- Interactive HCheck !!
- DeviceName=device name

#### • [Close] button

It ends the processing of CheckHealth method.

After executing the method, the following values can be acquired in the **CheckHealthText** property.

And besides, the following value is retrieved as the returned value of method.

Value	Meanin	g	
Interactive HCheck: Canceled	Ends	CheckHealth	without
	doing a	nything.	
Interactive HCheck: Complete	eck: Complete Ends CheckHealth after the		r the last
	operation	on ends normally	<b>y</b> .
Interactive HCheck: Error - < Message>	Check: Error - < Message > Ends CheckHealth after the		r the last
	operation	on ends with a	an error.
	The cor	ntent of the error	appears
	as a Me	essage.	

#### 3.2.3 DirectIO method

#### **Description**

The **DirectIO** method can be used when the **DeviceEnabled** property is "true".

The function that the **DirectIO** method supports is as follows:

Command	Outline of functions
DISP_DI_OUTPUT	Specified codes are transmitted to the
	device.

#### DISP\_DI\_OUTPUT command

Parameter		
command	DISP_DI_OUTPUT	
data	Not used	
object(byte[] type)	Transmission data	

#### **Description**

It sends the data specified in the *object* parameter directly to device. It is to be used only when sending ESC/POS commands to the device. ServiceObject does not check data sent through this command. ESC/POS commands such as those that change the amount of line feed or font size obstruct the operations of ServiceObject and should not be sent.

#### 3.2.4 ResetStatistics Method

#### Parameter type: Microsoft.PointOfService.StatisticCategories

#### **Parameter**

Microsoft.PointOfService.StatisticCategories

Specify one of the following.

- StatisticCategories.Upos
- StatisticCategories.Manufacturer
- StatisticCategories.All

#### **Description**

Of the items included in the specified category, only the items for which O appeared for the permission reset in "Appendix-E DeviceStatistics" are reset.

All the statistics supported by the ServiceObject are defined in UPOS. If "StatisticCategories.Manufacturer" is specified, nothing is reset.

Parameter type: String[]

#### **Parameter**

String[]

An array of the item names to reset

#### **Description**

Of the items included in the specified category, only the items for which O appears for the reset permission in "Appendix-E DeviceStatistics" are reset when "U\_", "M\_", or an empty string is specified for item names.

If an illegal item name or non-resettable item name is included, this method reports an error. When this happens, correctly specified items are also not reset.

All the statistics supported by the ServiceObject **Error! Unknown document property name.** are defined in UPOS. If "M\_" is specified, nothing is reset.

#### 3.2.5 ResetStatistic Method

#### **Description**

Of the items included in the specified category, only the items for which O appears for the reset permission in "Appendix-E DeviceStatistics" are reset when "U\_", "M\_", or an empty string is specified for item names.

If an illegal item name or non-resettable item name is specified, this method reports an error.

All the statistics supported by the ServiceObject **Error! Unknown document property name.** are defined in UPOS. If "M\_" is specified, nothing is reset.

#### 3.2.6 RetrieveStatistics Method

Parameter type: Microsoft.PointOfService.StatisticCategories

#### **Parameter**

Microsoft.PointOfService.StatisticCategories

Specify one of the following.

- StatisticCategories.Upos
- StatisticCategories.Manufacturer
- StatisticCategories.All

#### **Description**

The Statistics supported by ServiceObject are all defined in UPOS. If "StatisticCategories.Manufacturer" is specified, the minimum information specified by UPOS (the 4 items; UPOS version, manufacturer name, device name, and device category) is acquired.

#### Parameter type: String[]

#### **Parameter**

String[]

An array of the item names to retrieve

#### **Description**

If an illegal item name is included, this method reports an error.

The Statistics supported by ServiceObject are all defined in UPOS. If "M\_" is specified, the minimum information specified by UPOS (the 4 items; UPOS version, manufacturer name, device name, and device category) is acquired.

#### • Parameter type: None

#### **Description**

The information of all defined items is retrieved.

#### 3.2.7 RetrieveStatistic Method

#### **Description**

If an illegal item name is included, this method reports an error.

If multiple item names separated by commas are specified (UPOS Specification), an error is reported.

The Statistics supported by ServiceObject are all defined in UPOS. If "M\_" is specified, the minimum information specified by UPOS (the 4 items; UPOS version, manufacturer name, device name, and device category) is acquired.

#### 3.2.8 UpdateStatistics Method

#### Parameter type: Microsoft.PointOfService.Statistic[]

#### **Parameter**

Microsoft.PointOfService.Statistic[]

**Specifies** 

Microsoft.PointOfService.Statistic array for which item names and new values have been set.

#### **Description**

Of the items included in the specified category, only the items for which O appears for the update permission in "Appendix-E DeviceStatistics" are updated when "U\_", "M\_", or an empty string is specified for item names. If an illegal item name or non-updatable item name is included, this method reports an error. In this case, correctly specified items are also not updated.

The Statistics supported by ServiceObject are all defined by UPOS. If "M\_" is specified, nothing is updated.

#### Parameter type: Microsoft.PointOfService.StatisticCategories

#### **Parameter**

Microsoft.PointOfService.StatisticCategories

Specify one of the following.

- StatisticCategories.Upos
- •StatisticCategories.Manufacturer
- StatisticCategories.All

Object

Specify the new value after updating.

#### **Description**

Of the items included in the specified category, only the items for which O appeared for the update permission in "Appendix-E DeviceStatistics" are updated.

All the statistics supported by the ServiceObject are defined in UPOS. If "StatisticCategories.Manufacturer" is specified, nothing is update.

#### 3.2.9 UpdateStatistic Method

#### **Description**

Of the items included in the specified category, only the items for which O appears for the update permission in "Appendix-E DeviceStatistics" are updated when "U\_", "M\_", or an empty string is specified for item names. If an illegal item name or non-updatable item name is specified, this method reports an error.

The Statistics supported by ServiceObject are all defined by UPOS. If "M\_" is specified, nothing is updated.

#### 3.2.10 CreateWindow method

#### Description

It can create a new window.

The theoretical size of window that can be created is up to 50 lines vertically and 200 columns horizontally.

#### 3.2.11 DisplayText method

#### Description

It can display characters.

The escape sequence (ESC|kC) that enables blinking display is ignored. The escape sequence (ESC|N) that cancels the display does not cancel

blinking display.

### 3.2.12 DisplayTextAt method

#### **Description**

It can display characters starting from specified position.

The escape sequence (ESC|kC) that enables blinking display is ignored.

The escape sequence (ESC|N) that cancels the display does not cancel blinking display.

#### 3.2.13 DefineGlyph method

#### **Description**

It performs download registration of character for the specified character code.

The timing for the reflection of download registration is as follows: It differs according to the number of times registration was performed.

- If the character being registered has not been registered at least once before, the registration is reflected from the next display onwards.
- If the character being registered has been registered at least once before, it is immediately reflected to the display at the time of registration. However, the reflection to display is immediate only when the character going through download registration is on display.

#### 3.2.14 ReadCharacterAtCursor method

#### Description

It reads the character displayed at the current cursor position, and returns the character code.

If character information is not present at the cursor position, it returns 127 (decimal number).

## Appendix A Revision history

#### A.1 EPSON OPOS ADK for .NET 1.14.6

(1) Microsoft POS for .NET 1.14.1 is supported.

#### A.2 EPSON OPOS ADK for .NET 1.12.26

(1) DM-D110/DM-D210(TM Network Connection) is supported.

#### A.3 EPSON OPOS ADK for .NET 1.12.23

(1) DM-D110/DM-D210(TM USB Connection) is supported.

#### A.4 EPSON OPOS ADK for .NET 1.12

(1) Microsoft POS for .NET 1.12 is supported.

#### A.5 EPSON OPOS ADK for .NET 1.11

(1) Microsoft POS for .NET 1.11 is supported.

#### A.6 EPSON OPOS ADK for .NET 1.9

(1) Microsoft POS for .NET 1.1 is supported.

### A.7 EPSON OPOS ADK for .NET 1.8

POS Device driver complied with Microsoft POS for .NET 1.0 specification has been provided.

This version has been created based on EPSON OPOS ADK 2.40.

The following shows the difference between this version and EPSON OPOS ADK 2.40.

#### **Differences from EPSON OPOS ADK 2.40**


- (1) The ErrorCode and ErrorCodeExtended that are received as notification of exceptions have been reviewed.
- (2) Commands that can be used in the **DirectIO** method are reorganized. For this reason, some have been deleted.
- (3) The DeviceEnabled property's status has been deleted from the issuance

16

Application Development Guide LineDisplay

- condition of queued event. As a result, even if the **DeviceEnabled** property's status is false, event notification may still be produced.
- (4) When Open method is executed, communication control class instance is generated. If communication control class instance cannot be generated, an exception is thrown when the Open method is executed.
- (5) The Internal and External of the CheckHealth method has been changed to not supported.
- (6) The theoretical window size that can be created by the **CreateWindow** method has been changed to 50 rows vertically and 200 columns horizontally.
- (7) Character codes that are supported have been changed. As a result, 254, 255, and 998 have been deleted from the **CharacterSetList** property.
- (8) When RefreshWindow method within the marquee initialization mode is executed, the contents that are redrawn on screen have been changed. The change of display contents due to DisplayText(At) method or ClearText method and such others executed within the marquee initialization mode is reflected to internal data at the time of coming out of the marquee initialization mode. As a result, the changes done through executing DisplayText(At) method and such others within the marquee initialization mode are not reflected to the display even if RefreshWindow method is executed.
- (9) The handling method of the display attribute (Attribute parameter) has been changed.
  - Even if the display attribute has been changed by **DisplayText(At)** method in other windows, the change to display attribute is not performed. The display attribute used when coming out of the marquee initialization mode is not the display attribute of the **DisplayText(At)** method executed at the end for all windows. The display attribute of the **DisplayText(At)** method executed at the end of the marquee initialization mode window is used.

## **Appendix B SetupPOS Settings**

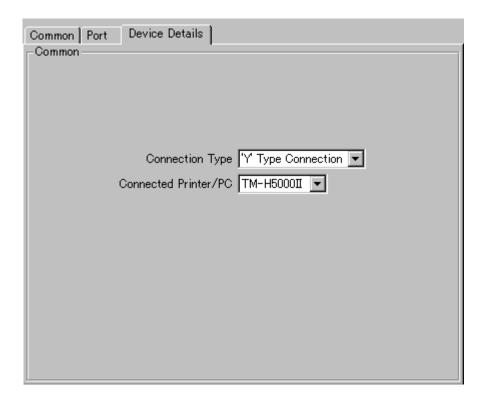

# B.1 "Connection Type" combobox Description

It sets the connection type of LineDisplay.

Item	Meaning
Stand Alone	LineDisplay is used as a single unit.
Pass Through	LineDisplay is used by connecting
	through pass-through to POSPrinter
	or PC.
'Y'-Type Connection	LineDisplay is used by connecting
	through Y-connection to POSPrinter
	or PC.
TM USB Connection	It means connecting DM-D110/D210
	to USB Type-A port of the printer
	directly.
TM Network Connection	TM Network Connection means
40	connecting DM-D110/D210 to built-in

18

Application Development Guide LineDisplay

Ethernet(TM-J7200/TM-J7700/TM-H 6000Vonly).

 If set to Pass Through, 'Y'-Type Connection or TM USB Connection

"Connected Printer/PC" combobox is displayed, and printer or PC needs to be set.

**Default:** Stand Alone

### **B.2** "Connected Printer/PC" combobox

#### **Description**

It sets the POSPrinter or PC used as the host device.

If Pass Through or 'Y'-Type Connection is set in the "Connection Type" combobox, this combobox is displayed.

When using LineDisplay on a USB-connected printer when multiple printers have been registered, select the proper "connected port" in the "Port" configuration window.

Default: TM-6000III<sup>Note1</sup>

 $^{\text{Note1}}$  In case using USB port, TM-T88VI is chosen.

## **Appendix C Hardware Settings**

#### C.1 DM-D110/ DM-D210

### DIP switch settings

Set the DIP switches of this device as follows:

DIP-SW1

No.	Setting	
1	OFF	Recommended
2	OFF	Fixed as OFF
3	OFF	Note 1
4	OFF	Note 1
5	ON	Note 2
6	OFF	Note 2
7	ON	Note 2
8	OFF	Fixed as OFF
9	OFF	Fixed as OFF Note 3
10	OFF	Fixed as OFF Note 3

 $^{\rm Note1}$  Numbers 3 and 4 of DIP-SW1 set the parity

DIP Switch 1 Parity Settings

SW No.	Function	ON	OFF	Default
1-3	Parity check	Parity	No parity	OFF
1-4	Parity selection	Even parity	Odd parity	OFF

 $^{\text{Note2}}$  Numbers 5 – 7 of DIP-SW1 set the communication speed.

DIP Switch 1 Transmission Speed Switching

Dir Owiter i Transmission opeca owitering			
SW1-5	SW1-6	SW1-7	Baud Rate (bps)
ON	ON	ON	2400
OFF	ON	ON	4800
ON	OFF	ON	9600
OFF	OFF	ON	19200
ON	ON	OFF	38400
OFF	ON	OFF	57600
ON	OFF	OFF	115200
OFF	OFF	OFF	(reserved)

20

Note3 Regarding DIP-switch 9,10, some products don't have it.

In case the product has DIP-switch 9,10, please set them to OFF.

#### • For D110, D210

In case they use USB port, please set as follows.

SW1-5	SW1-6	SW1-7
OFF	OFF	ON

#### • TM USB Connection/TM Netwok Connection

In case they use TM USB Connection/TM Netwok Connection, please set as follows.

SW1-5	SW1-6	SW1-7
ON	OFF	ON

#### Jumper switch settings

When using with standalone connection or pass-through connection, set the jumper switches of the option stand as follows:

Connection type	JP1 settings	JP2 settings
Standalone connection	Short 2 and 3	Short 2 and 3
Pass-through connection	Short 1 and 2	Short 1 and 2

# **Appendix D Default Values of Properties**

### D.1 DM-D110

The default values of the properties of this device are shown below.

Property	Setting value / Defined value	Acceptable setting values	
CapCompareFirmwareVersion	false	-	
CapPowerReporting	PowerReporting.Standard	-	
CapStatisticsReporting	true	-	
CapUpdateFirmware	false	-	
CapUpdateStatistics	true	-	
CheckHealthText	(65)	-	
Claimed	false	-	
DeviceEnabled	false	true, false	
FreezeEvents	false	true false	
PowerNotify	PowerNotifycation.Disabled	PowerNotifycation.Disabled, PowerNotifycation.Enabled	
PowerState	PowerState.Unknown	-	
State	ControlState.Closed	-	
DeviceDescription	"EPSON DM-D110 LineDisplay"	-	
DeviceName	"DM-D110"	-	
CapBlink	DisplayBlink.All	-	
CapBitmap	false	-	
CapBlinkRate	true	-	
CapBrightness	true	-	
CapCharacterSet	CharacterSetCapability.Kana	-	
CapCursorType	DisplayCursors.None	-	
CapCustomGlyph	true	-	
CapDescriptors	false	-	
CapHMarquee	true	-	
CapICharWait	true	-	
CapMapCharacterSet	false	-	
CapReadBack	DisplayReadBack.Single	-	
CapReverse	DisplayReverse.Each	-	
CapScreenMode	false	-	
CapVMarquee	false	-	
BlinkRate	1600	1 and above	
CharacterSet	437	Any of CharacterSetList	

CharacterSetList	437, 850, 852, 858, 860, 863, 865, 932, 999, 1252	866,
Columns	20	-
CurrentWindow	0	0 to 4
CursorColumn	0	Within the range of 0 to Columns Property
CursorRow	0	Within the range of 0 to (Rows Property - 1)
CursorType	DisplayCursors.None	-
CursorUpdate	true	true false
CustomGlyphList	0x20, 0x7e	-
DeviceBrightness	100	0 to 100
DeviceColumns	20	-
DeviceDescriptors	0	-
DeviceRows	2	-
DeviceWindows	4	-
GlyphHeight	7	-
GlyphWidth	5	-
InterCharacterWait	0	0 and above
MapCharacterSet	false	-
MarqueeFormat	DisplayMarqueeFormat.Walk	DisplayMarqueeFormat.Walk, DisplayMarqueeFormat.Place
MarqueeRepeatWait	0	0 and above
MarqueeType	DisplayMarqueeType.None	DisplayMarqueeType.None, DisplayMarqueeType.Init, DisplayMarqueeType.Left, DisplayMarqueeType.Right
MarqueeUnitWait	0	0 and above
MaximumX	0	-
MaximumY	0	-
Rows	2	-
ScreenMode	0	0
ScreenModeList	2, 20	-

## D.2 DM-D210

The default values of the properties of this device are shown below.

Property	Setting value / Defined value	Acceptable setting values	
CapCompareFirmwareVersion	false	-	
CapPowerReporting	PowerReporting.Standard	-	
CapStatisticsReporting	true	-	
CapUpdateFirmware	false	-	
CapUpdateStatistics	true	-	
CheckHeathText	(65)	-	
Claimed	false	-	
DeviceEnabled	false	true, false	
FreezeEvents	false	true, false	
PowerNotify	PowerNotifycation.Disabled	PowerNotifycation.Disabled, PowerNotifycation.Enabled	
PowerState	PowerState.Unknown	-	
State	ControlState.Closed	-	
DeviceDescription	"EPSON DM-D210 LineDisplay"	-	
DeviceName	"DM-D210"	-	
CapBlink	DisplayBlink.All	-	
CapBitmap	false	-	
CapBlinkRate	true	-	
CapBrightness	true	-	
CapCharacterSet	CharacterSetCapability.Kana	-	
CapCursorType	DisplayCursors.None	-	
CapCustomGlyph	true	-	
CapDescriptors	true	-	
CapHMarquee	true	-	
CapICharWait	true	-	
CapMapCharacterSet	false	-	
CapReadBack	DisplayReadBack.Single	-	
CapReverse	DisplayReverse.Each	-	
CapScreenMode	false	-	
CapVMarquee	false	-	
BlinkRate	1600	1 and above	
CharacterSet	437	Any of CharacterSetList	

CharacterSetList	437, 850, 852, 858, 860, 863, 865, 866, 932, 999, 1252	-	
Columns	20	-	
CurrentWindow	0	0 to 4	
CursorColumn	0	Within the range of 0 to Columns Property	
CursorRow	0	Within the range of 0 to (Rows Property - 1)	
CursorType	DisplayCursors.None	-	
CursorUpdate	true	true, false	
CustomGlyphList	0x20, 0x7e	-	
DeviceBrightness	100	0 to 100	
DeviceColumns	20	-	
DeviceDescriptors	20	-	
DeviceRows	2	-	
DeviceWindows	4	-	
GlyphHeight	7	-	
GlyphWidth	5	-	
InterCharacterWait	0	0 and above	
MapCharacterSet	false	-	
MarqueeFormat	DisplayMarqueeFormat.Walk	DisplayMarqueeFormat.Walk, DisplayMarqueeFormat.Place	
MarqueeRepeatWait	0	0 and above	
MarqueeType	DisplayMarqueeType.None	DisplayMarqueeType.None, DisplayMarqueeType.Init, DisplayMarqueeType.Left, DisplayMarqueeType.Right	
MarqueeUnitWait	0	0 and above	
MaximumX	0	-	
MaximumY	0	-	
Rows	2	-	
ScreenMode	0	0	
ScreenModeList	2, 20	-	

# **Appendix E DeviceStatistics**

The summary for the Statistics function of the device is shown.

XML definition name	Description	Reset Permission	Update Permission
UnifiedPOSVersion	UPOS version	×	×
DeviceCategory	Device category	×	×
ManufactureName	Manufacturer	×	×
ModelName	Device name	×	×
SerialNumber	Serial number	×	×
ManufactureDate	Manufacturing date	×	×
MechanicalRevision	Device revision	×	×
FirmwareRevision	Firmware version	×	×
Interface	Interface	×	×
InstallationDate	Installation date	×	×
HoursPoweredCount	Length of time in operation	0	0
CommunicationErrorCount	Communication error count	0	0
OnlineTransitionCount	Number of times displayed	0	0

O:Permitted ×:Not permitted