



Master Thesis

Design and Implementation of a Model CPU with Basic Logic Chips and related Development Environment for Educational Purposes

created by
Niklas Schelten
Matrikel: 376314

First examiner: Prof. Dr.-Ing. Reinhold Orglmeister,

Chair of Electronics and Medical Signal Processing,

Technische Universität Berlin

Second examiner: Prof. Dr.-Ing. Clemens Gühmann,

Chair of Electronic Measurement and Diagnostic Technology,

Technische Universität Berlin

Supervisor: Dipl.-Ing. Henry Westphal,

Tigris Elektronik GmbH

Eidesstattliche Erklärung

Hiermit erkläre ich, dass ich die vorliegende Arbeit selbstständig und eigenhändig sowie ohne unerlaubte fremde Hilfe und ausschließlich unter Verwendung der aufgeführten Quellen und Hilfsmittel angefertigt habe.

Contents

| 1 | Intr | oductio | on | 1 |
|---|------|----------|---|----|
| | 1.1 | Backg | round | 1 |
| | | 1.1.1 | Short History on Computing | 1 |
| | | 1.1.2 | Technology Selection for the Educational Digital Computer | |
| | | | (EDiC) | 3 |
| | | 1.1.3 | Workings of Transistor-transistor logic (TTL) | 4 |
| | 1.2 | Thesis | Structure | 6 |
| 2 | Arcl | nitectui | re | 7 |
| | 2.1 | Design | Decisions | 7 |
| | | 2.1.1 | 8 bit bus width | 7 |
| | | 2.1.2 | Datapath Architecture - Multicycle CISC | 8 |
| | | 2.1.3 | Single-Bus Oriented | 9 |
| | 2.2 | Modul | les | 10 |
| | | 2.2.1 | Arithmetic Logic Unit (ALU) | 10 |
| | | 2.2.2 | Register File | 13 |
| | | 2.2.3 | Program Counter (PC) & Instruction Register | 13 |
| | | 2.2.4 | Control Logic | 14 |
| | | 2.2.5 | Memory | 15 |
| | | | 2.2.5.1 Memory Mapped Input / Output (I/O) | 15 |
| | | | 2.2.5.2 Stack Implementation | 15 |
| | | | 2.2.5.3 Addressing Logic | 16 |
| | | 2.2.6 | Input & Output | 17 |
| | | 2.2.7 | Clock, Reset & Debugging | 17 |
| | 2.3 | Contro | ol Signals | 18 |
| | 2.4 | Final | Instruction Set | 20 |
| | | 2.4.1 | ALU operations | 20 |
| | | 2.4.2 | Memory operations | 21 |
| | | 2.4.3 | Miscellaneous operations | 24 |

| 3 | Soft | ware D | evelopme | ent Environment | 25 | | |
|---|------|---------|---------------------------|-------------------------------|----|--|--|
| | 3.1 | Microo | ode Gene | eration | 25 | | |
| | 3.2 | Assem | bler | | 29 | | |
| | | 3.2.1 | Calling of | conventions | 31 | | |
| | | 3.2.2 | Available | e Instructions | 32 | | |
| | | | 3.2.2.1 | ALU Instructions | 33 | | |
| | | | 3.2.2.2 | Memory Instructions | 34 | | |
| | | | 3.2.2.3 | Miscellaneous Instructions | 35 | | |
| | | 3.2.3 | Constan | ts | 36 | | |
| | | | 3.2.3.1 | Value constants | 36 | | |
| | | | 3.2.3.2 | Labels | 36 | | |
| | | | 3.2.3.3 | String constants | 37 | | |
| | | 3.2.4 | File imp | orts | | | |
| | | 3.2.5 | _ | Definition for VS Code | | | |
| 4 | FPC | SA Mod | lel | | 43 | | |
| | 4.1 | FPGA | Backgrou | und | 43 | | |
| | 4.2 | | _ | | | | |
| | | 4.2.1 | | ge Choice | | | |
| | | 4.2.2 | | e Logic in FPGAs | | | |
| | 4.3 | Behavi | Behavioral Implementation | | | | |
| | 4.4 | | evel Implementation | | | | |
| | | 4.4.1 | | | | | |
| | | | 4.4.1.1 | EEPROM | | | |
| | | | 4.4.1.2 | tri-state Ports | | | |
| | | | 4.4.1.3 | RAM and EEPROM clock | | | |
| | | | 4.4.1.4 | Assignments | | | |
| | | | 4.4.1.5 | Display Driver | | | |
| | | 4.4.2 | | O Extension Debugging | | | |
| 5 | Har | dware [| Design | | 57 | | |
| | 5.1 | | _ | | | | |
| | | 5.1.1 | | Comparison | | | |
| | | 5.1.2 | | iver | | | |
| | | 5.1.3 | | Counter & Instruction EEPROMs | | | |
| | | 5.1.4 | _ | | | | |
| | | 5.1.5 | | Logic | | | |
| | | 5.1.6 | | nd Reset | | | |
| | | 5.1.7 | | I/O | | | |
| | | J | | , | | | |

| | | 5.1.8 | Register Set and ALU output | 62 | | |
|-----|--|---------|------------------------------------|----|--|--|
| | | 5.1.9 | Combinatorial ALU | 62 | | |
| | 5.2 | Placing | g and Routing | 62 | | |
| | 5.3 | Timing | g Analysis | 64 | | |
| 6 | Initi | al Hard | ware Test & Component Verification | 73 | | |
| | 6.1 | Test A | dapter | 73 | | |
| | 6.2 | Potent | ial Complications | 74 | | |
| | | 6.2.1 | Shifter - Carry Flag | 74 | | |
| | | 6.2.2 | Clock jitter | 76 | | |
| | | 6.2.3 | Driving Bus High | 77 | | |
| | | 6.2.4 | UART Transceiver lost data | 79 | | |
| 7 | Con | clusion | and Future Work | 83 | | |
| Ac | ronyı | ms | | 85 | | |
| Lis | t of | Figures | | 90 | | |
| Lis | t of | Tables | | 91 | | |
| Lis | st of | Code E | xamples | 94 | | |
| Bil | bliogr | aphy | | 95 | | |
| Α | Full | Schem | atics of the EDiC | 99 | | |
| В | 3 Collection of assembler programs 115 | | | | | |

Niklas Schelten iii

Abstract

This thesis covers stuff.

Kurzfassung

Diese Arbeit umfasst Zeugs.

1 Introduction

This thesis covers the development and engineering process of the Educational Digital Computer (EDiC) pictured in figure 1.1. It is a completely novel Central Processing Unit (CPU) architecture built to visualize and show the fundamental workings of any CPU. The EDiC can execute over half a million instructions per second and also features step-by-step debugging as well as breakpoint capabilities for better understanding of how CPUs work. All components can be tested individually with the help of dedicated test adapters and, therefore, Integrated Circuit (IC) failures can be tracked down and fixed easily. Additionally to the hardware built, the project includes an open source development environment including an assembler, tools to modify the micro-code and also Field Programmable Gate Array (FPGA) simulation and emulation of the hardware [11].

1.1 Background

1.1.1 Short History on Computing

The history of computing hardware goes back to ancient times with devices like the abacus which simplifies calculations like additions or multiplications. Starting from the end of 19th century, analog computers were developed which used continues physical phenomena to explore complex problems. One of the first wide spread analog computers was developed by Sir William Thomson (Lord Kelvin) which predicted tide levels for particular locations by using a set of pulleys and wires. [5] Even though analog computers could perform very complex operations like solving differential equations [17] they also had the major drawback that, due to their analog and continues nature, it was not possible to exactly recreate a calculation.

The idea of modern, digital computers was firstly theorized by Alan Turing in his paper *On Computable Numbers* in 1936. [28] He introduced the notion of a universal (turing) machine which describes a machine which is provable capable of computing



Figure 1.1: The final version of the EDiC playing Snake on a VT-100 over an RS-232 I/O card.

everything that is computable. All of todays computer are as capable as a turing machine which is expressed by calling them turing complete. This is with exception from their finite memory and limited number range. The first digital computers from the mid 20th century were mechanical or electromechanical machines which combined basic switches like relays and mostly mechanical memory. As fully electrical computers increased the switching frequencies, many different number formats where emerging: Opposed to analog computers where one signal, e.g. a voltage, represents a value, it now needs to encode a value. In the now common binary system one signal encodes either a 0 or a 1 (for example a low and high voltage) but a lot of different number systems where used like bi-quinary¹.

A lot of different technologies where developed for fully electric computers like vacuum tubes or transistors. After using discrete transistors, the advent of ICs in the late 50th lead to a rapid acceleration of computer complexity and speed while reducing the power consumption drastically. The series of ICs which is the most relevant

¹Bi-Quinary has one quinary signal encoding 0-4 or 5-9 depending one one binary signal encoding a low or high number. This allows two signals to encode a decimal digit similarly to some abacuses.

to this thesis is the Transistor-transistor logic (TTL) 74 series. It was a successor of one of the first TTL ICs developed by Texas Instruments in 1964 for military applications: The 5400 series. [29] The 5400 series of ICs were specified for a temperature range of -55 °C to 125 °C and came in ceramic surface-mounted device (SMD) and dual in-line (DIL) packaging to meet the high requirements of the military and space industries. Each package included a set of basic logic circuits like a quad two input NAND gate in the 5400N. In 1966 the first ICs of the 74 series were released which had the same functions but with a reduced temperature rating of 0 °C to 70 °C and often came in plastic packaging for consumer applications. In contrast to previous Register-transistor logic (RTL), these TTL ICs were capable of higher switching frequencies and lower power consumption due to a second transistor driving the high voltage level. See section 1.1.3 for a more in depth description of the workings of a TTL gate. As the 74 family of ICs became larger with more complex ICs, more advanced technologies were also introduced into the family to further reduce the power consumption or increase the switching speeds with for example Complementary metal-oxide-semiconductor (CMOS) technology.

Further advancing the complexity and integration of computing nodes the first microprocessors were developed in the 70s with the famous Intel 4004 and 8080 in 1971 and 1974, respectively. These combine all the logic required for a general purpose CPU into one IC usually exposing interfaces for connecting memories and user Input / Output (I/O) logic.

1.1.2 Technology Selection for the EDiC

The design goal for the EDiC was to design a CPU which aids the teaching of how CPUs in general work. To build a custom CPU, many of the above mentioned technologies were used for computer design, however, not all of them are equally suited for a model CPU. It was decided to use TTL ICs of the 74 family in the EDiC for several reasons:

- Complexity: The ICs of this family are complex enough that is possible to build complex systems as a general-purpose CPU with only about 100 chips. On the other hand, each individual IC is easy to understand because it is kept quite simple, like the 7400 which has a simple interface of 12 pins for the four 2-input NAND gates plus GND and +5V pins.
- Speed: In contrast to previous technologies like electromechanical relays or RTL, the 74 series is a lot faster, especially the 74F subseries which is mainly used in the EDiC. It is quite possible to create complex designs with the

74F series with a clock frequency of several MHz. However, at the same time, the clock frequency is not that high, that special care must be taken when designing the Printed Circuit Board (PCB) which would be the case with higher frequency signals.

• Simplicity: Working with the ICs is quite easy: No special tools except a soldering iron and oscilloscope are required to assemble and test the system. Especially the usage of sockets for the dual in-line packages (DIPs) simplifies the built because no IC can overheat while soldering and all the ICs can be replaced later on or while testing.

In contrast to previous and also later technology the TTL also stands out as the best suited one. When trying to build a CPU out of discrete transistors not only the logical level needs to be respected but a lot of static and dynamic behavior of the transistors needs to be analyzed. This complicates the design and prevents students from comprehending the CPU on its logical level. On the other side, more modern technologies became so abstract and complex to use that the comprehension of the internal workings of the CPU could also be lost. For example, when choosing FPGAs as the driving technology, the work surrounding the technology quickly becomes more complex than the CPU itself. The FPGA IC require special voltage levels and special care with the high frequency clock traces, are hard to solder with small pins, require complex build toolchains, cannot be debugged with an oscilloscope and so on.

Therefore, the TTL was the ideal technology level for creating a model CPU which helps students understanding the workings of CPUs.

1.1.3 Workings of TTL

Figure 1.2 shows the internals of one of the four NAND gates inside the 7400 IC. The multi-emitter transistor V_1 functions as the logical NAND gate while the transistors V_2 , V_3 and V_4 in combination with the diode V_5 form the "totem-pole" output stage. If both inputs are high, a small collector current is drawn by both inputs because V_1 is in reverse-active mode. The current through R_1 "activates" V_2 which in turn "activates" V_4 due to the current steering effect, where the current flows through the one parallel voltage-stable element with the lowest threshold voltage. In this case, the current flows through R_2 , V_2 collector-emitter and V_4 base-emitter rather than through V_3 collector-emitter, V_5 and V_4 collector-emitter. Therefore, V_4 drives the output with a low voltage.

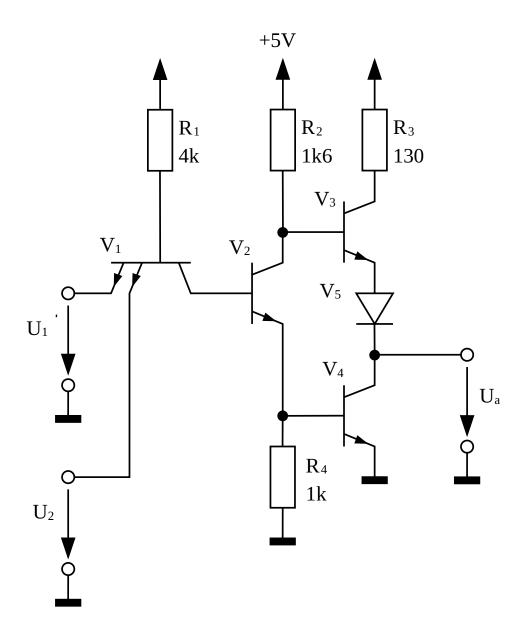


Figure 1.2: TTL NAND with "totem-pole" output stage as in the 7400 IC. [21]

If one of the inputs is low, on the other hand, the current steering effect turns off V_2 because the current flows through R_1 and V_1 base-emitter rather than R_1 , V_1 base-collector V_2 base-emitter and R_4 . With that, the above mentioned current steering effect on the output stage no longer takes effect and V_3 drives the output high through the diode V_5 .

The advantage of this "totem-pole" output stage in comparison to a more simple output stage with the collector of V_2 effectively being the output is, that a very low output resistance can be achieved (only the small R_3) which allows the output to

drive more inputs of other logic gates. Additionally, the speed is drastically increased because the high output is actively driven instead of pulled up with via a resistor as in RTL. However, the voltage drop over V_3 and V_5 also have the effect the high output voltage is only about 3.5 V in contrast to the simpler approach where close to 5 V can be achieved.

1.2 Thesis Structure

The following chapter 2 will give an in-depth explanation of the CPU architecture. It includes an analysis of the design goals and how they can be achieved. The individual modules are described as well as how they work together to execute any instruction.

With the focus on usability, the chapter 3 gives an overview of the software environment which eases the development of programs for the EDiC. It also features a tool with which the microcode for instructions can be changed or new instructions can be added which is especially important with respect to the educational purpose of the model CPU.

Chapter 4 gives a short background to FPGAs and then covers all the important aspects of the FPGA model which was created to verify the architecture. With a chip-level FPGA implementation it was possible to not only verify the architecture but also the schematic of the EDiC on the logical level.

In chapter 5 the hardware design is finally detailed. Besides an explanation of the schematics (attached in appendix A), the chapter also contains information on the development process of the PCB design.

After the PCB was designed and produced, the process of testing the components and verifying all instructions is shown in chapter 6.

A final conclusion and possibilities for further work are then given in chapter 7.

2 Architecture

Designing and building a general purpose CPU includes a lot of architectural decisions which will decide how well the CPU performs, how complex it is and so on. The goal for the EDiC was to build a CPU that is capable of interacting with extensible I/O device such as the VT-100 but at the same time simple enough to easily understand its workings, such that it is suited to be used in education.

2.1 Design Decisions

First of all, there are several decisions about the general structure of a CPU that need to be made. These decisions greatly influence how the EDiC can be structured into modules and how the final hardware build is setup. Another important factor towards architectural structure is the fact that the final hardware build of the CPU is be based on the 74-series of TTL ICs.

2.1.1 8 bit bus width

Most current era CPUs employ a 32 bit or 64 bit bus to handle large numbers and large amounts of data. This, however, is not feasible when using 74-series ICs and at the same time targeting an easy to understand hardware build. Some early CPUs build with similar ICs worked with only 4 bits. This can work very well for specific applications but for the most arithmetics and data handling 8 bits are more practical. The EDiC will, therefore, use an 8 bit bus for data with a integer range of -128 to 127 or 0 to 255 for unsigned integers.

One of the major limitation of an overall 8 bit bus is the addressable memory space. With only 8 bit for the memory address, the maximum amount of memory addressable is 256 bytes. In a first prototype of the CPU the memory space was tripled by providing 256 bytes of instruction memory besides 256 bytes of Read-Only Memory (ROM) for instruction immediate values and 256 bytes of addressable Static Random-Access Memory (SRAM). However, especially with a Complex Instruction

Set Computer (CISC) architecture (see section 2.1.2), the limited SRAM memory space greatly limits the overall complexity of programs that can be executed. Additionally, more complex programs or even small operating systems are impossible to fit into 256 instructions.

Therefore, it was decided to extend the Program Counter (PC) and the memory addresses to 16 bit, which yields 65536 bytes of addressable SRAM and theoretically 65536 instructions¹. However, this raises problems of where the 16 bit addresses come from when all the registers and the memory only store 8 bit. The solution for the EDiC is presented in section 2.2.5.3 when explaining the different modules of the EDiC.

2.1.2 Datapath Architecture - Multicycle CISC

In most CPUs an instruction is not done in one clock cycle but it is divided into several steps that are done in sequence. There are two general approaches that are called *Multicycle* and *Pipelining* [24]. Multicycle means that all the steps of one instruction are performed sequentially and a new instruction is only dispatched after the previous instruction is finished. This is usually used when implementing CISCs, where one instruction can be very capable [4]. For example an add instruction in CISC could fetch operands from memory, execute the add and write the result back to memory. Reduced Instruction Set Computers (RISCs) on the other hand would need three independent instruction to load operands from memory into registers, do the addition and write the result back to memory.

In Pipelining there are fixed steps each instruction goes through in a defined order and the intermediate results are stored in so called pipeline registers. Each pipeline step is constructed in such a way that it does not intervene with the others. Therefore, it is, in theory, possible to dispatch a new instruction each cycle even though the previous instruction is not yet finished. A typically 5-step pipeline would consist of the following steps [24]:

- 1. **Instruction Fetch**: The instruction is retrieved from memory and stored in a register.
- 2. **Instruction Decode**: The fetched instruction is decoded into control signals (and instruction specific data) for all the components of the CPU.

 $^{^1}$ The largest feasible Electrically Erasable Programmable Read-Only Memory (EEPROM) available used for instruction memory has only 15 address bits and with that only 32768 8 bit words of data.

- 3. **Execute**: If arithmetic or logical operations are part of the instruction, they are performed.
- 4. **Memory Access**: Results are written to the memory and/or data is read from memory.
- 5. Writeback: The results are written back to the registers.

However good the performance of a pipelined CPU is, it also comes with challenges. Those include a greater resource usage because all intermediate results need to be stored in pipeline registers. Additionally, branch instructions² pose a greater challenge because at the moment, the CPU execute the branch the following instructions have already been dispatched. This means that the pipeline needs to be flushed (i.e. cleared), performance is lost and more logic is required. It also noteworthy that branch prediction and pipeline flushes can be quite vulnerable as recently shown in CVE-2017-5753 with the Spectre bug [7].

Therefore, the EDiC is to built as a Multicycle CISC.

2.1.3 Single-Bus Oriented

The decision for a Multicycle CPU also enabled the architecture to be single-bus oriented. This means that all modules (e.g. the Arithmetic Logic Unit (ALU) or the memory) are connected to a central bus for data transfer. The central bus is then used as a multi-directional data communication. To allow this in hardware, all components that drive the bus (i.e. "send" data) need to have a tri-state driver. A tri-state driver can either drive the bus with a defined '0' (low voltage) or '1' (high voltage) or not drive the bus (high impedance) which allows other tri-state drivers on the same bus to drive it. That way an instruction which fetches a word from the memory from an address stored in a register, adds a register value to it and stores it in a register could consist of the following steps:

- 1. Instruction Fetch
- 2. Instruction Decode
- 3. Memory Address from register over bus to memory module
- 4. Memory Access
- 5. Data from memory module over bus to ALU input

²Branch Instructions change the PC and with that the location from which the next instruction is to be fetched. This is required for conditional and looped execution.

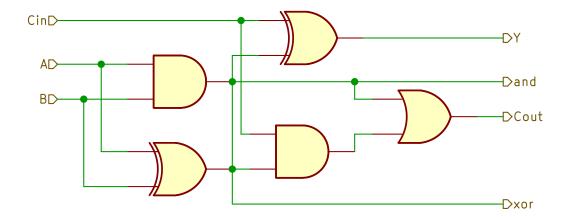


Figure 2.1: 1 bit full adder with the usual A, B and Carry inputs and Y and Carry outputs as well as the XOR and AND outputs.

- 6. ALU operation
- 7. Data from ALU output over bus to register

With such an architecture it is possible to avoid large multiplexers and keep the overall architecture simple.

2.2 Modules

The design has been split into 7 rather independent modules of varying complexity which mainly interface with each other over the bus and control signals.

2.2.1 Arithmetic Logic Unit (ALU)

An ALU is the computational core of any CPU as it performs all the calculations. The ALU of the EDiC is by design simple with only 4 different operations plus an option to invert the second input. The result of the ALU is stored in a result register which can drive the bus to store the result in a register or memory. For simplicity, the first input of the ALU (A input) is directly connected to the register file (section 2.2.2) and only the second input (B input) is accessible from the bus. This limits the possibilities of instructions, however, if both inputs should have been driven by the bus, every ALU instruction would have taken three instead of two cycle limited by the bus (first cycle A input, second cycle B input, third cycle result).

| | | • | - |
|----------|----------|--------|---------------------------------|
| aluOp[1] | aluOp[0] | aluSub | Resulting Operation |
| 0 | 0 | 0 | (A + B) Addition |
| 0 | 0 | 1 | (A - B) Subtraction |
| 0 | 1 | 0 | $(A \wedge B)$ AND |
| 0 | 1 | 1 | $(A \wedge \overline{B})$ |
| 1 | 0 | 0 | $(A \vee B) \text{ XOR}$ |
| 1 | 0 | 1 | $(\overline{A \vee B})$ XNOR |
| 1 | 1 | 0 | $(A \gg B)$ logical shift right |
| 1 | 1 | 1 | $(A \ll B)$ logical shift left |


Table 2.1: Summary of the available ALU operations.

The ALU consists of an 8 bit ripple carry full adder and a barrel shifter. The operations are controlled by three control signals: The first two bits select which ALU operation to perform and the third bit modifies the operation to perform. The possible operations are shown in table 2.1. For the adder, the third bit inverts the B input when active (All input bits are XORed with the control bit) and is used as the carry in of the adder. This negates the B input in two complement and, therefore, subtracts it from the A input. For the barrel shifter, the third bit reverses the shift direction.

The XOR and AND operations shown in table 2.1 are chosen because they are already implemented in the half-adders and no additional logic is required to implement them. A complete 1 bit full-adder of the EDiC is shown in figure 2.1.

It was desirable to include a barrel shifter to have the possibility to improve multiply operation with a shift and add approach instead of repeated addition. The barrel shifter works by 3 consecutive multiplexers shifting by 1, 2 or 4 bit to the right that are controlled by the first 3 bit of the (not inverted) B input. To also allow shifting to the left there is one multiplexer before the three shift multiplexers to invert the order of bits and another one after the shifting to reorder the bits. In figure 2.2 a bidirectional barrel shifter implemented with the 74F157 is visualized. The 74F157 implements four 2 to 1 multiplexer and, therefore, 2 chips are needed for a full 8 bit 2 to 1 multiplexer.

The ALU also provides four flags which are used for condition execution. The Zero (all result bits are zero) and Negative (The Most Significant Bit (MSB) of the result) flag are both very easy to derive and were the only ones included in the prototype. However, the experience of programming for the CPU showed that it is desireable

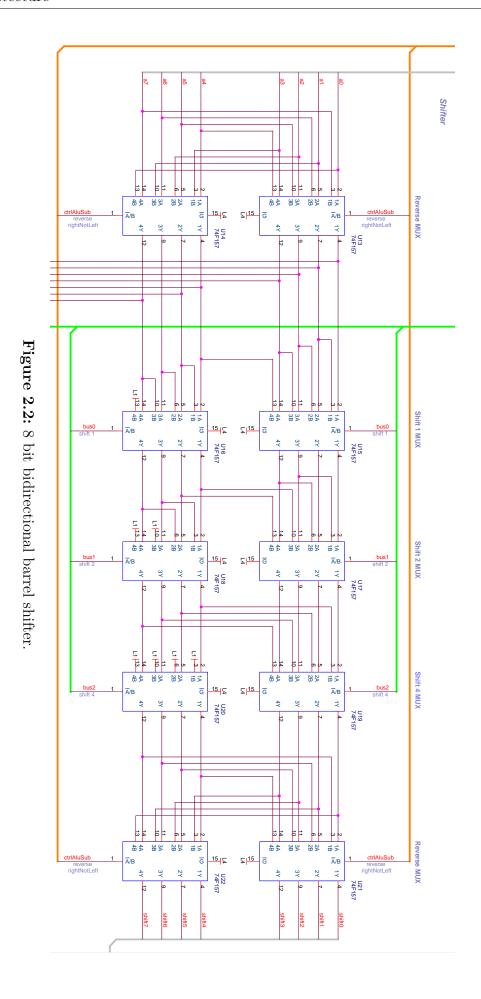

to be able to work with more advanced ALU flags when programming more complex functions. Having only Zero and Negative Flags, for example, does not allow unsigned operations of the full width³ which is especially important with only 8 data bits. It limits unsigned operations to only 0-127 even though the ALU would be capable of calculations with 0-255.

A lot of modern CPUs feature many different flags with the Intel 64[®] and IA-32 CPU having about 20 different flags [15, Section 3.4.3]. However, the popular ARM Architecture has a rather unique but very capable system for conditional execution which relies on only the four most used ALU flags. The EDiC uses the same flags and their functions are as follows:

- N The *Negative* flag indicates that the result is negative and is set if the 8th bit of the ALU result (MSB) is '1'.
- **Z** The *Zero* flag indicates that the result is 0 and is set if all 8 result bits are 0.
- V The Overflow flag indicates that an overflow occurred and is set if the carry in and carry out of the 8th full-adder are different. This detects arithmetic overflows for signed two's-complement calculations.
- C The Carry flag is the carry out bit of the adder for adding and subtracting. For logical operations (XOR and AND) the carry flag has no meaning and for shifting operations it equals the last bit that was "carried out" (or is unchanged if shifting by 0 bits).

2.2.2 Register File

As is typical with CISCs the CPU does not need many general purpose registers and the register file can be kept simple with only two registers. The register file has one write port (from the bus) and two read ports of which one reads to the bus and the other is directly connected to the A input of the ALU. All ports can access both registers.

2.2.3 Program Counter (PC) & Instruction Register

The PC is a special 16 bit register which is used to store the address for the current instruction. Usually it is incremented by one for each instruction. However, it is

³An overflow detection is not possible and with that a greater or less than comparison cannot be done.

also possible to load the PC from an instruction immediate (see below) or from the memory (section 2.2.5). The first option is used for branch instruction while the second option is used for returning from a function, which is explained in more detail in section 2.2.5.2. The value of the PC is used as address for the instruction EEPROMs and can also be driven to the memory for storing the return address for function calls.

Each instruction of the EDiC is stored in a 24 bit register of which 8 bits are the instruction and 16 bits represent an optional instruction immediate. It can be used as an address for the memory/PC (16 bit) or as data (8 bit) driven to the bus. The instruction is directly forwarded to the control logic (section 2.2.4).

2.2.4 Control Logic

The control logic's job is to decode the current instruction and provide all the control signals for each cycle for any instruction. What kind of control signals exist in the EDiC is explained after all the modules are described in section 2.3. For keeping track which cycle of each instruction is currently executing, a 3 bit synchronous counter is used. Each control signal could be derived by a logical circuitry with 13 inputs: 8 bits instruction, 4 bits ALU flags and 3 bits cycle counter. However, designing these logic circuits is a lot of work, takes up a lot of space and cannot be changed easily later on. Therefore, an EEPROM is used where the 13 bits that define one cycle of one specific instruction are used as addresses. The control signals then are the data bits of the word that is stored at the specific address in the EEPROM. How the EEPROM is programmed with the correct data is explained in depth in section 3.1.

One special case are the 3 bits ALU opcodes. They are not decoded the usual way from the instruction but are directly take from the 3 Least Significant Bits (LSBs) of the instruction. This is done to reduce the storage requirements for the decoding EEPROMs. For instructions that use the ALU, the 3 LSBs need to be set accordingly but for all other instructions, the three bits can be used as usual for decoding the instruction because it does not matter what the combinatorial part of ALU does.

The first two cycles of each instruction need to be taken in special consideration because the instruction register is not yet loaded with the next instruction, because it is still being fetched and decoded. However, the instruction fetch and decode are always the same for each instruction, which means that all memory locations where the cycle counter is equal to 0 or 1 are filled with the control signals for an instruction fetch and decode.

2.2.5 Memory

The memory module became the most complex module because it includes not only the main memory of the CPU in form of an asynchronous SRAM but also includes a lot of addressing logic for the 16 bit addresses.

The addressing logic is required because the EDiC has 16 bit addresses with only an 8 bits data bus. However, the EDiC also features memory mapped I/O and a stack implementation which further complicate the addressing logic. Both these features and the addressing logic is described below.

2.2.5.1 Memory Mapped I/O

Input and Output is one of the most important factors of any CPU besides the computing capabilities which are mostly defined by the ALU. The first prototype showed that using individual instructions for I/O which directly read from and write to the bus are limiting the usability quite a lot. A common way to extend the I/O capabilities is to use so called memory mapped I/O. This works by splitting the address space between actual memory and I/O devices. Then every I/O operation is performed as a usual memory access but the memory chip does not receive the access and the I/O device addressed performs the operation. In the EDiC the memory address is decoded in such a way, that accesses to addresses 0xfe00 to 0xfeff are performed by any connected I/O devices. For this to work, the lower 8 address bits, the bus and memory control signals - i.e. write enable, read enable and I/O chip enable (active when the upper 8 address bits are 0xff) - are exposed for I/O devices to connect to.

2.2.5.2 Stack Implementation

A feature that has been thoroughly missing from the prototype CPU is a kind of stack implementation. The stack is essential to the workings of the very important programming paradigm *functions*. When calling functions, the return address is usually (automatically) stored on the stack where also function local variables can be stored. This allows functions to be called recursively and also simplifies the written program code compared to simple branching.

However, a typical stack implementation as in modern CPU architectures like ARM is rather complex. It requires a Stack Pointer (SP) register which usually is accessible like any other general purpose register and can be directly used as an address. This includes using it as operand for arithmetic operations which is not possible when the bus width is only 8 bits but the SP needs to be 16 bits wide to be used as an address. Therefore, the EDiC uses an unique approach to the stack:

Similarly to the memory mapped I/O it was decided to implement the SP as an 8 bit register which can be incremented and decremented at function calls and returns, respectively. Every time a memory access is performed where the upper 8 bits of the address equal 0xff, a 17th address bit is set and the upper 8 address bits are replaced by the current value of the SP. For example: The SP is currently 0x21 and a memory access to the address 0xff42 is performed. Then the actual address at the memory IC is $0x1_2142$.

This allows each function (which has a unique SP value on the current call stack) to have 256 bytes of function local memory. In the *call* instruction, the EDiC automatically stores the return address (next PC value) at address 0xffff, which is 0x1_{sp}ff after translation. To store the whole 16 bit return address, a second memory IC is used in parallel which only needs 256 bytes of storage. In the hardware build of the EDiC the same SRAM IC as for the main memory is used because it is cheaply available and the built is simplified by not using more different components. The call and return instructions are further described in section 2.4.

Usually, the stack is also used to store parameters for a function call. In the EDiC, this can be achieved by providing a special *store* and *load* instruction which access the stack memory with an increment SP. This way it is possible to store parameter before calling a function and it is also possible to retrieve modified values after the call⁴. The calling convention for the EDiC is further described in section 3.2.1.

2.2.5.3 Addressing Logic

With increasing the address width to 16 bit and also adding more functionality to the memory access, the addressing logic has become more complex. There are two main sources for memory addresses: The new 16 bit Memory Address Register (MAR)

⁴This is important when a function takes memory pointers as parameters and modifies the memory content. For example a string parsing function could take a pointer to the start of the string, parse some characters as a number, return its number representation and modify the parameter such that it points to where the parsing stopped.

which can be written to from the bus and secondly the 16 bit instruction immediate. As the bus is only 8 bits wide, there is a special instruction to write to the upper 8 bits of the MAR and the lower bits are written in the memory access instruction. This can be used when a memory address is stored in registers and is needed when looping through values in the memory like arrays. When accessing addresses known at compile time, the 16 bit instruction immediate can be directly used as an address, preserving the MAR. These two sources of addresses are then decoded to either select the stack (upper 8 bits equal Oxff), memory mapped I/O (Oxfe) or regular memory access. The chip enable of the main memory is only asserted when performing stack and regular memory accesses while the I/O chip enable is only asserted when the upper 8 bits are Oxfe. Additionally, the 17th address bit is asserted when stack access is performed and the upper 8 bits of the address are replaced with the SP in this case.

2.2.6 Input & Output

The EDiC can interface with different I/O devices connected to it via the memory mapped I/O. For evaluation and debugging, the EDiC includes one I/O device at address 0x00 which can be read from and written to. The value to be read can be selected by the user with two hexadecimal 8 bit switch and the values written to the address 0x00 are displayed with a 2 digit display. This allows simple programs to run independently of external I/O devices.

2.2.7 Clock, Reset & Debugging

An important feature when developing a CPU is debugging capabilities. The initial prototype could at least step the clock cycle by cycle. However, as programs get more complex this feature quickly becomes less useful as each instruction is made of several cycles and when a problem occurs after several hundred instructions it is infeasible to step through all cycles. Additionally, the usual application developer does not want to step through each cycle but rather step through each instruction, assuming that the instruction set works as intended. Another important debugging feature is the use of breakpoints where the CPU halts execution when the PC reaches a specific address.

In the EDiC halting was not realized by stopping the clock completely but rather by inhibiting the instruction step counter increment. This has the advantage that the clock is not abruptly pulled to 0 or 1 and, therefore, no spikes on the clock line can

occur. To implement a cycle by cycle stepping mode, the halt signal is de-asserted for only one clock cycle, which in turn increments the step counter only once. To step whole instructions, the halt signal is de-asserted until the instruction is finished (marked by a control signal that is asserted at the end of each instruction from the control logic). In breakpoint mode, the halt signal is controlled from a comparator that compares the PC and a 16 bit user input, asserting the halt signal when those two equal. As soon as the CPU halts, the user can then switch to stepping mode and debug the specific instruction of the program. As soon as the CPU halts, the user can then switch to stepping mode and debug the specific instruction of the program. The user can freely switch between these modes with switches and buttons provided on the lower side of the PCB in figure 1.1.

2.3 Control Signals

The EDiC has 24 control signals which define what the current cycle does:

- aluynwe ALU output register write enable (active low): Connects to the clock enable input of the ALU output register.
- aluNOE ALU output enable (active low): Enables the tri-state buffer to drive the bus with the value of the ALU output register.
- reg0NWE Register 0 write enable (active low): Connects to the clock enable input of the register 0.
- reg1NWE Register 1 write enable (active low): Connects to the clock enable input of the register 1.
- regAluSel Register Select for the ALU A input: When 0, sets register 0 as A input to the ALU, otherwise, register 1.
- reg0BusN0E Register 0 bus output enable (active low): Drives the bus with the value of register 0.
- reg1BusN0E Register 1 bus output enable (active low): Drives the bus with the value of register 1.
- memPCFromImm load data for PC from instruction immediate: Selects the load input of the PC to be from the instruction immediate instead of from the memory.

- memPCNEn PC enable (active low): enables the PC to load data or increment by one depending on the next control signal.
- memPCLoadN PC load and not increment (active low): When 0 load the PC with the data specified by memPCFromImm, otherwise, increment the PC by one.
- memPCToRamN PC output enable (active low): Drives the bus and ram2data with the value of the PC.
- memSPNEn SP enable (active low): enable the SP to be incremented or decremented depending on the next control signal.
- memSPUp SP increment not decrement: When 1, increment the SP, otherwise, decrement.
- memInstrNWE Instruction write enable (active low): Connects to the clock enable input of the instruction register.
- memInstrNOE Instruction output enable (active low): Drives the bus with the lower 8 bits of the instruction immediate.
- memMarONWE MAR bits 7..0 write enable (active low): Connects to the clock enable input of the lower 8 bits of the MAR.
- memMar1NWE MAR bits 15..8 write enable (active low): Connects to the clock enable input of the upper 8 bits of the MAR.
- memInstrImmToRamAddr Random-Access Memory (RAM) address from instruction immediate and not MAR: When 1, use the instruction immediate as address for the memory, otherwise, use the MAR content.
- memRamNWE Memory write enable (active low): Connects to the write enable input of the SRAM and I/O.
- memRamNOE Memory output enable (active low): Drives the bus with the value of the SRAM or I/O depending on the memory address (section 2.2.5).
- instrFinishedN Instruction finished (active low): Is asserted at the last active cycle of the instruction to reset the step counter to 0^5 .
- busFFNOE⁶ Drive Oxff to the bus (active low): Connects to the output enable input of the constant Oxff driver.

⁵the instruction finished signal is also used for the debugger to detect the end of an instruction and halt when stepping through instructions and not single cycles.

⁶Was added in the component verification and is explained in section 6.2.3.

2.4 Final Instruction Set

This section describes all available instructions, what they do and which instruction cycle performs which steps of the instruction. Each instruction starts with the same two cycles for instruction fetching. The parameters of each instruction and how the instructions are programmed is shown in section 3.2.2.

2.4.1 ALU operations

The EDiC supports a wide variety of instructions that perform ALU operations. All these operations take two arguments which are used for one of the possible operations shown in table 2.1. Each ALU operation modifies the status flags.

• Register x Register: Takes two registers as parameter and the result is stored in the first parameter.

Cycles:

- 1. Both register to ALU A and B input, write enable of ALU result register.
- 2. Write content of ALU result register into first parameter register.
- Register x Register (no write back): Takes two registers as parameter and the result is only calculated for the status flags.

Cycles:

- 1. Both register to ALU A and B input, write enable of ALU result register.
- Register x Memory (from Register): Takes one register as ALU A input and a second register which is used as a memory address for the ALU B input. The result is stored in the first register.

Cycles:

- 1. Second register is stored in the lower 8 bits of the MAR⁷.
- 2. Address decoding.
- 3. First register and memory content as A and B inputs, write enable of the result register.
- 4. Write content of ALU result register into first parameter register.

⁷The upper 8 bits of the MAR should be set beforehand

• Register x Memory (from immediate): Takes one register as ALU A input and a 16 bit value as immediate which is used as a memory address for the ALU B input. The result is stored in the first register.

Cycles:

- 1. Address decoding.
- 2. First register and memory content as A and B inputs, write enable of the result register.
- 3. Write content of ALU result register into first parameter register.
- Register x Memory (from immediate, no write back): Takes one register as ALU A input and a 16 bit value as immediate which is used as a memory address for the ALU B input. The result is only calculated for the status flags.

Cycles:

- 1. Address decoding.
- 2. First register and memory content as A and B inputs, write enable of the result register.
- Register x Immediate: Takes one register as ALU A input and an 8 bit value as immediate for the ALU B input. The result is stored in the first register.

Cycles:

- 1. Register and immediate value as A and B inputs and write enable of the result register.
- 2. Write content of ALU result register into first parameter register.
- Register x Immediate (no write back): Takes one register as ALU A input and an 8 bit value as immediate for the ALU B input. The result is only calculated for the status flags.

Cycles:

1. Register and immediate value as A and B inputs and write enable of the result register.

2.4.2 Memory operations

Some ALU operations also include reading values from memory. However, the EDiC features a lot more memory operations which are detailed below. As all memory

operations may perform memory mapped I/O operations, special care must be taken to allow asynchronous I/O devices to function as well. This means that for each memory access, the address setup and hold must be an individual cycle, resulting in a 3 cycle memory access.

• Load from register address: Takes the second register parameter as the lower 8 bits of the memory address and writes the memory content to the first register.

Cycles:

- 1. Second register to lower MAR.
- 2. Memory address setup.
- 3. Memory read access and write back to first register.
- 4. Memory address hold.
- Load from immediate address: Takes a 16 bit immediate as the memory address and writes the memory content to the register.

Cycles:

- 1. Memory address setup.
- 2. Memory read access and write back to first register.
- 3. Memory address hold.
- Load from immediate address with incremented SP: Takes a 16 bit immediate as the memory address and writes the memory content to the register. However, before the memory access, the SP is incremented and after the access, the SP is decremented again. This is used to access parameters for subfunctions.

Cycles:

- 1. Increment Stack Pointer.
- 2. Memory address setup.
- 3. Memory read access and write back to first register.
- 4. Memory address hold.
- 5. Decrement Stack Pointer.
- Store to register address: Takes the second register parameter as the lower 8 bits of the memory address and writes the content of the first register to the memory.

Cycles:

- 1. Second register to lower MAR.
- 2. Memory address and data setup.
- 3. Memory write access.
- 4. Memory address and data hold.
- Store to immediate address: Takes a 16 bit immediate as the memory address and writes the register content to memory.

Cycles:

- 1. Memory address and data setup.
- 2. Memory write access.
- 3. Memory address and data hold.
- Store to immediate address with incremented SP: Takes a 16 bit immediate as the memory address and writes the register content to memory. However, before the memory access, the SP is incremented and after the access, the SP is decremented again. This is used to access parameters for subfunctions.

Cycles:

- 1. Increment Stack Pointer.
- 2. Memory address and data setup.
- 3. Memory write access.
- 4. Memory address and data hold.
- 5. Decrement Stack Pointer.
- Set upper 8 bits of MAR from register: Sets the upper MAR register to the content of the register.

Cycles:

- 1. Register output enable and upper MAR write enable.
- Set upper 8 bits of MAR from immediate: Sets the upper MAR register to the 8 bit immediate value.

Cycles:

1. Immediate output enable and upper MAR write enable.

2.4.3 Miscellaneous operations

There are some more operations that are neither ALU nor memory operations like move and branch instructions.

• Move between register: Set the first register to the value of the second.

Cycles:

- 1. Second register output enable and first register write enable.
- Move immediate to register: Set the register to the value of the immediate.

Cycles:

- 1. Immediate output enable and first register write enable.
- Conditionally set PC from immediate: This is the only conditional operation available. Depending on the current status register the following cycles are either executed or No Operations (NOPs) are executed.

Cycles:

- 1. PC write enable from immediate.
- Function Call: Takes a 16 bit address which the PC is set to. The SP is incremented and the return address is stored on the stack.

Cycles:

- 1. Increment SP and write Oxffff into the MAR.
- 2. Memory address and data (PC) setup.
- 3. Memory write access.
- 4. Memory address and data hold.
- 5. Load PC from instruction immediate.
- Function Return: Decrements the SP and the PC is loaded from the return address which is read from the memory.

Cycles:

- 1. Write Oxffff into the MAR.
- 2. Memory address setup.
- 3. Memory read access and PC write enable.
- 4. Memory address hold.
- 5. Decrement SP.

3 Software Development Environment

When just providing the hardware, the CPU can hardly be used. It is possible to write programs by hand by writing single bytes to the EEPROMs that hold the program. However, it is quite infeasible to write complex programs this way. Even more extreme is content of the EEPROMs holding the micro code, i.e. that decode the instruction depending on the instruction cycle and ALU flags.

Therefore, the EDiC comes with two main software utilities that form the Software Development Environment.

3.1 Microcode Generation

The goal is to define all the available instructions and what they perform in which instruction step and then have a program automatically generate the bit-files for the EEPROM. This approach allows easy modifications to the existing microcode if a bug was found or a new instruction should be added. The file format which defines the microcode has to be human and machine readable as it should be easily edited by hand and also be read by the tool that generates the bit-files. A very common file format for tasks like this is JavaScript Object Notation (JSON) [16] which is widely used in the computer industry. Besides basic types as strings and numbers, it allows arrays with square brackets ([]) and objects with curly braces ({}). Each object contains key value pairs and everything can be nested as desired. For the EDiC microcode generation CoffeeScript-Object-Notation (CSON) was used which is very similar to JSON but is slightly easier to write by hand because its syntax is changed a bit:

- It allows comments which is extensively used to ease the understanding of individual instruction steps
- Braces and commas are not required

```
interface IMicrocodeFile {
1
       signals: [
2
         {
3
           name: string;
4
           noOp: 0 | 1;
5
         }
6
      ];
7
8
      instructionFetch: [
9
10
            [signalName: string]: 0 | 1;
11
         }
12
      ];
13
14
       instructions: [
15
         {
16
            op: string;
17
            cycles: [
18
              {
19
                 [signalName: string]: 0 | 1 | 'r' | 's' | '!r' | '!s';
20
21
           ];
22
         }
23
      ];
24
    };
25
```

Code Example 3.1: Schema of the Microcode Definition CSON-File [3] as a TypeScript [19] Type definition.

• Keys do not require string quotation marks

The schema for the file describing the microcode is shown in code example 3.1. Examples for the fields follow:

Signals The signals array consists of objects that define the available control signals and the default value of the control signal. Code Example 3.2a defines the *not write* enable signal for register θ control signal and defines the default state as high. This means, when this control signal is not specified in an instruction it will stay high and, therefore, register θ will not be written.

InstructionFetch This array defines the steps that are performed at the beginning of each instruction to fetch the new instruction and decode it. Each object

```
instructionFetch: [
                                    1
                                         { # write instruction
                                    2
                                           memInstrNWE: 0
                                    3
                                    4
                                         { # increment PC
                                    5
                                           memPCNEn: 0
                                    6
  name: 'regONWE'
                                           memPCLoadN: 1
                                   7
                                         }
  noOp: 1
}
                                       ]
```

(a) Register 0 write enable control signal. (b) Instruction fetch and decode cycles.

Code Example 3.2: Example definitions of one control signal and the instruction fetch cycles for the microcode generation.

represents one step and consists of key value pairs that define one control signal.

In code example 3.2b the first instruction cycle specifies only the *instruction not* write enable to be low and with this write the instruction into the instruction register. Secondly, the PC is incremented by setting PC not enable to low and PC not load to high.

Instructions The instructions are an array of all available instructions. Each instruction is defined as an op code, which is the 8 bit instruction in binary format. However, if it was only possible to define the 8 bit as 0s and 1s, instructions which only differ in the register used would need to be specified separately which is very error prone. Therefore, it is allowed to specify the bit that specifies if register 0 or 1 is used to be set to 'r' or 's' and then multiple instructions are generated. The cycles array defines the steps each instruction does in the same way as the instructionFetch array does. However, as the value of individual control signals may depend up on which register is specified in the op code, it is also possible to specify 'r', '!r', 's' or '!s'.

Code Example 3.3a defines the move immediate to register instruction for both register at the same time. The *instruction immediate not output enable* is low and either register 0 or register 1 is written to. This definition would be equal to code example 3.3b.

This example is quite simple, however, instructions with two registers as arguments would result in four times the same definition and duplication can always result in inconsistencies. The same idea is also used for the ALU operations. The ALU operation control signals are not generated by the microcode but are rather the

```
{
                                      2
                                              op: '11111000' # r0 = imm
                                      3
                                              cycles: [
                                                 { # imm to bus to r0
                                      5
                                                   regONWE: 0
                                      6
                                                   reg1NWE: 1
                                                   memInstrNOE: 0
                                                }
                                              1
                                     10
                                            }
                                     11
                                            {
                                     12
                                              op: '11111001' # r1 = imm
                                     13
                                              cycles: [
1
                                     14
      op: '1111100r' # r = imm
                                                 { # imm to bus to r1
2
                                     15
      cycles: [
                                                   regONWE: 1
3
                                     16
         { # imm to bus to r
                                                   reg1NWE: 0
4
                                     17
           regONWE: 'r'
                                                   memInstrNOE: 0
                                     18
                                                }
           reg1NWE: '!r'
6
                                     19
           memInstrNOE: 0
                                              ]
7
                                     20
         }
                                            }
8
                                     21
      ٦
                                         ]
9
                                     22
    }
10
```

- (a) Definition using 'r' in the opcode.
- (b) Equivalent definition of both separate instructions.

Code Example 3.3: Definition of the move immediate to register instruction for the microcode generation.

three least significant bits of the instruction. Therefore, all instructions using the ALU can have the exact same control signals stored in the microcode EEPROM. To avoid 8 definitions of the same instructions, the op code can contain 'alu' and all 8 instructions are generated. Code example 3.4 for example defines the alu operation with two registers and defines all 32 instructions with the op codes '00000000' to '00011111'.

There is one final specialty built into the Microcode Generator: The EDiC has a branch instruction which is either executed or treated as a no-operation depending on the current state of the ALU flags. For all other instructions, the flags are ignored and the instructions are always executed. For this special instruction, the last four bits replaced with flag define at which state of the ALU flags, the branch should be executed. The possible conditions are heavily inspired by the conditional execution of ARM CPUs[8] as the ALU flag architecture is very similar. The possible values for the flag field and their meanings are listed in table 3.1. Especially for a CPU

```
op: '000rsalu' # r = r x s (alu)
2
      cycles: [
3
         { # r x s into alu
4
           aluYNWE: 0
5
           regOBusNOE: 's'
6
           reg1BusNOE: '!s'
7
           regAluSel: 'r'
        }
         { # alu into r
10
           aluNOE: 0
11
           regONWE: 'r'
12
           reg1NWE: '!r'
13
14
      ]
15
    }
16
```

Code Example 3.4: Definition of the alu operation with two register arguments for the microcode generation.

```
op: '1010flag' # pc := imm
2
      cycles: [
3
        { # imm to pc
          memPCNEn: 0
5
           memPCLoadN: 0
6
           memPCFromImm: 1
        }
8
      ]
9
   }
10
```

Code Example 3.5: Definition of the branch instructions.

with only 8 bits it is important to support unsigned and signed operations and with a complex microcode it is no problem to support all the different branch instructions and facilitate the application design. Code example 3.5 defines the branch instructions.

3.2 Assembler

The second software that is similarly important is the assembler. An assembler translates human readable instructions into the machine code, i.e. the bits that are stored in the instruction EEPROMs. For the EDiC each instruction is 24 bits wide, with

Table 3.1: All available branch instructions with their op-code and microcode translation based on the ALU flags explained in section 2.2.1.

| flag (OP-Code) | Assembler Instruction | ALU flags | Interpretation | |
|----------------|-----------------------|---------------|------------------|--|
| 0000 | jmp/bal/b | Any | Always | |
| 0001 | beq | Z==1 | Equal | |
| 0010 | bne | Z==0 | Not Equal | |
| 0011 | bcs/bhs | C==1 | Unsigned ≥ | |
| 0100 | bcc/blo | C==0 | Unsigned < | |
| 0101 | bmi | N==1 | Negative | |
| 0110 | bpl | N==0 | Positive or Zero | |
| 0111 | bvs | V==1 | Overflow | |
| 1000 | bvc | V==0 | No overflow | |
| 1001 | bhi | C==1 and Z==0 | Unsigned > | |
| 1010 | bls | C==0 or Z==1 | Unsigned ≤ | |
| 1011 | bge | N==A | Signed ≥ | |
| 1100 | blt | N i =Λ | Signed < | |
| 1101 | bgt | Z==0 and N==V | Signed > | |
| 1110 | ble | Z==0 or N!=V | Signed ≤ | |
| 1111 | - | Any | Never (Not used) | |

8 bits instruction op code and 8 or 16 bits immediate value. Even though assemblers usually only translate instructions one for one, they can have quite advanced features. With an assembler, the programmer is no longer required to know the specific op codes for all instructions and set individual bits of the instructions which is very error prone. The assembler for the EDiC, therefore, allows easier programming with a simple text-based assembly syntax similar to the well-known ARM syntax.

Code examples 3.6 and 3.7 show the translation that the assembler does where code example 3.6 shows the assembler program that is written by the programmer and code example 3.7 summarizes what values are stored in the program EEP-ROM.

The full assembler code used in the demonstration in figure 1.1 is attached in appendix A.

```
PRNG SEED = 0x0000
    SIMPLE IO = 0xfe00
2
3
    prng:
4
      ldr r0, [PRNG_SEED]
5
      subs r0, 0
6
      beq prngDoEor
7
      lsl r0, 1
      beq prngNoEor
9
      bcc prngNoEor
10
    prngDoEor:
11
      xor r0, 0x1d
12
    prngNoEor:
13
      str ro, [PRNG SEED]
14
    ret
15
16
    start:
17
      mov r0, 0
18
      str rO, [PRNG_SEED]
19
      prng_loop:
20
        call prng
21
        str r0, [SIMPLE IO]
22
      b prng_loop
```

Code Example 3.6: Pseudo Random Number Generator (PRNG) written in the EDiC Assembler.

3.2.1 Calling conventions

Even though calling conventions are strictly speaking not a feature of the assembler, it is an important factor to keep in mind with functional programming. Calling conventions are a set of rules which caller (the instructions calling a subroutine) and callee (the subroutine that is called) should usually follow.

Parameters Usually the first parameters from the caller to the callee are passed in registers, which avoids long memory operations for storing and loading the parameters. In the EDiC memory operations cannot stall and are, therefore, not slower than register operation and the EDiC has only 2 registers. Therefore, only the very first argument is passed in r0 and all further arguments are passed in the memory. The parameters are stored on the stack of the callee starting at stack address 0x00 (0xff00 as memory address).

```
0x00000 - op: 101000000, imm: 0x0000a - b 0x0a
   0x0001 - op: 11110000, imm: 0x0000 - ldr r0, [0x00]
2
   0x0002 - op: 10010001, imm: 0x0000 - subs r0, 0x00
3
   0x0003 - op: 10100001, imm: 0x0007 - beg 0x07
4
   0x0004 - op: 10000111, imm: 0x0001 - lsl r0, 0x01
5
   0x0005 - op: 10100001, imm: 0x0008 - beq 0x08
6
   0x0006 - op: 10100100, imm: 0x0008 - bcc 0x08
7
   0x0007 - op: 10000100, imm: 0x001d - xor r0, 0x1d
   0x0008 - op: 11110010, imm: 0x0000 - str r0, [0x00]
   0x0009 - op: 10110001, imm: ---- - ret
10
   0x000a - op: 111111000, imm: 0x0000 - mov r0, 0
11
   0x000b - op: 11110010, imm: 0x0000 - str r0, [0x00]
12
   0x000c - op: 10110000, imm: 0x0001 - call 0x01
13
   0x000d - op: 11110010, imm: 0xfe00 - str r0, [0xfe00]
14
   0x000e - op: 10100000, imm: 0x000c - b 0x0c
```

Code Example 3.7: The output of the PRNG of code example 3.6. The first 16 bits are the memory address, then 8 bits for the instruction op-code and 16 bits for the instruction immediate and for reference the original instruction with variables replaced.

Return value The return value is to be placed in r0. If a return value larger than 8 bit (or multiple 8 bit values) are to be returned, the caller may pass a pointer to a memory location as a parameter and the callee works on the memory content pointed to.

Preservation The register r1 can to be used as a function local variable and, therefore, has to be preserved by any callee. This is usually done by storing the content on the stack at the beginning of the function and restoring them from the stack at the end of the function.

3.2.2 Available Instructions

This section summarizes all available instructions and which parameters they take. All instructions start with the operation and then up two parameters which are separated by a comma.

There are four different parameter types. It can either be a register specified as r0 or r1. The register value can also be passed as the address to a memory operation with [r0].

Immediate values can also be specified as value or as address with brackets around the immediate value. However, the syntax for immediate values is more complex, as the assembler can parse decimal (positive and negative) as well as hexadecimal numbers. Additionally, variables can be used which are further explained in section 3.2.3.

When specifying a value, the immediate can range between -127 and 255 (two's complement and unsigned) and when used as an address it can range between 0 and 0xfffe (65534). The upper limit is not 0xffff because that address is reserved for the return address and should not be overwritten.

3.2.2.1 ALU Instructions

The following ALU instructions are available:

- ullet add ullet and ullet xor ullet lsr
- sub eor xnor lsl

ALU instructions always take two parameters. The first parameter is the left hand side operand and the register where the result is stored in and the second parameter is the right hand side operand.

• Two registers

```
sub r0, r1 does: r_0 := r_0 - r_1
```

• One register and one register as memory address

```
lsr r1, [r0] does: r_1 := r_1 \gg \text{mem}[r_0]
```

• One register and an immediate value

```
xor r0, 0x0f does: r_0 := r_0 \vee 15
```

• One register and an immediate value as memory address

```
add r1, [0x0542] does: r_1 := r_1 + mem[1346]
```

All of the ALU instructions can have an 's' as suffix which has the effect that the result of the operation is not written to the first operand. This is useful when a calculation is only performed to update the ALU flags but the register value should be preserved. This results in a special ALU instruction: cmp which is an alias to subs which is typically used to compare to values and perform a branch instruction based on the result.

```
cmp r0, 10 // equal to subs r0, 10 blt 0x42
```

compares the r0 register with the value 10 and if r0 < 10 branches to instruction at address 66 and preserves the content of r0.

3.2.2.2 Memory Instructions

The following memory instructions are supported:

 \bullet str \bullet sts \bullet stf \bullet sma

• ldr • lds • ldf

The two common instructions are str and ldr which are store and load operations. These two instructions take two parameters: The first is the register used in the store or load operation and the second is the memory address. They either take a 16 bit immediate address which is used as the full address for the access or a register as address. As the registers are only 8 bits, the register value is only used for the lower 8 bits of the address and the upper 8 bits are the value of the MAR. The upper 8 bits of the MAR can be set with the sma instruction which takes either a register or an 8 bit immediate value.

The lds and sts instructions are used for accessing the stack. They only take immediate addresses and the assembler makes sure that the upper 8 bits of the address are 0xff to always access the stack.

The ldf and stf functions work very similar in only accessing the stack. However, before the memory access, the SP is incremented and after the access, it is restored. This way, it is possible to access parameters of a function that is called.

Some examples:

| ldr r0, [Oxabba] | Loads the value from address $0xabba$ into $r0$ |
|---|--|
| str r1, [0xc0de] | Stores the value in $r1$ to address $0xc0de$ |
| <pre>sma Oxca mov r0, Oxfe ldr r0, [r0]</pre> | Loads the value from address Oxcafe into r0 |
| lds r1, [0x42] | Loads the value from m address $0xff42$ which is translated into $0x\{sp\}42$ into r1 |
| stf r0, [Oxab] | Stores the value in r0 to address 0xffab with incremented SP which is translated into 0x{sp+1}ab |

3.2.2.3 Miscellaneous Instructions

There are four more instructions that are essential:

• mov • b • call • ret

The mov instruction either takes two registers or one register and an 8 bit immediate value as parameters. When specifying two registers, the content of the second register is copied to the first register. Otherwise, the immediate value is stored in the register. The branch (b) instruction takes a 16 bit immediate value which is used as the new PC content. It is the only conditional instruction that is available in the EDiC instruction set. The second column of table 3.1 lists all the possible suffixes for conditional branches and their meanings. If the condition is met, the branch is executed, otherwise the instruction has no effect.

The call instruction also takes a 16 bit immediate address which is the destination address for the call. In contrast to the branch instruction, the call is not conditional (i.e. it is always executed) and has the side effect of incrementing the SP and storing the current PC on the stack at address 0x{sp}ff.

The ret instruction is used at the end of a function without any parameters to restore the PC from the stack at address $0x{sp}ff$ and decrement the SP again.

Some examples:

| mov r0, 0xda | Sets r0 to Oxda |
|------------------------|---|
| mov r1, r0 | Copies the value of r0 to r1 |
| cmp r0, 10 blt 0x42 | Branches to address (sets the PC to) $0x42$ if the value of $r0$ is smaller than 10 |
| call 0x100 | Calls a function at address 0x100 |
| ret | Returns from a function to the caller |

3.2.3 Constants

One main improvement that an assembler allows over manually setting the instruction bits is the use of constants in the code. They can be declared to represent a value and then used similarly to variables of higher level languages instead of hard coded numbers. The EDiC assembler supports three kinds of constants: Value constants, labels and string constants.

3.2.3.1 Value constants

Value constants are the easiest kind of constants available. The first two lines of code examples 3.6 and 3.8 both declare a value constant that is used exactly like in higher level languages. In each instruction, which takes an immediate value, the immediate value can be specified with the name of the constant and the value of the constant is then used instead. In code example 3.8 line 5 (ldr r0, [PRNG_SEED]) is assembled into the same instruction as ldr r0, [0x00]. Constant declarations have the format <name> = <value>.

These value constants can be used to make the code easier to understand. For example str r0, [SIMPLE_I0] makes it clearer that the value of r0 is not stored in some memory location but rather send to some I/O device (in this case the internal I/O register from section 2.2.6). It also prevents errors where a typo in an address causes unintended behavior of the code.

3.2.3.2 Labels

Instruction labels are often used in assemblers and are very important. They are declared by specifying a label name followed by a colon and hold the address of the next instruction. Then, they can be used as immediate values for branch and call instructions to jump to the instruction followed by the label declaration. As

```
PRNG SEED = 0x0000
                                       // no instruction
    SIMPLE IO = 0xfe00
                                       // no instruction
2
                                       b 0x0a // inserted by assembler
3
                                       // no instruction
    prng:
4
      ldr r0, [PRNG_SEED]
                                         ldr r0, [0x00]
5
      subs r0, 0
                                         subs r0, 0
6
      beq prngDoEor
                                         beq 0x07
7
      lsl r0, 1
                                         lsl r0, 1
8
                                         beq 0x08
      beg prngNoEor
9
      bcc prngNoEor
                                         bcc 0x08
10
    prngDoEor:
                                       // no instruction
11
                                         xor r0, 0x1d
      xor r0, 0x1d
12
    prngNoEor:
                                       // no instruction
13
      str r0, [PRNG_SEED]
                                         str r0, [0x00]
14
    ret
15
16
                                       // no instruction
    start:
17
                                         mov r0, 0
      mov r0, 0
18
      str ro, [PRNG SEED]
                                         str r0, [0x00]
19
      prng_loop:
                                       // no instruction
20
        call prng
                                            call 0x01
21
        str r0, [SIMPLE IO]
                                            str r0, [0xfe00]
22
      b prng_loop
                                         b 0x0c
23
```

Code Example 3.8: The PRNG of code example 3.6 with the constants and labels resolved.

seen in code example 3.8 the line 21 (call prng) is assembled into the instruction call 0x01 which is the location of the instruction after the declarations of the prng label (ldr r0, [PRNG_SEED]).

The load instruction from line 5 is actually the first instruction of the PRNG algorithm, however, it is not assembled as the first instruction. This is due to a special label being declared in the code at line 17. When the start label is declared, then a new instruction is inserted at the beginning which unconditionally branches to the instruction after the start label. This can be seen in code example 3.7 where the first instruction is a b 0x0a because the first instruction after the start label got assembled to the address 0x0a. The use of the start label comes especially clear in the section 3.2.4.

3.2.3.3 String constants

The third constant is rather advanced and uses very EDiC specific features. It allows the definition of character strings with a maximum length of 255 chars which can

```
include "prng.s"
1
    include "uart_16c550.s"
2
    0x20.LOST STRING = "You lost!!! Score: "
3
    lost:
4
      // [...]
5
      // output the lost string
6
      mov r0, LOST_STRING
7
      call outputString
      // output the score
      ldr r0, [SNAKE LENGTH]
10
      call outputDecimal
11
      // [...]
12
13
    // r0: address of string
14
    outputString:
15
      str r1, [0xfffe]
16
      sts r0, [0x00]
17
      mov r1, 0
18
      outputStringLoop:
19
        lds r0, [0x00]
20
        sma r0
21
        ldr r0, [r1]
22
        cmp r0, 0
23
        beq outputStringEnd
24
        call uart write
25
        add r1, 1
26
        cmp r1, 255
27
        bne outputStringLoop
28
      outputStringEnd:
      ldr r1, [0xfffe]
30
    ret
31
```

Code Example 3.9: Excerpts of the Snake assembler program used in the demo in figure 1.1.

later be used. Differently to the value constants of section 3.2.3.1 strings cannot be used as parameters to instructions directly, because a string is a rather complex data structured in the context of assemblers. In the EDiC assembler a string can be defined as shown in code example 3.9 line 4 with the syntax <address>.<name> = "<value>". In the example a string constant with the name "LOST_STRING" is defined to have the content "You lost!!! Score: " at the address 0x20. The EDiC assembler treats a string as an NULL-terminated array of characters, meaning that the characters are stored consecutively in memory and after the last character a NULL-byte is stored to mark the end of the string. The address of a string constant

```
mov r0, 0x59 // 'Y'
                                           str r0, [0x200a]
                                       22
    str r0, [0x2000]
                                           mov r0, 0x20 // ''
2
                                       23
    mov r0, 0x6f // 'o'
                                           str r0, [0x200b]
3
                                       24
    str r0, [0x2001]
                                           mov r0, 0x53 // 'S'
4
                                       25
                                           str r0, [0x200c]
    mov r0, 0x75 // 'u'
5
                                       26
    str r0, [0x2002]
                                           mov r0, 0x63 // 'c'
                                       27
6
    mov r0, 0x20 // ''
                                           str r0, [0x200d]
7
                                       28
                                           mov r0, 0x6f // 'o'
    str r0, [0x2003]
8
                                       29
    mov r0, 0x6c // '1'
                                           str r0, [0x200e]
9
                                       30
                                           mov r0, 0x72 // 'r'
    str r0, [0x2004]
10
                                       31
    mov r0, 0x6f // 'o'
                                           str r0, [0x200f]
11
                                       32
    str r0, [0x2005]
                                           mov r0, 0x65 // 'e'
12
                                       33
    mov r0, 0x73 // 's'
                                           str r0, [0x2010]
13
                                       34
    str r0, [0x2006]
                                           mov r0, 0x3a // ':'
                                       35
14
                                           str r0, [0x2011]
    mov r0, 0x74 // 't'
15
                                       36
    str r0, [0x2007]
                                           mov r0, 0x20 // ' '
16
                                       37
    mov r0, 0x21 // '!'
                                           str r0, [0x2012]
17
                                       38
    str r0, [0x2008]
                                           mov r0, 0x0 // NULL-byte
18
                                       39
    mov r0, 0x21 // '!'
                                           str r0, [0x2013]
19
                                       40
    str r0, [0x2009]
                                           mov r0, 0 // restore r0
20
                                       41
   mov r0, 0x21 // '!'
21
```

Code Example 3.10: The instructions resulting from the string definition of code example 3.9 line 4.

actually defines the upper 8 bits of the address where the string is stored and is also the value of the constant itself. This means that the string in the example is actually stored at addresses 0x2000 to 0x2013 (18 characters plus 1 NULL-byte) and mov r0, LOST_STRING in line 9 is equivalent to mov r0, 0x20. As the assembler has no direct control over the memory contents as for example the ARM assembler, each string declarations results in two instructions per character that are inserted at the start of the program¹ as shown in code example 3.10.

Code example 3.9 lines 15 to 31 show a function that gets the upper 8 bits of the string address as a parameter in r0. It outputs the characters one by one in a loop until the NULL-byte is reached. To retrieve each character, firstly the sma instruction is called with the MSBs of the address and then the ldr instruction with the loop register r1 as an address argument is called. The character (in r0) is then passed as an argument to the uart write function.

¹Before the b start instruction that is inserted when a start label exists.

3.2.4 File imports

An important factor of software development is reusability. This also holds for assembler development and is the reason why the EDiC assembler supports including other assembler files. This can for example be used to write a library utility and then importing its functions for multiple projects. This way, a bug fix in the utility library will be fixed across all projects at the same time.

As can be seen in code example 3.9 lines 1 and 2, the EDiC assembler supports the include keyword followed by a relative or absolute filename in double quotes. Before assembling a file, all the include statements are replaced with the content of the file specified. All the constants and labels are used as is with some exceptions:

- The start label of all included files are discarded and the main file is required to provide a start label. Otherwise, the starting point is ambiguous and probably not where the programmer expects it.
- Constants from included files can be overwritten in the main file. This can be useful when value constants hold memory locations of global variables that need to be repositioned in the main file. This also shows why it is important to use value constants for memory locations of global variables.

3.2.5 Syntax Definition for VS Code

Syntax Highlighting has become a very important factor for software development as Integrated Development Environments (IDEs) grow more capable. The highlighting is usually done by firstly, parsing the syntax and associating parts of the text file with specific categories and, secondly, assigning styles like font color to these categories. This way, a programmer can select a global color scheme which will define colors for different categories for all programming languages. When applied correctly, code in different languages becomes easier to recognize because variables are always colored the same way, no matter the language. The syntax parser, however, needs to be selected correctly for each file type and categorize the file content correctly.

Even though the EDiC syntax is similar to the ARM syntax, it is not syntactically identical which makes syntax highlighting in editors difficult. As can be seen in code example 3.9 line 3, the ARM syntax definition used for the highlighting in this document is not perfect (The leading 0 is red and the string is not colored correctly).

```
include "prng.s"
     include "uart_16c550.s"
 2
     0×20.LOST_STRING = "You lost!!! Score: "
 3
 4
     lost:
 5
     • • // • [ ... ]
     ··//·output·the·lost·string
 6
 7
     mov r0, LOST_STRING
 8
     call outputString
     ··//·output·the·score
9
10
     ldr r0, [SNAKE_LENGTH]
     ··call outputDecimal
11
12
     ··//·[...]
13
     // r0: address of string
14
15
     outputString:
     str r1, [0×fffe]
16
     sts r0, [0\times00]
17
18
     · · mov · r1, · 0
19
     outputStringLoop:
20
     \cdot lds r0, [0 \times 00]
     · · sma·r0
21
     ···ldr·r0, [r1]
22
23
     ···cmp·r0, ·0
     beq outputStringEnd
24
25
     call uart write
     add r1, 1
26
27
     cmp r1, 255
     bne outputStringLoop
28
     outputStringEnd:
29
     ldr r1, [0×fffe]
30
31
```

Figure 3.1: The syntax highlighting with the EDiC Visual Studio Code Extension and the Atom One Light Theme [1].

As Visual Studio Code [20] is one of the leading extensible code editors, an extension for EDiC assembler has been developed and published [25]. The code of the code example 3.9 is shown again in figure 3.1 as it is highlighting using the developed extension. The extension itself mainly consists of a TextMate language definition [18] and configuration files to work correctly with Visual Studio Code. TextMate is a tokenization engine which works with a structured collection of regular expressions as language definitions.

4 FPGA Model

The goal of the FPGA model is to proof the general workings of the CPU architecture before finalizing the hardware layout and PCB design. With the design running on an actual FPGA it is also possible to debug and test extension cards without the actual hardware of the EDiC.

4.1 FPGA Background

An FPGA can be seen as an intermediary between Application-Specific Integrated Circuits (ASICs) and general purpose CPUs. It allows for a lot more design flexibility in contrast to ASICs by being reprogrammable but at the same time has similar applications. The first FPGA was released by Altera in 1984 which featured a quartz window to erase the Erasable Programmable Read-Only Memory (EPROM) cells that hold the configuration. It only had eight macrocells and a maximum frequency of about 30MHz [2]. Today's FPGAs can have several million logic elements with several hundred MBs of Block RAM (BRAM), more than thousand floating-point Digital Signal Processors (DSPs) and usual frequencies of more than 200MHz. However, the general idea of how FPGAs work stayed the same:

Field Programmable means that the FPGA can programmed in the application field, even though configure is the better word to be used.

Gate Array stands for an array of logic gates which make up the FPGA. These logic gates can then be freely routed by the developer and with that different logic functions can be implemented.

FPGAs are built out of so called Configurable Logic Blocks (CLBs) which can be connected with each other to create larger designs. Such a CLB contains several different elements like Lookup Tables (LUTs), registers and Multiplexers (MUXs) which allows one CLB to provide different functionality as needed. Each LUT can encode any kind of multi-bit boolean functionality. Figure 4.1 shows how a 2-bit LUT is built out of three 2-to-1 MUXs. Depending on the input values of the SRAM into the MUXs, a different logic function can be implemented. For example: For

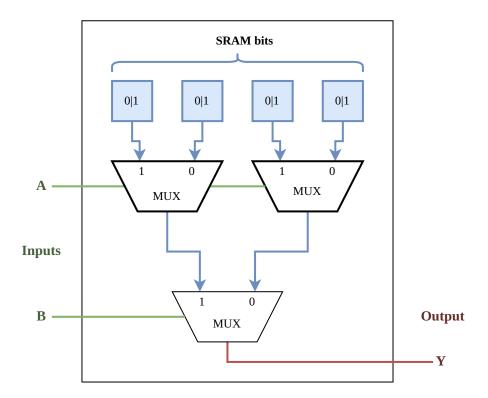


Figure 4.1: Internal structure of a 2-bit LUT

a NAND function, the SRAM is loaded with the bits 0111. In FPGAs these LUTs usually take 4-6 bit inputs and can, therefore, implement more complex logic functions.

Combining these LUTs with registers, complex hardware DSPs and a lot more advanced hardware, modern FPGAs are very capable and complex devices that are increasingly used in prototyping and low to medium quantity products. There are several cheaply available FPGAs development boards that are very well suited for a FPGA prototype of the EDiC.

4.2 FPGA choices

For the EDiC the Nexys A7 development board [9] with the AMD-Xilinx Artix 7 XC7A100T-1CSG324C FPGA has been chosen. Its synthesis tool is the AMD-Xilinx Vivado [30] which is available as a free version and includes an advanced simulation environment.

```
assign s_cin[0] = i_ctrlAluSub;
for (i = 0; i < 8; i=i+1) begin
    assign s_yXor[i] = i_a[i] ^ s_b[i];
    assign s_yAnd[i] = i_a[i] & s_b[i];
    assign s_yAdder[i] = s_cin[i] ^ s_yXor[i];
    assign s_cin[i + 1] = s_yAnd[i] | (s_cin[i] & s_yXor[i]);
end</pre>
```

Code Example 4.1: Behavioral Verilog Description of the Adder (including XOR and AND) of the ALU module.

4.2.1 Language Choice

There are two main Hardware Description Languages (HDLs): Verilog and VH-SIC (Very High Speed Integrated Circuit) Hardware Description Language (VHDL). Both are widely supported and used and can also be used in the same project with the help of mixed-language compilation. At the Technical University Berlin (TUB) VHDL is taught, however, in general both are used about equally often [22]. As Verilog is often cited as being less verbose and, therefore, easier to write and understand it was chosen as the hardware description language.

Code example 4.1 shows the Adder described in Verilog as an example. It iterates over all 8 bits, calculates the XOR and AND results and based on these and the carry input, the bit result and the carry output is calculated.

4.2.2 Tri-state Logic in FPGAs

One major problem with tri-state bus logic for FPGAs is that most current era FPGAs do not feature tri-state bus drivers in the logic slices. Most FPGAs do have bidirectional tri-state transceiver for I/O but not for internal logic routing. However, the HDLs (both VHDL and Verilog) support tri-state logic and the Xilinx Simulation tool also does. Therefore, a simulation with tri-state logic would work but it cannot be synthesized.

This is solved with a custom module for each tri-state network "tristatenet.v". Each tri-state driver exposes the current data and output enable signal to the tristate module which then has only one output which represents the value of the net. If none of the driver have an active output enable, the output is Oxff; if one of the driver has an active output enable, the output represents its value and if more than one driver have an active output enable, an error is raised. The modules logic representation for a tri-state net with two inputs is shown in figure 4.2. The o_noe is

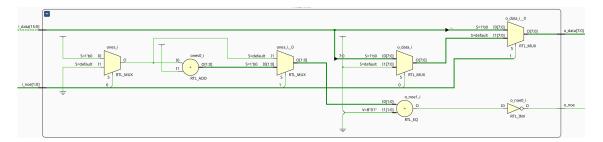


Figure 4.2: The elaborated tri-state module with two 8 bit inputs.

only active (low) if exactly one input i_noe is active (low) and depending on it, the data output is selected. For this FPGA it is implemented with one LUT4 primitive per output data bit.

4.3 Behavioral Implementation

Two kinds of FPGA designs were developed in the process. The first is a behavioral description of the whole CPU and, therefore, only models the general workings of a module but does not describe the individual chips that are used in the final hardware assembly. The description in code example 4.1, for example, is a behavioral description because it only describes the logical level of what should happen. This is quite useful for development, because it is quickly changed and bugs are fixed more efficiently as opposed to a chip-level model.

To visualize how a behavioral simulation looks like, a simulation of the code in code example 4.2 is shown in figure 4.3. The first instruction (mov r1, 0x12) starts at 1 µs where the instruction step counter is 0 and the instruction fetch is executed. Step 1 increments the program counter and starts the instruction decoding. The mov instruction only consists of one step and, therefore, the ctrInstrFinishedN signal is asserted in step 2 together with the control signals of the actual instruction. Due to ctrInstrFinishedN, the step counter is reset to 0 and the second instruction (pc==1) is executed. After the instruction fetch steps, the ALU adds 0x12 and 0x42 at 2 µs and writes the result into r1 at step==3. The third instruction then just branches to itself, resulting in an infinite loop.

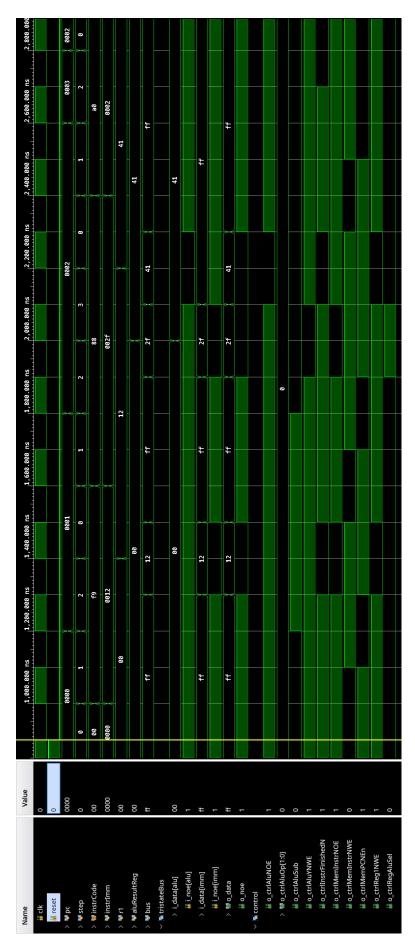


Figure 4.3: Waveform of the relevant signals for setting a register to 0x12 and adding 0x2f to it (Assembler code is shown in code example 4.2).

```
mov r1, 0x12
add r1, 0x2f
end:
b end
```

Code Example 4.2: The code for the waveform example of figure 4.3.

4.4 Chip-level Implementation

With the behavioral simulation working, the hardware schematic can be developed. The schematic and then the placing and routing for the PCB is described in chapter 5. However, for the EDiC it was decided to add another verification step after developing the schematic. From the schematic a netlist is generated which is usually used to summarize all the components and connections in a machine readable format for the software that does placing and routing. Here, a tool was written which converts a given netlist into a Verilog file which can be compiled and synthesized by Vivado.

4.4.1 Conversation Script

The netlist file used is an *.edn which is exported by OrCAD/CAPTURE version 9.2.1.148. It follows the Electronic Design Interchange Format (EDIF) and contains a list of all instances (i.e. ICs and other components) with port numbers and a second list of all nets (connections between ports). The conversion script consists of a parser which analyzes such a netlist. The parsed netlist is then further processed until a verilog file can be created. The generated verilog file only consists of wire definitions and module instantiations. Each of the instantiated modules has its own, manually written implementation. The implementation for an 74F08 (quad AND gate) is, for example, shown in code example 4.5.

Code example 4.3 specifies the instance U54 which is an 74AS867. The format also specifies the port numbers but they are not processed by the parser because they are not required. Code example 4.4 then specifies a net with the name PCINO which connects U52 port 18 with U51 port 18 and U54 port 3. In this case U52 and U51 are both 74F245 octal bus transceivers where port 18 is the B0 tri-state output port and U54 is a 74AS867 (synchronous up/down counter with load) where port 3 is the D0 input port. Depending on the control signals of U51 and U52 this net connects the 0th bit of the bus or the instruction immediate with the 0th bit of the load input of the PC. Internally the list of instances and list of nets is combined into a list of

```
(instance U54
     (viewRef NetlistView
2
      (cellRef &74AS867 0
3
      (libraryRef OrCAD LIB))) (designator "U54")
4
     (property PCB Footprint (string "DIP.100/24/W.300/L1.175"))
5
     (property Name (string "I656203"))
6
     (property Value (string "74AS867"))
7
     (portInstance &3)
     (portInstance &4)
     (portInstance &5)
10
     (portInstance &6)
11
     (portInstance &7)
12
     (portInstance &8)
13
     (portInstance &9)
14
     (portInstance &10)
15
     (portInstance &14)
16
     (portInstance &22)
17
     (portInstance &21)
18
     (portInstance &20)
19
     (portInstance &19)
20
     (portInstance &18)
^{21}
     (portInstance &17)
22
     (portInstance &16)
23
     (portInstance &15)
24
     (portInstance &13)
25
     (portInstance &24)
26
     (portInstance &12)
27
     (portInstance &11)
28
     (portInstance &23)
29
     (portInstance &1)
30
     (portInstance &2))
```

Code Example 4.3: An EDIF definition of an instance as exported by Or-CAD/CAPTURE.

```
(net PCINO)
(joined)
(portRef &18 (instanceRef U52))
(portRef &18 (instanceRef U51))
(portRef &3 (instanceRef U54)))
(property Name (string "PCINO")))
```

Code Example 4.4: An EDIF definition of a net as exported by Or-CAD/CAPTURE.

```
// quad and https://www.ti.com/lit/ds/symlink/sn74ls08.pdf
    module ic74x08(
2
    input wire port1,
3
    input wire port2,
4
    output wire port3,
    input wire port4,
6
    input wire port5,
7
    output wire port6,
    input wire port7,
    output wire port8,
10
    input wire port9,
11
    input wire port10,
12
    output wire port11,
13
    input wire port12,
14
    input wire port13,
15
    input wire port14
16
    );
17
18
    assign port3 = port1 & port2;
19
    assign port6 = port4 & port5;
20
    assign port8 = port9 & port10;
21
    assign port11 = port12 & port13;
22
23
    endmodule
24
```

Code Example 4.5: Verilog implementation for the 74F08 IC.

instances where each instance contains a mapping of port numbers to connected nets.

The parser discards all components except logic ICs (id starting with 'U') and 0Ω resistors. The schematic includes some 0Ω resistors between control signals to be able to rewire them more easily on the PCB if needed. As they essentially behave as direct connections, the nets on either side of one 0Ω resistor are merged.

The basic instances are easily converted to verilog instantiations. However, there are some obstacles that need to be taken with more advanced instances.

4.4.1.1 **EEPROM**

The 6 EEPROMs (3 for the instructionROM and 3 for the microcode) need to be instantiated with the correct data loaded into them. Those six instantiations are

```
microCodeRom inst_microCodeRom (
1364
       .clka(i asyncEEPROMSpecialClock),
1365
       .addra({MC A14, MC A13, MC A12, MC A11, MC A10, MC A9, MC A8,
1366
        MC A7, MC A6, CTRLALUOP1 SRC, CTRLALUOP0 SRC, CTRLALUSUB SRC,
        MC A2, MC A1, MC A0}),
       .douta({unconnected U87 19, unconnected U87 18,
1367
        unconnected_U87_17, CTRLINSTRFINISHED_SRC,
        CTRLMEMPCTORAM_SRC, CTRLMEMPCFROMIMM_SRC, CTRLMEMPCEN_SRC,
        CTRLMEMRAMOE SRC, CTRLMEMRAMWE SRC,
        CTRLMEMINSTRIMMTORAMADDR SRC, CTRLMEMMAR1WE SRC,
        CTRLMEMMAROWE SRC, CTRLMEMINSTROE SRC, CTRLMEMINSTRWE SRC,
        CTRLMEMSPEN SRC, CTRLMEMSPUP SRC, CTRLMEMPCLOAD SRC,
        CTRLREG1BUSOE SRC, CTRLREGOBUSOE SRC, CTRLREGALUSEL SRC,
     \hookrightarrow
        CTRLREG1WE SRC, CTRLREGOWE SRC, CTRLALUOE SRC,
         CTRLALUYWE SRC})
    );
```

Code Example 4.6: Verilog instantiation of the microcode ROM generated out of three EEPROM instantiations.

identified by the unit id and the wires are then connected to one of the custom Xilinx ROM IP Cores which are configured with the respective initial values. The addresses for one ROM instantiations are used and then all 24 data ports from the 3 EEPROMs are connected resulting in a verilog instantiation as shown in code example 4.6.

4.4.1.2 tri-state Ports

Some ICs provide tri-state ports. As discussed above, they cannot be implemented on FPGAs and, therefore, need to be converted. The same tristatenet component as in the behavioral implementation is used. However, for this to work, each bidirectional port of the ICs needs to be replaced by one input and one output port. Also, one output enable port needs to be added. Then the output port that replaced the bidirectional port is connected to an input of the tristatenet instance and a new net is created for each tristatenet which is the actual value of the net (the output of the tristatenet module). The tristatenet for the PCINO signal (code example 4.4) is represented by the instantiation shown in code example 4.7.

```
tristatenet #(
1794
        .INPUT COUNT(2)
1795
     ) inst triBusPCINO (
1796
        .i data({PCINO U51, PCINO U52}),
1797
        .i noe({U51 b noe, U52 b noe}),
1798
        .o data(PCINO),
1799
        .o_noe(PCINO_noe)
1800
     );
1801
```

Code Example 4.7: Verilog instantiation for the tri-state Net PCINO.

4.4.1.3 RAM and EEPROM clock

Another problem with the FPGA implementation in general is that both, the SRAM and EEPROM chips used are asynchronous and the FPGA only has synchronous logic elements. In the behavioral implementation, exact timings were no requirement and, therefore, the memory and ROMs were clocked with the inverse clock, mimicking an asynchronous behavior. However, for the exact netlist FPGA implementation this is not a good way to mimic the behavior. Therefore, the exact delay of both chips were calculated with the help of the datasheets and they are both clocked with a custom clock that is out of phase with the global logic clock by the exact amount of the delay.

This means, that the clock inputs of the memory and EEPROM instantiations are replaced with the corresponding custom clock as can be seen in code example 4.6.

Figure 4.4 visualizes how the main clock (CLK1 in the waveform) and the clock for the ROM (asyncEEPROMSpecialClock in the waveform) differ in phase. Consequently, the step register and with it the address for the microcode ROM change with a rising edge of the main clock but all the control signals which are outputs of the ROM change with the rising edge of the phase shifted clock.

4.4.1.4 Assignments

There are some connections which are unique to the FPGA implementation and, therefore, are not contained in the netlist. These are mainly the inputs and outputs of the CPU for the I/O extensions, the user buttons (reset, step etc.), clock oscillator, breakpoint addresses and so on. However, one exception are the L1-L4 and H1-H4 nets which are static nets connected to ground or 5V through resistors. They are used for logic inputs of ICs instead of directly using GND or 5V to ease the error

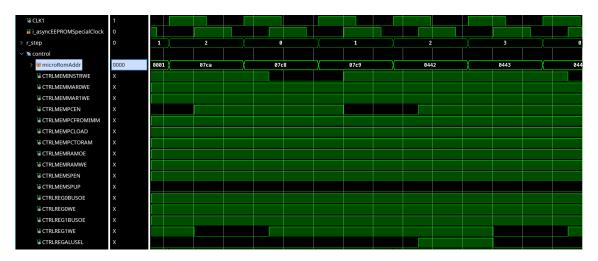


Figure 4.4: Waveform showing the clock used for the FPGA ROM to mimic the asynchronous behavior of the EEPROMs.

fixing on the PCB. If one would connect the pins directly to the GND or 5V planes, it would be hard to heat up the solder on the pin for removal because the whole plane needs to be heated. Additionally, when connected to the plane, there is no trace that can be scratched through if the pin needs to be connected to another net.

In the FPGA design the nets L1-L4 and H1-H4 are, therefore, assigned to 0 or 1 respectively.

4.4.1.5 Display Driver

The hardware build will feature 2 displays for the built-in I/O which can be directly addressed with 4 bits to display hexadecimal digits. The FPGA development board on the other hand, features simpler and more common 7-segment displays. In total, there are 8 7-segment displays of which two are used as the built-in I/O and the others are used for debugging when the CPU is halted. The wiring of the displays is shown in figure 4.5. For this purpose, a custom displayDriver has been developed which has 8 four bit data inputs for the digits plus 8 inputs for the dots between the digits. Additionally, 8 bits encode which 7-segment displays should be illuminated. It loops through the digits by setting each anode to 0 individually and setting the cathodes according the corresponding input bits. This way, each display is illuminated for 2ms which makes it look like all displays are illuminated all the time.

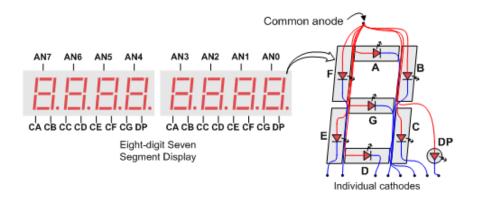


Figure 4.5: Overview of the 8 7-segment displays of the Nexys A7 development board [10].

4.4.2 RS232 I/O Extension Debugging

One goal of creating a logical replication of the CPU on a FPGA was to verify the I/O extension cards before ordering the large PCB for the CPU. All extension cards will be daughterboards and sit on top of the main PCB in a smaller form factor. The following logical connections are passed through pin headers:

- Bus (8 bits, bidirectional)
- I/O Address (lower 8 bits, to I/O)
- Control Signals:
 - ioCE: active when the upper 8 RAM address bits equal Oxfe.
 - <u>ctrlMemRamWE</u>: write enable signal. Write should only happen when <u>ioCE</u> is active.
 - ctrlMemRamOE: output enable signal. Read should only happen when ioCE is active.
 - clk: Clock signal.
 - reset: Reset signal.

Additionally, ground and 5V is passed through the connector. However, the Nexys A7 FPGA development board only features digital 3V3 connections on the side. Thus, an adapter board is required which converts the 3V3 voltages to 5V and the other way around while providing the correct pin locations for the Nexys A7 board and the daughterboard. Its schematic is shown in figure 4.6 where the 74LVC8T245 is used as a voltage converting buffer. For the control signals and addresses, its

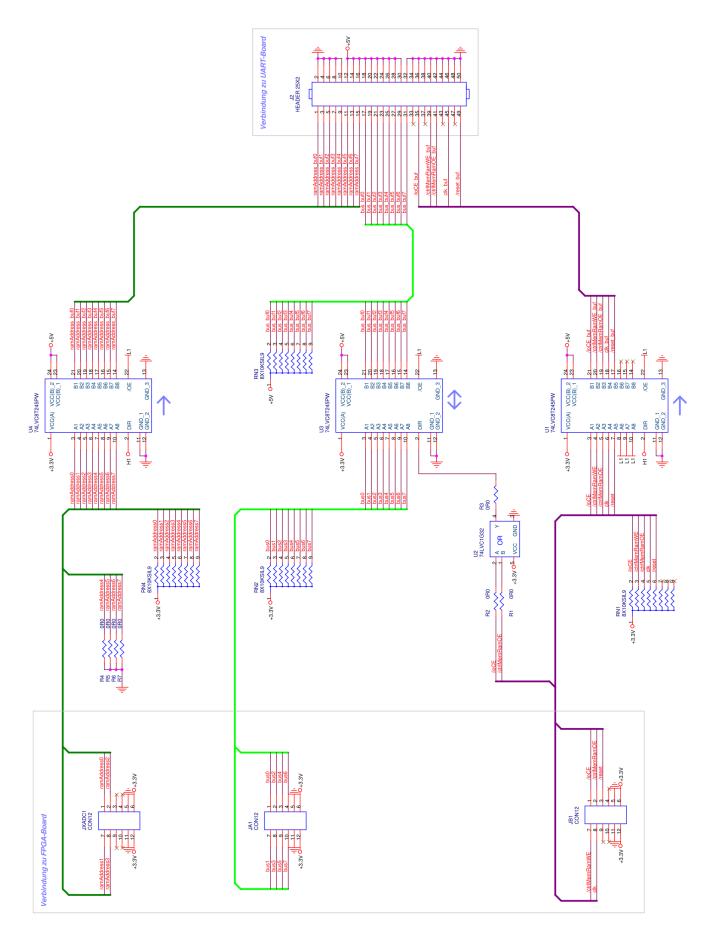


Figure 4.6: The Schematic for the 3V3 to 5V conversion to use extension cards with the FPGA development board.

direction is always from the A port (3V3) to the B port. On the other hand, the direction pin of the bus buffer is low (from B to A) when both, output enable and chip enable, signals are active.

5 Hardware Design

After the FPGA behavioral simulation is successful, the hardware design process is started. The initial step is designing a schematic (section 5.1) which is followed by the netlist simulation and the placing and routing of components and wires in section 5.2. Additionally, a timing analysis is performed to ensure that the clock frequency is as high as it is possible without risking any misbehavior.

5.1 Schematic

The full schematics of the hardware design can be found in appendix A in figures A.1 to A.7. The schematic is created in such a way that the logical connections are easy to understand. Each IC has its pins arranged for easy understanding and the connections have meaningful names to easier understand the logic.

The 74 series of ICs is used for the EDiC. However, a lot of decisions need to be made in choosing the correct ICs.

5.1.1 Register Comparison

The 74 series of logic ICs feature many different registers. The most basic register IC has n D-type flip-flops with respective data inputs and outputs plus one common clock input. On each rising edge of the clock the flip-flops capture the input values and hold them until the next rising edge of the clock. However, often it is required that a register does not capture data on every rising edge of the clock. This is done with an additional input, called *clock enable*. Implementing the clock enable with a basic AND gate of the clock and a control bit has the major drawback that glitches of the enable control signal can propagate to the clock input of the register and, therefore, falsely trigger the register. There are two widely used alternatives to the simple AND gate: The enable input can be used as the select input for an multiplexer to the data input of the flip flop, where it multiplexes between the actual input and the current output. This allows the flip-flop to always capture data but when the

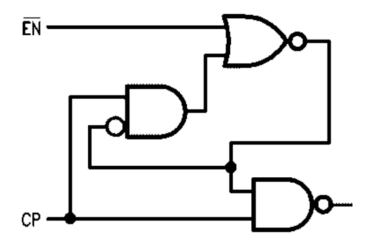


Figure 5.1: Clock Enable circuit of the 74F825 IC [6].

enable input is inactive, it recaptures the current output. The drawbacks are that each bit of the register needs a multiplexer at the input and, furthermore, that the flip-flops draw power on every clock pulse, even though no new data is captured. The 74F825 logic IC solves this with the circuit shown in figure 5.1. When the $\overline{\rm EN}$ input is low, NAND gate on the right negates the ${\rm CP^1}$. When the $\overline{\rm EN}$ input is high, on the other hand, the output does not change. This circuit prevents the $\overline{\rm EN}$ to trigger a falling edge (which would trigger the flip-flops) on the CP output. However, when the $\overline{\rm EN}$ goes high while the CP input is high, then the output also goes high. This is not directly a problem because the flip-flops only trigger on falling edges but is the reason for timing requirements on the $\overline{\rm EN}$ input which are discussed in more detail in section 5.3.


As the registers store the current state of execution, it is required that the registers start up to a known state. Therefore, some registers feature an asynchronous clear input (or set input) which forces all flip-flops to 0 (or 1). This is usually accomplished by modifying the classical D-type flip-flop to allow for setting and resetting the internal \overline{SR} NAND latches as shown in figure 5.2.

A third feature that may be important is a tri-state output which allows the register to be directly connected to a bus. It is accomplished by adding a tri-state output driver to the outputs of the flip-flops.

The register that was chosen for the EDiC is the 74F825 because it has all three features and is 8 bits wide. However, three other kinds of registers are also sparsely used in the EDiC:

• The 74AS867 is a more advanced synchronous counter register which is used for the PC and SP. They are described below.

 $^{^{1}}$ The internal flip-flops of the 74F825 are negative edge triggered

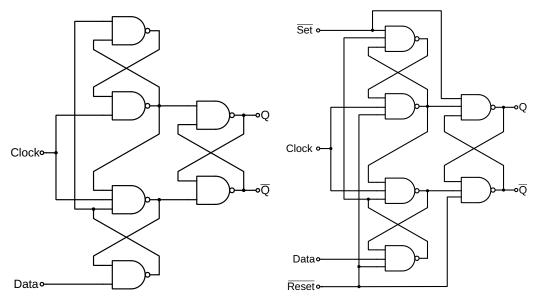

- (a) Classical D-type flip-flop built out of three \overline{SR} NAND latches [23].
- (b) D-type flip-flop modified to support Clear and Set [27].

Figure 5.2: Comparison of D-type flip-flops with and without Clear and Set.

- The 74F374 register only features the output enable and is used once where no additional control logic is required.
- The 74F273 is used for the built-in I/O to mimic the typical asynchronous extension cards and for the buffering of user control inputs (stepping etc.) because only a reset is required there.

5.1.2 LED Driver

The EDiC features many Light-Emitting Diodes (LEDs) showing the register contents to aid the understanding of the workings of a CPU. However, naively connecting the LEDs to the logic outputs of registers may lead to unwanted behavior because the outputs of all logic ICs have a limited current they can provide. This leads to the usage of specific buffers for the LEDs. Additionally, the current rating usually is higher for low-level output due to the internal workings of the output buffer. For example, the B outputs of a 74F245 non-inverting buffer are rated for maximum $-15 \, \text{mA}$ for high-level output and $64 \, \text{mA}$ for a low-level output [14]. Therefore, connecting the anode of a LED via a current limiting resistor to the output of a non-inverting buffer and the cathode to GND will not be ideal. To be able to draw more current from the buffer and thus having brighter LEDs, inverting buffers are used and the LEDs are connected "backwards". The 74ABT540 is the IC used as LED buffer in the EDiC with the a low-level current rating of $64 \, \text{mA}$ [26]. The

cathodes of the LEDs are then connected to the 74ABT540 and the anodes are connected through current limiting resistors to V_{cc} .

5.1.3 Program Counter & Instruction EEPROMs

Figure A.1 contains the PC (U54 and U55) with the instruction EEPROMs (U62, U67, U69) and the registers to store the instruction. The PC can be incremented or loaded from either an instruction immediate (U50 and U52) for branching or the SRAM (U49 and U51) for returning from a function call. To facilitate these operations, the 74AS867 is used which is an 8 bit synchronous counter with loading and asynchronous clear capabilities that can be cascaded with a ripple carry output. The PC is then used as the address to the instruction EEPROMs and can also be saved to the SRAMs. As the main memory is only 8 bits wide but the PC is 16 bit wide, a second SRAM IC is used to store the upper bits of the PC in the case of a function call (see section 5.1.4). The PC is, additionally, used as A inputs to the 74F521 (U53 and U60) comparators to detect when a breakpoint is reached. The 8 bit comparators can be cascaded via the enable input to compare 16 bit values. The B input is selected by the user with four hexadecimal digit switches.

The function of the "Test" block between the output of the instruction EEPROMs and the the instruction registers is explained in section 6.1. For understanding the function of the schematic, it can be assumed that it shorts the connections on the left with the corresponding connections on the right. The lowest of the 3 instruction registers (U64) holds the instruction code which is used in the section 5.1.5. The upper two registers (U70 and U71) hold the immediate value which can be used as an address in the section 5.1.4, as a branch address for the PC and the lower 8 bits can be used as immediate value on the bus (U75).

All 5 registers have LEDs connected to them as described in section 5.1.2.

5.1.4 Memory

The memory module (figure A.2) features three registers used for the address logic: The MAR (U68 and U63) is a 16 bit register where the lower and upper 8 bits can be loaded independently from the bus. The SP (U56) is a 74AS867 counter register similar to the PC but only 8 bits wide and wired differently to only allow incrementing and decrementing. The three different kinds of memory accesses are decoded

from the upper 8 address bits which either come from the instruction immediate (U74) or the MAR (U73):

- I/O access: When the upper 8 bits equal 0xfe (U79), the I/O chip enable (CE) signal is asserted and the SRAM CE is deasserted.
- Stack access: When the upper 8 bits equal 0xff (U76), the stack memory is selected. Then the upper 8 bits of the address is replaced by the SP and a 17th address bit is asserted to access the stack memory.

The address is then driven by several bus driver according to the decoding logic (U61, U63, U65, U66 and U72).

The actual SRAM ICs (U77 and U100) have voltage levels which are not quite compatible with the standard 74F ICs [12] which is why all the signals connecting to them are buffered with the 74ACT245 [13] (U201, U202, U203, U204 and U205).

5.1.5 Control Logic

Figure A.3 contains two registers for the address of the microcode EEPROMs (U85, U86 and U87) of which the data pins are the control signals (section 2.3). The first registers (U83) is used as a synchronous 3 bit step counter which increments each cycle except when the halt signal is asserted. The instruction finished control signal will reset the step counter to 0 at the next cycle. U83 also registers the four ALU flags and U84 registers the instruction to synchronies all address bits for the EEPROMs.

5.1.6 Clock and Reset

Figure A.4 contains the oscillator (X1) whose frequency is determined in section 5.3 and a active low reset controller (U34) which resets on power-on and can be combined with a user reset switch (SW1301). The clock and reset is buffered with an 74ABT245 for minimal latency. To avoid glitches (see section 6.2) on the four user inputs, a low pass and a Schmitt trigger and two registers are used. A multiplexer (U39) generates the halt signal from the debug user inputs and the instruction finished control signal to implement the logic described in section 2.2.7

5.1.7 Built-In I/O

The built-in I/O (figure A.5) consists of one register to hold the output value (U92) which is connected to two hexadecimal displays (U93 and U94). For input two hexadecimal switches (SW10 and SW11) are used with a bus driver (U91). To control the register clock pulse and the output enable of the bus driver, the I/O CE is combined with the I/O write enable and I/O output enable and the I/O address is compared with 0x00 (U88).

5.1.8 Register Set and ALU output

The register set in figure A.6 consists of two registers (U40 and U41) which can be loaded from the bus. The register outputs can drive the bus (U44 and U45) and are multiplexed for the A input of the ALU (U42 and U43). After the combinatorial ALU (section 5.1.9), the four operation results are multiplexed (U5, U6, U7 and U8) and stored in the ALU output register (U9). Even though the ALU output register features output enable inputs, an indivual bus driver is used (U10) because the content of the ALU output register should be displayed to the user (U11). The carry flags are also multiplexed (U101) as the carry flag from the shift operation is generated independently. The overflow flag is generated in the combinatorial schematic of the ALU, the negative flag is just the MSB of the output and the zero flag is deduced from a comparison with zero (U12). All four flags are then stored in a register (U97).

5.1.9 Combinatorial ALU

Figure A.7 shows the ripple carry adder on the left composed out of 8 full adder and with subtracting capabilities. The barrel shifter on the right side is explained in depth in section 2.2.1. The carry flag resulting from a shift operation should always represent the last bit which was shifted out of the 8 bits and should be unchanged when shifting by 0. This is accomplished with another multiplexer (U102).

5.2 Placing and Routing

After designing the schematic all the components need to be placed on the PCB. All logic ICs are listed in table 5.1. For placing and routing several factors are

Table 5.1: All logic ICs used in the EDiC.

| IC | Quantity | Function |
|-----------|----------|--|
| 74F245 | 17 | Tri-state Octal Bus Transceiver |
| 74ABT540 | 14 | Inverting Octal Buffer (LED Driver) |
| 74F157 | 12 | Quad 2 to 1 multiplexer |
| 74F825 | 10 | Octal register with Tri-state, Asynchronous Clear and Clock Enable |
| 74F86 | 7 | Quad XOR |
| 74F08 | 7 | Quad AND |
| 74F521 | 6 | 8 bit Inverting Comparator with Enable |
| 28C256 | 6 | EEPROM with 15 address bits |
| 74ACT245 | 5 | Octal Bus Transceiver used for SRAM |
| 74F153 | 4 | Dual 4 to 1 multiplexer |
| 74F32 | 4 | Quad OR |
| BERG40 | 3 | 40 pin Connector for Test-Adapter |
| BERG26 | 3 | 26 pin Connector for Test-Adapter |
| 74F151 | 3 | 8 to 1 multiplexer |
| 74AS867 | 3 | Synchronous 8 bit cascaded counter with loading |
| BERG10 | 2 | 10 pin Connector for Test-Adapter |
| 74F273 | 2 | Octal register with clear |
| 74F04 | 2 | Hex Inverter |
| AS6C4008 | 2 | SRAM with 19 address bits |
| 5082_7340 | 2 | hexadecimal display |
| 74ACT14 | 1 | Hex Inverter with Schmitt Trigger |
| DS1813-10 | 1 | Reset Generator |
| 74F374 | 1 | Octal register with output enable |
| 74ABT245 | 1 | Bus driver used for clock and reset |
| Sum | 118 | - |

important. As the goal of the EDiC is to be easy to understand for future students, all components were not only placed to optimize the wiring but a focus was to place components of the same modules close together. Additionally, extra space was left to mark each module and to name all the LEDs on the silkscreen of the PCB for easier reference. Figure 5.3 is a rendering showing the traces (red and green), silkscreen (violet) and through-holes/vias (green/yellow).

Especially on larger PCBs and designs with quickly switching power consumption it

is important to ensure good power delivery to all components. In the case of the EDiC this is achieved by using a 4-layer PCB with the two internals layers being filled with GND and 5V panes. The top and bottom layer are then used for logical connections where the most efficient wiring can be done when one layer mostly has vertical wires (red traces in figure 5.3) and the other layer mostly horizontal wires (green traces). This way interference between vertical and horizontal traces is not possible due to the GND and 5V panes separating the logic panes.

Another important factor to bear in mind is to route the traces in a way that makes it possible to access every trace on the PCB. It is always possible that some bug was not detected in the schematic design or netlist simulation. If a bug has been found it may be required to cut a trace and rewire it (see chapter 6). Therefore, logical wires are always placed on the top or bottom pane and on the top pane traces will never be completely covered by ICs. If, for example, connecting pins 1 and 24 of a 24 pin IC (they are directly opposite of each other) they should not be connected directly but a detour should be taken to expose the trace from under the IC.

It is also possible that a new IC needs to be placed on the PCB to fix a bug, like an extra register or bus driver. Therefore, through holes are provided to allow spare ICs to be placed at convenient locations throughout the PCB.

5.3 Timing Analysis

To figure out what the maximum frequency is at which the EDiC can operate on, a detailed timing analysis was performed. The timing analysis computes the path with the longest propagation delay which is called the critical path. The delay of the critical path can then be used as a baseline for choosing the correct frequency.

Figure 5.4 visualizes how the propagation delays work: Each IC has delays which are specified in the datasheet. In the example of figure 5.4, a value of register r_0 goes through a combinatorial path and is then stored in register r_1 . The registers have a propagation delay t_p which specifies the time from a rising edge of the clock to the output (Q). In theory it is also important to hold the input data of a register for the specified hold delay t_h , however, in the EDiC this is no problem. Then the combinatorial path also has propagation delays from inputs to outputs which need to be added up (t_c). At the next register, a setup time t_s has to be met which specifies the amount of time the input data needs to be stable before the rising edge.

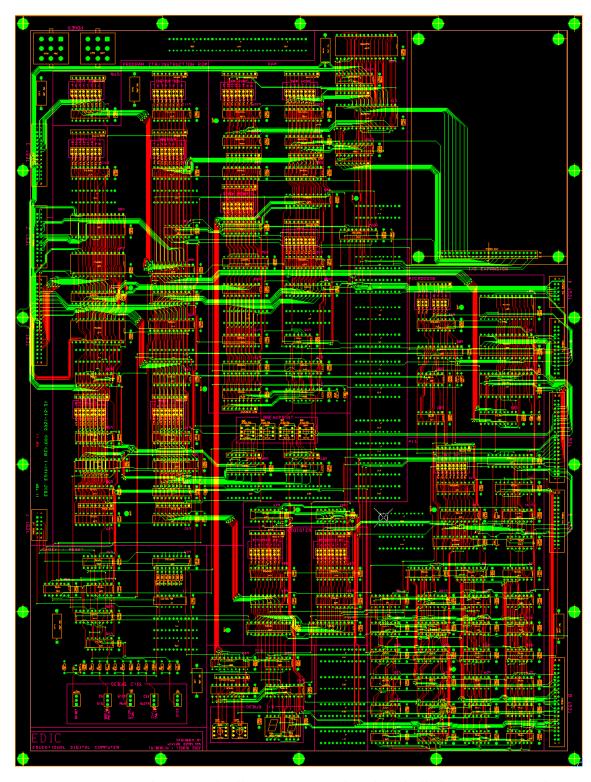


Figure 5.3: Rendering with all components placed and all the traces routed on the two logic layers (green and red).

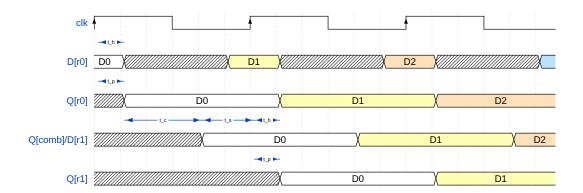


Figure 5.4: Timing relations for a combinatorial datapath between two registers.

The figures 5.5 to 5.7 show three timing analysis for the EDiC. Each block represents one IC with the corresponding delay. The first row shows the unit number from the schematic, the second line the type of IC, the third shows the kind of delay and the fourth shows the amount of time. The kind of delay of a buffer can for example be $d \rightarrow q$ which means input data to output data delay or $oe \rightarrow q$ which is the time from asserting output enable until the data is valid. The delay time is always the worst case time as specified in the datasheet². A vertical double line represents a point where multiple delay paths must be met until the execution can continue. In figure 5.5 for example, the propagation delay of register U83 (flags and step register) and register U84 (instruction) must both be over until the address for the EEPROMs U85, U86 and U87 are valid. At these points the maximum of the merging delay paths is used as the starting point for the next path. The maximum delay up to this point is also printed at the top. Additionally, some paths are labeled for clarity. All the delays of the critical path (the path that takes the longest from one starting point to one end point) are marked in red.

Figure 5.5 shows the basic latency path for control signals and the common bus driver ICs. The latencies inside the register set and program counter are neglectable and, therefore, only the memory module with the complex address decoding and the ALU is further examined. For the memory module (figure 5.6), there are two critical paths: The first comes from the memInstrToRamAddr control signal, through the stack selection logic to the memory address and finally to the buffered output data of the SRAM on the bus (281.3 ns). The second has the same origin but represents the writing option of the SRAM (272.2 ns).

²Propagation typically varies with the temperature and age of the IC and by taking the worst case time (maximum) it is assured that no timing bugs occur due to e.g. weather changes.

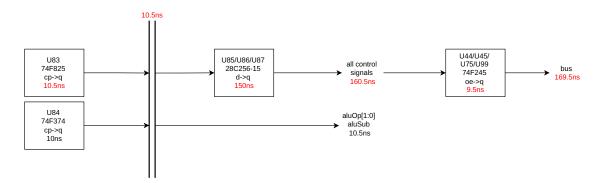


Figure 5.5: Timing analysis for the control signals.

The ALU latency path (figure 5.7) is more complex which is mainly due to the ripple carry adder. Consequently, the critical path comes from the bus, through all the carry flags to the final adder result. After the result multiplexer the longest path is from the zero flag to the alu flag register U97 (313.9 ns).

Theoretically, it is possible for one instruction to read a value from the SRAM and using it in the same instruction as an input to the ALU. This would replace the baseline delay of the bus input in figure 5.7 (169.5 ns) with 281.3 ns and, therefore, enlarge the total worst case latency to

$$281.3 \,\mathrm{ns} - 169.5 \,\mathrm{ns} + 313.9 \,\mathrm{ns} = 425.7 \,\mathrm{ns} \tag{5.1}$$

Notwithstanding, because the EDiC is a multicycle CPU it is easily possible to assign two cycles to all ALU operations where the B operand is read from the memory. With this trick, the overall critical path is the maximum of $313.9 \,\mathrm{ns}$ and $^{425.7 \,\mathrm{ns}}/_2$ which is $313.9 \,\mathrm{ns}$. With a safety margin of 30% it is feasible to choose an oscillator with a frequency of $2.4 \,\mathrm{MHz}$:

$$2.4 \,\mathrm{MHz} \leqslant \frac{1}{1.3 \cdot 313.9 \,\mathrm{ns}} = 2.45 \,\mathrm{MHz}$$
 (5.2)

When dealing with circuits that are designed to run right at the critical path or with very long trace lengths another factor needs to be taken into account which is neglected here. Each signal has a latency in traces and when the clock arrives at the second register earlier than at the first register, the time allowed for the combinatorial path is shorter than the theoretical clock period. However, for the EDiC this is not a problem as shown in section 6.2.2.

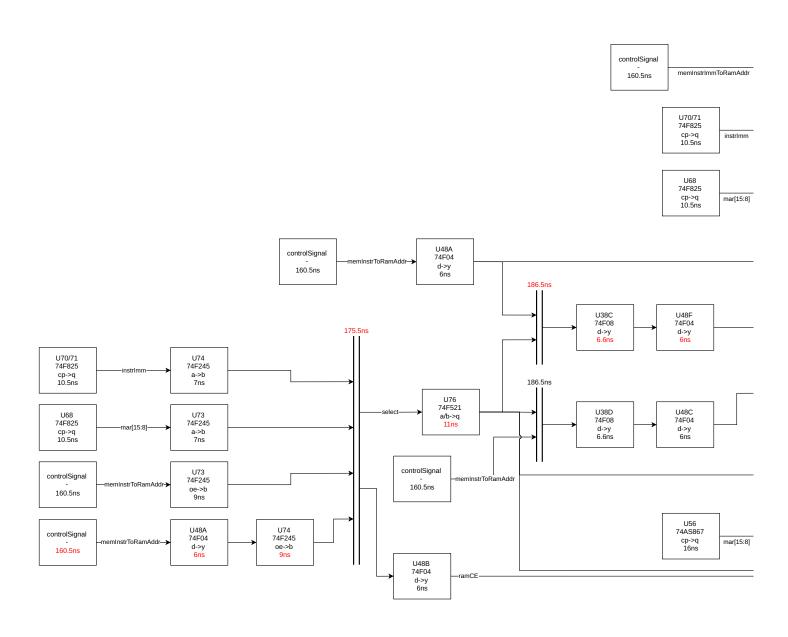
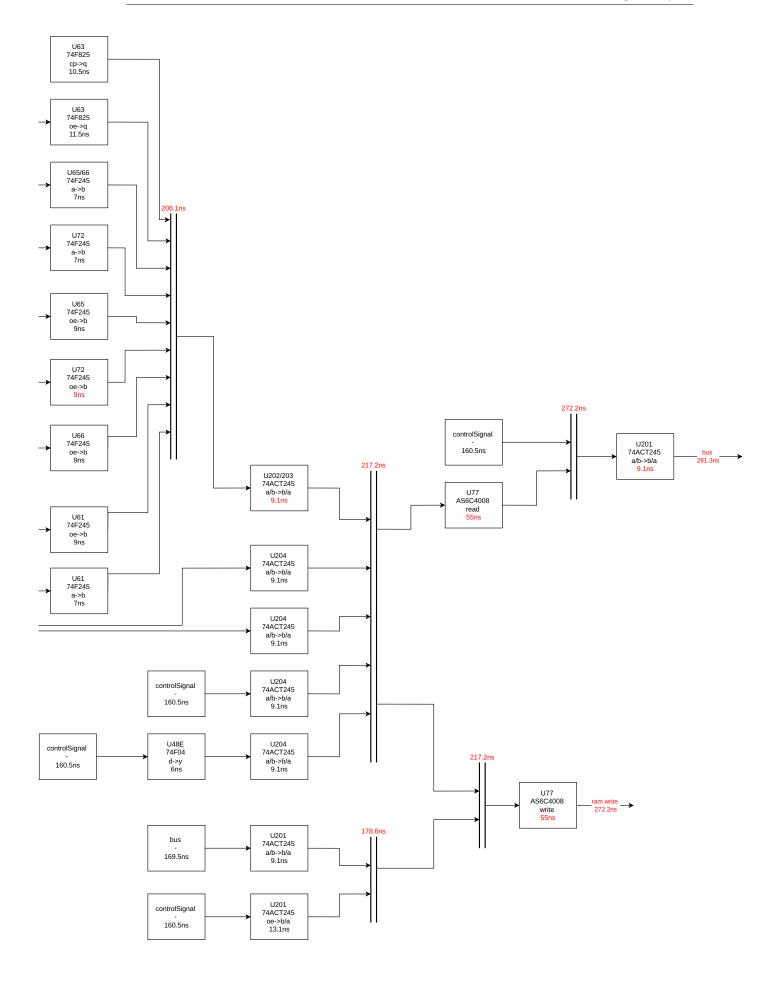


Figure 5.6: Timing analysis for the memory latency.




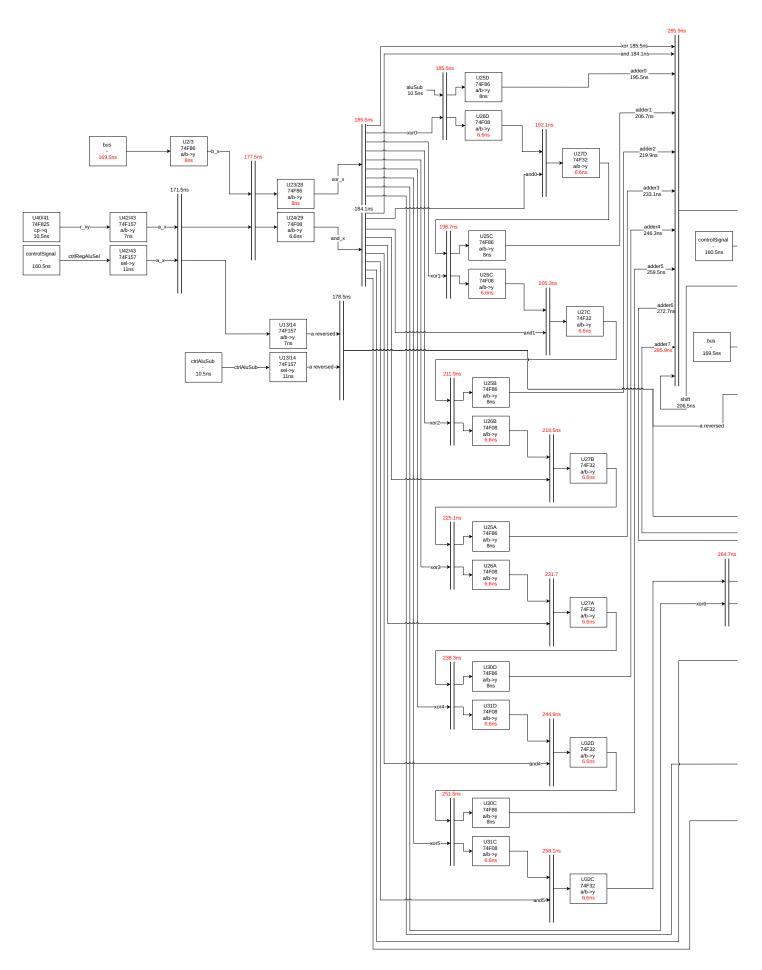


Figure 5.7: Timing analysis for the ALU latency.

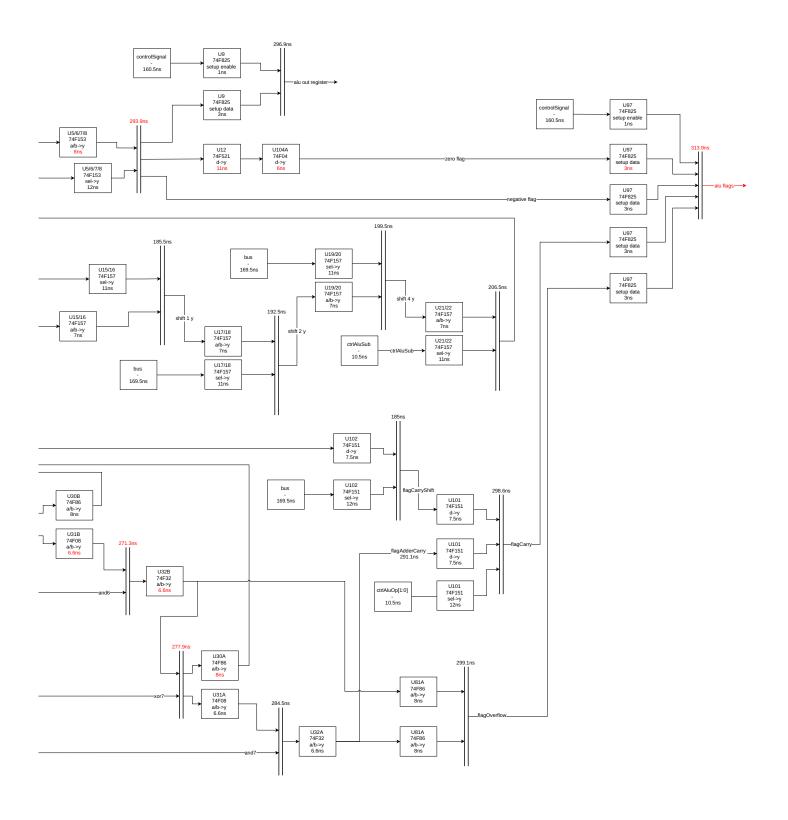

6 Initial Hardware Test & Component Verification

Even though the netlist was simulated and tested in the FPGA implementation, there is no guarantee that the hardware will work out of the box. Therefore, all bits of all components are to be tested individually to make sure there are no wiring problems which would result in bugs which are hard to pinpoint and debug. Testing single ICs, especially with tri-state logic, is significantly easier when incrementally adding ICs to the PCB. That way one driver of a tri-state net can be verified and when adding another driver to the net, problems can be pinpointed to the new IC because the first one was known to work correctly. Therefore, all ICs are placed inside sockets. This way all resistors, LEDs and sockets can be soldered to the PCB at once and all the ICs can be placed in their sockets consecutively. Another reason for using sockets is that it is easier to change an IC if it is faulty or breaks in the future.

6.1 Test Adapter

To facilitate the testing, all control signals including clock and reset, the instruction register inputs and the ALU results + flags are interrupted by connectors at the side of the PCB which can connect to test adapter boards for testing. For the debug signals that are not busses the test adapter has LEDs to display the state of the EDiC and DIP Switches to set each debug signal to a known value. Additionally, the main bus and ram2data bus is connected to a test adapter but not interrupted. The test adapter has LEDs for displaying the state and a bus driver with DIP Switches. If not testing, the connectors can be bridged with shorting connectors which short the pins from the left to the right column (except the two tri-state busses).

Testing the individual components becomes very simple this way. For example the instruction registers:

- 1. Set each bit of the data input individually from the test adapter
- 2. Assert the memInstrNWE control signal (set to 0)
- 3. Trigger a clock pulse
- 4. Verify that the output lines equal the input set on the test adapter

All ICs, including the EEPROMs and SRAMs can be directly tested in a couple simple steps this way.

The advantage of individually testing all the bits of all ICs is that in integration testing one can assume that the problem is not with one specific IC.

TODO: Insert part of a schematic of one test adapter?

6.2 Potential Complications

As is normal with large designs, there were some potential problems found in the EDiC which needed fixing.

6.2.1 Shifter - Carry Flag

The detailed testing with the test adapter did reveal one bug which was not revealed in the netlist simulation because it did not occur in any simulated program. The carry flag of a shift operation is determined by the 8 to 1 multiplexer U102 in figure A.7 with the first 3 bits of the bus as select bits. The carry should always be the last bit that was shifted out of the 8 bit word. This way, the input D1 (a0) is set as the new carry flag when shifting by 1 bit, D2 (a1) when shifting by 2 bits and so on. However, the input D7 is connected to a7 and not a6 as it should be. This results in a wrong carry flag when shifting by 7 bits in either direction.

In the netlist simulation this bug was not found because there was no circumstance where a value with differing bits 7 and 8 was shifted by 7 bits and the carry flag being used in the next instruction. These kind of bugs can go undetected for a very long time and are very hard to pinpoint with a fully running CPU.

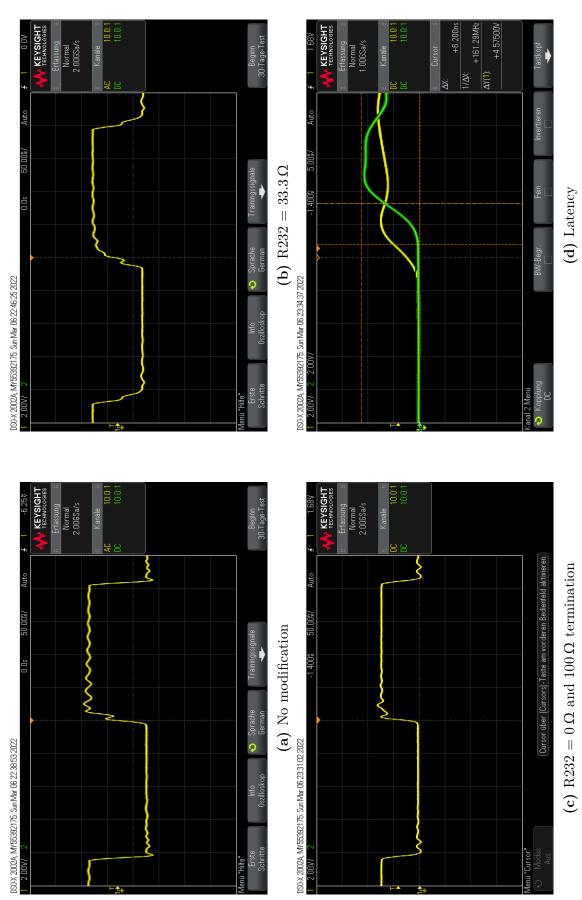


Figure 6.1: Comparison of the rising edge of the clock in different configurations. Measured close to the clock buffer (yellow) and in figure 6.1d at the end of a clock lane (U204 pin 8) (green).

6.2.2 Clock jitter

Especially with larger PCBs a good clock distribution is a must-have. Long clock lanes with a large load (i.e. many connected components) may induce several unwanted effects:

- Jitter in the rising edge due to reflection from the ends of clock traces.
- A less steep rising edge due to an implicit RC-low pass filter with capacitive loads from the clock inputs and wire resistor.
- Over and undershoot after the edges exceeding the maximum rated voltage.
- Clock latency between ICs reducing the time between two registers.

The effects must all be checked and kept under control. The clock lane for the EDiC was not routed as one continues trace and rather similar to a clock tree split in two. This reduces the maximum distance one clock input is away from the clock source (U95 in figure A.4). In the schematic design additional clock buffers were implemented to allow further splitting of the clock tree to help with clock distribution if it occurs and cannot be fixed other ways.

Without any modifications, the clock looked like shown in figure $6.1a^1$. It can be seen that there is only a little bit of overshoot but at about the middle of the rising edge there is a dip of about $500\,\mathrm{mV}$. This could lead to a double trigger where the rising edge is detected as two individual rising edges in a register and, therefore, a counter could increment by two instead of by one. Therefore, an attempt was made to circumvent this by changing R232 (a resistor in series after the clock buffer) from $0\,\Omega$ to a larger value. In figure 6.1b a $33.3\,\Omega$ resistor was added. It becomes obvious that the time constant of the implicit low-pass filter increased and with it the edge becomes less steep but the dip also becomes less of an impact. Even though this is a decent improvement, it is not perfect. The next attempt was to add a line termination of $100\,\Omega$ at the end of both clock lines instead of the $33.3\,\Omega$ resistor in series. The result can be seen in figure 6.1c. It shows that the dip in the rising edge is no longer there and the edge is also as steep as without any modifications. Even though the overshoot changed a bit, it is by no means a problem and, therefore, this solution looked promising.

Figure 6.1d zooms into the rising edge and shows the edge at U204 pin 8 (one end of the clock tree) in green. It can be seen that the edge looks a bit different which may be explained by the different behavior of different probes in the small time

¹figures 6.1a and 6.1b have AC coupling enabled which is why the y scaling is off.

```
SIMPLE_IO = Oxfe00
mov r0, 0x42
loop:
str r0, [SIMPLE_IO]
b loop
```

(a) First test program.

```
SIMPLE_IO = Oxfe00
1
   UART SCR = OxfeOf
2
3
   ldr r0, [SIMPLE IO]
                                          call function
4
   str r0, [UART SCR]
                                          b s
   loop:
   ldr r1, [UART SCR]
                                         function:
   str r1, [SIMPLE IO]
                                            add r0, 1
                                      6
   b loop
                                         ret
```

(b) Second test program.

(c) Third test program.

Code Example 6.1: Test programs for integration testing.

scale. Additionally, the latency of the clock signal can be observed which is about $6\,\mathrm{ns}$. The clock frequency was chosen in section 5.3 to have a safety margin of about 30% and, therefore, a latency of $6\,\mathrm{ns}$ is not a problem with a clock period of $416.7\,\mathrm{ns}$ ($2.4\,\mathrm{MHz}$).

6.2.3 Driving Bus High

Until now, no program was programmed into the EEPROMs and it was time for the first real integration test of the EDiC. The first program used for the integration test in code example 6.1a was a basic test to see if basic instructions get executed and if the built-in I/O works. After it ran successfully and displayed 0x42 at the displays, the second testing program from code example 6.1b included the RS232 I/O extension card and its scratch register (at address 0xfe0f). When this also ran successfully, a more complex Universal Asynchronous Receiver-Transmitter (UART) echo program (code example B.3) was programmed into the EEPROMs. It finally had problems and did not work as expected. It could be observed that the PC would randomly be set to a unreasonably high value and after that NOPs were executed until the PC overflowed to 0 and the program started again. However, when turning on the cycle by cycle debugger and stepping through all cycles, the program worked perfectly and bytes got read correctly from the RS232 extension card and were also sent back correctly. After debugging for a long time, the bug was tracked down



Figure 6.2: Write Enable of MAR register (green) and one bus lane without 0xff driver (yellow).

to the return instruction which sometimes (about 1 in 100 times) would return to a random instruction and not return to after the call instruction. It was further debugged with the third test program (code example 6.1c). With an oscilloscope it was finally possible to detect the problem which is shown in figure 6.2. It is actually a bug in both, the call and return instruction, which results in the same misbehavior of return to a wrong location: Both instruction load Oxff into the MAR by not driving the bus with a specific value and relying on the pull-up resistors to pull the lines high. In figure 6.2 two MAR write enable pulses can be seen and, especially, in the first pulse, the problem becomes apparent. If the bus was pulled low in the cycle before the MAR is written, the pull-up resistors take some time to pull the voltage to 5 V which leaves the level at about 2 V at the time of the write pulse. This is right at the required minimum voltage to be detected as a high signal by the 74F825. Therefore, most of the time, the register detects the bus input as a 1 but sometimes it is detected as a low signal.

The fix is quite easy as soon as the problem is detected: A new bus driver (74F245) is added in one of the spare slots whose A input is connected to H1, the B input to the bus and the output enable signal is connected to a new control signal. This fix would have been very difficult if no output of the microcode EEPROMs would have been free to use or if no place for spare ICs was left on the PCB. Therefore, it is always important to design everything with enough resources left.



Figure 6.3: Write Enable of MAR register (green) and one bus lane with Oxff driver (yellow).

The result of the fix can be seen in figure 6.3 where the bus line is raised to about 3.8 V as soon as the write enable pulse starts².

6.2.4 UART Transceiver lost data

The final bug was only observed with the test adapter and never while running the EDiC on its own. One of the integration tests was to manually write a value from the test adapter to the scratch register of the UART IC (TL16C550AN) on the RS232 extension card and then read it out repeatedly. It could be observed that the data was read back successfully for a couple of times but often the data would be read back incorrectly after several reads. However, in the automated test with the program from code example 6.1b, the data was still correctly displayed at the built-in I/O after half an hour which results in about 300 million reads without errors³:

$$\frac{2.4 \,\text{MHz}}{14} \cdot 1800 \,\text{s} \approx 309 \cdot 10^6 \tag{6.1}$$

²The even higher level on the bus line after the write enable pulse is driven by the SRAM driver (outputs the return address in the return instruction) which is an *ACT* type for compliance with the SRAM specification. In figure 6.2 the SRAM probably drove a '0' to the bus line.

 $^{^32.4\,\}mathrm{MHz},\,14$ cycles per loop iteration and 1800 seconds run time

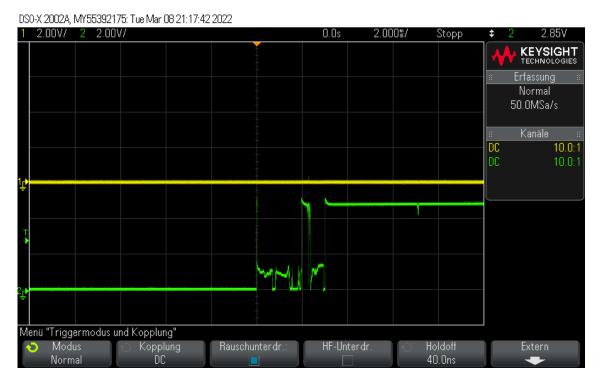


Figure 6.4: DIP Switch output on switching (yellow).

The only notable difference between the two tests is that in the manual test, the output enable signal to the UART IC was set by hand with a DIP Switch and in the automated test, it was controlled by the output of the EEPROM. When looking at the waveforms of the signal coming from the DIP switch, a bouncing of the trigger can sometimes be observed as shown in figure 6.4. In theory this should not have an effect on the content of the scratch register of the UART IC as the glitch happens on the output enable input of the IC. However, the datasheet explicitly states a minimum time for a read strobe pulse duration of 80 ns. For this reason, the test adapter was altered to include a low pass filter and schmitt trigger on the memRamNOE and memRamNWE control signals because those are the only control signals which are used asynchronously. All other control signal are only used in components which do not state a minimum pulse duration for it (only setup and hold times in relation to the rising edge of the clock). After implementing this fix, the manual test worked perfectly for many read cycles which means that the minimum read pulse duration for the UART IC needs to be respected.

Even though, the problem never occurred with the control signals coming from the microcode EEPROM, we looked into the specifications for the EEPROM and found it also has a period after the address inputs change where the data output is undefined. When observing the output with the oscilloscope, it was observed that there sometimes are glitches on the memRamNOE control signal as shown in figure 6.5.

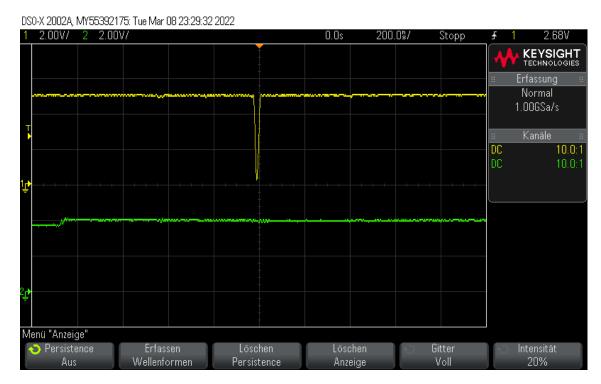


Figure 6.5: Output of the memRamNOE control signal from the EEPROM (yellow).

Therefore, it was decided to add a register to the memRamNOE and memRamNWE control signals. This results in the microcode needing adjustment to assert these two signals one cycle earlier which was easy to implement and prevented the problem completely.

7 Conclusion and Future Work

Acronyms

```
Notation
            Description
ALU
            Arithmetic Logic Unit i-iii, 9-11, 13-15, 18, 20, 21,
            24, 25, 27, 28, 30, 33, 45, 46, 61, 62, 66, 67, 70, 73,
            89, 91, 93
ASIC
            Application-Specific Integrated Circuit 43
BRAM
            Block RAM 43
CE
            chip enable 61, 62
CISC
            Complex Instruction Set Computer 7–9, 13
CLB
            Configurable Logic Block 43
CMOS
            Complementary metal-oxide-semiconductor 3
CPU
            Central Processing Unit 1, 3, 4, 6–11, 13, 15–18,
            25, 28, 43, 46, 52–54, 59, 67, 74
CSON
            CoffeeScript-Object-Notation 25
DIL
            dual in-line 3
DIP
            dual in-line package 4
DSP
            Digital Signal Processor 43, 44
EDiC
            Educational Digital Computer i, iii, 1–3, 6–11, 13–
            18, 20, 21, 25, 28–31, 35–38, 40, 41, 43, 44, 48,
            57–59, 63, 64, 66, 67, 73, 74, 76, 77, 79, 89, 91, 93,
            94, 99, 100, 102, 104, 106, 108, 110, 112, 115, 124
EDIF
            Electronic Design Interchange Format 48, 49, 93
EEPROM
            Electrically Erasable Programmable Read-Only
            Memory ii, 8, 14, 25, 28–30, 50–53, 60, 61, 63, 66,
            74, 77, 78, 80, 81, 89, 90, 93
EPROM
            Erasable Programmable Read-Only Memory 43
```

| Notation FPGA | Description Field Programmable Gate Array ii, 1, 4, 6, 43–46, 48, 50–57, 73, 89 |
|---------------------------|---|
| HDL | Hardware Description Language 45 |
| I/O IC IDE | Input / Output i, ii, 3, 7, 15–17, 19, 22, 45, 52–54 Integrated Circuit 1–5, 7, 16, 48, 50–52, 57–64, 66, 73, 74, 76, 78–80, 89, 91, 93 Integrated Development Environment 40 |
| JSON | JavaScript Object Notation 25 |
| LED LSB LUT | Light-Emitting Diode 59, 60, 63, 73 Least Significant Bit 14 Lookup Table 43, 44, 89 |
| MAR | Memory Address Register 16, 17, 19, 20, 22–24, 34, 60, 61, 78, 79, 90 |
| MSB MUX | Most Significant Bit 11, 13, 39, 62 Multiplexer 43 |
| NOP | No Operation 24, 77 |
| PC | Program Counter i, 8, 9, 13, 14, 16–19, 24, 27, 35, 36, 48, 58, 60, 77 |
| PCB | Printed Circuit Board 4, 6, 18, 43, 48, 50, 53, 54, 62–64, 73, 76, 78 |
| PRNG | Pseudo Random Number Generator 31, 32, 37, 93, 94, 123 |
| RAM RISC ROM RTL | Random-Access Memory ii, 19, 52, 54 Reduced Instruction Set Computer 8 Read-Only Memory 7, 52, 53, 89 Register-transistor logic 3, 6 |
| SMD SP | surface-mounted device 3 Stack Pointer 16, 17, 19, 22–24, 34, 35, 58, 60, 61 |

| Notation | Description |
|----------|---|
| SRAM | Static Random-Access Memory 7, 8, 15, 16, 19, 43, |
| | 44, 52, 60, 61, 63, 66, 67, 74, 79 |
| | |
| TTL | Transistor-transistor logic i, 3–5, 7, 89 |
| TUB | Technical University Berlin 45 |
| | |
| UART | Universal Asynchronous Receiver-Transmitter iii, |
| | 77, 79, 80, 94, 124 |
| | |
| VHDL | VHSIC (Very High Speed Integrated Circuit) |
| | Hardware Description Language 45 |

List of Figures

| 1.1 | The final version of the EDiC playing Snake on a VT-100 over an RS-232 I/O card | 2 |
|-----|--|----|
| 1.2 | TTL NAND with "totem-pole" output stage as in the 7400 IC. [21] . | 5 |
| 2.1 | 1 bit full adder with the usual A, B and Carry inputs and Y and Carry outputs as well as the XOR and AND outputs | 10 |
| 2.2 | 8 bit bidirectional barrel shifter | 12 |
| 3.1 | The syntax highlighting with the EDiC Visual Studio Code Extension and the Atom One Light Theme [1] | 41 |
| 4.1 | Internal structure of a 2-bit LUT | 44 |
| 4.2 | The elaborated tri-state module with two 8 bit inputs | 46 |
| 4.3 | Waveform of the relevant signals for setting a register to $0x12$ and | |
| | adding $\tt Ox2f$ to it (Assembler code is shown in code example 4.2) | 47 |
| 4.4 | Waveform showing the clock used for the FPGA ROM to mimic the | |
| 4.5 | asynchronous behavior of the EEPROMs | 53 |
| | board [10] | 54 |
| 4.6 | The Schematic for the $3V3$ to $5V$ conversion to use extension cards | |
| | with the FPGA development board | 55 |
| 5.1 | Clock Enable circuit of the 74F825 IC [6] | 58 |
| 5.2 | Comparison of D-type flip-flops with and without $\overline{\text{Clear}}$ and $\overline{\text{Set}}$ | 59 |
| 5.3 | Rendering with all components placed and all the traces routed on | |
| | the two logic layers (green and red) | 65 |
| 5.4 | Timing relations for a combinatorial datapath between two registers. | 66 |
| 5.5 | Timing analysis for the control signals | 67 |
| 5.6 | Timing analysis for the memory latency | 68 |
| 5.7 | Timing analysis for the ALU latency | 70 |
| 6.1 | Comparison of the clock rising edge in different configurations | 75 |

| 6.2 | Write Enable of MAR register (green) and one bus lane without 0xff |
|-----|---|
| | driver (yellow) |
| 6.3 | Write Enable of MAR register (green) and one bus lane with Oxff |
| | driver (yellow) |
| 6.4 | DIP Switch output on switching (yellow) |
| 6.5 | Output of the memRamNOE control signal from the EEPROM (yellow). 81 |
| | |
| A.1 | Schematic: Program Counter / Instruction ROM |
| A.2 | Schematic: RAM |
| A.3 | Schematic: Microcode |
| A.4 | Schematic: Clock and Reset |
| A.5 | Schematic: Built-In I/O |
| A.6 | Schematic: Register Set + ALU output |
| A 7 | Schematic: combinatorial ALU |

List of Tables

| 2.1 | Summary of the available ALU operations | 11 |
|-----|--|----|
| 3.1 | All available branch instructions with their op-code and microcode | |
| | translation based on the ALU flags explained in section 2.2.1. $ \dots $ | 30 |
| 5.1 | All logic ICs used in the EDiC | 63 |

List of Code Examples

| 3.1 | Schema of the Microcode Definition CSON-File [3] as a TypeScript | |
|------|--|----|
| | [19] Type definition | 26 |
| 3.2 | Example definitions of one control signal and the instruction fetch | |
| | cycles for the microcode generation | 27 |
| 3.3 | Definition of the move immediate to register instruction for the mi- | |
| | crocode generation | 28 |
| 3.4 | Definition of the alu operation with two register arguments for the | |
| | microcode generation | 29 |
| 3.5 | Definition of the branch instructions | 29 |
| 3.6 | PRNG written in the EDiC Assembler | 31 |
| 3.7 | The output of the PRNG of code example 3.6. The first 16 bits are | |
| | the memory address, then 8 bits for the instruction op-code and 16 | |
| | bits for the instruction immediate and for reference the original in- | |
| | struction with variables replaced | 32 |
| 3.8 | The PRNG of code example 3.6 with the constants and labels resolved. | 37 |
| 3.9 | Excerpts of the Snake assembler program used in the demo in figure 1.1. | 38 |
| 3.10 | The instructions resulting from the string definition of code exam- | |
| | ple 3.9 line 4 | 39 |
| 4.1 | Behavioral Verilog Description of the Adder (including XOR and | |
| | AND) of the ALU module | 45 |
| 4.2 | The code for the waveform example of figure 4.3 | 48 |
| 4.3 | An EDIF definition of an instance as exported by $\mbox{OrCAD/CAPTURE}.$ | 49 |
| 4.4 | An EDIF definition of a net as exported by $OrCAD/CAPTURE$ | 49 |
| 4.5 | Verilog implementation for the 74F08 IC | 50 |
| 4.6 | Verilog instantiation of the microcode ROM generated out of three | |
| | EEPROM instantiations | 51 |
| 4.7 | Verilog instantiation for the tri-state Net PCINO | 52 |
| 6.1 | Test programs for integration testing | 77 |
| B.1 | The full snake assembler program | 15 |

| B.2 | The PRNG assembler program "prng.s" used in the snake program | |
|-----|--|-----|
| | in code example B.1 | 123 |
| В.3 | The utility library for the UART extension card of the EDiC with | |
| | the 16c550 UART Transceiver | 124 |

Bibliography

- [1] Mahmoud Ali. Visual Studio Code One Light Theme based on Atom. 2022. URL: https://marketplace.visualstudio.com/items?itemName=akamud.vscode-theme-onelight.
- [2] Altera. User-Configurable Logic Databook. (WWW). 1988. URL: http://www.bitsavers.org/components/altera/_dataBooks/1988_Altera_Data_Book.pdf.
- [3] bevry. CoffeeScript-Object-Notation. 2022. URL: https://github.com/bevry/cson.
- [4] Crystal Chen, Greg Novick, and Kirk Shimano. *RISC Architecture*. 2000. URL: https://cs.stanford.edu/people/eroberts/courses/soco/projects/risc/risccisc/.
- [5] B. Jack Copeland. "The Modern History of Computing". In: *The Stanford Encyclopedia of Philosophy*. Ed. by Edward N. Zalta. Winter 2020. Metaphysics Research Lab, Stanford University, 2020.
- [6] Fairchild Semiconductor Corporation. 74F8258-Bit D-Type Flip-Flop. 2000. URL: https://rocelec.widen.net/view/pdf/d4zabtdsls/FAIRS08275-1.pdf?t.download=true&u=50efqw.
- [7] CVE-2017-5753. 2018. URL: https://www.cve.org/CVERecord?id=CVE-2017-5753.
- [8] arm Developer. ARM Developer Suite Assembler Guide Conditional execution. URL: https://developer.arm.com/documentation/dui0068/b/ARM-Instruction-Reference/Conditional-execution.
- [9] Digilent. Nexys A7 Reference. 2022. URL: https://digilent.com/reference/programmable-logic/nexys-a7/start.
- [10] Digilent. Nexys A7 Reference Common Anode Circuit Node. 2022. URL: https://digilent.com/reference/_detail/reference/programmable-logic/nexys-a7/n4t.png?id=programmable-logic%3Anexys-a7%3Areference-manual.

- [11] Git Repository of the EDiC development. URL: https://github.com/Nik-Sch/EDiC.
- [12] Alliance Memory Inc. 512K X 8 BIT LOW POWER CMOS SRAM. 2009. URL: https://www.mouser.de/datasheet/2/12/AS6C4008-1265427.pdf.
- [13] Texas Instruments. CDx4ACT245 Octal-Bus Transceiver, Three-State, Non-Inverting. 1998. URL: https://www.ti.com/lit/ds/symlink/cd74act245.pdf.
- [14] Texas Instruments. SNx4F245 Octal Bus Transceivers With 3-State Outputs. 1987. URL: https://www.ti.com/lit/ds/sdfs010a/sdfs010a.pdf.
- [15] Intel. Intel® 64 and IA-32 Architectures Software Developer's Manual Volume 1: Basic Architecture. 2016. URL: https://www.intel.com/content/dam/www/public/us/en/documents/manuals/64-ia-32-architectures-software-developer-vol-1-manual.pdf.
- [16] ECMA International. The JSON Data Interchange Syntax. 2017. URL: https://www.ecma-international.org/wp-content/uploads/ECMA-404_2nd_edition_december_2017.pdf.
- [17] William Irwin. THE DIFFERENTIAL ANALYSER EXPLAINED. 2009. URL: http://amg.nzfmm.co.nz/differential_analyser_explained.html.
- [18] MacroMates Ltd. Language Grammars TextMate 1.x Manual. 2021. URL: https://macromates.com/manual/en/language grammars.
- [19] Microsoft. TypeScript: JavaScript With Syntax For Types. 2022. URL: https://www.typescriptlang.org/.
- [20] Microsoft. Visual Studio Code Code Editing. Redefined. 2022. URL: https://code.visualstudio.com/.
- [21] MovGPO. TTL NAND with a "totem-pole" output stage, one of four in 7400. 2006. URL: https://en.wikipedia.org/wiki/File:7400_Circuit.svg.
- [22] NandLand. VHDL vs. Verilog Which language should you use for your FPGA and ASIC designs? NandLand. 2014. URL: https://www.nandland.com/articles/vhdl-or-verilog-for-fpga-asic.html.
- [23] Nolanjshettle. File:Edge triggered D flip flop.svg. 2013. URL: https://en.wikipedia.org/wiki/File:Edge_triggered_D_flip_flop.svg.
- [24] David Patterson and John LeRoy Hennessy. Rechnerorganisation und Rechnerentwurf: Die Hardware/Software-Schnittstelle. eng. De Gruyter Studium. De Gruyter, 2016. ISBN: 3110446057.

- [25] Niklas Schelten. EDiC support for Visual Studio Code. 2022. URL: https://github.com/Nik-Sch/EDiC-vscode-syntax.
- [26] Philips Semiconductors. 74ABT540 Octal buffer, inverting (3-State). 1998. URL: https://www.mouser.com/datasheet/2/302/74ABT540-62406.pdf.
- [27] Stunts1990. File:Edge triggered D flip flop with set and reset.svg. 2020. URL: https://en.wikipedia.org/wiki/File:Edge_triggered_D_flip_flop_with_set_and_reset.svg.
- [28] A. M. Turing. "On Computable Numbers, with an Application to the Entscheidungsproblem". In: *Proceedings of the London Mathematical Society* s2-42.1 (Jan. 1937), pp. 230–265. ISSN: 0024-6115. DOI: 10.1112/plms/s2-42.1.230. eprint: https://academic.oup.com/plms/article-pdf/s2-42/1/230/4317544/s2-42-1-230.pdf. URL: https://doi.org/10.1112/plms/s2-42.1.230.
- [29] Andrew Wylie. The first monolithic integrated circuits. 2013. URL: https://web.archive.org/web/20180504074623/http://homepages.nildram.co.uk/~wylie/ICs/monolith.htm.
- [30] AMD Xilinx. Vivado ML Editions Free Vivado Standard Edition. AMD Xilinx. 2022. URL: https://www.xilinx.com/products/design-tools/vivado.html.

A Full Schematics of the EDiC

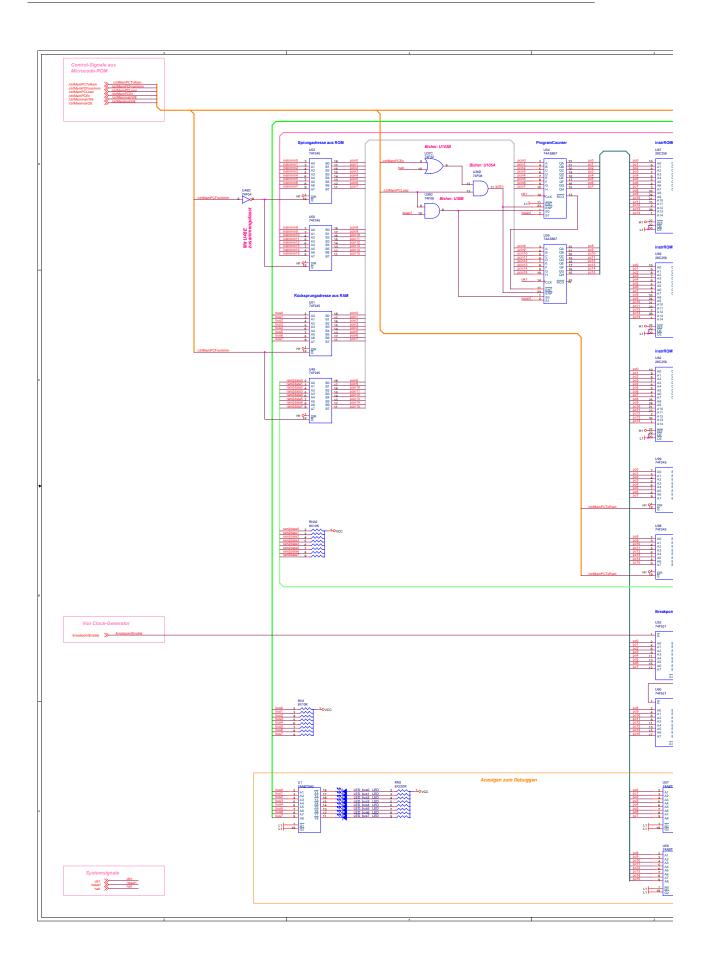
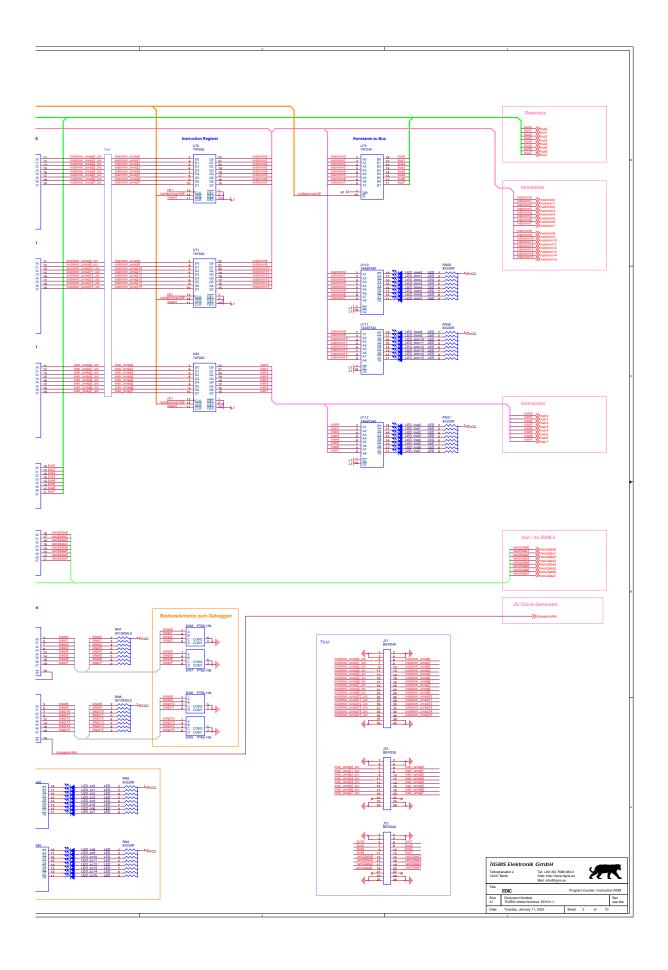


Figure A.1: Schematic: Program Counter / Instruction ROM.



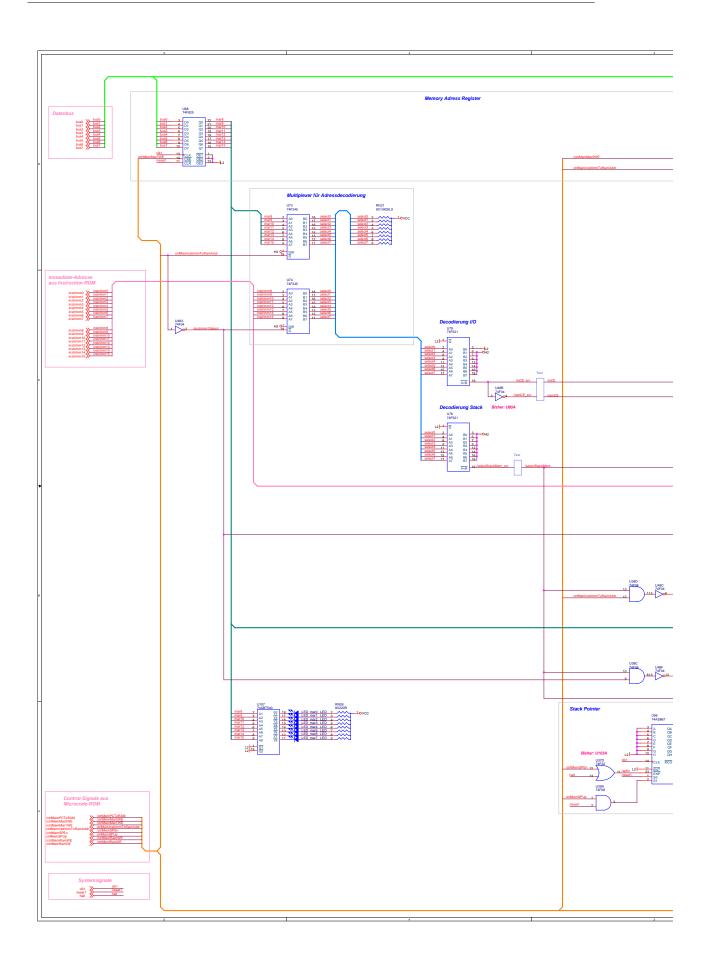
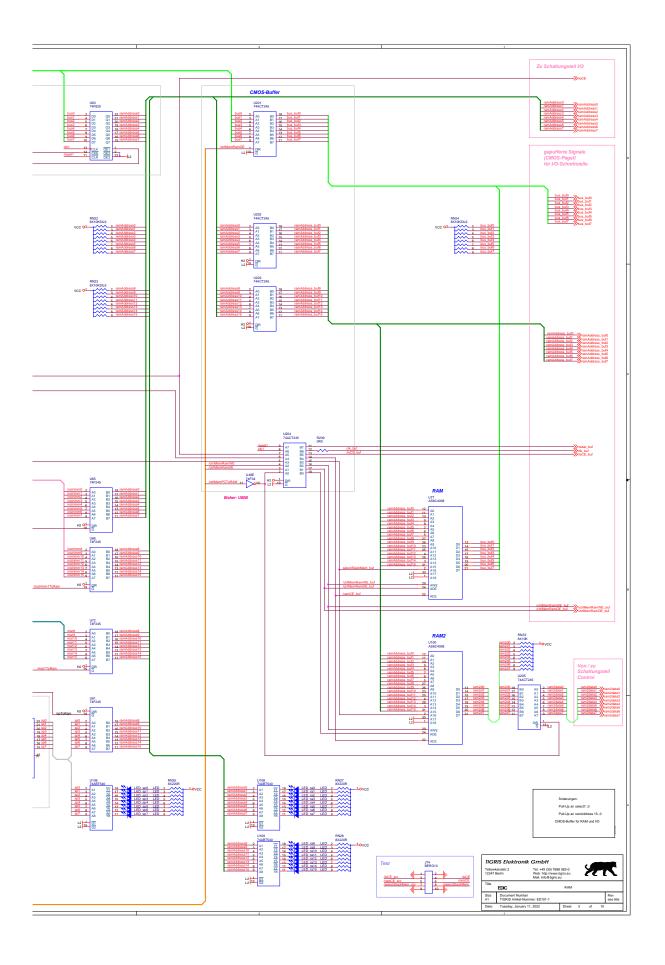


Figure A.2: Schematic: RAM.



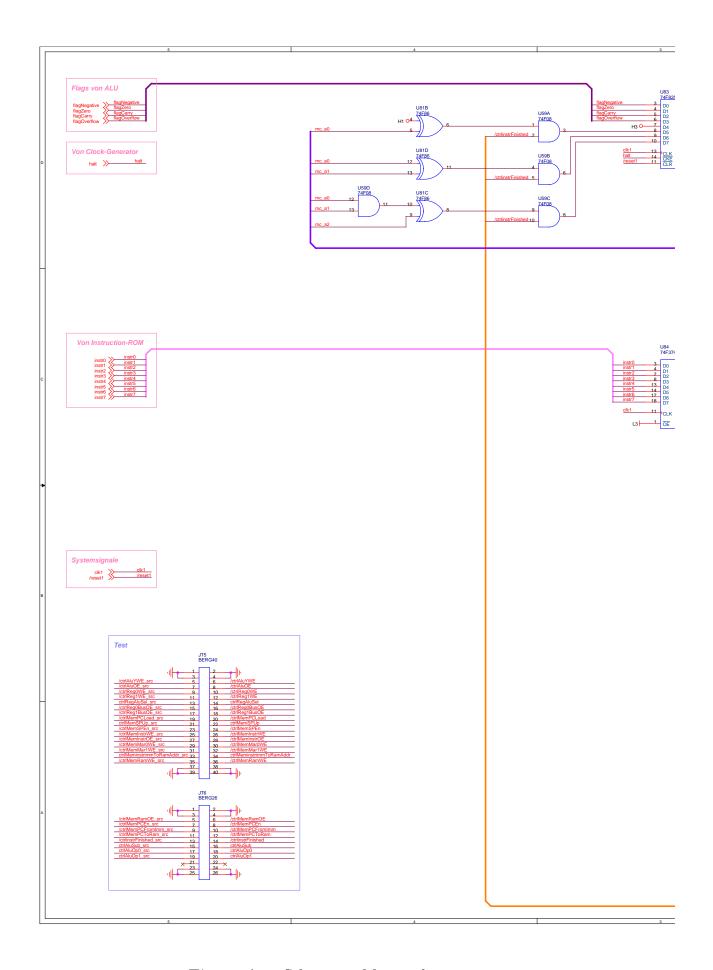
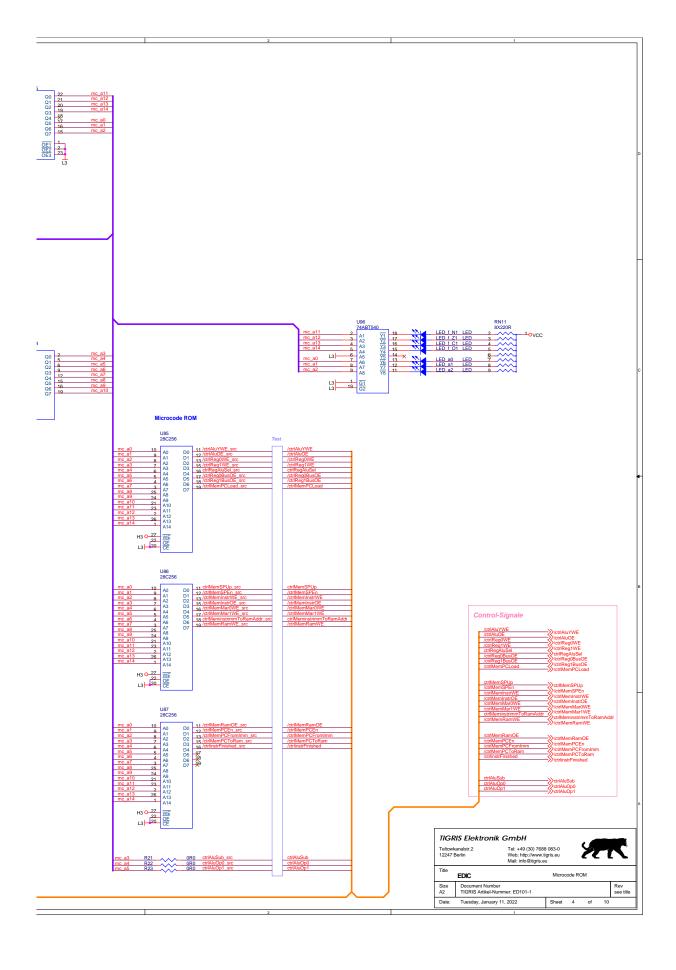


Figure A.3: Schematic: Microcode.



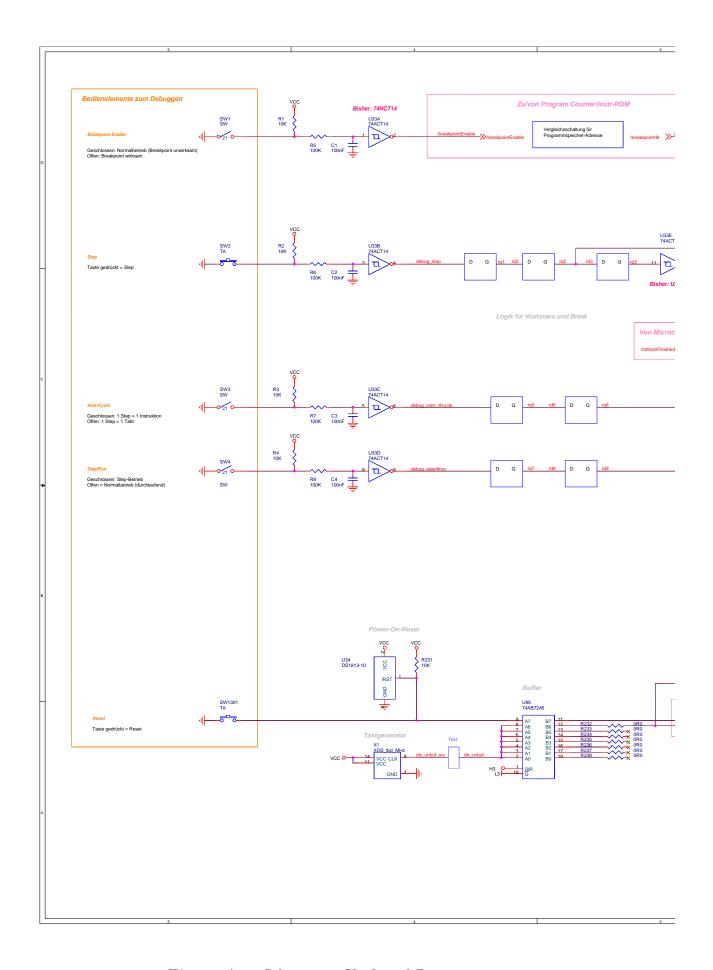
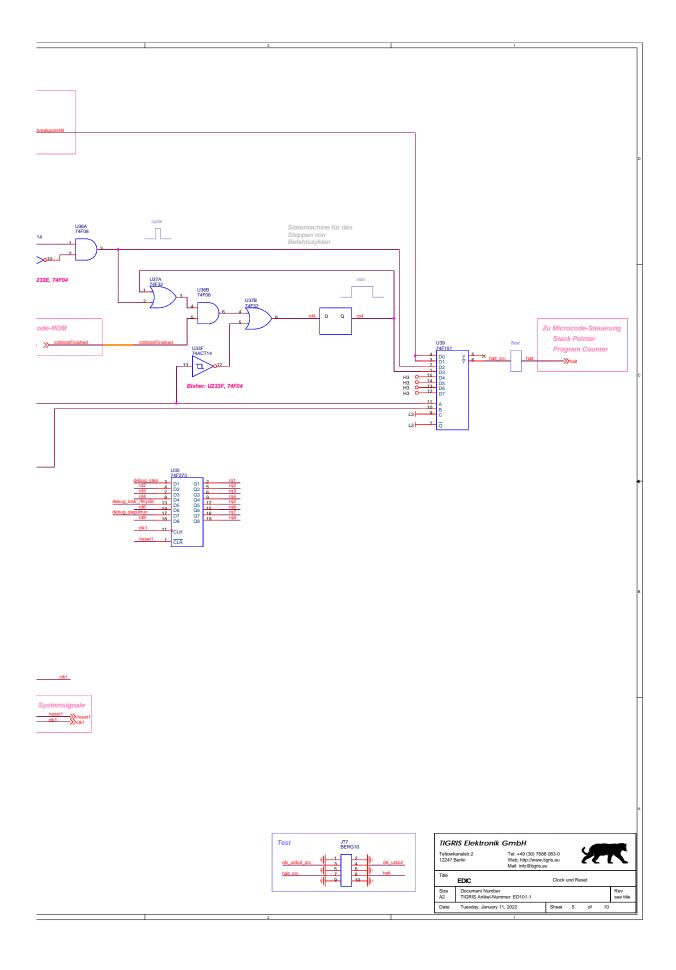


Figure A.4: Schematic: Clock and Reset.



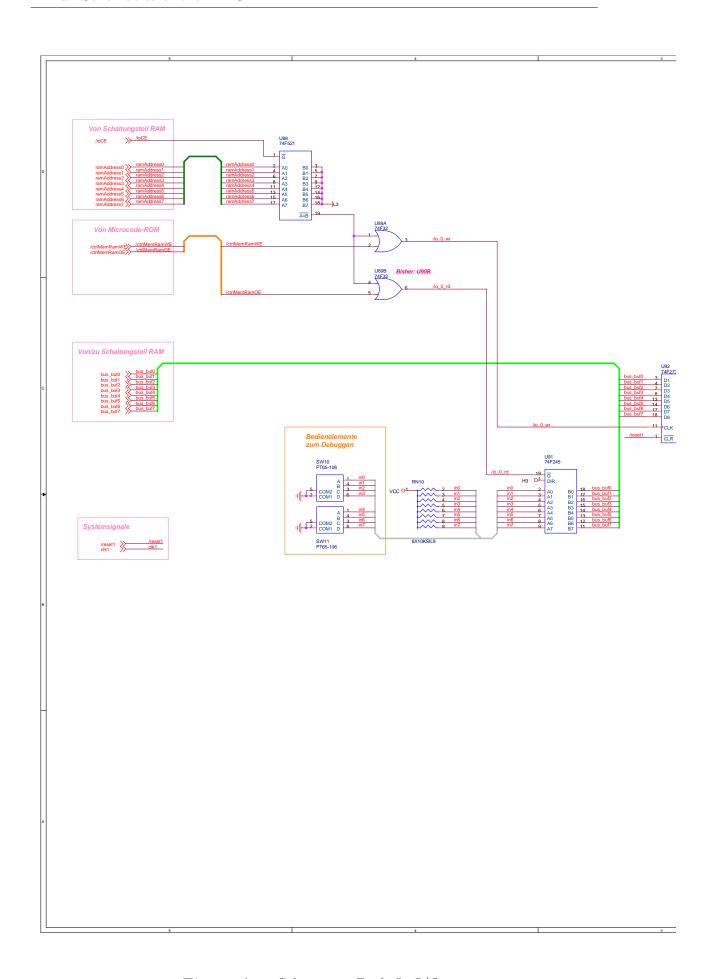
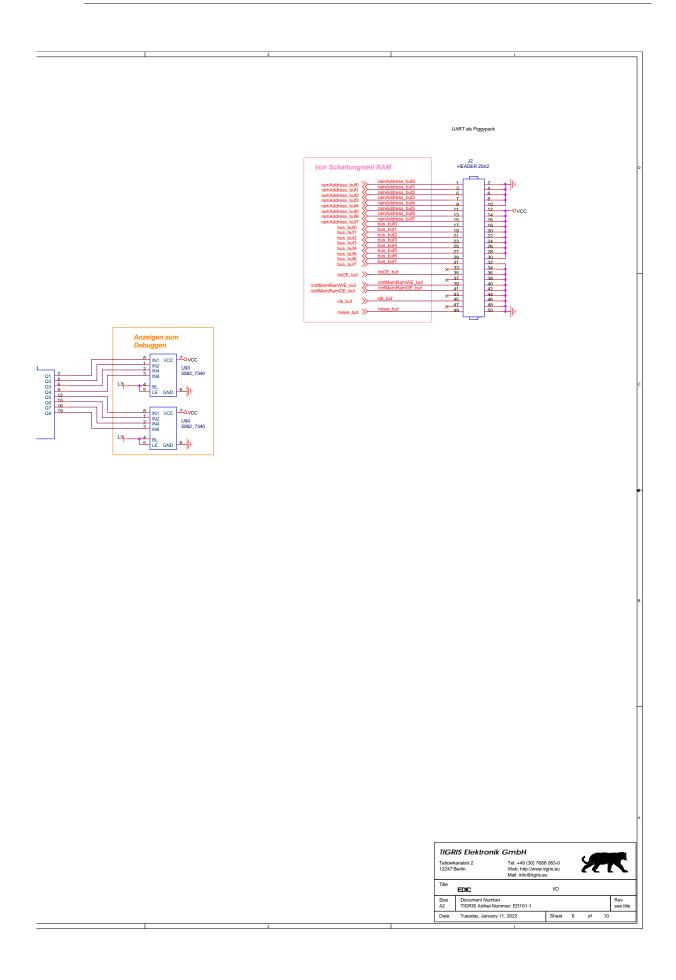


Figure A.5: Schematic: Built-In I/O.






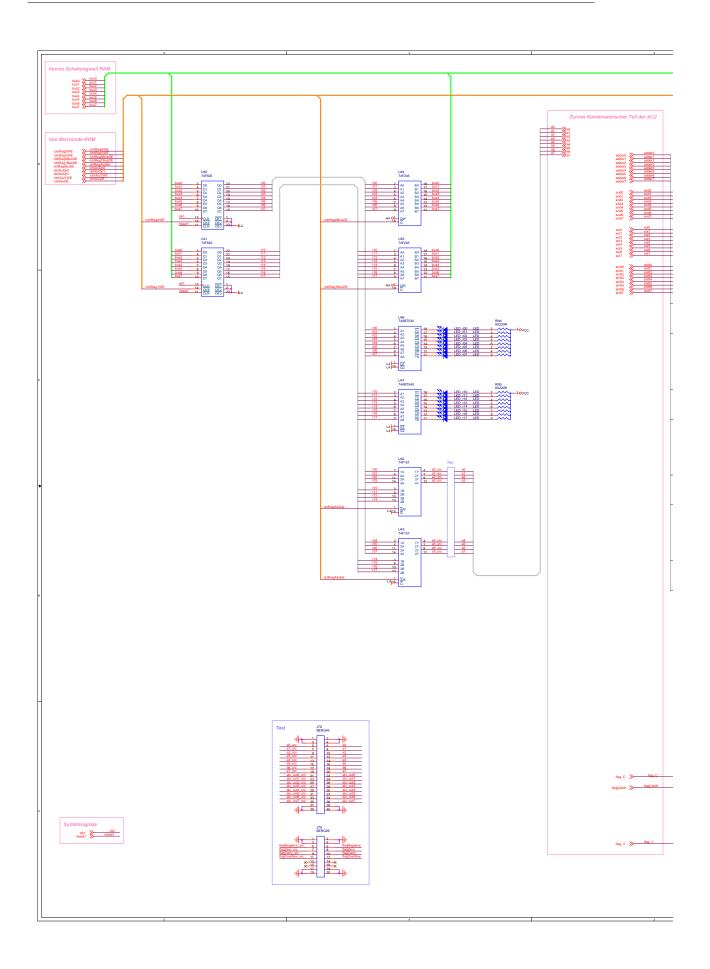


Figure A.6: Schematic: Register Set + ALU output.

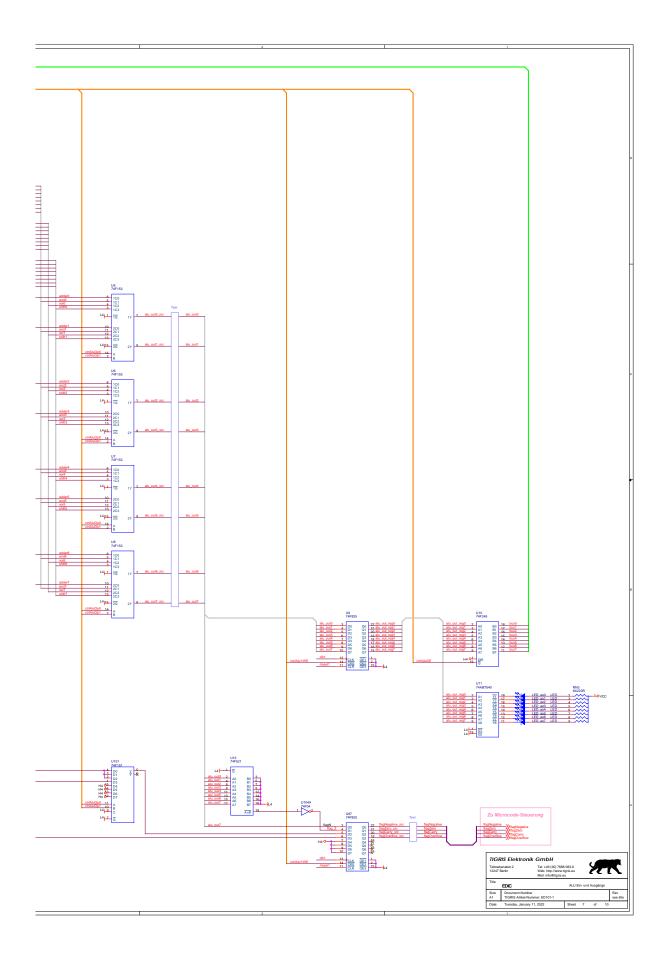

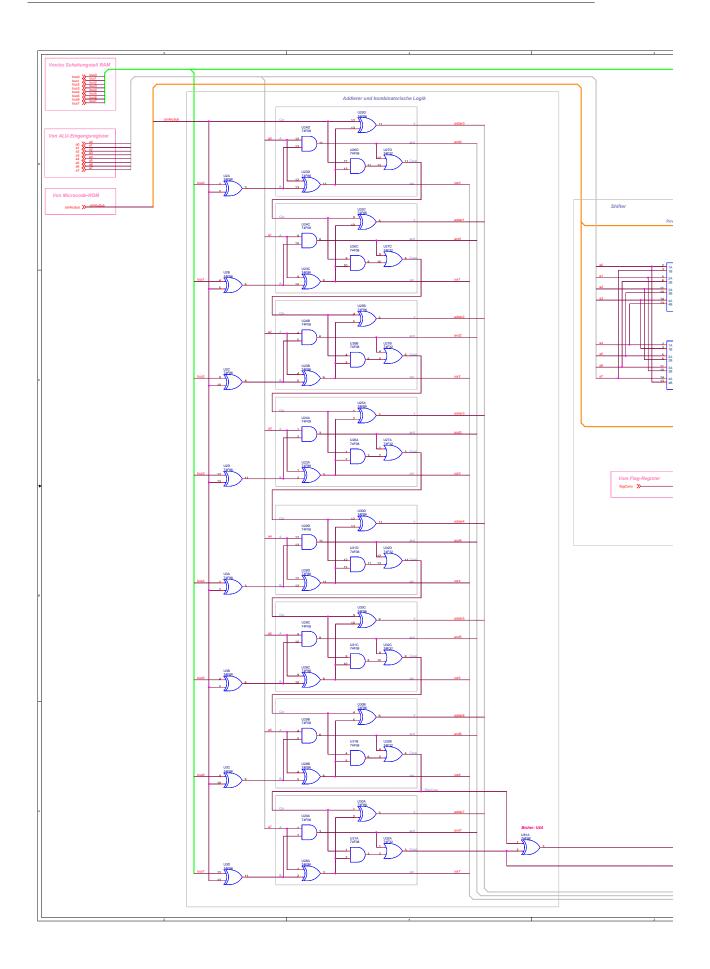

 ${\bf Figure~A.7:~Schematic:~combinatorial~ALU.}$

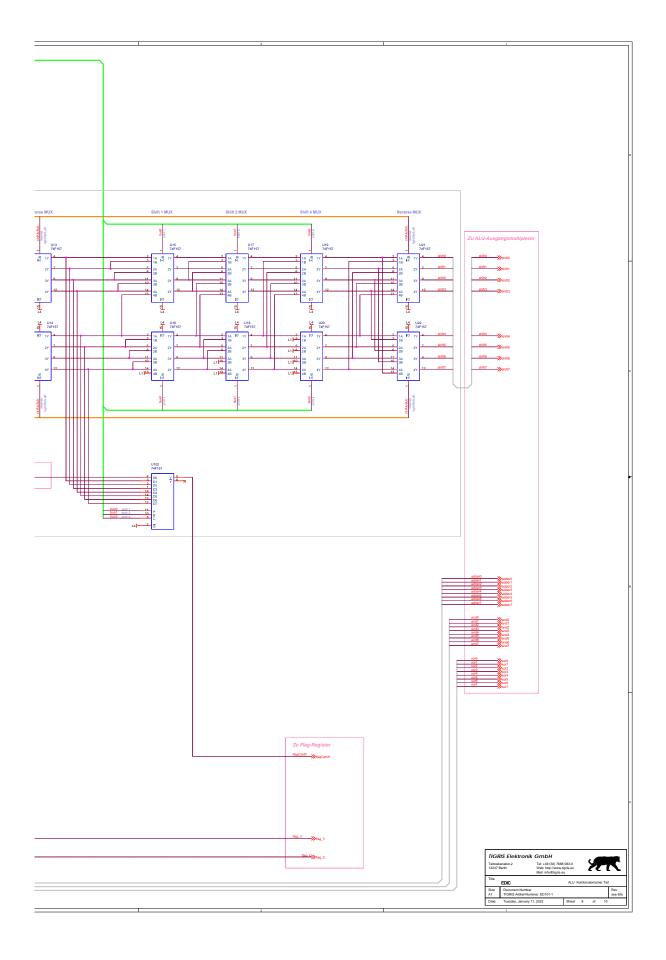

B Collection of assembler programs for the EDiC

Code Example B.1: The full snake assembler program.

```
include "prng.s"
                                         ASCII CAPITAL A = 0x41
   include "uart 16c550.s"
                                         ASCII CAPITAL S = 0x53
                                     27
                                         ASCII CAPITAL D = 0x44
                                     28
3
   SIMPLE_IO = Oxfe00
4
                                     29
   UART RX EMPTY = 0xfe09
                                         // global variables
   UART TX FULL = 0xfe0a
                                         SNAKE LENGTH = 0x0000
                                     31
6
                                         SNAKE DIRECTION = 0x0001
   UART DATA = OxfeOb
   PAR1 = Oxff00
                                         SNAKE\_HEAD\_LINE = 0x0002
8
                                     33
   PAR2 = Oxff01
                                         SNAKE\_HEAD\_COL = 0x0003
                                     34
   PAR3 = 0xff02
                                         SNAKE\_TAIL\_LINE = 0x0004
   SNAKE\_TAIL\_COL = 0x0005
11
                                     36
   ESCAPE1 = 0x5b // '['
                                         SNAKE LEFT LINE = 0x0006
12
   BORDER = 0x23 // '#'
                                         SNAKE\_LEFT\_COL = Ox0007
13
                                     38
   SPACE = 0x20 // ' '
                                         PRNG SEED
                                                         = 0x0008 //
                                     39
   HEAD = 0x40 // '0'
                                         \rightarrow do not init for extra
   LEFT = 0x3c // '<'
                                            randomness
16
   RIGHT = 0x3e // '>'
17
                                     40
                                         // local variables
   UP = 0x5e // '^'
18
   DOWN = Ox76 // 'v'
                                         LINE COUNTER = Oxff00
19
                                     42
                                         COLUMN_COUNTER = Oxff01
   ITEM = 0x58 // 'X'
                                     43
   ASCII W = 0x77
21
                                     44
   ASCII_A = 0x61
22
                                     45
   ASCII_S = 0x73
                                         // screen is in memory
   ASCII_D = 0x64
                                            starting from 0x0100
   ASCII CAPITAL W = 0x57
```

```
// one line has 256 bytes for
                                        83
    → ease of access
                                                 // move cursor to the top
                                        84
    LINES = 24
                                                // mov r0, 1 // line
48
                                        85
    COLUMNS = 80
                                                 // stf r0, [PAR2]
49
                                        86
    COLUMNS 1 = 79
                                                 // mov r0, 0 // col
50
                                        87
                                                 // stf r0, [PAR1]
51
                                        88
                                                 // mov r0, BORDER
    0x20.LOST_STRING = "You
52
    → lost!!! Score: "
                                                 // call setScreen
                                        90
                                                 ldr r0, [SNAKE_LENGTH]
53
                                                str r0, [SIMPLE IO]
    start:
                                        92
                                                 // wait x ms
      call uart init
55
                                        93
      // clear screen
                                                 // mov r0, 90
56
                                                 // call delay ms
      mov ro, ESCAPEO
57
                                        95
      call uart write
58
                                        96
      mov r0, ESCAPE1
                                                 call readArrow
59
                                        97
                                                 // change direction if !=
      call uart_write
60
                                        98
      mov r0, 0x32 // '2'
                                                 \hookrightarrow -1
61
      call uart_write
                                                 cmp r0, -1
                                        99
62
      mov r0, 0x4a // 'J'
                                                beg mainLoop
63
                                       100
      call uart_write
                                                 str ro, [SNAKE_DIRECTION]
                                       101
                                              b mainLoop
65
                                       102
      call createBoard
66
                                       103
      call updateItem
                                              lost:
67
                                       104
      mainLoop:
                                              // set position to upper
68
                                       105
        call updateHead

→ center

                                              mov r0, 6 // line
        cmp r0, -1
                                       106
70
        beq lost
                                              stf r0, [PAR2]
71
                                       107
                                              mov r0, 27 // col
        cmp r0, 1
                                       108
        beq mainAteItem
                                              stf r0, [PAR1]
73
                                       109
                                              mov rO, SPACE
        call updateTail
                                       110
        b mainUpdateBoard
                                              call setScreen
75
                                       111
      mainAteItem:
                                              mov r0, LOST_STRING
76
                                       112
        ldr r0, [SNAKE LENGTH]
                                              call outputString
                                       113
        add r0, 1
                                              ldr r0, [SNAKE_LENGTH]
                                       114
78
        str ro, [SNAKE LENGTH]
                                              call outputDecimal
                                       115
79
        call updateItem
                                              lostLoop:
80
      mainUpdateBoard:
                                              b lostLoop
81
                                       117
        ldr r0, [SNAKE LENGTH]
```

```
updateHead:
119
                                        148
                                               str r1, [Oxfffe]
     updateItem:
120
                                        149
       str r1, [0xfffe]
121
                                        150
                                               ldr r0, [SNAKE_HEAD_LINE]
122
                                        151
       itemColumn:
                                               stf r0, [PAR2]
123
                                        152
         call prng
                                               sma r0
124
                                        153
         and r0, 0x7f // limit
                                               ldr r0, [SNAKE_HEAD_COL]
125
                                        154

→ columns

                                               stf r0, [PAR1]
                                        155
                                               // load correct direction
         cmp r0, COLUMNS
126
                                        156
         bhs itemColumn // if out
                                                → char into r0
127
          → of scope redo
                                               ldr r1, [SNAKE DIRECTION]
                                        157
         mov r1, r0
                                               cmp r1, 0
128
                                        158
       itemLine:
                                               beq headUp
129
                                        159
         call prng
                                               cmp r1, 1
130
                                        160
         and r0, 0x1f // limit
                                               beq headDown
          → lines
                                               cmp r1, 2
                                        162
         cmp r0, LINES
                                               beq headRight
132
                                        163
         bgt itemLine // if out of
                                               cmp r1, 3
133
                                        164
          → scope redo
                                               beq headLeft
                                        165
         stf r0, [PAR2]
                                               b headEnd // should not
134
         sma r0 // line
                                                → happen
135
         ldr r0, [r1]
136
                                        167
         cmp r0, SPACE
                                               headUp:
137
                                        168
       bne itemColumn // if there
                                                 mov r0, UP
                                        169
138
           is something at the new
                                                  call setScreen
                                        170
           item position find a
                                                  ldr r0, [SNAKE_HEAD_LINE]
                                        171
           new one
                                                  sub r0, 1
                                        172
       // store new item
                                                  str ro, [SNAKE HEAD LINE]
139
                                        173
       stf r1, [PAR1]
                                               b headEnd
140
                                        174
       mov rO, ITEM
141
                                        175
       call setScreen
                                               headDown:
142
                                        176
                                                 mov rO, DOWN
143
                                        177
      ldr r1, [0xfffe]
                                                  call setScreen
144
                                        178
     ret
                                                  ldr r0, [SNAKE_HEAD_LINE]
145
                                        179
                                                  add r0, 1
146
                                        180
     // returns -1 if lost, 0 if
                                                  str rO, [SNAKE HEAD LINE]
                                        181
        nothing happend and 1 if
                                               b headEnd
                                        182
         ate item
                                        183
```

```
headLeft:
                                                ldr r1, [0xfffe]
                                         219
184
         mov r0, LEFT
                                              ret
185
                                         220
         call setScreen
                                              headSpace:
                                         221
186
                                                mov r0, 0
         ldr r0, [SNAKE_HEAD_COL]
187
                                         222
         sub r0, 1
                                                ldr r1, [0xfffe]
                                         223
188
         str r0, [SNAKE_HEAD_COL]
189
                                         224
       b headEnd
                                              headItem:
                                         225
                                                mov r0, 1
191
                                         226
                                                ldr r1, [0xfffe]
       headRight:
192
                                         227
         mov r0, RIGHT
                                              ret
                                         228
         call setScreen
                                         229
194
         ldr r0, [SNAKE HEAD COL]
                                              updateTail:
                                         230
195
         add r0, 1
                                                str r1, [0xfffe]
                                         231
196
         str rO, [SNAKE HEAD COL]
197
                                         232
       b headEnd
                                                ldr r0, [SNAKE TAIL LINE]
198
                                         233
                                                str r0, [SNAKE_LEFT_LINE]
199
                                         234
                                                stf r0, [PAR2]
    headEnd:
200
                                         235
                                                sma r0
201
                                         236
       ldr r1, [SNAKE_HEAD_LINE]
                                                ldr r0, [SNAKE_TAIL_COL]
202
                                         237
       stf r1, [PAR2]
                                                str r0, [SNAKE_LEFT_COL]
                                                stf r0, [PAR1]
       sma r1
204
                                         239
       ldr r1, [SNAKE HEAD COL]
                                                // load direction char
205
                                         240
       stf r1, [PAR1]
                                                ldr r1, [r0]
206
                                         241
       ldr r1, [r1] // load item
                                                mov ro, SPACE
207
                                         242

→ at new position

                                                call setScreen
                                         243
       sts r1, [0x00]
                                                cmp r1, UP
208
                                         244
       // store & show head
                                                beq tailUp
209
                                         245
       mov ro, HEAD
                                                cmp r1, DOWN
210
                                         246
       call setScreen
                                                beg tailDown
211
                                         247
       // if new position is not
                                                cmp r1, RIGHT
212
                                         248
       \rightarrow space or item -> lost
                                                beq tailRight
                                         249
       lds r0, [0x00] // load
                                                cmp r1, LEFT
213
                                         250
       \rightarrow saved item
                                                beq tailLeft
                                         251
       cmp r0, SPACE
                                                b tailEnd // should not
214
                                         252
       beq headSpace
                                                   happen
215
       cmp r0, ITEM
216
                                         253
       beq headItem
                                                tailUp:
217
                                         254
       mov r0, -1
                                                ldr r1, [SNAKE TAIL LINE]
```

```
sub r1, 1
                                               str rO, [SNAKE HEAD COL]
256
                                        294
       str r1, [SNAKE TAIL LINE]
                                               mov r0, 12
                                        295
257
       b tailEnd
                                               str rO, [SNAKE TAIL LINE]
258
                                        296
                                               mov r0, 37
259
                                        297
       tailDown:
                                               str rO, [SNAKE TAIL COL]
260
                                        298
       ldr r1, [SNAKE_TAIL_LINE]
                                               mov r0, 12
261
                                        299
       add r1, 1
                                               str r0, [SNAKE_LEFT_LINE]
262
                                        300
       str r1, [SNAKE TAIL LINE]
                                               mov r0, 36
                                        301
263
       b tailEnd
                                               str r0, [SNAKE_LEFT_COL]
264
                                        302
       tailLeft:
                                               // move to home position
                                        304
266
       ldr r1, [SNAKE TAIL COL]
                                               mov r0, ESCAPEO
267
                                        305
       sub r1, 1
                                                call uart write
                                        306
268
       str r1, [SNAKE TAIL COL]
                                               mov r0, ESCAPE1
269
                                        307
       b tailEnd
                                                call uart write
                                        308
                                               mov r0, 0x48 // 'H'
271
                                        309
       tailRight:
                                                call uart_write
272
                                        310
       ldr r1, [SNAKE_TAIL_COL]
273
                                        311
       add r1, 1
274
                                        312
       str r1, [SNAKE_TAIL_COL]
                                                // first and last line is
                                        313

→ full border

       b tailEnd
276
                                               mov r1, 0
277
                                        314
     tailEnd:
                                                createLineOLoop:
278
                                        315
       ldr r1, [0xfffe]
                                                  sma 1
279
                                        316
                                                  mov rO, BORDER
     ret
280
                                        317
                                                  str r0, [r1]
                                        318
281
     createBoard:
                                                  call uart_write
282
                                        319
       str r0, [0xfffe]
                                                  add r1, 1
                                        320
       str r1, [0xfffd]
                                                  cmp r1, COLUMNS
284
                                        321
                                               blt createLineOLoop
                                        322
285
       // init snake
286
                                        323
       mov r0, 4
                                               mov r0, 0x0a // LF
287
                                        324
       str rO, [SNAKE_LENGTH]
                                               call uart_write
                                        325
       mov r0, 2
                                               mov r0, 0x0d // CR
                                        326
289
       str ro, [SNAKE DIRECTION]
                                               call uart write
290
                                        327
       mov r0, 12 // center
291
       str rO, [SNAKE HEAD LINE]
                                                // line 2 to 23 have first
                                        329
292
       mov r0, 40 #center
                                                    and last column border
```

```
mov r1, 2 // skip first
                                                blt createLineLoop // skip
                                        364
330
        → line
                                                    last line
       str r1, [LINE COUNTER]
331
                                        365
                                                // draw last line
       createLineLoop:
332
                                        366
         // load mar1 with line
                                                mov r1, 0
                                        367
333
             space
                                                createLineLastLoop:
                                        368
         sma r1
                                                  sma LINES
334
                                        369
         mov r1, 0
                                                  mov rO, BORDER
335
                                        370
         mov rO, BORDER
                                                  str r0, [r1]
336
                                        371
         str r0, [r1]
                                                  call uart write
         call uart write
                                                  add r1, 1
338
                                        373
         add r1, 1
                                                  cmp r1, COLUMNS
                                        374
339
         // loop through line
                                                blt createLineLastLoop
340
                                        375
          \rightarrow (1-79) and store space 376
         createColumnLoop:
                                                // draw snake
                                                ldr r0, [SNAKE_HEAD_LINE]
           ldr r0, [LINE_COUNTER]
                                        378
342
           sma r0
                                                stf r0, [PAR2]
343
                                        379
                                                ldr r0, [SNAKE_HEAD_COL]
           mov r0, SPACE
                                        380
344
                                                stf r0, [PAR1]
           str r0, [r1]
345
                                        381
           call uart_write
                                                mov r0, HEAD
                                        382
            add r1, 1
                                                call setScreen
347
                                        383
            cmp r1, COLUMNS 1
348
                                        384
         blt createColumnLoop
                                                mov r1, 1
349
                                        385
         // store end border
                                                snakeBody:
350
                                        386
         mov rO, BORDER
                                                  ldr r0, [SNAKE HEAD LINE]
351
         str r0, [r1]
                                                  stf r0, [PAR2]
352
                                        388
         call uart_write
                                                  ldr r0, [SNAKE_HEAD_COL]
353
                                        389
                                                  sub r0, r1
354
                                        390
         mov r0, 0x0a // LF
                                                  stf r0, [PAR1]
355
                                        391
         call uart_write
                                                  mov r0, RIGHT
                                        392
356
         mov r0, 0x0d // CR
                                                  call setScreen
357
                                        393
                                                  add r1, 1
         call uart_write
358
                                        394
                                                  cmp r1, 3
359
                                        395
         ldr r1, [LINE_COUNTER]
                                                ble snakeBody
360
                                        396
         add r1, 1
361
                                        397
         str r1, [LINE_COUNTER]
                                                ldr r0, [0xfffe]
362
                                        398
         cmp r1, LINES
                                                ldr r1, [0xfffd]
363
                                        399
                                             ret
                                        400
```

```
401
                                        435
                                             // r0 is parameter
                                        436
402
     // r0: char, PAR1: col, PAR2:
                                             outputDecimal:
                                        437
403

→ line
                                               str r1, [0xfffe]
                                        438
    setScreen:
                                        439
       str r0, [Oxfffe]
                                               mov r1, 100
                                        440
405
       str r1, [0xfffd]
                                               stf r1, [PAR1]
406
                                        441
                                               call divMod // r0 / 100
407
                                        442
       // store
                                               ldf r1, [PAR1] // mod
408
                                        443
       ldr r1, [PAR2]
                                                \hookrightarrow result
       sma r1
                                               add r0, 0x30 // make to
410
                                        444
       ldr r1, [PAR1]
                                                411
       str r0, [r1]
                                               call uart write
412
                                        445
                                               mov r0, r1 // remainder is
413
                                        446
       // decimal needs to be one
                                                → parameter for next
       → based

→ divMod

       mov r0, ESCAPEO
                                               mov r1, 10
415
                                        447
                                               stf r1, [PAR1]
       call uart_write
416
                                        448
       mov r0, ESCAPE1
                                               call divMod
417
                                        449
       call uart_write
                                               ldf r1, [PAR1]
                                        450
       ldr r0, [PAR2] // line is
                                               add r0, 0x30 // make to
419
                                        451
       → already one based
                                                call outputDecimal
                                               call uart write
420
                                        452
       mov r0, 0x3b // ';'
                                               mov r0, r1 // last char to
                                        453
421
       call uart write
                                                → output
422
       ldr r0, [PAR1]
                                               add r0, 0x30 // make to
423
                                        454
       add r0, 1 // column is not
                                                494
       \rightarrow one based
                                               call uart write
                                        455
       call outputDecimal
425
                                        456
       mov r0, 0x48 // 'H'
                                               ldr r1, [0xfffe]
426
                                        457
       call uart_write
                                             ret
427
                                        458
428
                                        459
       ldr r0, [0xfffe]
                                             // r0: address of string
                                        460
429
       call uart write
                                             outputString:
430
                                        461
                                               str r1, [Oxfffe]
431
                                        462
       ldr r1, [0xfffd]
                                               sts r0, [0x00]
                                        463
                                               mov r1, 0
433
                                        464
                                               outputStringLoop:
    ret
```

```
lds r0, [0x00]
                                            // -1 for nothing, 0 for up,
                                       501
466
                                                1 for down, 2 for right,
         sma r0
467
         ldr r0, [r1]
                                                3 for left
468
         cmp r0, 0
                                            readArrow:
469
                                       502
         beq outputStringEnd
                                              str r1, [0xfffe]
470
                                       503
         call uart_write
                                            readArrowLoop:
471
                                       504
         add r1, 1
                                              call uart_read
                                       505
         cmp r1, 255
                                              cmp r0, 0
473
                                       506
         bne outputStringLoop
                                              beq readArrowNothing // no
474
                                       507
                                               outputStringEnd:
                                              // up
476
                                       508
                                              cmp r0, ASCII_W
477
                                       509
      ldr r1, [0xfffe]
                                              beq readArrowUp
478
                                       510
                                              cmp r0, ASCII CAPITAL W
    ret
479
                                       511
                                              beq readArrowUp
480
                                              // left
                                       513
481
    // r0 / PAR1
                                              cmp r0, ASCII_A
482
                                       514
     // result: r0 -> div, *PAR1 -> 515
                                              beg readArrowLeft
483
                                              cmp r0, ASCII_CAPITAL_A
       mod
                                       516
    divMod:
                                              beq readArrowLeft
484
      str r1, [Oxfffe]
                                              // down
485
                                       518
      mov r1, 0
                                              cmp r0, ASCII S
486
                                       519
                                              beq readArrowDown
      divLoop:
487
                                       520
         add r1, 1
                                              cmp r0, ASCII_CAPITAL_S
488
                                       521
         sub r0, [PAR1]
                                              beg readArrowDown
                                       522
      bpl divLoop // positive or
                                              // right
490
                                       523
       → zero (N Clear)
                                              cmp r0, ASCII_D
                                       524
      // executing one step too
                                              beq readArrowRight
491
                                       525
       → much, undo it
                                              cmp r0, ASCII_CAPITAL_D
                                       526
      add r0, [PAR1]
                                              beq readArrowRight
492
      sub r1, 1
493
                                       528
                                              cmp r0, ESCAPE0
494
                                       529
      str r0, [PAR1]
                                              bne readArrowLoop // make
495
      mov r0, r1
                                                 sure to empty the fifo
496
      ldr r1, [0xfffe]
497
                                       531
    ret
                                              call uart read
498
                                       532
                                              cmp r0, 0
499
                                       533
    // r0 is return value:
                                              beq readArrowNothing
                                       534
```

```
cmp r0, ESCAPE1
                                              mov r0, 2
                                       564
535
       bne readArrowLoop
                                           ret
                                       565
536
                                       566
537
       call uart_read
                                            // r0: delay in ms
538
                                       567
       cmp r0, 0x41 // A
                                            delay ms:
539
                                       568
                                              sts r0, [0x00]
      blt readArrowLoop
540
                                       569
      cmp r0, 0x44 // D
                                       570
541
      bgt readArrowLoop
                                              delay ms outer loop:
                                       571
542
       sub r0, 0x41 // return 0-4
543
                                       572
                                                // 2MHz clock -> 1ms is
     ret
     // -1 for nothing, 0 for up,
                                                 → 2000cycle
545
     → 1 for down, 2 for right,
                                                // per loop 4+4+3+3=14
                                       574

    cycles (below)

     → 3 for left
      readArrowNothing:
                                                // -> 198.6 times 10
546
                                       575
      ldr r1, [0xfffe]
                                                 547
      mov r0, -1
                                                mov r0, 0
                                       576
548
    ret
                                                delay_ms_loop:
549
                                       577
                                                  add r0, 1 // 4 cycles
      readArrowUp:
550
                                       578
      ldr r1, [0xfffe]
                                                  cmp r0, 199 // 3 cycles
551
                                       579
      mov r0, 0
                                                blo delay_ms_loop // 3
     ret
                                                   cycles
553
      readArrowLeft:
554
                                       581
      ldr r1, [0xfffe]
                                                lds r0, [0x00] // 4
555
                                       582
      mov r0, 3

→ cycles

556
                                                sub r0, 1 // 4 cycles
    ret
557
                                       583
      readArrowDown:
                                                sts r0, [0x00] // 3
                                       584
558
      ldr r1, [0xfffe]

→ cycles

559
      mov r0, 1
                                              bhi delay ms outer loop //
560
    ret
                                               → 3 cycles
561
      readArrowRight:
                                           ret
562
                                       586
       ldr r1, [0xfffe]
563
```

Code Example B.2: The PRNG assembler program "prng.s" used in the snake program in code example B.1.

```
PRNG_SEED = 0x0000
SIMPLE_IO = 0xfe00
```

```
prng:
4
      ldr r0, [PRNG SEED]
      subs r0, 0
6
      beq prngDoEor
      lsl r0, 1
8
      beq prngNoEor
9
      bcc prngNoEor
10
    prngDoEor:
11
      xor r0, 0x1d
12
    prngNoEor:
13
      str r0, [PRNG_SEED]
14
    ret
15
16
    start:
17
      mov r0, 0
18
      str r0, [PRNG_SEED]
19
      prng_loop:
20
        call prng
21
        str r0, [SIMPLE_I0]
22
      b prng_loop
```

Code Example B.3: The utility library for the UART extension card of the EDiC with the 16c550 UART Transceiver.

```
UART DAT = 0xfe08
                                         // UART DIV = 20 // 9600 baud
1
   UART IER = Oxfe09
                                         UART FILL AMOUNT = 60 //
                                     15
   UART IIR = OxfeOa
                                          → 19200 baud
3
                                         // UART FILL AMOUNT = 30 //
   UART FCR = OxfeOa
                                     16
   UART LCR = OxfeOb
                                            9600 baud
5
   UART MCR = OxfeOc
6
                                     17
   UART LSR = OxfeOd
                                         uart_init:
7
                                     18
   UART_MSR = OxfeOe
                                           // line control register
8
                                     19
                                           // 8bit, 2 stopbits, no
   UART SCR = OxfeOf
9
                                     20
   UART_DLL_DLAB = 0xfe08
10
                                            → parity, dlab active:
   UART_DLM_DLAB = Oxfe09
                                           // 0b10xx_0111
11
                                     21
                                           // 8bit, 1 stopbit, no
12
                                              parity, dlab active:
   UART_DIV = 10 // 19200 baud
13
```

```
// 0b10xx 0011
                                              sts r1, [0x00]
23
                                        57
      mov r0, 0x87
24
      str rO, [UART LCR]
                                              uart write loop:
25
                                        59
                                                ldr r1, [UART_LSR]
26
                                        60
      // divisor latch access
                                                 and r1, 0x20 // bit 5,
      mov r0, 0x00
                                                 → fifo empty (not full?)
28
      str rO, [UART_DLM_DLAB]
                                                 \rightarrow -> if 1, can accept
      mov ro, UART DIV
                                                 → new data
30
      str rO, [UART_DLL_DLAB]
                                              beq uart_write_loop
31
                                        62
      // lcr as above but dlab
                                              str r0, [UART DAT]
                                        64
33
       \rightarrow inactive
                                        65
      mov r0, 0x07
                                              lds r1, [0x00]
34
                                        66
      str rO, [UART LCR]
                                            ret
35
                                        67
      // fifo control register
                                            uart_write:
                                        69
37
      // fifo enable, reset tx
                                              sts r1, [0x00]
38
                                        70
       \hookrightarrow and rx fifo
                                              call uart_write_inner
                                        71
      // 0b00xx x111
30
                                        72
      mov r0, 0x07
                                              cmp r0, 0x20 // if less
                                        73
      str r0, [UART_FCR]
                                               \rightarrow than 0x20 -> send fill
41
                                               → null bytes
42
      // interupt enable register
                                              bge uart write end
43
      // clear all interupts ->
                                        75
44

→ fifo polled mode

                                              mov r0, 0x00
                                        76
      mov r0, 0x00
                                              mov r1, UART FILL AMOUNT
45
                                        77
      str rO, [UART IER]
                                              uart_write_fill_loop:
46
                                        78
                                                 call uart write inner
      // modem control register
                                                sub r1, 1
48
                                        80
      // assert dtr, deassert rts
                                                 cmp r1, 0
49
       → (should be asserted?),
                                              bhi uart_write_fill_loop
                                        82
      // Obxxx0 xx01
50
                                        83
      mov r0, 0x01
                                            uart write end:
51
      str r0, [UART MCR]
                                              lds r1, [0x00]
                                        85
52
                                            ret
    ret
53
                                        86
54
                                        87
    // r0 is byte to write
55
                                        88
    uart write inner:
                                            // r0 is byte to write
```

```
uart_read:
                                                   and r1, 0x01 // bit 0,
90
                                         108
       ldr r0, [UART_LSR]
                                                    \rightarrow fifo not empty -> 1
91
       and r0, 0x01 // bit 0, fifo

→ if data exists

92
                                                 beq uart_read_busy_loop
        \rightarrow not empty -> 1 if data
                                         109
        \rightarrow exists
                                         110
       beq uart_read_0
                                                 ldr r0, [UART_DAT]
                                         111
93
94
                                         112
       ldr r0, [UART_DAT]
                                                 lds r1, [0x00]
                                         113
95
     ret
                                              ret
96
                                         114
     uart_read_0:
                                         115
       mov r0, 0
                                         116
98
     ret
                                              start:
99
                                         117
                                                 call uart_init
100
                                         118
                                                 uart_loop:
101
                                         119
     // r0 is byte to write
                                                   call uart_read
                                         120
                                                   str r0, [0xfe00]
     uart_read_busy:
103
                                         121
       sts r1, [0x00]
                                                   cmp r0, 0
104
                                         122
                                                   beq uart_loop
105
                                         123
       uart_read_busy_loop:
                                                   call uart_write
                                         124
106
         ldr r1, [UART_LSR]
                                                 b uart_loop
                                         125
```