

Converting 16-bit unsigned binary data to 32-bit unsigned binary data

UINT2UDINT(P)

FX5S FX5UJ FX5U FX5UC

These instructions convert the 16-bit unsigned binary data in the device specified by (s) to 32-bit unsigned binary data, and store the converted data in the device specified by (d).

Ladder diagram	Structured text ^{*1}
	ENO:=UINT2UDINT(EN,s,d); ENO:=UINT2UDINTP(EN,s,d);

FBD/LD

*1 Supported by engineering tool version "1.035M" and later.

7

Setting data

Descriptions, ranges, and data types


Operand	Description	Range	Data type	Data type (label)
(s)	Data before conversion	0 to 65535	16-bit unsigned binary	ANY16_U
(d)	Data after conversion	—	32-bit unsigned binary	ANY32_U
EN	Execution condition	—	Bit	BOOL
ENO	Execution result	—	Bit	BOOL

Applicable devices

Operand	Bit	Word		Double word		Indirect specification	Constant			Others
	X, Y, M, L, SM, F, B, SB, S	T, ST, C, D, W, SD, SW, R	U□\G□	Z	LC		K, H	E	\$	
(s)	○	○	○	○	—	—	○	—	—	—
(d)	○	○	○	○	○	○	—	—	—	—

Processing details

- These instructions convert the 16-bit unsigned binary data in the device specified by (s) to 32-bit unsigned binary data, and store the converted data in the device specified by (d).

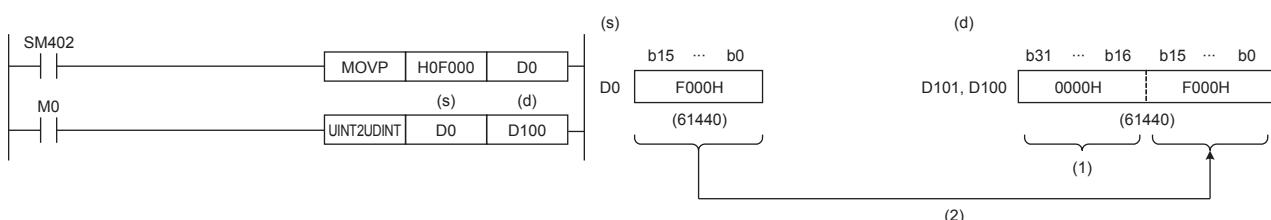

(1): The value 0 is stored.

(2): Data before conversion is stored in the lower 16 bits.

Operation error

There is no operation error.