



# SM324-10E TMR Smart Magnetometer

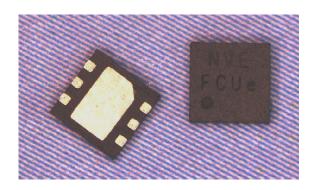

## **Block Diagram**

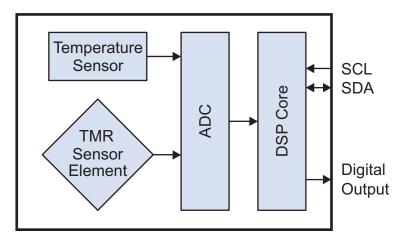

## **Features**

- Can detect magnets more than 50 mm away
- In-plane sensitivity—more usable than Hall sensors
- Internal temperature compensation
- I2C field measurement plus on/off digital output
- Ultraminiature 2.5 x 2.5 x 0.8 mm TDFN6 package

## **Key Specifications**

- 0 to ±20 Oe magnetic field operating range
- Ultra-accurate— ±0.3% of full scale at 25°C
- 1.5 mA typical supply current
- 300 samples/second
- -40°C to +125°C operating range

## **Applications**

- · Proximity sensors
- Noncontact current sensing
- Automotive applications
- Robotics
- Internet of Things (IoT) end nodes

## **Description**

The SM324 Smart Magnetometer provides ultraprecise magnetic field measurements.

The sensor combines a precise Tunneling Magnetoresistance (TMR) sensor element with sophisticated digital signal processing. The digital signal processing improves accuracy and allows applicationspecific calibration. Calibration coefficients are stored in an internal nonvolatile memory.

Unlike awkward, old-fashioned Hall-effect sensors, TMR is sensitive in-plane for optimal current sensing and easy mechanical interfaces. TMR also provides more sensitivity, higher precision, and lower noise than Hall.

An I<sup>2</sup>C interface provides data as well as a programming interface. A digital output provides precise, programmable magnetic thresholds.

Designed for harsh industrial or automotive environments, the SM324 has robust ESD protection and full -40°C to +125°C operating temperature range.





# **Absolute Maximum Ratings**

Parameter	Min.	Max.	Units
Supply voltage	-0.4	3.63	Volts
Input/ Output voltages (SCL, SDA, Digital Out)	-0.5	$V_{\rm DD} + 0.5$	Volts
Storage temperature	-50	130	°C
ESD (Human Body Model)	4000		Volts
Applied magnetic field		Unlimited	Oe





# **Operating Specifications**

Parameter	Symbol	Min.	Тур.	Max.	Units	Test Condition
Operating temperature	$T_{MIN}; T_{MAX}$	-40	<u> </u>	125	°C	
Supply voltage	V <sub>DD</sub>	1.68		3.6	V	
The state of the s	DD		1.5	2.5	mA	Active; $T_{MIN}$ to $T_{MAX}$
Supply current ( $V_{DD} = 3.3 \text{ V}$ )	$I_{\scriptscriptstyle  m DD}$		20	250	nA	Idle Mode; ≤ 85°C
Tappy Time ( ) DD Time ( )	-DD		50	750	nA	Idle Mode; ≤ 125°C
Power-Up and Power-Down						
Power-on reset low voltage	$V_{\scriptscriptstyle BOR}$	0		0.2	V	
Power down time (duration below V <sub>BOR</sub> )	t <sub>BOR</sub>	3			μs	
Power-on reset rising slope	$SR_{ ext{VDD}}$	10			V/ms	
	$t_{ST1}$			1	ms	V <sub>DD</sub> ramp time to active communication
Start-up time	t <sub>st2</sub>			2.5	ms	V <sub>DD</sub> ramp time to active operation
						Idle to active
	$t_{ m wu1}$			0.5	ms	communication
Wake-up time						Idle to active
	$t_{ m wu2}$			2	ms	operation
Internal Temperature Sensor					•	•
Temperature resolution	$T_{RES}$		0.003		°K/LSB	$T_{MIN}$ to $T_{MAX}$
Magnetic Measurements						
Operating magnetic field strength	Н			20	Oe	
Conversion rate	$f_{con}$	270	300		S/s	
Aggregati				±0.3	%FS	25°C
Accuracy				±1	%F3	$T_{MIN}$ to $T_{MAX}$
Hysteresis				0.1	%FS	$T_{MIN}$ to $T_{MAX}$
Output resolution				24	bits	
Digital Output						
Update rate	$ m f_{_{UPDATE}}$		300		S/s	During repeated 0xAA commands
Sink current	I <sub>SOURCE</sub>		10		mA	$V_{DD} = 3.3V$
Source current	$I_{\text{SINK}}$		10		mA	$V_{OL} < 0.5V; V_{OH} > 2.8V$
Low-level analog output voltage	$V_{oL}$	0		50	mV	$I_{L} = -50  \mu A$
High-level analog output voltage	$V_{oh}$	$V_{\rm DD} - 0.05$		$V_{\scriptscriptstyle  m DD}$	V	$I_L = 50 \mu A$
Nonvolatile Memory						
Write time			5	16	msec	
Endurance		1000	10000		cycles	
Thermal Characteristics						
Junction-to-ambient thermal resistance	$\theta_{\scriptscriptstyle \mathrm{JA}}$		320		°C/W	
Package power dissipation			500		mW	
I <sup>2</sup> C Interface						
Data transfer rate	DR			400 k 3.4 M	Baud	Standard mode I2C fast mode
Bus voltage	V <sub>BUS</sub>	3		$V_{DD} + 0.5$	V	
Low level input threshold voltage	V <sub>IL</sub>	0.8		DD P	V	
High level input threshold voltage	V <sub>IH</sub>			2.2	V	
Low level output current	$I_{OL}$	3		mA	· ·	V <sub>oL</sub> =0.4V
Capacitive load	C <sub>B</sub>			400	pF	OL VIII
I/O capacitance	C <sub>I/O</sub>			10	pF	



#### **SM324 Overview**

The SM324 is a non-contact magnetometer designed for proximity or current sensing.

The heart of the SM324 is a unique tunneling magnetoresistance (TMR) sensor, which yields negligible hysteresis of less than 0.1%, or 0.04 Oe from  $-40^{\circ}$ C to  $125^{\circ}$ C.

Factory calibration for gain and offset, plus temperature correction and digital linearization provide extraordinary accuracy of  $\pm 0.3\%$  of full scale. Combined with a high-sensitivity TMR element, absolute accuracy is 0.12 Oe at 25°C, or 0.4 Oe from -40°C to 125°C.

With a tiny 2.5 by 2.5 mm TDFN package and typical 1.5 mA active supply current and 50 nA idle current, the SM324 is also the smallest, lowest-power magnetometer in its class.

#### **SM324 Operation**

A block diagram is shown below:

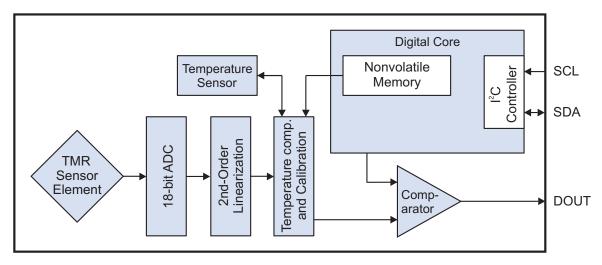


Figure 1. Detailed block diagram.

A robust 18-bit ADC, second-order linearization, and temperature compensation provide ultra-precise magnetic field measurements.

The digital core provides three bytes (24 bits) of mathematical precision.

Two outputs are available: an industry-standard I<sup>2</sup>C output for interfacing directly to microcontrollers and FPGAs, and a simple digital output for threshold detection of proximity, fault, overcurrent, and saturating magnetic fields.

Several other parameters can be programmed into the SM324 through the I<sup>2</sup>C interface.



## **User Defined Memory**

Twenty-six 16-bit blocks of nonvolatile memory are available for part identification or general purpose use. This number can be overwritten if needed. Note that the nonvolatile memory is subject to endurance limitations and should only be used for occasionally updated data.

## Sensor Offset

The sensor core of the SM324 is factory calibrated for highest accuracy, and a programmable three-byte parameter, OFFS, is available for user adjustments to environments with non-zero magnetic fields. OFFS has a sign/magnitude form where the most-significant bit is the sign (1 = negative), and the range is  $\pm 50\%$  of the  $\pm 20$  Oe full-scale range.

## Internal Temperature Sensor

The SM324 utilizes an internal temperature sensor for compensation. The thermometer is factory calibrated and a user-programmable three-byte variable, TEMP, is available for additional temperature offset calibration. Similar to the OFFS parameter, TEMP has a sign/magnitude form where the most-significant bit is the sign (1 = negative), and the range is  $\pm 50\%$  of the  $165^{\circ}$ C full-scale temperature range.

## **Digital Output for Threshold Detection**

The SM324 has a programmable digital output that can be configured for threshold detection. The output is push-pull CMOS, and can source or sink up to 10 mA.

## Digital Output Parameters

The output is programmable using two 24-bit threshold parameters (THRSH1 and THRSH2). THRSH1 and THRSH2 are unsigned integers, each representing 0 to 100% of full scale, where 50% is zero field, 0 is the negative end of the range (-20 Oe), and 0xFFFFFF is the positive high end of the range (+20 Oe).

## Digital Threshold Updating

DOUT updates automatically with each sample in the Cyclic Mode, although the refresh rate is limited to eight samples per second in that mode. In normal mode, DOUT updates with each I<sup>2</sup>C data request, so the sensor must be connected to a I<sup>2</sup>C Master continuously requesting data for the output to be usable.

## Digital Threshold Modes

The digital output can be programmed as a high-field, low field, or window comparator. The output can also be reversed with a two-bit parameter, so either a high-field or low-field output can be generated. The figures below show the outputs for the three comparator modes as set by the CONFIG parameter.

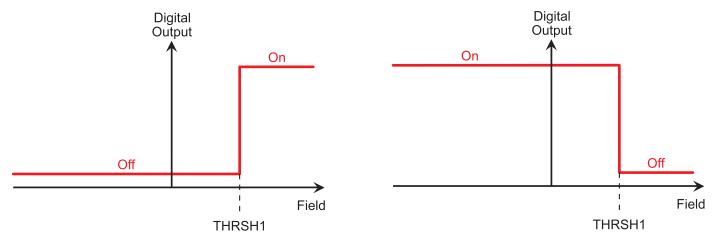


Fig. 2a. Normal mode (CONFIG = 01 bin).

Fig. 2b. Inverted mode (CONFIG = 10 bin).



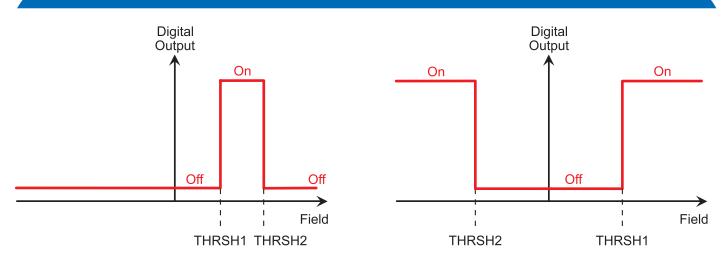


Fig. 2c. Window mode (CONFIG=11 bin; THRSH2>THRSH1).

Fig. 2d. Inverted window mode (CONFIG=11; THRSH1>THRSH2).

These graphs are with respect to magnetic field, with zero field at the y-axis intercept in the center of the x-axis. The I<sup>2</sup>C output is unsigned, with zero field corresponding to 50%.

The Digital Threshold Modes are summarized in the following table:

CONFIG (bin)	DOUT
01	0: Measurement < THRSH1
U1	1: Measurement > THRSH1
10	0: Measurement > THRSH1
10	1: Measurement < THRSH1
	Output determined by threshold settings.
	If THRSH1 > THRSH2
	1: Measurement > THRSH1 OR Measurement < THRSH2
11	0: THRSH1 > Measurement > THRSH2
	If THRSH2 > THRSH1
	1: THRSH1 < Measurement < THRSH2
	0: Measurement > THRSH2 OR Measurement < THRSH1

Table 1. Digital Output (DOUT) Threshold Configuration

The Window mode (CONFIG = 11) can be used to provide a response independent of polarity. For example, the default settings of CONFIG = 11, THRSH1 = 75% (0xC00000), and THRSH2 = 25% (0x400000) cause DOUT to be high if the field magnitude is more than 10 Oe (i.e., greater than +10 Oe or less than -10 Oe) as shown in the following diagram:

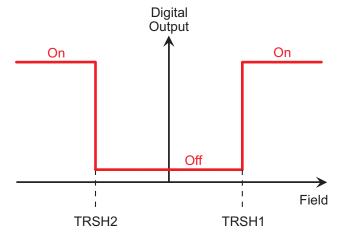


Fig. 2e. Default DOUT configuration (CONFIG=11; THRSH1=75%; THRSH2=25%; for omnipolar DOUT).



## Directions of Sensitivity

Unlike Hall effect or other sensors, TMR sensors are sensitive to fields in the plane of the package, which is more convenient. The axis of sensitivity is in the pin 2 to pin 5 sensor axis, which is ideal for position sensing, or for current sensing since a currentsensing trace can be run under the sensor without crossing the pins.

## **Position Sensing**

A typical proximity sensor using an SM324-10E sensor and magnet is shown below. With a 4 Oe operate point, the sensor actuates with a rare-earth magnet at more than 50 mm (two inches) from the sensor:

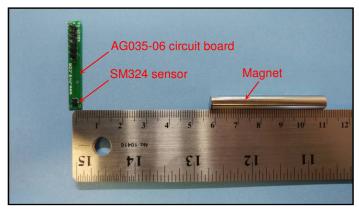


Figure 3. The SM324-10E sensor can be activated by a magnet more than 50 mm away.

Thresholds even lower than 4 Oe can be programmed for the SM324-10E, although care must be taken to account for the earth's magnetic field, which is approximately 0.5 Oe.

Typical magnetic operate distances are illustrated below for an inexpensive ceramic disk magnet:

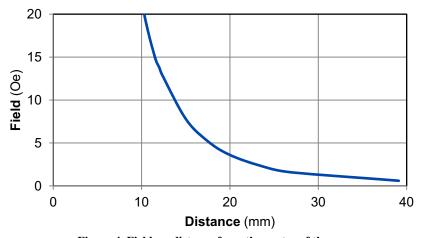


Figure 4. Field vs. distance from the center of the sensor (NVE part number 12216; ferrite magnet; d=6 mm; t=4 mm; C1/Y10T;  $M_s=B_r=2175$  G).

Larger and stronger magnets allow farther operate and release distances. For more calculations, use our axial disc magnetic field versus distance Web application at:

www.nve.com/spec/calculators.php#tabs-Axial-Disc-Magnet-Field.



## **Current Sensing**

In a typical current sensor configuration, a magnetic field provided by an off-chip current strap produces a magnetic field in the plane of the sensor. The digital output can be used for current threshold detection or overcurrent protection.

Typical current sensing configurations are shown below:



Figure 5a. 0.05" (1.3 mm) trace (0 - 5 A typ.).



Figure 5b. Five turns of 0.0055" (0.14 mm) trace (0 - 1 A typ.).

For the geometry shown below and narrow traces, the magnetic field generate can be approximated by Ampere's law:

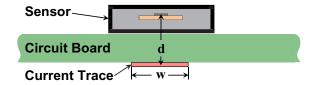


Figure 6. The geometry of current-sensing over a circuit board trace.

$$H = \frac{2I}{d}$$
 ["H" in oersteds, "I" in amps, and "d" in millimeters]

For traces on the top side of the board, "d" is simply the distance of the sensor element from the bottom of the package, which is 0.5 millimeters.

Traces on the top side of the board are typically used for currents of five amps or less. Large traces on the bottom side of the PCB can be used for currents of more than five amps.

More precise calculations can be made by breaking the trace into a finite element array of thin traces, and calculating the field from each array element. We have a free, Web-based application with a finite-element model to estimate magnetic fields and sensor outputs in this application:

www.nve.com/spec/calculators.php#tabs-Current-Sensing



#### **Power-Up and Initialization**

Parts power in the "normal" (single-reading) mode. In this mode, the sensor output and DOUT are updated when data is requested via I<sup>2</sup>C, so the sensor should be connected to a I<sup>2</sup>C Master continuously requesting data. If the "cyclic" mode (DOUT automatically updated) is desired, it should be invoked with the appropriate I<sup>2</sup>C commands.

Parameters such as I2C address, temperature and field offsets, digital output thresholds and configuration are stored in nonvolatile memory and retain their state through power cycle unless they are deliberately changed. As specified in "Operating Specifications—Power-Up and Power-Down," a reasonably fast supply rise time is necessary to guarantee a power-on reset.

#### **DOUT Update Modes**

Two operational modes are available with the SM324. The "normal" mode allows the user to update DOUT and retrieve a single sensor reading via I2C. The part returns to a low-power idle state when communication is complete.

The Cyclic Mode automatically updates the sensor read buffer and DOUT at a programmed interval. Field and temperature can be read via I2C during cyclic mode, and such reads update the measurements and DOUT. Note that the minimum Cyclic Mode Interval is 125 ms, so without I<sup>2</sup>C data reads, DOUT is only updated a maximum of eight times per second in Cyclic Mode. Although data can be read, parameters cannot read or written in Cyclic Mode.

The DOUT mode can be set via I2C (see Table 2 below), and the cyclic interval is programmed using the CINT parameter (see Table 3):

Command	Command Value (hex)	Notes			
Read User Memory	0x20-0x38	16-bit user defined data			
Write User Memory	0x60-0x78	16-bit user defined data			
Checksum	0x90	Perform memory update to CHECKSUM.			
Single Measurement	0xAA	24-bit field plus 24-bit temperature measurement			
Cyclic Measurement	0xAB	Cyclic 24-bit field and temperature measurements			
2x Oversample Measure	0xAC	Complete 2x full continuous measurements			
2x Oversample Weasure	UXAC	and compute average values			
4x Oversample Measure	0xAD	Complete 4x full continuous measurements			
4x Oversample Weasure	UXAD	and compute average values			
8x Oversample Measure	0xAE	Complete 8x full continuous measurements			
8x Oversample Weasure	UXAL	and compute average values			
16x Oversample Measure	0xAF	Complete 16x full continuous measurements			
Tox Oversample Measure	UAAF	and compute average values			
Cyclic Measure Stop	0xBF	Stops cyclic measurements			

Table 2. SM324 command options.

Parameter Value	Cyclic Mode
(binary)	Update Interval
000	Not assigned
001	125 msec
010	250 msec
011	500 msec
100	1000 msec
101	2000 msec
110	4000 msec
111	Not assigned

Table 3. CINT (Cyclic Interval) parameter values.



## **Sensor Measurements and Offsets**

#### Field and Temperature Measurements

The sensor provides field and temperature measurements with each reading.

The measurements are 24-bit unsigned integers. 0x000000 represents the minimum value, which is -20 Oe for field and  $-40^{\circ}$ C for temperature. 0xFFFFFF represents full scale, which is +20 Oe for field and  $+125^{\circ}$ C for temperature.

## Saturation and Overflow

All measurements responses start with a status byte followed by the data. Bit 0 of the status byte indicates the sensor is saturated because field is too high for an accurate measurement. In this case, Bit 0 of the status byte will be set and the field measurement will remain at or near 0xFFFFFF.

## Offsets

Temperature and field offsets are factory calibrated, but can be reprogrammed if necessary. Offsets are in 24-bit sign/magnitude format, where the most significant bit (bit 23) is the sign (0 = positive; 1 = negative), and bits 22:0 are the magnitude. The offset range is  $\pm 50\%$  of full-scale, where field full-scale is  $\pm 20$  Oe; and temperature full-scale is 165°C.

Measurements and offsets are illustrated below:

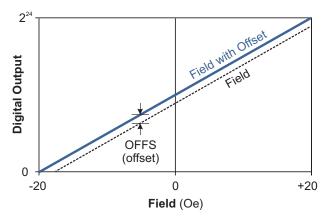


Fig. 7a. Sensor output versus field.

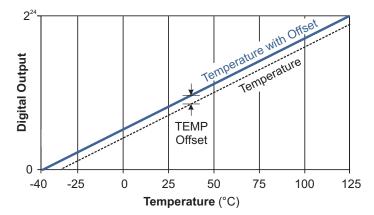


Fig. 7b. Sensor output versus temperature.



## I<sup>2</sup>C Interface

The I<sup>2</sup>C interface is an industry standard full-duplex 400 kHz connection with the sensor as the slave to an external master such as a microcontroller.

Consistent with industry practice, SDA and SCL are open-drain, and pull up resistors to  $V_{\tiny DD}$  are normally needed. The SDA / SCL pins should not be left floating for proper power-up/operation.

A schematic of a typical microcontroller interface is show in the Applications section.


#### I<sup>2</sup>C Address

The SM324 has a seven-bit address, which can be defined in the nonvolatile memory with the I<sup>2</sup>C<sub>ADD</sub> parameter. Allowable I<sup>2</sup>C addresses are 8 to 127. Addresses 4 to 7 are reserved for I<sup>2</sup>C High-Speed Mode. The factory default I<sup>2</sup>C Slave Address is 16 (0x10 hex). A power cycle is required for a device to respond to an I<sup>2</sup>C<sub>ADD</sub> change.

#### Data Format

Each command follows the sequence shown below. All I<sup>2</sup>C read responses start with a status byte followed by the data. The data depends on the previous commands. Only the number of bytes that are needed for the command must be sent. An exception is the I<sup>2</sup>C High-Speed Mode where three bytes must always be sent. After the execution of a command, the expected data can be read or if no data is returned by the command, the next command can be sent. You can read the same data more than once if the read request is repeated.

## Command or I<sup>2</sup>C Memory Write Sequence

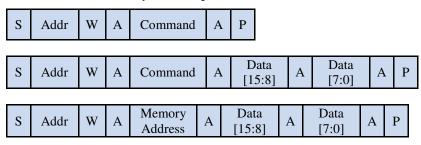

# Read Sequence Following AA<sub>HEX</sub> Command

S	Addr	R A	Status	Α	Field [23:16]	A	Field [15:8]	A	Field [7:0]	A	Temp [23:16]	A	Temp [15:8]	A	Temp [7:0]	N	P	l
---	------	-----	--------	---	---------------	---	-----------------	---	----------------	---	--------------	---	-------------	---	------------	---	---	---

## Read Sequence Following 2-byte Memory Write Command

S	Addr	R	A	Status	A	Data [15:8]	A	Data [7:0]	N	P	
---	------	---	---	--------	---	-------------	---	---------------	---	---	--

#### Key:

S/P: Start/Stop

A/N: Acknowledge / Not Acknowledge

R/W: Read (0) / Write (1)





Status Byte

A read status can be executed at any time with the following command sequence:

S	Addr	R	Α	Status	N	P

The status byte contains the following bits:

Bit	7	6	5	4, 3	2	1	0
Meaning	0	Voltage OK?	Busy?	00	Memory Error?	0	Saturation?

Voltage check (bit 6): "1" if the sensor is properly powered; "0" if the supply voltage is out of range and data may be unreliable.

Busy indication (bit 5): "1" if the device is busy, which indicates that the data for the last command is not available yet. No new commands are processed if the device is busy. Note that the device is always busy if the cyclic measurement operation has been started.

*Memory integrity/error flag* (bit 2): Indicates the checksum test failed. The bit is calculated only on power-up, so a newly-written CHECKSUM will only be used for verification after the next power-on reset. Also, the CHECKSUM is only recalculated on request (a 0x90 command), so the flag will indicate an error if the memory is changed without requesting a CHECKSUM recalculation.

Saturation (bit 0): "1" if the last sensor measurement indicates the sensor is saturated.



## **Memory Register**

The SM324 uses an internal nonvolatile memory to enable user programmable parameters such as I<sup>2</sup>C address, temperature and field offsets, digital output thresholds and configuration parameter, and cyclic mode interval. Each register is 16 bits and is written using the scheme described in the I<sup>2</sup>C interface section.

The memory address and number of bits for each parameter are also provided. Memory address bit 6 is a write bit, so writing to nonvolatile memory uses an address 0x40 higher than the address for reading.

Table 4 summarizes programmable parameters:

		Read Address	Write Address		Def	ault		
Parameter	Symbol	(hex)	(hex)	Bits	Hex	Value	Notes	
Device Identifiers								
User Memory		00-01; 20-38	40-41; 60-78	[15:0]				
I <sup>2</sup> C Address	I <sup>2</sup> C <sub>ADD</sub>	0x02	0x42	[6:0]	0x10	16 dec	Changes requires a power cycle.	
Offsets								
Temperature Offset (lower 16 bits)	ТЕМР	0x18	0x58	[15:0]			Sign/Magnitude format; most significant bit	
Temperature Offset (sign bit + upper 7 bits)	TENT	0x19	0x59	[15:8]		tory	is sign (1=negative); bits 22:0 are magnitude	
Field Offset (lower 16 bits)	OFFS	0x17	0x57	[15:0]	Calib	rated	(±50% of full scale); full scale field = ±20 Oe;	
Field Offset (sign bit + upper 7 bits)	OFFS	0x19	0x59	[7:0]			full scale temp. = 165°C.	
Mode Parameters								
Cyclic Interval	CINT	0x02	0x42	[14:12]	000 <sub>BIN</sub>	0	Time between automatic measurements (= 2 CINT-4 sec.; see Table 3).	
Digital Output Configuration								
Threshold 1 (LSB)	THRSH1	0x13	0x53	[15:0]	0x0000	10 Oe	Unsigned	
Threshold 1 (MSB)	1111/3111	0x15	0x55	[7:0]	0xC0	10 00	(0–100%	
Threshold 2 (LSB)	THRSH2	0x14	0x54	[15:0]	0x0000	-10 Oe	of full scale)	
Threshold 2 (MSB)		0x15	0x55	[15:8]	0x40		ŕ	
Threshold Configuration	CONFIG	0x02	0x42	[8:7]	$11_{\rm BIN}$	3	(See Table 1)	

Table 4. SM324 programmable parameters.



## **Supply Decoupling**

 $V_{\text{DD}}$  should be bypassed with a 1 nF (0.001  $\mu$ F) capacitor placed as close as possible to the supply and ground pins. A larger capacitor is not required and could interfere with power-up timing.

## **Typical Circuit**

A typical microcontroller interface is shown below:

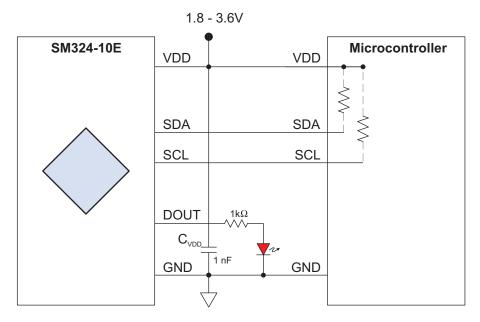


Figure 8. Typical microcontroller interface.

The SM324 is configured as a Slave and the microcontroller should be configured as the Master. The SM324 I<sup>2</sup>C interface is compatible with 1.8 to five-volt nominal microcontrollers.


The SM324 SDA and SCL lines are open-drain, so the microcontroller's internal pull-up resistor should be activated in software. If external pull-ups are used with different power supplies, they should be connected to the lower supply voltage, which is usually the sensor (Slave) supply.

 $V_{DD}$  should be bypassed with a 1 nF (0.001  $\mu$ F) capacitor placed as close as possible to the  $V_{DD}$  and GND pins.

A LED can be used to indicate the digital output. The digital output can source or sink 10 mA. The appropriate series resistor depends on the supply voltage and LED type, and of course the LED cannot be operated at the low end of the sensor supply voltage range, such as 1.8 volts.



# 2.5 x 2.5 mm TDFN6 Package (approx. 15x actual size)

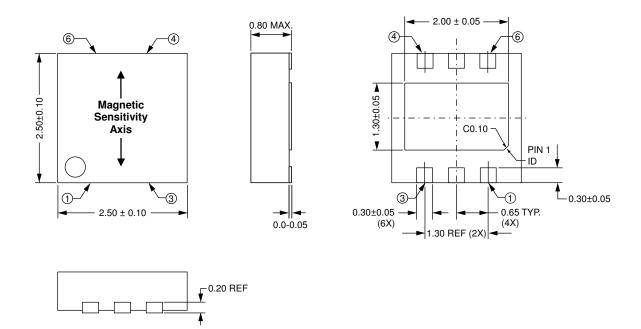

Pin	Symbol	Description				
1	VDD	Power Supply (bypass with a 1 nF capacitor)				
2	GND	Ground / V <sub>ss</sub>				
3	DOUT	Digital Output (push-pull CMOS output)				
4	SCL	I <sup>2</sup> C Clock (input)				
5	SDA	I <sup>2</sup> C Data (bidirectional/open drain)				
6	NC	Not internally connected				



## **Notes:**

- Dimensions in millimeters.
- Soldering profile per JEDEC J-STD-020C, MSL 1.



# **Ordering Information**

# SM324 - 10E TR13

# **Product Family**

SM = Smart Magnetometer

## **Precision**

3 = 3-Byte resolution; TMR Sensor Element

## **Magnetic Orientation**

2 = Cross-axis (sensitive to a field vector in the pin 2 to pin 5 direction)

## **Field Range**

4 = 20 Oe Magnetic Field Range

## **Part Package**

10E = RoHS-Compliant 2.5 x 2.5 mm TDFN6 Package

## **Bulk Packaging**

TR13 = 13" Tape and Reel Bulk Packaging





## **Revision History**

## SB-00-077 Rev. B

## February 2019

## Change

- Added "Power-Up and Initialization" section and clarified Cyclic Mode (p. 9).
- Added charts showing field and temperature outputs (p. 10).
- More detailed descriptions of bit/byte concatenation (p. 11).
- Clearer Table 4 memory map; merged Table 5 into Table 4 (p. 13).
- Clarified direction of sensitivity (p. 15).
- Corrected minor specification inconsistencies.

## SB-00-077 Rev. A

## September 2018

# Change

- Dropped "Preliminary" designation.
- Misc. style changes.
- Dropped fax number.

## **SB-00-077-PRELIM2**

## August 2018

## Change

- Dropped "Product Preview" designation.
- Added 25°C accuracy specification.
- Added hysteresis specification.
- Misc. minor changes.

#### SB-00-077-PRELIM

July 2018

## Change

• Initial preliminary release.





#### **Datasheet Limitations**

The information and data provided in datasheets shall define the specification of the product as agreed between NVE and its customer, unless NVE and customer have explicitly agreed otherwise in writing. All specifications are based on NVE test protocols. In no event however, shall an agreement be valid in which the NVE product is deemed to offer functions and qualities beyond those described in the datasheet.

#### **Limited Warranty and Liability**

Information in this document is believed to be accurate and reliable. However, NVE does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

In no event shall NVE be liable for any indirect, incidental, punitive, special or consequential damages (including, without limitation, lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

#### **Right to Make Changes**

NVE reserves the right to make changes to information published in this document including, without limitation, specifications and product descriptions at any time and without notice. This document supersedes and replaces all information supplied prior to its publication.

#### Use in Life-Critical or Safety-Critical Applications

Unless NVE and a customer explicitly agree otherwise in writing, NVE products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical devices or equipment. NVE accepts no liability for inclusion or use of NVE products in such applications and such inclusion or use is at the customer's own risk. Should the customer use NVE products for such application whether authorized by NVE or not, the customer shall indemnify and hold NVE harmless against all claims and damages.

#### **Applications**

Applications described in this datasheet are illustrative only. NVE makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NVE products, and NVE accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NVE product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customers. Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NVE does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customers. The customer is responsible for all necessary testing for the customer's applications and products using NVE products in order to avoid a default of the applications and the products or of the application or use by customer's third party customers. NVE accepts no liability in this respect.

## **Limiting Values**

Stress above one or more limiting values (as defined in the Absolute Maximum Ratings System of IEC 60134) will cause permanent damage to the device. Limiting values are stress ratings only and operation of the device at these or any other conditions above those given in the recommended operating conditions of the datasheet is not warranted. Constant or repeated exposure to limiting values will permanently and irreversibly affect the quality and reliability of the device.

#### **Terms and Conditions of Sale**

In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NVE hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NVE products by customer.

#### No Offer to Sell or License

Nothing in this document may be interpreted or construed as an offer to sell products that is open for acceptance or the grant, conveyance or implication of any license under any copyrights, patents or other industrial or intellectual property rights.

#### **Export Control**

This document as well as the items described herein may be subject to export control regulations. Export might require a prior authorization from national authorities.

#### **Automotive Qualified Products**

Unless the datasheet expressly states that a specific NVE product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NVE accepts no liability for inclusion or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NVE's warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NVE's specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NVE for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NVE's standard warranty and NVE's product specifications.





An ISO 9001 Certified Company

**NVE Corporation** 11409 Valley View Road Eden Prairie, MN 55344-3617 USA Telephone: (952) 829-9217

www.nve.com

e-mail: sensor-info@nve.com

## ©NVE Corporation

All rights are reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

SB-00-077\_SM324\_revB

February 2019