
DoSA-2D User Manual


Solenoid Example

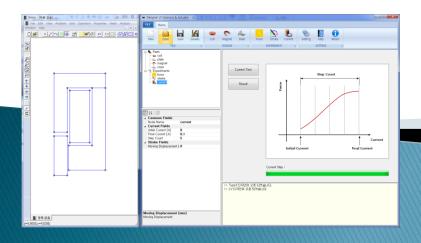

2022-05-06 zgitae@gmail.com

DoSA Structure

Program Structure

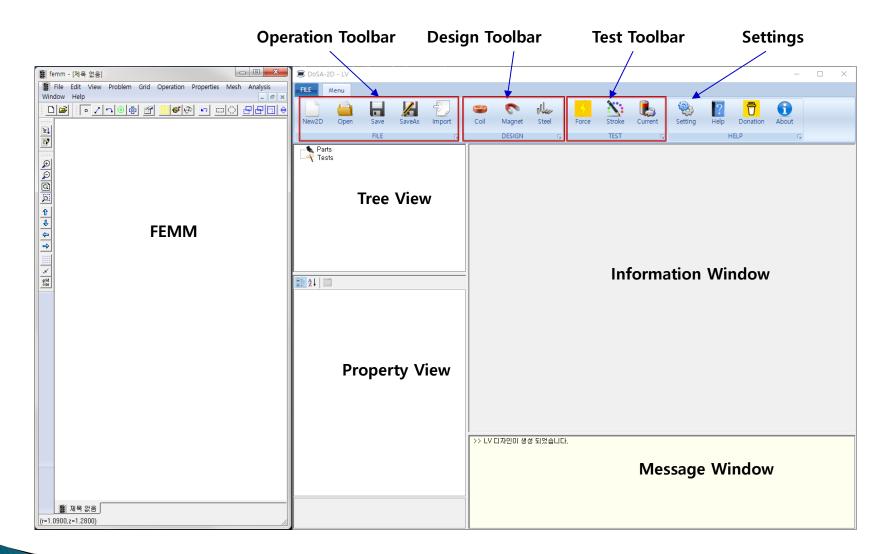

Toolbar

1. Operations


✓ New : Create a new design

✓ Open : Open previous design

✓ Save : Save the design

✓ SaveAs : Save in different name

✓ Import : DXF Import

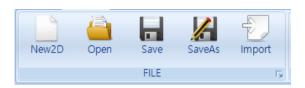

2. Part Design

✓ Coil : Add a coil and specification design

✓ Magnet : Add a magnet and determine specifications

✓ Steel : Add a steel and determine specifications



3. Virtual Test

✓ Force : Magnetic force estimation

✓ Stroke : Magnetic force estimation for each stroke

✓ Current : Magnetic force estimation for each current







Analysis Model

Analysis Model

1. Model Shape

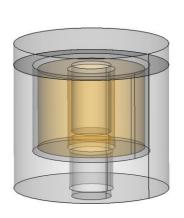

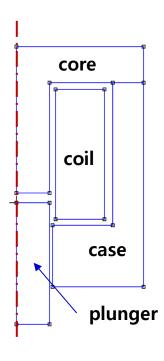

2. Product Specifications

가. Coil Turns

• Coil Turns : 1040 turns

• Coil Resistance: 15.2 Ohm

나. Power

• Voltage: 14.5V

(Work Example Files : DoSA-2D Install Directory > Samples > Solenoid)



New design


1. Toolbar > Click New Button


2. Design Name: "Solenoid"

3. Click OK





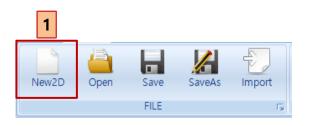

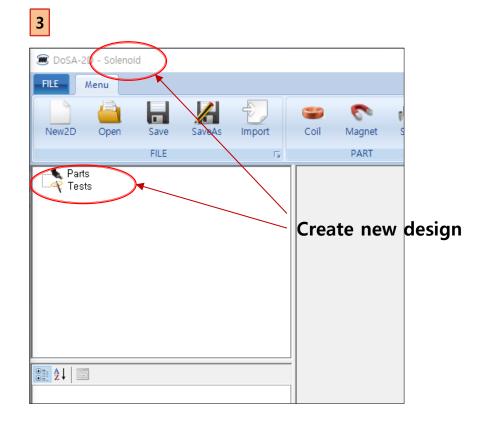



Import shapes


- 1. Toolbar > Click New button
- 2. Select "Solenoid.dxf" and click the Open button
- 3. Check part shapes

[Caution for the Shape Model]

- Part must be written in Polyline
- Please refer to "Drawing Guide"
- https://solenoid.or.kr/data/Drawing Guide ENG.pdf

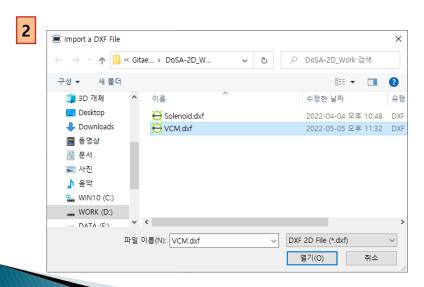

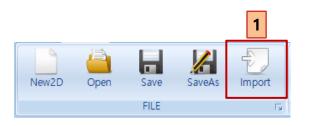

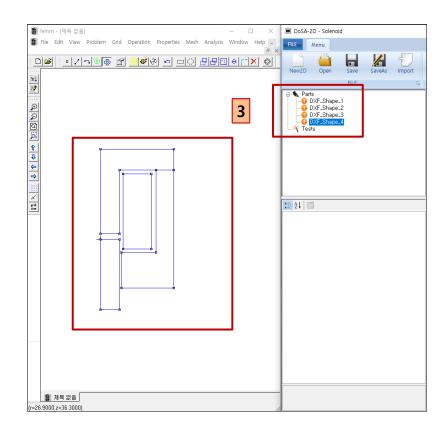



Parts Design


Set as Coil


1. Treeview > "DXF_Shape_2" double click


2. Change name: "coil"

3. Change part type: COIL

4. Click OK button

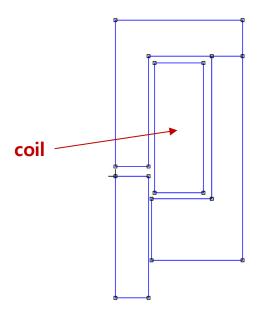

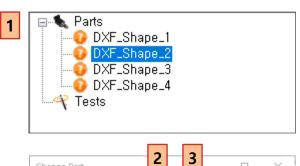


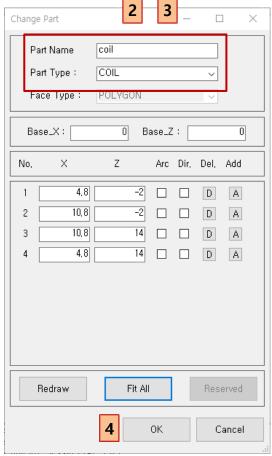


Coil Design

- 1. Input Coil specifications
 - ✓ Copper Diameter: 0.27
- 2. Calculate the coil specification
 - ✓ Click "Coil Design" button
- 3. Check the coil specification
- 4. Ribbon Bar > Save



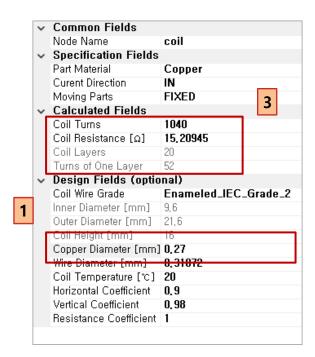

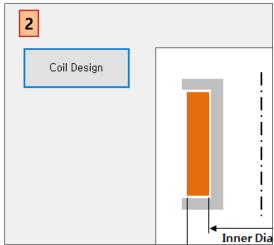




Set a plunger


1. Treeview > "DXF_Shape_4" double click

2. Change name : "plunger"

3. Change part type: STEEL

4. Click OK button

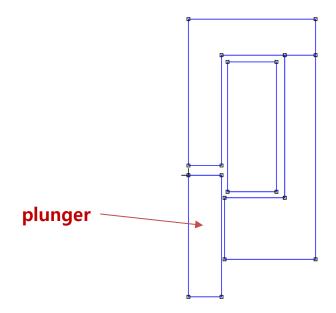

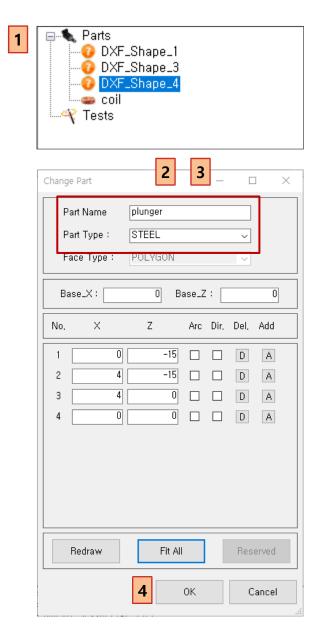



Plunger Settings

1. Plunger setting

✓ Part Material : 430 Stainless Steel

✓ Moving Parts : **MOVING**

Select the magnetic force calculation part

1

 ✓ Common Fields


 Node Name
 plunger

 ✓ Specification Fields

 Part Material
 430 Stainless Steel

 Moving Parts
 MOVING

[BH curve]

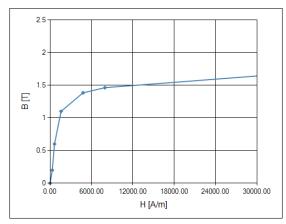




Set as Core


1. Treeview > "DXF_Shape_3" double click


2. Change name: "core"

3. Change part type: STEEL

4. Click OK button

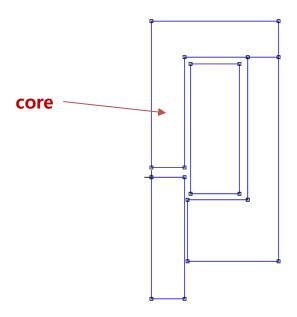

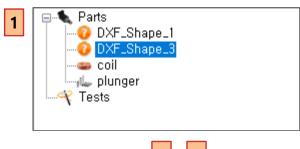

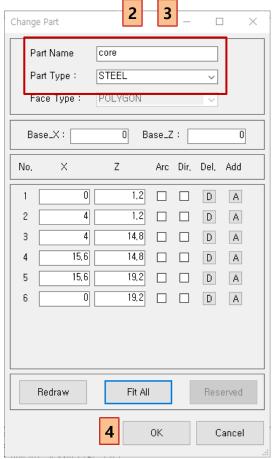


Set as Case


1. Treeview > "DXF_Shape_1" double click


2. Change name: "case"

3. Change part type: STEEL

4. Click OK button

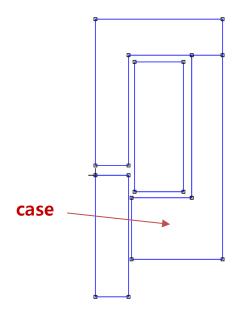

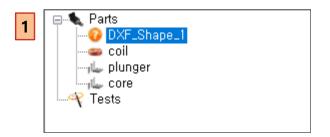


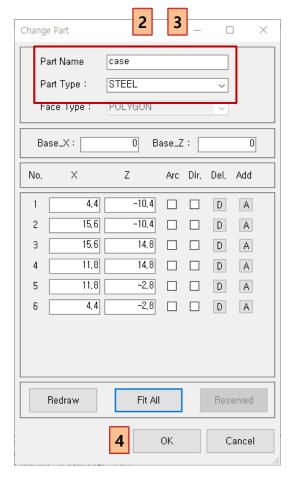


Virtual Test


Test of the magnetic force

- 1. Toolbar > Click Force Button
- 2. Force Test Name: "force"
- 3. Click OK Button
- 4. Test Setting
 - ✓ Voltage: 14.5 V
- 5. Click "Force Test" Button

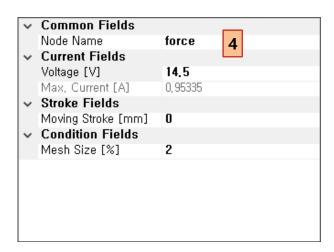



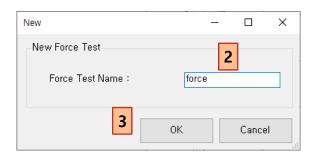


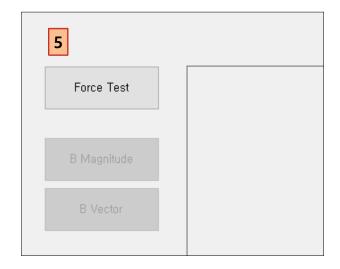





Results of the magnetic force

- 6. Force: 16.04 N
- 7. Magnetic Density
 - ✓ Click the B Magnitude button
- 8. Vector of Magnetic Density
 - ✓ Click the B Vector button

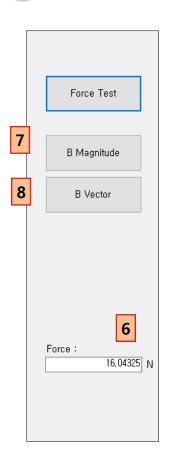

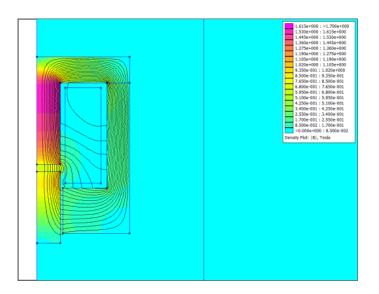

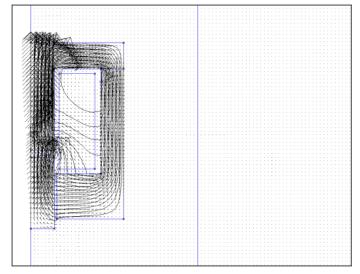

Test of the stroke-magnetic force

1. Toolbar > Click Stroke Button

2. Stroke Test Name: "stroke"

3. Click OK Button


4. Test Settings


✓ Voltage: 14.5


✓ Initial Stroke: 0.0

✓ Final Stroke: 1.0

✓ Step Count: 5

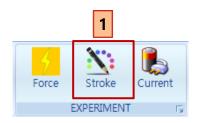

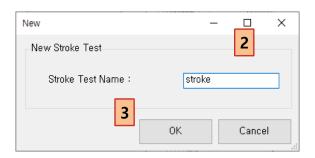


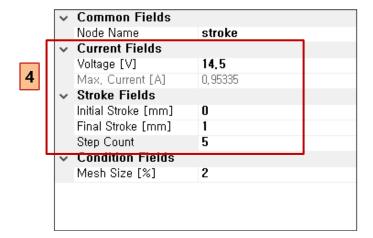



Results of the stroke-magnetic force

5. Click "Stroke Test" button

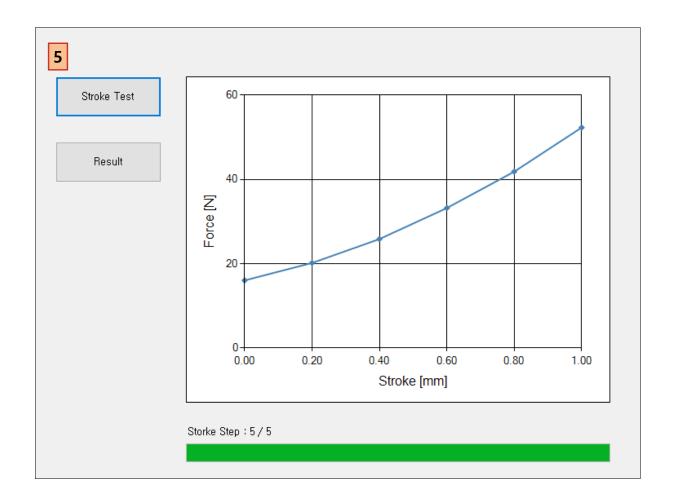

Test of the current-magnetic force

1. Toolbar > Click Current Button

2. Current Test Name: "current"


3. Click OK Button


4. Test Settings


✓ Initial Current: 0.0

✓ Final Current: 1.5

✓ Step Count: 5



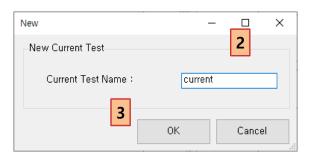


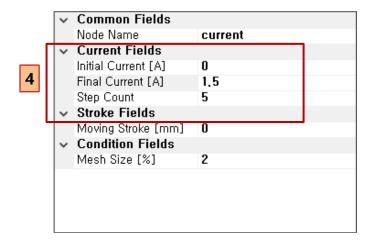



Results of the current-magnetic force


5. Click "Current Test" button

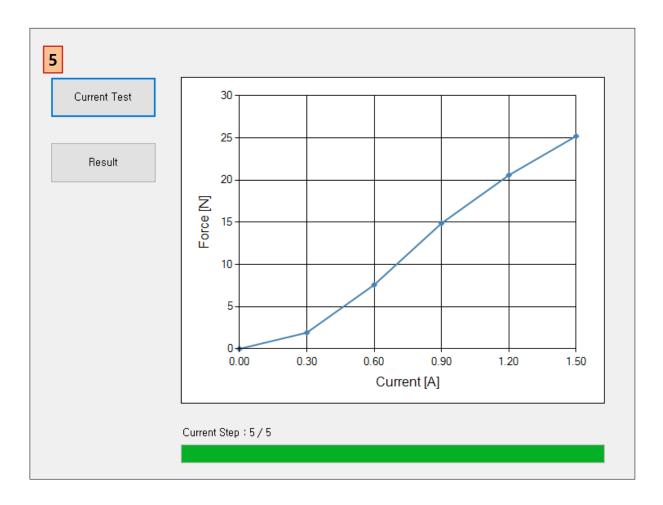



Tips

Open design

- 1. Toolbar > Click Open Button
- 2. Double click the design directory.
- 3. Double click the design file.

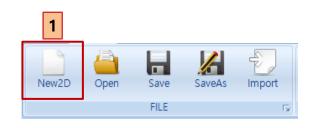

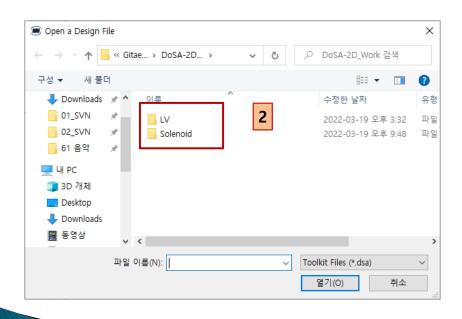

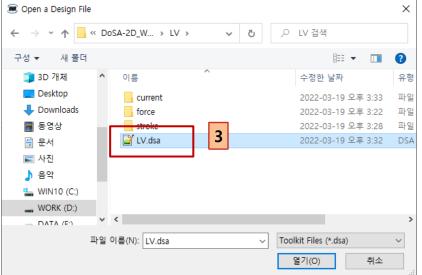



Thank You

Email: zgitae@gmail.com

Homepage: http://openactuator.org