
DoSA-3D User Manual

Voice Coil Motor Example

(Speaker, Auto-Focus, Linear Vibrator)

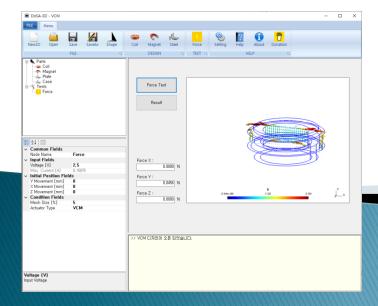

2022-06-30 zgitae@gmail.com

DoSA Structure


PC Requirement

> CPU: 4 Core and above

> RAM: 16GB and above



Program Structure

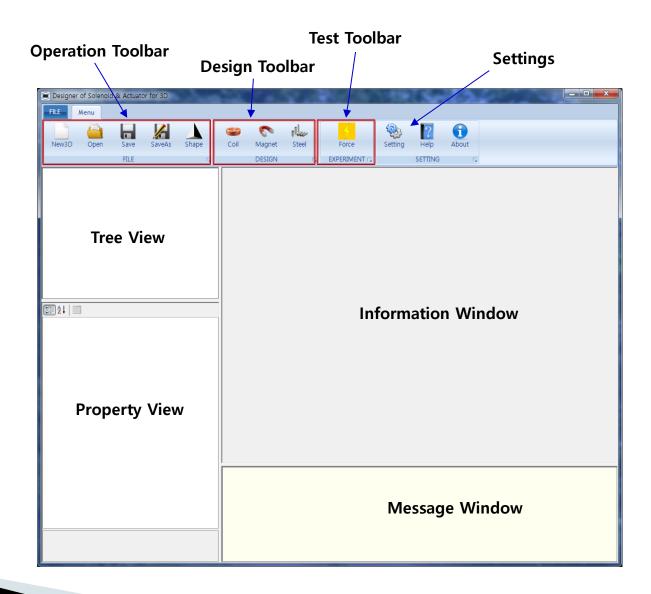

Toolbar

1. Operations

✓ New : Create a new design

✓ Open : Open previous design

✓ Save : Save the design

✓ SaveAs : Save in different name

✓ Shape: Check the 3D Shape



2. Design

✓ Coil : Add a coil and specification design

✓ Magnet : Add a magnet and determine specifications

✓ Steel : Add a steel and determine specifications



3. Virtual Test


✓ Force : Magnetic force estimation



Work process

Product Design


Virtual Test

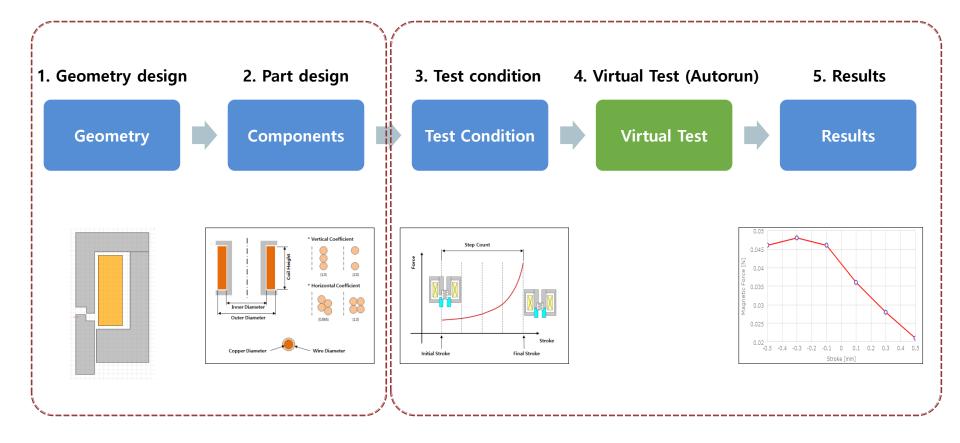


Analysis Model

Analysis Model

1. Shape Model

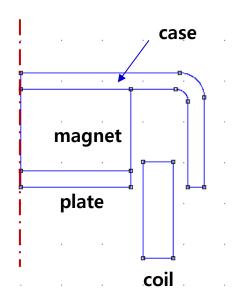

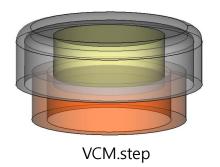

2. Product Specifications

A. Coil

• Coil Turns: 126 turns

• Coil Resistance: 15.75 Ohm

B. Magnet

• Material : NdFeB 40

• Magnetization Direction: 90 (UP)

C. Power

• Voltage: 2.5V

(Example Files : DoSA-3D Install Directory > Samples > VCM)



New design

1. Toolbar > Click New button

2. Design Name: "VCM_01"


3. Shape File (STEP): Select VCM.step



[Cautions for the Shape Model]

DoSA-3D still has the following functional limitations.


- A. Shape constraint
 - Coil central axis must coincide with Y axis.
 - The current is always applied in cylindrical form. (Polygon coils can cause some differences)
- B. Limited number of parts
 - Actions only support one part.
 - Only one coil is supported.
- C. Drawing Guide
 - https://solenoid.or.kr/data/Drawing Guide ENG.pdf

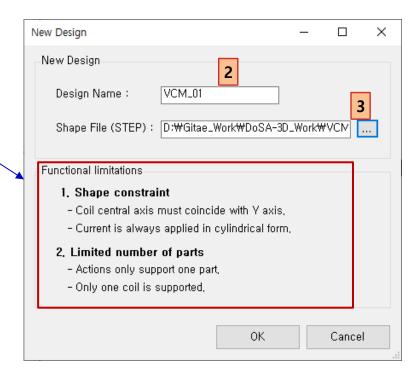




New design


- 4. Check the solenoid shape in Gmsh.
- 5. Exit the Gmsh.
- 6. Check the part names.
- 7. Click the OK button if there are no problem with the shape and part names.

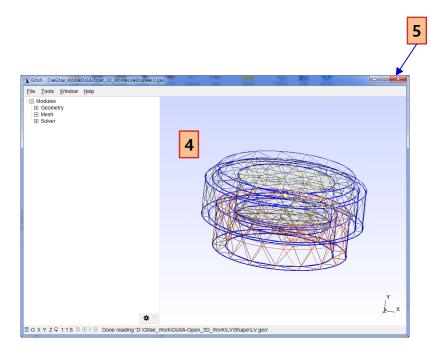

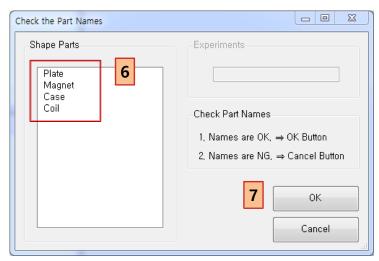

New design


8. Check the design creation.

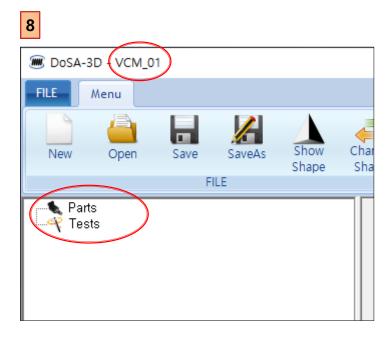


Parts Design

Add a coil

- 1. Toolbar > Click Coil button
- 2. Select "Coil" in the list box.
- 3. Click the OK button.

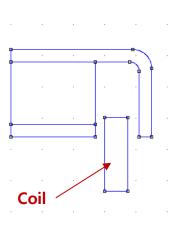



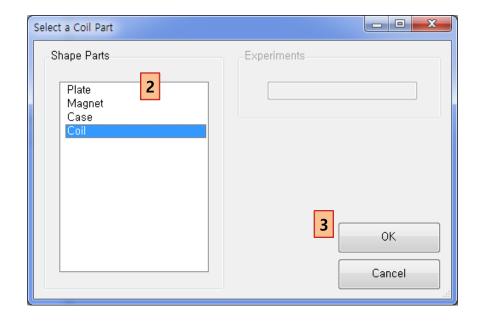

Coil design

Select the magnetic force calculation part

1. Input the coil instrumental specifications

✓ Moving Parts : MOVING

✓ Coil Wire Grade: Bonded_IEC_Grade_1B

✓ Inner Diameter: 3

✓ Outer Diameter: 3.73

✓ Coil Height: 1.18


✓ Copper Diameter: 0.045

✓ Horizontal Coefficient : 0.95 (Bonded Type)


✓ Vertical Coefficient : 1.13 (Bonded Type)

✓ Resistance Coefficient : 1.1 (Bonded Type)

- 2. Calculate the coil specification
 - ✓ Click the "Coil Design" button
- 3. Check the coil specification

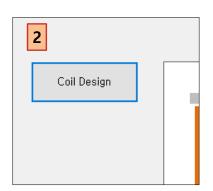

4	Common Fields	
	Node Name	Coil
4	Specification Fields	
	Part Material	Copper
	Curent Direction	IN
	Moving Parts	MOVING
4	Calculated Fields	
	Coil Turns	126
	Coil Resistance [Ω]	15,74769
	Coil Layers	6
	Turns of One Layer	21
	<u> Nesign Fields (optio</u>	nal)
	Coil Wire Grade	Bonded_IEC_Grade_1B
	Inner Diameter [mm]	3
	Outer Diameter [mm]	3.73
		- -
	Coil Height [mm]	1,18
	Coil Height [mm] Copper Diameter [mm]	•
		•
	Copper Diameter [mm]	0,045
	Copper Diameter [mm] Wire Diameter [mm]	0,045 0,04953
	Copper Diameter [mm] Wire Diameter [mm] Coil Temperature [*C]	0, 045 0, 04953 20

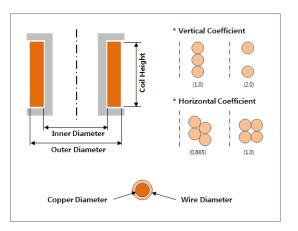





3

Add a magnet

- 1. Toolbar > Click Magnet button
- 2. Select "Magnet" in the list box.
- 3. Click the OK button.

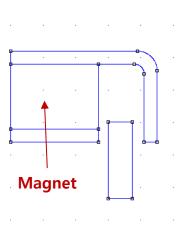



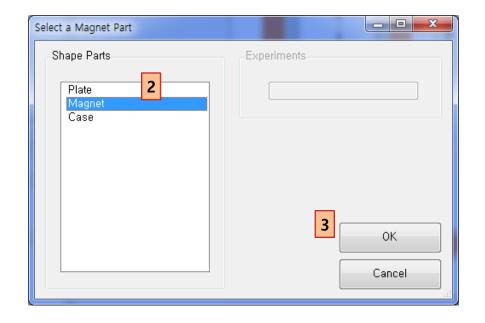


Magnet setting

- 1. Magnet Settings
 - ✓ Use default values

1

Node Name	Magnet
D	
Specification Fields	
Part Material	NdFeB_40
Hc	969969
3r	1,26497
Moving Parts	FIXED
Magnetization Fields	S
Rotation Axis	Z_AXIS
Rotation Angle	90
	lc Br Moving Parts Magnetization Fields Rotation Axis

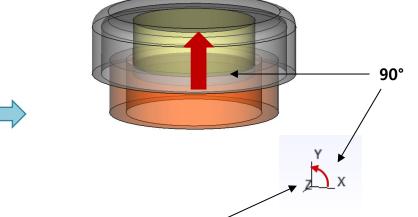

[Ref.] Magnet magnetization

1. Understanding magnet magnetization direction

Magnet magnetization direction: X axis direction


• Rotation Axis: The axis of rotation of the X axis


• Rotation Angle : the angle the X axis rotates


 Magnetization Fie 	Magnetization Fields			
Rotation Axis	Z_AXIS			
Rotation Angle	90			


2. Magnetization direction setting


Rotation Axis : Y_Axis

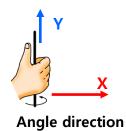

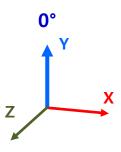





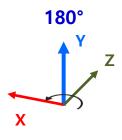






Rotation Axis : Z_Axis





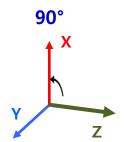

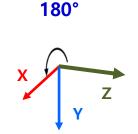






[Ref.] Magnetization Setting of Magnet

✓ Rotation Axis: Z_Axis


✓ Rotation Angle: 90

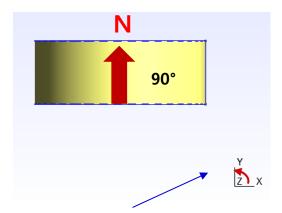

Rotation Axis: Z_Axis

✓ Rotation Axis : Y_Axis


✓ Rotation Angle: 45°, 135°, 225°, 315°

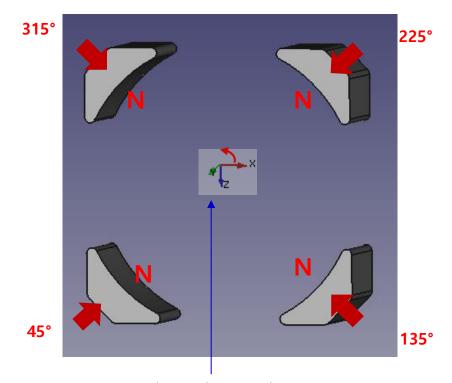

Rotation Axis: Y_Axis

Add a plate

- 1. Toolbar > Click Steel button
- 2. Select "Plate" in the list box.
- 3. Click the OK button.

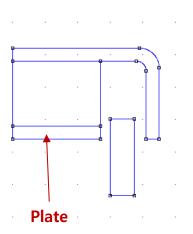



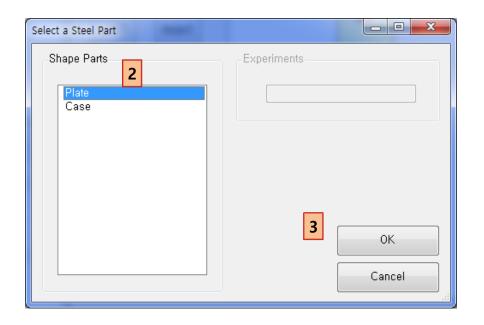


Plate setting


1. Plate settings

✓ Part Material : SUS_430

[BH Curve]




1

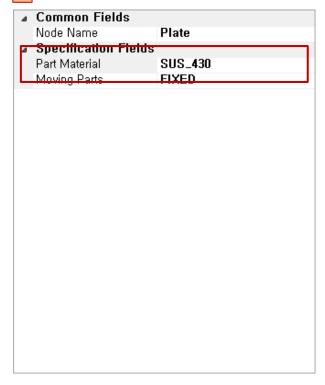


Add a case

- 1. Toolbar > Click Steel button
- 2. Select "Case" in the list box.
- 3. Click the OK button.

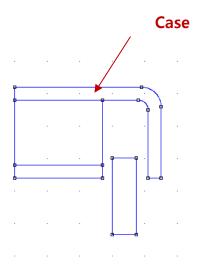



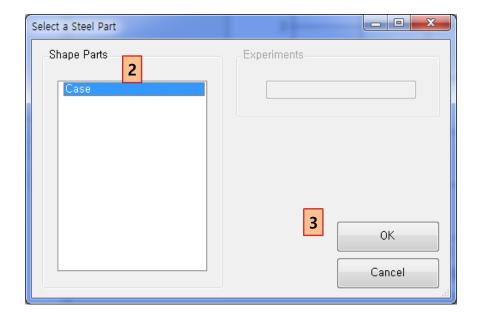

Case setting


1. Case Setting

✓ Part Material : SUS_430

[BH Curve]



1

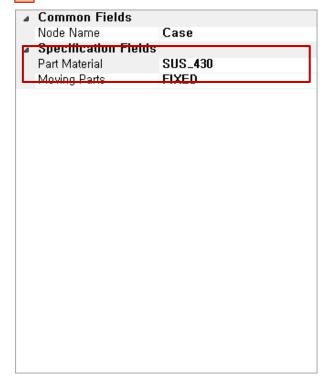

Virtual Test

Test of the magnetic force

1. Toolbar > Click Force Button

2. Force Test Name: "Force"

3. Click OK button


4. Setting of magnetic force test


✓ Voltage : 2.5


✓ B Rotation Angle : 45✓ B Vector Resolution : 80


✓ Mesh Size Percent: 7

5. Click "Force Test" Button



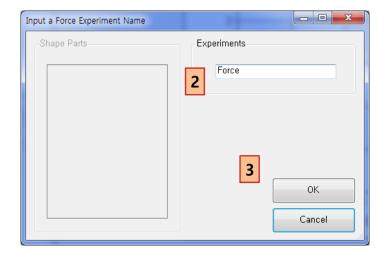

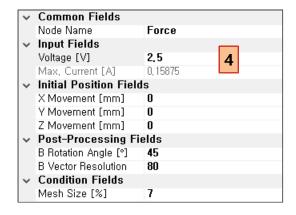

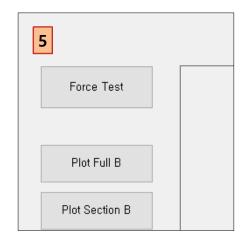




Run the virtual Test

- 6. Check the progress of magnetic force analysis.
- 7. Check the magnetic density and force. (The solving time is depend on you system specification)




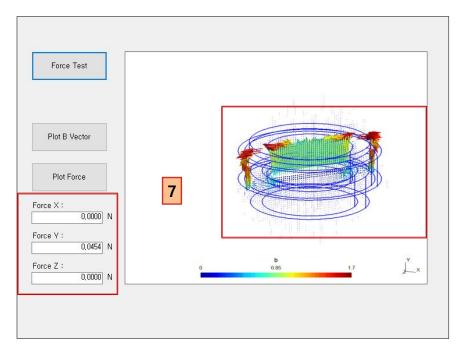





Run the virtual Test

- 8. Check the full magnetic density.
- 9. Check the section magnetic density.

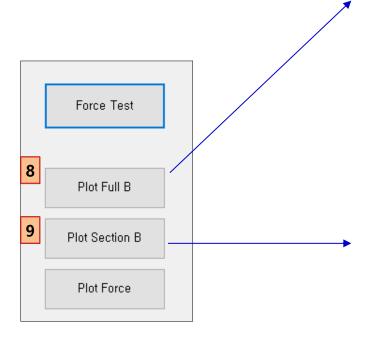

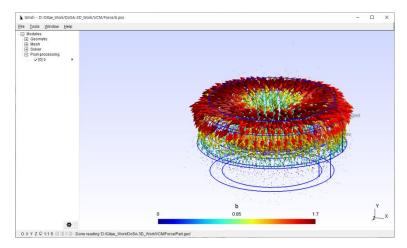

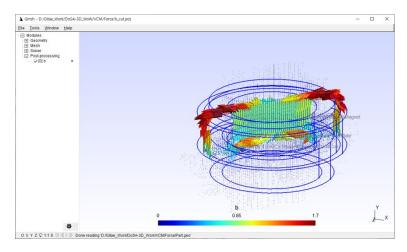



Tips

Open Design

- 1. Toolbar > Click Open Button
- 2. Double click the design directory.
- 3. Double click the design file.



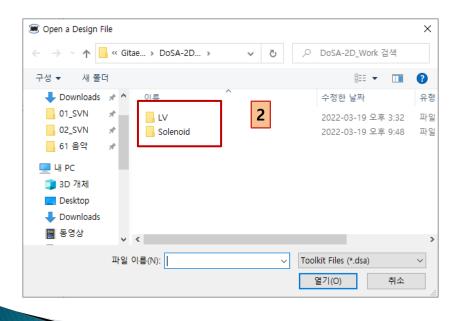

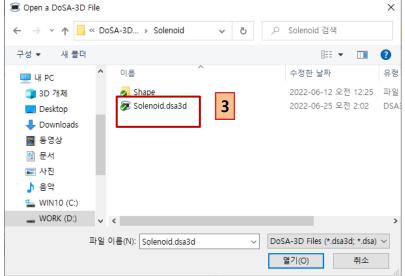



Thank You

Email: zgitae@gmail.com

Homepage: http://openactuator.org