
Command Reference: CalculateTimeSeriesStatistic()

Calculate time series statistic

ersion 10.30.00, 2014-06-09

The CalculateTimeSeriesStatistic() command calculates a statistic for a time series (typically a single value, but may have multiple output values) and optionally adds the result to a table. Multiple time series can be processed. The sample from each time series consists of data values for the full period or a shorter analysis period if specified for the command. Missing values typically are ignored unless significant for the statistic (e.g., Statistic=MissingCount).

The following dialog is used to edit the command and illustrates the command syntax. Most statistics do not require additional input; however, those that do utilize the Value* parameters to specify additional information.

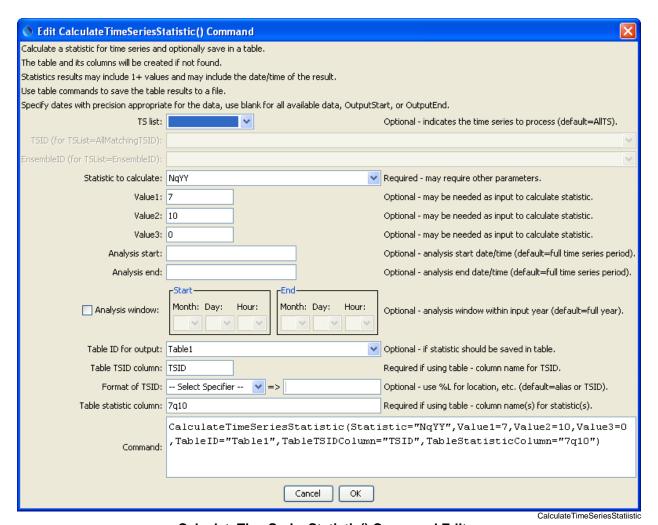

CalculateTimeSeriesStatistic() Command Editor

Command Reference - CalculateTimeSeriesStatistic () - 1

The command syntax is as follows:

CalculateTimeSeriesStatistic(Parameter=Value,...)

Command Parameters

Parameter	Description	Default
TSList	Indicates the list of time series to be processed, one	AllTS
	of:	
	• AllMatchingTSID – all time series that	
	match the TSID (single TSID or TSID with	
	wildcards).	
	• AllTS – all time series before the command.	
	• EnsembleID – all time series in the ensemble.	
	• FirstMatchingTSID – the first time series	
	that matches the TSID (single TSID or TSID	
	with wildcards).	
	• LastMatchingTSID – the last time series	
	that matches the TSID (single TSID or TSID	
	with wildcards).	
	• SelectedTS – the time series selected with	
	the SelectTimeSeries() command.	
TSID	The time series identifier or alias for the time series	Required if
	to be processed, using the * wildcard character to	TSList=*TSID.
	match multiple time series.	
EnsembleID	The ensemble to be processed, if processing an	Required if
	ensemble.	TSList=EnsembleID.
Statistic	Statistic to compute as shown in the Statistic	None – must be specified.
	Details table below.	•
Value1	Input data required by the statistic. Currently the	See Statistic Details
	dialog does not check the value for correctness – it	table below.
	is checked when the statistic is computed.	
Value2	Input data required by the statistic. Currently the	See Statistic Details
	dialog does not check the value for correctness – it	table below.
	is checked when the statistic is computed.	
Value3	Input data required by the statistic. Currently the	See Statistic Details
	dialog does not check the value for correctness – it	table below.
3 1 ' 0	is checked when the statistic is computed.	
AnalysisStart	The date/time to start analyzing data.	Full period is analyzed.
AnalysisEnd	The date/time to end analyzing data.	Full period is analyzed.
Analysis WindowStart	The calendar date/time for the analysis start within	Analyze the full year.
	each year. Specify using the format MM, MM-DD,	
	MM-DD hh, or MM-DD hh: mm, consistent with the	
	time series interval precision. A year of 2000 will	
	be used internally to parse the date/time. Use this	
	parameter to limit data processing within the year,	
	for example to analyze only a season. The analysis	
	window has only been enabled for Count,	
	GECount, GTCount, LECount, LTCount, Max,	

Parameter	Description	Default
	Min, MissingCount, MissingPercent,	
	NonmissingCount, and	
	NonmissingPercent statistics.	
Analysis	Specify date/time for the analysis end within each	Analyze the full year.
WindowEnd	year. See AnalysisWindowStart for details.	
TableID	Identifier for table that receives the statistic. An	Optional – table output is
	existing table can be specified. If not found, a new table will be created.	not required.
TableTSIDColumn	Table column name that is used to look up the time series. If a matching TSID is not found, a row will	Optional – table output is not required.
	be added to the table. If a TSID is found, the	•
	statistic cell value for the time series is modified.	
	The column name can use time series % specifiers	
	(e.g., %L for location) and properties using syntax	
	\${ts:Property}.	
TableTSIDFormat	The specification to format the time series identifier to insert into the TSID column. Use the format	Time series alias if available, or the time
	choices and other characters to define a unique	series identifier.
	identifier.	
TableStatistic	Table column name(s) to receive the statistic	Optional – table output is
Column	value(s). If not found in the table, a new column is added automatically. The column names can use	not required.
	time series % specifiers (e.g., %L for location) and	
	properties using syntax \${ts:Property}.	

The following table provides additional information about specific statistics, in particular to describe how the statistic is computed, whether additional input needs to be provided with Value command parameters, and whether multiple statistic values are output in results.

Statistic Details

Statistic	Description	Required Values
Count	Number of data values total, including missing and non-missing.	
DeficitMax	Maximum deficit value (where deficit is mean minus value).	
DeficitMean	Mean deficit value (where deficit is mean minus value).	
DeficitMin	Minimum deficit value (where deficit is mean minus value).	
DeficitSeqLengthMax	Maximum number of sequential intervals where each value is less than the mean (for example maximum drought length).	
DeficitSeqLengthMean	Mean number of sequential intervals where each value is less than the mean (for example mean drought length).	
DeficitSeqLengthMin	Minimum number of sequential intervals where each	

Statistic	Description	Required Values
	value is less than the mean (for example minimum drought length).	
DeficitSeqMin	Maximum sum of sequential values where each value is less than the mean (for example maximum drought water volume).	
DeficitSeqMean	Mean of the sum of sequential values where each value is less than the mean (for example mean drought water volume).	
DeficitSeqMin	Minimum sum of sequential values where each value is less than the mean (for example minimum drought water volume).	
GECount	Count of values greater than or equal to Value1.	Value1 – criteria to check
GTCount	Count of values greater than Value1.	Value1 – criteria to check
Lag-1AutoCorrelation	Autocorrelation between values and the those that follow in the next time step, given by: $r_k = \sum_{i=1}^{N-k} (Y_i - Y_{mean})(Y_{i+k} - Y_{mean}) \sum_{i=1}^{N} (Y_i - Y_{mean})^2$	
Last	Last non-missing value. Second statistic is the date/time of the value.	
LECount	Count of values less than or equal to Value1.	Value1 – criteria to check
LTCount	Count of values less than Value1.	Value1 – criteria to check
Max	Maximum value.	
Mean	Mean value.	
Min	Minimum value.	
MissingCount	Number of missing values.	
MissingPercent	Percent of values that are missing.	
MissingSeqLengthMax	Maximum number of sequential values that are missing.	
NonmissingCount	Number of non-missing values.	
NonmissingPercent	Percent of values that are not missing.	
NqYY	This statistic is typically used to evaluate the return period of low flows and is implemented only for daily data. The N indicates the number of daily values to be averaged and YY indicates the return interval. For example, 7q10 indicates the flow corresponding to the 10-year recurrence interval for minimum average daily flow (for 7 days) in a year. This statistic is computed as follows, using 7q10 as an example: 1. Determine the number of years to be analyzed (from analysis period command parameters or	value1 – specify the number of daily values to be averaged. Currently this must be an odd number to allow bracketing the current day.
	time series data). 2. For each year, loop through each day from January 1 to December 31. Compute an average	Value2 – specify the

Statistic	Description	Required Values
	flow by averaging 7 days, in this case with 3 values on each side of the current day and including the current day. If at the end of the year, use 3 values from adjoining years. The number of missing data allowed is controlled by the Value3 command parameter. 3. For the year, save the minimum 7-day average. 4. Utilize the minimum values for all years, with log-Pearson Type III distribution, to determine the value for the 10-year recurrence interval. See http://pubs.usgs.gov/sir/2008/5126/section3.html for a description of NqYY and "Hydrology for Engineers, 3 rd Edition," Linsley, Kohler, Paulhus for a description of log-Pearson Type III distribution.	return interval (e.g., 10). Value3 – specify the number of missing values allowed in the average (e.g., 0 for most rigorous analysis). It may be useful to set this value if, for example, a single daily value is available in the time series, for example entered on the first day of the month.
Skew	Skew coefficient, as follows: $Cs = \frac{N \sum_{i=1}^{N} (Y_i - Y_{mean})^3}{(n-1)(n-2)s^3}$ where $s =$ standard deviation	
StdDev	Standard deviation.	
SurplusMin	Maximum surplus value (where surplus is value minus mean).	
SurplusMean	Mean surplus value (where surplus is value minus mean).	
SurplusMin	Minimum surplus value (where surplus is value minus mean).	
SurplusSeqLengthMax	Maximum number of sequential intervals where each value is greater than the mean (for example maximum water surplus length).	
SurplusSeqLengthMean	Mean number of sequential intervals where each value is greater than the mean (for example mean water surplus length).	
SurplusSeqLengthMin	Minimum number of sequential intervals where each value is greater than the mean (for example minimum water surplus length).	
SurplusSeqMin	Maximum sum of sequential values where each value is greater than the mean (for example maximum water surplus volume).	
SurplusSeqMean	Mean of the sum of sequential values where each value is greater than the mean (for example mean water surplus volume).	

Statistic	Description	Required Values
SurplusSeqMin	Minimum sum of sequential values where each value is greater than the mean (for example minimum water surplus volume).	
Total	Total of values.	
TrendOLS	Ordinary least squares analysis is used to compute results that are named TableStatisticColumn with appended _Intercept, _Slope, and _R2.	
Variance	Variance.	

The following example illustrates how to use the command to compute the 7q10 statistic for daily flow:

```
ReadDateValue(Alias="linsley",InputFile="Data\linsley.dv")

NewTable(TableID="Table1",Columns="TSID,string;7q10,double")

CalculateTimeSeriesStatistic(Statistic="NqYY",Value1=7,Value2=10,Value3=6,
    TableID="Table1",TableTSIDColumn="TSID",TableStatisticColumn="7q10")

WriteTableToDelimitedFile(TableID="Table1",
    OutputFile="Results/Test_CalculateTimeSeriesStatistic_7q10_linsley_out.csv")
```