

Amazon ACK HMCU On NuMaker-M032SE

WWW.nuvoton.com
MS70 Wayne Lin
2020/11/6




- Introduce you Amazon ACK
- Partition layout, Boot flow & OTA upgrading
- Demo
- Some notes



Introduction

- ACK Alexa Connect Kit
- An Amazon-managed solution that makes it simpler, faster, and more economical to create and manage Alexa-controlled, Wi-Fi-enabled smart devices.
 - ACK module
 - High-reliability/Low-latency device control cloud
 - ACK Management Console
 - Extensibility APIs
 - Dash Replenishment Service

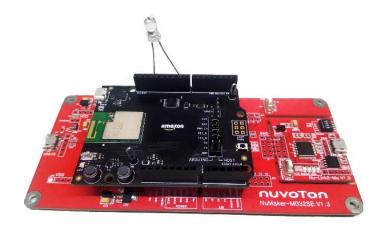



Partition layout

ACK_NUMICRO_OTA_STAGING_PARTITION (128KB-512B-5.5KB-61KB = 61 KB)

ACK_NUMICRO_OTA_STAGING_PARTITION_START, 0x10C00 ACK_NUMICRO_OTA_PRIMARY_PARTITION_END, 0x10BFF

ACK_NUMICRO_OTA_STAGING_PARTITION_END, 0x1FFFF

Flash memory: - 128 KB

ACK_NUMICRO_OTA_PRIMARY_PARTITION ((128KB-512B-5.5KB)/2 = 61 KB)

ACK_NUMICRO_OTA_STATUS_PARTITION
(512 B)

ACK_NUMICRO_OTA_LOADER_PARTITION (5.5 KB)

ACK_NUMICRO_OTA_PRIMARY_PARTITION_START, 0x1800 ACK_NUMICRO_OTA_STATUS_PARTITION_END, 0x17FF


ACK_NUMICRO_OTA_STATUS_PARTITION_START, 0x1600 ACK_NUMICRO_OTA_LOADER_PARTITION_END, 0x15FF

 ${\sf ACK_NUMICRO_OTA_LOADER_PARTITION_START,0x0}$

CPU_RESET



Boot flow & OTA upgrading

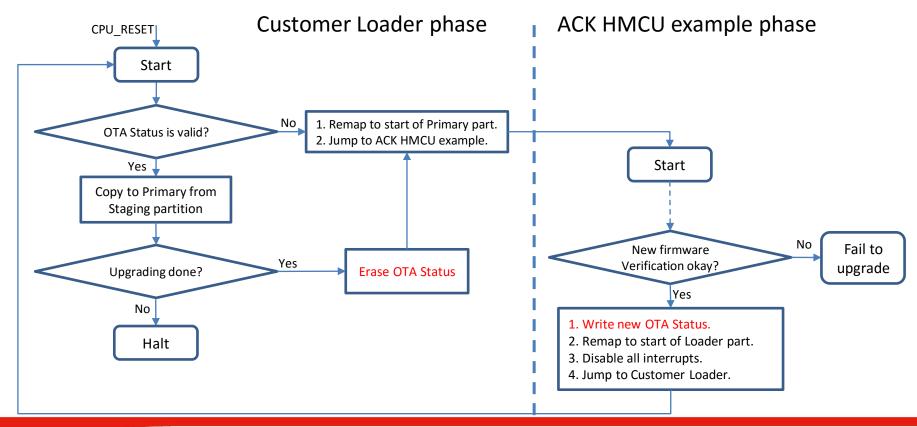



Demo

- Requirements
- Driver Installation
- Build Steps
- HMCU Board Setting
- ACK HMCU Firmware Installation
- ACK HMCU Boot Option Configuration



Requirements

Hardware

- An ACK module board (USI MT7697H development kit)
- An development board for ACK HMCU (NuMaker-M032SE board)
- An internet-accessible Wi-Fi router
- A mobile phone with Alexa APP
- A LED, a dupont line and an USB Micro line


Software/Drivers

- Keil MDK 5.26
- Latest Nu-Link Keil drivers
- Python-3.8 environment



Driver Installation

- Install "Nu-Link Driver for Keil" on Window platform
 - Nuvoton provides installshield wizard to help user to install these utilities for keil.
 - It also includes a Nu-Link USB Driver. Please install it for MDK-ARM debugger and Nuvoton virtual COM(VCOM) function.

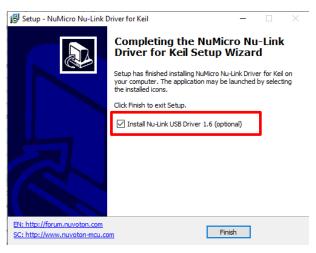




Build Steps

- Open ack.uvmpw Keil multiple project file using MDK 5.26.
 - Path: <Path-to-ACK_Device_SDK>\user\platform\numicro_m031\numaker-m032se\ack.uvmpw
- Press "Batch rebuild" to build all examples.
- Finally, execute "m031_merge.bat" to merge customer_loader and example into a hex file.

 ☐ C\D\nuvoton\Project\MCU\ACK_V3\ACK_Device_5DK_3.0.201909051632\user\platform\numicro_m031\numak... □ ×

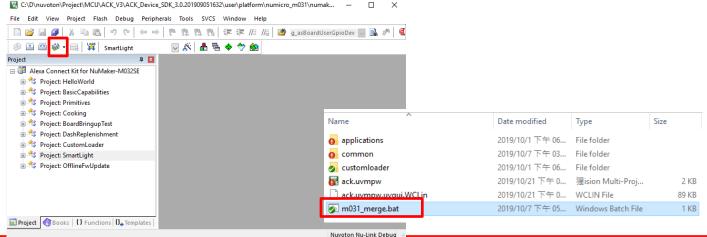



m031_merge.bat


- This is batch script for window platform. Help user to get all merged firmwares for programming, just a double-click step.
- It invokes some python utilities Amazon provided
 - For producing a merged firmware for NuMicro MCU.
 - For OTA upgrading file for publishing on Amazon Cloud.

Name	Date modified	Type	Size	Merged_BasicCapabilities.hex	2019/10/21 下午 0 HEX File	177 KB
applications	2019/10/1 下午 06	File folder		☐ Merged_BoardBringupTest.hex	2019/10/21 下午 0 HEX File	153 KB
- 11				Merged_Cooking.hex	2019/10/21 下午 0 HEX File	186 KB
o common	2019/10/7下午03			Merged_DashReplenishment.hex	2019/10/21 下午 0 HEX File	162 KB
💋 customloader	2019/10/1 下午 06	File folder		Merged_HelloWorld.hex	2019/10/21 下午 0 HEX File	159 KB
🔣 ack.uvmpw	2019/10/21 下午 0	猩ision Multi-Proj	2 KB	Merged_OfflineFwUpdate.hex	2019/10/21 下午 0 HEX File	79 KB
ack.uvmpw.uvgui.WCLin	2019/10/21下午0	WCLIN File	89 KB	Merged_Primitives.hex	2019/10/21 下午 0 HEX File	182 KB
m031_merge.bat	2019/10/7下午05	Windows Batch File	1 KB	Merged_SmartLight.hex	2019/10/21 下午 0 HEX File	182 KB



HMCU board Setting

- Switch Pin 1 and pin 2 of VCOM(ICESW2) on Nu-Link2-Me to "ON" position.
- Bridge USB micro line between Nu-Link2-Me and PC.
- After that, PC will show a "NuMicro MCU" disk on Window file manager.

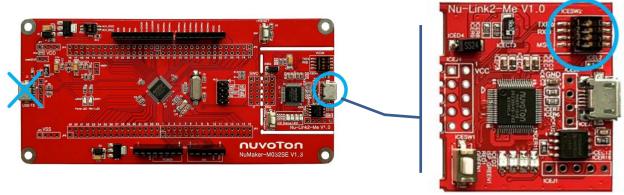

- Nu-Link2-Me firmware upgrade guiding
 - Please find out Chapter 5 of 'NuMicro Cortex-M Keil ICE driver user manual.pdf' in installed Nu-Link_Keil driver folder C:\Program Files (x86)\Nuvoton Tools\Nu-Link Keil\.



ACK HMCU Firmware Installation

- Drag-and-drop firmware into "NuMicro MCU" disk.
 - The firmware includes a bootloader and an ACK example in a .hex file is merged by hexmerge.py.

 After copying finished, fir 		✓ ■ This PC	
			> 🧊 3D Objects
			> 🔙 Desktop
Merged_BasicCapabilities.hex	2019/10/21 下午 0 HEX File	177 KB	Documents
Merged_BoardBringupTest.hex	2019/10/21 下午 0 HEX File	153 KB	 Downloads Music Pictures Videos
Merged_Cooking.hex	2019/10/21 下午 0 HEX File	186 KB	
Merged_DashReplenishment.hex	2019/10/21 下午 0 HEX File	162 KB	
Merged_HelloWorld.hex	2019/10/21 下午 0 HEX File	159 KB	> 🏥 Windows (C:)
Merged_OfflineFwUpdate.hex	2019/10/21 下午 0 HEX File	79 KB	> NuMicro MCU (D:)
Merged_Primitives.hex	2019/10/21 下午 0 HEX File	182 KB	> 👳 workspace (\\192.168.1.200) (X:)
Merged_SmartLight.hex	2019/10/21 下午 0 HEX File	182 KB	> 🛖 NFTP (\\nthcief01) (Y:)
			> 👳 VSS (\\nthcrdvss01) (Z:)
			NuMicro MCU (D:)




ACK HMCU Boot Option Configuration

Configure "Boot Options" is in "APROM with IAP" mode using ICP programming

Nuvoton NuMicro ICP Programming Tool 3.00 - M031 Series


Tool.

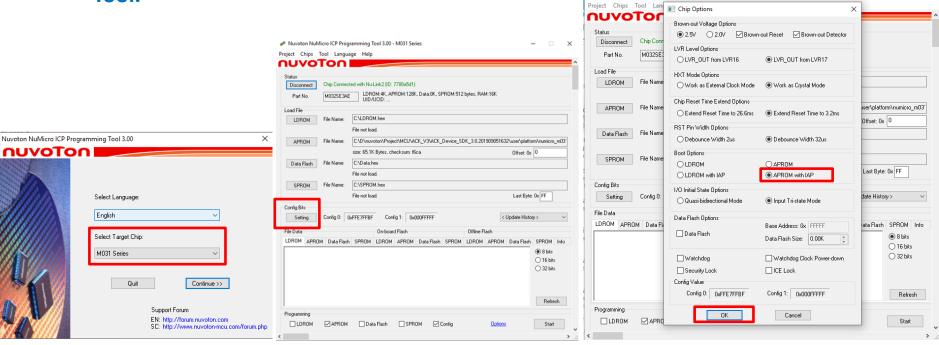



Wiring and Alexa APP


- Mount ACK connectivity board on Arduino shield of NuMaker board.
- Connect a LED to D9(+) and GND(-).
- Use terminal utility to see Log
 - Open window device manager to get Nuvoton VCOM COM port number.
 - UART communication setting is 115200N81.
- Associate with an Internet-accessible Wi-Fi router
- Install Amazon Alexa APP in your mobile device
 - Got an Amazon account to login.
 - Make sure the APP version number is latest.

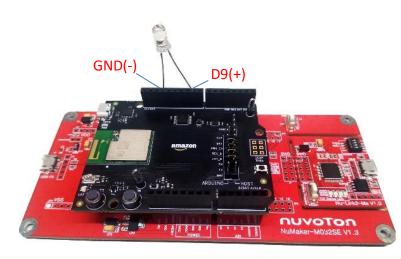



Alexa APP controlling

- You can use Alexa APP to set smart-light functions
 - Press Turn-on/off button
 - LED will be turn-on/off.
 - Slide brightness bar to [1-100] percent.
 - LED light brightness will be adjusted.
 - Select speed option to none/low/medium/high.
 - LED blink speed will changed to none/low/medium/high.
 - Select Turnoff timer option to none/5mins/10mins/1hours.
 - LED will be turn be after specified time.

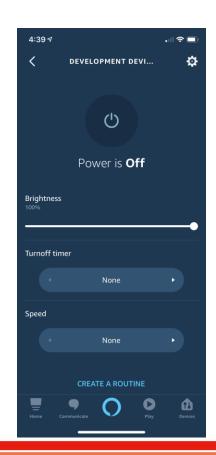



Speech controlling

- Golden utterances
 - https://developer.amazon.com/zh/docs/device-apis/alexa-brightnesscontroller.html
- You also can talk to Alexa APP below commands.

(Renamed development board to light)

- Alexa, turn-on light
- Alexa, turn-off light
- Alexa, set turn off timer to five minutes. (none/5minutes/10minutes/1hour)
- Alexa, set the speed to low on light. (none/low/medium/high)
- Alexa, set light to fifty percent. [1-100%]



To Restore factory setting

- You can use a dupont line to short A0 to GND over 5 seconds to enter restoring factory setting mode.
 - After restoring, all settings on ACK module will be cleared. So, you need to register ACK module again.





HMCU firmware version control

- You can modify ACKUser_GetFirmwareVersion function to do version control. This version number is for ACK HMCU firmware OTA upgrading.
 - PATH: <PATH-TO-ACKDeviceSDK>\user\platform\numicro_m031\ack_user_device.c
 - We use building-date-time to implement the function.
 - You need to publish new version number and HMCU firmware on Amazon cloud.



ACK development kits

- Please visit Amazon ACK official page
 - https://developer.amazon.com/en-US/alexa/connected-devices/alexa-connect-kit/dev-kits



MO31 Series Resources

- Link to Keil tools for Nuvoton NuMicro
 - http://www2.keil.com/nuvoton/M0-M23
- Technical reference manual
 - http://www.nuvoton.com/resource-files/TRM_M031_Series_EN_Rev1.03.pdf
- Development board user manual
 - http://www.nuvoton.com/resource-files/UM_NuMaker-M032SE_EN_Rev1.00.pdf
- Latest Nu-Link Keil driver download
 - https://www.nuvoton.com/opencms/resource-download.jsp?tp_GUID=SW0520101208200142
- Latest ICP Programming tool download
 - https://www.nuvoton.com/resource-download.jsp?tp_GUID=SW1720200221181328