

# Amazon ACK HMCU On NuTiny-M451V

WWW.nuvoton.com
MS70 Wayne Lin
2021/5/4



- Introduction
- Partition layout, Boot flow & OTA upgrading
- Demo
- Some notes



#### Introduction

- ACK Alexa Connect Kit
- An Amazon-managed solution that makes it simpler, faster, and more economical to create and manage Alexa-controlled, Wi-Fi-enabled smart devices.
  - ACK module
  - High-reliability/Low-latency device control cloud
  - ACK Management Console
  - Extensibility APIs
  - Dash Replenishment Service





#### **Partition layout**

ACK\_NUMICRO\_OTA\_STAGING\_PARTITION (256KB-2KB-6KB-124KB = 124 KB)

> ACK\_NUMICRO\_OTA\_STAGING\_PARTITION\_START, 0x21000 ACK NUMICRO OTA PRIMARY PARTITION END, 0x20FFF

ACK NUMICRO OTA STAGING PARTITION END, 0x3FFFF

ACK NUMICRO OTA PRIMARY PARTITION Flash memory: -((256KB-2KB-6KB)/2 = 124 KB)256 KB

> ACK\_NUMICRO\_OTA\_STATUS\_PARTITION (2 KB)

ACK NUMICRO OTA LOADER PARTITION (6 KB)

ACK\_NUMICRO\_OTA\_PRIMARY\_PARTITION\_START, 0x2000 ACK NUMICRO OTA STATUS PARTITION END, 0x1FFF


ACK NUMICRO OTA STATUS PARTITION START, 0x1800 ACK NUMICRO OTA LOADER PARTITION END, 0x17FF

ACK NUMICRO OTA LOADER PARTITION START, 0x0

CPU RESET



# **Boot flow & OTA upgrading**

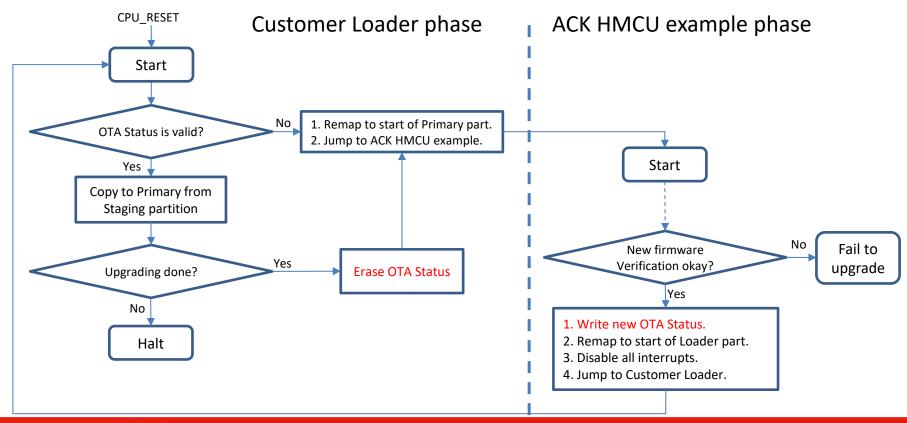



#### Demo

- Requirements
- Driver Installation
- Build Steps
- HMCU Board Setting
- ACK HMCU Firmware Installation
- ACK HMCU Boot Option Configuration



# Requirements

#### Hardware

- An ACK module board (USI MT7697H development kit)
- An development board for ACK HMCU (NuTiny-M451V board)
- An internet-accessible **2.4G** Wi-Fi router
- A mobile phone with Alexa APP
- A LED, some dupont lines and an USB Mini line


#### Software/Drivers

- Keil MDK 5.26
- Latest Nu-Link Keil drivers
- Python-3.8 environment



#### **Driver Installation**

- Install "Nu-Link Driver for Keil" on Window platform
  - Nuvoton provides installshield wizard to help user to install these utilities for keil.
  - It also includes a Nu-Link USB Driver. Please install it for MDK-ARM debugger and Nuvoton virtual COM(VCOM) function.

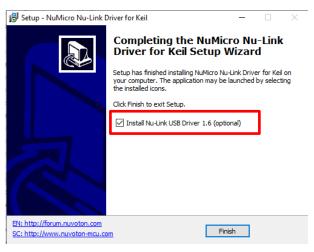




# **Build Steps**

- Open ack.uvmpw Keil multiple project file using MDK 5.26.
  - Path: <Path-to-ACK\_Device\_SDK>\user\platform\numicro\_m451\nutiny-m451v\ack.uvmpw
- Press "Batch rebuild" to build all examples.

Finally, execute "m451\_merge.bat" to merge customer\_loader and example into

a hex file.

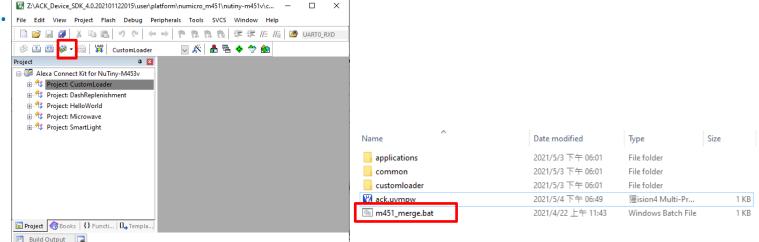



# **Python Installation**

- **Python 3.8** or later is required, with the following optional modules (install with pip): intelhex, protobuf, pyserial.
  - Download: https://www.python.org/ftp/python/3.8.6/python-3.8.6-amd64.exe
  - The intelhex is \*MUST\* before you executing the m451\_merge.bat script.
  - To execute 'pip install intelhex' in command line window.
  - Remember to add python execution to PATH variable.



112 KB 127 KB 156 KB 157 KB

#### m451\_merge.bat

- This is batch script for window platform. Help user to get all merged firmwares for programming, just a double-click step.
- It invokes some python utilities Amazon provided
  - For producing a merged firmware for NuMicro MCU.
    - Notice: The Nu-Link-Me on NuTiny-M451V board is without Drag-and-drop firmware downloading function.
  - For OTA upgrading file for publishing on Amazon Cloud.
    - Please remember to modify the device type for yours.

Name		Date modified	Туре	Size	The Indian	2021/4/25 下午 07.20	LIEVET
		2024 /5 /2 75 4 25 24	F11 6 1 1		Merged_DashReplenishment.hex	2021/4/26 下午 07:28	HEX File
applications		2021/5/3 下午 06:01	File folder		Merged_HelloWorld.hex	2021/4/26 下午 07:28	HEX File
common		2021/5/3 下午 06:01	File folder		Merged_Microwave.hex	2021/4/26 下午 07:28	HEX File
customloader		2021/5/3 下午 06:01	File folder		Merged_SmartLight.hex	2021/4/26 下午 07:28	HEX File
ack.uvmpw	1	2021/5/4 下午 06:49	猩ision4 Multi-Pr	1 KB	merged_smartergritation	2021/4/20   01/20	TIEXTIC
m451_merge.bat		2021/4/22 上午 11:43	Windows Batch File	1 KB			



# **HMCU** board Setting

Bridge USB micro line between Nu-Link-Me and PC.



- Nu-Link-Me firmware upgrade guiding
  - Please find out Chapter 5 of 'NuMicro Cortex-M Keil ICE driver user manual.pdf' in installed Nu-Link\_Keil driver folder C:\Program Files (x86)\Nuvoton Tools\Nu-Link\_Keil\.



# **HMCU** board and ACK shield board wiring

Power-related Pins

NuTiny-M451V	ACK shield board
+ 3.3v	ioref
+5v	+5v
GND	GND

Communication-related Pins

NuTiny-M451V	ACK shield board
P66	RX
P67	TX
P68	INT
P69	RES

Other I/O Pins

NuTiny-M451V	Function description
On-board Heart Beat LED (GPIO output, IO1)	Alexa-connected indicator
P45 (Defined PWM I/O pin)	Smart Light LED
P43 (GPIO input)	Factory Setting Restore




#### **ACK HMCU Firmware Installation**

- Using Nuvoton NuMicro ICP Programming Tool to program merged ACK HMCU and CustomerLoader hex file into MCU's APROM.
  - Specify the path of merged file in APROM entry.
  - Configure "Boot Options" is in "APROM with IAP" mode.
  - Select APROM and Config options to start programming.



#### **ACK HMCU Firmware Installation**

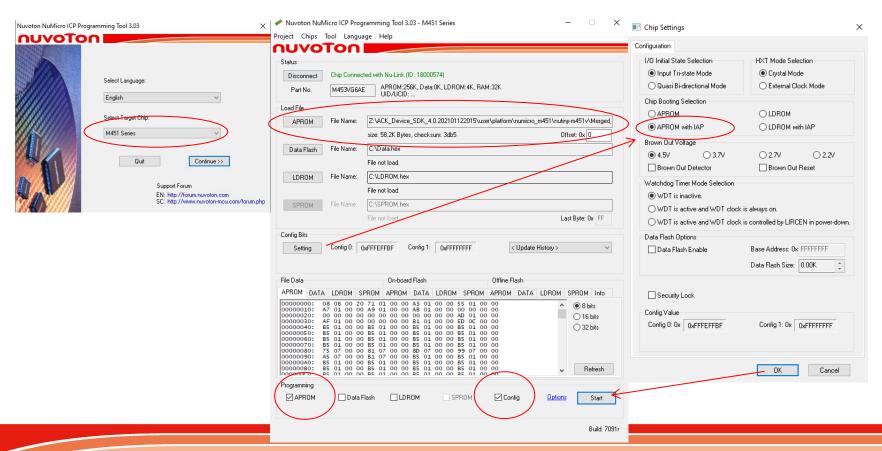



# Wiring and Alexa APP

- Connect a LED to P45 and GND(-).
- Use terminal utility to see Log
  - Open window device manager to get Nuvoton VCOM COM port number.
  - UART communication setting is 115200N81.
- Associate with an Internet-accessible Wi-Fi router
- Install Amazon Alexa APP in your mobile device
  - Got an Amazon account to login.
  - Make sure the APP version number is latest.



#### **Alexa APP controlling**

- You can use Alexa APP to set smart-light functions
  - Press Turn-on/off button
    - LED will be turn-on/off.
  - Slide brightness bar to [1-100] percent.
    - LED light brightness will be adjusted.
  - Select speed option to none/low/medium/high.
    - LED blink speed will changed to none/low/medium/high.
  - Select Turnoff timer option to none/5mins/10mins/1hours.
    - LED will be turn be after specified time.





# **Speech controlling**

- Golden utterances
  - https://developer.amazon.com/zh/docs/device-apis/alexa-brightnesscontroller.html
- You also can talk to Alexa APP below commands.

(Renamed development board to light)

- Alexa, turn-on light
- Alexa, turn-off light
- Alexa, set turn off timer to five minutes. (none/5minutes/10minutes/1hour)
- Alexa, set the speed to low on light. (none/low/medium/high)
- Alexa, set light to fifty percent. [1-100%]



#### **HMCU firmware version control**

- You can modify ACKUser\_GetFirmwareVersion function to do version control. This version number is for ACK HMCU firmware OTA upgrading.
  - PATH: <PATH-TO-ACKDeviceSDK>\user\platform\numicro\_m451\ack\_user\_device.c
  - We use building-date-time to implement the function.
  - You need to publish new version number and HMCU firmware on Amazon cloud.



# **ACK development kits**

- Please visit Amazon ACK official page
  - https://developer.amazon.com/en-US/alexa/connected-devices/alexa-connect-kit/dev-kits



#### **M451 Series Resources**

- Link to Keil tools for Nuvoton NuMicro
  - http://www2.keil.com/nuvoton/M0-M23
- Development board schematics
  - https://www.nuvoton.com/resource-download.jsp?tp\_GUID=HL0120141225192023
- Latest Nu-Link Keil driver download
  - https://www.nuvoton.com/opencms/resource-download.jsp?tp\_GUID=SW0520101208200142
- Latest ICP Programming tool download
  - https://www.nuvoton.com/resource-download.jsp?tp\_GUID=SW1720200221181328