

# Amazon ACK HMCU On NuTiny-M4521S

WWW.nuvoton.com
MS70 Wayne Lin
2021/10/18



- Introduction
- Partition layout, Boot flow & OTA upgrading
- Demo
- Some notes



#### Introduction

- ACK Alexa Connect Kit
- An Amazon-managed solution that makes it simpler, faster, and more economical to create and manage Alexa-controlled, Wi-Fi-enabled smart devices.
  - ACK module
  - High-reliability/Low-latency device control cloud
  - ACK Management Console
  - Extensibility APIs
  - Dash Replenishment Service





### **Partition layout**

ACK\_NUMICRO\_OTA\_STAGING\_PARTITION ( 128KB-2KB-6KB-60KB = 60 KB )

ACK\_NUMICRO\_OTA\_STAGING\_PARTITION\_START, 0x11000
ACK\_NUMICRO\_OTA\_PRIMARY\_PARTITION\_END, 0x10FFF

ACK NUMICRO OTA STAGING PARTITION END, 0x1FFFF

Flash memory: - 128 KB

ACK\_NUMICRO\_OTA\_PRIMARY\_PARTITION ( (128KB-2KB-6KB)/2 = 60 KB )

ACK\_NUMICRO\_OTA\_STATUS\_PARTITION
(2 KB)

ACK\_NUMICRO\_OTA\_LOADER\_PARTITION
(6 KB)

ACK\_NUMICRO\_OTA\_PRIMARY\_PARTITION\_START, 0x2000 ACK\_NUMICRO\_OTA\_STATUS\_PARTITION\_END, 0x1FFF


ACK\_NUMICRO\_OTA\_STATUS\_PARTITION\_START, 0x1800 ACK\_NUMICRO\_OTA\_LOADER\_PARTITION\_END, 0x17FF

ACK\_NUMICRO\_OTA\_LOADER\_PARTITION\_START, 0x0

CPU\_RESET



# **Boot flow & OTA upgrading**

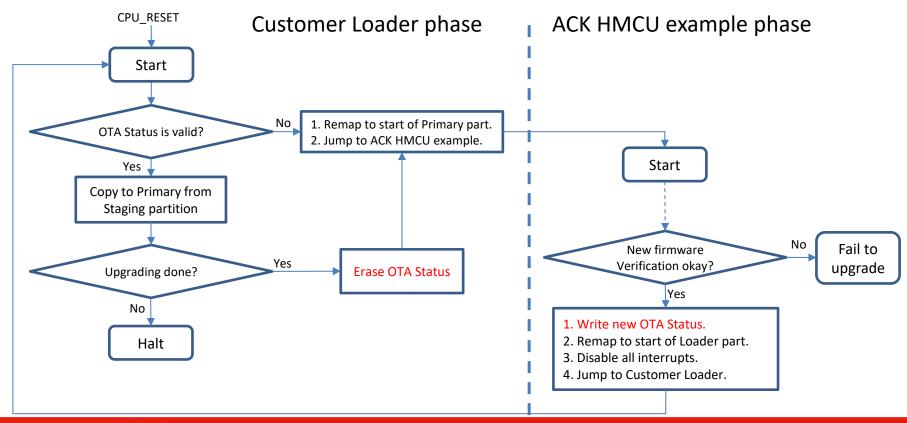



#### Demo

- Requirements
- Driver Installation
- Build Steps
- HMCU Board Setting
- ACK HMCU Firmware Installation
- ACK HMCU Boot Option Configuration



# Requirements

#### Hardware

- An ACK module board (USI MT7697H development kit)
- An development board for ACK HMCU (NuTiny-M4521S board)
- An internet-accessible **2.4G** Wi-Fi router
- A mobile phone with Alexa APP
- A LED, some dupont lines and an USB Mini line


#### Software/Drivers

- Keil MDK 5.26
- Latest Nu-Link Keil drivers
- Python-3.8 environment



#### **Driver Installation**


- Install "Nu-Link Driver for Keil" on Window platform
  - Nuvoton provides installshield wizard to help user to install these utilities for keil.
  - It also includes a Nu-Link USB Driver. Please install it for MDK-ARM debugger and Nuvoton virtual COM(VCOM) function.

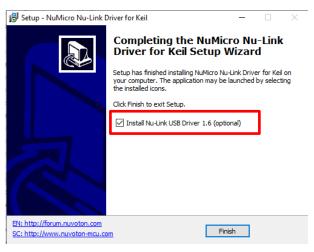




# **Build Steps**

- Open ack.uvmpw Keil multiple project file using MDK 5.26.
  - Path: <Path-to-ACK\_Device\_SDK>\user\platform\numicro\_m4521\nutiny-m4521s\ack.uvmpw
- Press "Batch rebuild" to build all examples.
- Finally, execute "ack\_hmcu\_fw\_merge.bat" to merge customer\_loader and example into a hex file.

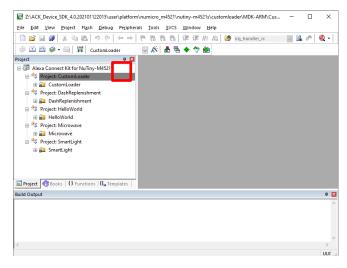

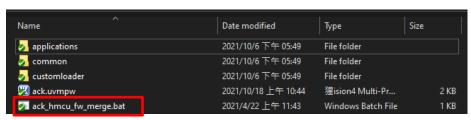



# **Python Installation**

- **Python 3.8** or later is required, with the following optional modules (install with pip): intelhex, protobuf, pyserial.
  - Download: https://www.python.org/ftp/python/3.8.6/python-3.8.6-amd64.exe
  - The intelhex is \*MUST\* before you executing the m4521\_merge.bat script.
  - To execute 'pip install intelhex' in command line window.
  - Remember to add python execution to PATH variable.



112 KB 127 KB 156 KB 157 KB

# ack\_hmcu\_fw\_merge.bat

- This is batch script for window platform. Help user to get all merged firmwares for programming, just a double-click step.
- It invokes some python utilities Amazon provided
  - For producing a merged firmware for NuMicro MCU.
    - Notice: The Nu-Link-Me on NuTiny-M4521S board is without Drag-and-drop firmware downloading function.
  - For OTA upgrading file for publishing on Amazon Cloud.
    - Please remember to modify the device type for yours.

Name	Date modified	Туре	Size		2024/4/25 T 4 27 22	-
unlications	2021/10/6 下午 05:49	File folder		Merged_DashReplenishment.hex	2021/4/26 下午 07:28	
applications				Merged_HelloWorld.hex	2021/4/26 下午 07:28	
common	2021/10/6 下午 05:49	File folder		Merged_Microwave.hex	2021/4/26 下午 07:28	H
customloader	2021/10/6 下午 05:49	File folder			2021/4/26 下午 07:28	Η
ack.uvmpw	2021/10/18 上午 10:44	猩ision4 Multi-Pr	. 2 KB	Merged_SmartLight.hex	2021/4/20 N + 07:28	Н
ack hmcu fw merge.bat	2021/4/22 上午 11:43	Windows Batch File	e 1KB			



### **HMCU** board Setting

- Switch Pin 1 and pin 2 of VCOM(SW2) on Nu-Link-Me to "ON" position.
- Bridge USB micro line between Nu-Link-Me and PC.



- Nu-Link-Me firmware upgrade guiding
  - Please find out Chapter 5 of 'NuMicro Cortex-M Keil ICE driver user manual.pdf' in installed Nu-Link\_Keil driver folder C:\Program Files (x86)\Nuvoton Tools\Nu-Link\_Keil\.



# **HMCU** board and ACK shield board wiring

Power-related Pins

NuTiny-M4521S	ACK shield board		
+ 3.3v	ioref		
+5v	+5v		
GND	GND		

Communication-related Pins

NuTiny-M4521S	ACK shield board
P37	RX
P38	TX
P39	INT
P40	RES

Other I/O Pins

NuTiny-M4521S	Function description		
On-board Heart Beat LED (GPIO output, IO1)	Alexa-connected indicator		
P28 (Defined PWM I/O pin)	Smart Light LED		
P23 (GPIO input)	Factory Setting Restore		




#### **ACK HMCU Firmware Installation**

- Using Nuvoton NuMicro ICP Programming Tool to program merged ACK HMCU and CustomerLoader hex file into MCU's APROM.
  - Specify the path of merged file in APROM entry.
  - Configure "Boot Options" is in "APROM with IAP" mode.
  - Select APROM and Config options to start programming.



#### **ACK HMCU Firmware Installation**



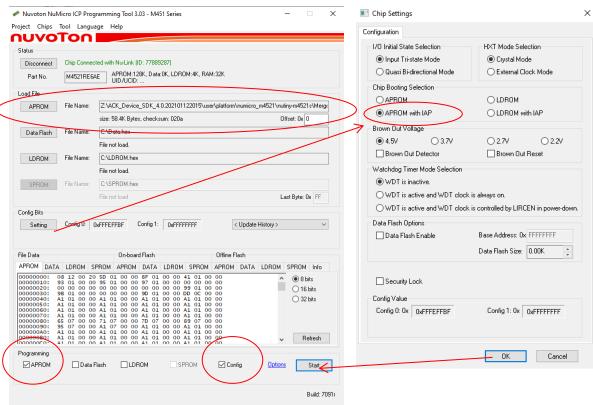



# Wiring and Alexa APP

- Mount ACK connectivity board on Arduino shield of NuMaker board.
- Connect a LED to P28 and GND(-).
- Use terminal utility to see Log
  - Open window device manager to get Nuvoton VCOM COM port number.
  - UART communication setting is **115200N81**.
- Associate with an Internet-accessible Wi-Fi router
- Install Amazon Alexa APP in your mobile device
  - Got an Amazon account to login.
  - Make sure the APP version number is latest.



### **Alexa APP controlling**

- You can use Alexa APP to set smart-light functions
  - Press Turn-on/off button
    - LED will be turn-on/off.
  - Slide brightness bar to [1-100] percent.
    - LED light brightness will be adjusted.
  - Select speed option to none/low/medium/high.
    - LED blink speed will changed to none/low/medium/high.
  - Select Turnoff timer option to none/5mins/10mins/1hours.
    - LED will be turn be after specified time.





# **Speech controlling**

- Golden utterances
  - https://developer.amazon.com/zh/docs/device-apis/alexa-brightnesscontroller.html
- You also can talk to Alexa APP below commands.

(Renamed development board to light)

- Alexa, turn-on light
- Alexa, turn-off light
- Alexa, set turn off timer to five minutes. (none/5minutes/10minutes/1hour)
- Alexa, set the speed to low on light. (none/low/medium/high)
- Alexa, set light to fifty percent. [1-100%]



#### **HMCU** firmware version control

- You can modify ACKUser\_GetFirmwareVersion function to do version control. This version number is for ACK HMCU firmware OTA upgrading.
  - PATH: <PATH-TO-ACKDeviceSDK>\user\platform\numicro\_m4521\ack\_user\_device.c
  - We use building-date-time to implement the function.
  - You need to publish new version number and HMCU firmware on Amazon cloud.



# **ACK development kits**

- Please visit Amazon ACK official page
  - https://developer.amazon.com/en-US/alexa/connected-devices/alexa-connect-kit/dev-kits



#### **M4521 Series Resources**

- Link to Keil tools for Nuvoton NuMicro
  - http://www2.keil.com/nuvoton/M0-M23
- Technical reference manual
  - https://www.nuvoton.com/export/resource-files/TRM\_M4521\_Series\_EN\_Rev1.00.pdf
- Development board schematics
  - https://www.nuvoton.com/resource-download.jsp?tp\_GUID=HL0320181128163025
- Latest Nu-Link Keil driver download
  - https://www.nuvoton.com/opencms/resource-download.jsp?tp\_GUID=SW0520101208200142
- Latest ICP Programming tool download
  - https://www.nuvoton.com/resource-download.jsp?tp\_GUID=SW1720200221181328