# snickerdoodle

# DEVELOPMENT ENVIRONMENT SETUP

**DECEMBER 19, 2015** 

#### **How to Read this Document**

This document makes extensive use of links, references and notices in the page margins to detail additional information that can be useful while following the guide.

WARNING A warning notice indicates a potential hazard. If care is not taken to adhere to the safety precautions, damage may be done to snickerdoodle.

Warnings and cautions will be clearly visible in either the body of the text or in the margin and must be paid close attention while following the guided steps.

CAUTION A caution indication denotes a process that requires special attention. If the caution is not exercised and the process not adhered to, failure may result and/or potential damage to snickerdoodle.

Warning, caution and informational notices, such as this one, may also be found in the margin.

# Keywords

Keywords and important terms are shown in *italicized* type. Additional important information can be found in the margins of text with superscript notation<sup>1</sup>.

Navigation of menus and directories are shown using **bold italicized** type. Any hierarchical navigation is shown using an arrow to denote a **Parent**  $\rightarrow$  **child** relationship.

Teletype text is used to highlight inputs, variables and system files within the host environment.

<sup>1</sup> Margin notes, such as this one, reference the body content and highlight technical details or references for further information.

#### Introduction

This guide is intended to guide you through the install process for the Xilinx Tools used to configure and develop snickerdoodle. This guide uses a Linux system (Ubuntu) as the platform for the download and install process. A 32 or 64-bit Linux (krtkl recommends the latest LTS release from Ubuntu) system is required to exactly follow this guide, however, the process is very similar on a Windows host. A virtual machine<sup>2</sup> install is an excellent (and free) option for creating a Linux platform for setting up the snickerdoodle development environment.


<sup>2</sup> A free virtual machine hypervisor for a variety of hosts can be downloaded from https: //www.virtualbox.org/wiki/Downloads

# **Installing the Tools**

#### **Download Installer**

To run the Xilinx tools on 64-bit systems, 32-bit runtime libraries will need to be installed. For Ubuntu systems 12.04 or newer, the lib32z1, lib32ncurses5 and lib32bz2-1.0 packages need to be installed using the apt-get front end for Ubuntu's packaging tool.

To begin downloading and installing the Xilinx tools navigate to http://www.xilinx.com/support/download.html on a web browser.

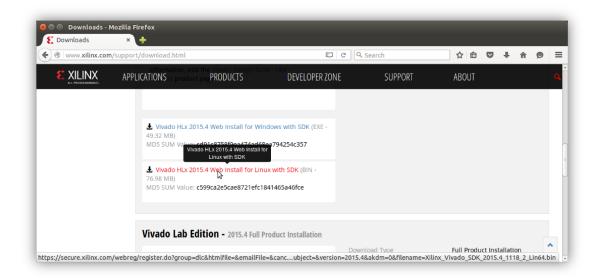

**Figure 1:** Download Vivado and SDK Web Installer from Xilinx Website

# Executing the Web Intaller

If you are using a 64-bit system, you will need to install 32-bit runtime support for the Xilinx tools using apt-get (on Ubuntu). Installing the runtime support can be done before or after installing the Xilinx tools.

```
sudo apt-get install lib32z1 lib32ncurses5 lib32bz2-1.0
```

To run the web installer, first move the downloaded web installer binary from the Downloads directory. The binary needs to be given executable privelidges before running. CAUTION Make sure to execute the installer using root (sudo) permissions so that the installer can write to the /opt directory.

```
mv ~/Downloads/Xilinx_Vivado_SDK_2015.4_1118_2_Lin64.bin ..  # Move installer to home directory
cd ..
sudo chmod +x Xilinx_Vivado_SDK_2015.4_1118_2_Lin64.bin  # Modify binary permissions
sudo ./Xilinx_Vivado_SDK_2015.4_1118_2_Lin64.bin  # Execute binary
```

Upon starting the installer executable, the graphical user interface (GUI) for the install process with appear. The GUI will be used to configure the install options. For most of the install options, the default values can be used.

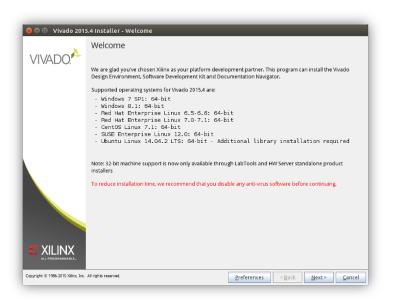


Figure 2: Xilinx Tools Installer GUI Interface

To start developing on snickerdoodle, the Vivado version required is the free Vivado HL WebPACK Edition. There is no version selection necessary for the SDK. The graphical Eclipse-based SDK (XSDK) will be installed by default.

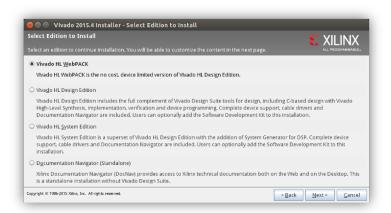


Figure 3: Selecting the Free WebPACK Vivado Edition

The last step before the install process completes is selection of the install components including the SDK and the Xilinx Documentation Navigator (DocNav). Figure 4 shows the recommended configuration for installing the 2015.4 tools for snickerdoodle.



**Figure 4:** Vivado HL WebPACK Install Configuration and Download/Install Progress

Once configured, the download and install progress GUI will appear and automatically complete the installation. This will take several minutes.

# **Licensing the Tools**

The Xilinx tools require a free account for licensing. The account will be used by the Vivado License Manger to activate the tools after they've been installed. Figure 5 shows the selection for a free WebPACK license within the Vivado License Manager.



Figure 5: Get Free Vivado and SDK Licenses

# **Running the Tools**

# Adding Tool Path to \$PATH

The Xilinx development tools includes a set of binaries that can be accessed for a variety of development methods. To make the binaries available to tools such as GNU's make, the host system's \$PATH variable needs to be appended with the Xilinx tools directories. The tool paths are:

SDK Path

/opt/Xilinx/SDK/2015.4/bin

Vivado Path

/opt/Xilinx/Vivado/2015.4/bin

DocNav Path
/opt/Xilinx/DocNav

ARM GCC Tools Path

/opt/Xilinx/SDK/2015.4/gnu/arm/lin/bin

Microblaze GCC Tool Paths

/opt/Xilinx/SDK/2015.4/gnu/microblaze/lin/bin
/opt/Xilinx/SDK/2015.4/gnu/microblaze/linux\_toolchain/lin64\_be/bin
/opt/Xilinx/SDK/2015.4/gnu/microblaze/linux\_toolchain/lin64\_le/bin

The tool paths (in this example, the SDK path) can be made temporarily available by appending the \$PATH variable using:

```
export PATH='$PATH:/opt/Xilinx/SDK/2015.4/bin'
```

To make the \$PATH specification persistent, the /etc/environment<sup>3</sup> file can be modified so that the tools are accessbile after restarting the host computer. The \$PATH variable contains a colon (:) sepearated list of directories to check for executable binaries. Default paths such as /bin and usr/local/bin should already be listed.

<sup>3</sup> For more information on modifying the /etc/environment file see https://help.ubuntu.com/community/EnvironmentVariables#A.2Fetc.

2Fenvironment

After adding the tools to \$PATH, access to the binaries can be checked using which to verify the location of the binaries:

```
user@ubuntu:~$ which xsdk
/opt/Xilinx/SDK/2015.4/bin/xsdk
user@ubuntu:~$ which vivado
/opt/Xilinx/Vivado/2015.4/bin/vivado
```

Once \$PATH is configured to include the Xilinx tool paths, running the tools can be done by invoking the executables from a terminal. For the SDK, use xsdk and for Vivado, use vivado. The graphical interfaces will start after a short message detailing the version and SDK invocation command:

```
user@ubuntu:~$ xsdk
****** Xilinx Software Development Kit

****** SDK v2015.4 (64-bit)

**** SW Build 1412921 on Wed Nov 18 09:44:32 MST 2015

** Copyright 1986-2015 Xilinx, Inc. All Rights Reserved.

Launching SDK with command
    /opt/Xilinx/SDK/2015.4/eclipse/lnx64.o/eclipse -vmargs -Xms64m
    -Xmx512m
```



Figure 6: Vivado and SDK Graphical Interface Splash Screens