

2inch LCD Module

From Waveshare Wiki

Jump to: navigation, search

Introduction

This product provides Raspberry Pi, STM32, Arduino examples.

Feature

- As a 2-inch IPS display module with a resolution of 240 * 320, it uses an SPI interface for communication. The LCD has an internal controller with basic functions, which can be used to draw points, lines, circles, and rectangles, and display English, Chinese as well as pictures.
- We provide complete supporting Raspberry Pi demos (BCM2835 library, WiringPi library, and Python demos), STM32 demos, and Arduino demos.

2inch LCD Module



(<https://www.waveshare.com/2inch-lcd-module.htm>)

Specifications

- Operating voltage: 3.3V/5V (Please ensure that the power supply voltage and logic voltage are consistent, otherwise it will not work properly.)
- Interface: SPI
- LCD type: IPS
- Driver: ST7789V
- Resolution: 240(V) x 320 (H) RGB
- Display size: 30.60 (H) x 40.80 (V) mm
- Pixel size: 0.1275 (H) x 0.1275 (V) mm

- Dimension: 58 x 35 (mm)

Interface Description


Raspberry Pi hardware connection

Please connect the LCD to your Raspberry Pi by the 8PIN cable according to the table below: Use the pin header or PH2.0 8PIN interface, you need to connect according to the following table:

Connect to Raspberry Pi

LCD	Raspberry Pi	
	BCM2835	Board
VCC	3.3V	3.3V
GND	GND	GND
DIN	MOSI	19
CLK	SCLK	23
CS	CE0	24
DS	25	22
RST	27	13
BL	18	12

The 2inch LCD uses the PH2.0 8PIN interface, which can be connected to the Raspberry Pi according to the above table: (Please connect according to the pin definition table. The color of the wiring in the picture is for reference only, and the actual color shall prevail.)

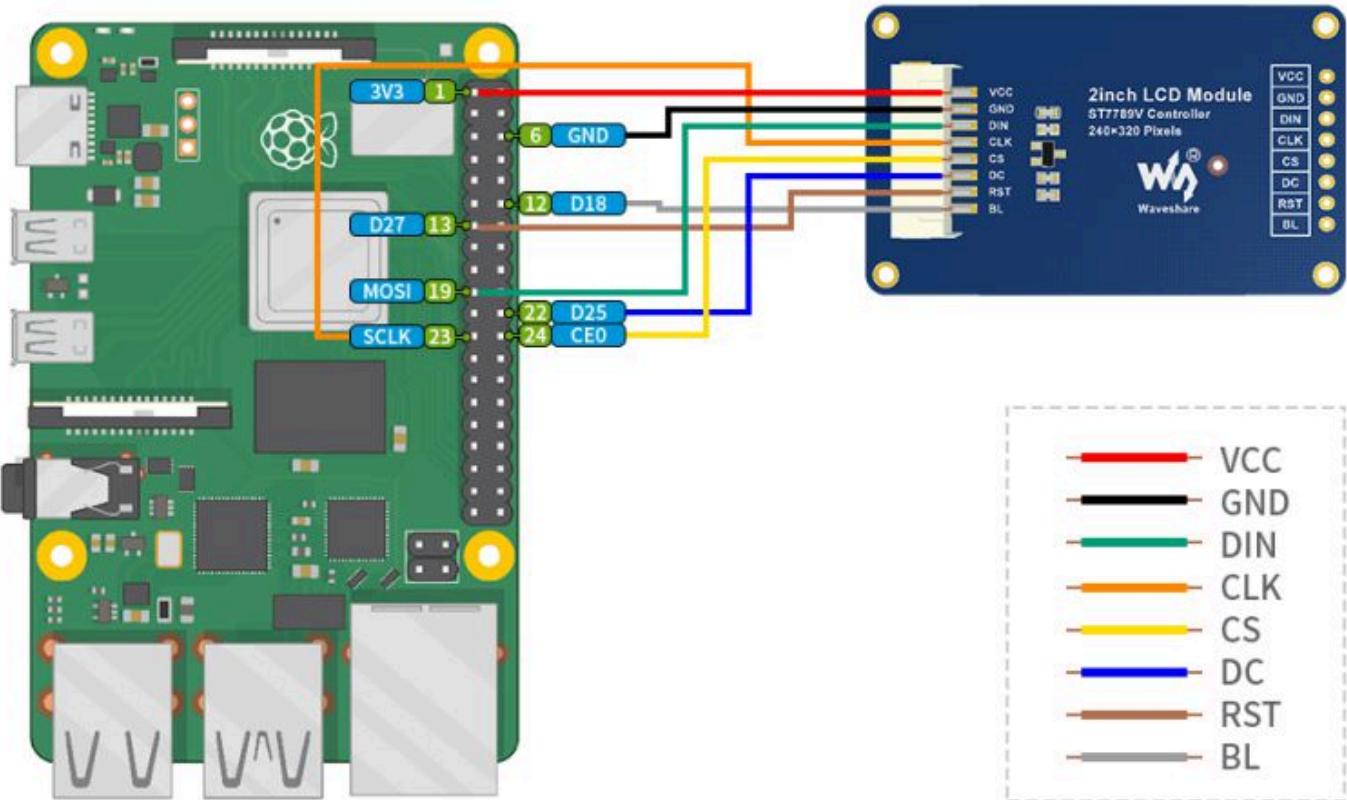

(/wiki/File:2-rpi.jpg)


STM32 hardware connection

The example we provide is based on STM32F103RBT6, and the connection method provided is also the corresponding pin of STM32F103RBT6. If you need to transplant the program, please connect according to the actual pin.

STM32F103ZET connection pin correspondence

LCD	STM32
VCC	3.3V
GND	GND
DIN	PA7
CLK	PA5
CS	PB6
DC	PA8
RST	PA9
BL	PC7

Take the XNUCLEO-F103RB development board (<https://www.waveshare.com/xnucleo-f103rb.htm>) developed by our company as an example, the connection is as follows:

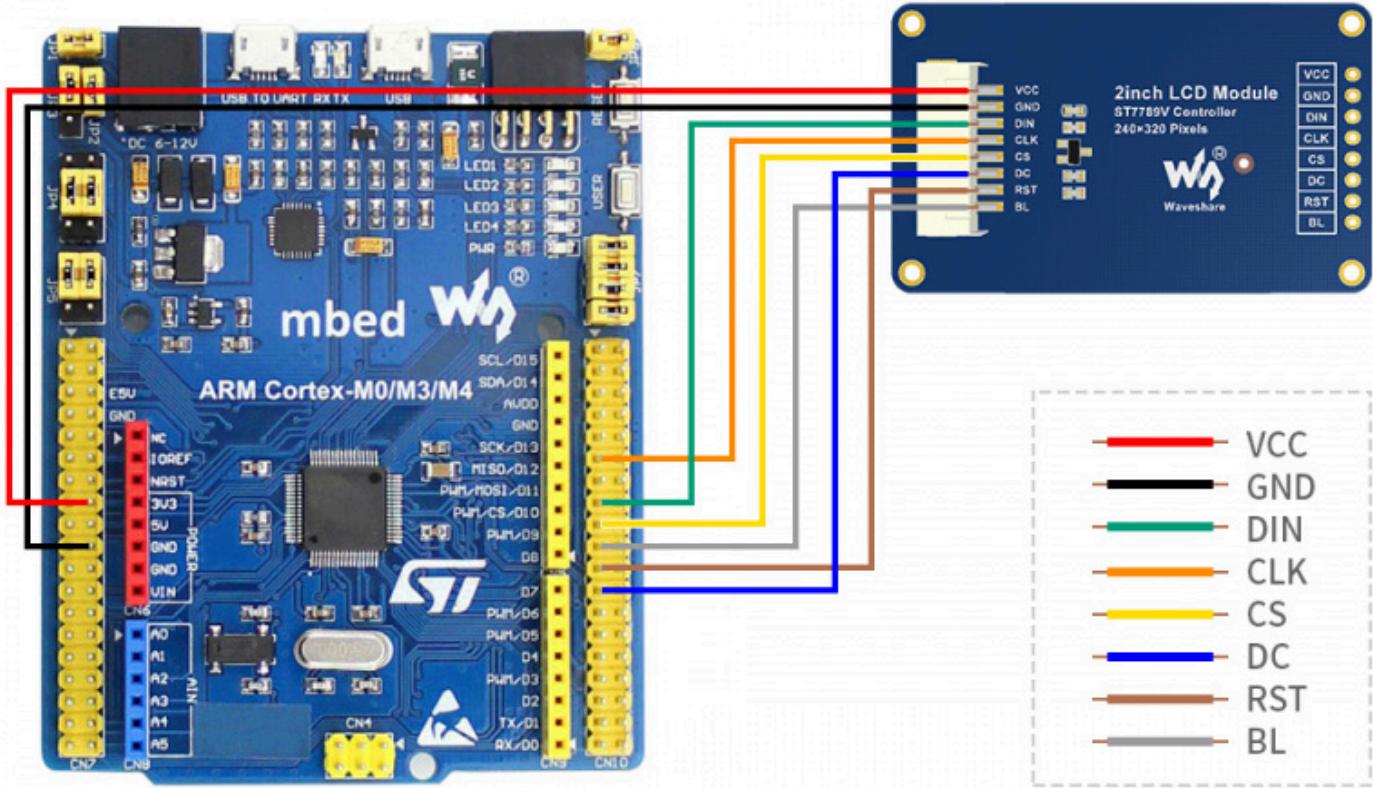


(/wiki/File:2-STM32.jpg)

Arduino Hardware Connection

Arduino UNO Connection pin correspondence

LCD	UNO
VCC	5V
GND	GND
DIN	D11
CLK	D13
CS	D10
DC	D7
RST	D8
BL	D9

The connection diagram is as follows (click to enlarge):

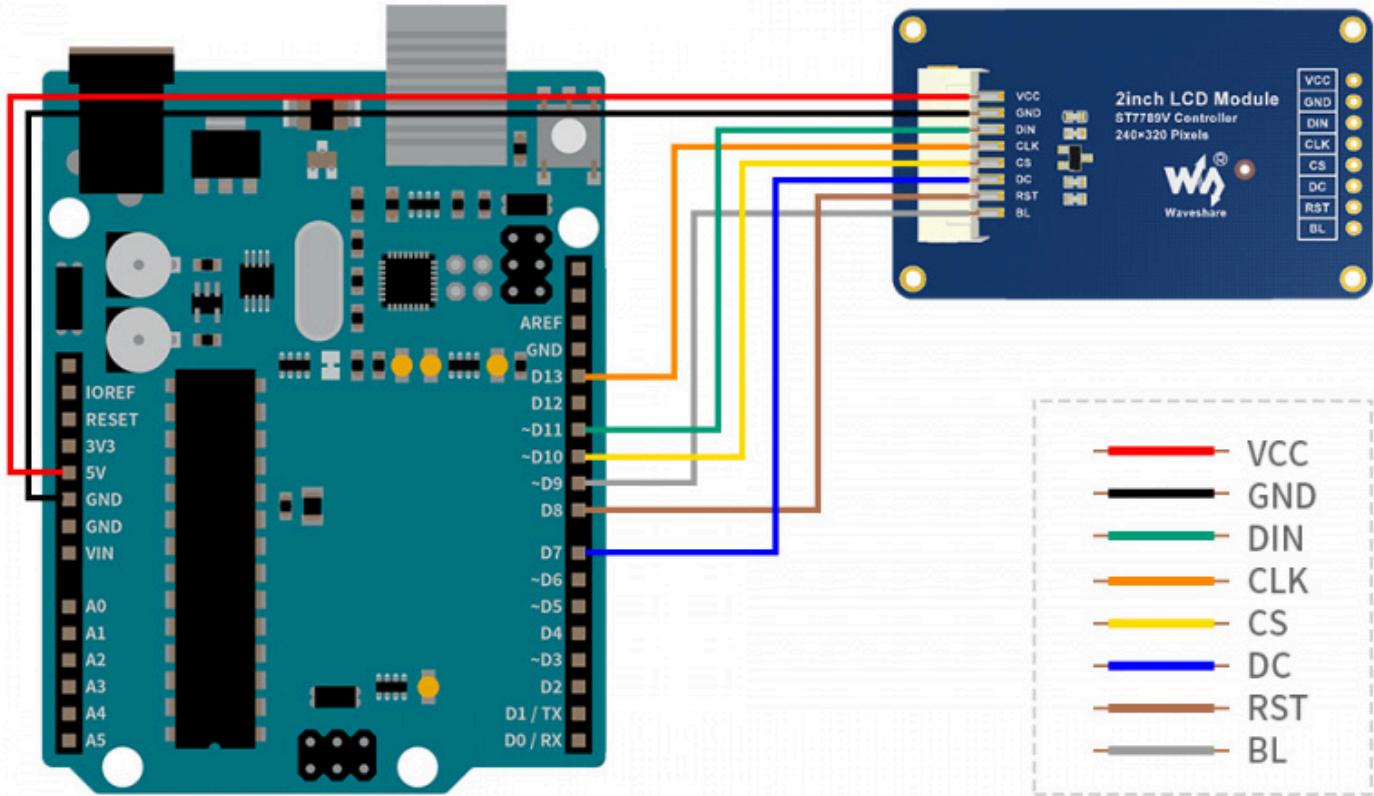

(/wiki/File:2-Aduino.jpg)

Hardware Description


LCD & Controller

The LCD supports 12-bit, 16-bit, and 18-bit input color formats per pixel, namely RGB444, RGB565, and RGB666 three color formats, this demo uses RGB565 color format, which is also a commonly used RGB format.

For most LCD controllers, the communication mode of the controller can be configured,

usually with an 8080 parallel interface, three-wire SPI, four-wire SPI, and other communication methods. This LCD uses a four-wire SPI communication interface, which can greatly save the GPIO port, and the communication speed will be faster.

Communication Protocol

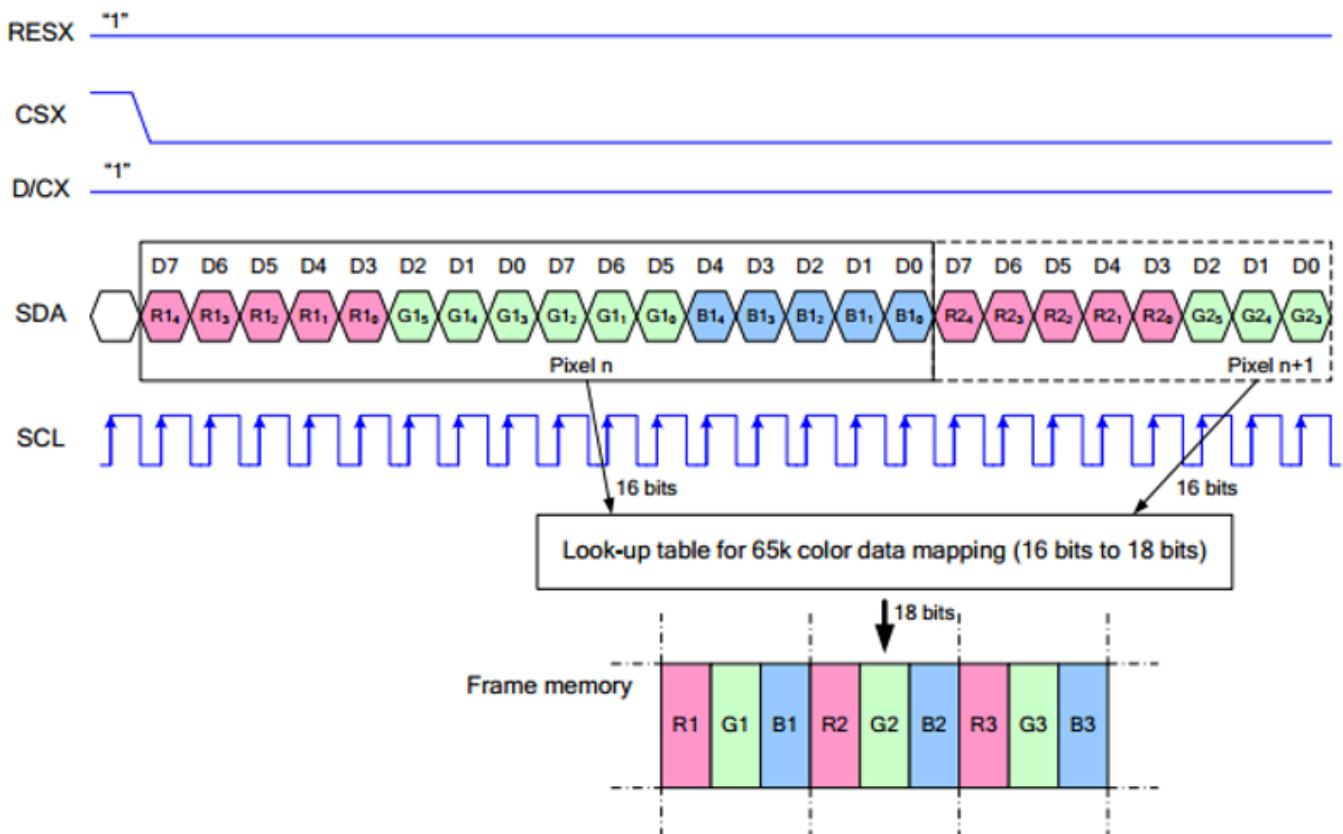

(/wiki/File:0.96inch_lcd_module_spi.png)

Note: Different from the traditional SPI protocol, the data line from the slave to the master is hidden since the device only has display requirements.

RESX: the reset pin, should be low when powering the module and be higher at other times;

CSX: slave chip selects, when CS is low, the chip is enabled.

D/CX: data/command control pin, when DC = 0, write command, when DC = 1, write data

SDA: the data pin for transmitting RGB data, it works as the MOSI pin of SPI interface;

SCL works as the SCLK pins of the SPI interface.

SPI communication has data transfer timing, which is combined by CPHA and CPOL.

CPOL determines the level of the serial synchronous clock at an idle state. When CPOL = 0, the level is Low. However, CPOL has little effect on the transmission.

CPHA determines whether data is collected at the first clock edge or at the second clock edge of the serial synchronous clock; when CPHL = 0, data is collected at the first clock

edge.

There are 4 SPI communication modes. SPI0 is commonly used, in which CPHL = 0, CPOL = 0.

Working with Raspberry Pi

Enable SPI interface

PS: If you are using the system of the Bullseye branch, you need to change "apt-get" to "apt", the system of the Bullseye branch only supports Python3.

- Open the terminal, and use the command to enter the configuration page.

```
sudo raspi-config  
Choose Interfacing Options -> SPI -> Yes to enable the SPI interface
```

```
1 Change User Password Change password for the current user
2 Network Options Configure network settings
3 Boot Options Configure options for start-up
4 Localisation Options Set up language and regional settings to match your location
5 Interfacing Options Configure connections to peripherals
6 Overclock Configure overclocking for your Pi
7 Advanced Options Configure advanced settings
8 Update Update this tool to the latest version
9 About raspi-config Information about this configuration tool
```

```
P1 Camera Enable/Disable connection to the Raspberry Pi Camera
P2 SSH Enable/Disable remote command line access to your Pi using SSH
P3 VNC Enable/Disable graphical remote access to your Pi using RealVNC
P4 SPI Enable/Disable automatic loading of SPI kernel module
P5 I2C Enable/Disable automatic loading of I2C kernel module
P6 Serial Enable/Disable shell and kernel messages on the serial connection
P7 1-Wire Enable/Disable one-wire interface
P8 Remote GPIO Enable/Disable remote access to GPIO pins
```

Would you like the SPI interface to be enabled?

<Yes>

<No>

(/wiki/File:RPI_open_spi.png)

Reboot Raspberry Pi:

```
sudo reboot
```

Please make sure the SPI is not occupied by other devices, you can check in the middle of /boot/config.txt.

If you use bookworm system, only the Igpio library is available, bcm2835 and wiringPi libaray cannot be installed or used. Please note that the python library does not need to be installed, you can directly run the demo.

BCM2835

```
#Open the Raspberry Pi terminal and run the following commands:  
sudo wget http://www.airspayce.com/mikem/bcm2835/bcm2835-1.71.tar.gz  
sudo tar zxvf bcm2835-1.71.tar.gz  
cd bcm2835-1.71/  
sudo ./configure && sudo make && sudo make check && sudo make install  
# For more information, please refer to the official website: http://www.airspayce.com/mikem/bcm2835/
```

wiringPi

```
#Open the Raspberry Pi terminal and run the following commands:  
cd  
sudo apt-get install wiringpi  
#For Raspberry Pi systems after May 2019 (those earlier may not require execution), an upgrade may be necessary:  
wget https://files.waveshare.com/wiki/common/wiringpi-latest.deb  
sudo dpkg -i wiringpi-latest.deb  
gpio -v  
# Run gpio -v and version 2.52 will appear. If it does not appear, there is an installation error  
  
#Bullseye branch system uses the following command:  
sudo git clone https://github.com/WiringPi/WiringPi  
cd WiringPi  
sudo ./build  
gpio -v  
# Run gpio -v and version 2.70 will appear. If it does not appear, there is an installation error
```

Igpio

```
sudo su  
wget https://github.com/joan2937/lg/archive/master.zip  
unzip master.zip
```

```
cd lg-master  
sudo make install  
# For more information, please refer to the official website: https://github.com/gpiozero/lg
```

Python

```
sudo apt-get update  
sudo apt-get install python3-pip  
sudo apt-get install python3-pil  
sudo apt-get install python3-numpy  
sudo pip3 install spidev
```

Download Examples

Open the Raspberry Pi terminal and run the following command:

```
sudo apt-get install unzip -y  
sudo wget https://files.waveshare.com/upload/8/8d/LCD\_Module\_RPI\_code.zip  
sudo unzip ./LCD_Module_RPI_code.zip  
cd LCD_Module_RPI_code/RaspberryPi/
```

Run the demo codes

Please go into the RaspberryPi directory (demo codes) first and run the commands in the terminal.

C codes

- Re-compile the demo codes.

```
cd c  
sudo make clean  
sudo make -j 8
```

- The test program of all screens can be called directly by entering the corresponding size.

```
sudo ./main Screen Size
```

Depending on the LCD, one of the following commands should be entered:

```
#0.96inch LCD Module
sudo ./main 0.96
#1.14inch LCD Module
sudo ./main 1.14
#1.28inch LCD Module
sudo ./main 1.28
#1.3inch LCD Module
sudo ./main 1.3
#1.47inch LCD Module
sudo ./main 1.47
#1.54inch LCD Module
sudo ./main 1.54
#1.8inch LCD Module
sudo ./main 1.8
#2inch LCD Module
sudo ./main 2
#2.4inch LCD Module
sudo ./main 2.4
```

python

- Enter the Python program directory and run the command ls -l.

```
cd python/examples
ls -l
```

```
pi@eng33:~/LCD_Module_code/RaspberryPi/python/example $ ls -l
total 24
-rw-r--r-- 1 pi pi 2830 Jun 16 17:59 0inch96_LCD_test.py
-rw-r--r-- 1 pi pi 2459 Jun 16 18:34 1inch14_LCD_test.py
-rw-r--r-- 1 pi pi 2701 Jun 16 18:33 1inch3_LCD_test.py
-rw-r--r-- 1 pi pi 2665 Jun 16 17:58 1inch54_LCD_test.py
-rw-r--r-- 1 pi pi 2678 Jun 16 18:34 1inch8_LCD_test.py
-rw-r--r-- 1 pi pi 2660 Jun 16 18:39 2inch_LCD_test.py
```

(/wiki/File:LCD_rpi_python_examples.png)

Test programs for all screens can be viewed, sorted by size:

0inch96_LCD_test.py: 0.96inch LCD test program
 1inch14_LCD_test.py: 1.14inch LCD test program
 1inch28_LCD_test.py: 1.28inch LCD test program
 1inch3_LCD_test.py: 1.3inch LCD test program
 1inch47_LCD_test.py: 1.47inch LCD test program
 1inch54_LCD_test.py: 1.54inchLCD test program

1inch8_LCD_test.py: 1.8inch LCD test program

2inch_LCD_test.py: 2inch LCD test program

2inch4_LCD_test.py: 2inch4 LCD test program

- Just run the program corresponding to the screen, the program supports python2/3.

```
# python2
sudo python 0inch96_LCD_test.py
sudo python 1inch14_LCD_test.py
sudo python 1inch28_LCD_test.py
sudo python 1inch3_LCD_test.py
sudo python 1inch47_LCD_test.py
sudo python 1inch54_LCD_test.py
sudo python 1inch8_LCD_test.py
sudo python 2inch_LCD_test.py
sudo python 2inch4_LCD_test.py
# python3
sudo python3 0inch96_LCD_test.py
sudo python3 1inch14_LCD_test.py
sudo python3 1inch28_LCD_test.py
sudo python3 1inch3_LCD_test.py
sudo python3 1inch47_LCD_test.py
sudo python3 1inch54_LCD_test.py
sudo python3 1inch8_LCD_test.py
sudo python3 2inch_LCD_test.py
sudo python3 2inch4_LCD_test.py
```

FBCP Porting

PS: FBCP is currently not compatible with the Raspberry Pi bookworm system, and the bullseye system is recommended.

Framebuffer uses a video output device to drive a video display device from a memory buffer containing complete frame data. Simply put, a memory area is used to store the display content, and the display content can be changed by changing the data in the

memory.

There is an open source project on Git Hub: fbcp-ili9341. Compared with other fbcp projects, this project uses partial refresh and DMA to achieve a speed of up to 60fps.

Download Drivers

```
sudo apt-get install cmake -y
cd ~
wget https://files.waveshare.com/upload/1/18/Waveshare_fbcp.zip
unzip Waveshare_fbcp.zip
cd Waveshare_fbcp/
sudo chmod +x ./shell/*
```

Method 1: Use a script (recommended)

Here we have written several scripts that allow users to quickly use fbcp and run corresponding commands according to their own screen.

If you use a script and do not need to modify it, you can ignore the second method below.

Note: The script will replace the corresponding /boot/config.txt and /etc/rc.local and restart, if the user needs, please back up the relevant files in advance.

```
#0.96inch LCD Module  
sudo ./shell/waveshare-0inch96  
#1.14inch LCD Module  
sudo ./shell/waveshare-1inch14  
#1.3inch LCD Module  
sudo ./shell/waveshare-1inch3  
#1.44inch LCD Module  
sudo ./shell/waveshare-1inch44  
#1.54inch LCD Module  
sudo ./shell/waveshare-1inch54  
#1.8inch LCD Module  
sudo ./shell/waveshare-1inch8  
#2inch LCD Module  
sudo ./shell/waveshare-2inch  
#2.4inch LCD Module  
sudo ./shell/waveshare-2inch4
```


Method 2: Manual Configuration

Environment Configuration

Raspberry Pi's vc4-kms-v3d will cause fbcp to fail, so we need to close vc4-kms-v3d before installing it in fbcp.

```
sudo nano /boot/config.txt
```

Just block the statement corresponding to the picture below.

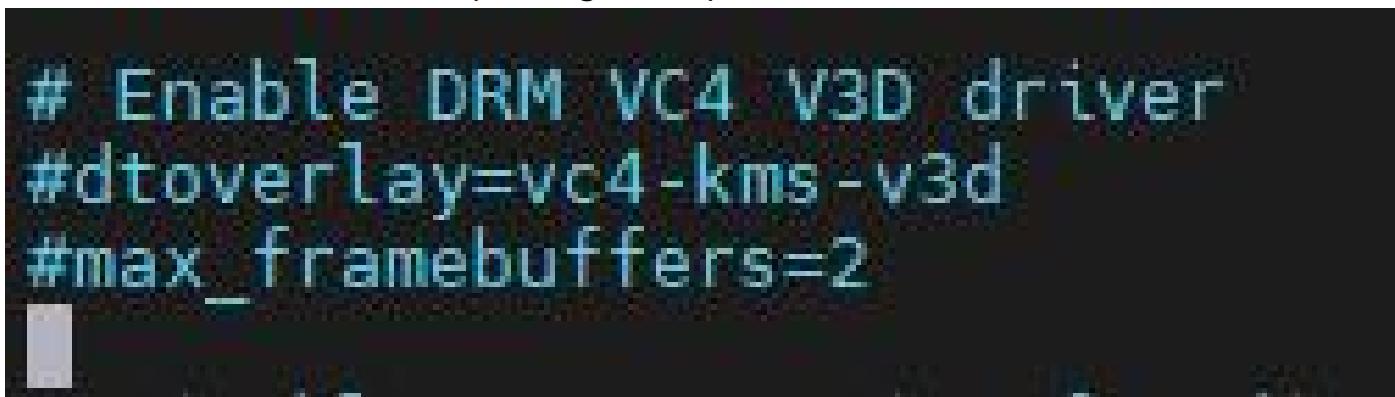

(/wiki/File:FBCP_CLOSE.jpg)

A reboot is then required.

```
sudo reboot
```

Compile and run

```
mkdir build  
cd build  
cmake [options] ..  
sudo make -j  
sudo ./fbcp
```

Replace it by yourself according to the LCD Module you use, above cmake [options] ..

```
#0.96inch LCD Module  
sudo cmake -DSPI_BUS_CLOCK_DIVISOR=20 -DWAVESHARE_0INCH96_LCD=ON -DBACKLIGHT_CONTROL=ON -DSTATISTICS=0 ..  
#1.14inch LCD Module  
sudo cmake -DSPI_BUS_CLOCK_DIVISOR=20 -DWAVESHARE_1INCH14_LCD=ON -DBACKLIGHT_CONTROL=ON -DSTATISTICS=0 ..  
#1.3inch LCD Module  
sudo cmake -DSPI_BUS_CLOCK_DIVISOR=20 -DWAVESHARE_1INCH3_LCD=ON -DBACKLIGHT_CONTROL=ON -DSTATISTICS=0 ..  
#1.54inch LCD Module  
sudo cmake -DSPI_BUS_CLOCK_DIVISOR=20 -DWAVESHARE_1INCH54_LCD=ON -DBACKLIGHT_CONTROL=ON -DSTATISTICS=0 ..  
#1.8inch LCD Module  
sudo cmake -DSPI_BUS_CLOCK_DIVISOR=20 -DWAVESHARE_1INCH8_LCD=ON -DBACKLIGHT_CONTROL=ON -DSTATISTICS=0 ..  
#2inch LCD Module  
sudo cmake -DSPI_BUS_CLOCK_DIVISOR=20 -DWAVESHARE_2INCH_LCD=ON -DBACKLIGHT_CONTROL=ON -DSTATISTICS=0 ..  
#2.4inch LCD Module  
sudo cmake -DSPI_BUS_CLOCK_DIVISOR=20 -DWAVESHARE_2INCH4_LCD=ON -DBACKLIGHT_CONTROL=ON -DSTATISTICS=0 ..
```

Set up to start automatically

```
sudo cp ~/Waveshare_fbcp/build/fbcp /usr/local/bin/fbcp  
sudo nano /etc/rc.local
```

Add `fbcp&`
before `exit 0`.
Note that you
must add "&"
to run in the
background.

Otherwise, the
system may not be able to start.

```
# Print the IP address
_IP=$(hostname -I) || true
if [ "$_IP" ]; then
    printf "My IP address is %s\n" "$_IP"
fi

fbcp&
exit 0
```

(/wiki/File:1in3_lcd_fb5.png)

Set the Display Resolution

Set the user interface display size in the `/boot/config.txt` file.

```
sudo nano /boot/config.txt
```

Then add the following lines at the end of the `config.txt`.

```
hdmi_force_hotplug=1
hdmi_cvt=[options]
hdmi_group=2
hdmi_mode=1
hdmi_mode=87
display_rotate=0
```

Replace the above `hdmi_cvt=[options]` according to the LCD Module you are using.

```
#2.4inchinch LCD Module & 2inchinch LCD Module
hdmi_cvt=640 480 60 1 0 0 0

#1.8inch LCD Module
hdmi_cvt=400 300 60 1 0 0 0

#1.3inch LCD Module & 1.54inch LCD Module
hdmi_cvt=300 300 60 1 0 0 0

#1.14inch LCD Module
hdmi_cvt=300 170 60 1 0 0 0

#0.96inch LCD Module
hdmi_cvt=300 150 60 1 0 0 0
```


Note: for Pi4B, you need to comment out [pi4] sentences, and modify them as shown below:

```
[pi4]
# Enable DRM VC4 V3D driver on top of the dispmanx display stack
#dtoverlay=vc4-fkms-v3d
#max_framebuffers=2
```

And then reboot the system:

```
sudo reboot
```

After rebooting the system, the Raspberry Pi OS user interface will be displayed.

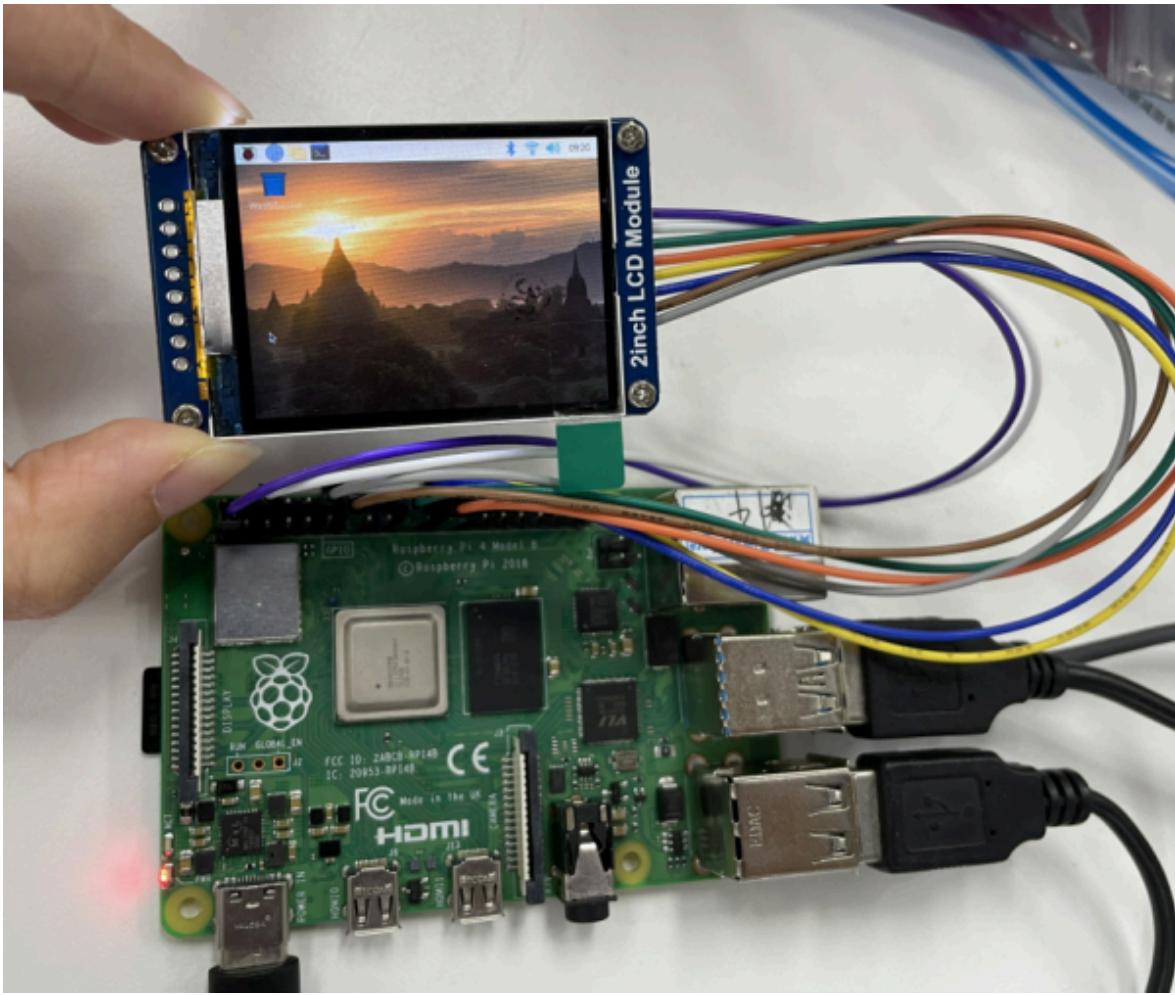

(/wiki/File:2inch_LCD_Module_fbcp02.png)

API Description

The RaspberryPi series can share a set of programs, because they are all embedded systems, and the compatibility is relatively strong.

The program is divided into bottom-layer hardware interface, middle-layer LCD screen driver, and upper-layer application;

C

Hardware Interface

We have carried out the low-level encapsulation, if you need to know the internal implementation can go to the corresponding directory to check, for the reason the hardware platform and the internal implementation are different.

You can open DEV_Config.c(h) to see definitions, which in the directory RaspberryPi\c\lib\Config.

1. There are three ways for C to drive: BCM2835 library, WiringPi library, and Dev library respectively
2. We use Dev libraries by default. If you need to change to BCM2835 or WiringPi libraries, please open RaspberryPi\c\Makefile and modify lines 13-15 as follows:

```

13  USELIB = USE_BCM2835_LIB
14  USELIB = USE_WIRINGPI_LIB
15  USELIB = USE_DEV_LIB
16  DEBUG = -D $(USELIB)
17  ifeq ($(USELIB), USE_BCM2835_LIB)
18      LIB = -l bcm2835 -lm
19  else ifeq ($(USELIB), USE_WIRINGPI_LIB)
20      LIB = -lwiringPi -lm
21  else ifeq ($(USELIB), USE_DEV_LIB)
22      LIB = -lpthread -lm
23 endif

```

(/wiki/File:RPI_open_spi1.png)

- Data type:

```

#define UBYTE     uint8_t
#define UWORLD    uint16_t
#define UDOUBLE   uint32_t

```

- Module initialization and exit processing.

```

void DEV_Module_Init(void);
void DEV_Module_Exit(void);

```

Note:
Here is some GPIO processing before and after using the LCD screen.

- GPIO read and write:

```

void    DEV_Digital_Write(UWORD Pin, UBYTE Value);
UBYTE   DEV_Digital_Read(UWORD Pin);

```

- SPI write data:

```
void DEV_SPI_WriteByte(UBYTE Value);
```

Upper application

If you need to draw pictures or display Chinese and English characters, we provide some basic functions here about some graphics processing in the directory RaspberryPi\c\lib\GUI\GUI_Paint.c(h).

名称	修改日期	类型	大小
GUI_BMP.c	2020/6/8 14:59	C 文件	5 KB
GUI_BMP.h	2020/6/5 10:58	H 文件	3 KB
GUI_Paint.c	2020/6/16 17:18	C 文件	31 KB
GUI_Paint.h	2020/6/16 17:23	H 文件	6 KB

(/wiki/File:LCD_rpi_GUI.png)

The fonts can be found in RaspberryPi\c\lib\Fonts directory.

名称	修改日期	类型	大小
font8.c	2020/5/20 11:58	C 文件	18 KB
font12.c	2020/5/20 11:58	C 文件	27 KB
font12CN.c	2020/6/5 18:57	C 文件	6 KB
font16.c	2020/5/20 11:58	C 文件	49 KB
font20.c	2020/5/20 11:58	C 文件	65 KB
font24.c	2020/5/20 11:58	C 文件	97 KB
font24CN.c	2020/6/5 19:01	C 文件	28 KB
fonts.h	2020/5/20 11:58	H 文件	4 KB

(/wiki/File:RPI_open_spi3.png)

- New Image Properties: Create a new image buffer, this property includes the image buffer name, width, height, flip Angle, and color.

```
void Paint_NewImage(UBYTE *image, UWORLD Width, UWORLD Height, UWORLD Rotate, UWORLD Color)
```

Parameters:

 Image: the name of the image buffer, which is actually a pointer to the first address of the image buffer;
 Width: image buffer Width;
 Height: the Height of the image buffer;
 Rotate: Indicates the rotation Angle of an image
 Color: the initial Color of the image;


- Select image buffer: The purpose of the selection is that you can create multiple image attributes, there can be multiple images buffer, you can select each image you create.

```
void Paint_SelectImage(UBYTE *image)
```

Parameters:

Image: the name of the image buffer, which is actually a pointer to the first address of the image buffer;

- Image Rotation: Set the rotation Angle of the selected image, preferably after Paint_SelectImage(), you can choose to rotate 0, 90, 180, 270.

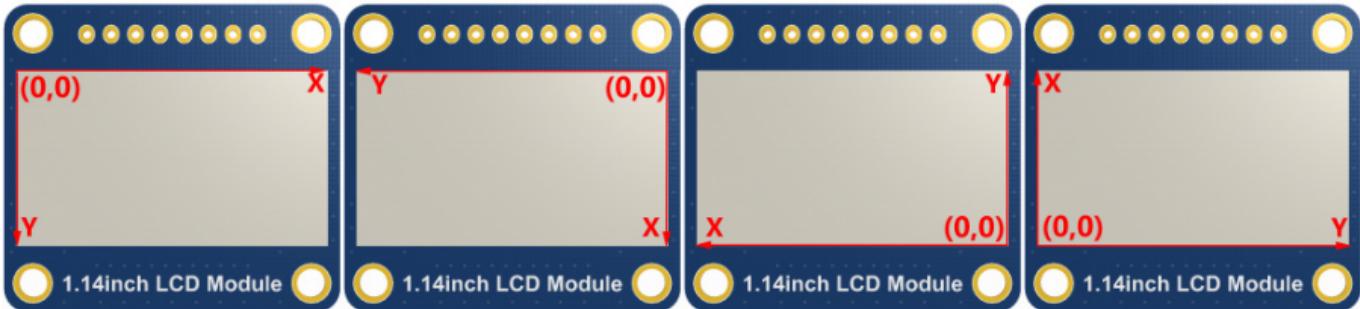

(/wiki/File:Rotation-lcd.png)

```
void Paint_SetRotate(UWORD Rotate)
```

Parameters:

Rotate: ROTATE_0, ROTATE_90, ROTATE_180, and ROTATE_270 correspond to 0, 90, 180, and 270 degrees.

- Image mirror flip: Set the mirror flip of the selected image. You can choose no mirror, horizontal mirror, vertical mirror, or image center mirror.

```
void Paint_SetMirroring(UBYTE mirror)
```

Parameters:

Mirror: indicates the image mirroring mode. MIRROR_NONE, MIRROR_HORIZONTAL, MIRROR_VERTICAL, MIRROR_ORIGIN correspond to no mirror, horizontal mirror, vertical mirror, and image center mirror respectively.

- Set points of the display position and color in the buffer: here is the core GUI function, processing points display position and color in the buffer.

```
void Paint_SetPixel(UWORD Xpoint, UWORD Ypoint, UWORD Color)
```

Parameters:

Xpoint: the X position of a point in the image buffer

Ypoint: Y position of a point in the image buffer

Color: indicates the Color of the dot

- Image buffer fill color: Fills the image buffer with a color, usually used to flash the screen into blank.

```
void Paint_Clear(UWORD Color)
```

Parameters:

Color: fill Color

- The fill color of a certain window in the image buffer: the image buffer part of the window filled with a certain color, usually used to refresh the screen into blank, often used for time display, refresh the last second of the screen.

```
void Paint_ClearWindows(UWORD Xstart, UWORD Ystart, UWORD Xend, UWORD Yend, UWORD Color)
```

Parameters:

Xstart: the x-starting coordinate of the window

Ystart: the y-starting coordinate of the window

Xend: the x-end coordinate of the window

Yend: the y-end coordinate of the window

Color: fill Color

- Draw point: In the image buffer, draw points on (Xpoint, Ypoint), you can choose the color, the size of the point, the style of the point.

```
void Paint_DrawPoint(UWORD Xpoint, UWORD Ypoint, UWORD Color, DOT_PIXEL Dot_Pixel, DOT_STYLE Dot_Style)
```

Parameters:

Xpoint: indicates the X coordinate of a point.

Ypoint: indicates the Y coordinate of a point.

Color: fill Color

Dot_Pixel: The size of the dot, the demo provides 8 size pointss by default.

```
typedef enum {
    DOT_PIXEL_1X1 = 1,      // 1 x 1
    DOT_PIXEL_2X2 ,
    DOT_PIXEL_3X3 ,
    DOT_PIXEL_4X4 ,
    DOT_PIXEL_5X5 ,
    DOT_PIXEL_6X6 ,
    DOT_PIXEL_7X7 ,
    DOT_PIXEL_8X8 ,
} DOT_PIXEL;
```

Dot_Style: the size of a point that expands from the center of the point or from the bottom left corner of the point to the right and up.

```
typedef enum {
    DOT_FILL_AROUND = 1,
    DOT_FILL_RIGHTUP,
} DOT_STYLE;
```

- Draw line: In the image buffer, draw line from (Xstart, Ystart) to (Xend, Yend), you can choose the color, the width and the style of the line.

```
void Paint_DrawLine(UWORD Xstart, UWORD Ystart, UWORD Xend, UWORD Yend, UWORD Color, LINE_STYLE Line_Style , LINE_STYLE Line_Style)
```

Parameters:

- Xstart: the x-starting coordinate of a line
- Ystart: the y-starting coordinate of the a line
- Xend: the x-end coordinate of a line
- Yend: the y-end coordinate of a line
- Color: fill Color
- Line_width: The width of the line, the demo provides 8 sizes of width by default.

```
typedef enum {  
    DOT_PIXEL_1X1 = 1,      // 1 x 1  
    DOT_PIXEL_2X2 ,         // 2 X 2  
    DOT_PIXEL_3X3 ,         // 3 X 3  
    DOT_PIXEL_4X4 ,         // 4 X 4  
    DOT_PIXEL_5X5 ,         // 5 X 5  
    DOT_PIXEL_6X6 ,         // 6 X 6  
    DOT_PIXEL_7X7 ,         // 7 X 7  
    DOT_PIXEL_8X8 ,         // 8 X 8  
} DOT_PIXEL;
```

Line_Style: line style. Select whether the lines are joined in a straight or dashed way.

```
typedef enum {  
    LINE_STYLE_SOLID = 0,  
    LINE_STYLE_DOTTED,  
} LINE_STYLE;
```

- Draw rectangle: In the image buffer, draw a rectangle from (Xstart, Ystart) to (Xend, Yend), you can choose the color, the width of the line, whether to fill the inside of the rectangle.

```
void Paint_DrawRectangle(UWORD Xstart, WORD Ystart, WORD Xend, WORD Yend, WORD Color,
WORD Line_width, DRAW_FILL Draw_Fill)
```

Parameters:

- Xstart: the starting X coordinate of the rectangle
- Ystart: the starting Y coordinate of the rectangle
- Xend: the x-end coordinate of the rectangle
- Yend: the y-end coordinate of the rectangle
- Color: fill Color
- Line_width: The width of the four sides of a rectangle. And the demo provides 8 sizes of width by default.

```
typedef enum {
    DOT_PIXEL_1X1 = 1,      // 1 x 1
    DOT_PIXEL_2X2 ,         // 2 x 2
    DOT_PIXEL_3X3 ,         // 3 x 3
    DOT_PIXEL_4X4 ,         // 4 x 4
    DOT_PIXEL_5X5 ,         // 5 x 5
    DOT_PIXEL_6X6 ,         // 6 x 6
    DOT_PIXEL_7X7 ,         // 7 x 7
    DOT_PIXEL_8X8 ,         // 8 x 8
} DOT_PIXEL;
```

Draw_Fill: Fill, whether to fill the inside of the rectangle

```
typedef enum {
    DRAW_FILL_EMPTY = 0,
    DRAW_FILL_FULL,
} DRAW_FILL;
```

- Draw circle: In the image buffer, draw a circle of Radius with (X_Center Y_Center) as the center. You can choose the color, the width of the line, and whether to fill the inside of the circle.

```
void Paint_DrawCircle(UWORD X_Center, UWORD Y_Center, UWORD Radius, UWORD Color, DOT_PIXEL Line_width, DRAW_FILL Draw_Fill)
Parameters:
    X_Center: the x-coordinate of the center of the circle
    Y_Center: the y-coordinate of the center of the circle
    Radius: indicates the Radius of a circle
    Color: fill Color
    Line_width: The width of the arc, with a default of 8 widths
    typedef enum {
        DOT_PIXEL_1X1 = 1,      // 1 x 1
        DOT_PIXEL_2X2 ,         // 2 x 2
        DOT_PIXEL_3X3 ,         // 3 x 3
        DOT_PIXEL_4X4 ,         // 4 x 4
        DOT_PIXEL_5X5 ,         // 5 x 5
        DOT_PIXEL_6X6 ,         // 6 x 6
        DOT_PIXEL_7X7 ,         // 7 x 7
        DOT_PIXEL_8X8 ,         // 8 x 8
    } DOT_PIXEL;
    Draw_Fill: fill, whether to fill the inside of the circle
    typedef enum {
        DRAW_FILL_EMPTY = 0,
        DRAW_FILL_FULL,
    } DRAW_FILL;
```

- Write Ascii character: In the image buffer, use (Xstart Ystart) as the left vertex, write an Ascii character, you can select Ascii visual character library, font foreground color, font background color.

```
void Paint_DrawChar(UWORD Xstart, UWORD Ystart, const char Ascii_Char, sFONT* Font, UWORD Color_Foreground, UWORD Color_Background)
Parameters:
    Xstart: the x-coordinate of the left vertex of a character
    Ystart: the Y-coordinate of the left vertex of a character
    Ascii_Char: indicates the Ascii character
    Font: Ascii visual character library, in the Fonts folder the demo provides the following Fonts:
        Font8: 5*8 font
        Font12: 7*12 font
        Font16: 11*16 font
        Font20: 14*20 font
        Font24: 17*24 font
    Color_Foreground: Font color
    Color_Background: indicates the background color
```

- Write English string: In the image buffer, use (Xstart Ystart) as the left vertex, write a string of English characters, you can choose Ascii visual character library, font foreground color, font background color.

```
void Paint_DrawString_EN(UWORD Xstart, UWORLD Ystart, const char * pString, sFONT* Font, UWORD Color_Foreground, UWORLD Color_Background)
```

Parameters:

Xstart: the x-coordinate of the left vertex of a character

Ystart: the Y coordinate of the font's left vertex

PString: string, string is a pointer

Font: Ascii visual character library, in the Fonts folder the demo provides the following Fonts:

Font8: 5*8 font

Font12: 7*12 font

Font16: 11*16 font

Font20: 14*20 font

Font24: 17*24 font

Color_Foreground: Font color

Color_Background: indicates the background color

- Write Chinese string: in the image buffer, use (Xstart Ystart) as the left vertex, write a string of Chinese characters, you can choose character font, font foreground color, and font background color of the GB2312 encoding.

```
void Paint_DrawString_CN(UWORD Xstart, UWORLD Ystart, const char * pString, cFONT* font, UWORD Color_Foreground, UWORLD Color_Background)
```

Parameters:

Xstart: the x-coordinate of the left vertex of a character

Ystart: the Y coordinate of the font's left vertex

PString: string, string is a pointer

Font: GB2312 encoding character Font library, in the Fonts folder the demo provides the following Fonts:

Font12CN: ASCII font 11*21, Chinese font 16*21

Font24CN: ASCII font24 *41, Chinese font 32*41

Color_Foreground: Font color

Color_Background: indicates the background color

- Write numbers: In the image buffer, use (Xstart Ystart) as the left vertex, write a string of numbers, you can choose Ascii visual character library, font foreground color, font background color.

```
void Paint_DrawNum(UWORD Xpoint, UWORD Ypoint, double Nummber, sFONT* Font, UWORD Digit,
UWORD Color_Foreground, UWORD Color_Background)
```

Parameters:

Xpoint: the x-coordinate of the left vertex of a character

Ypoint: the Y coordinate of the left vertex of the font

Nummber: indicates the number displayed, which can be a decimal

Digit: It's a decimal number

Font: Ascii visual character library, in the Fonts folder the demo provides the following Fonts:

Font8: 5*8 font

Font12: 7*12 font

Font16: 11*16 font

Font20: 14*20 font

Font24: 17*24 font

Color_Foreground: Font color

Color_Background: indicates the background color

- Display time: in the image buffer, use (Xstart Ystart) as the left vertex, display time, you can choose Ascii visual character font, font foreground color, font background color.

```
void Paint_DrawTime(UWORD Xstart, UWORD Ystart, PAINT_TIME *pTime, sFONT* Font, UWORD Col
or_Background, UWORD Color_Foreground)
```

Parameters:

Xstart: the x-coordinate of the left vertex of a character

Ystart: the Y coordinate of the font's left vertex

PTime: display time, A time structure is defined here, as long as the hours, minutes, and seconds are passed to the parameters;

Font: Ascii visual character library, in the Fonts folder the demo provides the following Fonts:

Font8: 5*8 font

Font12: 7*12 font

Font16: 11*16 font

Font20: 14*20 font

Font24: 17*24 font

Color_Foreground: Font color

Color_Background: indicates the background color

- Read the local bmp image and write it to the cache.

For Linux operating systems such as Raspberry Pi, you can read and write pictures. For Raspberry Pi, in the directory: RaspberryPi\c\lib\GUI\GUI_BMPfile.c(h).

```
UBYTE GUI_ReadBmp(const char *path, UWORLD Xstart, UWORLD Ystart)
parameter:
    path: the relative path of the BMP image
    Xstart: The X coordinate of the left vertex of the image, generally 0 is passed by default
    Ystart: The Y coordinate of the left vertex of the picture, generally 0 by default
```

Testing Code for Users

For Raspberry Pi, in the directory: RaspberryPi\c\examples, for all the test code;

 image.c	2020/12/8 16:58	C Source File	86 KB
 image.h	2020/12/8 16:59	C/C++ Header F...	1 KB
 LCD_0in96_test.c	2020/10/29 10:02	C Source File	3 KB
 LCD_1in3_test.c	2020/10/29 10:02	C Source File	3 KB
 LCD_1in8_test.c	2020/10/29 10:02	C Source File	3 KB
 LCD_1in14_test.c	2020/10/29 10:02	C Source File	3 KB
 LCD_1in28_test.c	2020/12/21 19:25	C Source File	3 KB
 LCD_1in54_test.c	2020/10/29 10:02	C Source File	3 KB
 LCD_2in_test.c	2020/10/29 10:02	C Source File	3 KB
 LCD_2in4_test.c	2020/10/29 10:02	C Source File	3 KB
 main.c	2020/12/9 18:19	C Source File	1 KB
 test.h	2020/12/9 19:38	C/C++ Header F...	1 KB

(/wiki/File:LCD_rpi_c_examples%26128.png)

If you need to run the 0.96-inch LCD test program, you need to add 0.96 as a parameter when running the main demo.

Re-execute in Linux command mode as follows:

```
make clean
make
sudo ./main 0.96
```

Python (for Raspberry Pi)

Works with python and python3.

For python, his calls are not as complicated as C.

Raspberry Pi: RaspberryPi\python\lib\

名称	修改日期	类型	大小
init.py	2020/5/21 15:39	Python File	0 KB
LCD_0inch96.py	2020/6/16 17:41	Python File	6 KB
LCD_1inch3.py	2020/6/16 17:41	Python File	5 KB
LCD_1inch8.py	2020/6/16 17:41	Python File	9 KB
LCD_1inch14.py	2020/6/16 17:41	Python File	5 KB
LCD_1inch54.py	2020/6/16 17:41	Python File	5 KB
LCD_2inch.py	2020/6/8 14:17	Python File	6 KB
lcdconfig.py	2020/6/8 9:27	Python File	4 KB

(/wiki/File:LCD_rpi_python_lib.png)

Lcdconfig.py

- Module initialization and exit processing.

```
def module_init()
def module_exit()

Note:
1. Here is some GPIO processing before and after using the LCD screen.
2. The module_init() function is automatically called in the INIT () initializer on the LCD, but the module_exit() function needs to be called by itself.
```

- GPIO read and write:

```
def digital_write(pin, value)
def digital_read(pin)
```

- SPI write data.

```
def spi_writebyte(data)
```

- xxx_LCD_test.py (xxx indicates the size, if it is a 0.96inch LCD, it is 0inch96_LCD_test.py, and so on)

python is in the following directory:

Raspberry Pi: RaspberryPi\python\examples\

名称	修改日期	类型	大小
0inch96_LCD_test.py	2020/6/16 17:59	Python File	3 KB
1inch3_LCD_test.py	2020/6/16 18:33	Python File	3 KB
1inch8_LCD_test.py	2020/6/16 18:34	Python File	3 KB
1inch14_LCD_test.py	2020/6/16 18:34	Python File	3 KB
1inch54_LCD_test.py	2020/6/16 17:58	Python File	3 KB
2inch_LCD_test.py	2020/6/16 18:39	Python File	3 KB

(/wiki/File:LCD_rpi_python_examples2.png)

If your python version is python2 and you need to run the 0.96inch LCD test program, re-execute it as follows in linux command mode:

```
sudo python 0inch96_LCD_test.py
```

If your python version is python3 and you need to run the 0.96inch LCD test program, re-execute the following in linux command mode:


```
sudo python3 0inch96_LCD_test.py
```

About Rotation Settings

If you need to set the screen rotation in the python program, you can set it by the statement `im_r= image1.rotate(270)`.

```
im_r= image1.rotate(270)
```

Rotation effect, take 1.54 as an example, the order is 0°, 90°, 180°, 270°

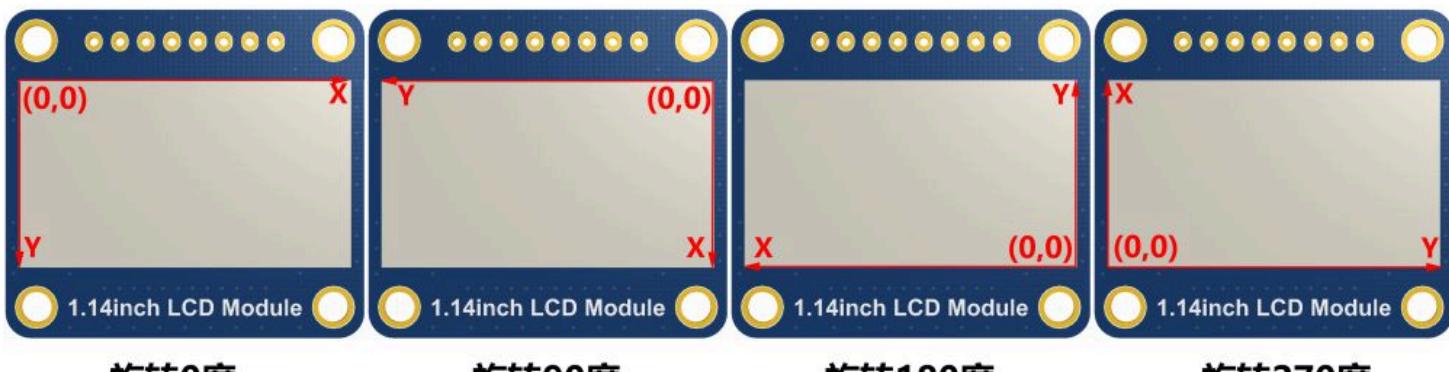

(/wiki/File:LCD_Rotate.jpg)

GUI Functions

Python has an image library PIL official library link (<http://effbot.org/imagingbook>), it does not need to write code from the logical layer like C and can directly call to the image library for image processing. The following will take a 1.54-inch LCD as an example, we provide a brief description of the demo.

- It needs to use the image library and install the library.

```
sudo apt-get install python3-pil
```

And then import the library

```
from PIL import Image, ImageDraw, ImageFont.
```

Among them, Image is the basic library, ImageDraw is the drawing function, and ImageFont is the text function.

- Define an image cache to facilitate drawing, writing, and other functions on the picture.

```
image1 = Image.new("RGB", (disp.width, disp.height), "WHITE")
```

The first parameter defines the color depth of the image, which is defined as "1" to indicate the bitmap of one-bit depth. The second parameter is a tuple that defines the width and height of the image. The third parameter defines the default color of the buffer, which is defined as "WHITE".

- Create a drawing object based on Image1 on which all drawing operations will be performed on here.

```
draw = ImageDraw.Draw(image1)
```

- Draw a line.

```
draw.line([(20, 10),(70, 60)], fill = "RED",width = 1)
```

The first parameter is a four-element tuple starting at (0, 0) and ending at (127,0). Draw a line. Fill = "0" means the color of the line is white.

- Draw a rectangle.

```
draw.rectangle([(20,10),(70,60)],fill = "WHITE",outline="BLACK")
```

The first argument is a tuple of four elements. (20,10) is the coordinate value in the upper left corner of the rectangle, and (70,60) is the coordinate value in the lower right corner of the rectangle. Fill = " WHITE" means BLACK inside, and outline="BLACK" means the color of the outline is black.

- Draw a circle.

```
draw.arc((150,15,190,55),0, 360, fill =(0,255,0))
```

Draw an inscribed circle in the square, the first parameter is a tuple of 4 elements, with (150, 15) as the upper left corner vertex of the square, (190, 55) as the lower right corner vertex of the square, specifying the level median line of the rectangular frame is the angle of 0 degrees, the second parameter indicates the starting angle, the third parameter indicates the ending angle, and fill = 0 indicates that the color of the line is white. If the figure is not square according to the coordination, you will get an ellipse.

Besides the arc function, you can also use the chord function for drawing a solid circle.

```
draw.ellipse((150,65,190,105), fill = 0)
```

The first parameter is the coordination of the enclosing rectangle. The second and third parameters are the beginning and end degrees of the circle. The fourth parameter is the fill color of the circle.

- Character.

The ImageFont module needs to be imported and instantiated:

```
Font1 = ImageFont.truetype("../Font/Font01.ttf", 25)
Font2 = ImageFont.truetype("../Font/Font01.ttf", 35)
Font3 = ImageFont.truetype("../Font/Font02.ttf", 32)
```

You can use the fonts of Windows or other fonts which is in ttc format..

Note: Each character library contains different characters; If some characters cannot be displayed, it is recommended that you can refer to the encoding set ro used. To draw English characters, you can directly use the fonts; for Chinese characters, you need to add a symbol u:

```
draw.text((40, 50), 'WaveShare', fill = (128,255,128),font=Font2)
text= u"微雪电子"
draw.text((74, 150),text, fill = "WHITE",font=Font3)
```

The first parameter is a tuple of 2 elements, with (40, 50) as the left vertex, the font is Font2, and the fill is the font color. You can directly make fill = "WHITE", because the regular color value is already defined Well, of course, you can also use fill = (128,255,128), the parentheses correspond to the values of the three RGB colors so that you can precisely control the color you want. The second sentence shows Waveshare Electronics, using Font3, the font color is white.

- read local image

```
image = Image.open('../pic/LCD_1inch28.jpg')
```

The parameter is the image path.

- Other functions.

For more information, you can refer to <http://effbot.org/imagingbook>
<http://effbot.org/imagingbook> pil

Working with STM32

Software description

- The demo is developed based on the HAL library. Download the demo, find the STM32 program file directory, and open the LCD_demo.uvprojx in the STM32\STM32F103RBT6\MDK-ARM directory to check the program.

名称	修改日期	类型	大小
Drivers	2020/6/17 17:59	文件夹	
Inc	2020/6/17 17:59	文件夹	
MDK-ARM	2020/6/18 16:37	文件夹	
Src	2020/6/17 17:59	文件夹	
User	2020/6/17 17:59	文件夹	
.mxproject	2020/6/8 17:22	MXPROJECT 文件	7 KB
LCD_demo.ioc	2020/6/8 17:21	STM32CubeMX	5 KB

(/wiki/File:LCD_STM32_CODE1.png)

- Open main.c, you can see all the test programs, remove the comments in front of the test programs on the corresponding screen, and recompile and download.

```

89  /* USER CODE BEGIN SysInit */
90
91  /* USER CODE END SysInit */
92
93  /* Initialize all configured peripherals */
94  MX_GPIO_Init();
95  MX_SPI1_Init();
96  MX_TIM3_Init();
97  MX_USART2_UART_Init();
98  /* USER CODE BEGIN 2 */
99
100
101
102
103
104
105
106
107
108 //LCD_0in96_test();
109
110 //LCD_1in14_test();
111
112 //LCD_1in28_test(); <-- This line is highlighted in green
113
114 //LCD_1in3_test();
115
116 //LCD_1in54_test();
117
118 //LCD_1in8_test();
119
120 //LCD_2in1_test();
121
122 //LCD_2in4_test();
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139 // USER CODE END 2
140
141 /* Infinite loop */
142 /* USER CODE BEGIN WHILE */
143 while (1)
144 {
145     /* USER CODE END WHILE */
146
147     /* USER CODE BEGIN 3 */

```

(/wiki/File:LCD_STM32_CODE128.png)

LCD_0in96_test() 0.96inch LCD test program

LCD_1in14_test() 1.14inch LCD test program

LCD_1in28_test() 1.28inch LCD test program

LCD_1in3_test() 1.3 inch LCD test program
 LCD_1in54_test() 1.54inch LCD test program
 LCD_1in8_test() 1.8inch LCD test program
 LCD_2in_test() 2inch LCD test program

Program Description

Underlying hardware interface

- Data type

```
#define UBYTE      uint8_t
#define UWORLD     uint16_t
#define UDOUBLE    uint32_t
```

- Module initialization and exit processing

```
UBYTE  System_Init(void);
void   System_Exit(void);

Note:
1. Here is some GPIO processing before and after using the LCD screen.
2. After the System_Exit(void) function is used, the OLED display will be turned off;
```

- Write and read GPIO

```
void   DEV_Digital_Write(UWORD Pin, UBYTE Value);
UBYTE  DEV_Digital_Read(UWORD Pin);
```

- SPI writes data

```
UBYTE  SPI4W_Write_Byt(uint8_t value);
```

The upper application

For the screen, if you need to draw pictures, display Chinese and English characters, display pictures, etc., you can use the upper application to do, and we provide some basic functions here about some graphics processing in the directory

STM32\STM32F103RB\User\GUI_DEV\GUI_Paint.c(h)

Note: Because of the size of the internal RAM of STM32 and Arduino, the GUI is directly written to the RAM of the LCD.

名称	修改日期	类型	大小
GUI_BMP.c	2020/6/8 14:59	C 文件	5 KB
GUI_BMP.h	2020/6/5 10:58	H 文件	3 KB
GUI_Paint.c	2020/6/16 17:18	C 文件	31 KB
GUI_Paint.h	2020/6/16 17:23	H 文件	6 KB

(/wiki/File:LCD_rpi_GUI.png)

The character font GUI dependent is in the directory STM32\STM32F103RB\User\Fonts

名称	修改日期	类型	大小
font8.c	2020/5/20 11:58	C 文件	18 KB
font12.c	2020/5/20 11:58	C 文件	27 KB
font12CN.c	2020/6/5 18:57	C 文件	6 KB
font16.c	2020/5/20 11:58	C 文件	49 KB
font20.c	2020/5/20 11:58	C 文件	65 KB
font24.c	2020/5/20 11:58	C 文件	97 KB
font24CN.c	2020/6/5 19:01	C 文件	28 KB
fonts.h	2020/5/20 11:58	H 文件	4 KB

(/wiki/File:LCD_rpi_Font.png)

- New Image Properties: Create a new image property, this property includes the image buffer name, width, height, flip Angle, and color.

```
void Paint_NewImage(UWORD Width, WORD Height, WORD Rotate, WORD Color)
```

Parameters:

Width: image buffer Width;
 Height: the Height of the image buffer;
 Rotate: Indicates the rotation Angle of an image
 Color: the initial Color of the image;

- Set the clear screen function, usually call the clear function of LCD directly.

```
void Paint_SetClearFunction(void (*Clear)(UWORD));
```

parameter:

Clear: Pointer to the clear screen function used to quickly clear the screen to a certain color;

- Set the drawing pixel function

```
void Paint_SetDisplayFunction(void (*Display)(UWORD, UWORD, UWORD));
```

parameter:

Display: Pointer to the pixel drawing function, which is used to write data to the specified location in the internal RAM of the LCD;

- Select image buffer: the purpose of the selection is that you can create multiple image attributes, image buffer can exist multiple, and you can select each image you create.

```
void Paint_SelectImage(UBYTE *image)
```

Parameters:

Image: the name of the image cache, which is actually a pointer to the first address of the image buffer

- Image Rotation: Set the selected image rotation Angle, preferably after Paint_SelectImage(), you can choose to rotate 0, 90, 180, 270.

```
void Paint_SetRotate(UWORD Rotate)
```

Parameters:

Rotate: ROTATE_0, ROTATE_90, ROTATE_180, and ROTATE_270 correspond to 0, 90, 180, and 270 degrees respectively;

- Image mirror flip: Set the mirror flip of the selected image. You can choose no mirror, horizontal mirror, vertical mirror, or image center mirror.

```
void Paint_SetMirroring(UBYTE mirror)
```

Parameters:

Mirror: indicates the image mirroring mode. MIRROR_NONE, MIRROR_HORIZONTAL, MIRROR_VERTICAL, MIRROR_ORIGIN correspond to no mirror, horizontal mirror, vertical mirror, and about image center mirror respectively.

- Set points of display position and color in the buffer: here is the core GUI function, processing points display position and color in the buffer.

```
void Paint_SetPixel(UWORD Xpoint, UWORD Ypoint, UWORD Color)
```

Parameters:

Xpoint: the X position of a point in the image buffer

Ypoint: Y position of a point in the image buffer

Color: indicates the Color of the dot

- Image buffer fill color: Fills the image buffer with a color, usually used to flash the screen into blank.

```
void Paint_Clear(UWORD Color)
```

Parameters:

Color: fill Color

- Image buffer part of the window filling color: the image buffer part of the window filled with a certain color, generally as a window whitewashing function, often used for time display, whitewashing on a second

```
void Paint_ClearWindows(UWORD Xstart, UWORD Ystart, UWORD Xend, UWORD Yend, UWORD Color)
```

Parameters:

- Xstart: the x-starting coordinate of the window
- Ystart: indicates the Y starting point of the window
- Xend: the x-end coordinate of the window
- Yend: indicates the y-end coordinate of the window
- Color: fill Color

- Draw points: In the image buffer, draw points on (Xpoint, Ypoint), you can choose the color, the size of the point, and the style of the point.

```
void Paint_DrawPoint(UWORD Xpoint, UWORD Ypoint, UWORD Color, DOT_PIXEL Dot_Pixel, DOT_ST YLE Dot_Style)
```

Parameters:

- Xpoint: indicates the X coordinate of a point
- Ypoint: indicates the Y coordinate of a point
- Color: fill Color
- Dot_Pixel: The size of the dot, providing a default of eight size points

```
typedef enum {
    DOT_PIXEL_1X1      = 1,           // 1 x 1
    DOT_PIXEL_2X2,
    DOT_PIXEL_3X3,
    DOT_PIXEL_4X4,
    DOT_PIXEL_5X5,
    DOT_PIXEL_6X6,
    DOT_PIXEL_7X7,
    DOT_PIXEL_8X8,
} DOT_PIXEL;
```

Dot_Style: the size of a point that expands from the center of the point or from the bottom left corner of the point to the right and up

```
typedef enum {
    DOT_FILL_AROUND = 1,
    DOT_FILL_RIGHTUP,
} DOT_STYLE;
```

- Line drawing: In the image buffer, the line from (Xstart, Ystart) to (Xend, Yend), you can choose the color, line width, and line style.

```
void Paint_DrawLine(UWORD Xstart, UWORD Ystart, UWORD Xend, UWORD Yend, UWORD Color, LINE_STYLE Line_Style , LINE_STYLE Line_Style)
```

Parameters:

- Xstart: the x-starting coordinate of a line
- Ystart: indicates the Y starting point of a line
- Xend: x-terminus of a line
- Yend: the y-end coordinate of a line
- Color: fill Color
- Line_width: The width of the line, which provides a default of eight widths

```
typedef enum {  
    DOT_PIXEL_1X1 = 1,           // 1 x 1  
    DOT_PIXEL_2X2 ,             // 2 X 2  
    DOT_PIXEL_3X3 ,             // 3 X 3  
    DOT_PIXEL_4X4 ,             // 4 X 4  
    DOT_PIXEL_5X5 ,             // 5 X 5  
    DOT_PIXEL_6X6 ,             // 6 X 6  
    DOT_PIXEL_7X7 ,             // 7 X 7  
    DOT_PIXEL_8X8 ,             // 8 X 8  
} DOT_PIXEL;
```

Line_Style: line style. Select whether the lines are joined in a straight or dashed way

```
typedef enum {  
    LINE_STYLE_SOLID = 0,  
    LINE_STYLE_DOTTED,  
} LINE_STYLE;
```

- Draw a rectangle: In the image buffer, draw a rectangle from (Xstart, Ystart) to (Xend, Yend), you can choose the color, the width of the line, and whether to fill the inside of the rectangle.

```
void Paint_DrawRectangle(UWORD Xstart, WORD Ystart, WORD Xend, WORD Yend, WORD Color,
WORD Line_width, DRAW_FILL Draw_Fill)
```

Parameters:

- Xstart: the starting X coordinate of the rectangle
- Ystart: indicates the Y starting point of the rectangle
- Xend: X terminus of the rectangle
- Yend: specifies the y-end coordinate of the rectangle
- Color: fill Color
- Line_width: The width of the four sides of a rectangle. Default eight widths are provided

```
typedef enum {  
    DOT_PIXEL_1X1 = 1,      // 1 x 1  
    DOT_PIXEL_2X2 ,         // 2 x 2  
    DOT_PIXEL_3X3 ,         // 3 x 3  
    DOT_PIXEL_4X4 ,         // 4 x 4  
    DOT_PIXEL_5X5 ,         // 5 x 5  
    DOT_PIXEL_6X6 ,         // 6 x 6  
    DOT_PIXEL_7X7 ,         // 7 x 7  
    DOT_PIXEL_8X8 ,         // 8 x 8  
} DOT_PIXEL;
```

Draw_Fill: Fill, whether to fill the inside of the rectangle

```
typedef enum {  
    DRAW_FILL_EMPTY = 0,  
    DRAW_FILL_FULL,  
} DRAW_FILL;
```

- Draw circle: In the image buffer, draw a circle of Radius with (X_Center Y_Center) as the center. You can choose the color, the width of the line, and whether to fill the inside of the circle.

```
void Paint_DrawCircle(UWORD X_Center, UWORD Y_Center, UWORD Radius, UWORD Color, DOT_PIXEL Line_width, DRAW_FILL Draw_Fill)
Parameters:
    X_Center: the x-coordinate of the center of a circle
    Y_Center: Y coordinate of the center of a circle
    Radius: indicates the Radius of a circle
    Color: fill Color
    Line_width: The width of the arc, with a default of 8 widths
    typedef enum {
        DOT_PIXEL_1X1 = 1,           // 1 x 1
        DOT_PIXEL_2X2 ,             // 2 X 2
        DOT_PIXEL_3X3 ,             // 3 X 3
        DOT_PIXEL_4X4 ,             // 4 X 4
        DOT_PIXEL_5X5 ,             // 5 X 5
        DOT_PIXEL_6X6 ,             // 6 X 6
        DOT_PIXEL_7X7 ,             // 7 X 7
        DOT_PIXEL_8X8 ,             // 8 X 8
    } DOT_PIXEL;
    Draw_Fill: fill, whether to fill the inside of the circle
    typedef enum {
        DRAW_FILL_EMPTY = 0,
        DRAW_FILL_FULL,
    } DRAW_FILL;
```

- Write Ascii character: In the image buffer, at (Xstart Ystart) as the left vertex, write an Ascii character, you can select Ascii visual character library, font foreground color, and font background color.

```
void Paint_DrawChar(UWORD Xstart, UWORD Ystart, const char Ascii_Char, sFONT* Font, UWORD Color_Foreground, UWORD Color_Background)
Parameters:
    Xstart: the x-coordinate of the left vertex of a character
    Ystart: the Y coordinate of the font's left vertex
    Ascii_Char: indicates the Ascii character
    Font: Ascii visual character library, in the Fonts folder provides the following Font
    s:
        Font8: 5*8 font
        Font12: 7*12 font
        Font16: 11*16 font
        Font20: 14*20 font
        Font24: 17*24 font
    Color_Foreground: Font color
    Color_Background: indicates the background color
```

- Write English string: In the image buffer, use (Xstart Ystart) as the left vertex, write a string of English characters, can choose Ascii visual character library, font foreground color, and font background color.

```
void Paint_DrawString_EN(UWORD Xstart, UWORLD Ystart, const char * pString, sFONT* Font, U
WORD Color_Foreground, UWORLD Color_Background)
```

Parameters:

Xstart: the x-coordinate of the left vertex of a character

Ystart: the Y coordinate of the font's left vertex

PString: string, string is a pointer

Font: Ascii visual character library, in the Fonts folder provides the following Font
s:

Font8: 5*8 font

Font12: 7*12 font

Font16: 11*16 font

Font20: 14*20 font

Font24: 17*24 font

Color_Foreground: Font color

Color_Background: indicates the background color

- Write Chinese string: in the image buffer, use (Xstart Ystart) as the left vertex, and write a string of Chinese characters, you can choose GB2312 encoding character font, font foreground color, and font background color.

```
void Paint_DrawString_CN(UWORD Xstart, UWORLD Ystart, const char * pString, cFONT* font, U
WORD Color_Foreground, UWORLD Color_Background)
```

Parameters:

Xstart: the x-coordinate of the left vertex of a character

Ystart: the Y coordinate of the font's left vertex

PString: string, string is a pointer

Font: GB2312 encoding character Font library, in the Fonts folder provides the following Fonts:

Font12CN: ASCII font 11*21, Chinese font 16*21

Font24CN: ASCII font24 *41, Chinese font 32*41

Color_Foreground: Font color

Color_Background: indicates the background color

- Write numbers: In the image buffer, use (Xstart Ystart) as the left vertex, and write a string of numbers, you can choose Ascii visual character library, font foreground color, or font background color.

```
void Paint_DrawNum(UWORD Xpoint, UWORD Ypoint, double Nummber, sFONT* Font, UWORD Digit,  
UWORD Color_Foreground, UWORD Color_Background)
```

Parameters:

Xpoint: the x-coordinate of the left vertex of a character

Ypoint: the Y coordinate of the left vertex of the font

Nummber: indicates the number displayed, which can be a decimal

Digit: It's a decimal number

Font: Ascii visual character library, in the Fonts folder provides the following Font
s:

Font8: 5*8 font

Font12: 7*12 font

Font16: 11*16 font

Font20: 14*20 font

Font24: 17*24 font

Color_Foreground: Font color

Color_Background: indicates the background color

- Display time: in the image buffer, use (Xstart Ystart) as the left vertex, display time, you can choose Ascii visual character font, font foreground color, and font background color.

```
void Paint_DrawTime(UWORD Xstart, WORD Ystart, PAINT_TIME *pTime, sFONT* Font, WORD Color_Background, WORD Color_Foreground)
```

Parameters:

- Xstart: the x-coordinate of the left vertex of a character
- Ystart: the Y coordinate of the font's left vertex
- PTime: display time, here defined a good time structure, as long as the hour, minute and second bits of data to the parameter;
- Font: Ascii visual character library, in the Fonts folder provides the following Font s:
- Font8: 5*8 font
- Font12: 7*12 font
- Font16: 11*16 font
- Font20: 14*20 font
- Font24: 17*24 font
- Color_Foreground: Font color
- Color_Background: indicates the background color

Arduino Software Description


Note: The demos are all tested on Arduino uno. If you need other types of Arduino, you need to determine whether the connected pins are correct.

Arduino IDE Installation Steps

Arduino IDE Installation Steps (/wiki/Template:Arduino_IDE_Installation_Steps)

Run program

In the product encyclopedia interface download the program (https://files.waveshare.com/upload/e/e9/LCD_Module_code.7z), and then unzip it. The Arduino program is located at ~/Arduino/...

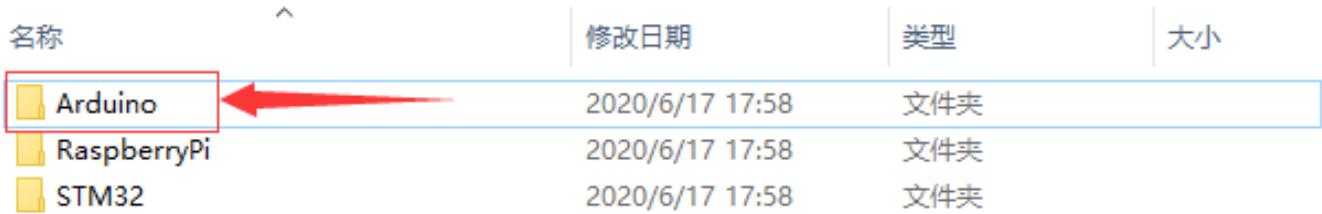

名称	修改日期	类型	大小
Arduino	2020/6/17 17:58	文件夹	
RaspberryPi	2020/6/17 17:58	文件夹	
STM32	2020/6/17 17:58	文件夹	

(/wiki/File:LCD_arduino_cede1.png)

Please select the corresponding program according to the LCD screen model to open.


名称	修改日期	类型	大小
LCD_0inch96	2021/2/3 14:44	文件夹	
LCD_1inch3	2021/2/3 14:44	文件夹	
LCD_1inch8	2021/2/3 14:44	文件夹	
LCD_1inch14	2021/2/3 14:44	文件夹	
LCD_1inch28	2021/2/3 14:44	文件夹	
LCD_1inch54	2021/2/3 14:44	文件夹	
LCD_2inch	2021/2/3 14:44	文件夹	
LCD_2inch4	2021/2/3 14:44	文件夹	

(/wiki/File:1.28inch_LCD_Arduino.png)

You can view test programs for all screen sizes, sorted by size:

For example, a 1.54-inch LCD Module. Open the LCD_1inch54 folder and run the LCD_1inch54.ino file.

Open the program, and select the development board model Arduino UNO.

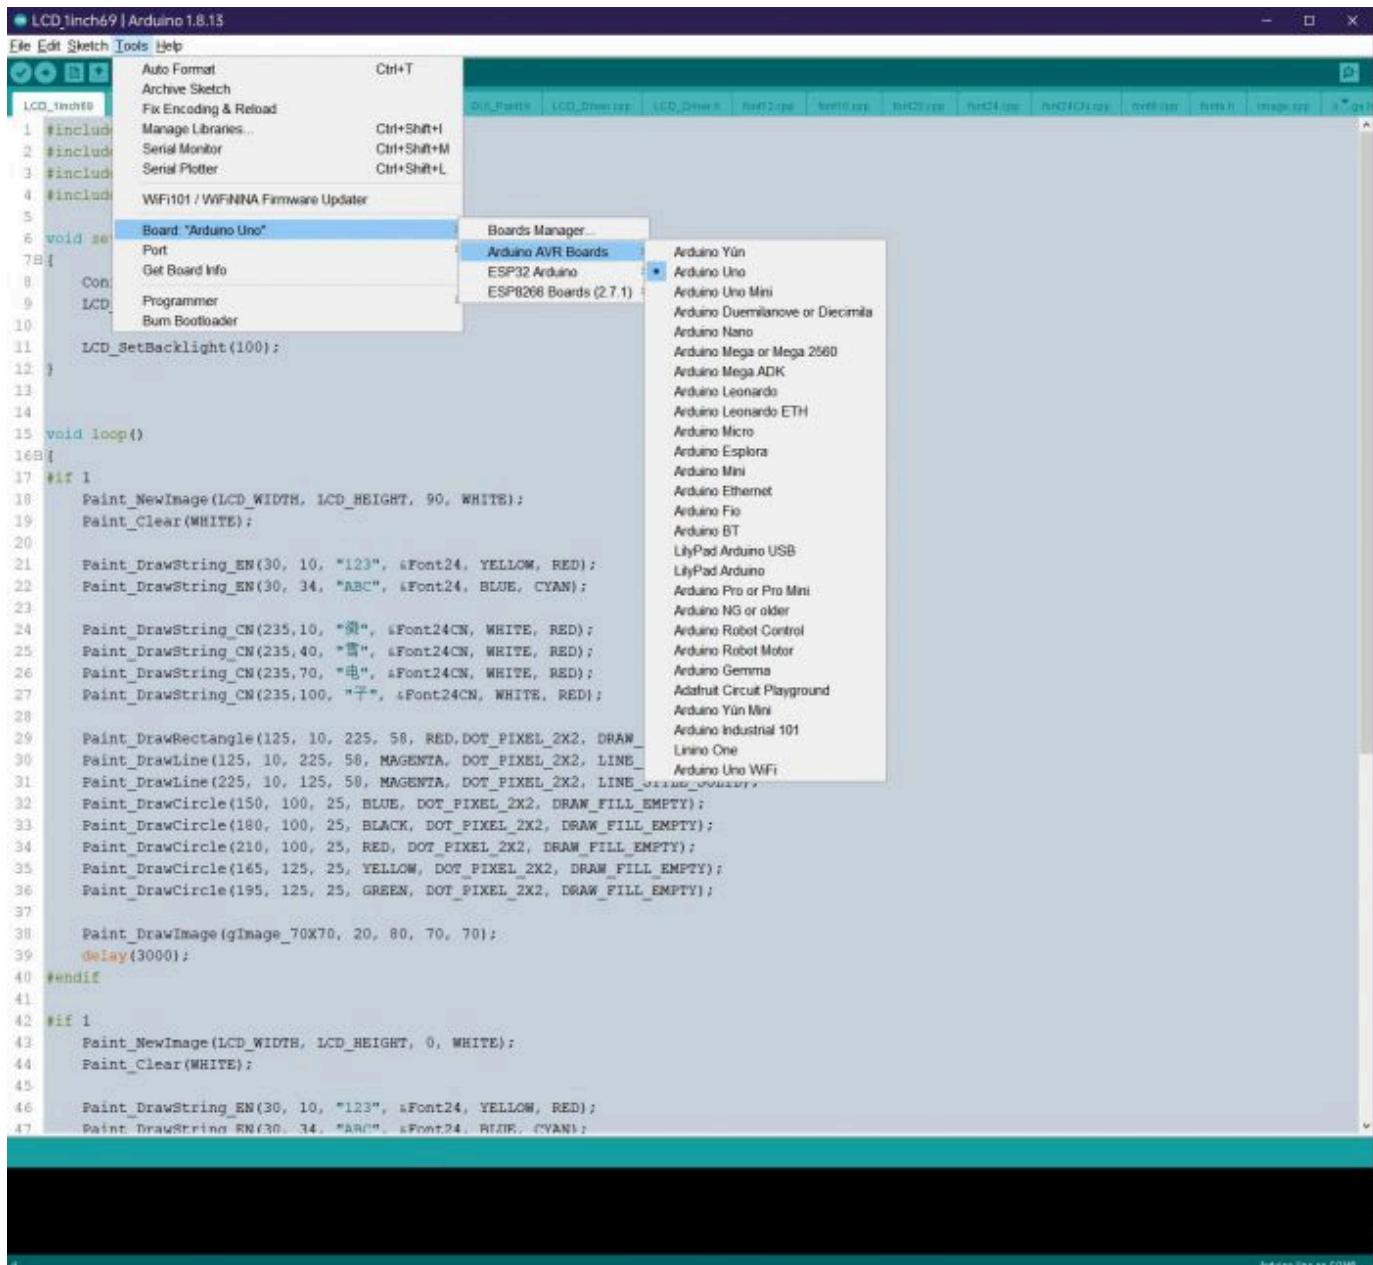

(/wiki/File:Arduino_for_1.69inch_lcd_module03.jpg)

Select the corresponding COM port.

LCD_1inch69 | Arduino 1.8.13

File Edit Sketch Tools Help



```
LCD_1inch69
1 #include <LiquidCrystal.h>
2 #include <Adafruit_GFX.h>
3 #include <Adafruit_SSD1306.h>
4 #include <WiFiNINA.h>
5
6 void setup() {
7 {
8     // LCD
9     LCD.begin(128, 64);
10    LCD.clear();
11    LCD_SetBacklight(100);
12 }
13
14 }
```

- Auto Format Ctrl+T
- Archive Sketch
- Fix Encoding & Reload
- Manage Libraries... Ctrl+Shift+I
- Serial Monitor Ctrl+Shift+M
- Serial Plotter Ctrl+Shift+L
- WiFi101 / WiFiNINA Firmware Updater
- Board: "Arduino Uno" >
- Port: "COM4" > >
- Get Board Info
- Programmer
- Burn Bootloader

GUI_Paint.h LCD_Driver.c

- Serial ports
- COM1
- COM4

(/wiki/File:Arduino_for_1.69inch_lcd_module04.jpg)

Then click to compile and download.



```

LCD_1inch54 | Arduino 1.8.12
文件 编辑 项目 工具 帮助
LCD_1inch54 DEV_Config.cpp DEV_Config.h Debug.h GUI_Paint.cpp GUI_Paint.h LCD_Driver.cpp LCD
#include <SPI.h>
#include "LCD_Driver.h"
#include "GUI_Paint.h"
#include "image.h"

void setup()
{
    Config_Init();
    LCD_Init();
    LCD_Clear(WHITE);
    LCD_SetBacklight(100);
    Paint_NewImage(LCD_WIDTH, LCD_HEIGHT, 0, WHITE);
    Paint_Clear(WHITE);
    Paint_SetRotate(180);
    Paint_DrawString_EN(30, 10, "123", &Font24, YELLOW, RED);
    Paint_DrawString_EN(30, 34, "ABC", &Font24, BLUE, CYAN);
    //Paint_DrawFloatNum (30, 58, 987.654321,3, &Font20, WHITE, BLACK);
    Paint_DrawString_CN(50,180, "微雪电子", &Font24CN,WHITE, RED);

    Paint_DrawRectangle(125, 10, 225, 58, RED, DOT_PIXEL_2X2,DRAW_FILL_EMPTY);
    Paint.DrawLine (125, 10, 225, 58, MAGENTA, DOT_PIXEL_2X2,LINE_STYLE_SOLID);
    Paint.DrawLine (225, 10, 125, 58, MAGENTA, DOT_PIXEL_2X2,LINE_STYLE_SOLID);
    Paint_DrawCircle(150,100, 25, BLUE, DOT_PIXEL_2X2,DRAW_FILL_EMPTY);
    Paint_DrawCircle(180,100, 25, BLACK, DOT_PIXEL_2X2,DRAW_FILL_EMPTY);
    Paint_DrawCircle(210,100, 25, RED, DOT_PIXEL_2X2,DRAW_FILL_EMPTY);
    Paint_DrawCircle(165,125, 25, YELLOW, DOT_PIXEL_2X2,DRAW_FILL_EMPTY);
    Paint_DrawCircle(195,125, 25, GREEN, DOT_PIXEL_2X2,DRAW_FILL_EMPTY);

    Paint_DrawImage(gImage_70X70, 20, 80, 70, 70);
}

void loop()
{
}

```

(/wiki/File:LCD_arduino_cede5.png)

Program Description

Document Introduction

Take Arduino UNO controlling a 1.54-inch LCD as an example, open the Arduino\LCD_1inch54 directory:

名称	修改日期	类型	大小
Debug.h	2020/6/9 18:11	H 文件	1 KB
DEV_Config.cpp	2020/6/9 18:11	CPP 文件	2 KB
DEV_Config.h	2020/6/9 18:11	H 文件	3 KB
font8.cpp	2020/6/9 18:11	CPP 文件	19 KB
font12.cpp	2020/6/9 18:11	CPP 文件	6 KB
font16.cpp	2020/6/9 18:11	CPP 文件	51 KB
font20.cpp	2020/6/9 18:11	CPP 文件	67 KB
font24.cpp	2020/6/9 18:11	CPP 文件	100 KB
font24CN.cpp	2020/6/9 18:11	CPP 文件	28 KB
fonts.h	2020/6/9 18:11	H 文件	4 KB
GUI_Paint.cpp	2020/6/13 16:32	CPP 文件	27 KB
GUI_Paint.h	2020/6/10 14:25	H 文件	7 KB
image.cpp	2020/6/9 18:11	CPP 文件	50 KB
image.h	2020/6/9 18:11	H 文件	1 KB
LCD_1inch54.ino	2020/6/9 18:12	Arduino file	2 KB
LCD_Driver.cpp	2020/6/9 18:55	CPP 文件	8 KB
LCD_Driver.h	2020/6/9 18:11	H 文件	2 KB

(/wiki/File:LCD_arduino_ide_codeDescription1.png)

Of which:

LCD_1inch54.ino: open with Arduino IDE;

LCD_Driver.cpp(.h): is the driver of the LCD screen;

DEV_Config.cpp(.h): It is the hardware interface definition, which encapsulates the read and write pin levels, SPI transmission data, and pin initialization;

font8.cpp, font12.cpp, font16.cpp, font20.cpp, font24.cpp, font24CN.cpp, fonts.h: fonts for characters of different sizes;

image.cpp(.h): is the image data, which can convert any BMP image into a 16-bit true color image array through Img2Lcd (downloadable in the development data).

The program is divided into bottom-layer hardware interface, middle-layer LCD screen driver, and upper-layer application;

Underlying Hardware Interface

The hardware interface is defined in the two files DEV_Config.cpp(.h), and functions such as read and write pin level, delay, and SPI transmission are encapsulated.

- write pin level

```
void DEV_Digital_Write(int pin, int value)
```

The first parameter is the pin, and the second is the high and low level.

- Read pin level

```
int DEV_Digital_Read(int pin)
```

The parameter is the pin, and the return value is the level of the read pin.

- Delay

```
DEV_Delay_ms(unsigned int delaytime)
```

millisecond level delay.

- SPI output data

```
DEV_SPI_WRITE(unsigned char data)
```

The parameter is char type, occupying 8 bits.

The Upper Application

For the screen, if you need to draw pictures, display Chinese and English characters, display pictures, etc., you can use the upper application to do, and we provide some basic functions here about some graphics processing in the directory GUI_Paint.c(h)

Note: Because of the size of the internal RAM of STM32 and Arduino, the GUI is directly written to the RAM of the LCD.

名称	修改日期	类型	大小
Debug.h	2020/6/9 18:11	H 文件	1 KB
DEV_Config.cpp	2020/6/9 18:11	CPP 文件	2 KB
DEV_Config.h	2020/6/9 18:11	H 文件	3 KB
font8.cpp	2020/6/9 18:11	CPP 文件	19 KB
font12.cpp	2020/6/9 18:11	CPP 文件	6 KB
font16.cpp	2020/6/9 18:11	CPP 文件	51 KB
font20.cpp	2020/6/9 18:11	CPP 文件	67 KB
font24.cpp	2020/6/9 18:11	CPP 文件	100 KB
font24CN.cpp	2020/6/9 18:11	CPP 文件	28 KB
fonts.h	2020/6/9 18:11	H 文件	4 KB
GUI_Paint.cpp	2020/6/13 16:32	CPP 文件	27 KB
GUI_Paint.h	2020/6/10 14:25	H 文件	7 KB
image.cpp	2020/6/9 18:11	CPP 文件	50 KB
image.h	2020/6/9 18:11	H 文件	1 KB
LCD_1inch54.ino	2020/6/9 18:12	Arduino file	2 KB
LCD_Driver.cpp	2020/6/9 18:55	CPP 文件	8 KB
LCD_Driver.h	2020/6/9 18:11	H 文件	2 KB

(/wiki/File:LCD_arduino_ide_codeDescription_GUI.png)

The fonts used by the GUI all depend on the font*.cpp(h) files under the same file

名称	修改日期	类型	大小
Debug.h	2020/6/9 18:11	H 文件	1 KB
DEV_Config.cpp	2020/6/9 18:11	CPP 文件	2 KB
DEV_Config.h	2020/6/9 18:11	H 文件	3 KB
font8.cpp	2020/6/9 18:11	CPP 文件	19 KB
font12.cpp	2020/6/9 18:11	CPP 文件	6 KB
font16.cpp	2020/6/9 18:11	CPP 文件	51 KB
font20.cpp	2020/6/9 18:11	CPP 文件	67 KB
font24.cpp	2020/6/9 18:11	CPP 文件	100 KB
font24CN.cpp	2020/6/9 18:11	CPP 文件	28 KB
fonts.h	2020/6/9 18:11	H 文件	4 KB
GUI_Paint.cpp	2020/6/13 16:32	CPP 文件	27 KB
GUI_Paint.h	2020/6/10 14:25	H 文件	7 KB
image.cpp	2020/6/9 18:11	CPP 文件	50 KB
image.h	2020/6/9 18:11	H 文件	1 KB
LCD_1inch54.ino	2020/6/9 18:12	Arduino file	2 KB
LCD_Driver.cpp	2020/6/9 18:55	CPP 文件	8 KB
LCD_Driver.h	2020/6/9 18:11	H 文件	2 KB

(/wiki/File:LCD_arduino_ide_codeDescription_font.png)

- New Image Properties: Create a new image property, this property includes the image buffer name, width, height, flip Angle, and color.

```
void Paint_NewImage(UWORD Width, UWORD Height, UWORD Rotate, UWORD Color)
```

Parameters:

Width: image buffer Width;
 Height: the Height of the image buffer;
 Rotate: Indicates the rotation Angle of an image
 Color: the initial Color of the image;

- Set the clear screen function, usually call the clear function of LCD directly.

```
void Paint_SetClearFunction(void (*Clear)(UWORD));
```

parameter:

Clear: Pointer to the clear screen function, used to quickly clear the screen to a certain color;

- Set the drawing pixel function.

```
void Paint_SetDisplayFuntion(void (*Display)(UWORD, UWORD, UWORD));
parameter:
    Display: Pointer to the pixel drawing function, which is used to write data to the specified location in the internal RAM of the LCD;
```

- Select image buffer: the purpose of the selection is that you can create multiple image attributes, image buffers can exist multiple, and you can select each image you create.

```
void Paint_SelectImage(UBYTE *image)
```

Parameters:

Image: the name of the image cache, which is actually a pointer to the first address of the image buffer

- Image Rotation: Set the selected image rotation Angle, preferably after Paint_SelectImage(), you can choose to rotate 0, 90, 180, 270.

```
void Paint_SetRotate(UWORD Rotate)
```

Parameters:

Rotate: ROTATE_0, ROTATE_90, ROTATE_180, and ROTATE_270 correspond to 0, 90, 180, and 270 degrees respectively;

- Image mirror flip: Set the mirror flip of the selected image. You can choose no mirror, horizontal mirror, vertical mirror, or image center mirror.

```
void Paint_SetMirroring(UBYTE mirror)
```

Parameters:

Mirror: indicates the image mirroring mode. MIRROR_NONE, MIRROR_HORIZONTAL, MIRROR_VERTICAL, MIRROR_ORIGIN correspond to no mirror, horizontal mirror, vertical mirror, and about image center mirror respectively.

- Set points of display position and color in the buffer: here is the core GUI function, processing points display position and color in the buffer.

```
void Paint_SetPixel(UWORD Xpoint, UWORD Ypoint, UWORD Color)
```

Parameters:

Xpoint: the X position of a point in the image buffer

Ypoint: Y position of a point in the image buffer

Color: indicates the Color of the dot

- Image buffer fill color: Fills the image buffer with a color, usually used to flash the screen into blank.

```
void Paint_ClearWindows(UWORD Xstart, UWORD Ystart, UWORD Xend, UWORD Yend, UWORD Color)
```

Parameters:

- Xstart: the x-starting coordinate of the window
- Ystart: indicates the Y starting point of the window
- Xend: the x-end coordinate of the window
- Yend: indicates the y-end coordinate of the window
- Color: fill Color

- Draw points: In the image buffer, draw points on (Xpoint, Ypoint), you can choose the color, the size of the point, the style of the point.

```
void Paint_DrawPoint(UWORD Xpoint, UWORD Ypoint, UWORD Color, DOT_PIXEL Dot_Pixel, DOT_ST
```

YLE Dot_Style)

Parameters:

- Xpoint: indicates the X coordinate of a point
- Ypoint: indicates the Y coordinate of a point
- Color: fill Color

Dot_Pixel: The size of the dot, providing a default of eight size points

```
typedef enum {
    DOT_PIXEL_1X1 = 1,           // 1 x 1
    DOT_PIXEL_2X2 ,             // 2 X 2
    DOT_PIXEL_3X3 ,             // 3 X 3
    DOT_PIXEL_4X4 ,             // 4 X 4
    DOT_PIXEL_5X5 ,             // 5 X 5
    DOT_PIXEL_6X6 ,             // 6 X 6
    DOT_PIXEL_7X7 ,             // 7 X 7
    DOT_PIXEL_8X8 ,             // 8 X 8
} DOT_PIXEL;
```

Dot_Style: the size of a point that expands from the center of the point or from the bottom left corner of the point to the right and up

```
typedef enum {
    DOT_FILL_AROUND = 1,
    DOT_FILL_RIGHTUP,
} DOT_STYLE;
```

- Line drawing: In the image buffer, a line from (Xstart, Ystart) to (Xend, Yend), you can choose the color, line width, and line style.

```
void Paint_DrawLine(UWORD Xstart, UWORD Ystart, UWORD Xend, UWORD Yend, UWORD Color, LINE_STYLE Line_Style , LINE_STYLE Line_Style)

Parameters:
    Xstart: the x-starting coordinate of a line
    Ystart: indicates the Y starting point of a line
    Xend: x-terminus of a line
    Yend: the y-end coordinate of a line
    Color: fill Color
    Line_width: The width of the line, which provides a default of eight widths
        typedef enum {
            DOT_PIXEL_1X1 = 1,           // 1 x 1
            DOT_PIXEL_2X2 ,             // 2 X 2
            DOT_PIXEL_3X3 ,             // 3 X 3
            DOT_PIXEL_4X4 ,             // 4 X 4
            DOT_PIXEL_5X5 ,             // 5 X 5
            DOT_PIXEL_6X6 ,             // 6 X 6
            DOT_PIXEL_7X7 ,             // 7 X 7
            DOT_PIXEL_8X8 ,             // 8 X 8
        } DOT_PIXEL;
    Line_Style: line style. Select whether the lines are joined in a straight or dashed way
        typedef enum {
            LINE_STYLE_SOLID = 0,
            LINE_STYLE_DOTTED,
        } LINE_STYLE;
```

- Draw a rectangle: In the image buffer, draw a rectangle from (Xstart, Ystart) to (Xend, Yend), you can choose the color, the width of the line, and whether to fill the inside of the rectangle.

```
void Paint_DrawRectangle(UWORD Xstart, WORD Ystart, WORD Xend, WORD Yend, WORD Color,
WORD Line_width, DRAW_FILL Draw_Fill)
```

Parameters:

- Xstart: the starting X coordinate of the rectangle
- Ystart: indicates the Y starting point of the rectangle
- Xend: X terminus of the rectangle
- Yend: specifies the y-end coordinate of the rectangle
- Color: fill Color
- Line_width: The width of the four sides of a rectangle. Default eight widths are provided

```
typedef enum {
    DOT_PIXEL_1X1 = 1,           // 1 x 1
    DOT_PIXEL_2X2 ,             // 2 x 2
    DOT_PIXEL_3X3 ,             // 3 x 3
    DOT_PIXEL_4X4 ,             // 4 x 4
    DOT_PIXEL_5X5 ,             // 5 x 5
    DOT_PIXEL_6X6 ,             // 6 x 6
    DOT_PIXEL_7X7 ,             // 7 x 7
    DOT_PIXEL_8X8 ,             // 8 x 8
} DOT_PIXEL;
```

Draw_Fill: Fill, whether to fill the inside of the rectangle

```
typedef enum {
    DRAW_FILL_EMPTY = 0,
    DRAW_FILL_FULL,
} DRAW_FILL;
```

- Draw circle: In the image buffer, draw a circle of Radius with (X_Center Y_Center) as the center. You can choose the color, the width of the line, and whether to fill the inside of the circle.

```
void Paint_DrawCircle(UWORD X_Center, UWORD Y_Center, UWORD Radius, UWORD Color, DOT_PIXEL Line_width, DRAW_FILL Draw_Fill)
Parameters:
    X_Center: the x-coordinate of the center of a circle
    Y_Center: Y coordinate of the center of a circle
    Radius: indicates the Radius of a circle
    Color: fill Color
    Line_width: The width of the arc, with a default of 8 widths
    typedef enum {
        DOT_PIXEL_1X1 = 1,           // 1 x 1
        DOT_PIXEL_2X2 ,             // 2 X 2
        DOT_PIXEL_3X3 ,             // 3 X 3
        DOT_PIXEL_4X4 ,             // 4 X 4
        DOT_PIXEL_5X5 ,             // 5 X 5
        DOT_PIXEL_6X6 ,             // 6 X 6
        DOT_PIXEL_7X7 ,             // 7 X 7
        DOT_PIXEL_8X8 ,             // 8 X 8
    } DOT_PIXEL;
    Draw_Fill: fill, whether to fill the inside of the circle
    typedef enum {
        DRAW_FILL_EMPTY = 0,
        DRAW_FILL_FULL,
    } DRAW_FILL;
```

- Write Ascii character: In the image buffer, at (Xstart Ystart) as the left vertex, write an Ascii character, you can select Ascii visual character library, font foreground color, and font background color.

```
void Paint_DrawChar(UWORD Xstart, UWORD Ystart, const char Ascii_Char, sFONT* Font, UWORD Color_Foreground, UWORD Color_Background)
Parameters:
    Xstart: the x-coordinate of the left vertex of a character
    Ystart: the Y coordinate of the font's left vertex
    Ascii_Char: indicates the Ascii character
    Font: Ascii visual character library, in the Fonts folder provides the following
Fonts:
    Font8: 5*8 font
    Font12: 7*12 font
    Font16: 11*16 font
    Font20: 14*20 font
    Font24: 17*24 font
    Color_Foreground: Font color
    Color_Background: indicates the background color
```

- Write English string: In the image buffer, use (Xstart Ystart) as the left vertex, write a string of English characters, can choose Ascii visual character library, font foreground color, and font background color.

```
void Paint_DrawString_EN(UWORD Xstart, UWORLD Ystart, const char * pString, sFONT* Font, U
WORD Color_Foreground, UWORLD Color_Background)
```

Parameters:

Xstart: the x-coordinate of the left vertex of a character

Ystart: the Y coordinate of the font's left vertex

PString: string, string is a pointer

Font: Ascii visual character library, in the Fonts folder provides the following

Fonts:

Font8: 5*8 font

Font12: 7*12 font

Font16: 11*16 font

Font20: 14*20 font

Font24: 17*24 font

Color_Foreground: Font color

Color_Background: indicates the background color

- Write Chinese string: in the image buffer, use (Xstart Ystart) as the left vertex, and write a string of Chinese characters, you can choose GB2312 encoding character font, font foreground color, and font background color.

```
void Paint_DrawString_CN(UWORD Xstart, UWORLD Ystart, const char * pString, cFONT* font, U
WORD Color_Foreground, UWORLD Color_Background)
```

Parameters:

Xstart: the x-coordinate of the left vertex of a character

Ystart: the Y coordinate of the font's left vertex

PString: string, string is a pointer

Font: GB2312 encoding character Font library, in the Fonts folder provides the fo
llowing Fonts:

Font12CN: ASCII font 11*21, Chinese font 16*21

Font24CN: ASCII font24 *41, Chinese font 32*41

Color_Foreground: Font color

Color_Background: indicates the background color

- Write numbers: In the image buffer, use (Xstart Ystart) as the left vertex, and write a string of numbers, you can choose Ascii visual character library, font foreground color, or font background color.

```
void Paint_DrawNum(UWORD Xpoint, UWORD Ypoint, double Nummber, sFONT* Font, UWORD Digit,
UWORD Color_Foreground, UWORD Color_Background)
```

Parameters:

Xpoint: the x-coordinate of the left vertex of a character

Ypoint: the Y coordinate of the left vertex of the font

Nummber: indicates the number displayed, which can be a decimal

Digit: It's a decimal number

Font: Ascii visual character library, in the Fonts folder provides the following

Fonts:

Font8: 5*8 font

Font12: 7*12 font

Font16: 11*16 font

Font20: 14*20 font

Font24: 17*24 font

Color_Foreground: Font color

Color_Background: indicates the background color

- Write numbers with decimals: at (Xstart Ystart) as the left vertex, write a string of numbers with decimals, you can choose Ascii code visual character font, font foreground color, font background color

```
void Paint_DrawFloatNum(UWORD Xpoint, UWORD Ypoint, double Nummber, UBYTE Decimal_Point,
sFONT* Font, UWORD Color_Foreground, UWORD Color_Background);
```

parameter:

Xstart: the X coordinate of the left vertex of the character

Ystart: Y coordinate of the left vertex of the font

Nummber: the displayed number, which is saved in double type here

Decimal_Point: Displays the number of digits after the decimal point

Font: Ascii code visual character font library, the following fonts are provided in the Fonts folder:

Font8: 5*8 font

Font12: 7*12 font

Font16: 11*16 font

Font20: 14*20 font

Font24: 17*24 font

Color_Foreground: font color

Color_Background: background color

- Display time: in the image buffer, use (Xstart Ystart) as the left vertex, display time, you can choose Ascii visual character font, font foreground color, and font background color.

```
void Paint_DrawTime(UWORD Xstart, UWORLD Ystart, PAINT_TIME *pTime, sFONT* Font, UWORLD Col
or_Background, UWORLD Color_Foreground)
```

Parameters:

Xstart: the x-coordinate of the left vertex of a character

Ystart: the Y coordinate of the font's left vertex

PTime: display time, here defined as a good time structure, as long as the hour, minute, and second bits of data to the parameter;

Font: Ascii visual character library, in the Fonts folder provides the following

Fonts:

Font8: 5*8 font

Font12: 7*12 font

Font16: 11*16 font

Font20: 14*20 font

Font24: 17*24 font

Color_Foreground: Font color

Color_Background: indicates the background color

- Display image: at (Xstart Ystart) as the left vertex, display an image whose width is W_Image and height is H_Image;

```
void Paint_DrawImage(const unsigned char *image, UWORLD xStart, UWORLD yStart, UWORLD W_Imag
e, UWORLD H_Image)
```

parameter:

image: image address, pointing to the image information you want to display

Xstart: the X coordinate of the left vertex of the character

Ystart: Y coordinate of the left vertex of the font

W_Image: Image width

H_Image: Image height


VisionFive2

Adaptive Model

- 0.96inch LCD Module (<https://www.waveshare.com/0.96inch-lcd-module.htm>)
- 1.14inch LCD Module (<https://www.waveshare.com/1.14inch-lcd-module.htm>)
- 1.28inch LCD Module (<https://www.waveshare.com/1.28inch-lcd-module.htm>)
- 1.3inch LCD Module (<https://www.waveshare.com/1.3inch-lcd-module.htm>)
- 1.54inch LCD Module (<https://www.waveshare.com/1.54inch-lcd-module.htm>)
- 1.8inch LCD Module (<https://www.waveshare.com/1.8inch-lcd-module.htm>)
- 2inch LCD Module (<https://www.waveshare.com/2inch-lcd-module.htm>)

- 2.4inch LCD Module (<https://www.waveshare.com/2.4inch-lcd-module.htm>)

Hardware Connection

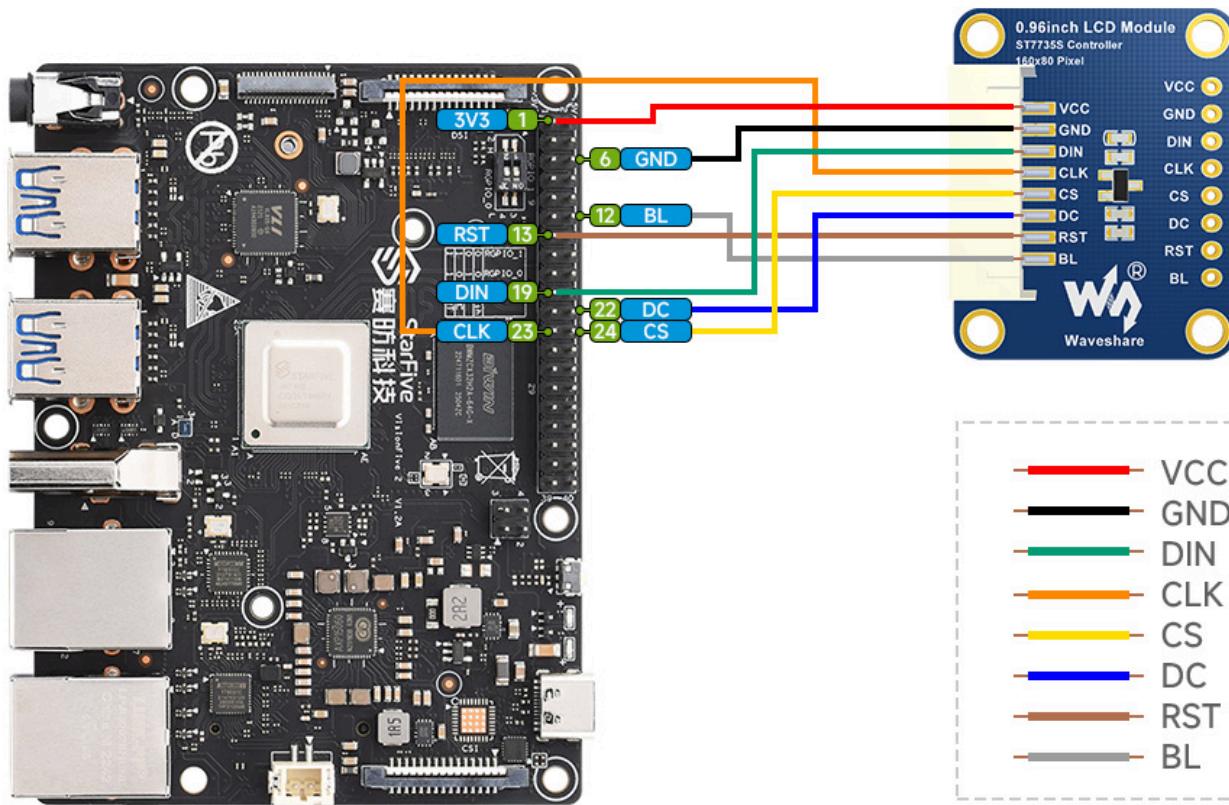

(/wiki/File:LCD_VisionFive201.jpg)

VisionFive2 Pin Connection

LCD	VisionFive2 Board Pin No.
VCC	3.3V
GND	GND
DIN	19
CLK	23
CS	24
DC	22
RST	13
BL	12

Install Corresponding Libraries

```
apt-get install pip
pip install VisionFive.GPIO
apt-get install python3-numpy
apt-get install python3-pil
```

Demo Download

```
apt-get install p7zip-full  
wget https://files.waveshare.com/upload/e/e9/LCD_Module_code.7z  
7z x LCD_Module_code.7z -o./LCD_Module_code  
cd LCD_Module_code/VisionFive/python/example/
```

Run the Corresponding Demo According to the Screen You Purchased

```
python3 0inch96_LCD_test.py  
python3 1inch14_LCD_test.py  
python3 1inch28_LCD_test.py  
python3 1inch3_LCD_test.py  
python3 1inch54_LCD_test.py  
python3 1inch8_LCD_test.py  
python3 2inch_LCD_test.py  
python3 2inch4_LCD_test.py
```

Resources

Document

- Schematic (https://files.waveshare.com/upload/e/ee/2inch_LCD_Module_SchDoc.pdf)
- Datasheet (<https://files.waveshare.com/upload/a/ad/ST7789VW.pdf>)
- 2inch_LCD_Module Manual (https://files.waveshare.com/upload/b/b1/2inch_LCD_Module.pdf)

Software

- Lcd (<https://files.waveshare.com/upload/7/78/LcmZimo.zip>)

- [Image2Lcd \(<https://files.waveshare.com/upload/b/bd/Image2Lcd2.9.zip>\)](https://files.waveshare.com/upload/b/bd/Image2Lcd2.9.zip)

Demo codes

- [Demo codes \(\[https://files.waveshare.com/upload/8/8d/LCD_Module_code.zip\]\(https://files.waveshare.com/upload/8/8d/LCD_Module_code.zip\)\)](https://files.waveshare.com/upload/8/8d/LCD_Module_code.zip)

2D Drawing

- [2inch LCD Module 2D drawing \(\[https://files.waveshare.com/upload/6/6d/2inch_LCD_Module_2D_Drawing.pdf\]\(https://files.waveshare.com/upload/6/6d/2inch_LCD_Module_2D_Drawing.pdf\)\)](https://files.waveshare.com/upload/6/6d/2inch_LCD_Module_2D_Drawing.pdf)

3D Drawings

- [2inch LCD Module 3D drawing \(\[https://files.waveshare.com/wiki/2inch_LCD_Module/2inch_LCD_Module_3D_Drawing.zip\]\(https://files.waveshare.com/wiki/2inch_LCD_Module/2inch_LCD_Module_3D_Drawing.zip\)\)](https://files.waveshare.com/wiki/2inch_LCD_Module/2inch_LCD_Module_3D_Drawing.zip)
- [2inch LCD Module 3D preview \(\[https://files.waveshare.com/wiki/2inch_LCD_Module/2inch_LCD_Module_Preview.zip\]\(https://files.waveshare.com/wiki/2inch_LCD_Module/2inch_LCD_Module_Preview.zip\)\)](https://files.waveshare.com/wiki/2inch_LCD_Module/2inch_LCD_Module_Preview.zip)

FAQ

Question: The LCD keeps black when using it with Raspberry Pi?

Answer:

- a) Please check if you have enabled the SPI interface.
- b) Check the BL pin, if the BL pin has no output value, you can try to disconnect the BL pin and test it again.

Question: The python codes has error?

Answer:

Please install image libraries and test them again. Run the command: **sudo apt-get install python-imaging** to install it and test again.

Question: Why doesn't the screen display properly when connected to an Arduino?

Answer:

When using an Arduino, please make sure it is plugged into a 5v power supply.

Question: Incorrect use of Raspberry Pi controls may cause?**Answer:**

If running the wiringPi demo is normal, then running Python or BCM2835 may cause the screen to fail to refresh normally, because the bcm2835 library is a library function of the Raspberry Pi CPU chip, and the bottom layer directly operates the registers, while the bottom layer of the wiringPi library and python are read and written by reading and writing. The device file of the Linux system operates the device, which may cause the GPIO port to be abnormal. Restarting the Raspberry Pi can solve it perfectly.

Question: How to flip the image?**Answer:**

C language control can use the function Paint_SetRotate(Rotate); But the flip angle in C language can only be 0, 90, 180, or 270 degrees; Python can call rotate(Rotate) to flip any angle.

Question: What is the maximum power consumption of the 2inch LCD Module?**Answer:**

3.3V 46mA

Question: Do you have any Thonny micropython code and connection diagram for using the Module version of the 2-inch LCD module? How can I

use it with my Pico projects?

Answer:

You can refer to the connection method and code of this product:

<https://www.waveshare.com/wiki/Pico-LCD-2#Document>

(<https://www.waveshare.com/wiki/Pico-LCD-2#Document>)

Question:What is the size of the screw and hex standoff?

Answer:

This screen uses hexagonal copper pillars M2*6.

Support

Technical Support

If you need technical support or have any feedback/review, please click the **Submit Now** button to submit a ticket, Our support team will check and reply to you within 1 to 2 working days. Please be patient as we make every effort to help you to resolve the issue.

Working Time: 9 AM - 6 PM GMT+8
(Monday to Friday)

[Submit Now \(<https://service.waveshare.com/>\)](https://service.waveshare.com/)

Retrieved from "https://www.waveshare.com/w/index.php?title=2inch_LCD_Module&oldid=104025" (https://www.waveshare.com/w/index.php?title=2inch_LCD_Module&oldid=104025)"