

SynShop Soldering Buildup

Presented by Charley Jones, PMP aka Dataman





SynShop

Soldering Buildup

Safety First!



SynShop

Soldering Buildup

1

**Wear
safety
goggles at
all times.**

**Molten
solder
may fly
and cause
permanent
blindness!**





SynShop

Soldering Buildup

2

Be Safe

**Soldering
tip is 700
degrees.**

**NEVER
grab a tip,
even when
off. Parts
and joints
are also
700
degrees!**





SynShop

Soldering Buildup

How to Solder!



SynShop

Soldering Buildup

1

700

degrees F

A temper-
ature
controlled
iron is
best.





SynShop

Soldering Buildup

2

Clean
Tip

Clean tip
by twirling
in brass
tip
cleaner.

Removes
carbon
and
residue.





SynShop

Soldering Buildup

3

Wet Tip

Immediately prime the tip by adding a little bit of solder. A dry tip will not conduct heat.





SynShop

Soldering Buildup

4

Proper Angle

Hold the iron at 45 degrees. Don't use the point of the tip, but the whole side of the tip.





SynShop

Soldering Buildup

5

Heat part

**The part
will heat
quickly.**

**Too much
heat will
destroy
the part.**

**Heat for
1/2-1
second.**






SynShop

Soldering Buildup

6

Apply Solder

Add solder from the opposite side of the tip. The part will draw in the solder.

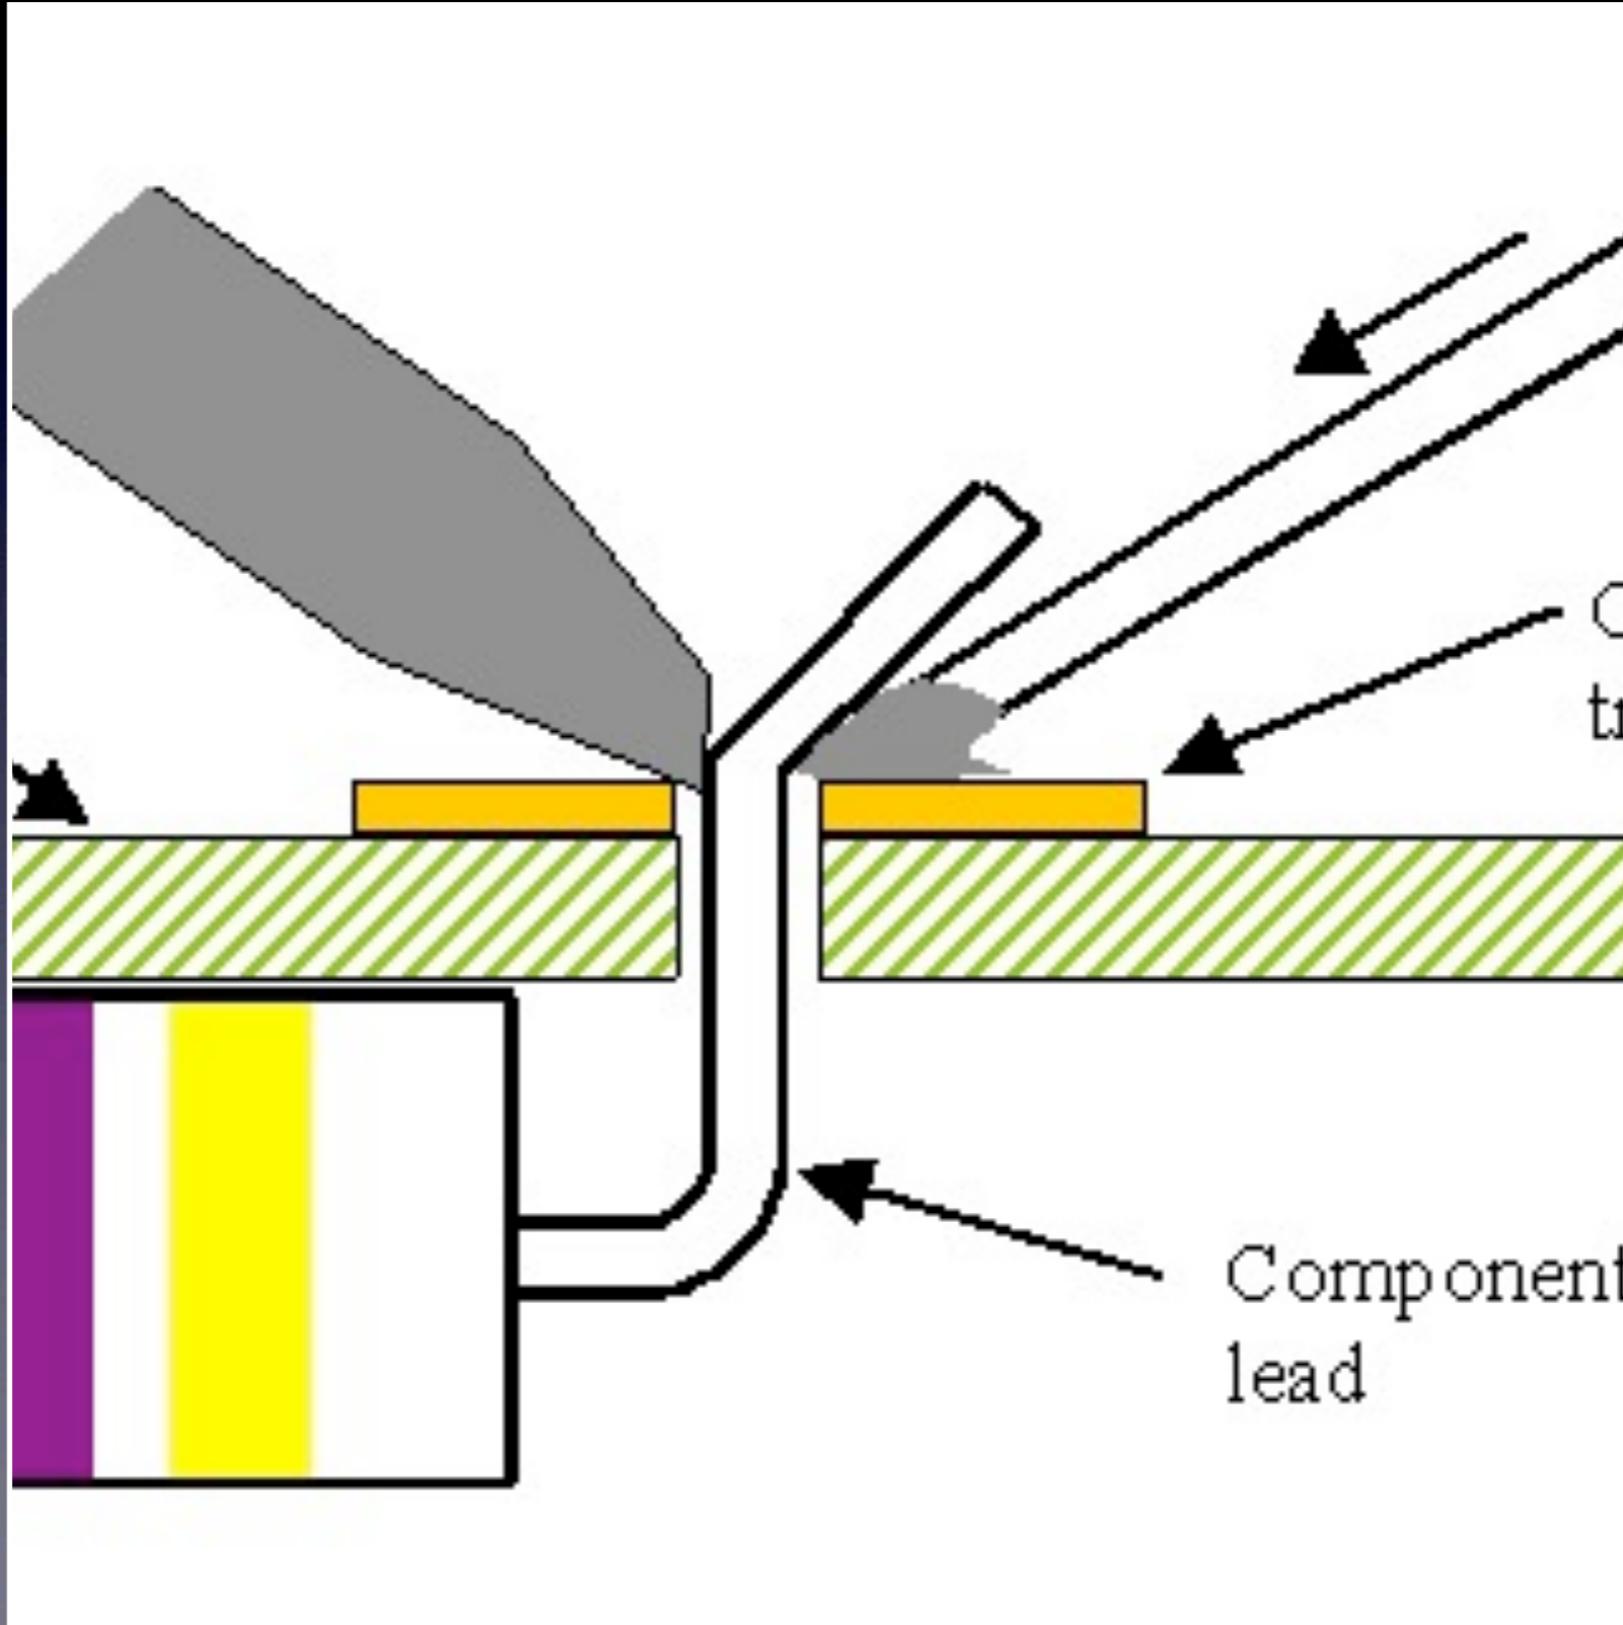



SynShop

Soldering Buildup


7

Dome

We are looking for nice dome shapes. If it isn't a dome, reheat, add more solder if needed.



GOOD JOINT

(volcano shape)

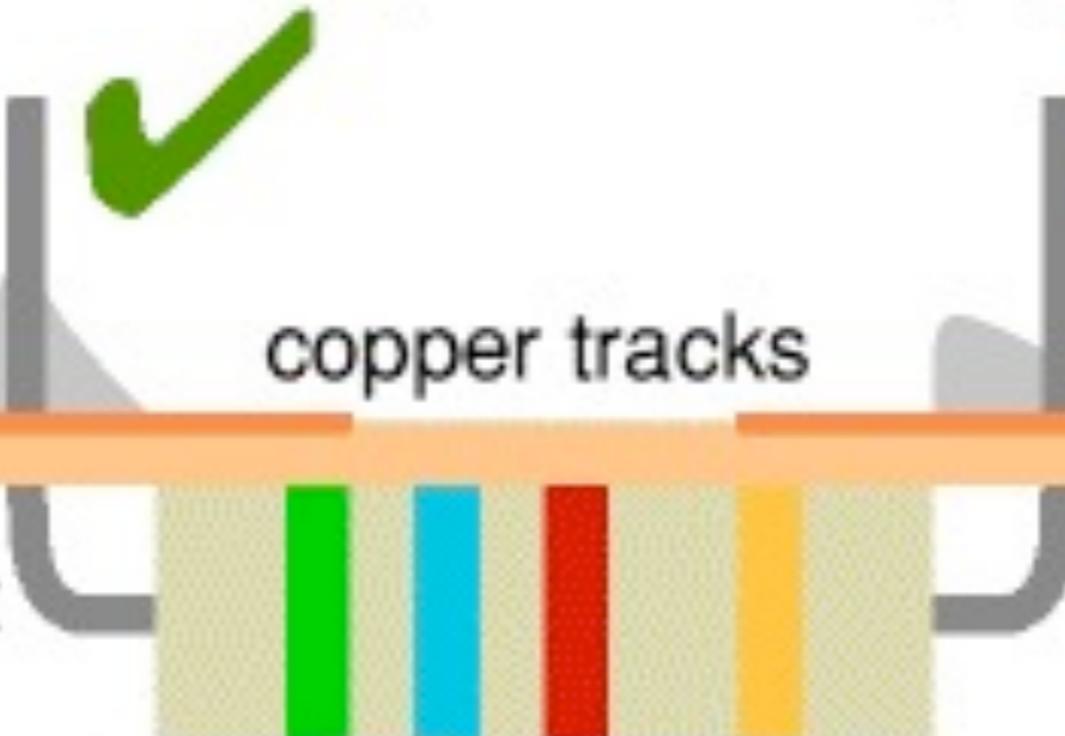

BAD JOINT

(dry joint)

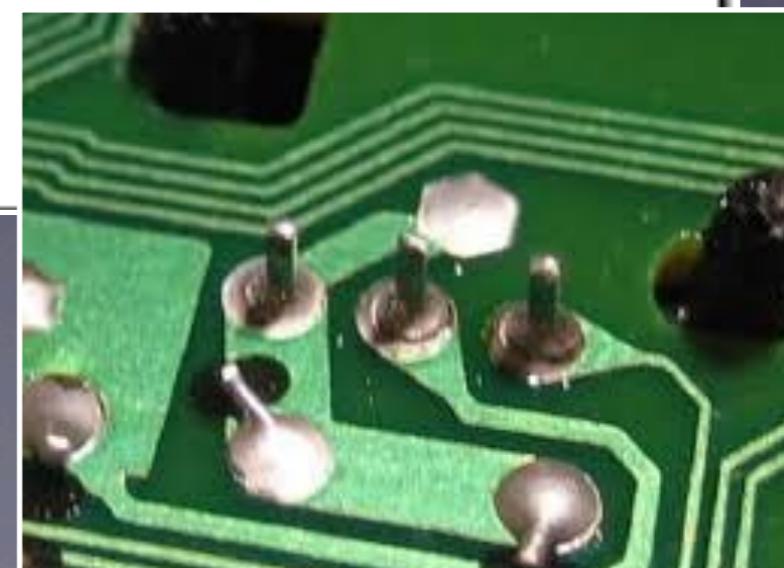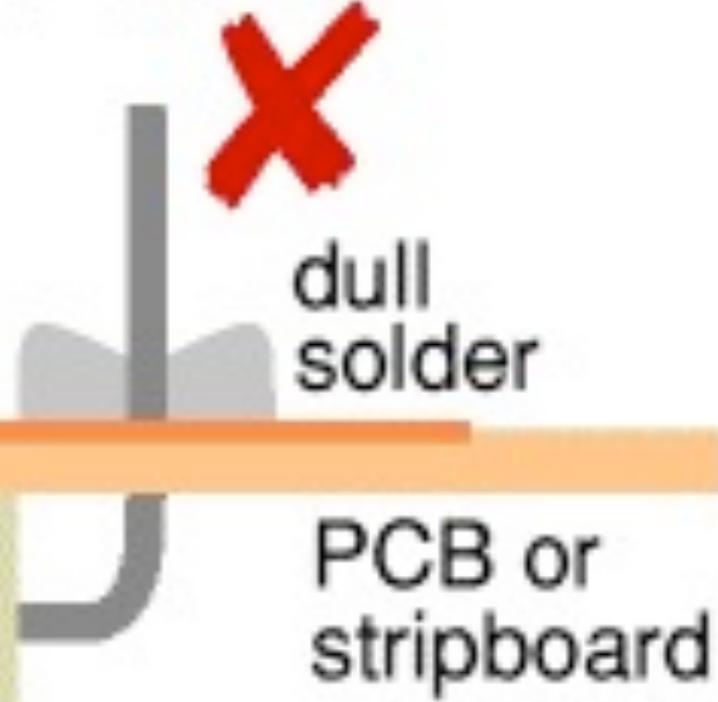



SynShop

Soldering Buildup


8

Clip

**Lastly clip
the lead
just above
the joint.**

**Do not
clip
through
solder.**

**Hold lead,
don't let it
fly.**

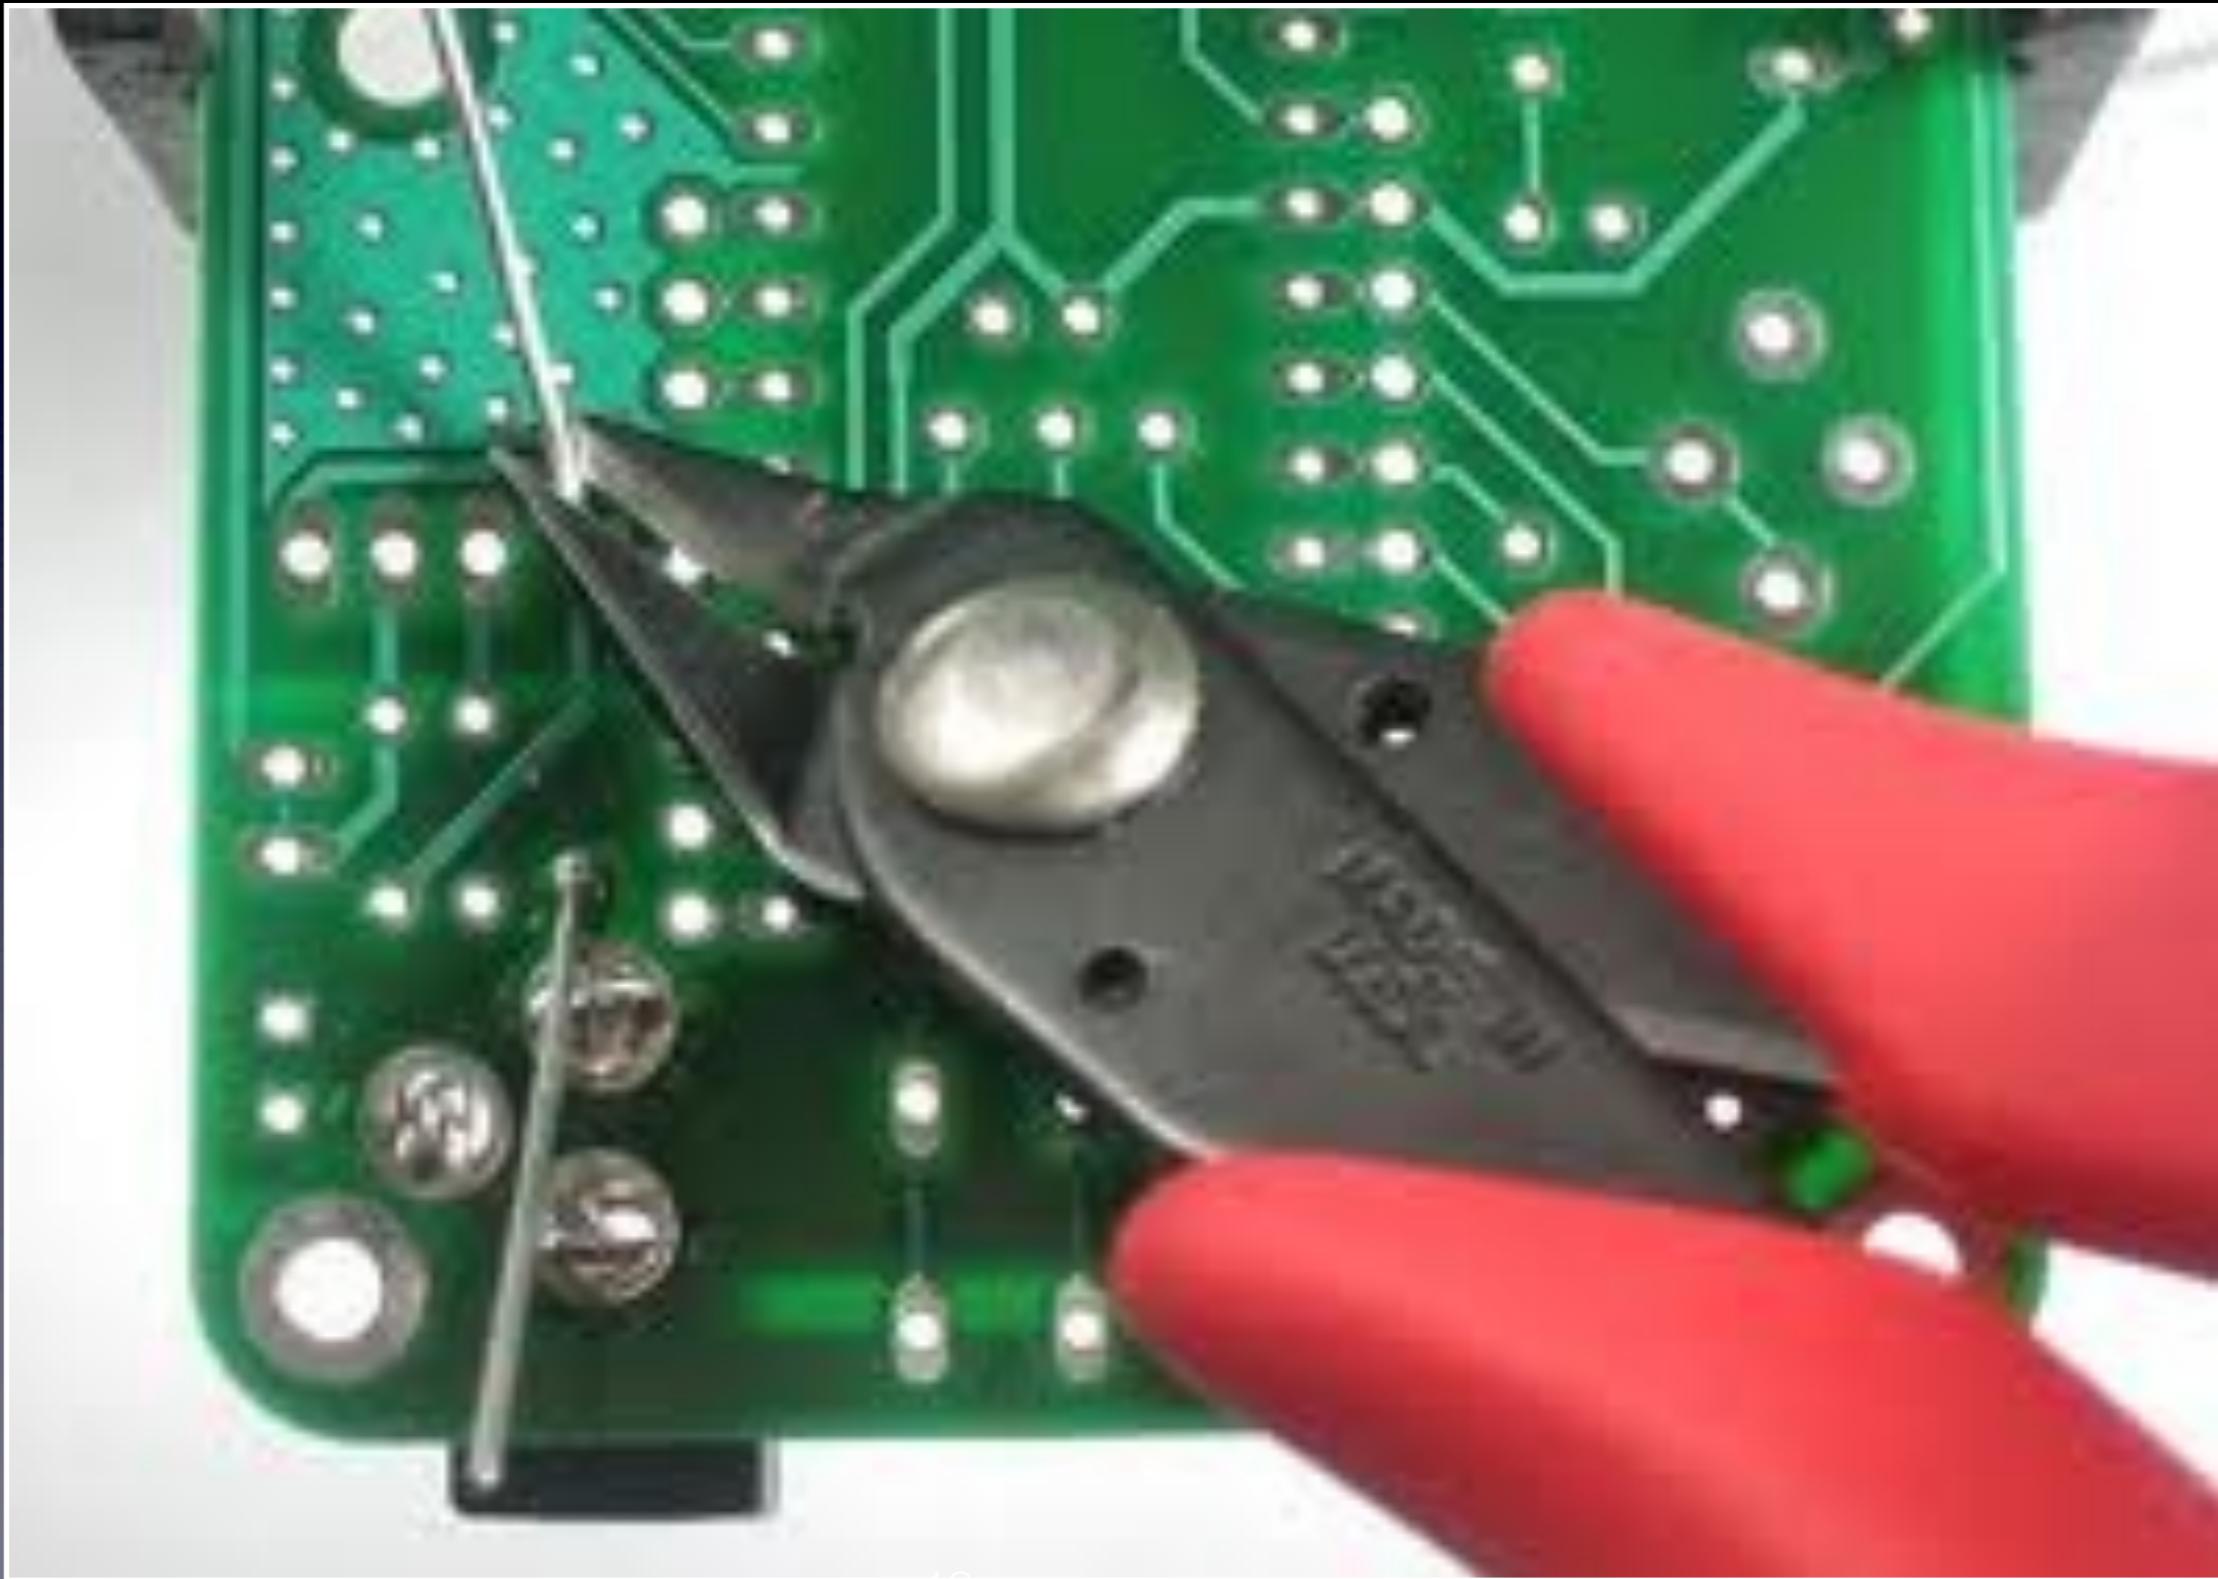



SynShop

Soldering Buildup

9

**Keep Tip
Clean**

**Carbon
will
naturally
form on
the tip,
prevents
solder
from
adhering.**






SynShop

Soldering Buildup

10

**Alcohol
wash the
board.**

**Flux will
continue
to eat til
removed.**

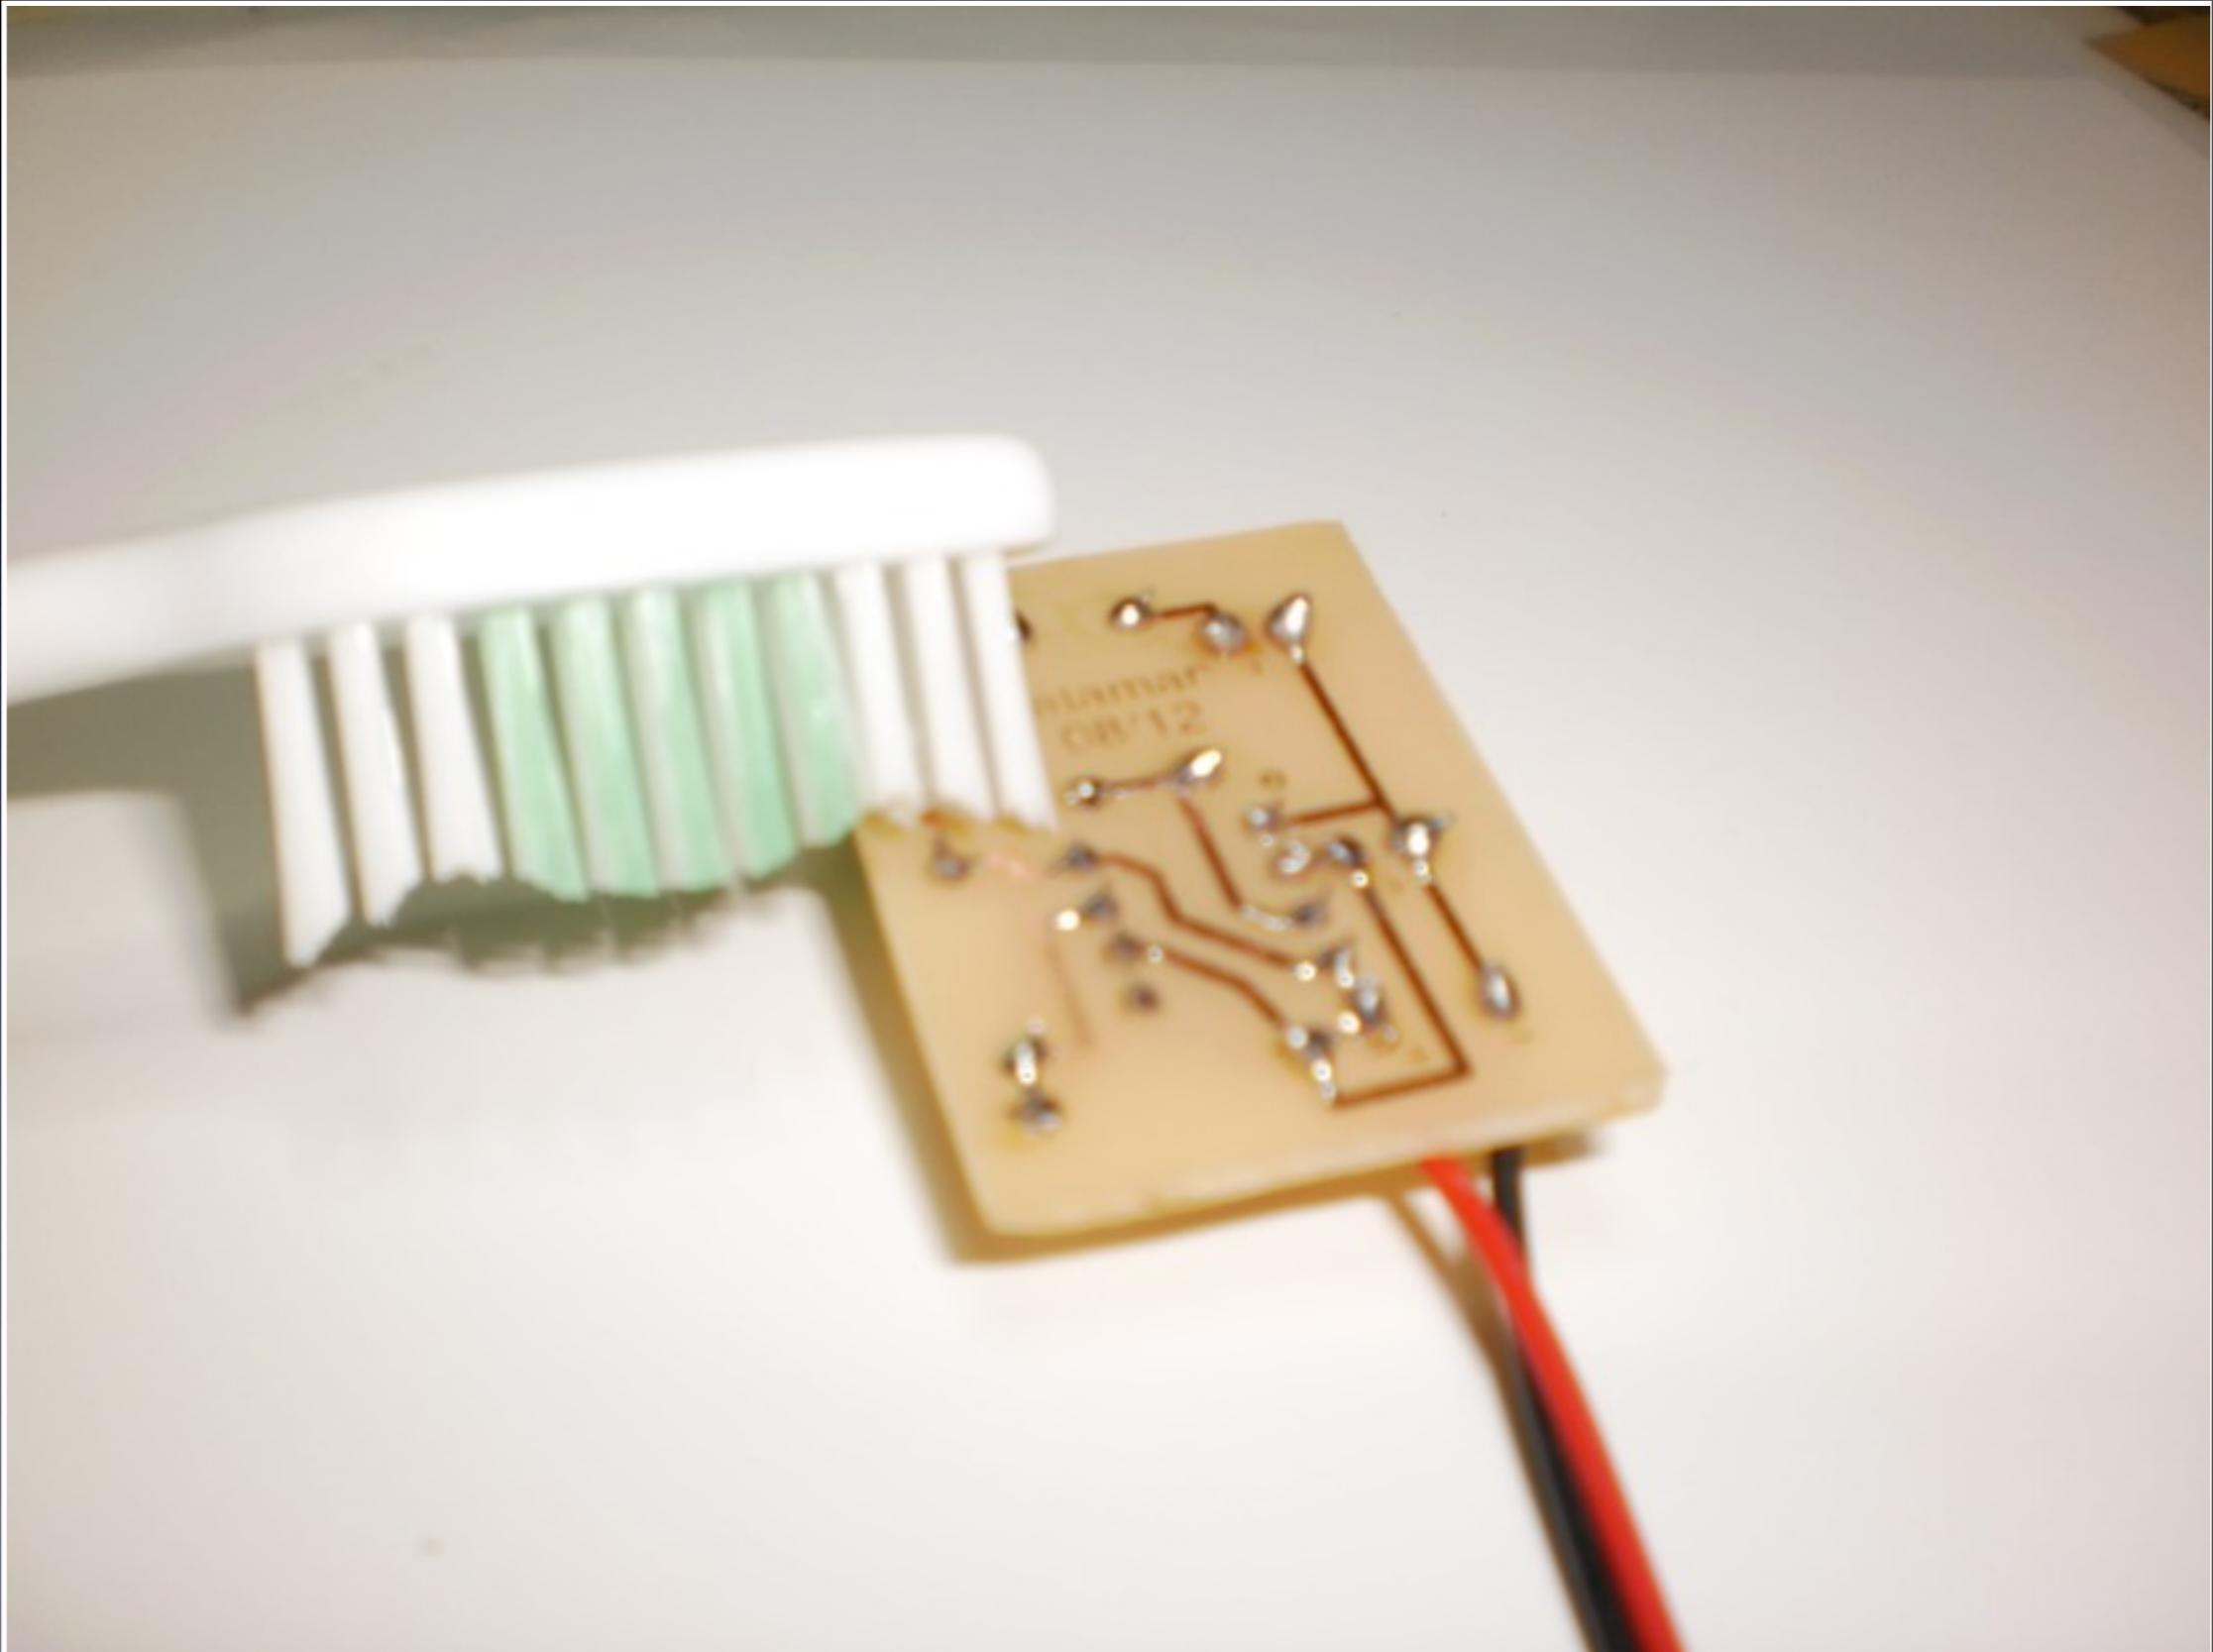



SynShop

Soldering Buildup

Steps to a good solder joint.

- 1) Safety Goggles**
- 2) Be safe**
- 3) 700 degrees F**
- 4) Clean tip**
- 5) Wet tip**
- 6) Proper angle**
- 7) Heat part and joint**
- 8) Solder joint not the tip**
- 9) Make a dome**
- 10) Clip above joint**
- 11) Clean tip**
- 12) Alcohol wash**






SynShop

Prototyping

Let's see that in action

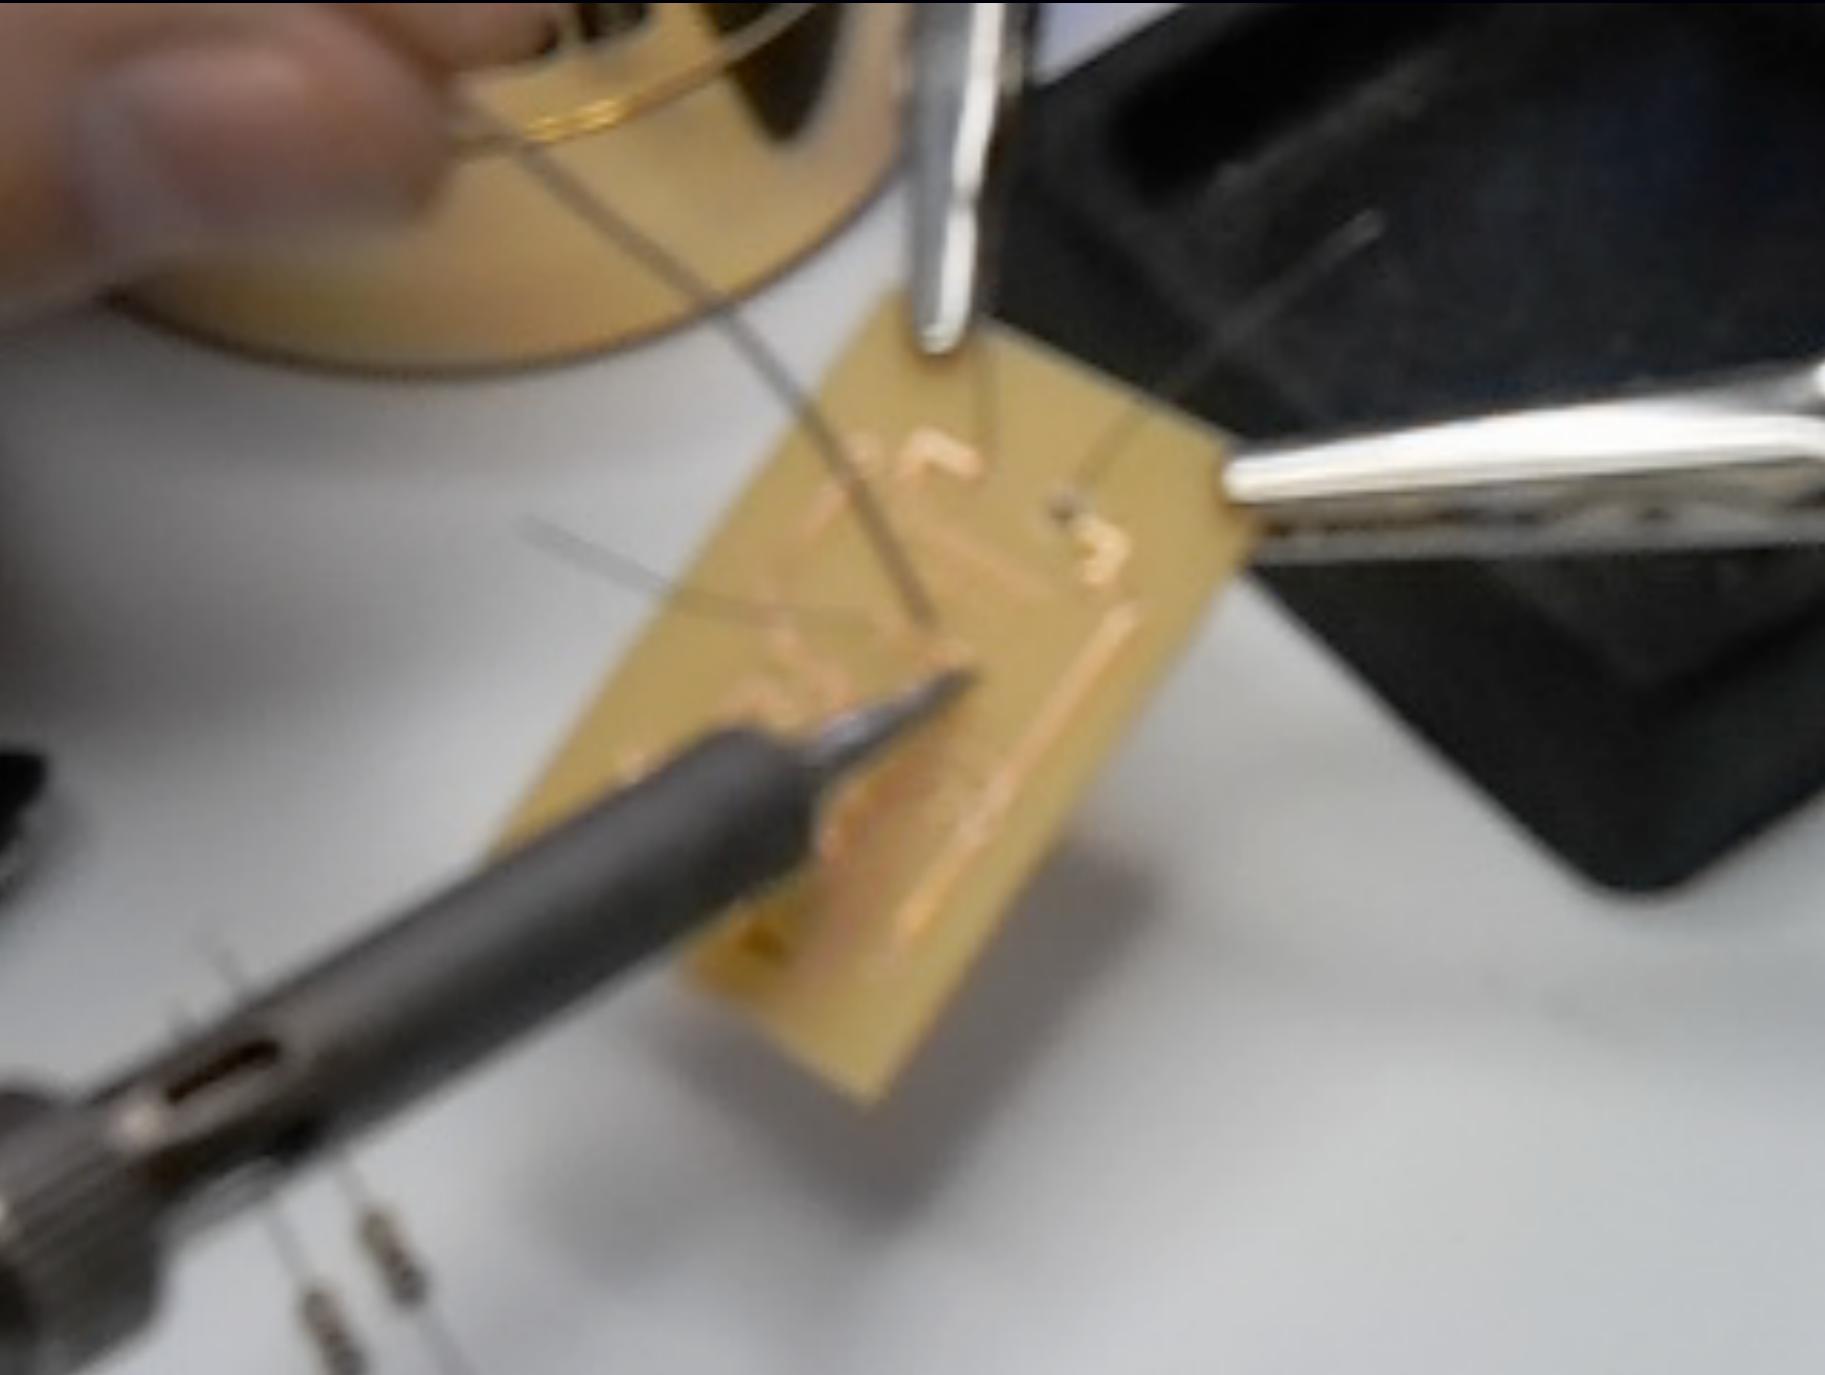



SynShop
Soldering Buildup

Beta testing For SYNshop




SynShop
Prototyping

SynShop Guinea Pig

You have been recruited as a guinea pig for the Buildup Timer.

Click at start of step.
Perform step.
Click at end of step.

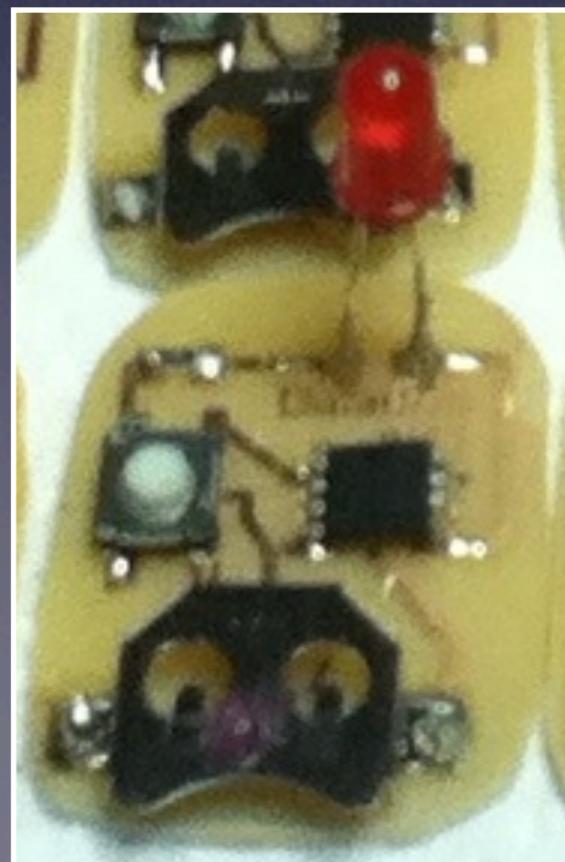




SynShop
Prototyping

SynShop Guinea Pig

Builder Timer blinks faster each minute. Let's us know who's having trouble. It's not a race!

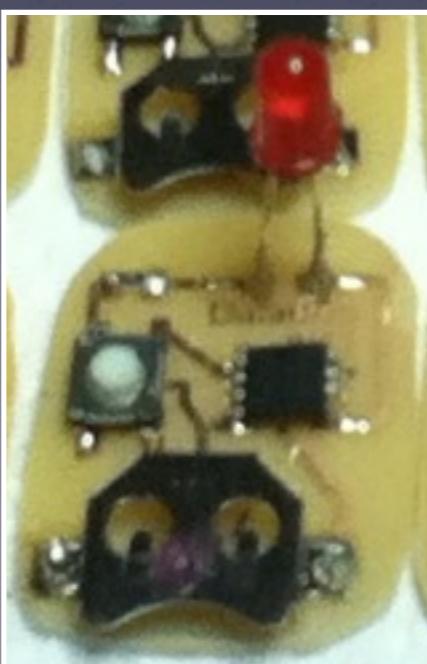



SynShop

Soldering Buildup

LED Tester!



SynShop

Soldering Buildup

Led Tester

To practice what we've leaned we are going to solder a very simple project with 3 main components.

Go slow and don't glop!



SynShop

Soldering Buildup

1

**Start with
proto-
board
copper
part facing
table.**






SynShop

Soldering Buildup

2

**Place
resistor as
shown. Do
not clip
leads.**

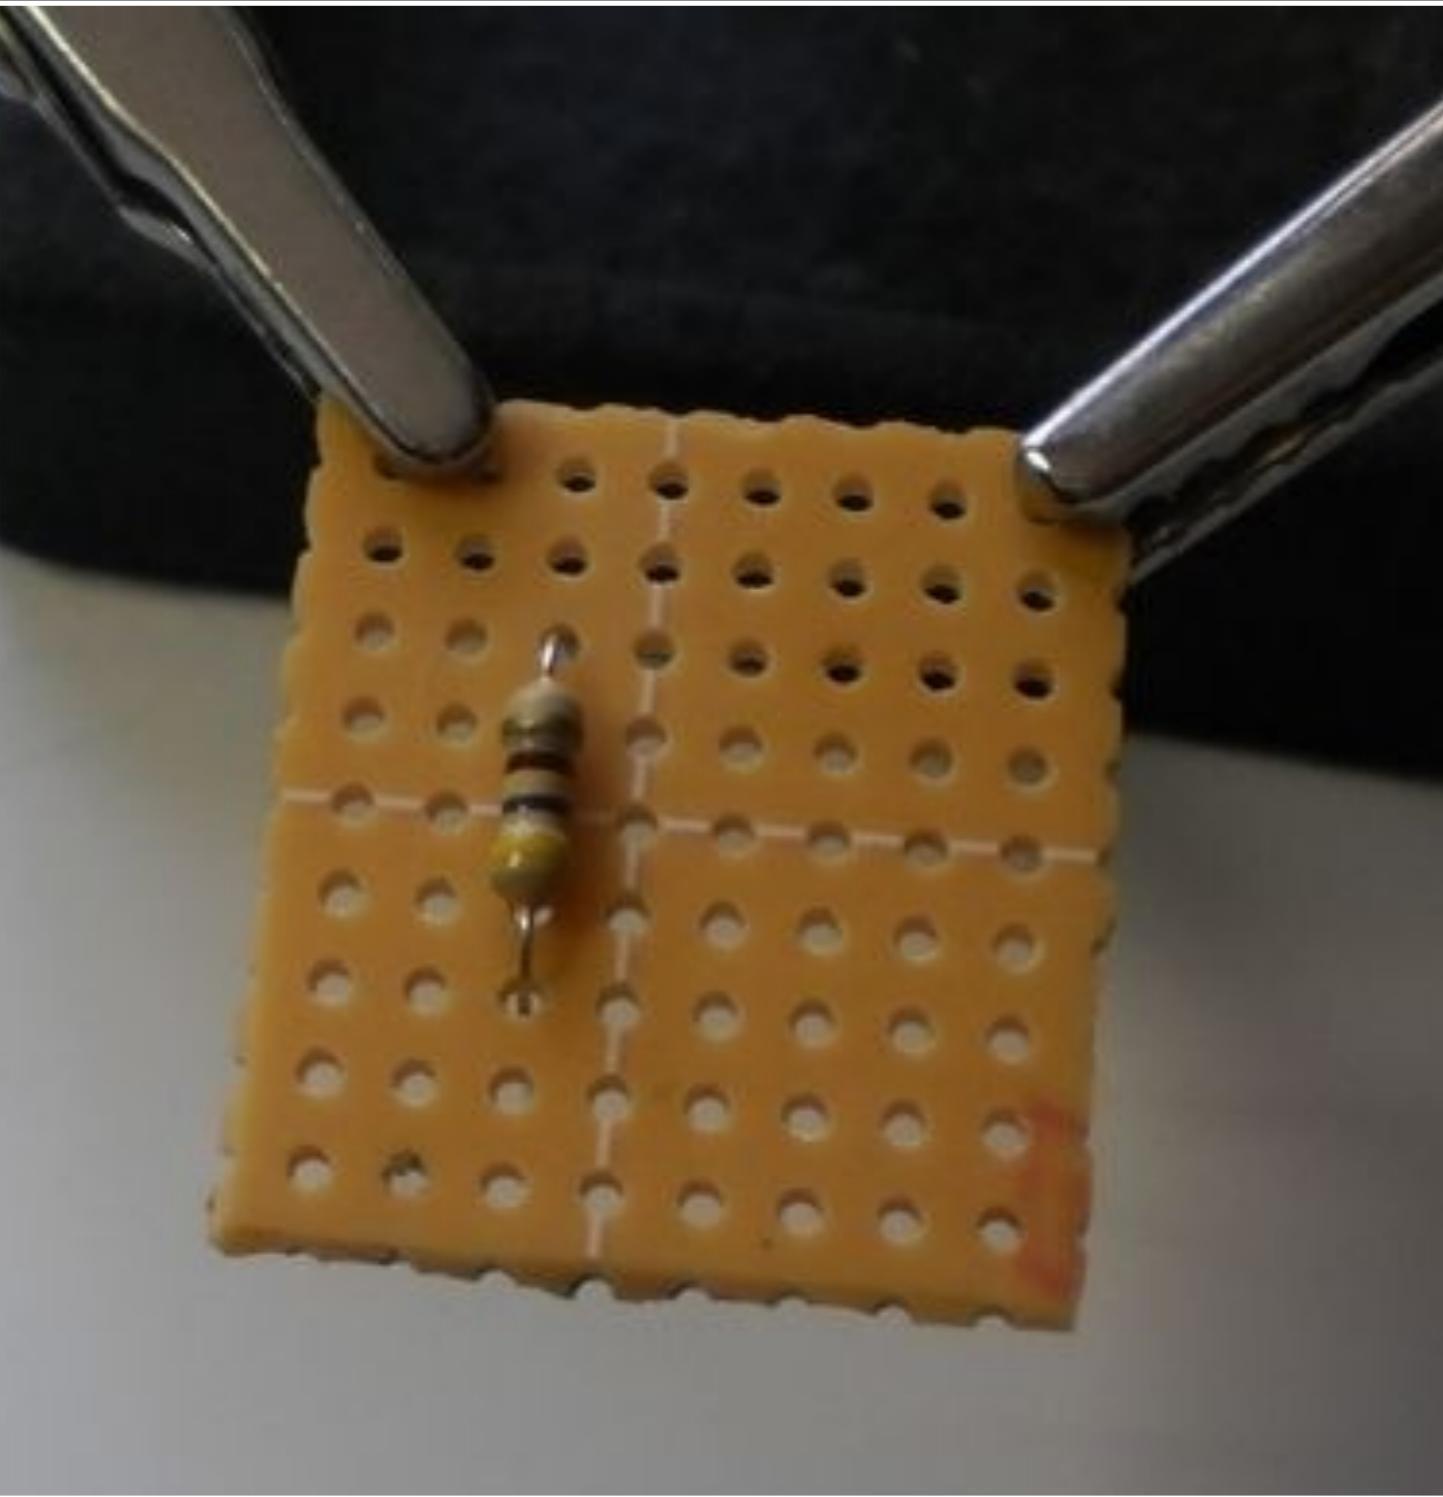




SynShop

Soldering Buildup

3


**Place and
solder 2
pin female
header as
shown.**

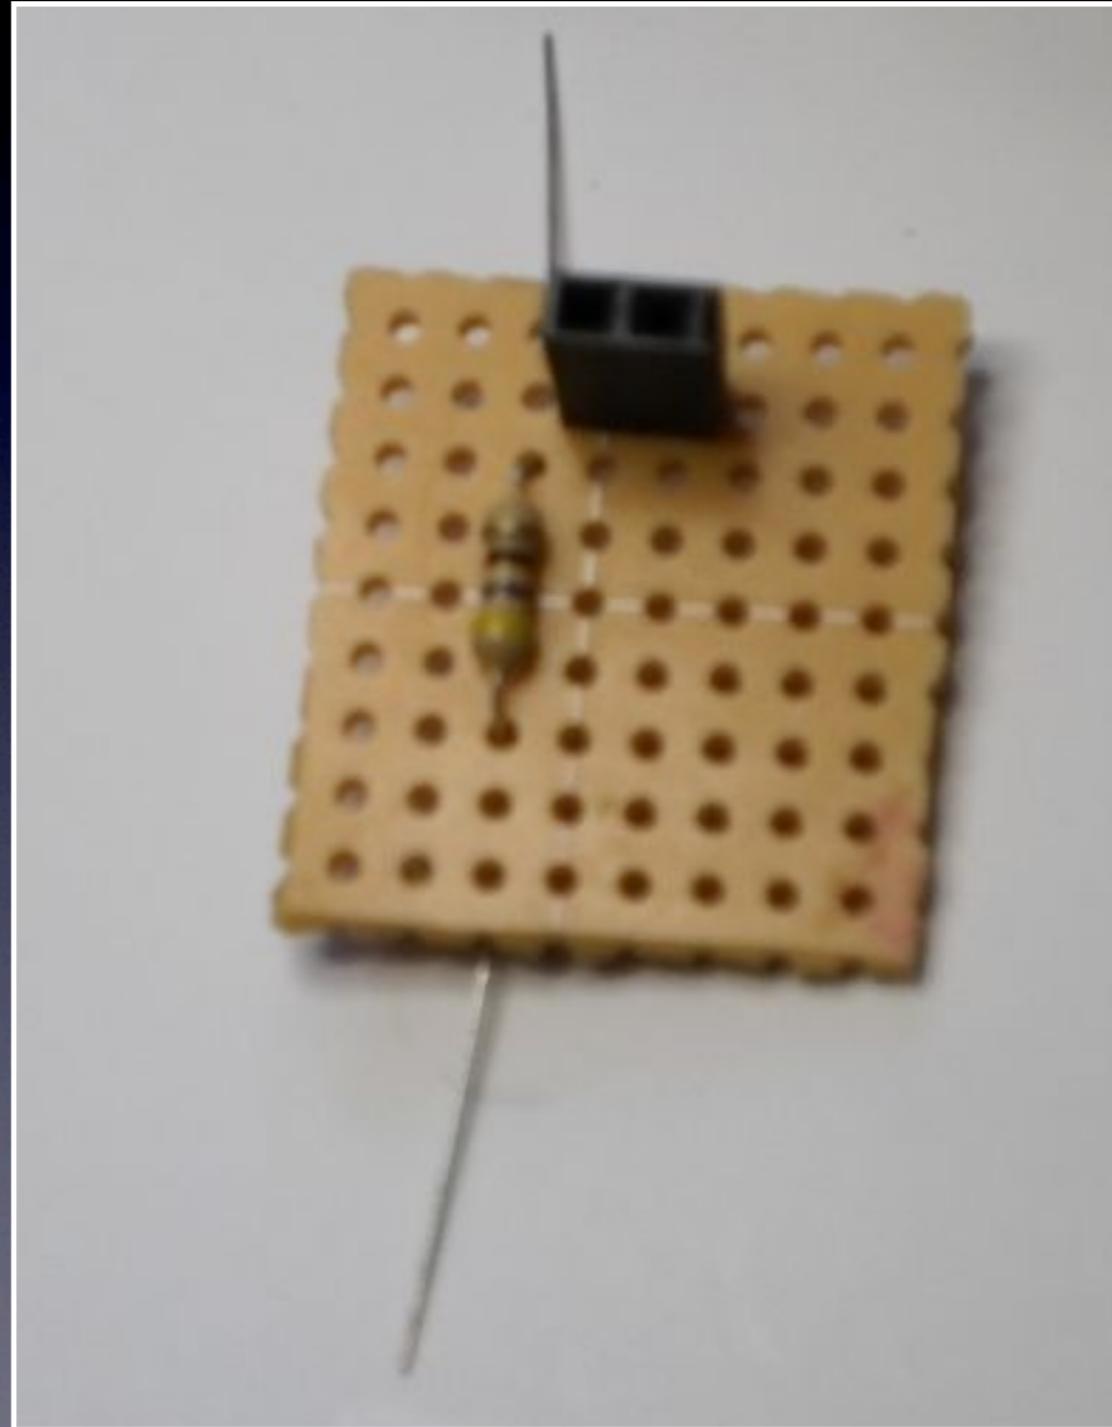



SynShop
Soldering Buildup

Interrupt: The Align the Pins Trick

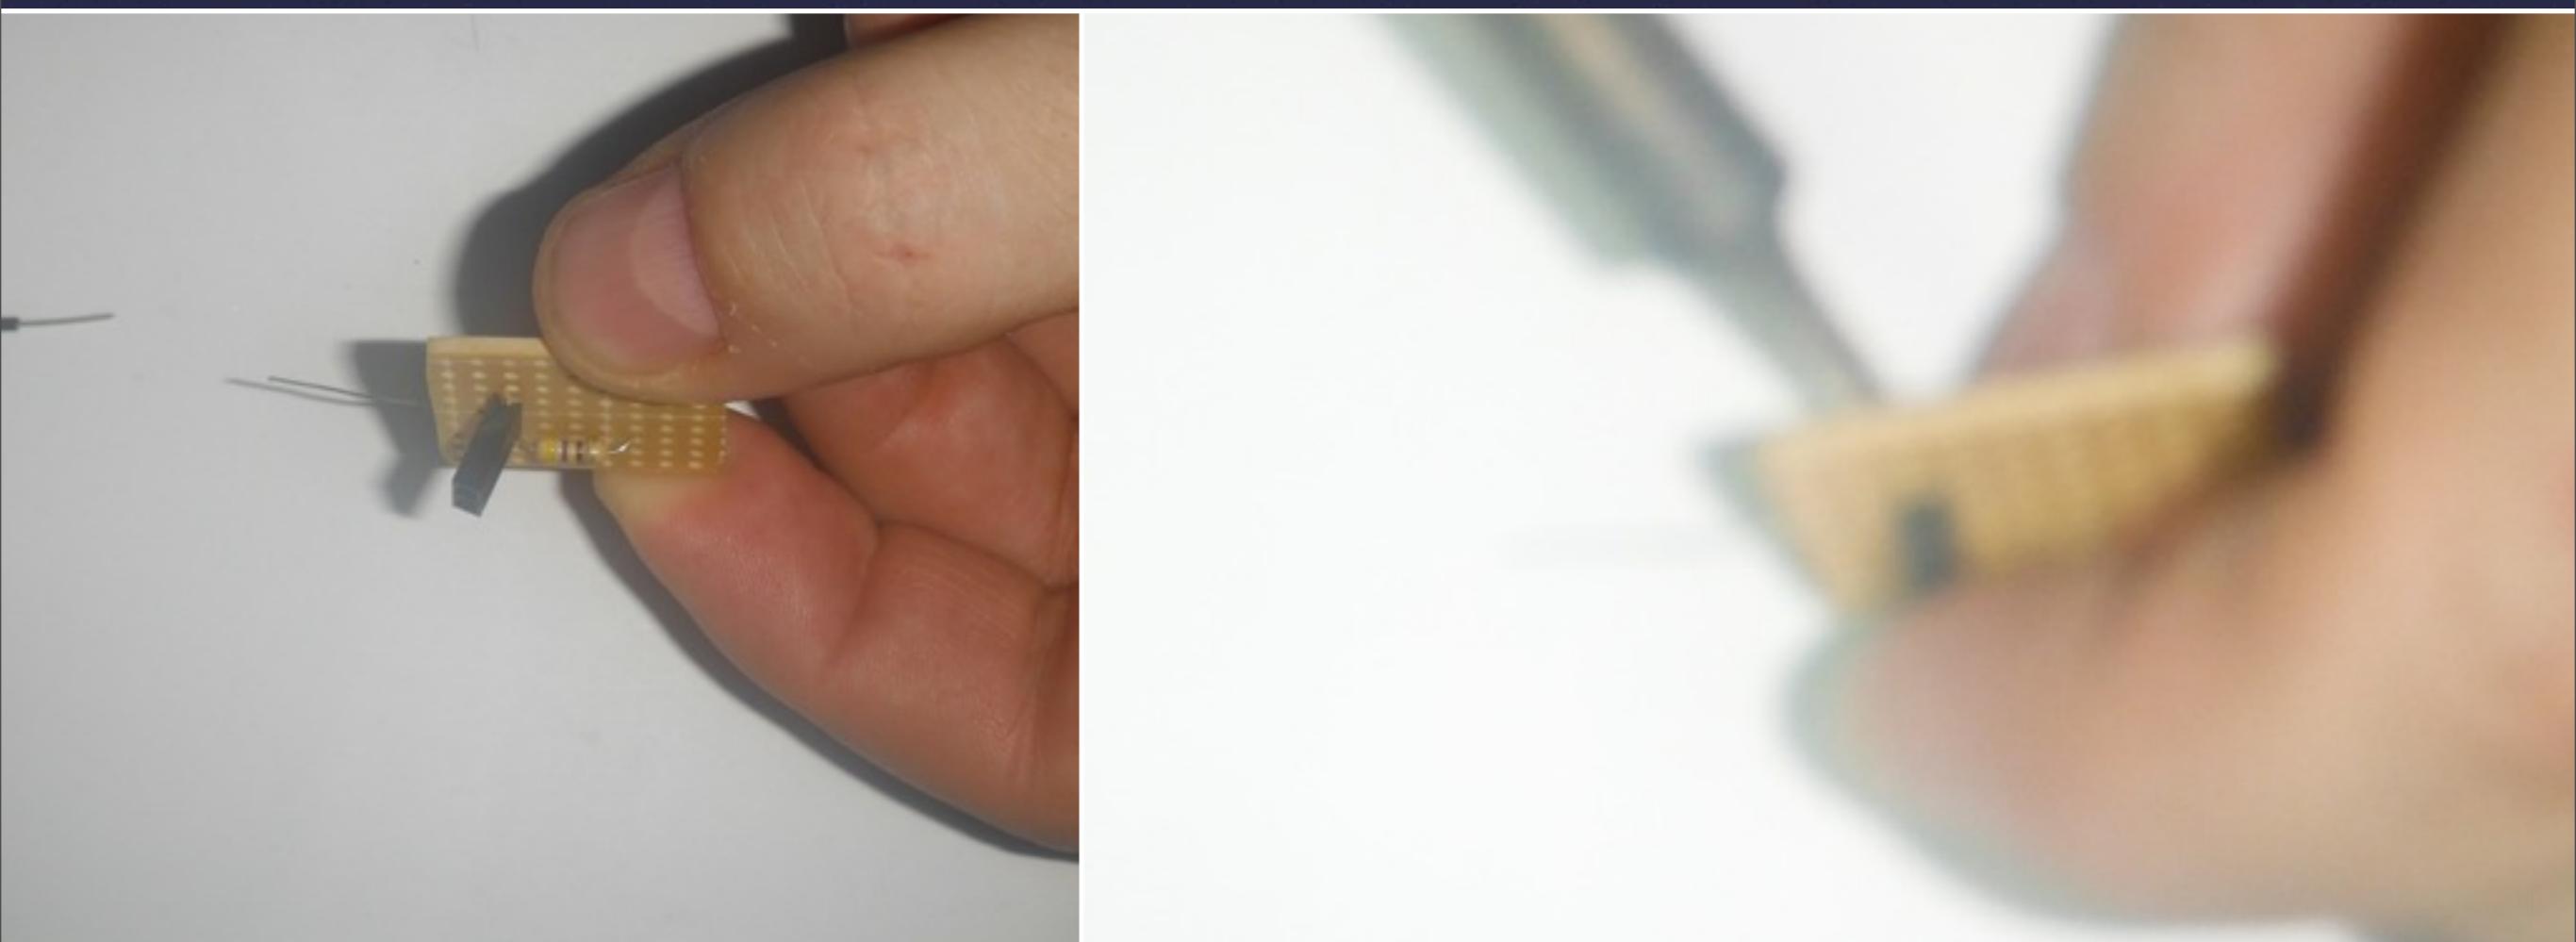




SynShop

Soldering Buildup

3

**Place and
solder 2
pin female
header as
shown.**

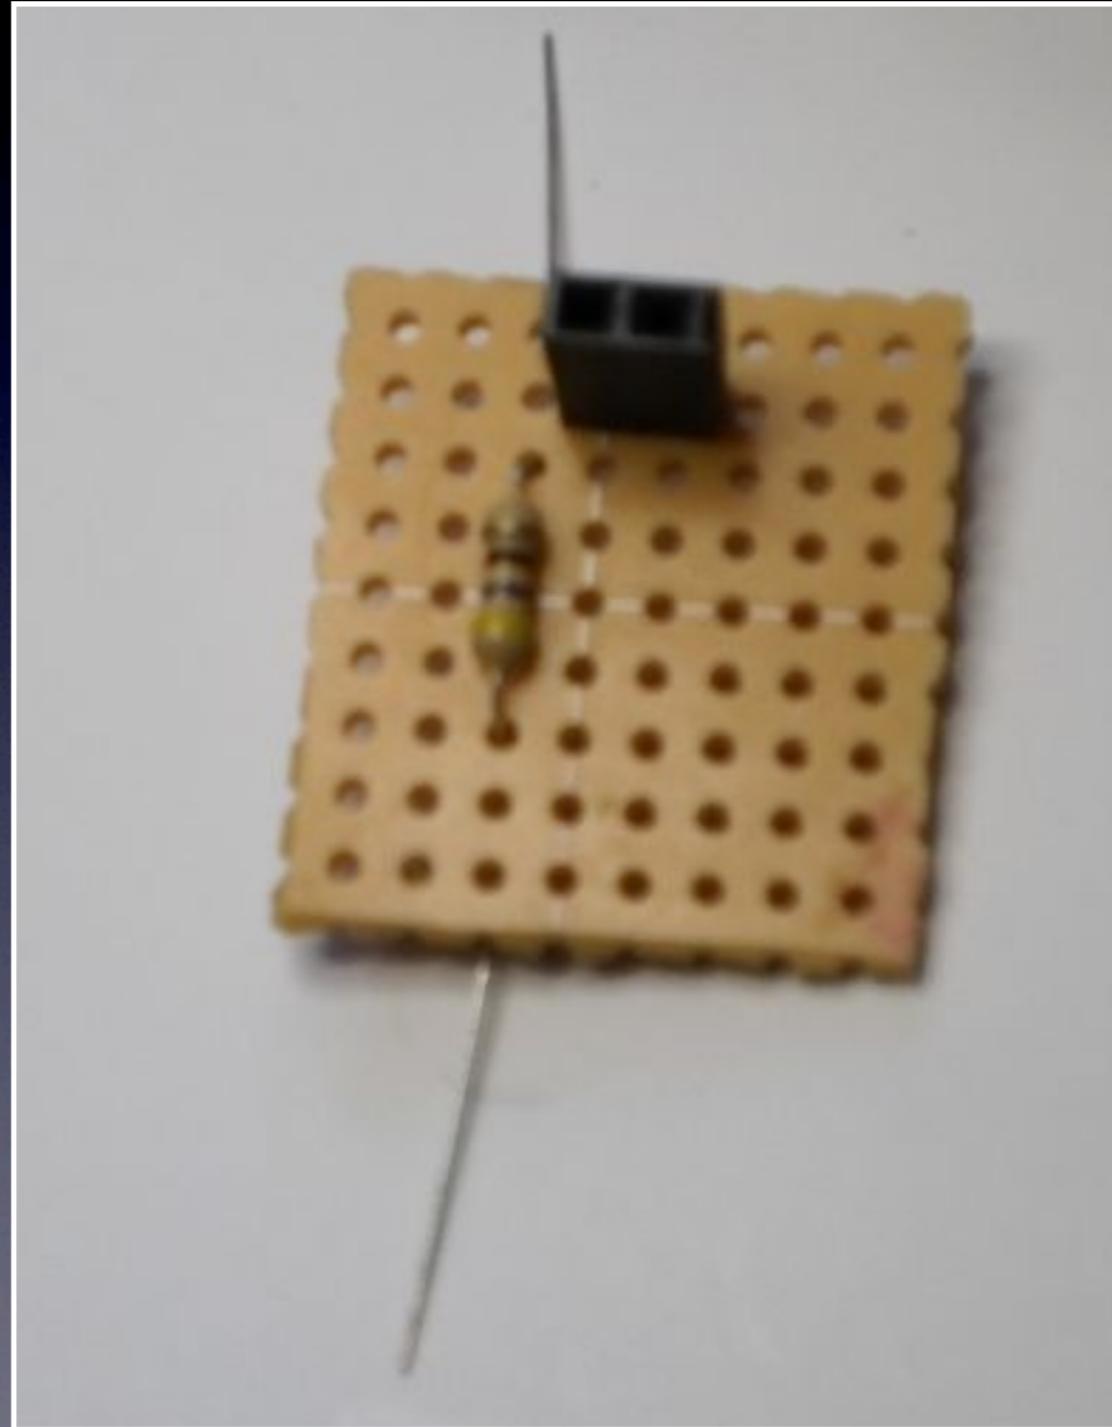




SynShop

Soldering Buildup

4

**Place and
solder
battery
clip as
shown.**

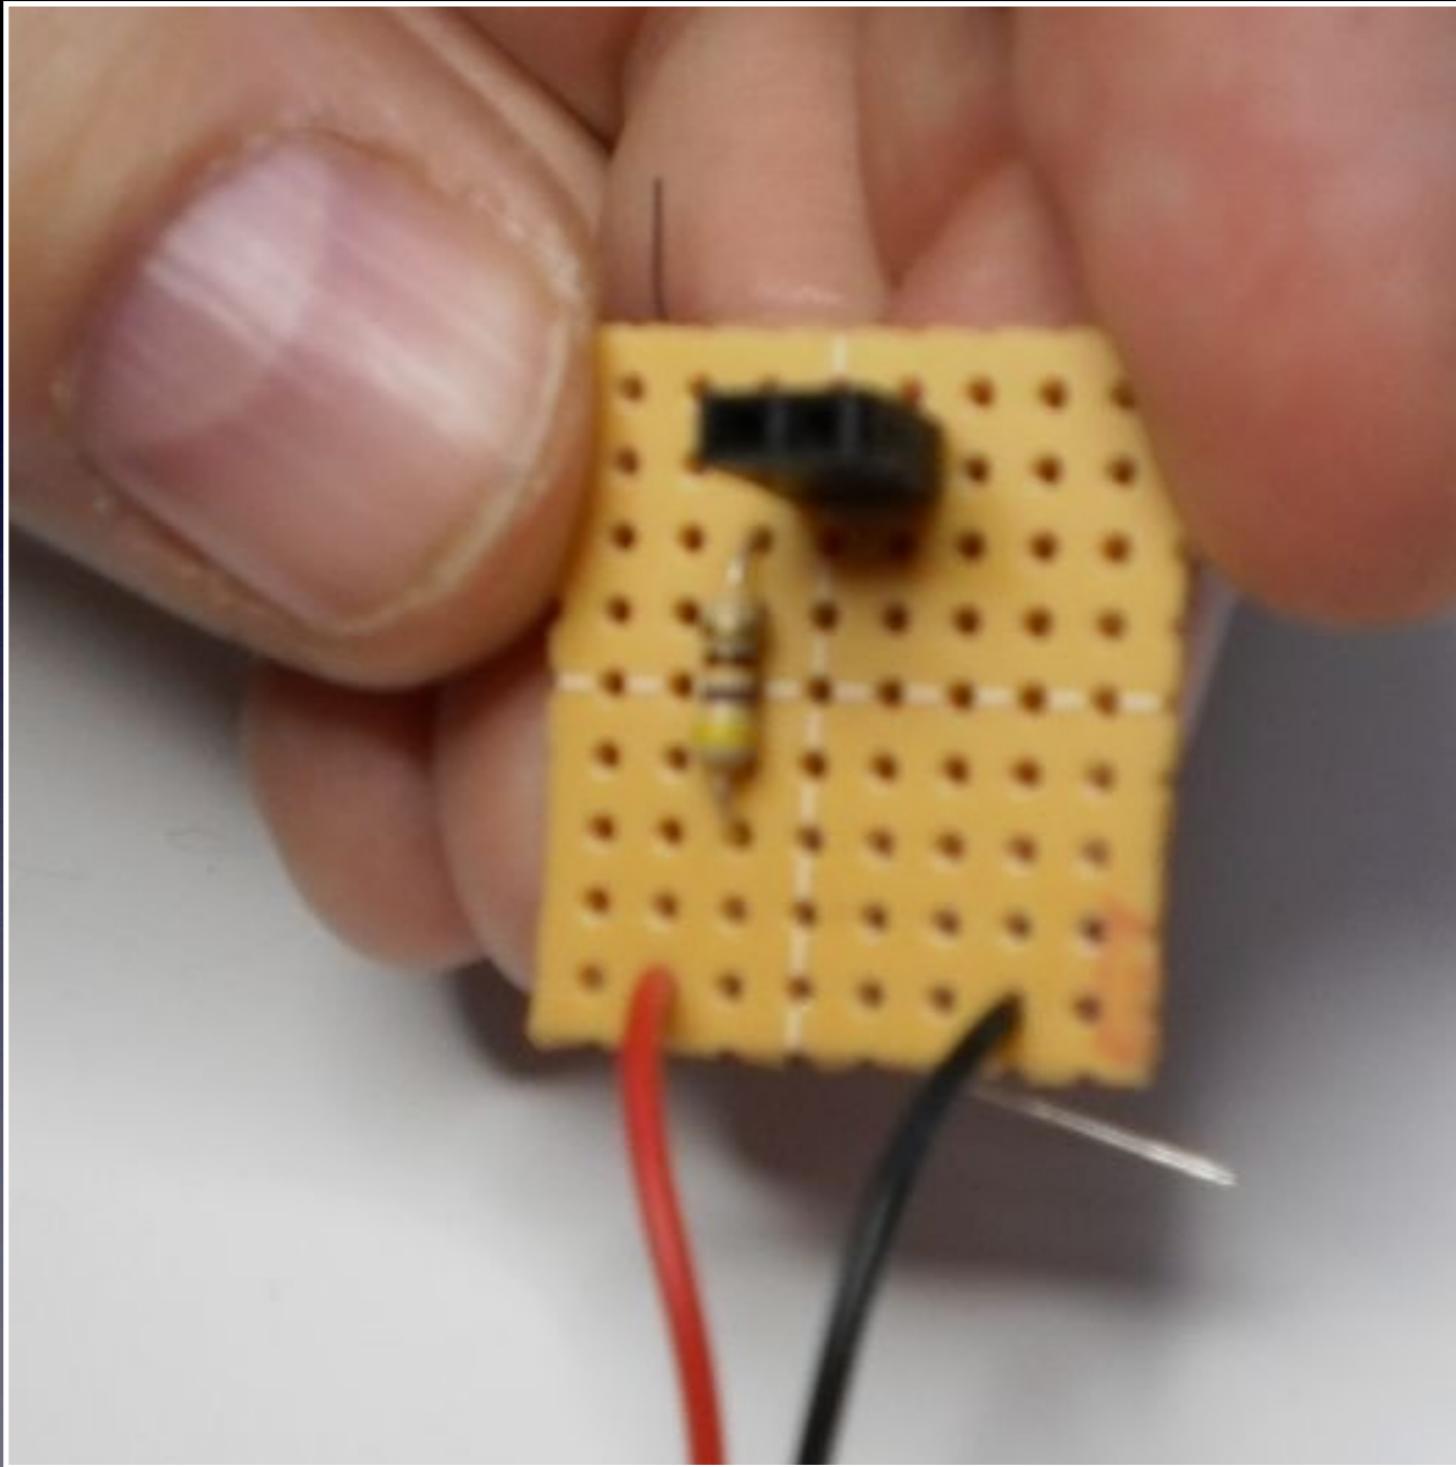




SynShop

Soldering Buildup

5

**Working
from the
bottom
side now,
extend
resistor
legs to
positive
lead and
solder.**

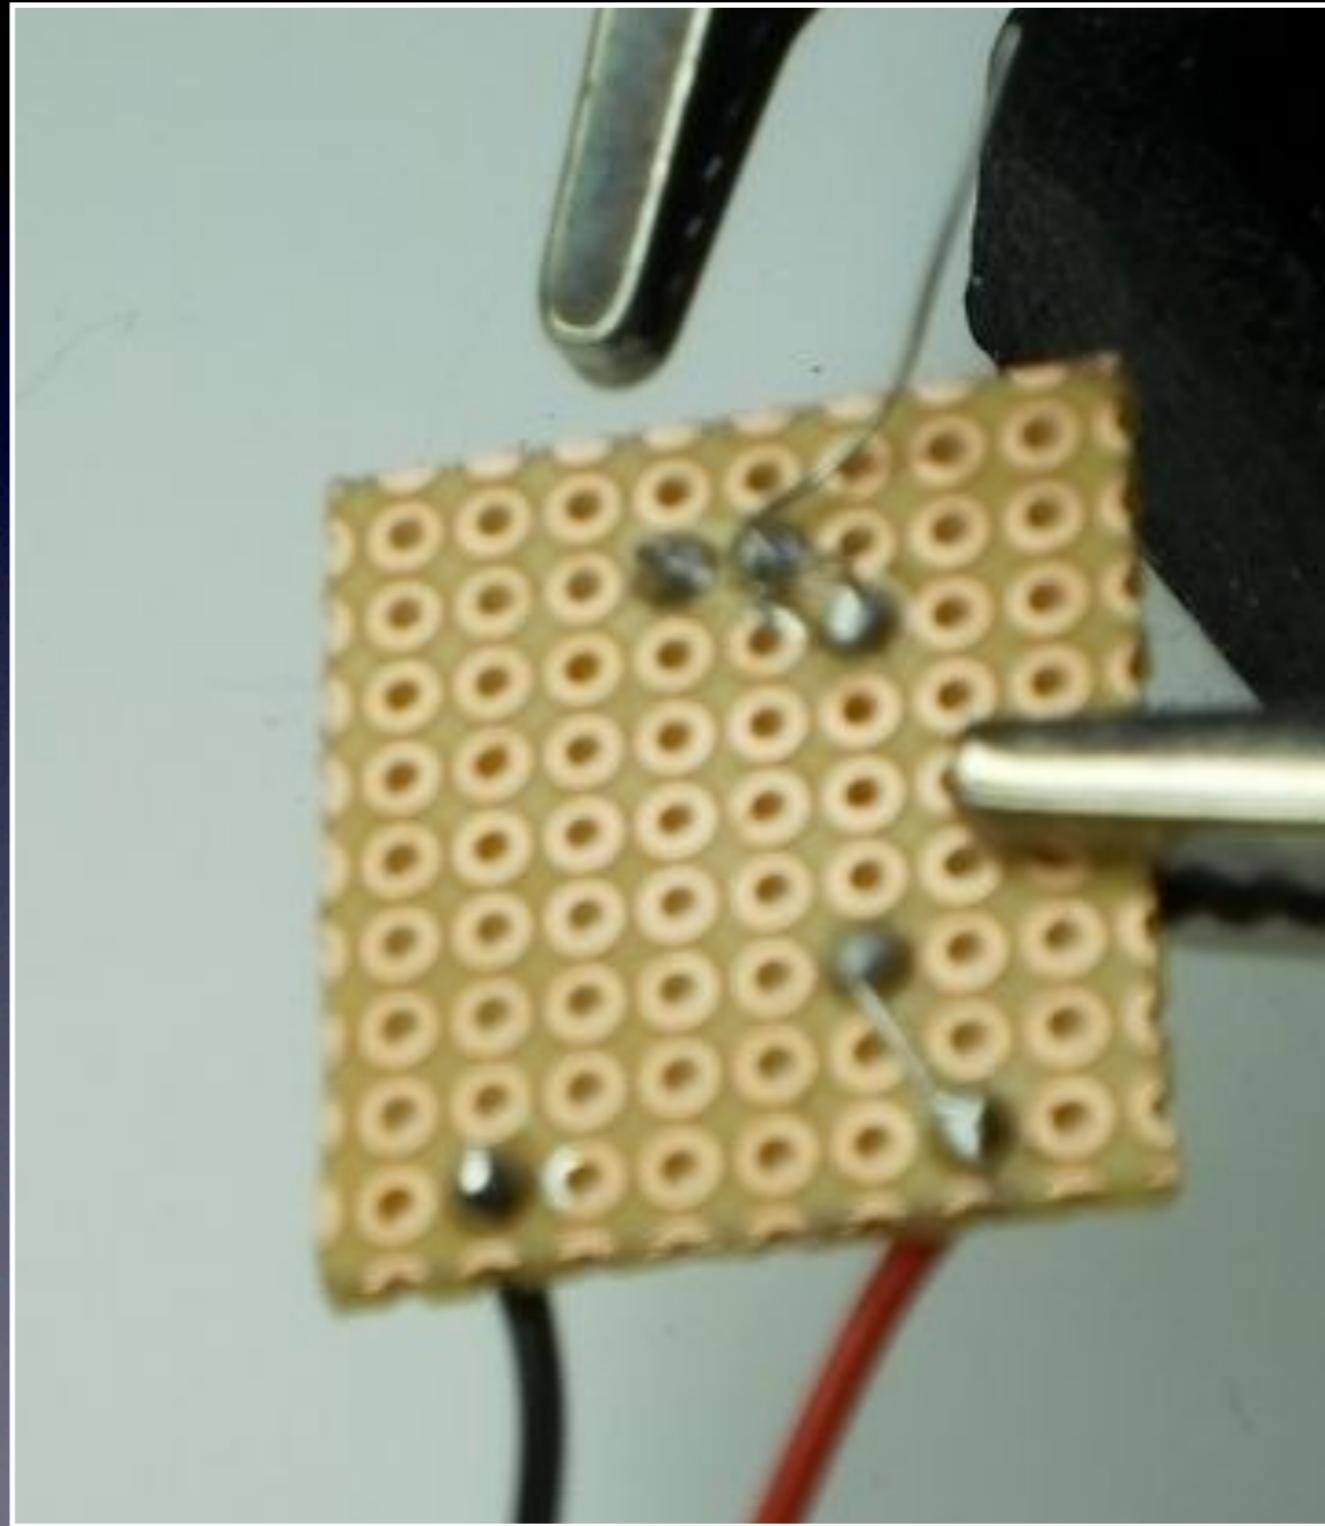




SynShop

Soldering Buildup

6

**Solder
remaining
lead to
one side
of two pin
header.**

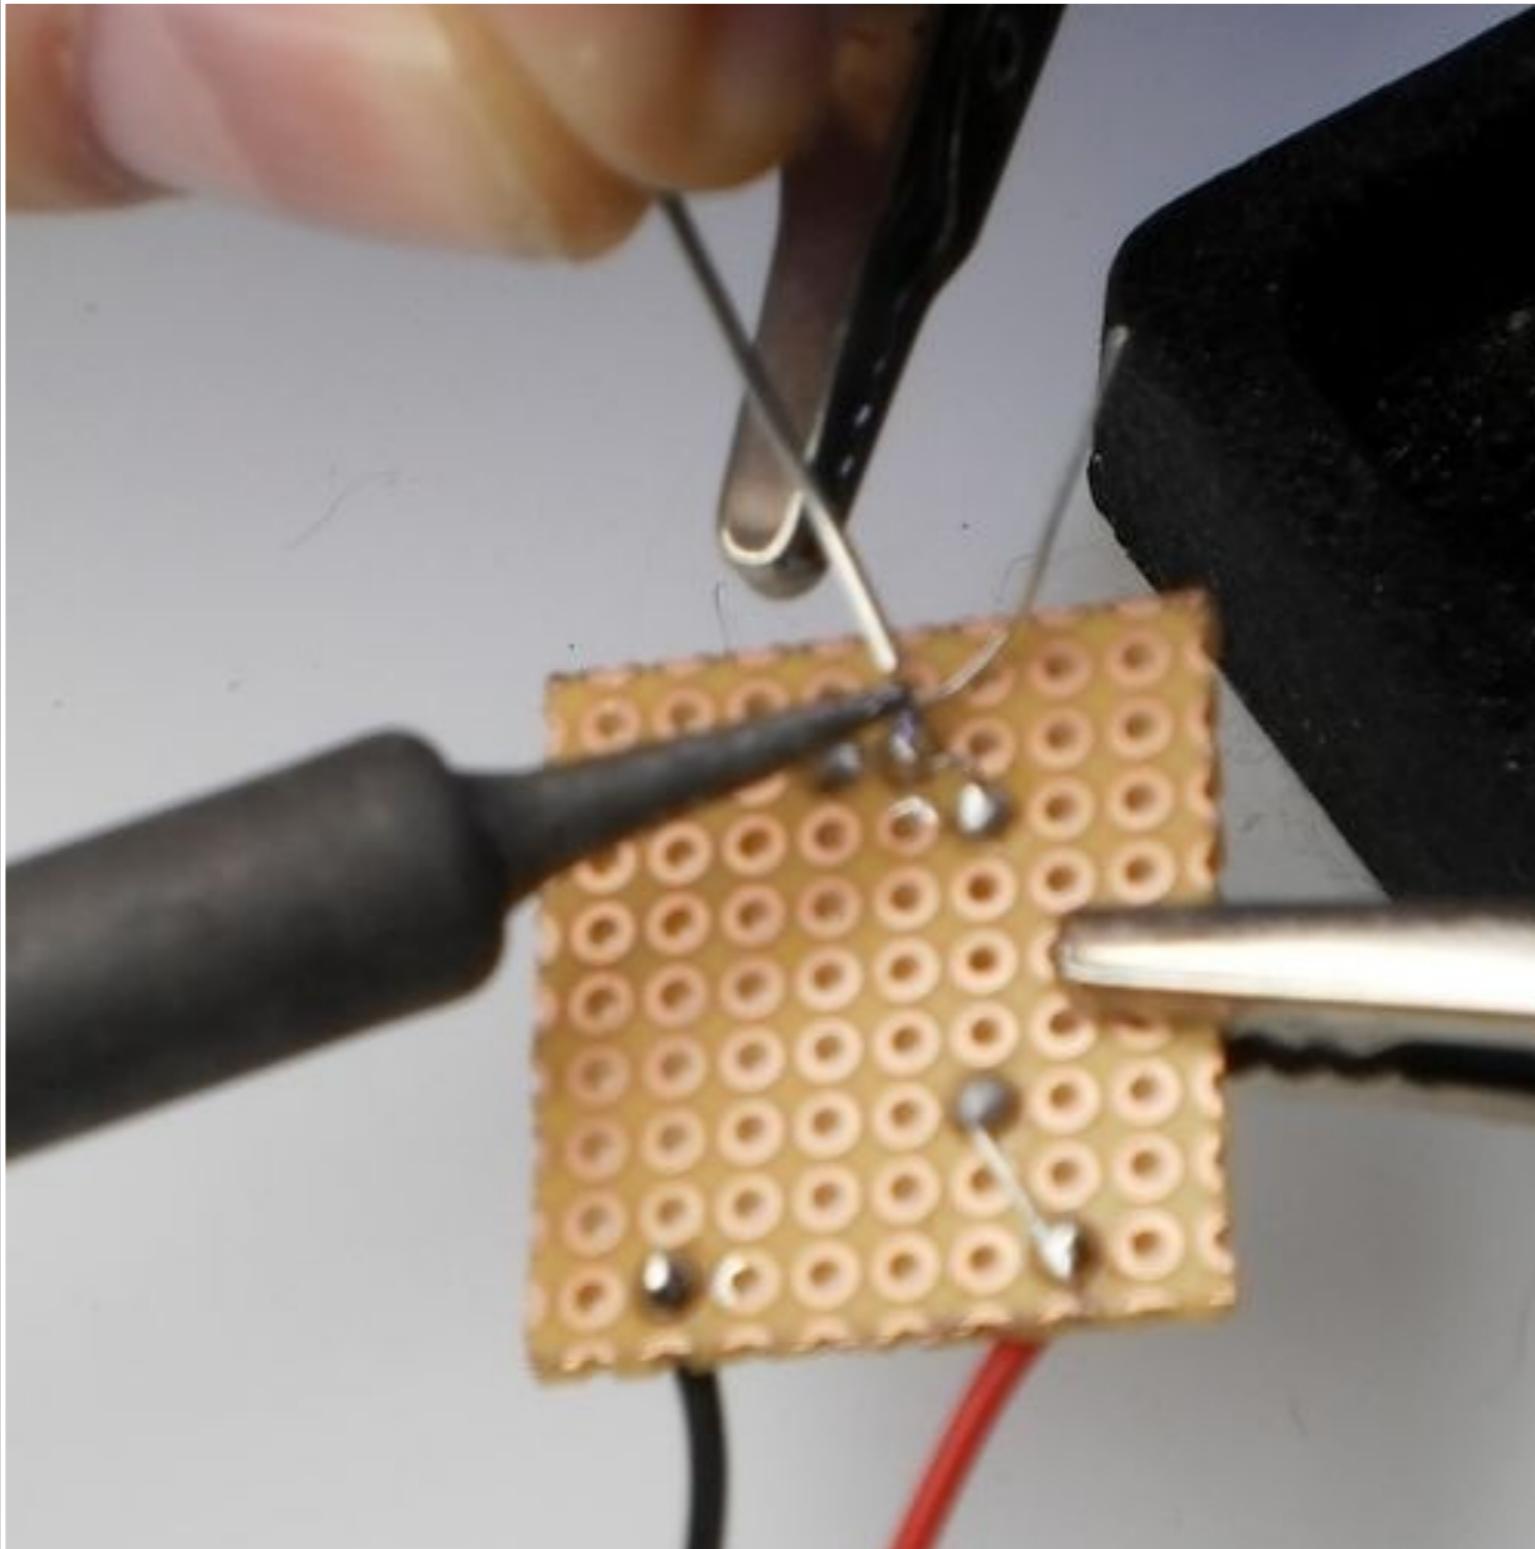




SynShop

Soldering Buildup

7

**Solder
jumper
from two
pin header
to positive
lead.**

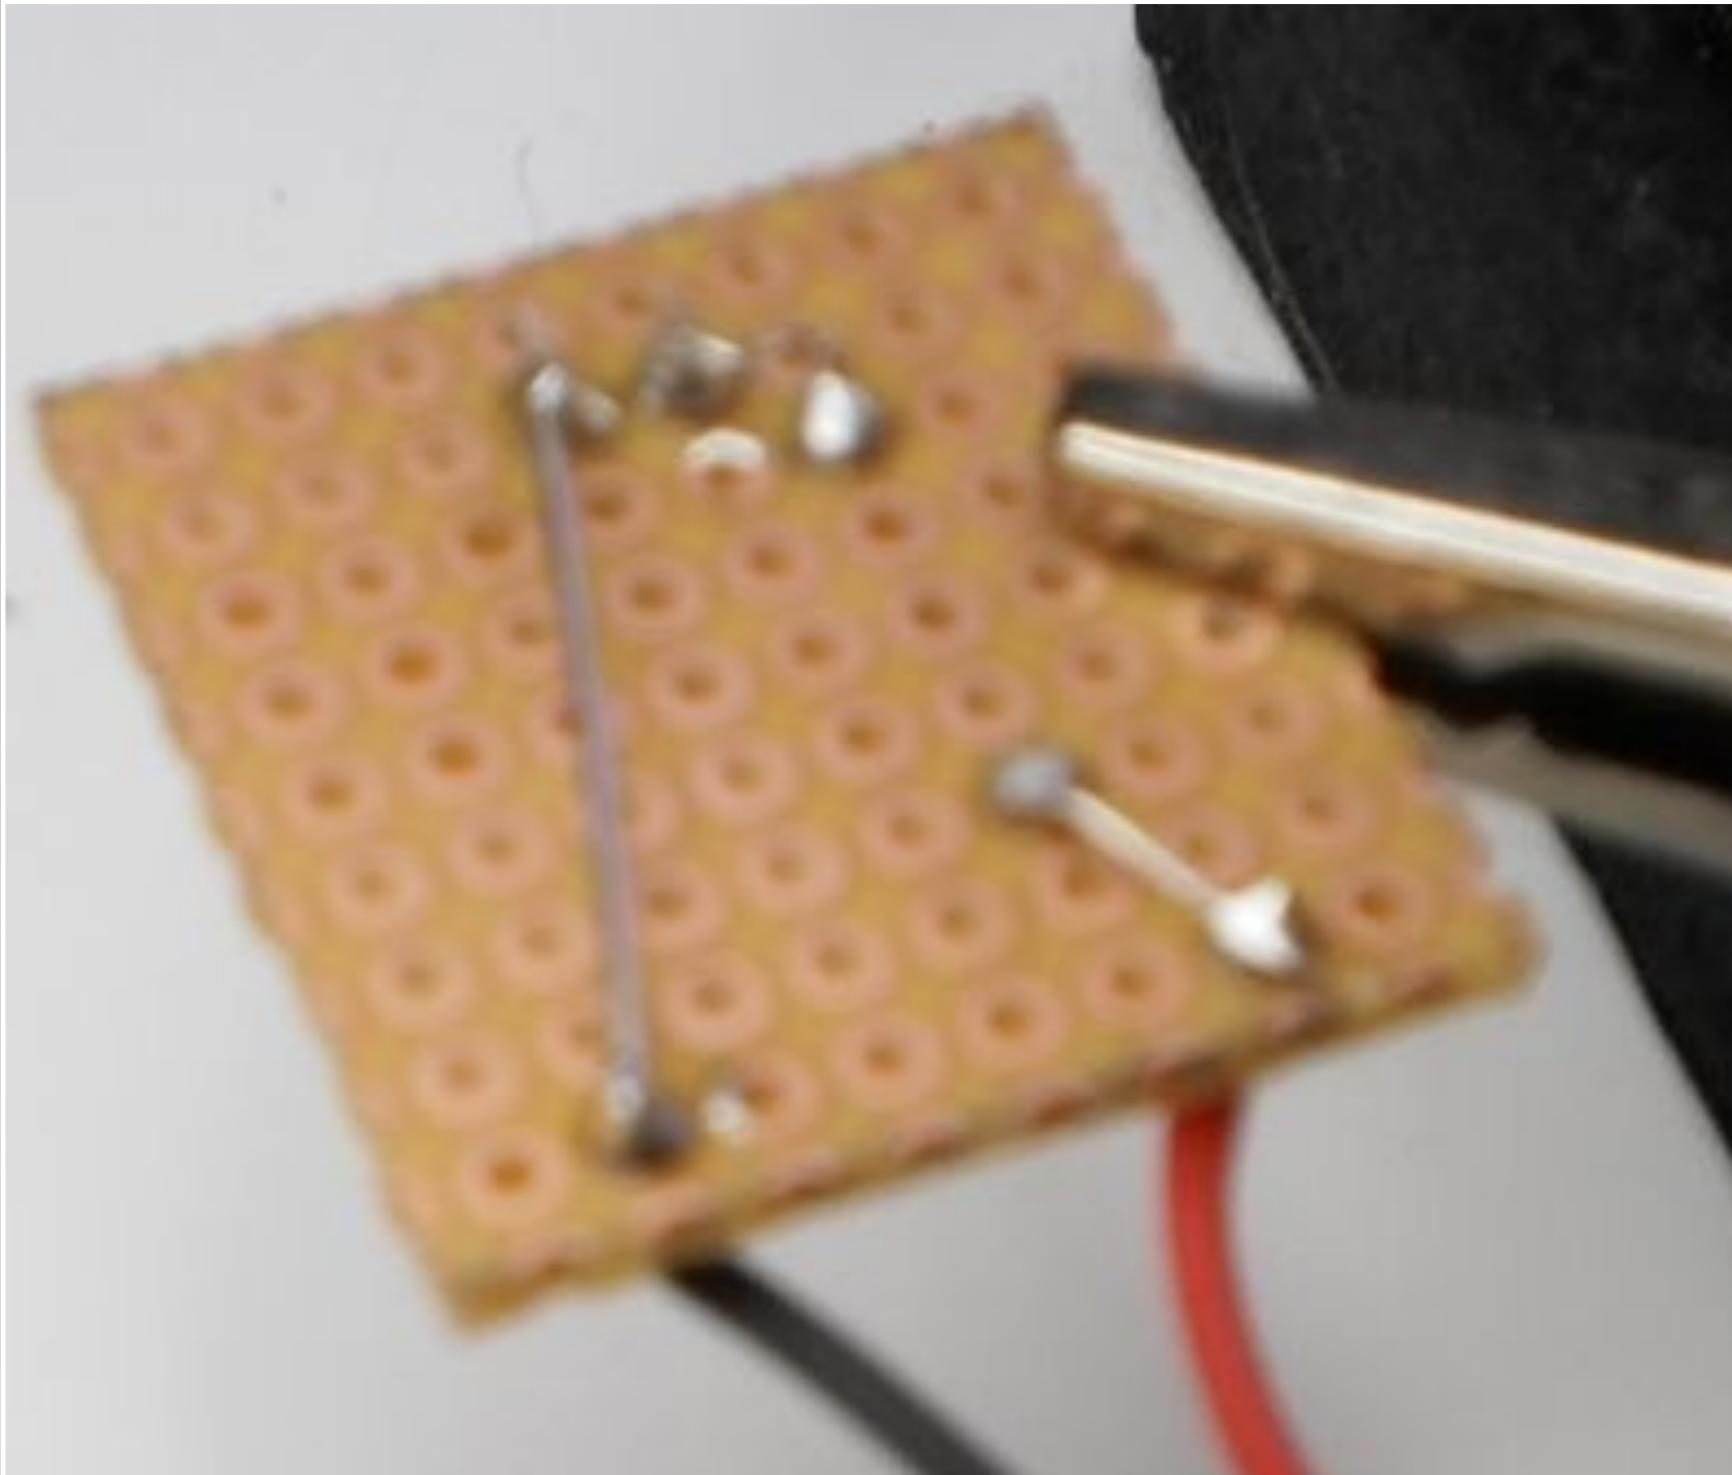




SynShop

Soldering Buildup

8

**Add strain
relief as
shown.
Solder in
place.**

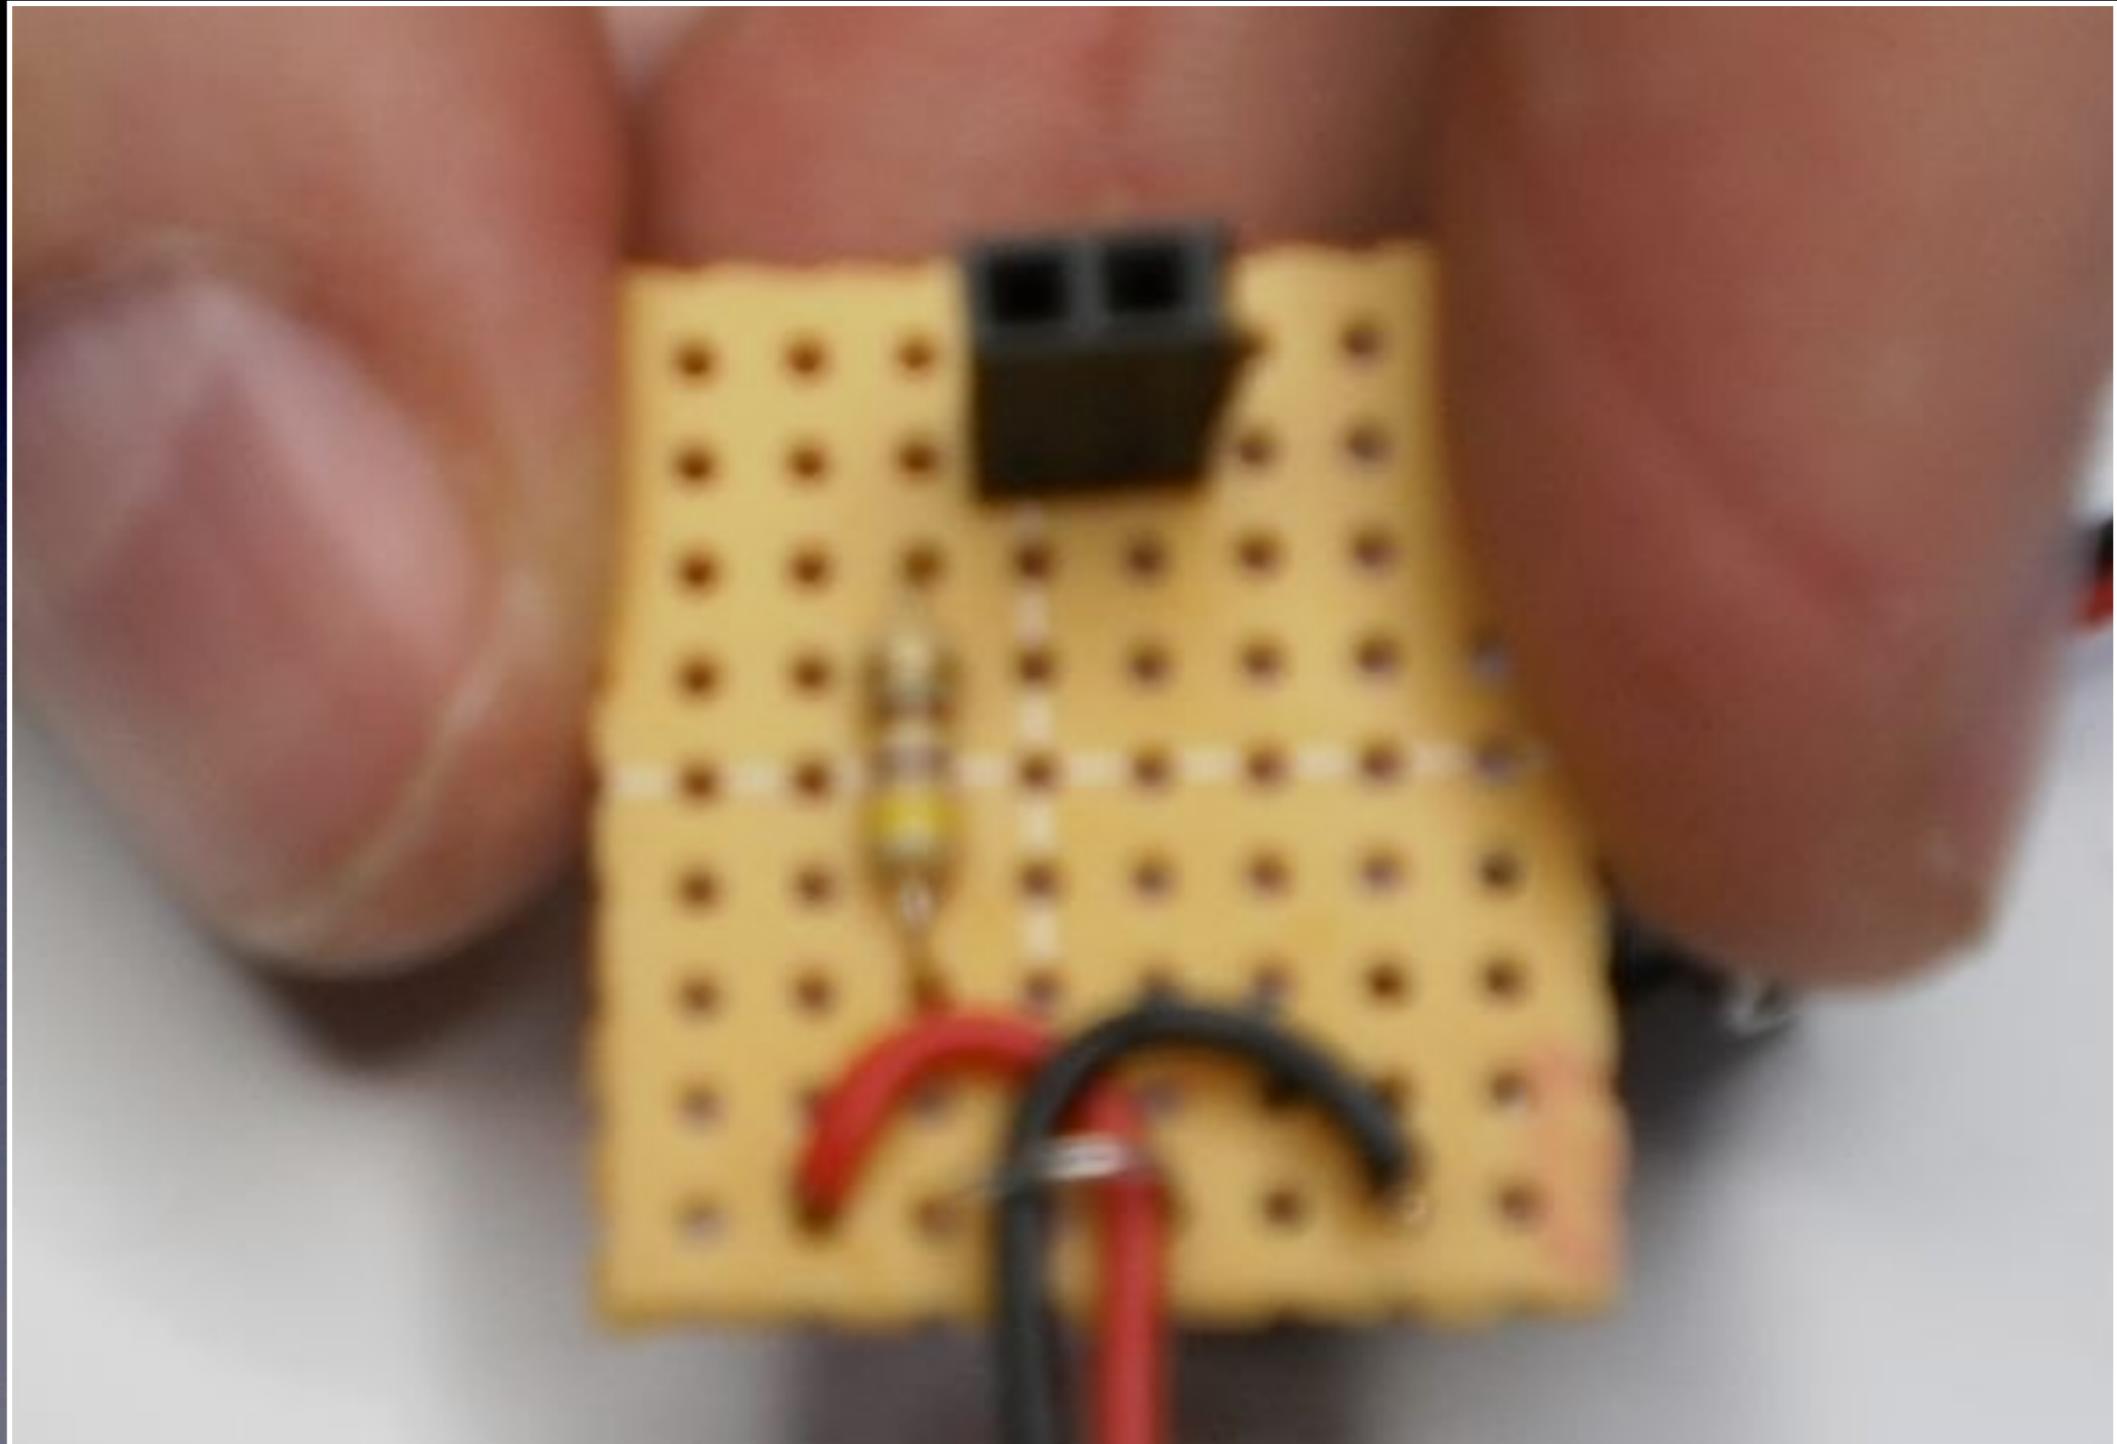



SynShop

Soldering Buildup

9

Connect
battery
and place
led long
leg into
the right
hole, short
leg into
left hole.

Led
should
light.






SynShop

Soldering Buildup

10

Reverse
the LED.
LED
should
turn off.

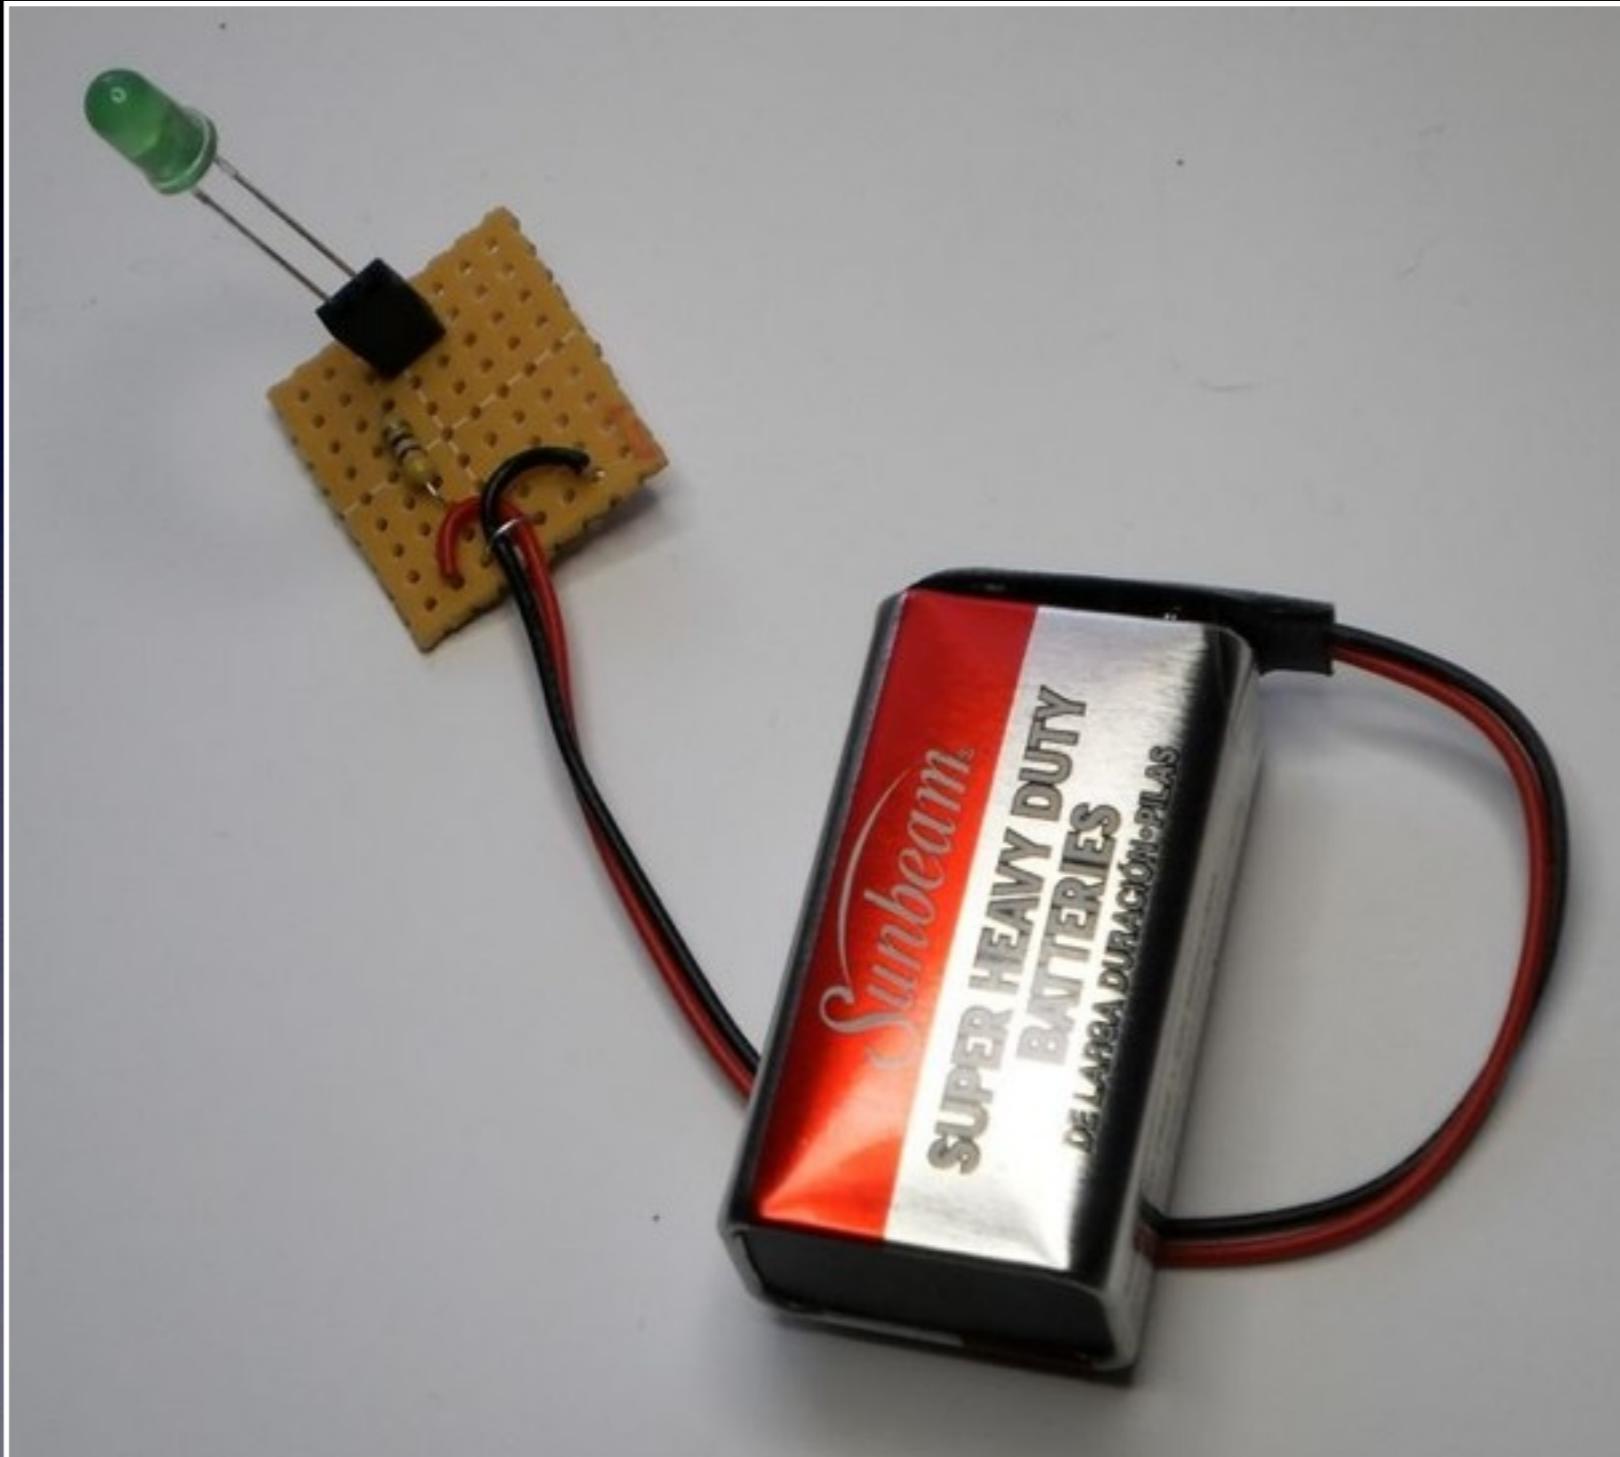



SynShop Soldering Buildup

You now have an
**excellent LED
tester.**



SynShop

Soldering Buildup


Remove battery.



SynShop

Soldering Buildup

Protoboards are great for one of a kind proof of concepts, but quickly get messy.

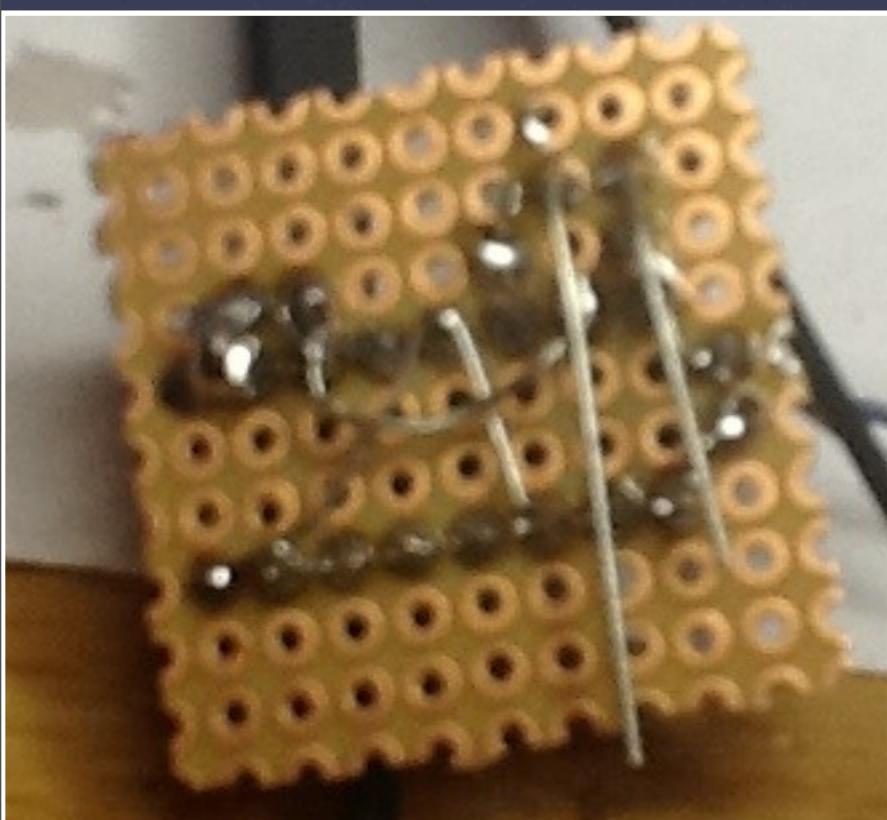




SynShop

Soldering Buildup

The next logical step is PCBs. All the connections are already made.


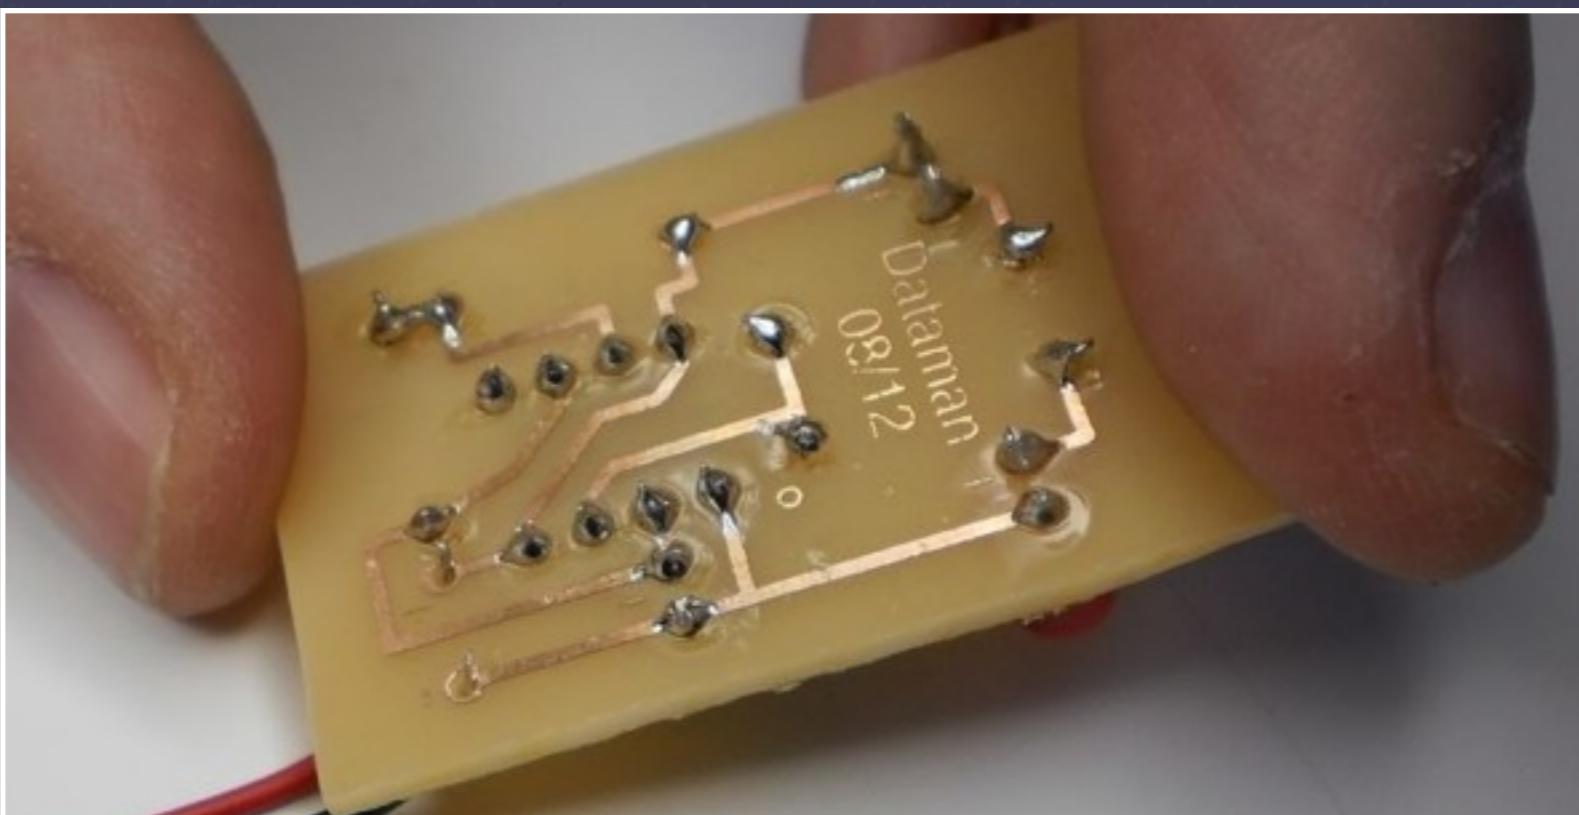




SynShop

Soldering Buildup

I learned how to make PCBs at home 3 years ago. It's cheap and simple.

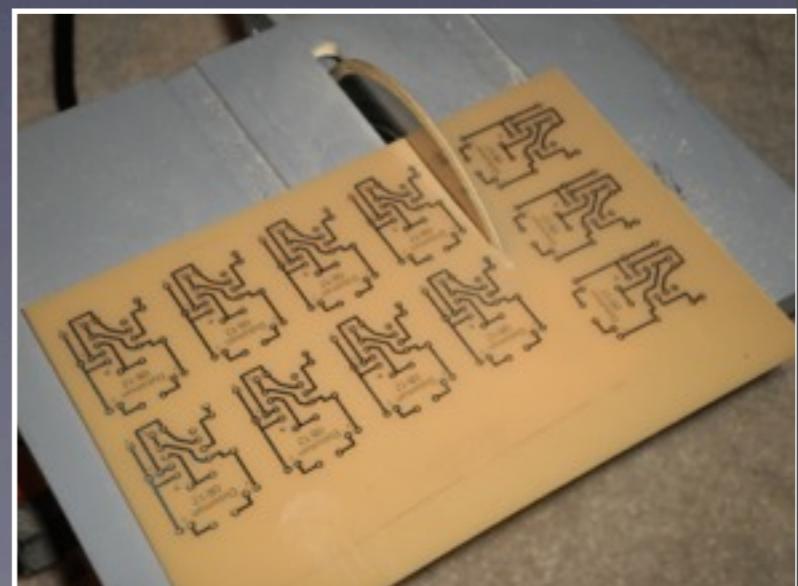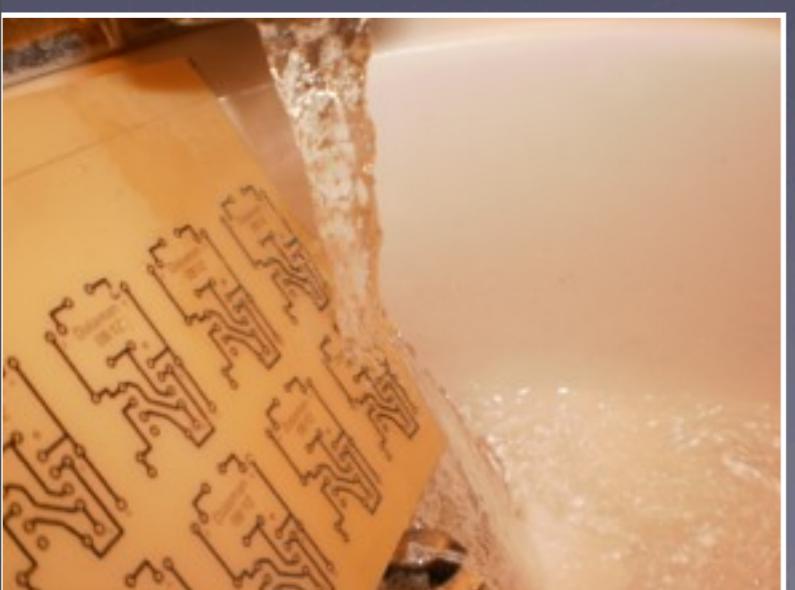



SynShop
Soldering Buildup


How to make PCBs!



SynShop Soldering Buildup

1

Design the
schematic
in
EagleCad.

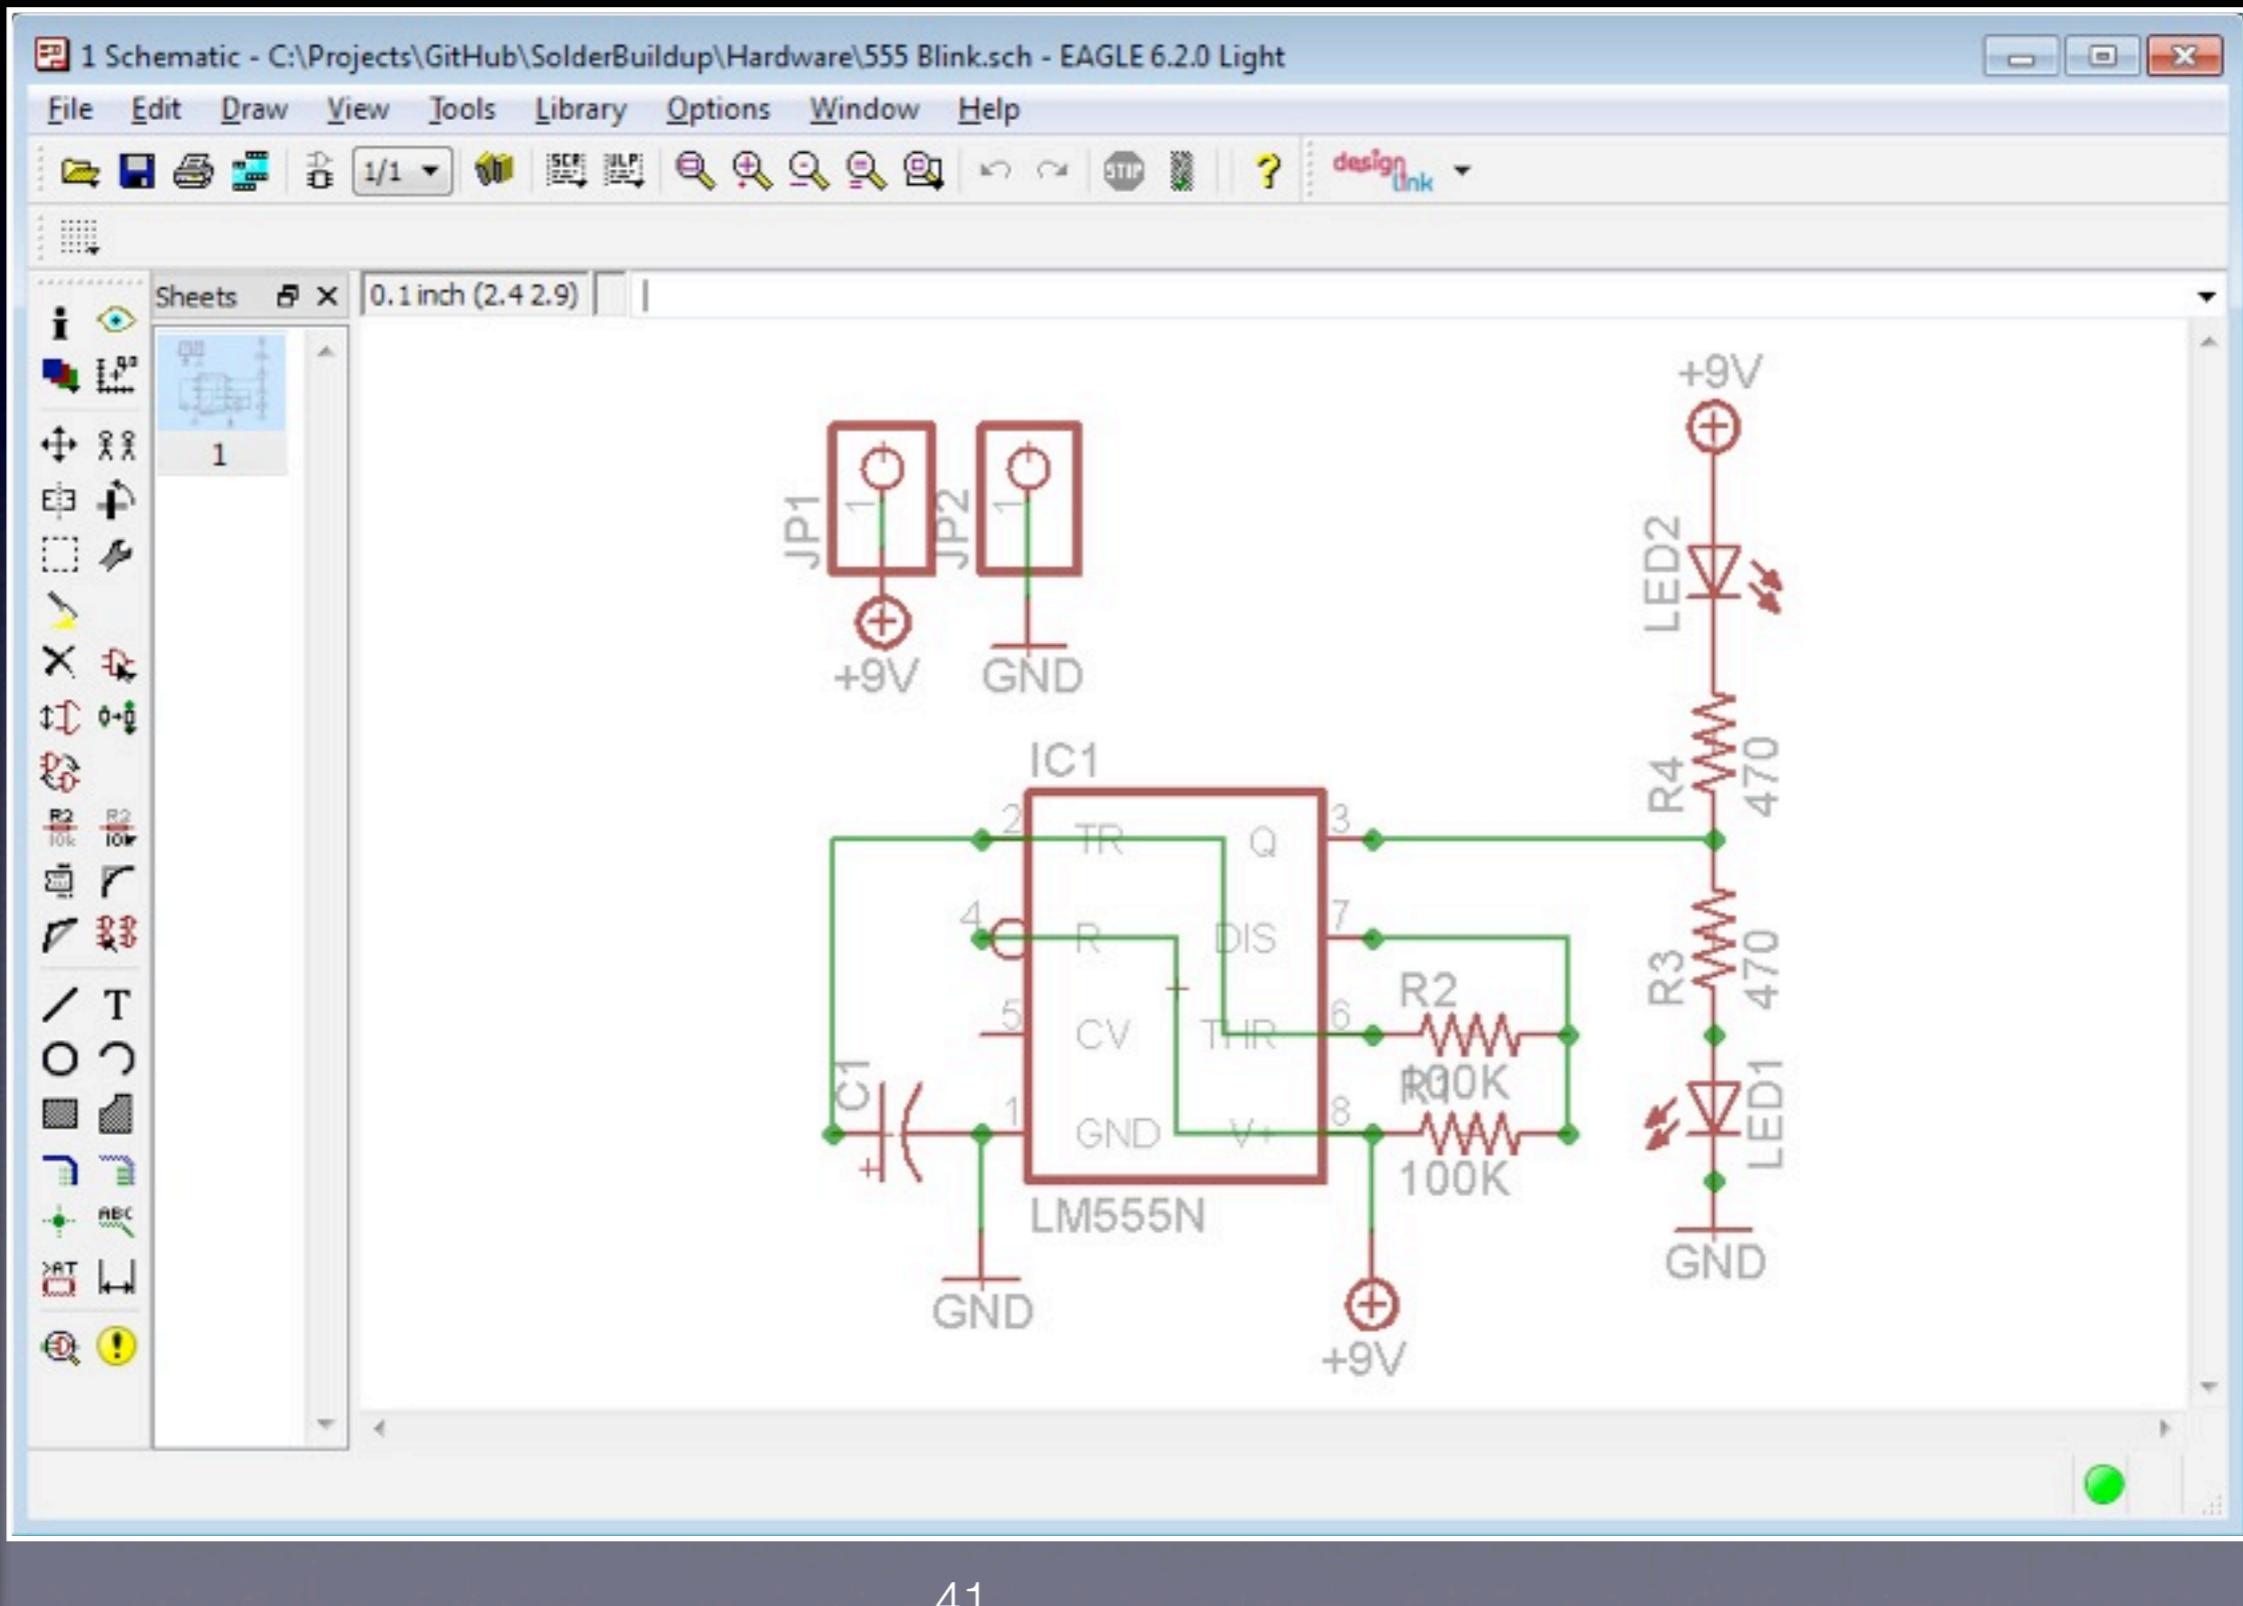




SynShop

Soldering Buildup

2


Test the circuit using a breadboard.

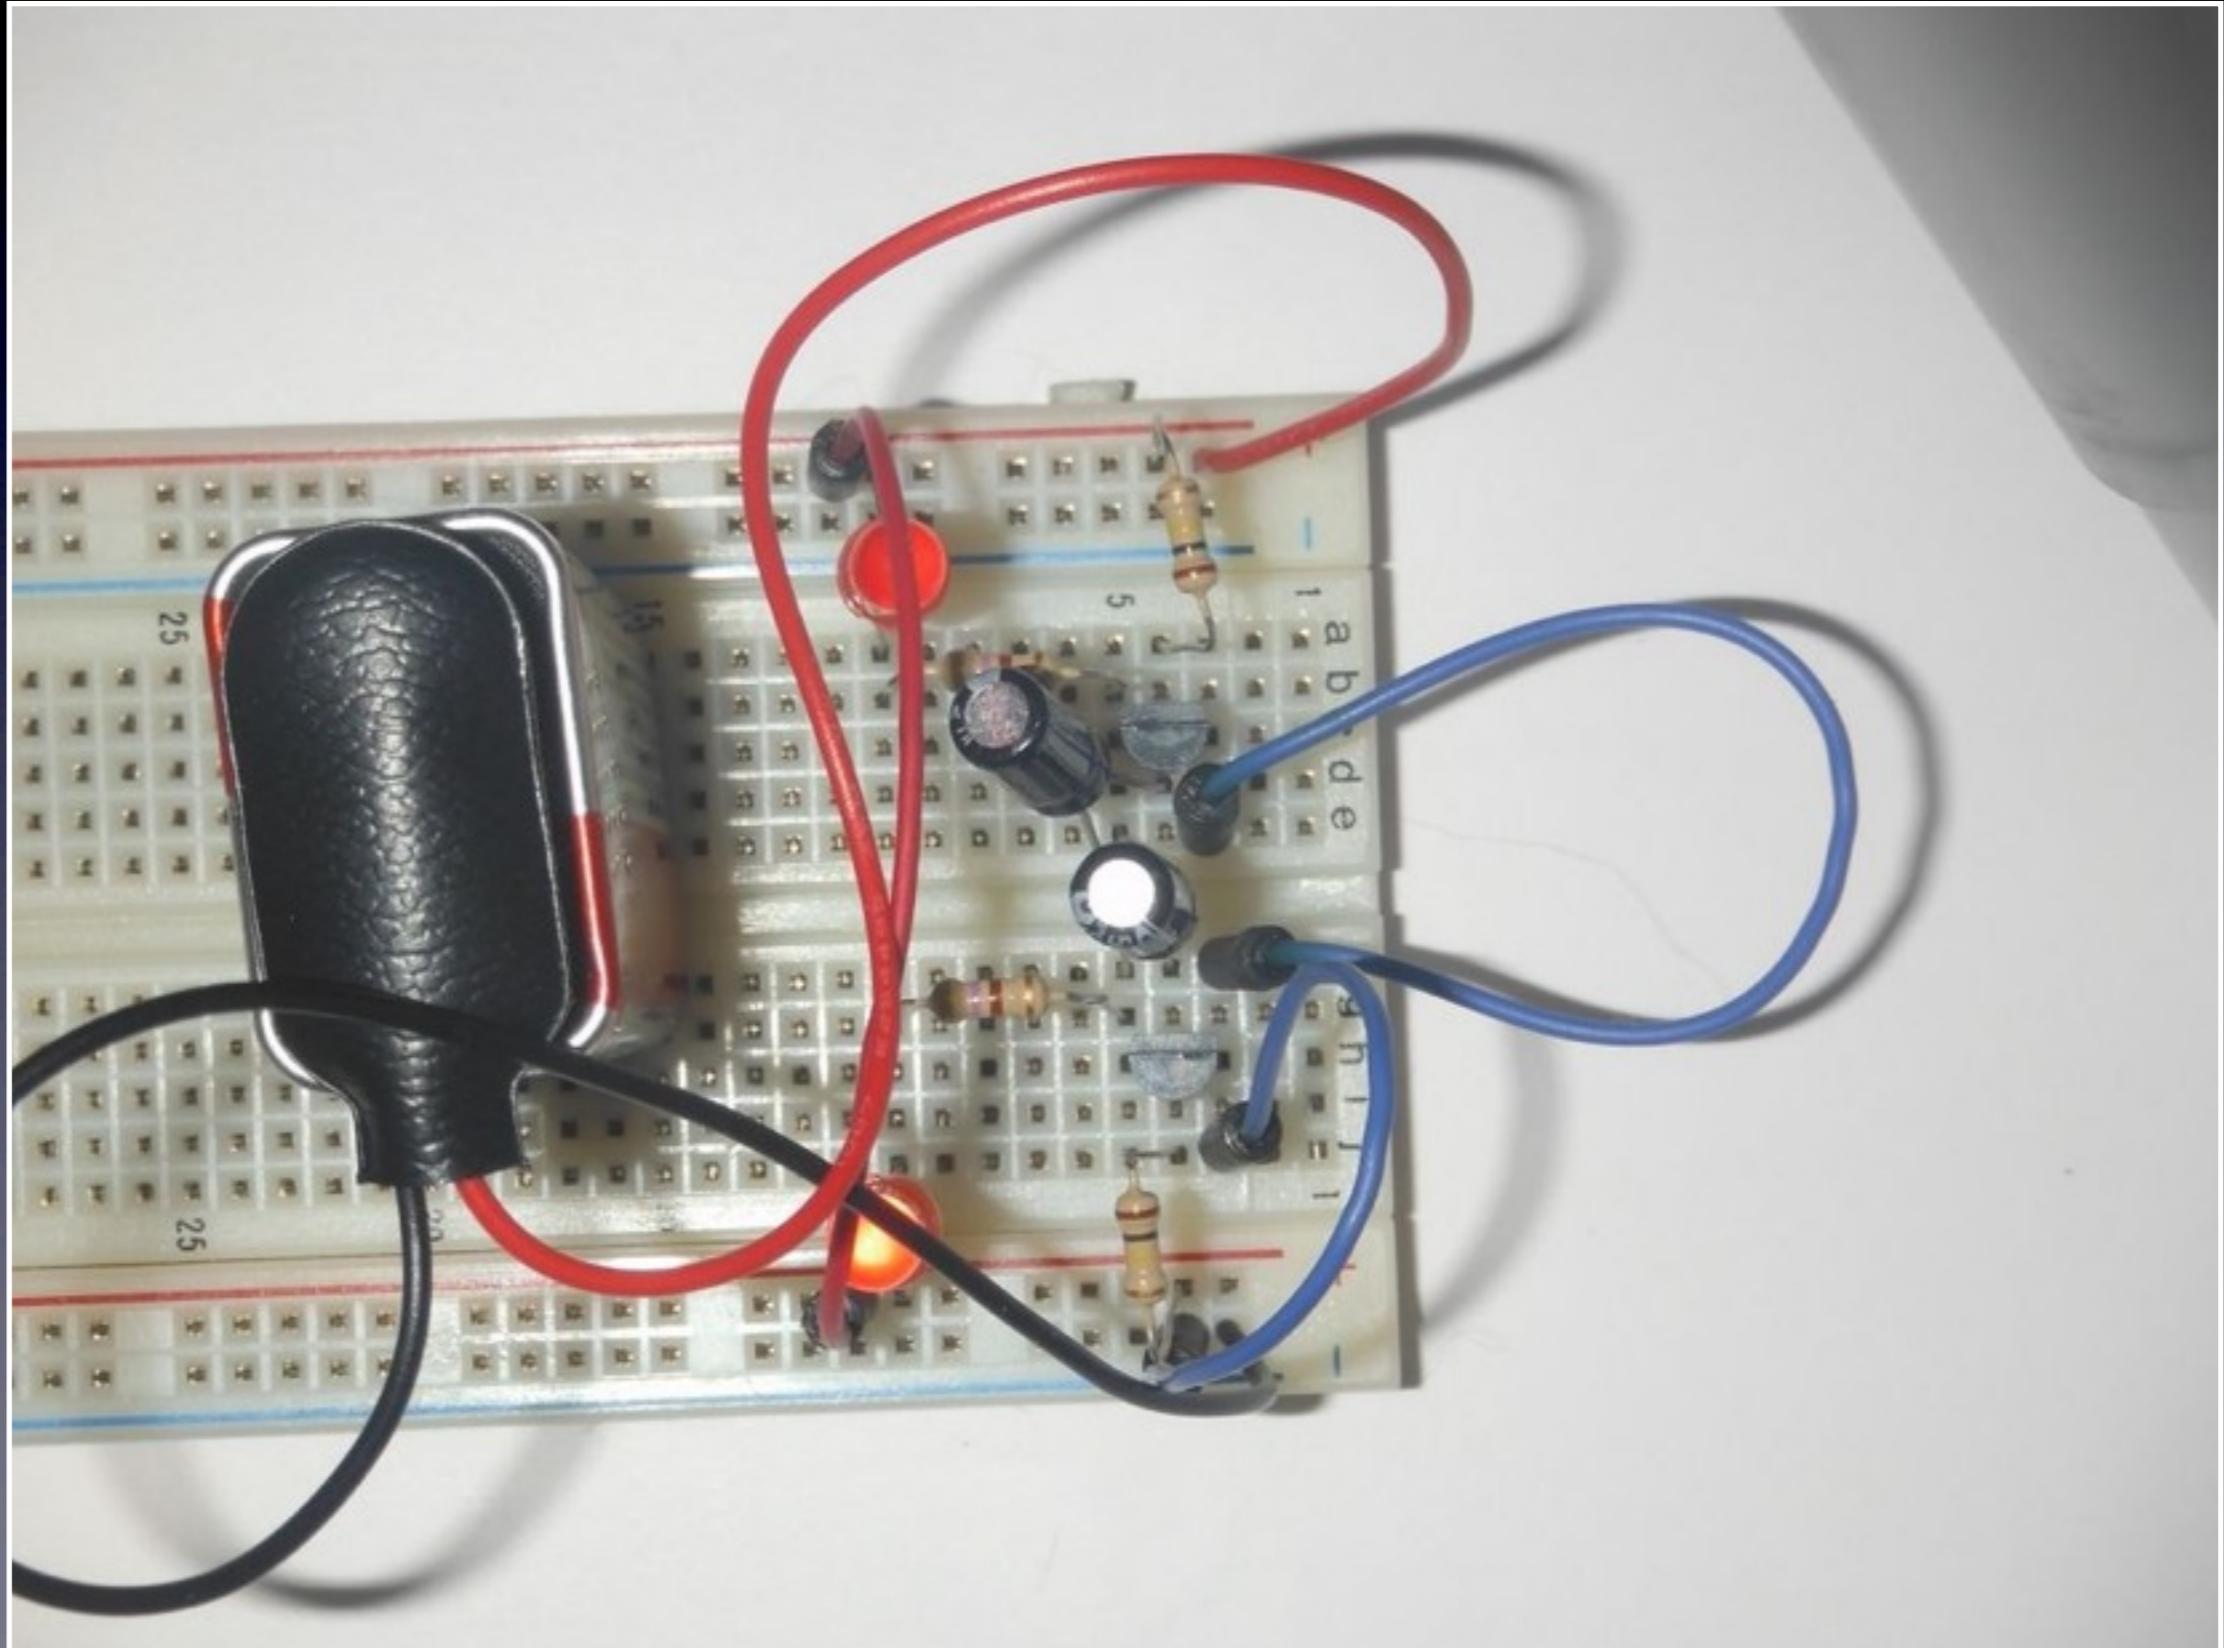



SynShop Soldering Buildup

3 Layout board

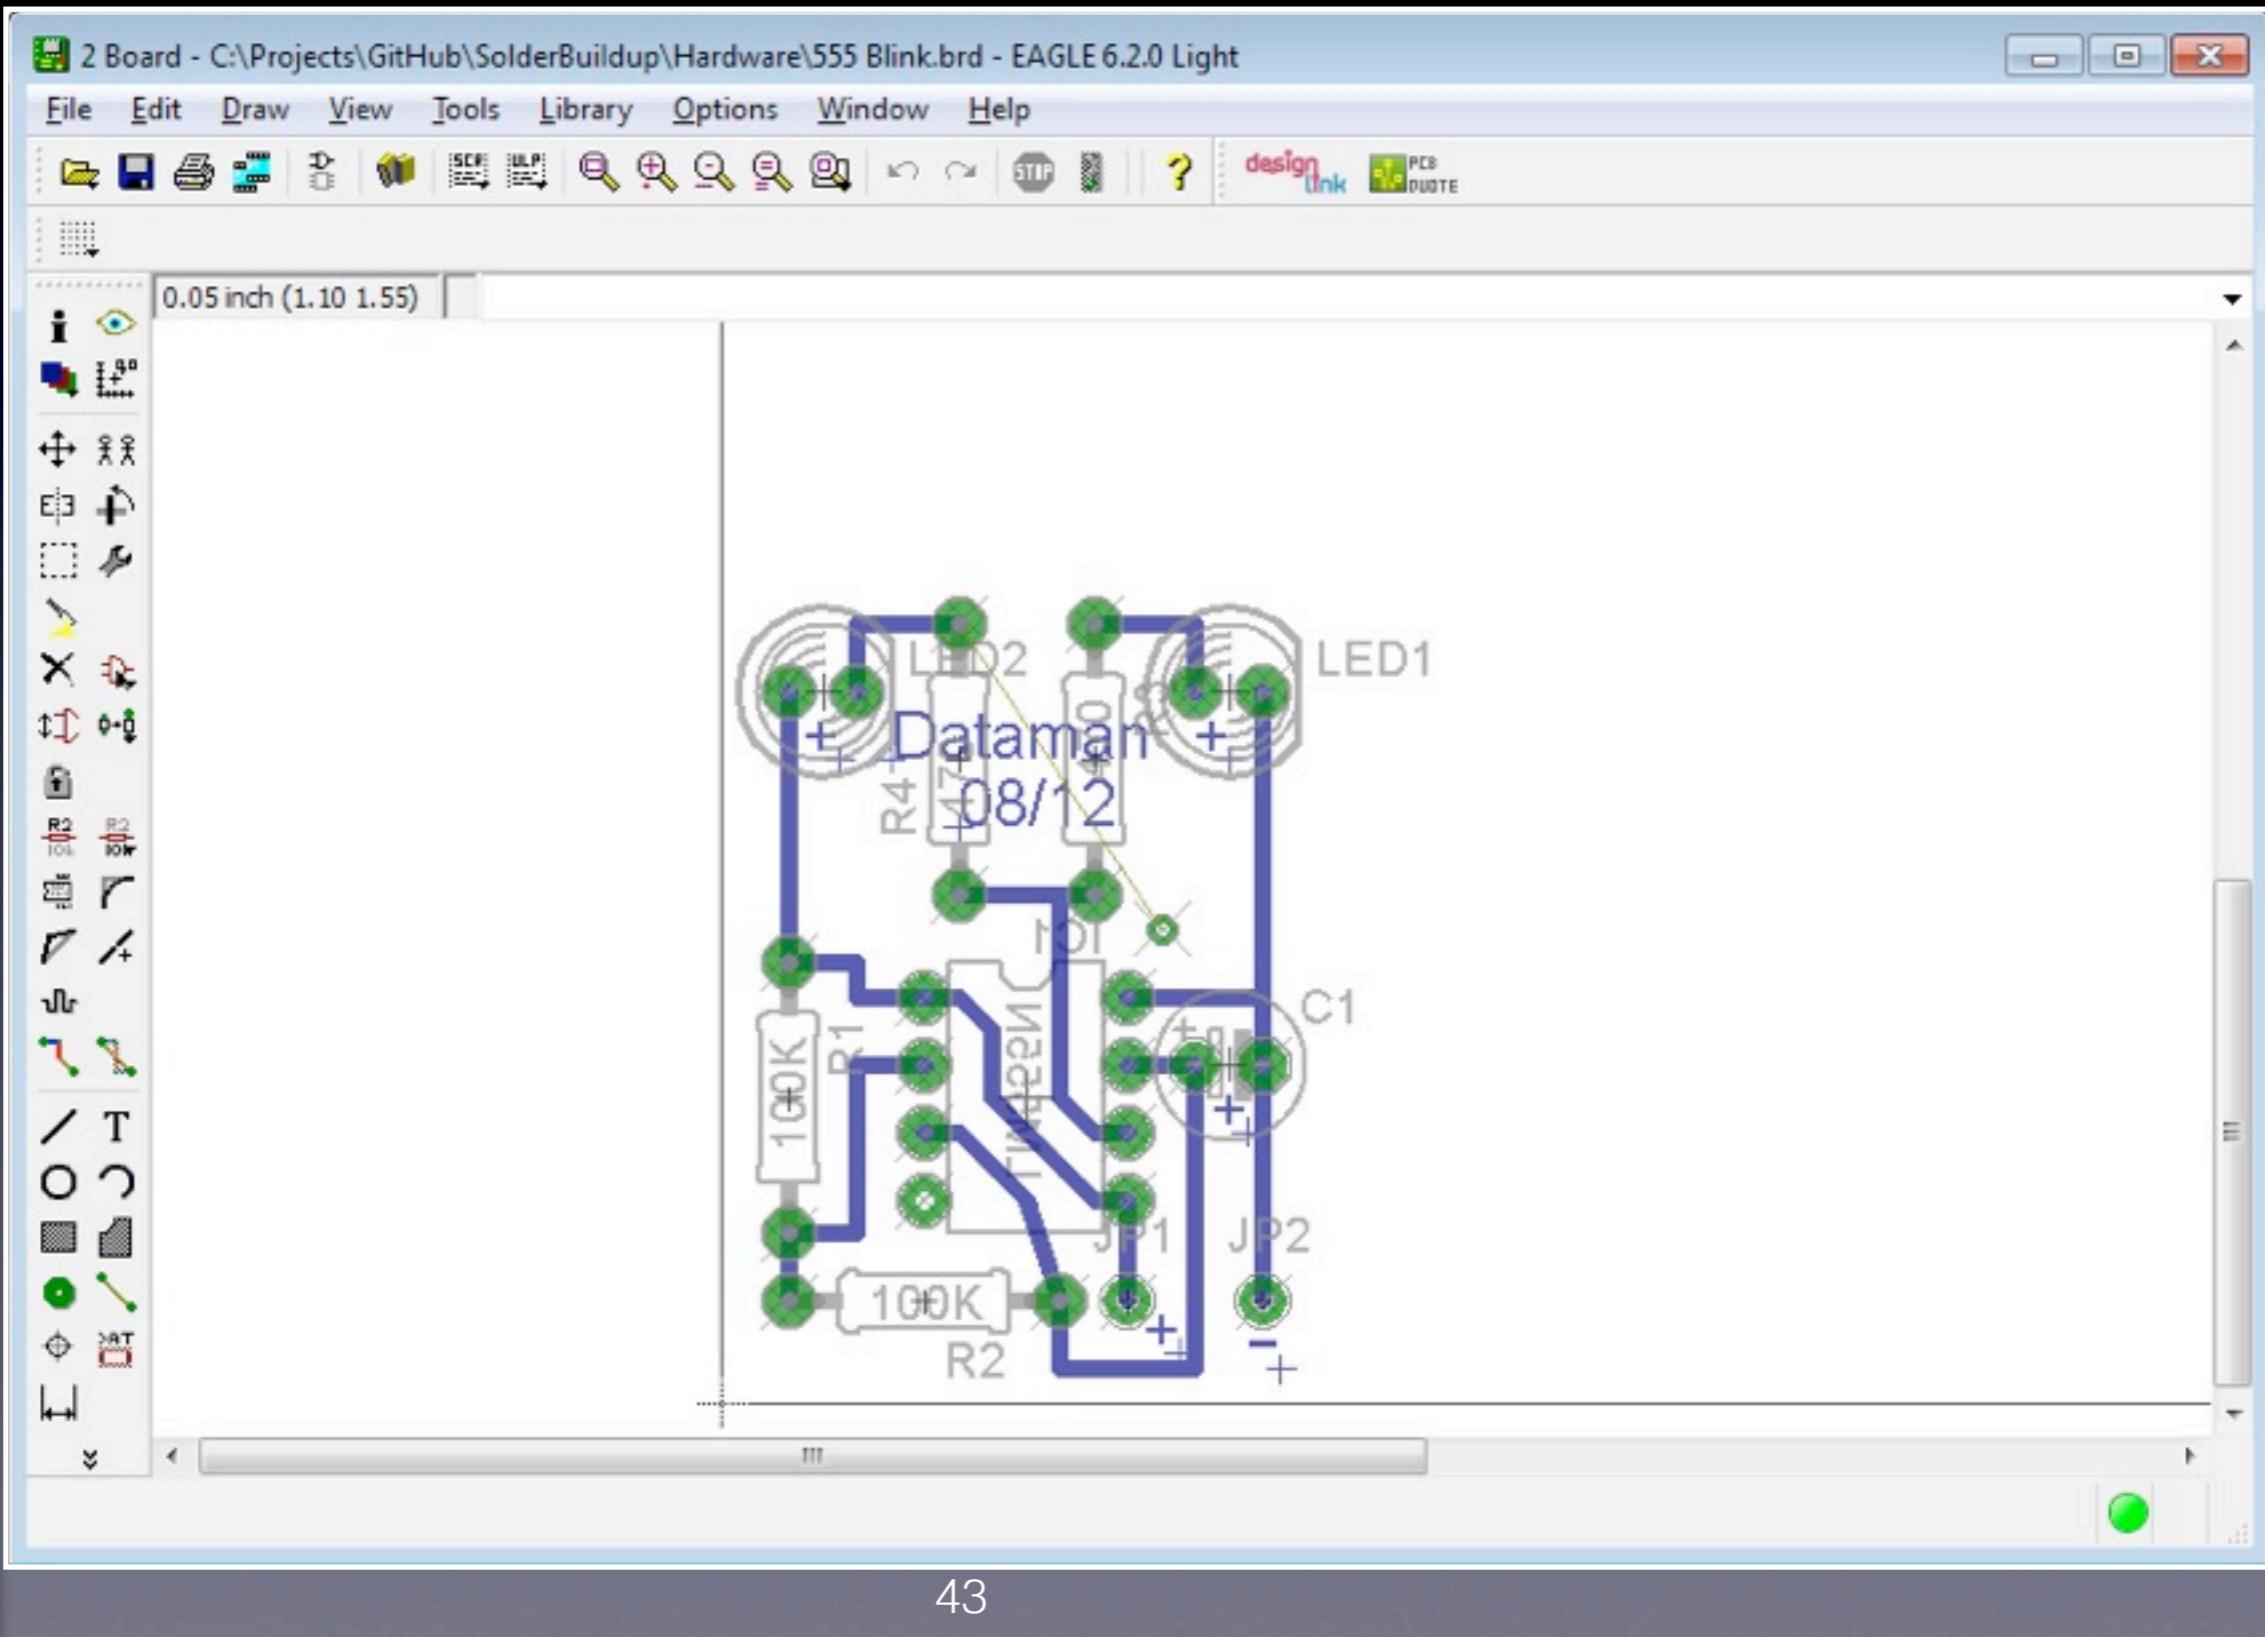




SynShop Soldering Buildup

4

Replicate
the design
into a
burn
layout.

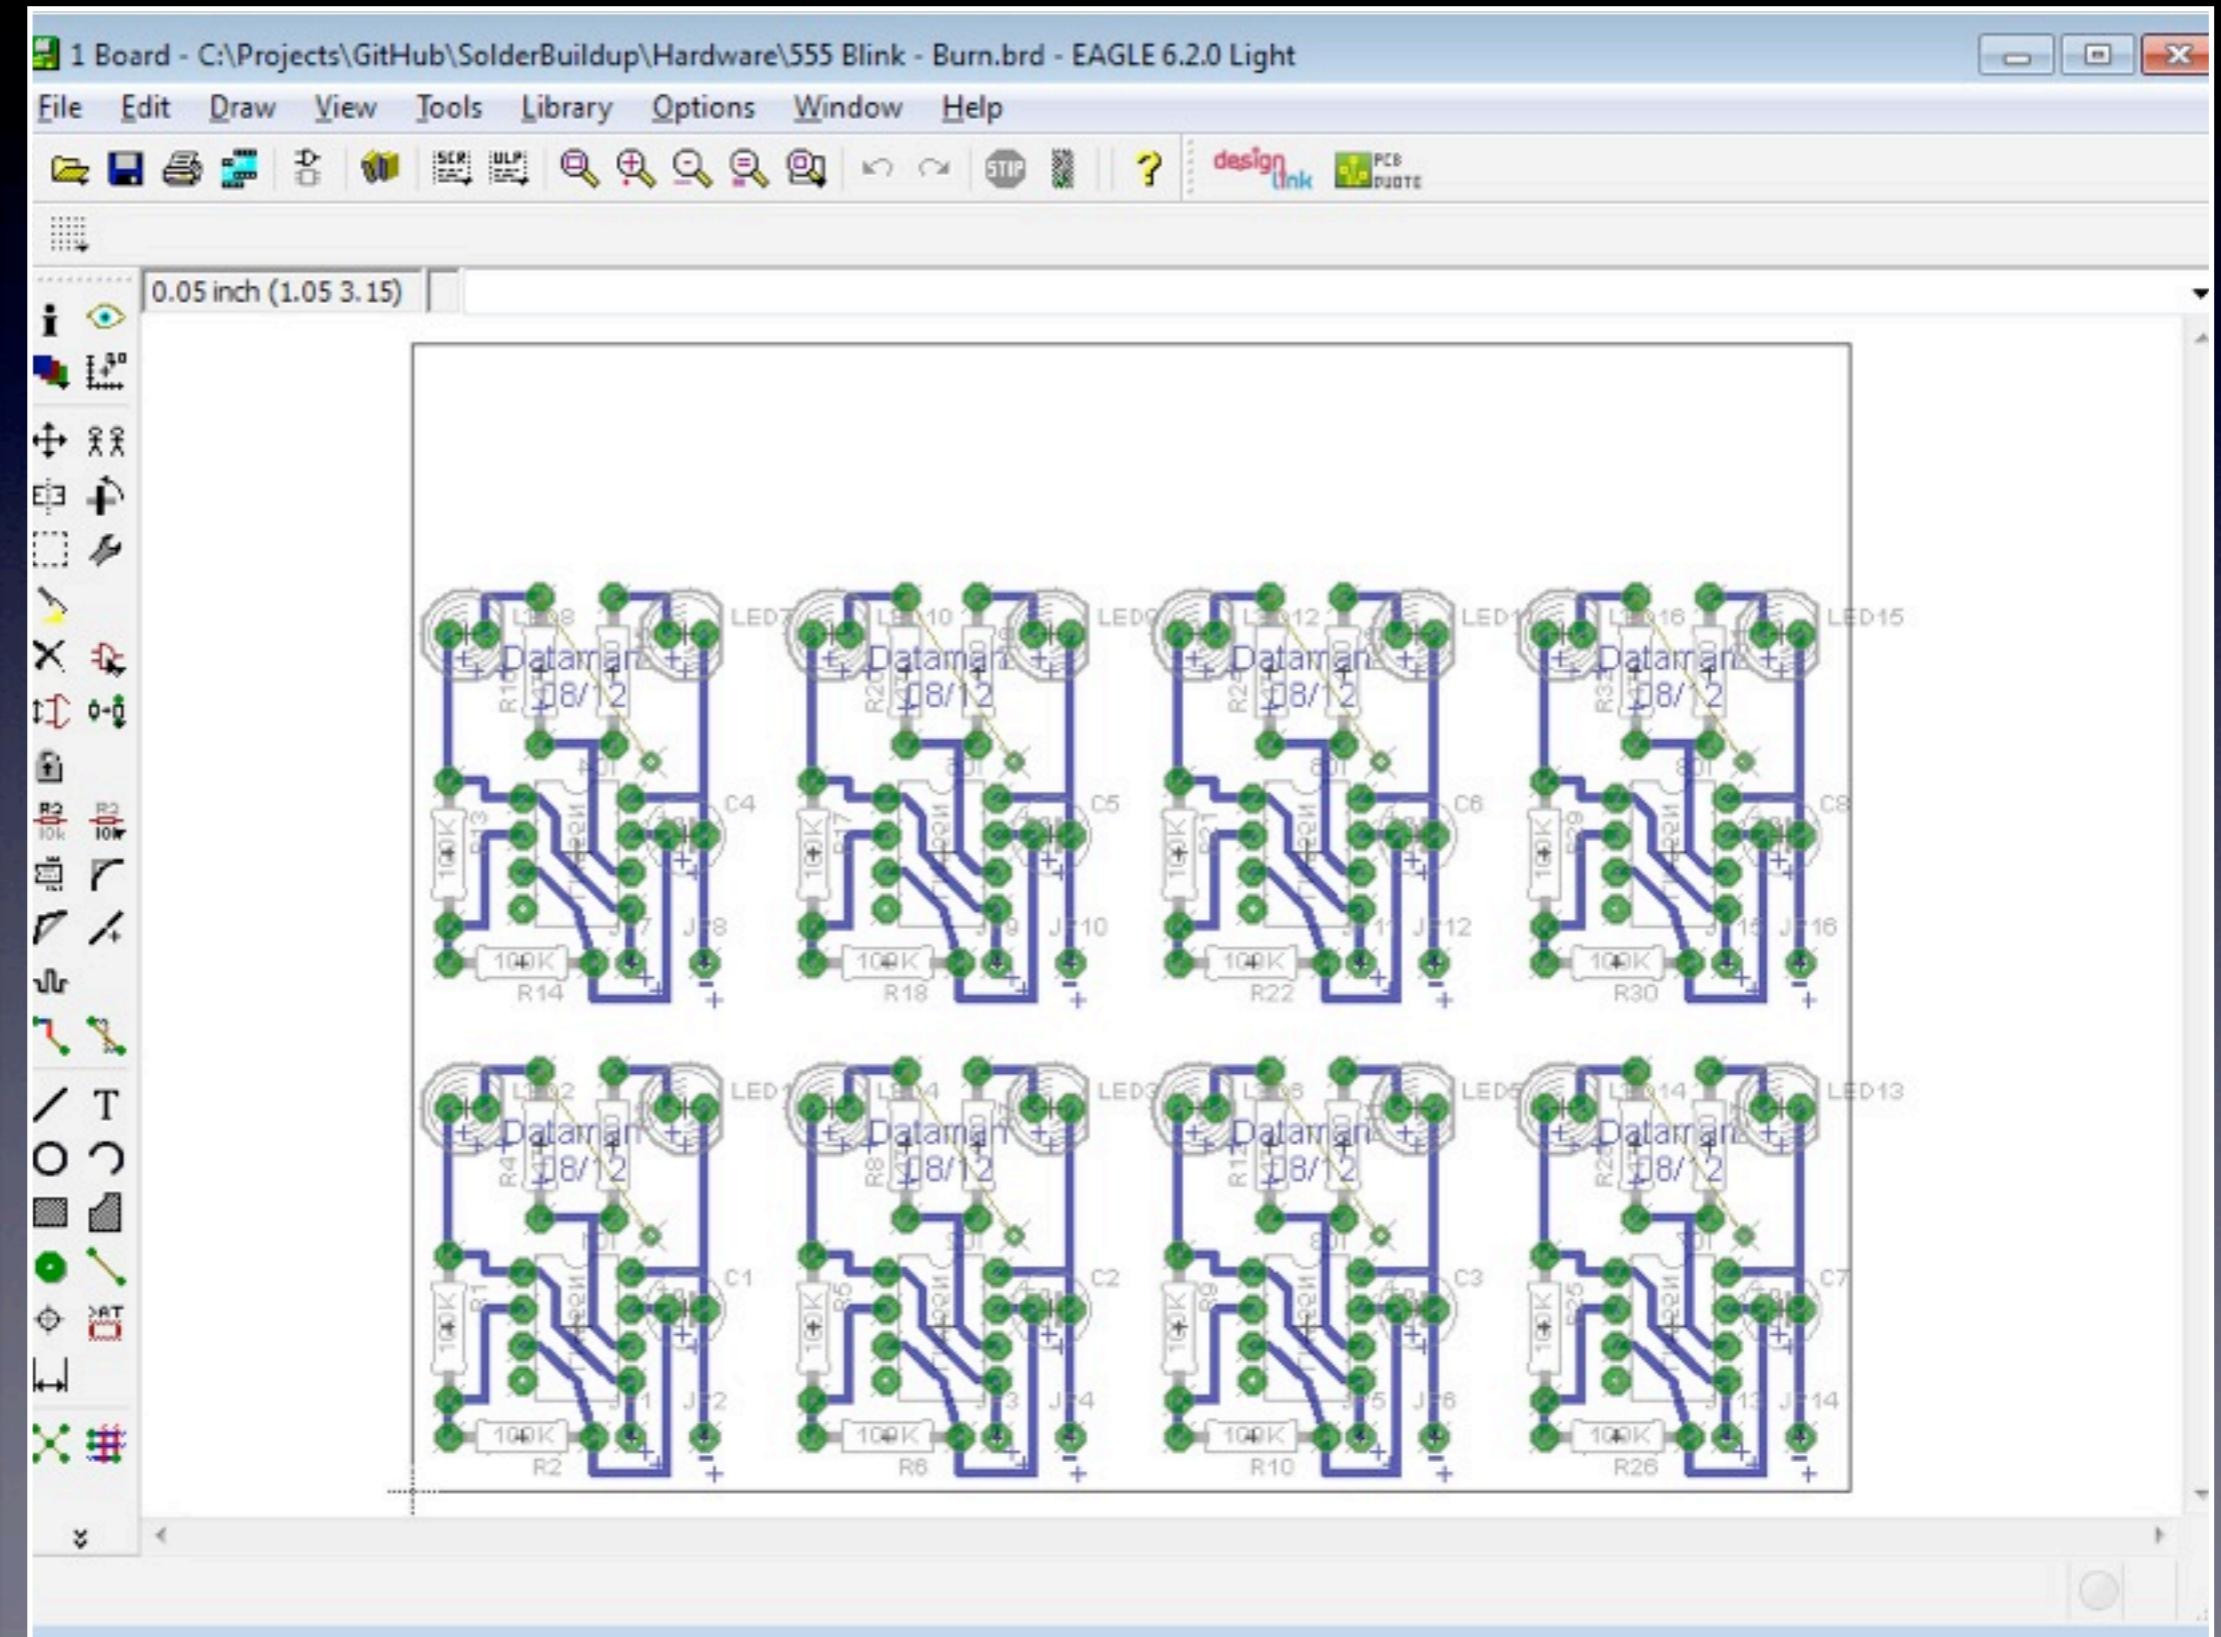




SynShop

Soldering Buildup

5

**Print tops,
bottoms,
pads, vias
onto
trans-
parency.**

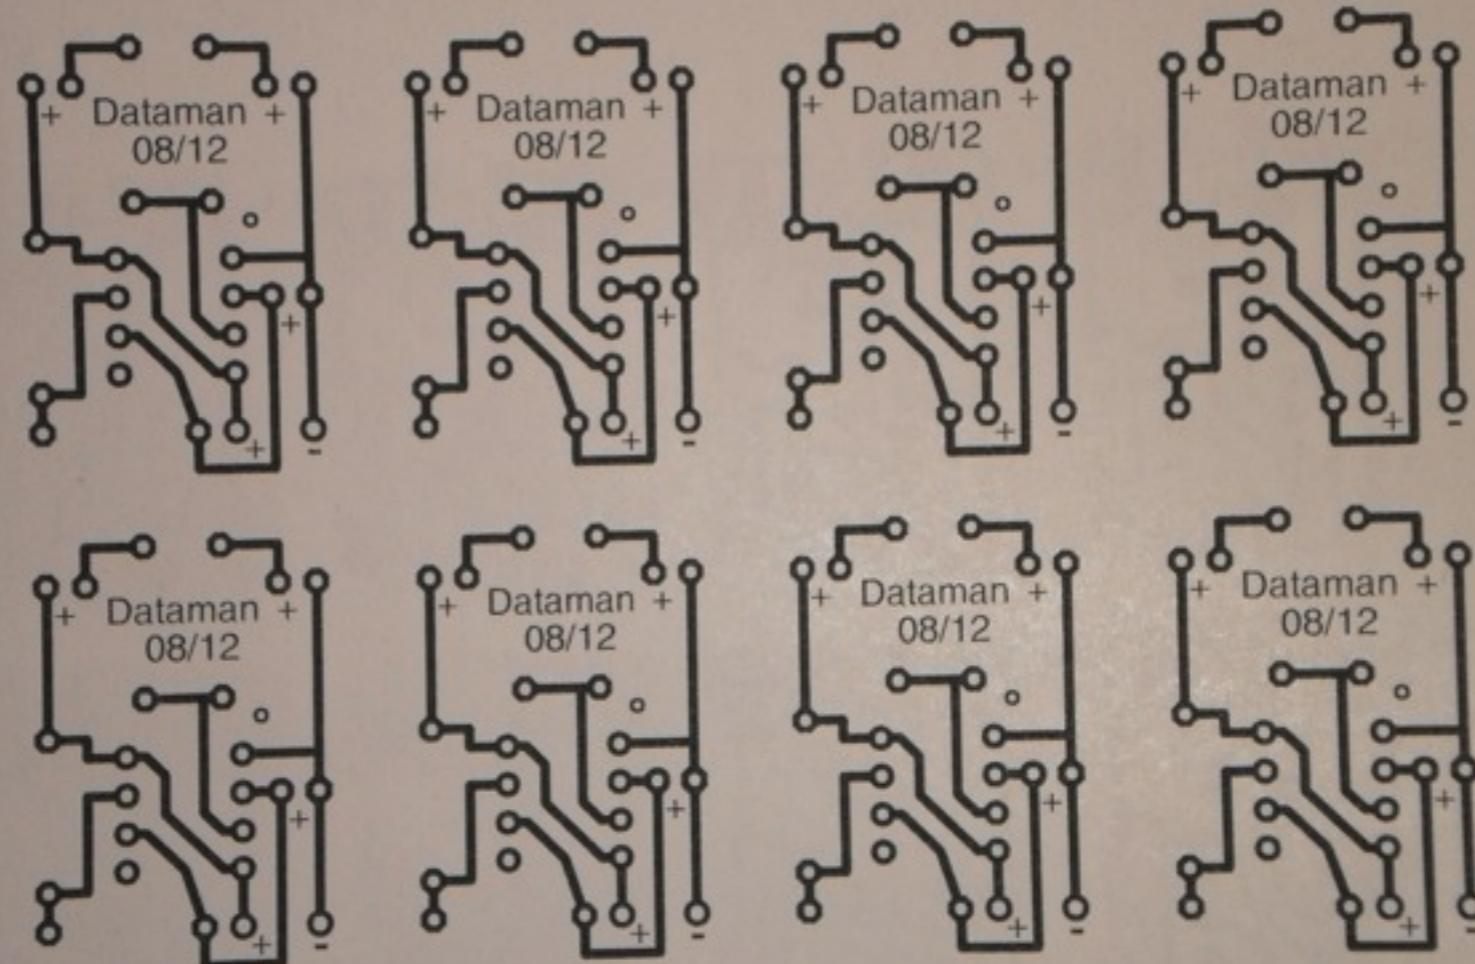




SynShop

Soldering Buildup

6

Layout
trans-
parency
on board.

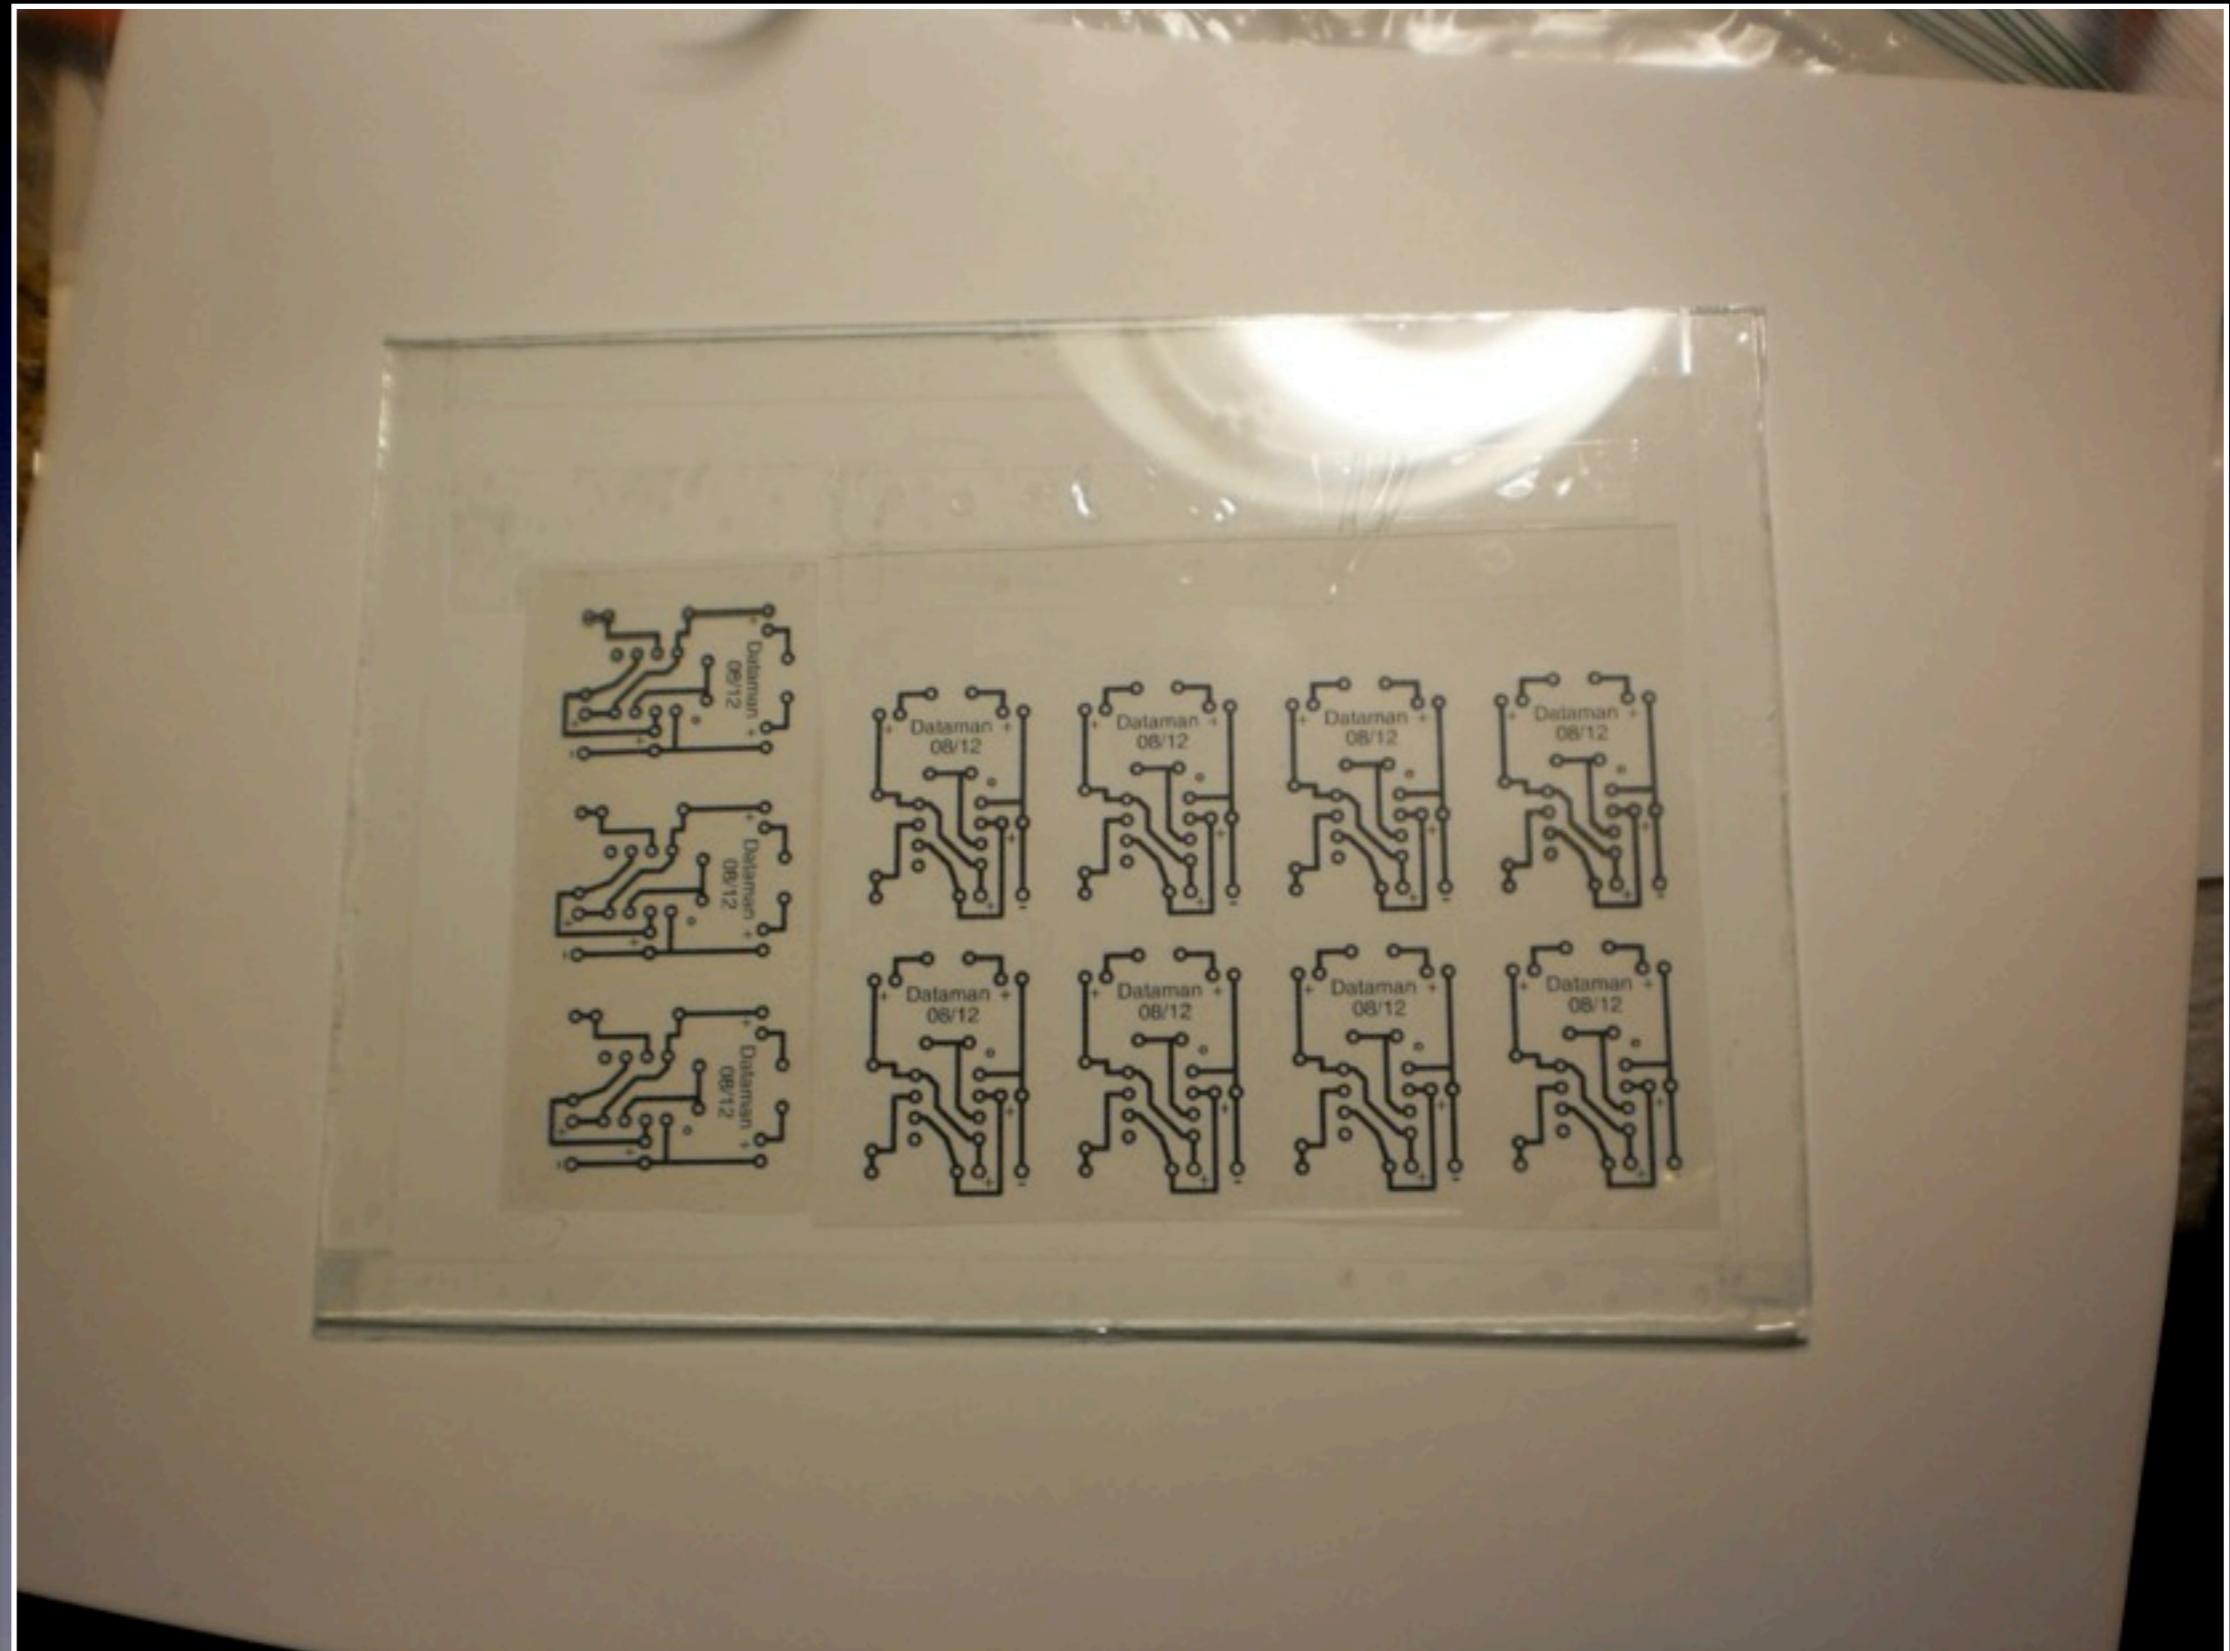




SynShop

Soldering Buildup

7

**Remove
protective
layer and
expose for
12
minutes.**

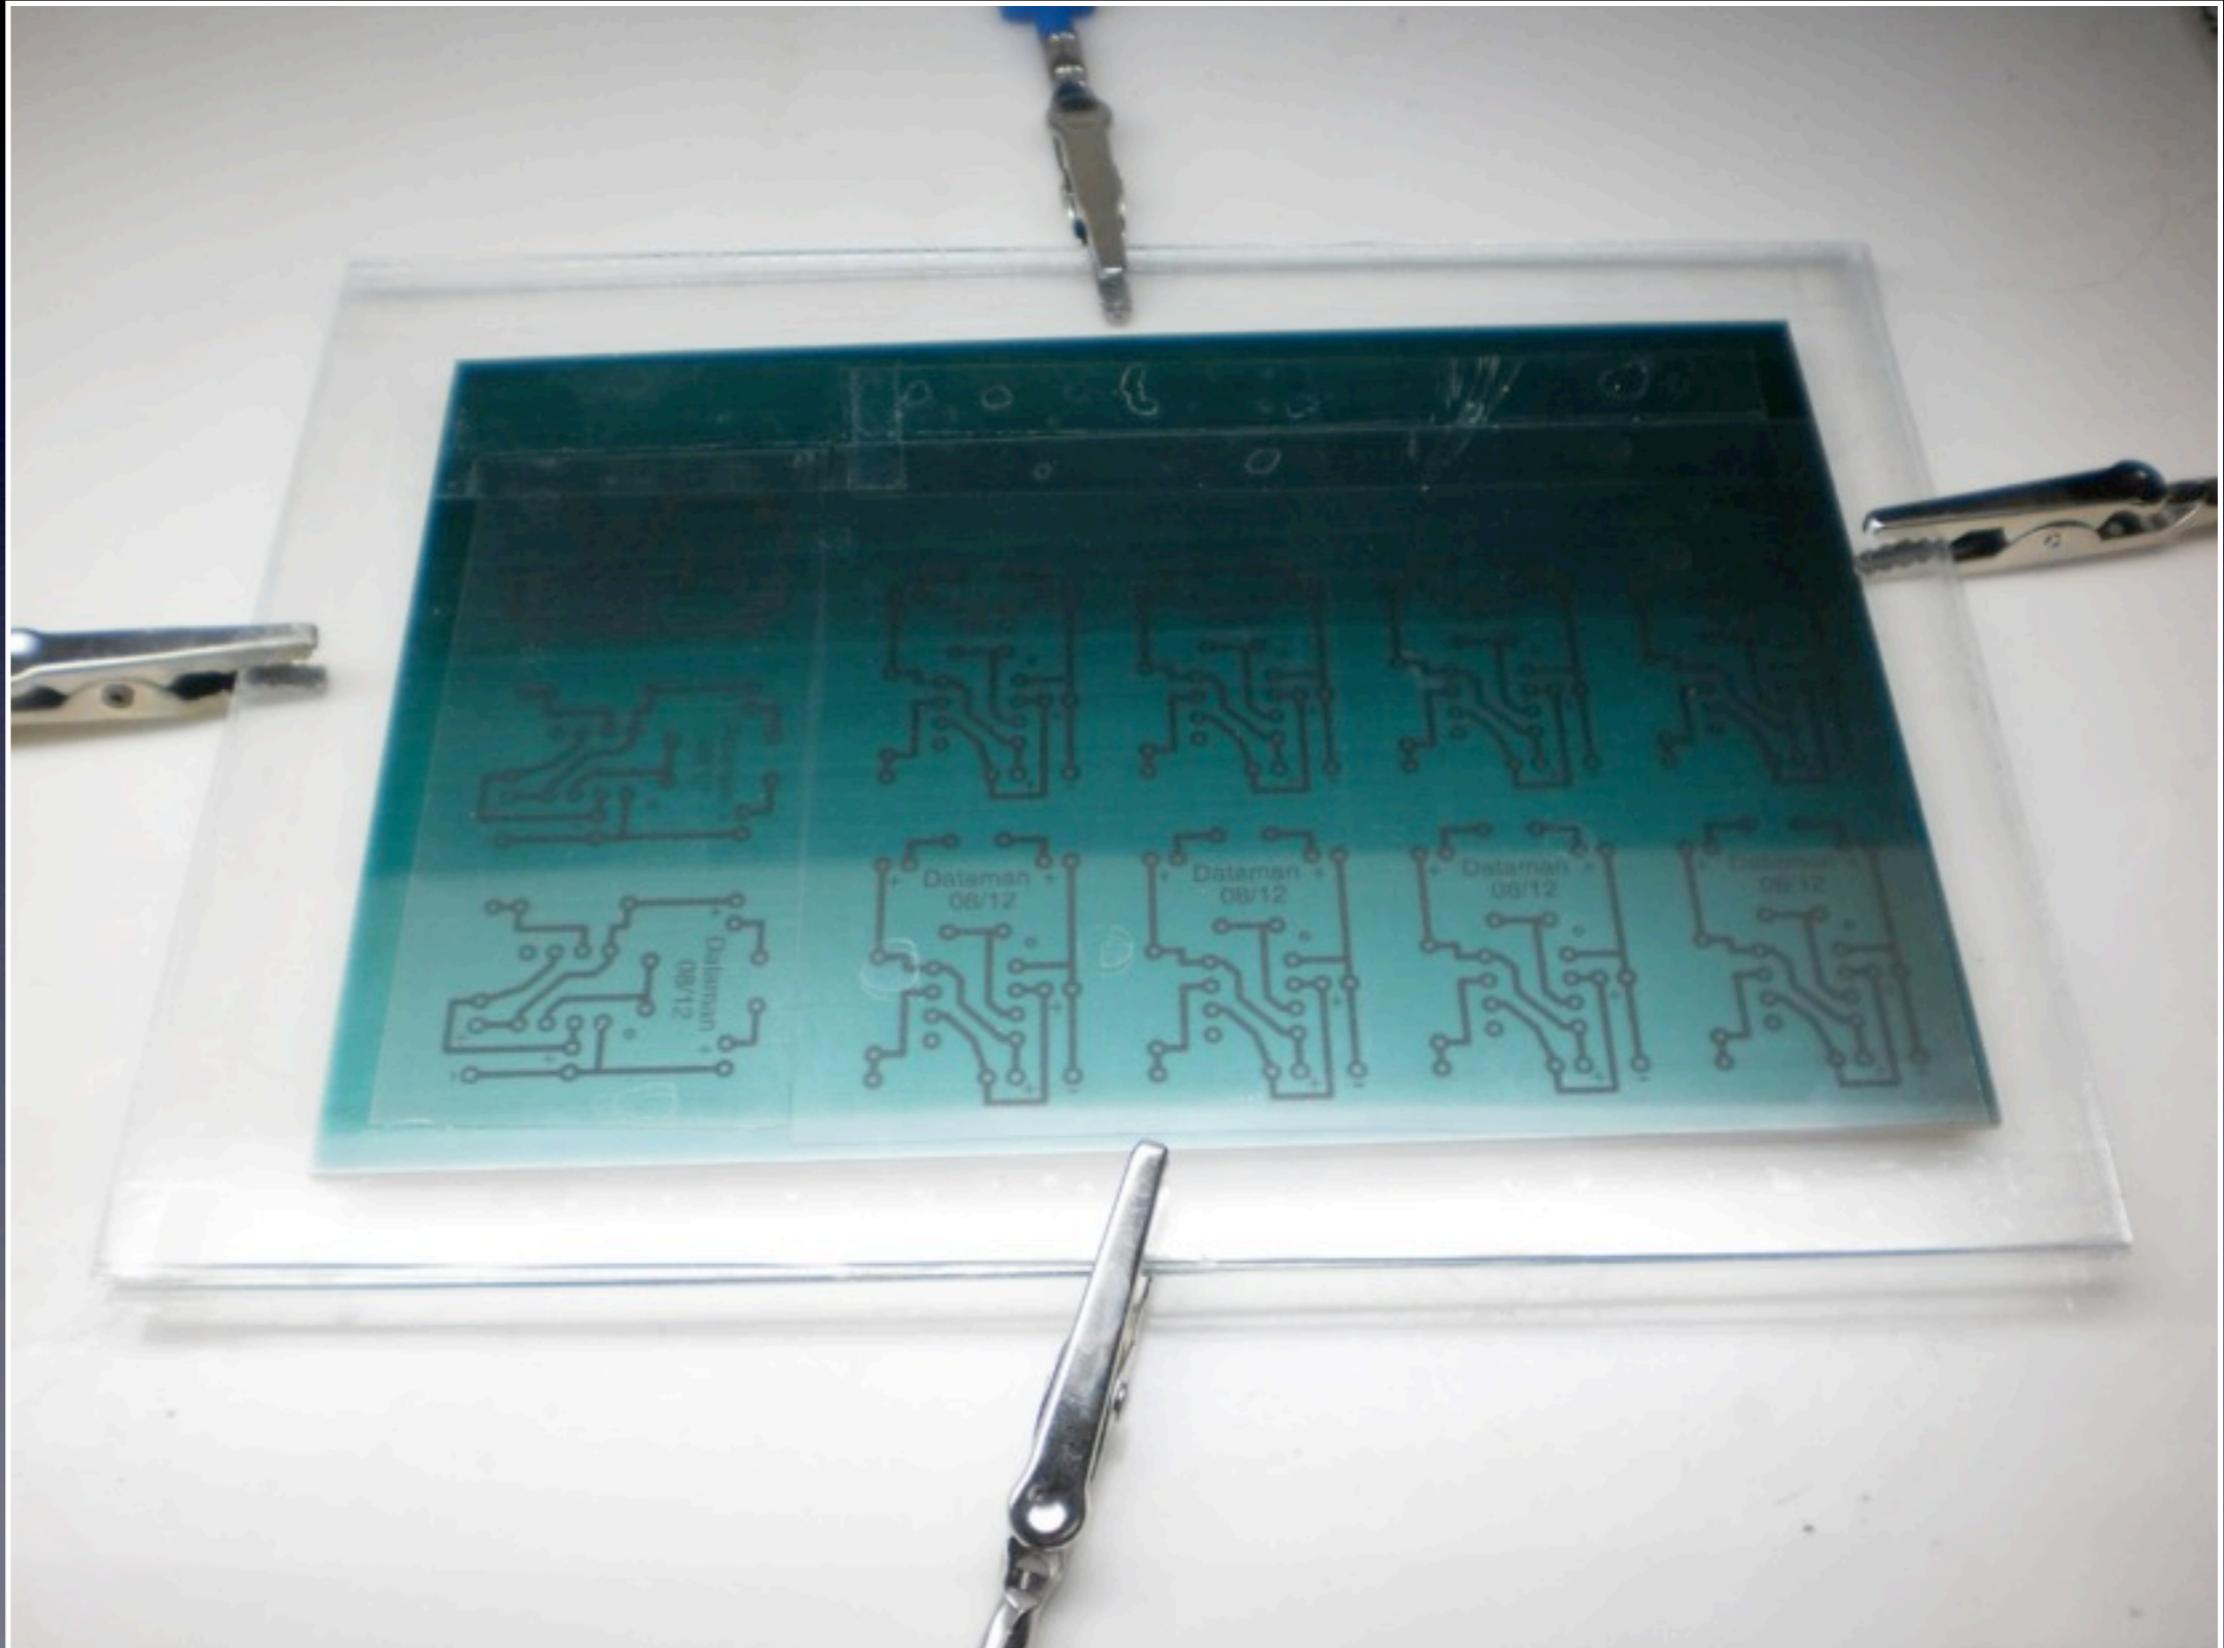




SynShop

Soldering Buildup

8

Develop.
Green dye
is
removed,
copper is
exposed.

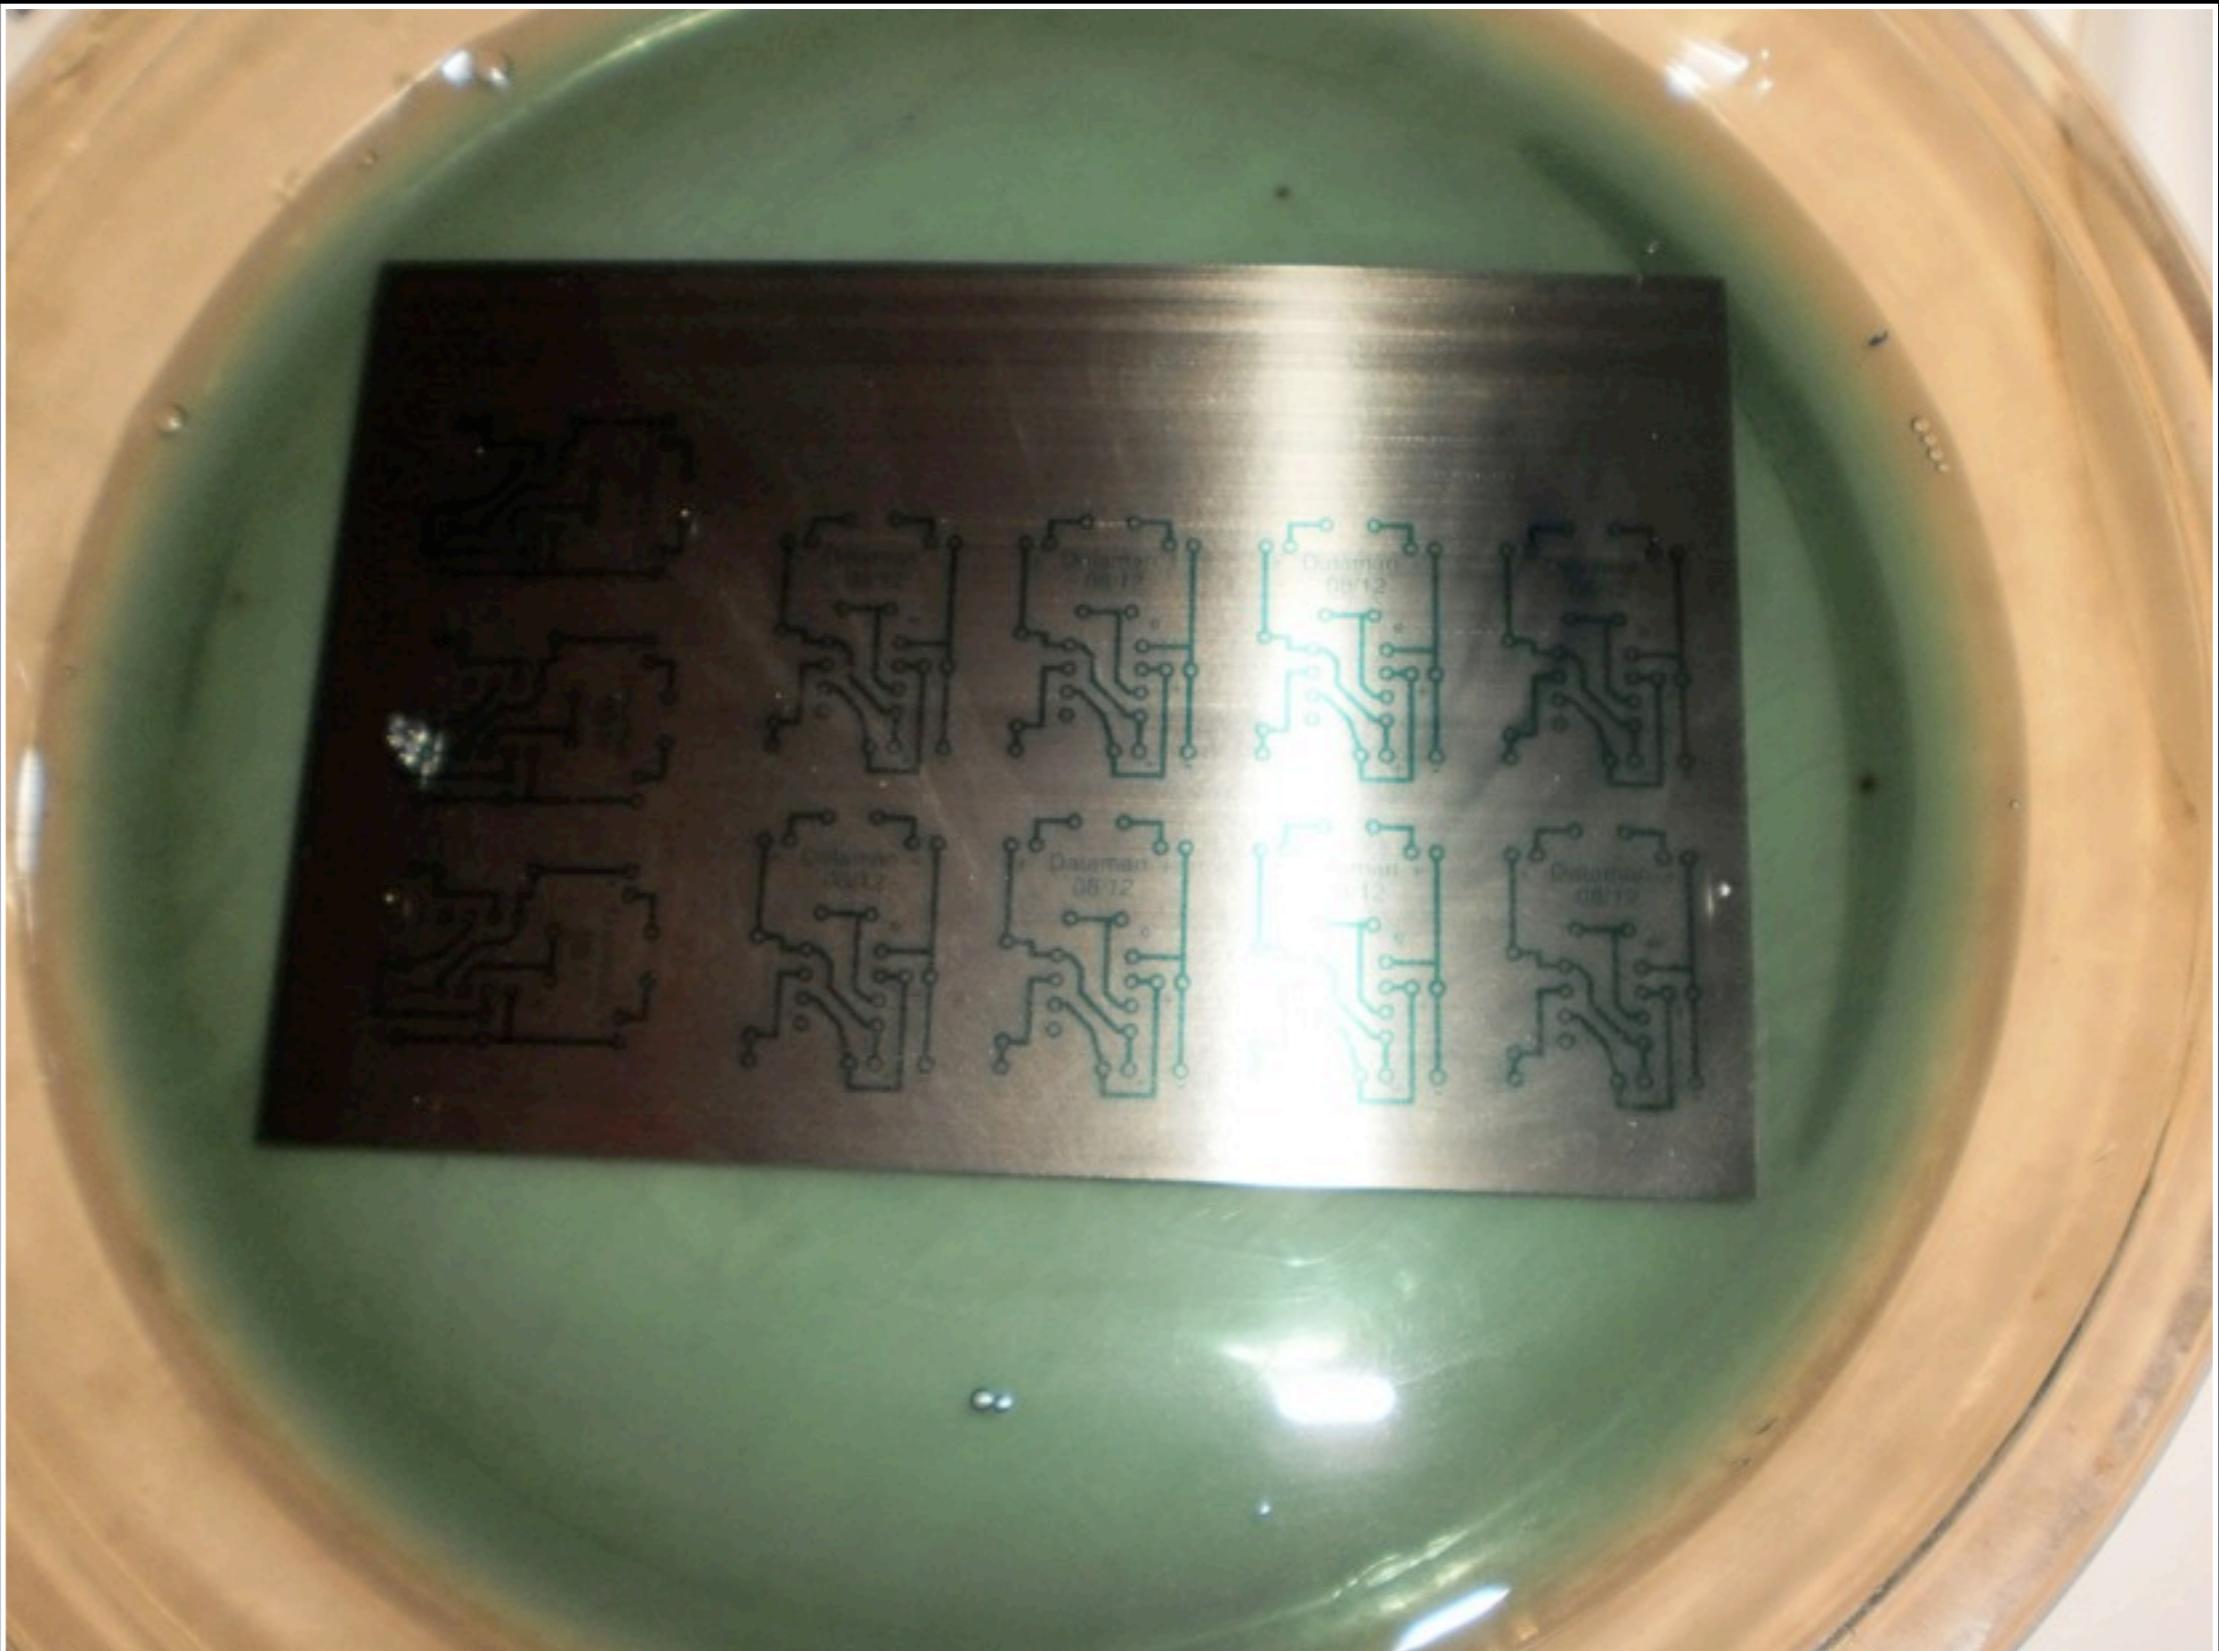




SynShop

Soldering Buildup

9

**Fix in cold
water.**

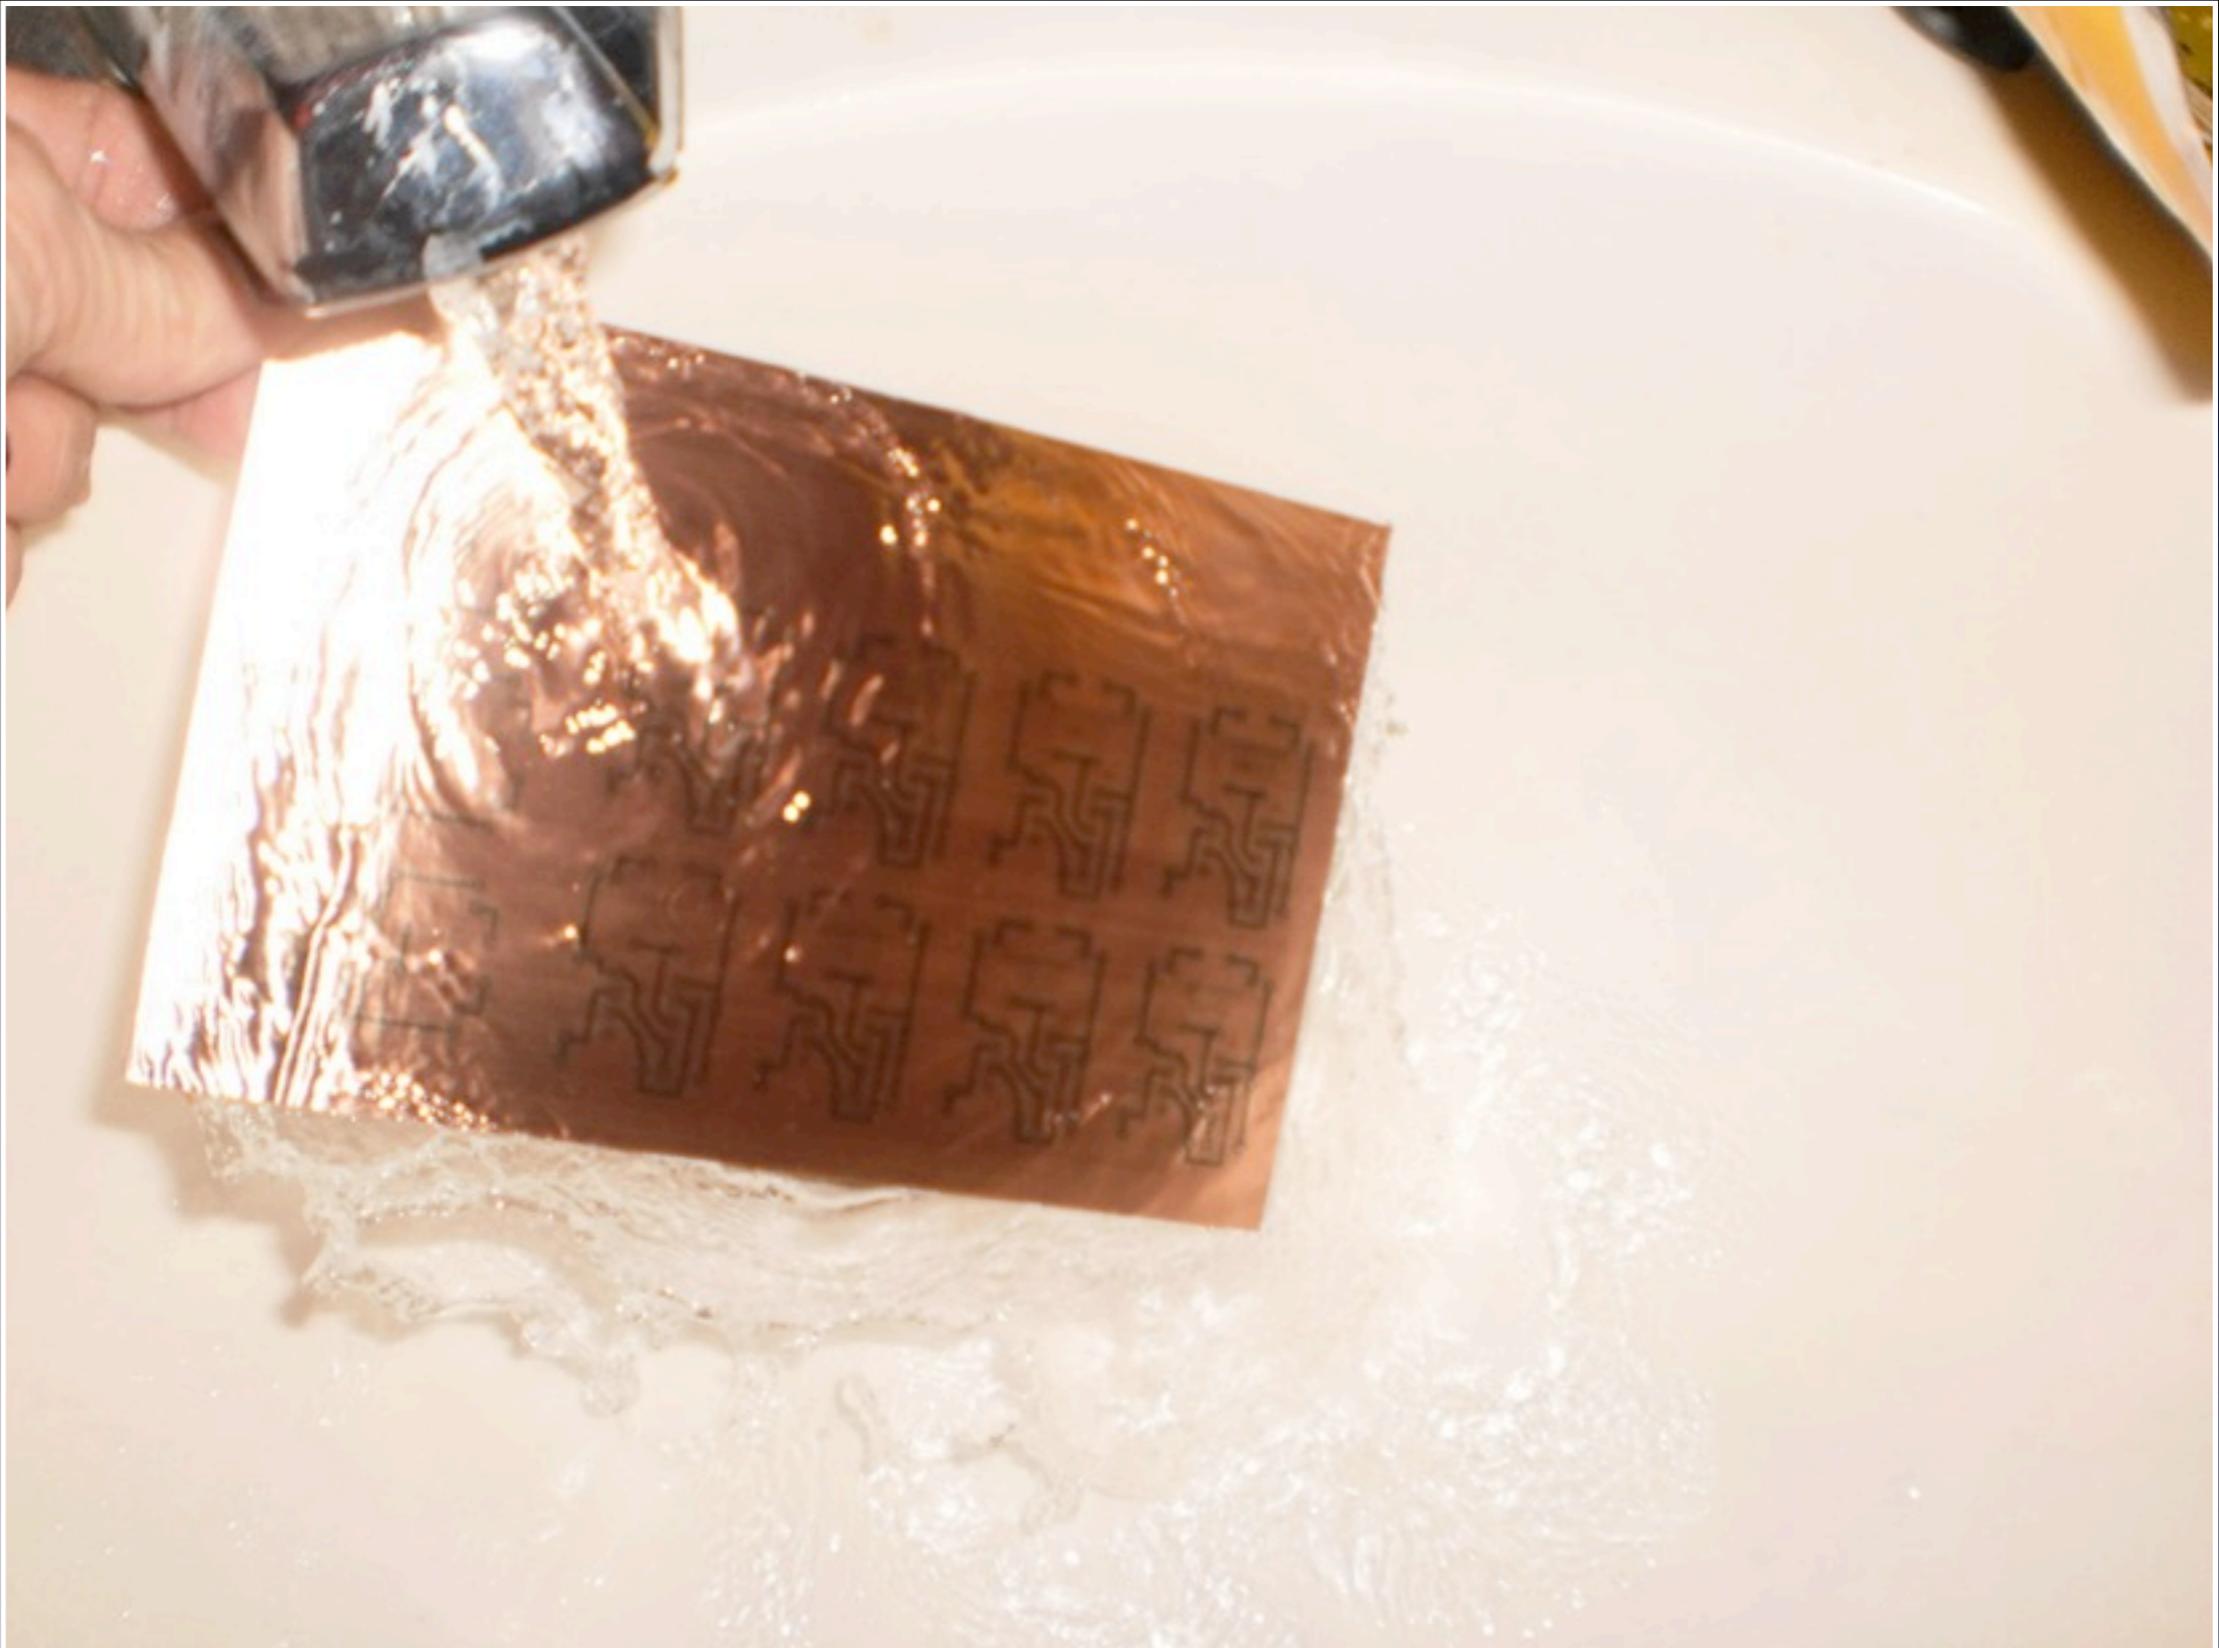



SynShop

Soldering Buildup

10

Etch in
hydro-
chloric
acid.





SynShop

Soldering Buildup

10

Rinse and
dry.






SynShop

Soldering Buildup

10

Drill

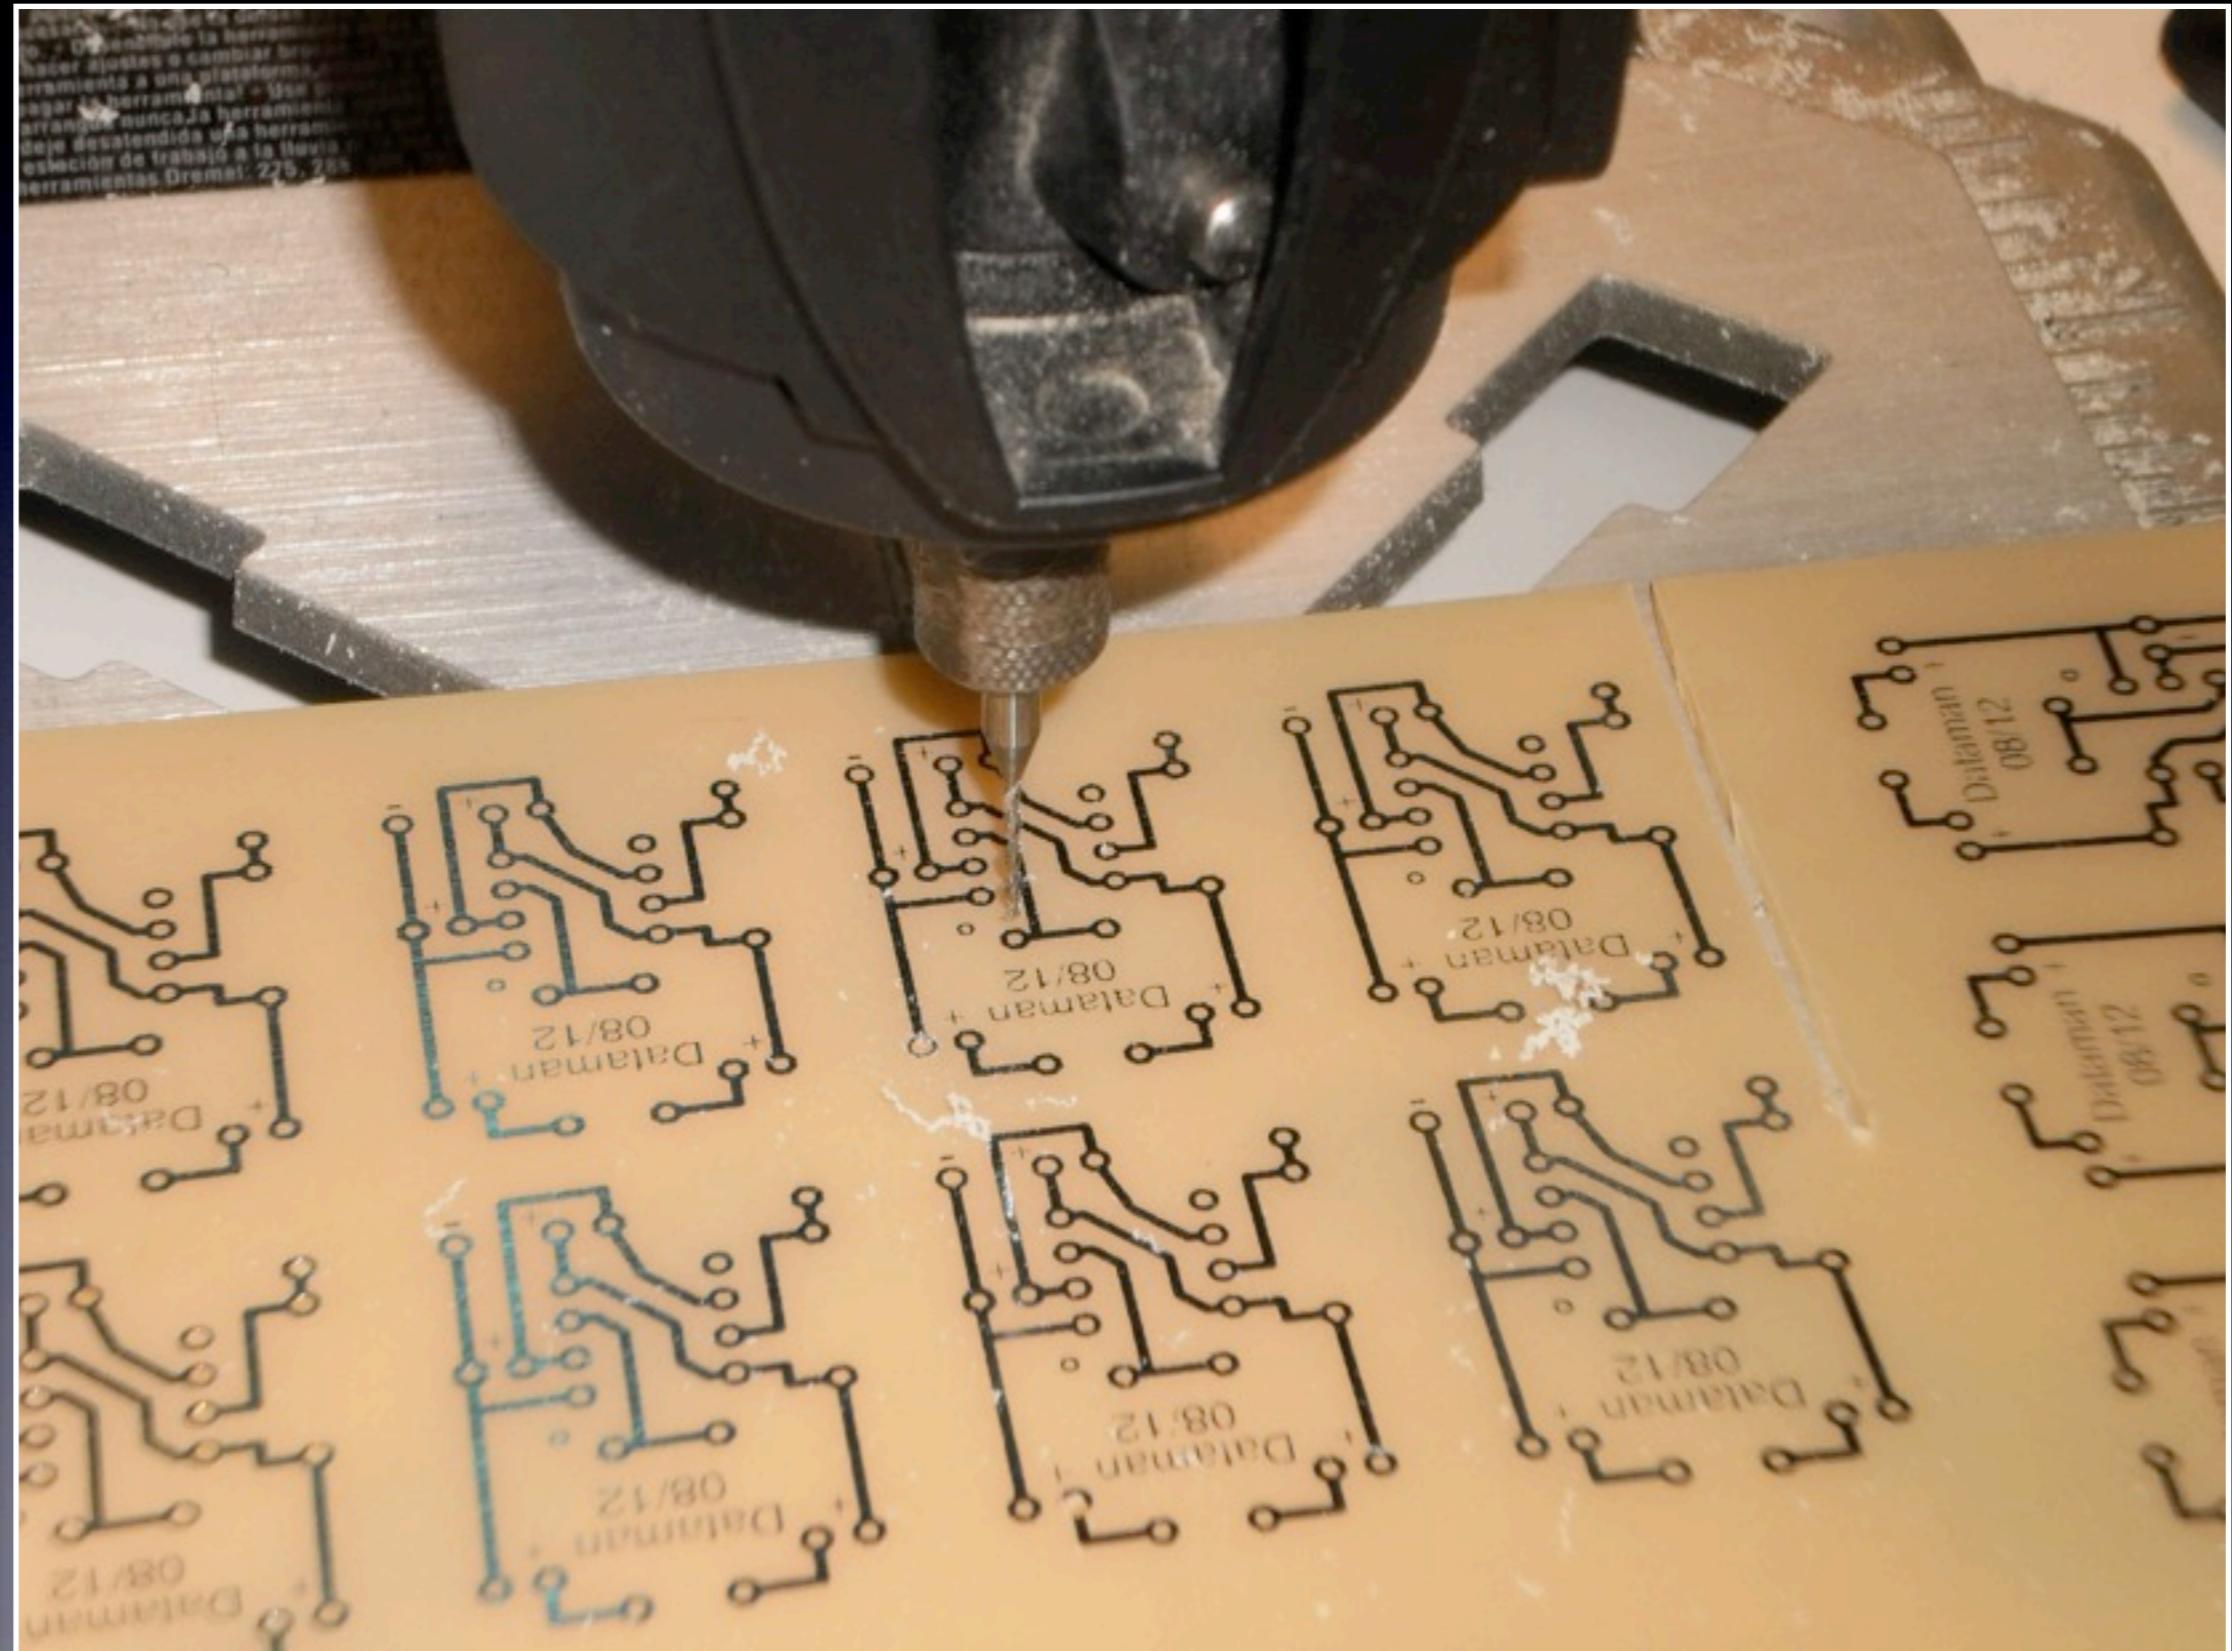




SynShop

Soldering Buildup

10

Cut

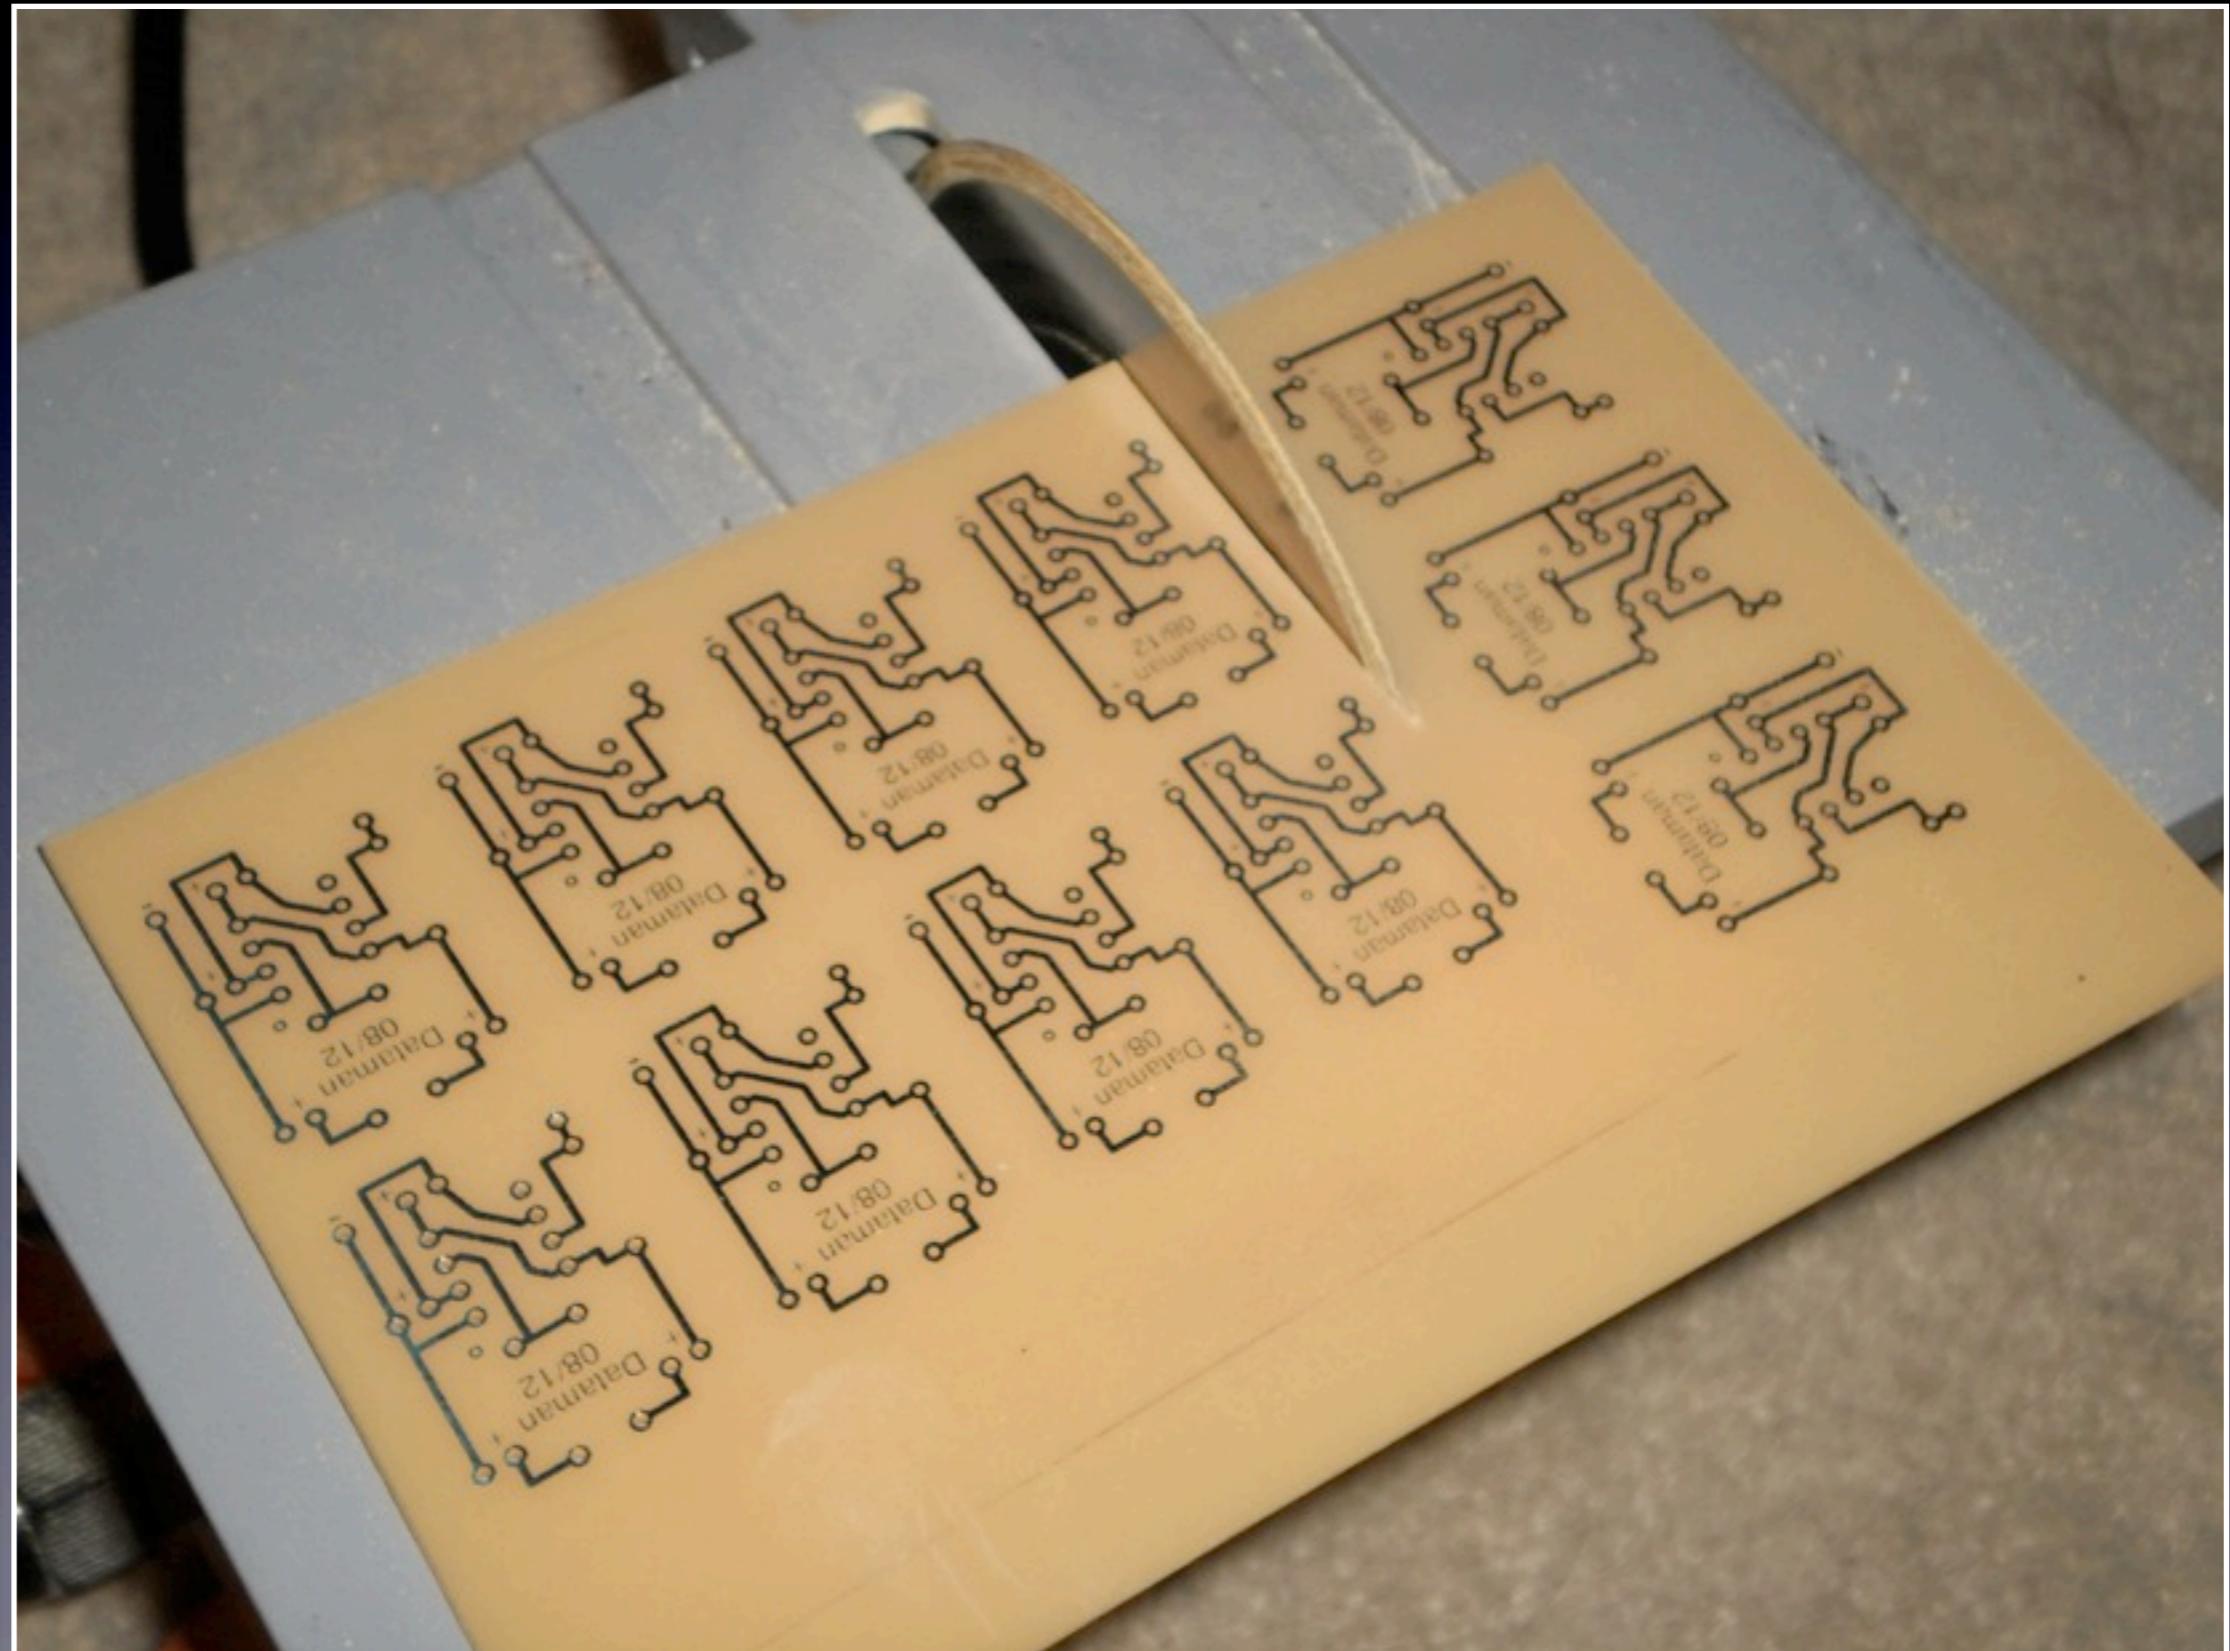



SynShop

Soldering Buildup

10

Shape.






SynShop

Soldering Buildup

10

Clean. Dip
in acetate.

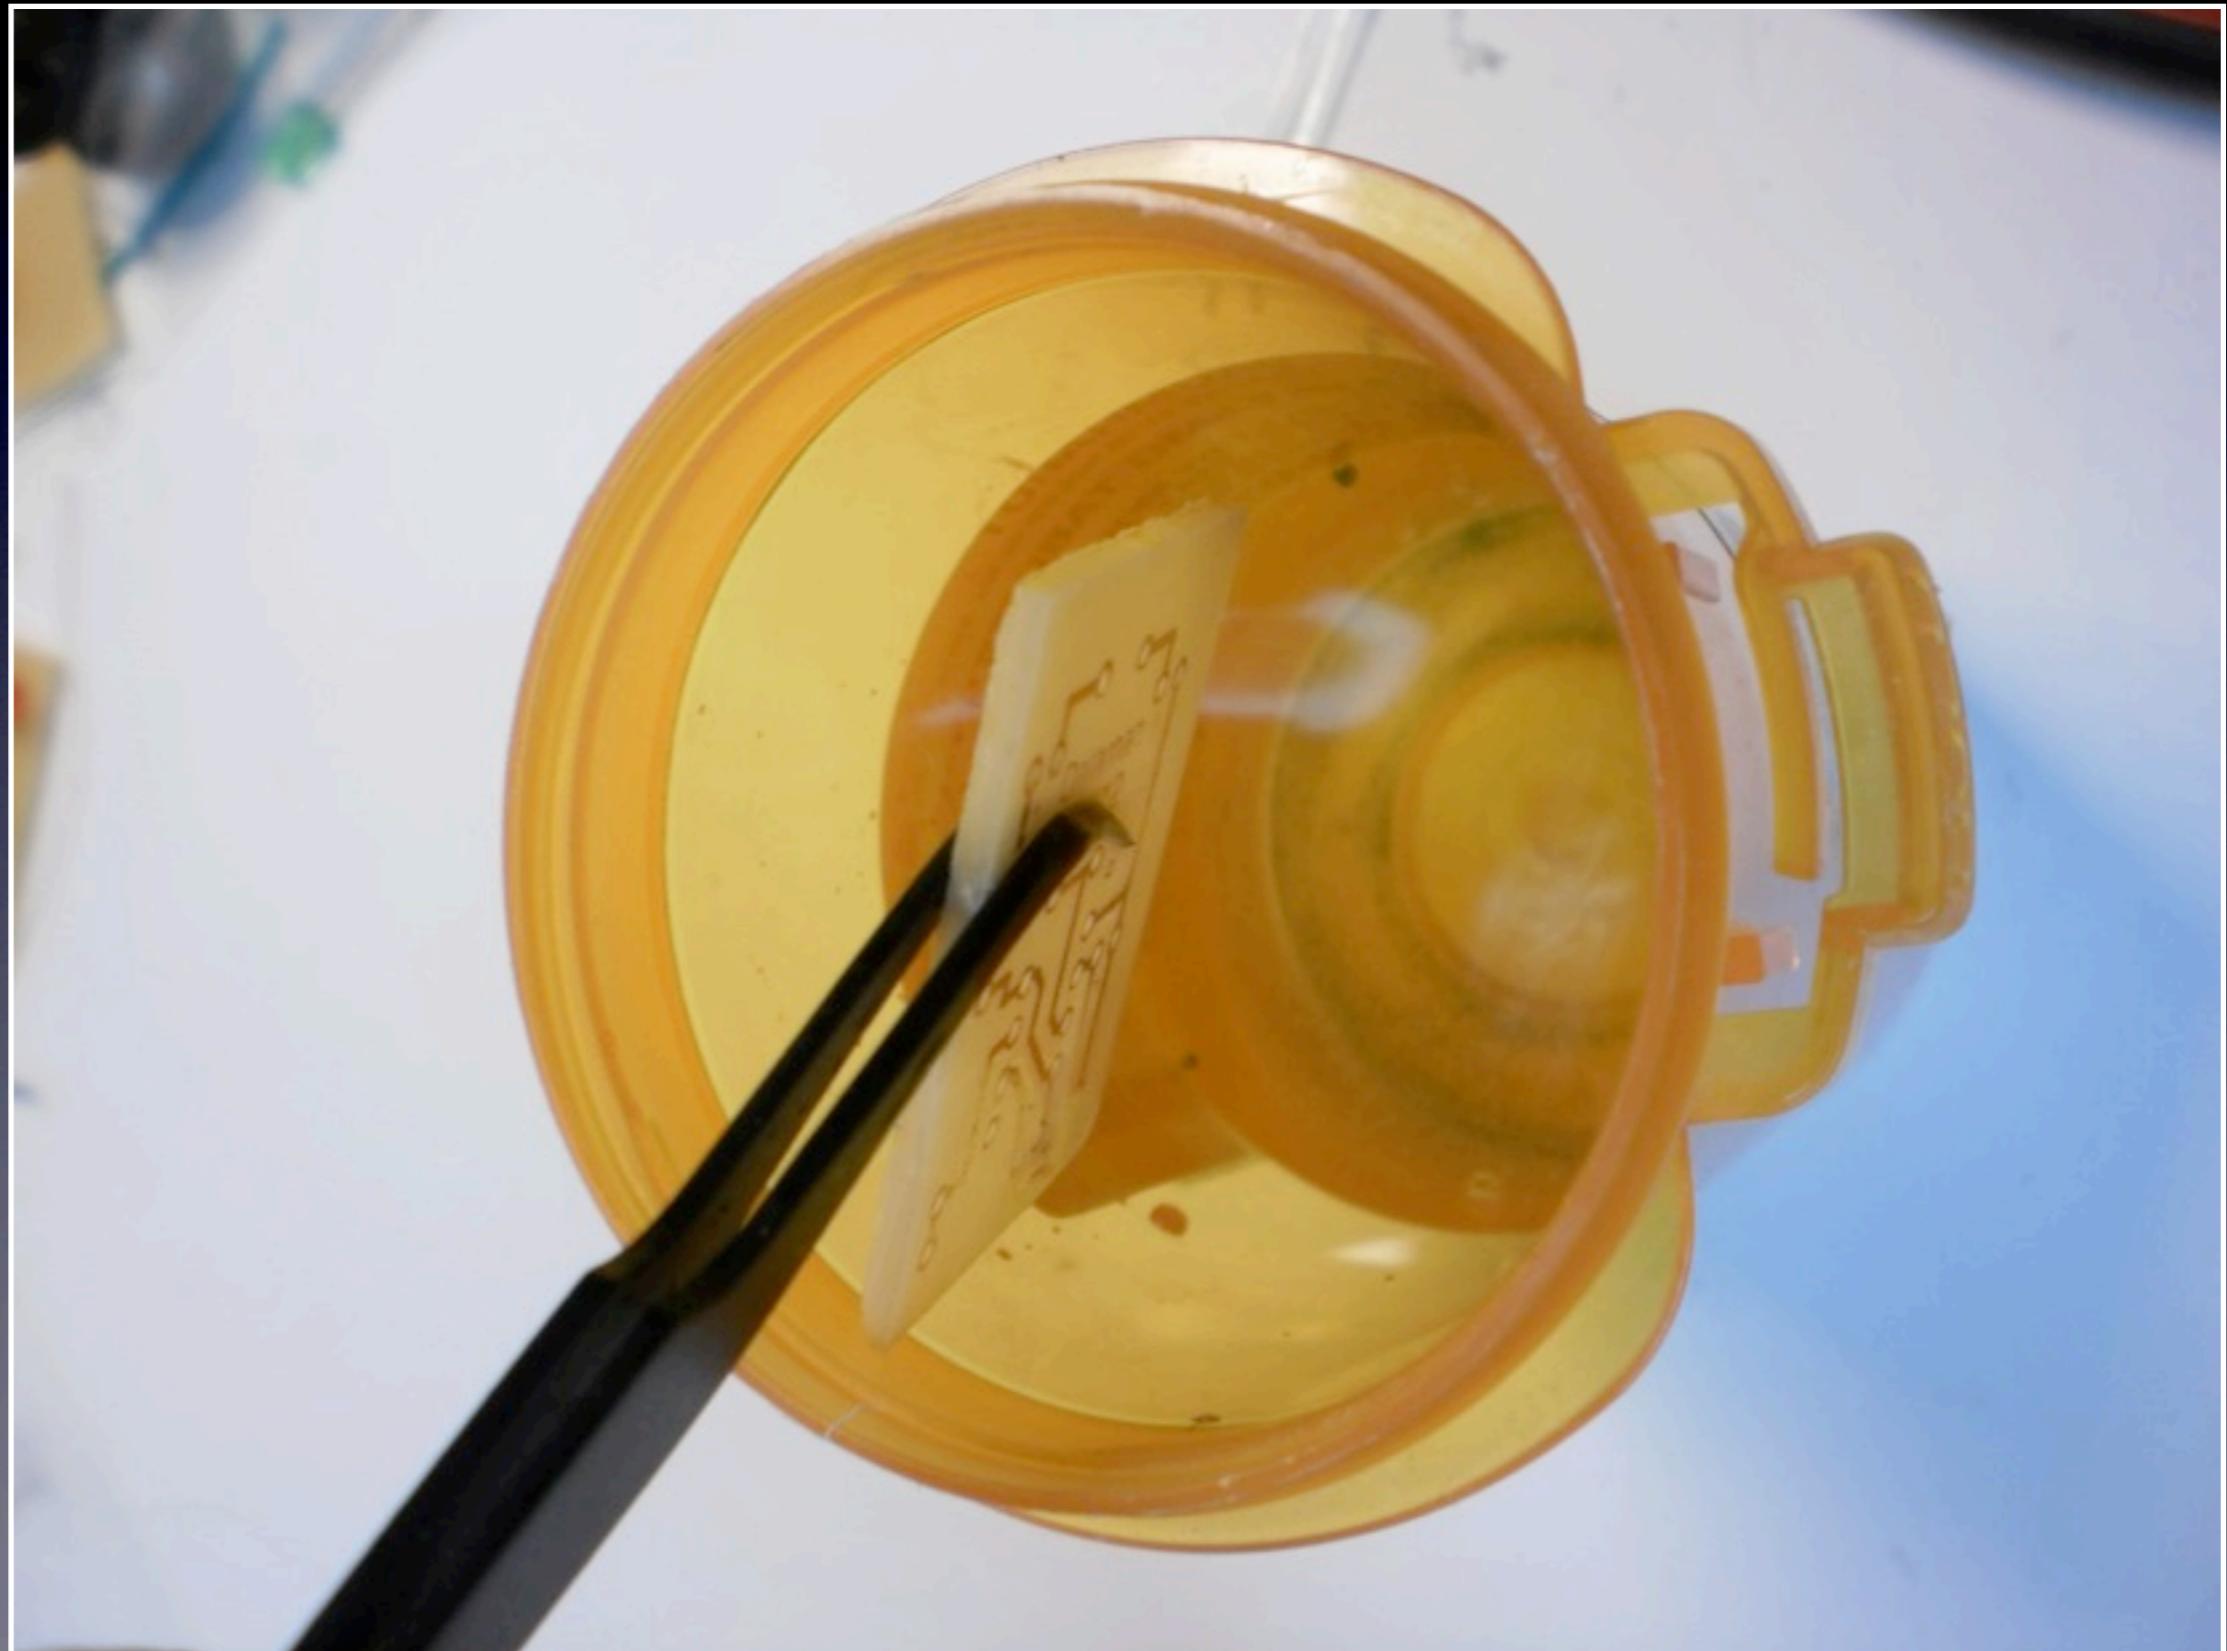




SynShop

Soldering Buildup

10

Complete.

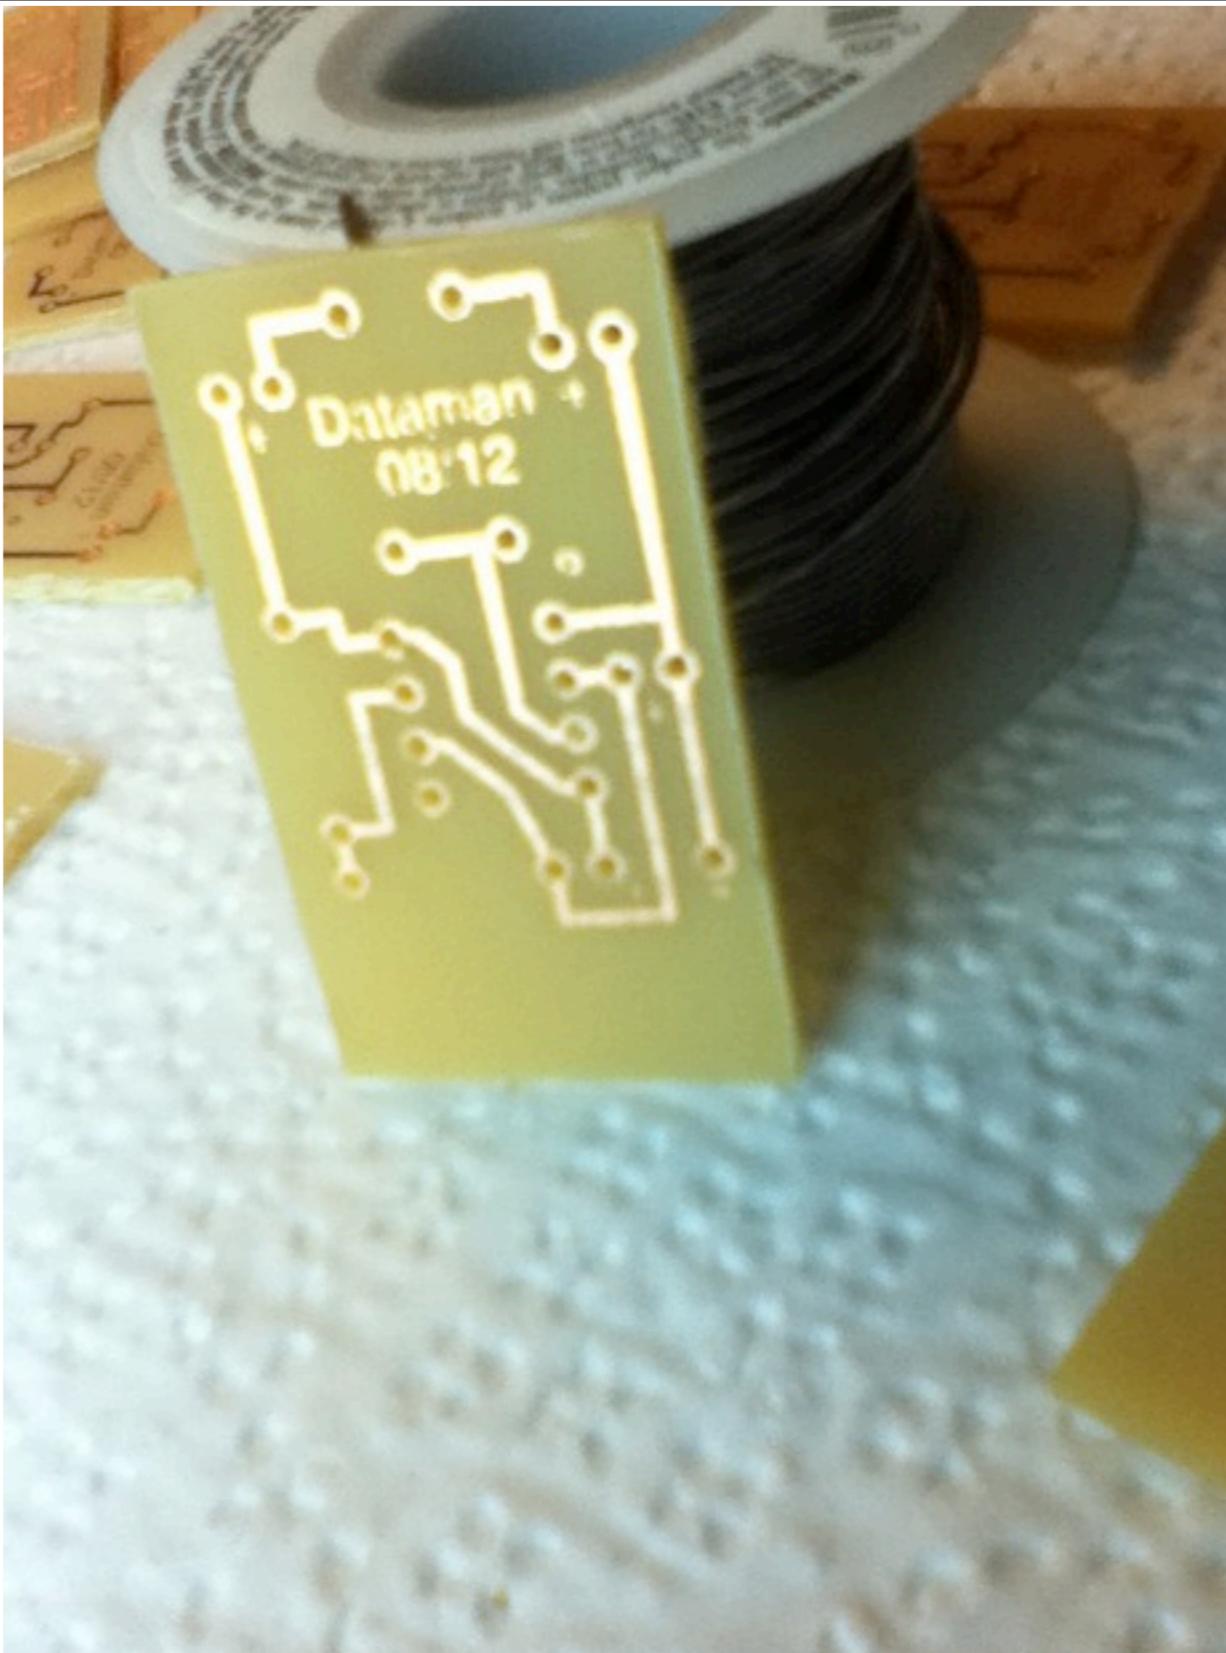



SynShop

Soldering Buildup

Stop and Go 555 PCB Build




SynShop

Soldering Buildup

1

Parts for
the build.

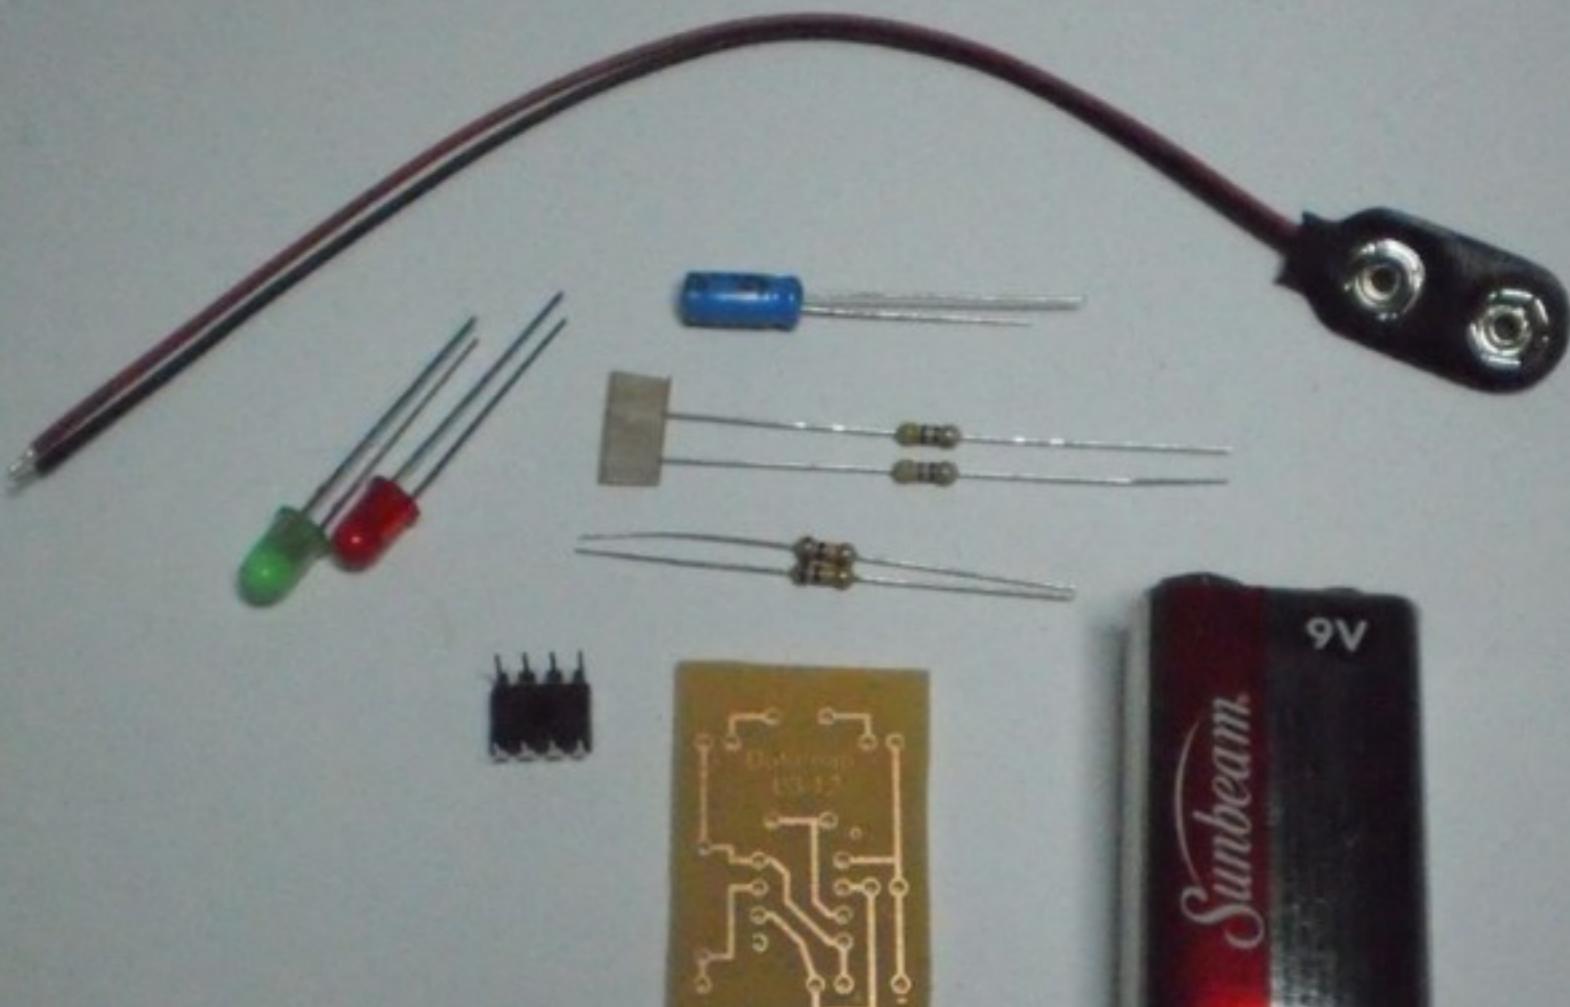




SynShop

Soldering Buildup

2

**Solder the
two 470
resistors,
yellow,
violet,
brown.
Orient-
ation is
not
important.**

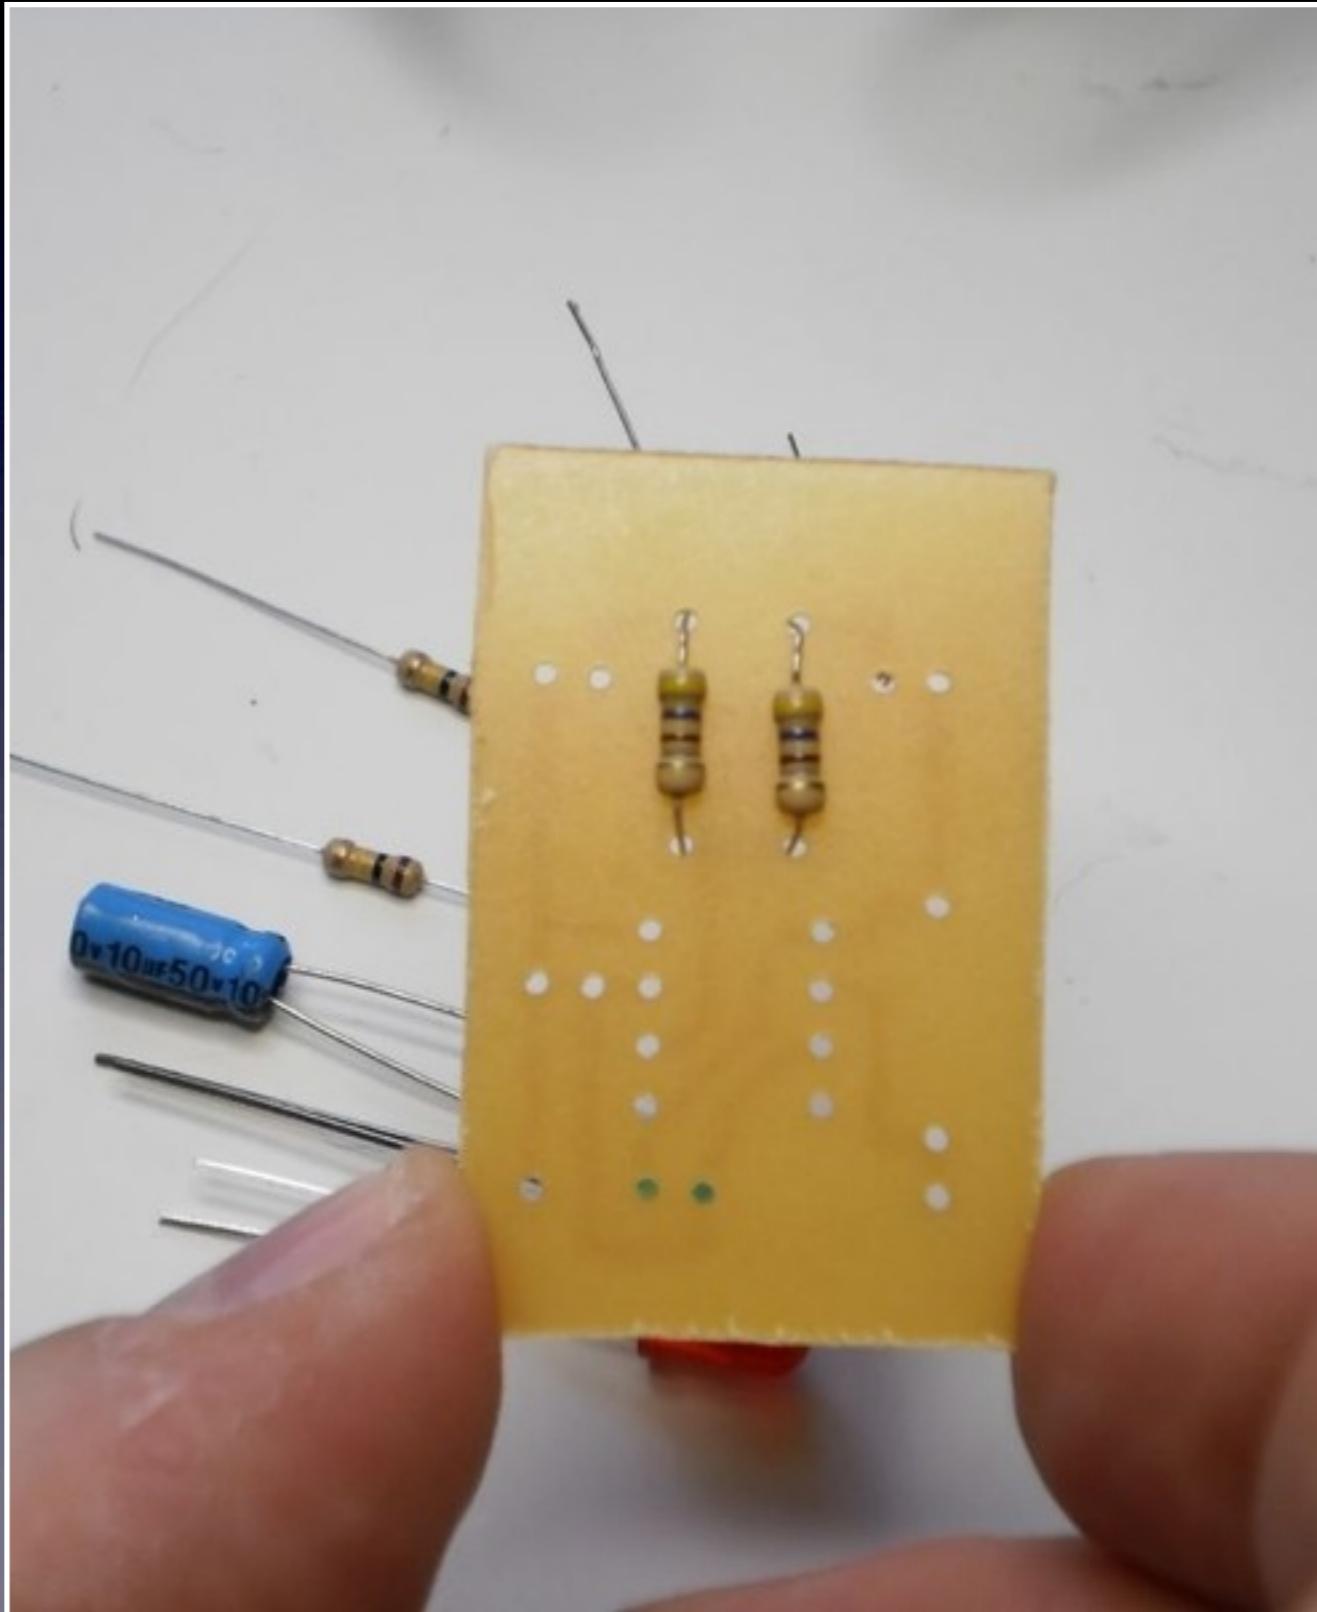




SynShop

Soldering Buildup

3

Solder the chip. Note that notch faces up towards the 470 ohm resistors.

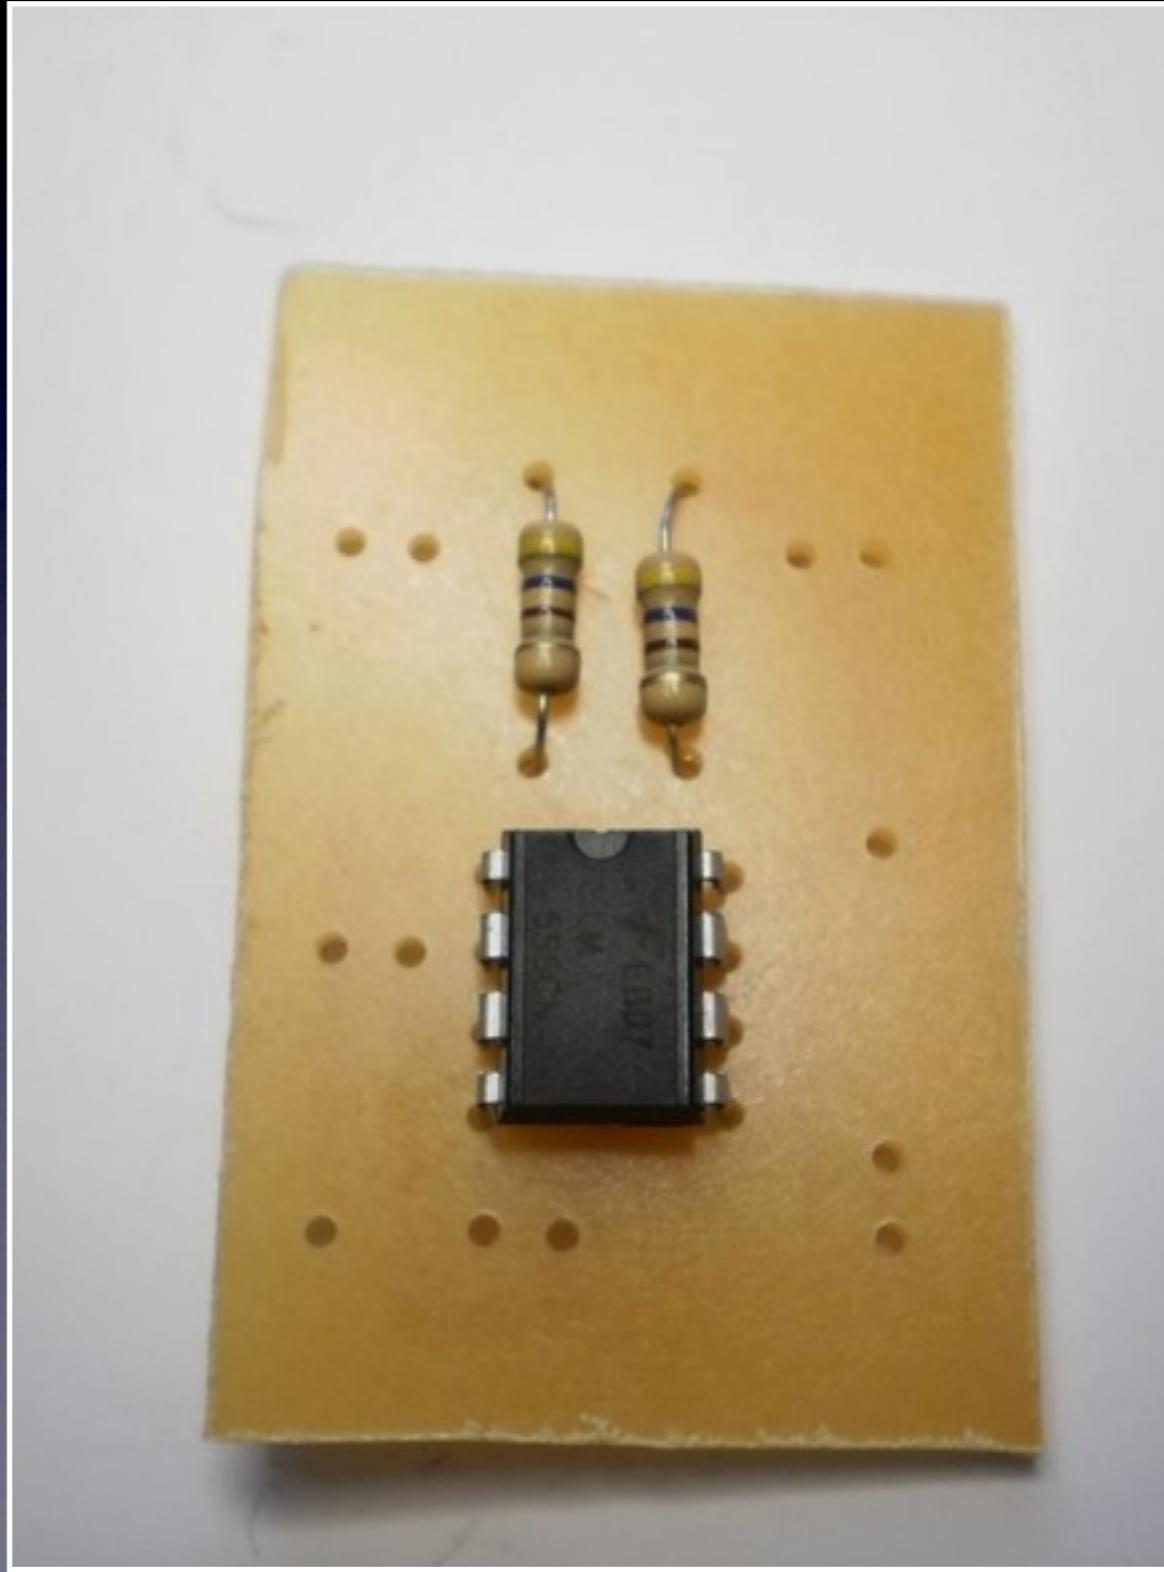

60



SynShop

Soldering Buildup

Interrupt:

The Roll the Chip Technique






SynShop

Soldering Buildup

3

Solder the chip. Note that notch faces up towards the 470 ohm resistors.

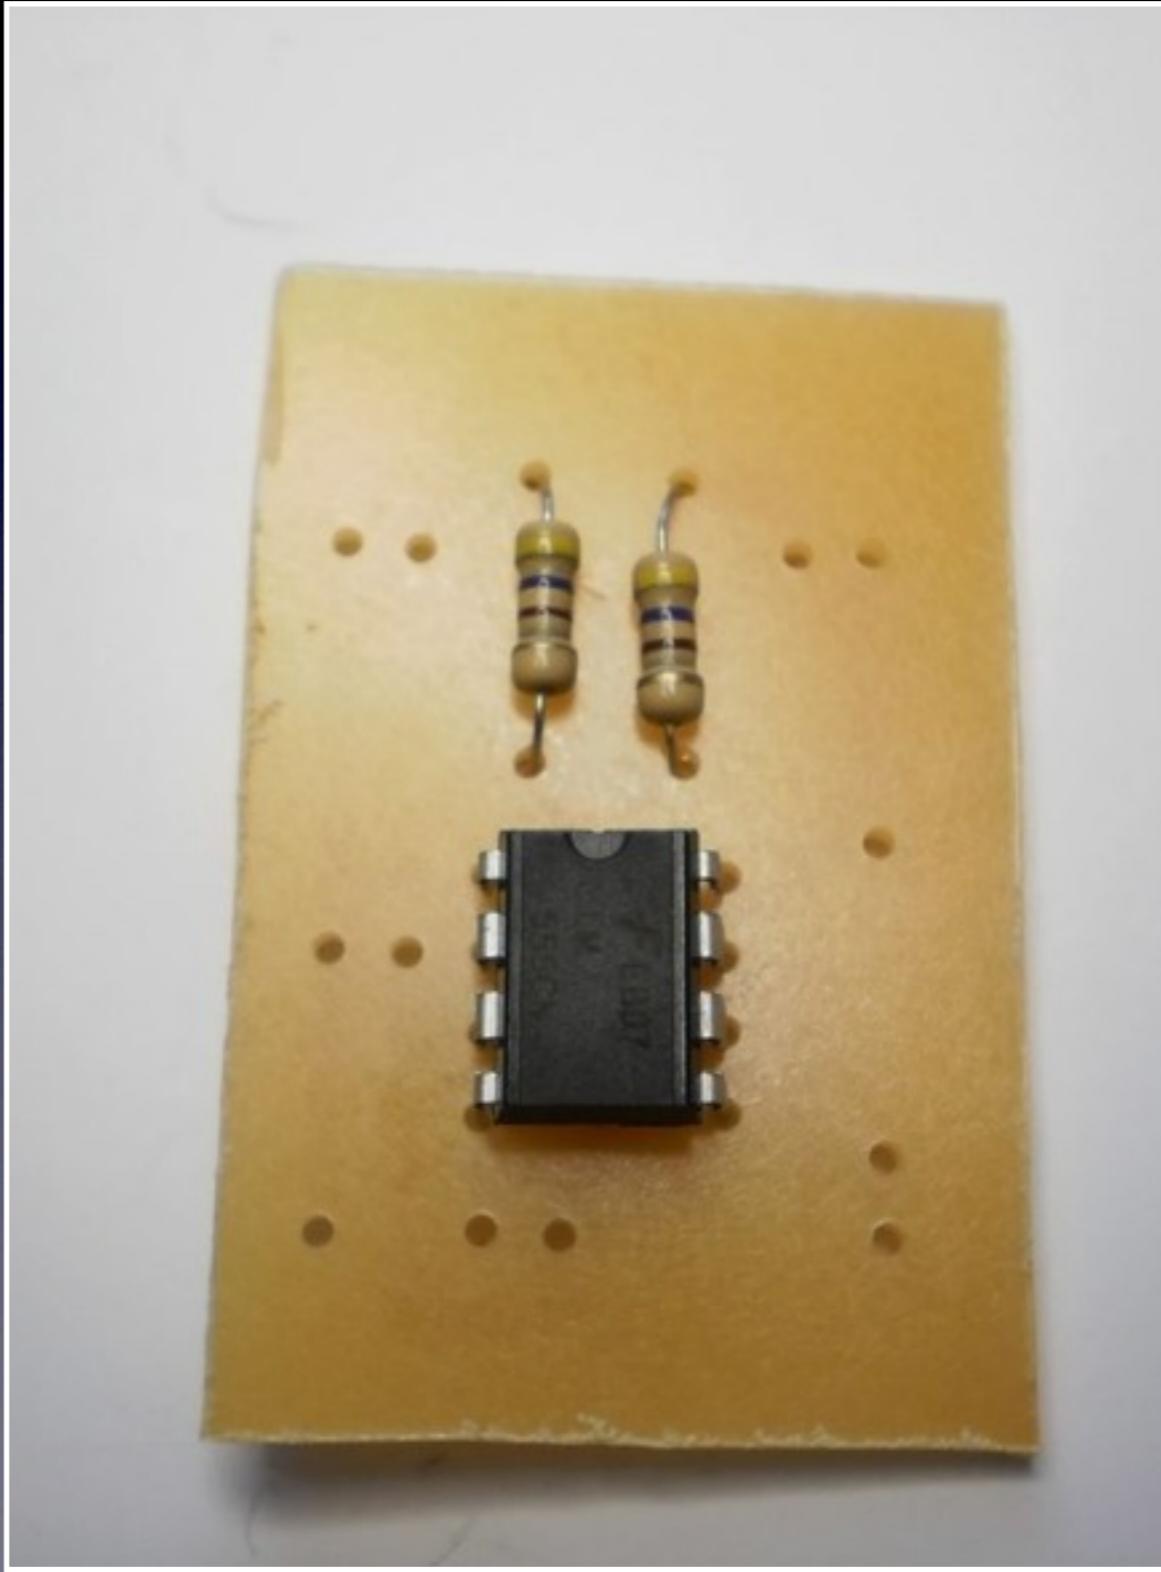




SynShop

Soldering Buildup

4

**Next,
solder the
two 100k
resistors,
brown,
black,
yellow.
Orient-
ation is
not
important.**

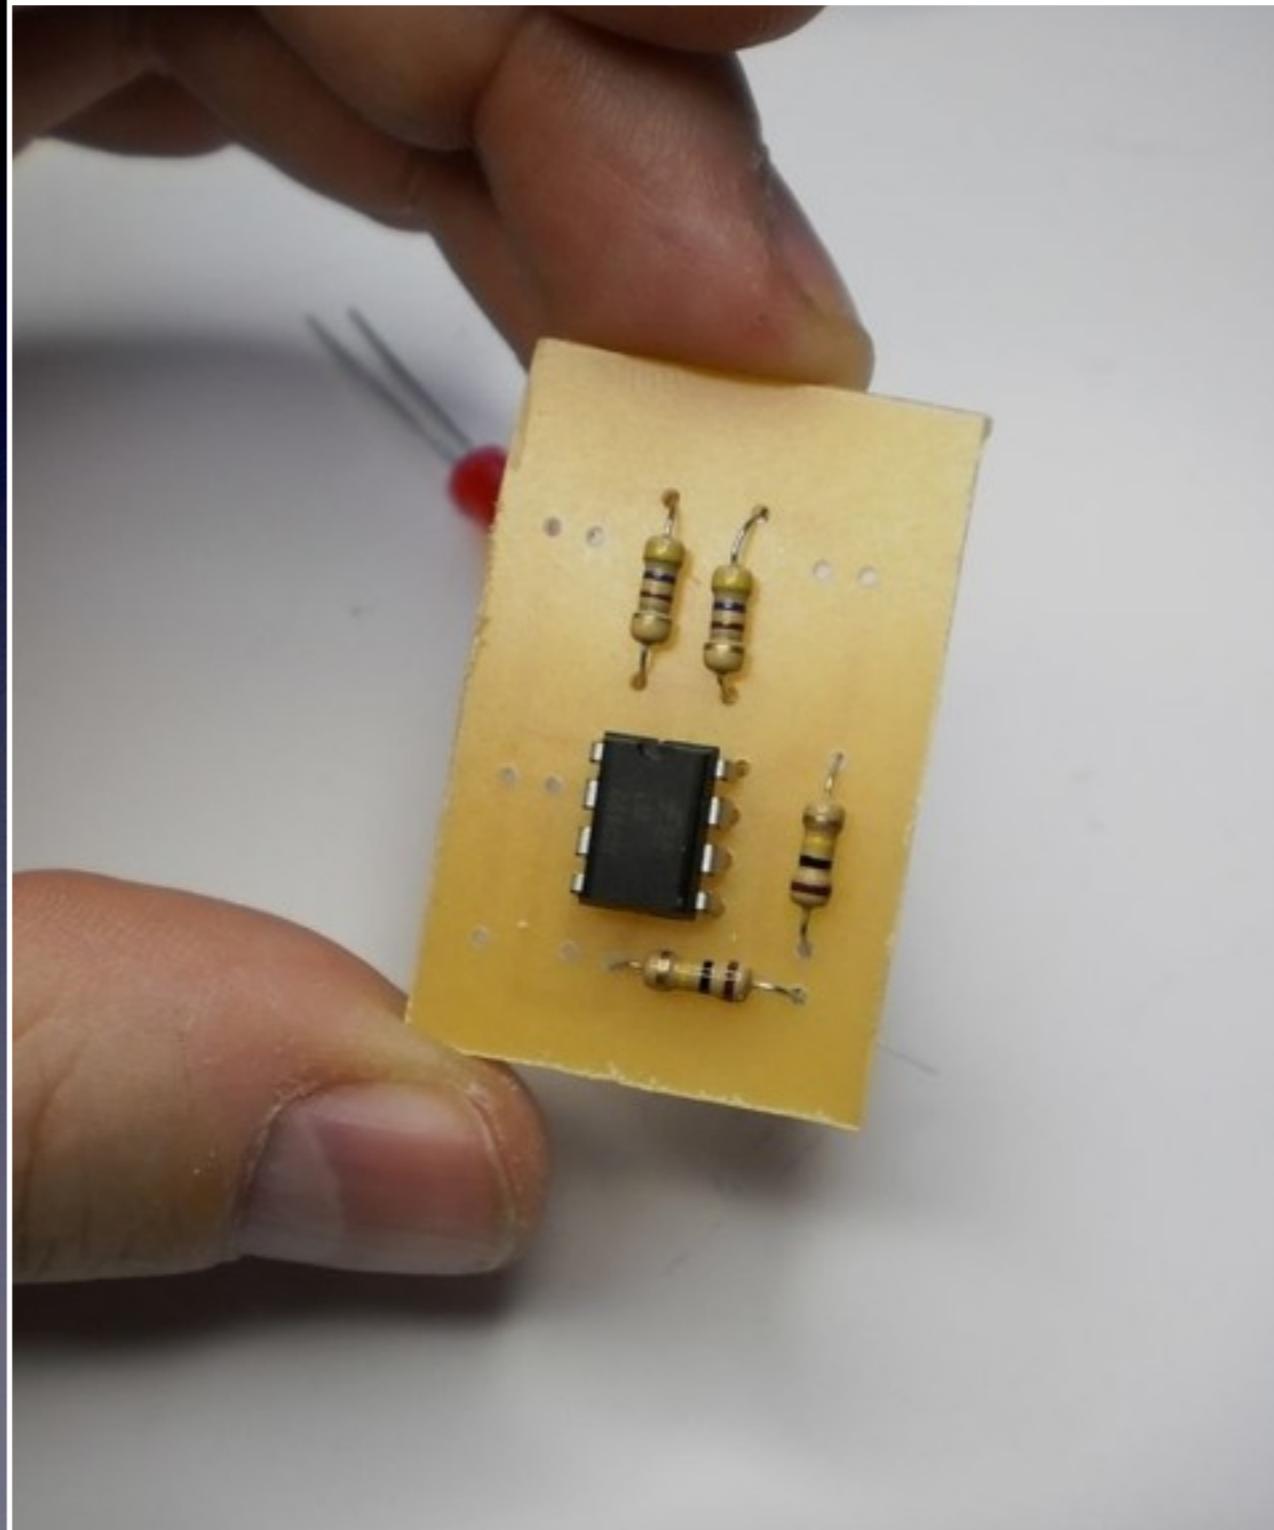




SynShop

Soldering Buildup

5

**Next,
place the
capacitor.
Long leg
to the
right. You
may lay
capacitor
flat.
Double
check
before
solder.**

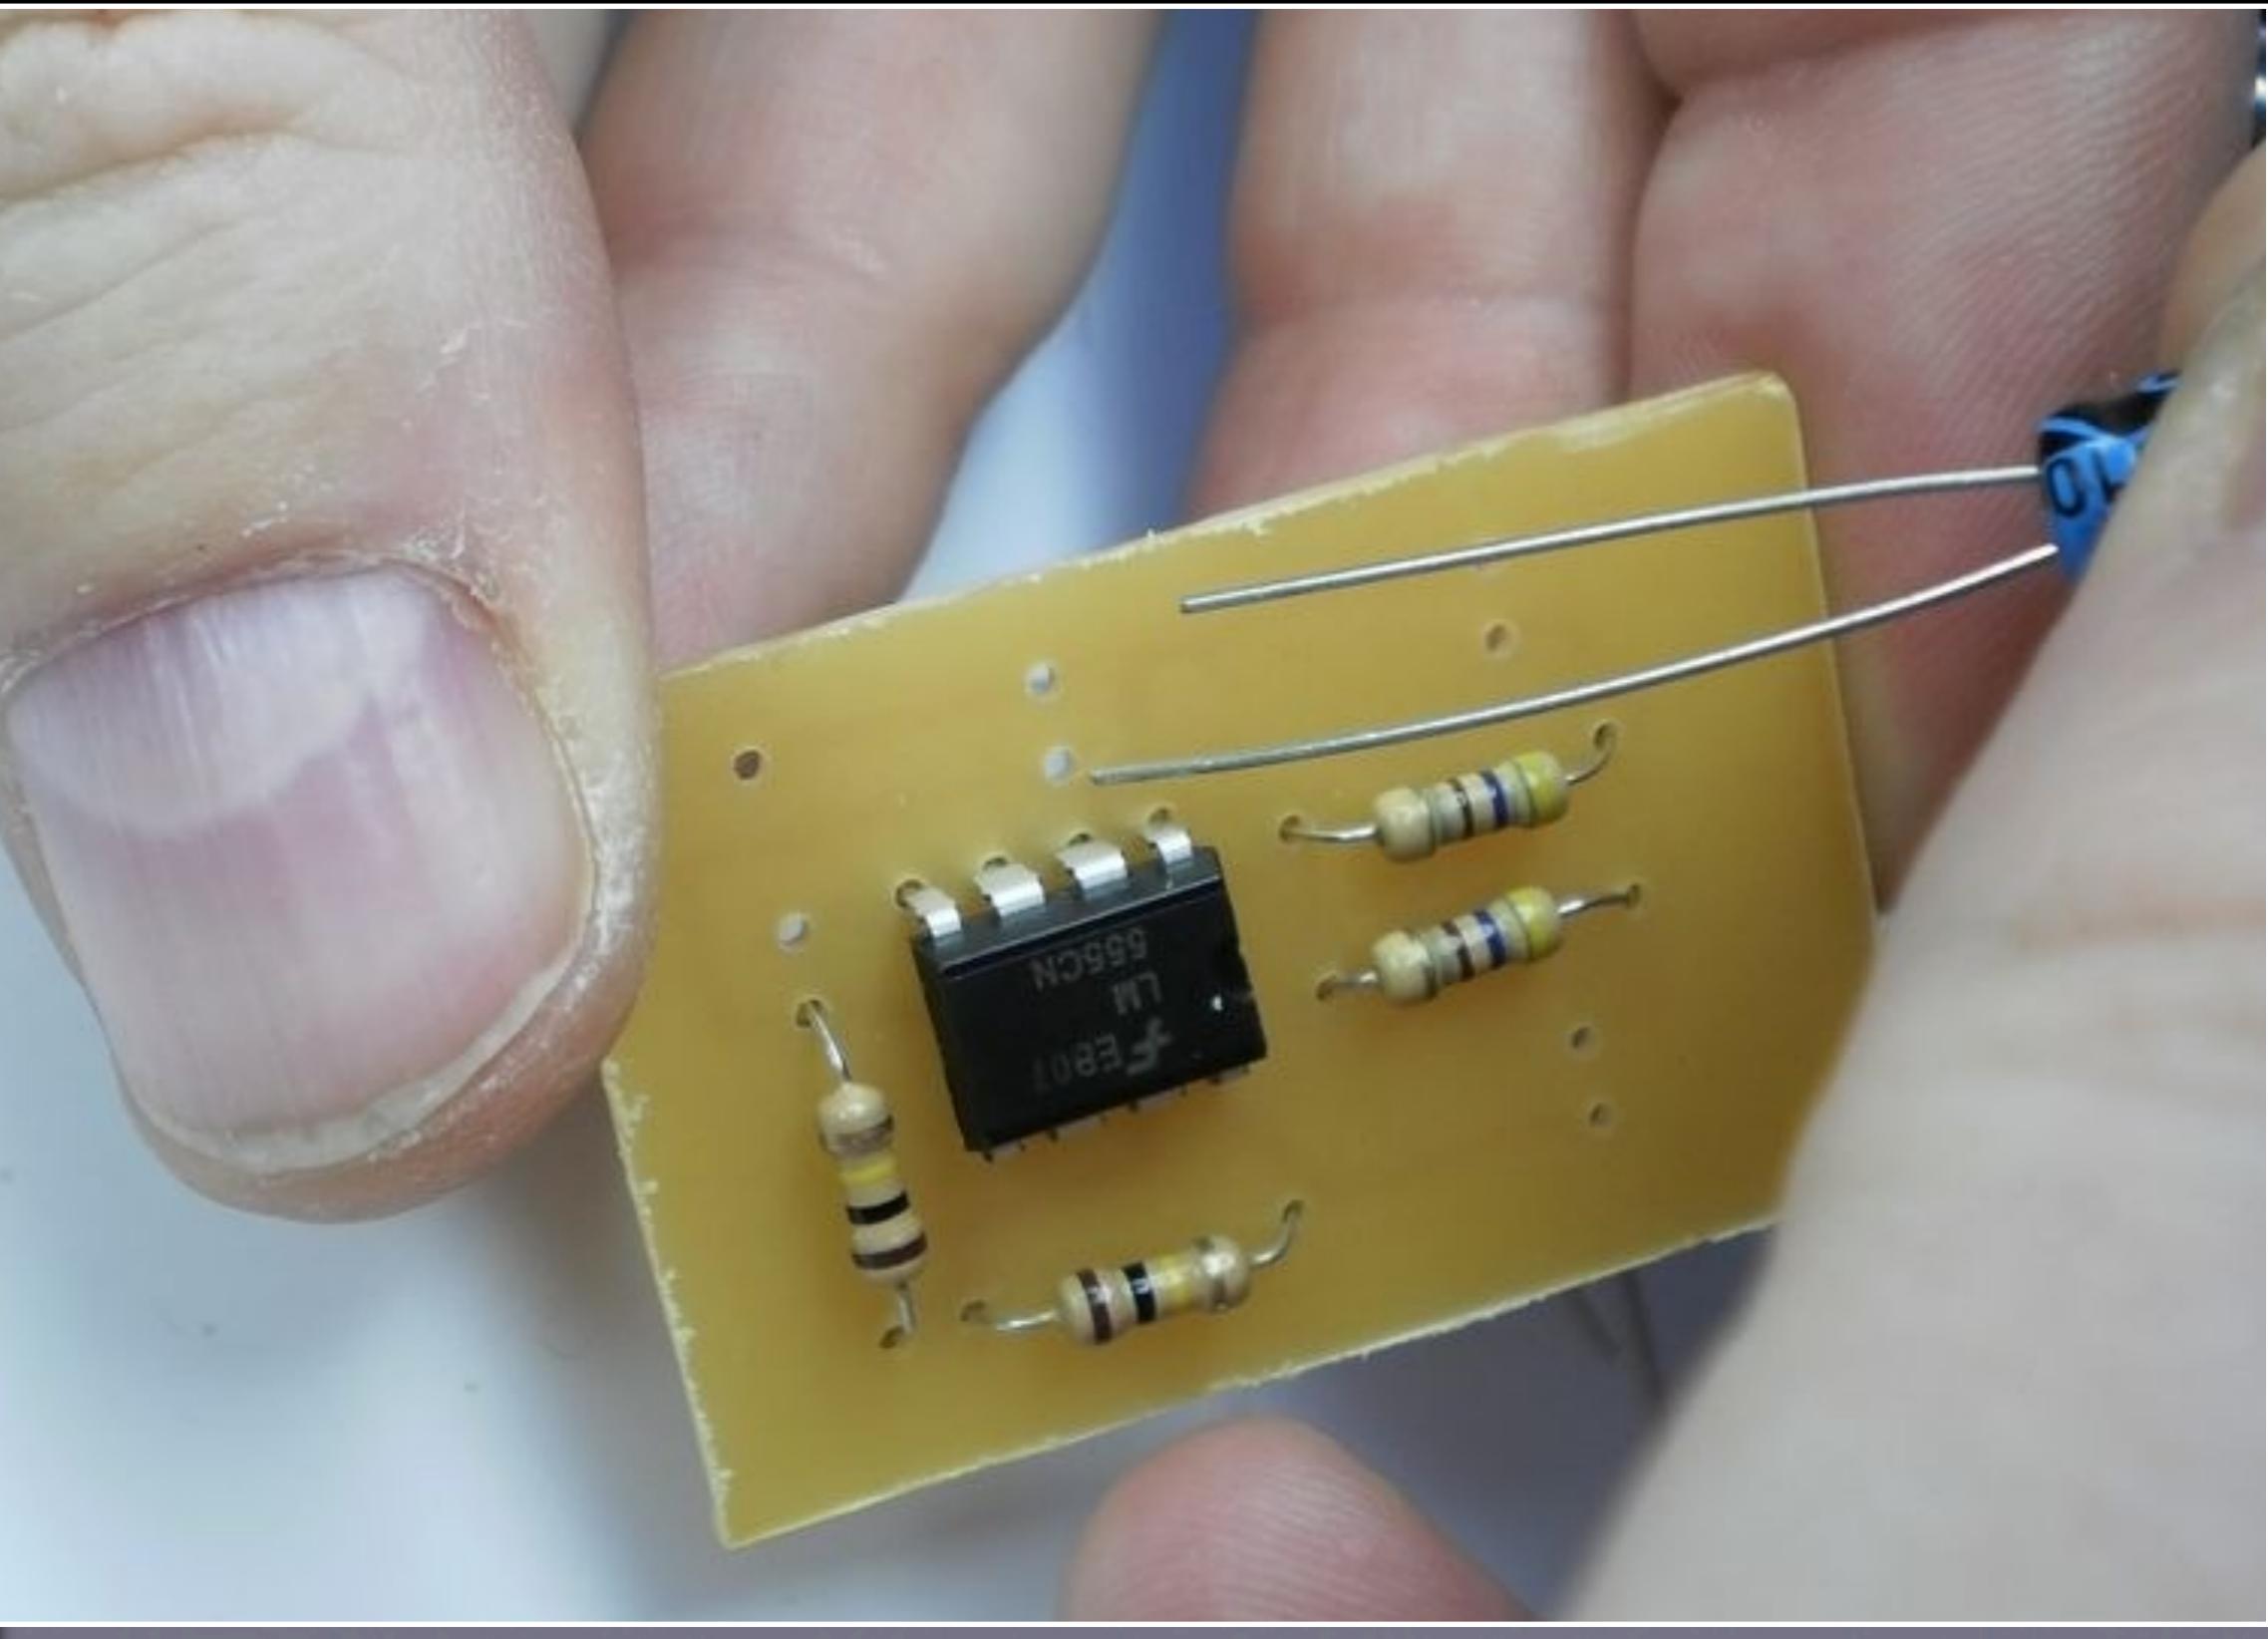




SynShop

Soldering Buildup

6
Next,
solder the
two LEDs.
Long leg
goes into
the right
hole.
Color is
not
important.
Double
check
before
solder.

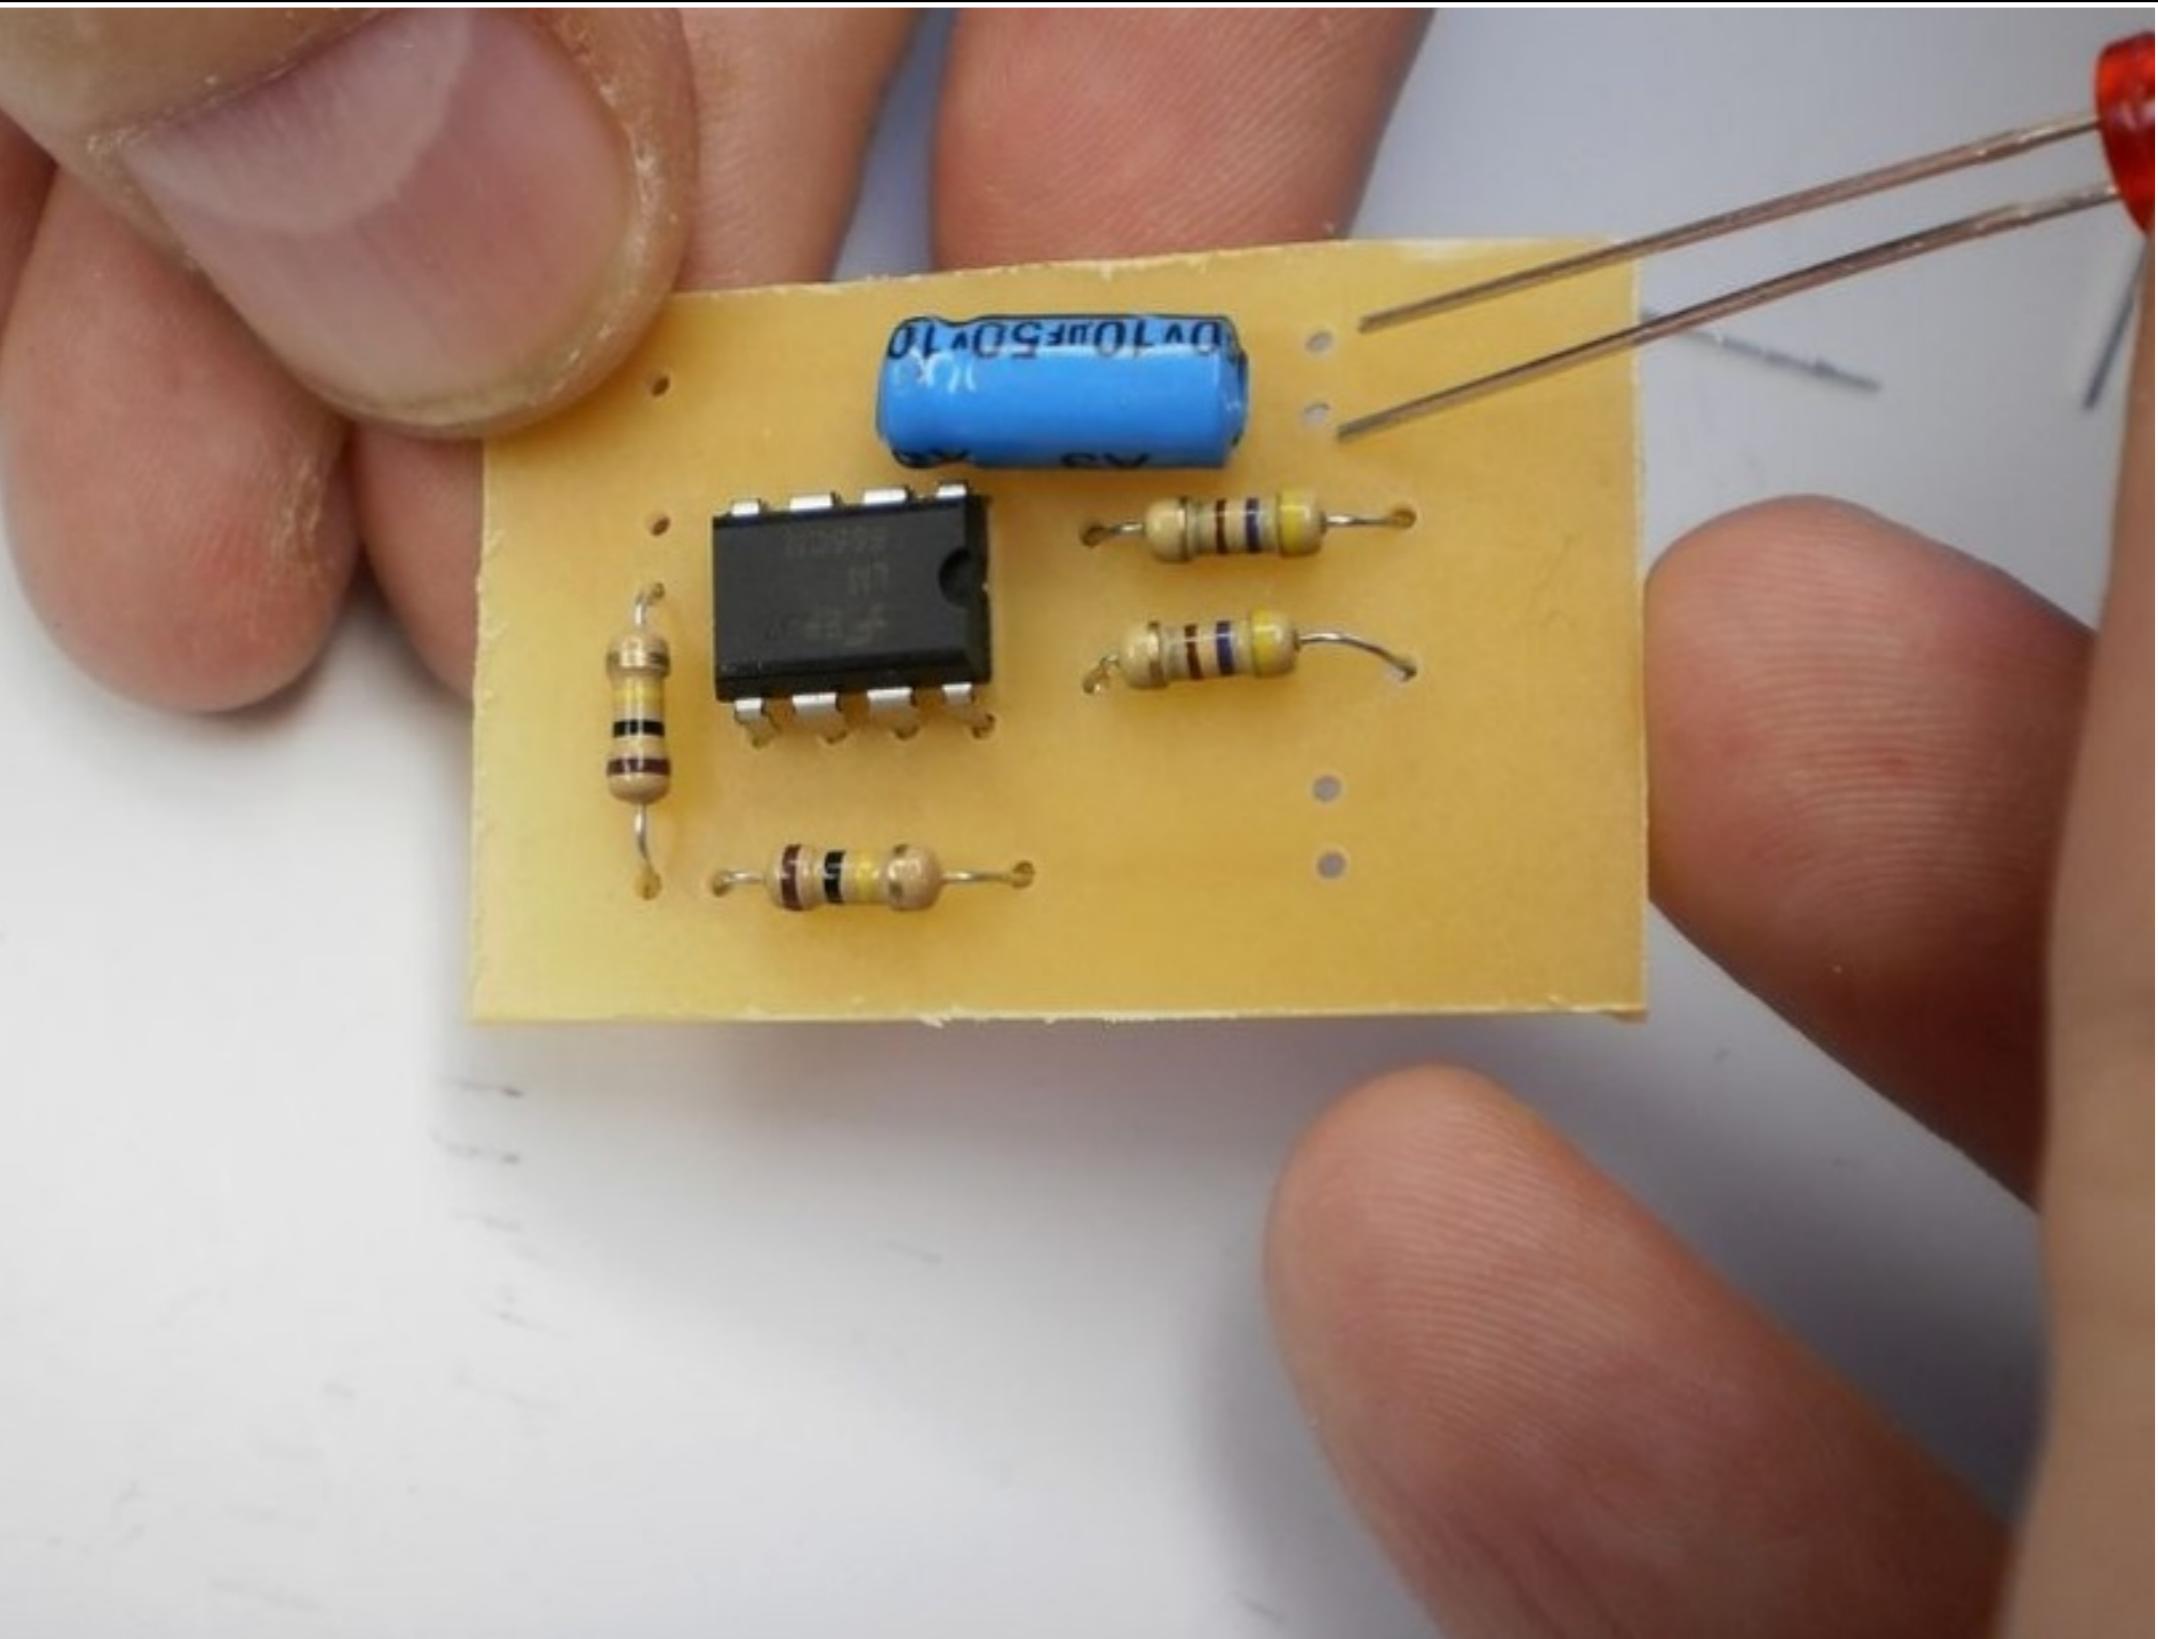




SynShop

Soldering Buildup

7

**Solder
battery
clip. Note
the + for
red wire,
top, and -
for
negative
wire
bottom.**

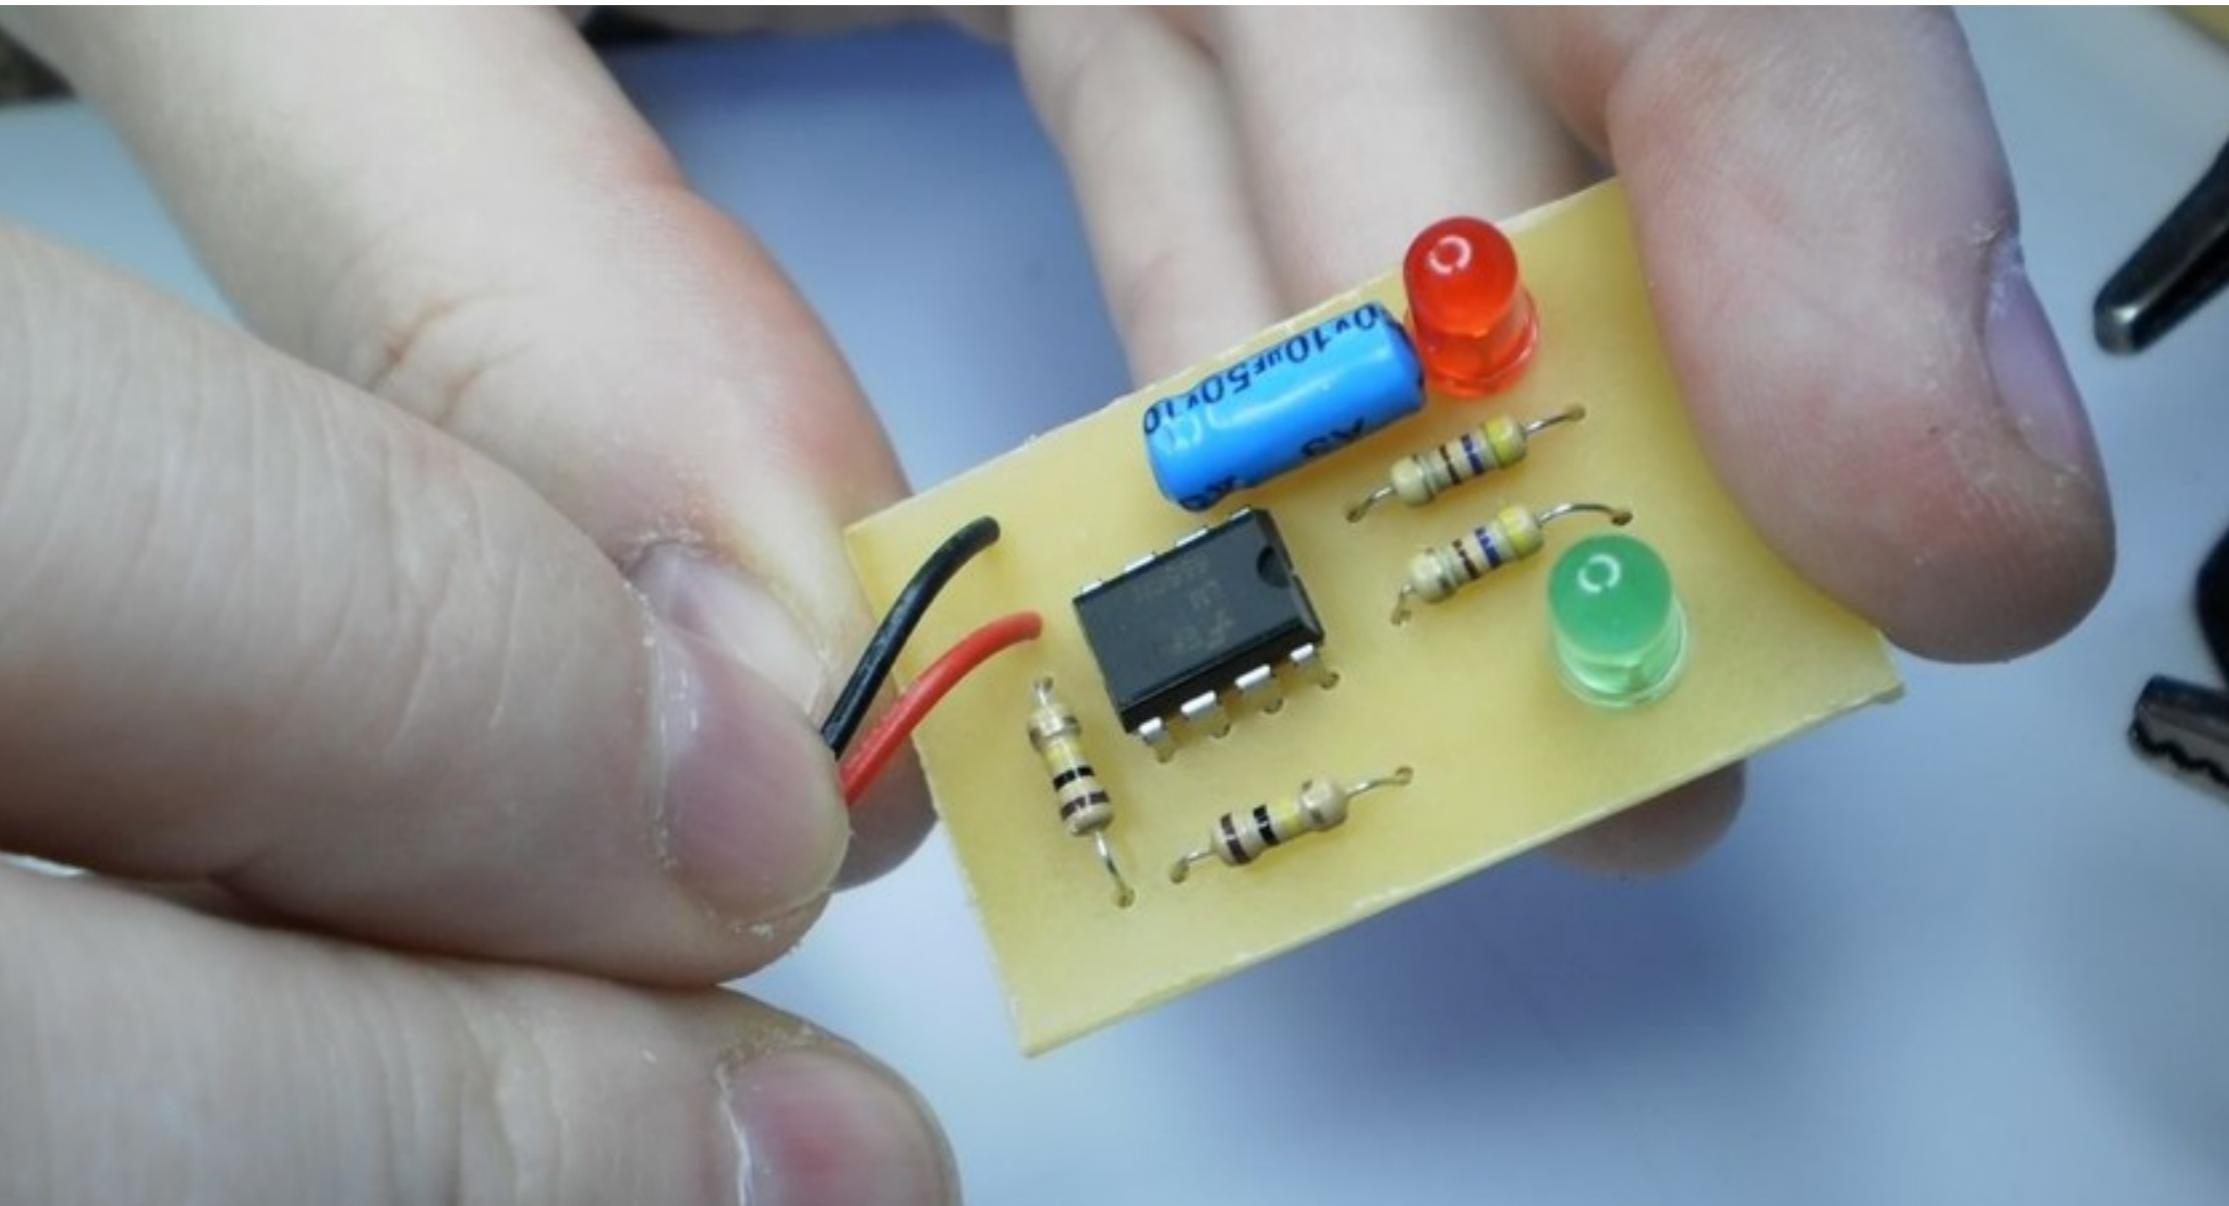



SynShop

Soldering Buildup

8

**Attach
battery.
Should
immed-
iately start
blinking.**





SynShop

Soldering Buildup

**That was a fun
build!**



SynShop

Soldering Buildup

**Where can I find
more easy to build
kits?**



SynShop Soldering Buildup

Lady Ada has lots
of great stuff at
AdaFruit.Com





SynShop
Soldering Buildup

SparkFun.Com
has lots of cool
stuff







SynShop

Soldering Buildup

And even I have designed kits for **SMTboards.com**

The screenshot shows the SMTboards.com website with a navigation bar at the top: Home, Blog, Projects (selected), Shop, Support. Below the navigation, there are three main sections:

- SMTtinyISP**: A micro-sized (1 1/4" x 1") tinyCylon! Our first kit! 14 different modes of operation. 11 parts, about a 20 minutes build. Design Docs, Code, Instructions, Kits, Parts available [here](#).
- SMTtinyCylon**: A micro-sized (1 1/4" x 1") tinyCylon! Our first kit! 14 different modes of operation. 11 parts, about a 20 minutes build. Design Docs, Code, Instructions, Kits, Parts available [here](#).
- SMTTester**: Or, are you really sure about that SMT LED's polarity? This even tinier board measures 3/4" x 1", But oh what power in such a small package. This board adds a temporary ISP port to a Tiny13. Great for programming batches of CPUs. Design Docs, Code, Instructions, Kits, Parts available [here](#).

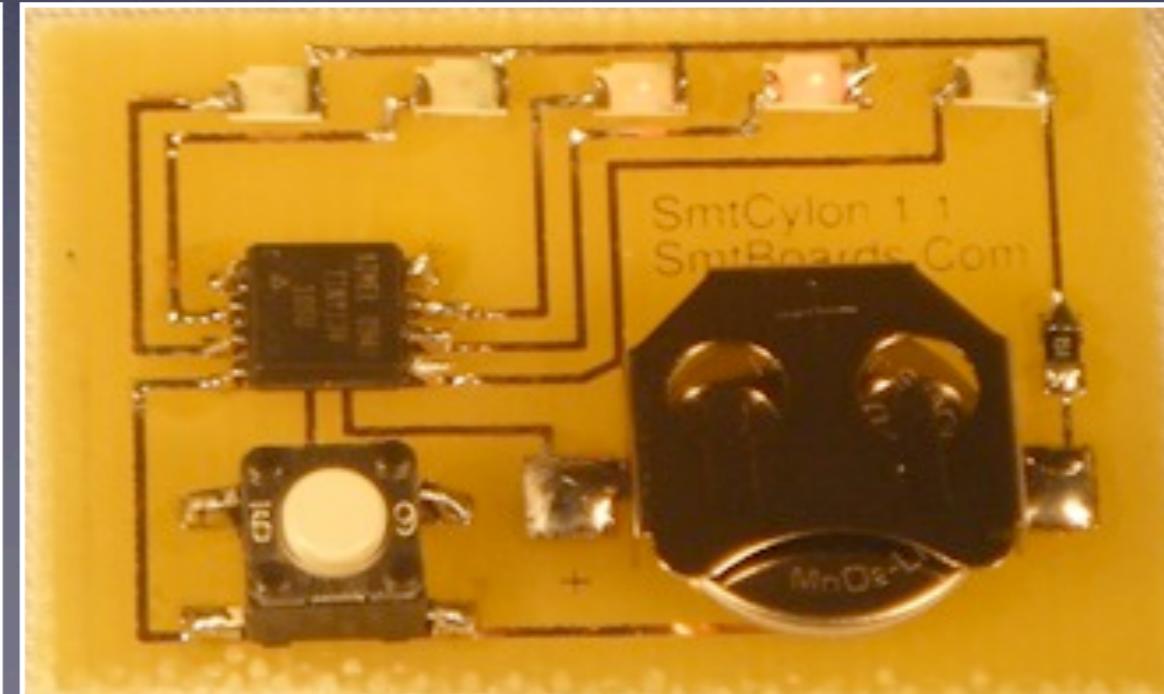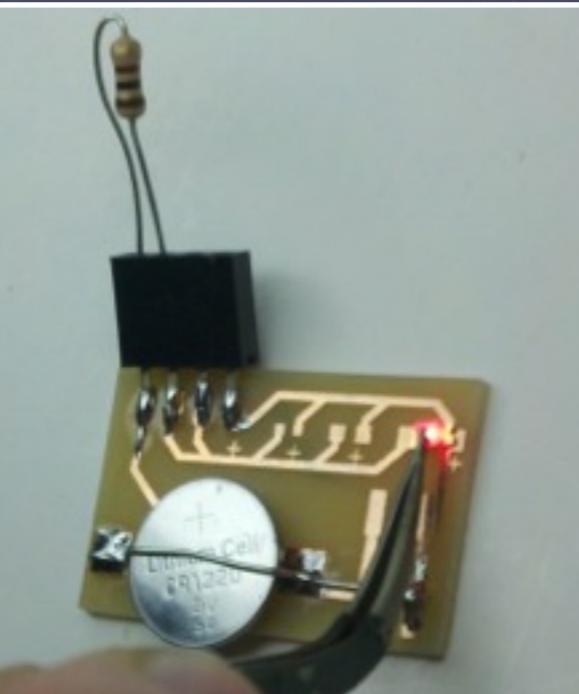



SynShop Soldering Buildup

**And that's the
class!**



SynShop

Soldering Buildup

This entire course is published
github.com/Dataman/SolderBuildup

Or simply go to
github.com/dataman





SynShop

Soldering Buildup



Thank You!

75