# 微电子器件物理 PN结的电流特性

曾琅

2020/09/18

## PN结的连续性方程

$$\nabla \bullet E = q \left( p - n + N_D^+ - N_A^- \right)$$
 能帶图

$$\frac{\partial n}{\partial t} = \frac{1}{q} \nabla \bullet \mathbf{J}_N - r_N + g_N$$


$$\mathbf{J}_N = q n \mu_N E + q D_N \nabla n$$

$$\frac{\partial p}{\partial t} = \frac{1}{q} \nabla \bullet \mathbf{J}_P - r_P + g_P$$


$$\mathbf{J}_{P} = qp\mu_{P}E - qD_{P}\nabla p$$

正向电流和反向电流


## PN结的正向偏置

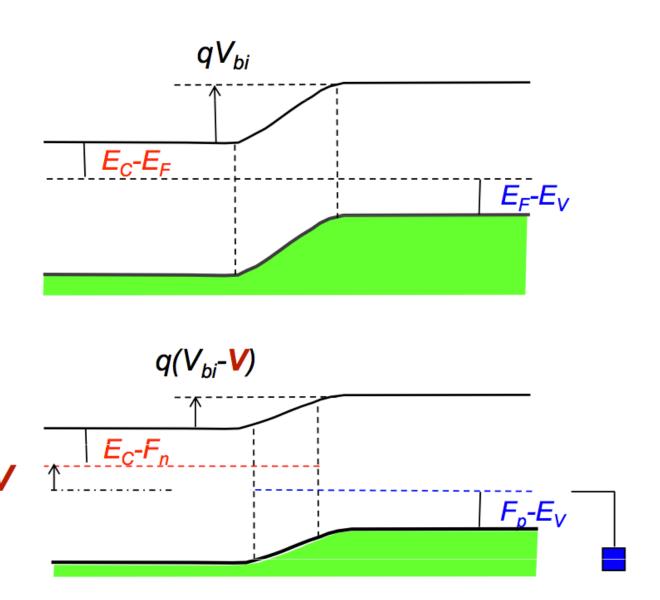


# 耗尽区宽度

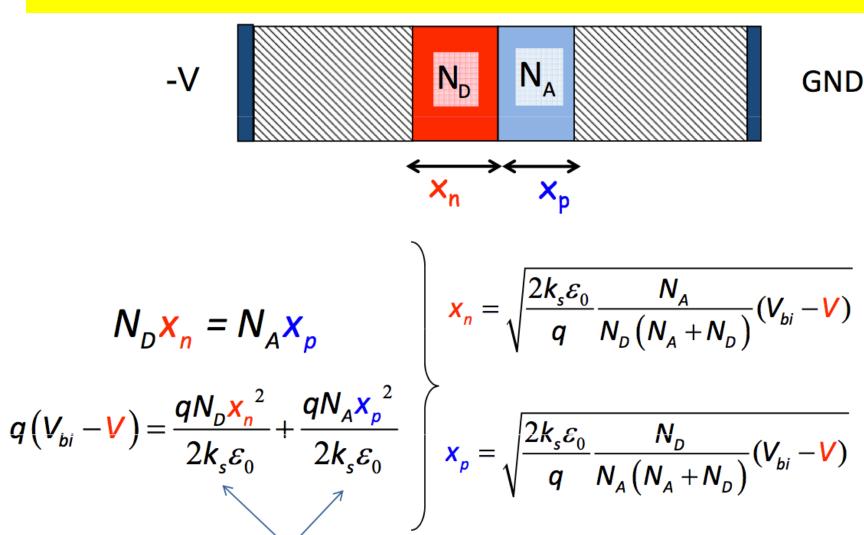

## 准费米能级

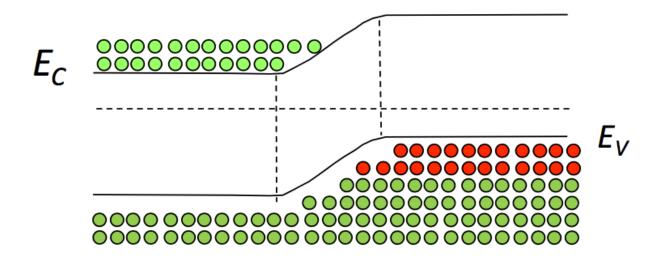

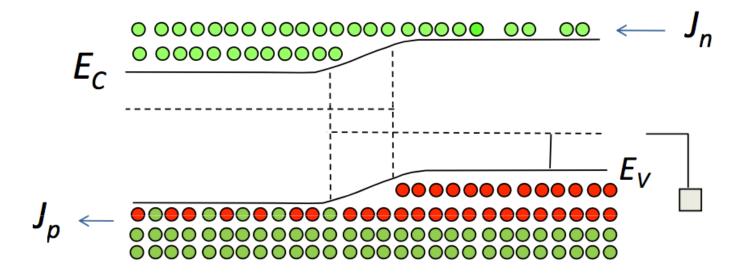


#### 边界条件

$$n(x = 0^{+}) = n_{i} e^{(F_{n} - E_{i})\beta}$$
  
 $p(x = 0^{+}) = n_{i} e^{-(F_{p} - E_{i})\beta}$ 


$$np = n_i^2 e^{(F_n - F_p)\beta} = n_i^2 e^{qV_A\beta}$$

$$p(0^+) = N_A$$

$$n(0^+) = \frac{n_i^2}{N_A} e^{qV_A\beta}$$

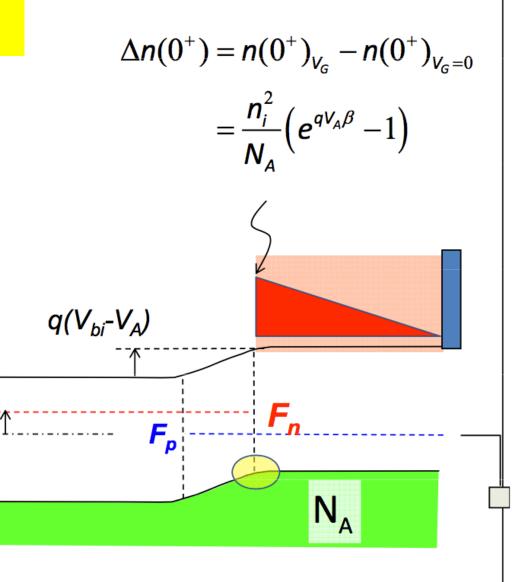

## 边界条件

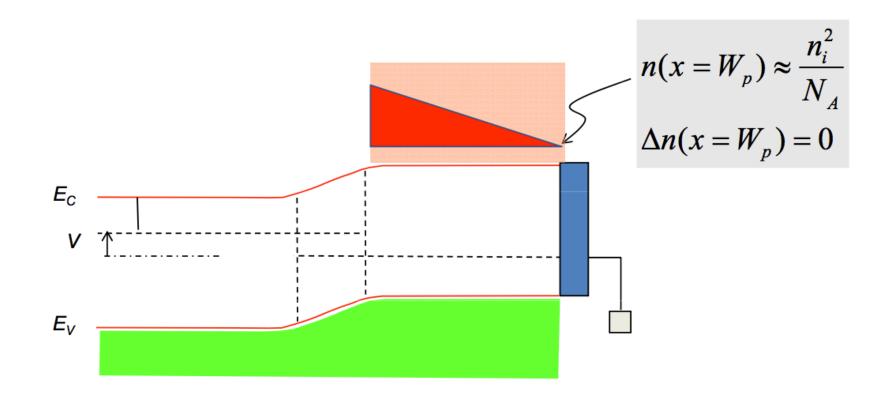

## 边界条件

$$D_N \frac{d^2 n}{dx^2} = 0$$

$$\Delta n(x,t) = C + Dx$$

$$x = W_p, \quad \Delta n(x = W_p) = 0 \Rightarrow C = -DW_p$$

$$x = 0', \quad \Delta n(x = 0) = \frac{n_i^2}{N_A} \left( e^{qV_A\beta} - 1 \right) = C$$


$$\Delta n(x, t) = \frac{n_i^2}{N_A} \left( e^{qV_A\beta} - 1 \right) \left( 1 - \frac{x}{W} \right)$$

#### 电子电流和空穴电流

$$\Delta n(x) = \frac{n_i^2}{N_A} \left( e^{qV_A\beta} - 1 \right) \left( 1 - \frac{x}{W_p} \right) \qquad \mathbf{J}_N = q n \mu_N \mathcal{E} + q D_N \nabla n$$

$$\mathbf{J}_{N} = q n \mu_{N} \mathcal{E} + q D_{N} \nabla n$$

$$J_n = qD_n \frac{dn}{dx}\Big|_{x=0} = -\frac{qD_n}{W_p} \frac{n_i^2}{N_A} (e^{qV_A\beta} - 1)$$

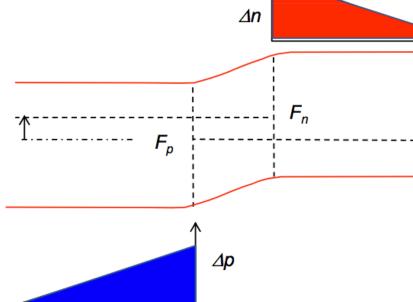

$$J_{p} = -qD_{p} \frac{dp}{dx}\bigg|_{x=0'} = -\frac{qD_{p}}{W_{n}} \frac{n_{i}^{2}}{N_{D}} \left(e^{qV_{A}\beta} - 1\right)$$


#### 总电流

#### 正向偏置


 $\ln J_T \approx q V_A / k_B T + \ln(const.)$ 

#### 反向偏置

 $J_T \approx const.$ 

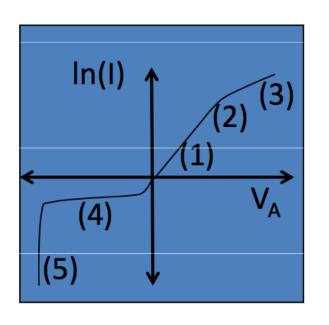

$$J_T = -q \left[ \frac{D_n}{W_p} \frac{n_i^2}{N_A} + \frac{D_p}{W_n} \frac{n_i^2}{N_D} \right] \left( e^{qV_A\beta} - 1 \right)$$

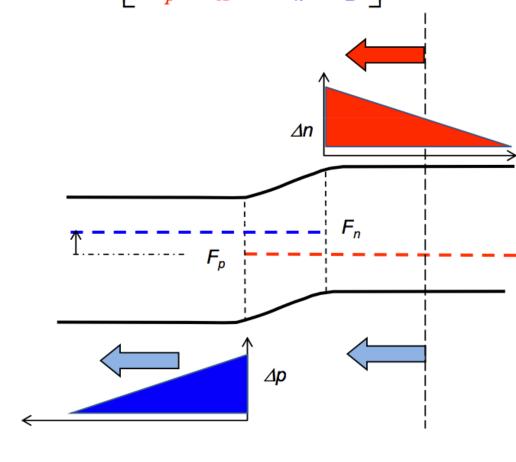

# Thanks! Q&A