Aritra Mukhopadhyay National Institute of Science Education and Research Bhubaneswar, Odisha 751005, India 3rd year, Integrated M.Sc. Physics Roll No.: 2011030 (Dated: March 8, 2024)

This study explores capacitance-voltage (C-V) profiling of a Schottky diode using a cost-effective approach. A low-cost op-amp circuit and LabVIEW-based instrumentation replace traditional lockin amplifiers and phase shifter circuits. The investigation aims to determine impurity dopant density and the built-in electric potential of the semiconductor layer. Results demonstrate consistency with anticipated values, endorsing the efficiency of the cost-effective methodology. The methodology is extended to C-V profiling of other devices, including an LED and a MOSFET, yielding results in accordance with theoretical expectations. This study suggests the viability of the proposed method for accurate and economical semiconductor device characterization.

#### I. THEORY

# A. Schottky Diode

Schottky diodes (shown in Figure 2) are semiconductor devices with distinct electrical properties due to the metal-semiconductor junction they form. Schottky diodes differ from ordinary p-n junction diodes by having a metal-semiconductor junction. These diodes have a lower forward voltage drop and faster switching speed than p-n junction diodes, making them suitable for rectification, power supply protection, and high-frequency circuits.

To establish a rectifying contact, allowing current flow in one direction, it is essential for the metal's work function  $(W_m)$  to exceed that of the semiconductor  $(W_s)$ . Upon contact, to maintain a constant Fermi level  $(E_F)$ , electrons migrate from the semiconductor's conduction band to the metal, inducing band structure deformation. This deformation persists until the semiconductor's chemical potential aligns with the metal's Fermi level. As electrons move from the semiconductor to the metal, a slight negative charge accumulates on the metal, hindering further electron flow. The modified band structure, characterized by an upward bending of the bands (see Figure 2), creates a potential barrier near the contact area, resulting in the formation of a depleted region within the semiconductor. This depleted region lacks charge carri-

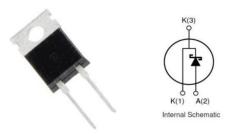


FIG. 1: Schottky diode [1]

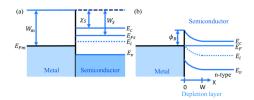


FIG. 2: Before and after contact the metal semiconductor contact is made in Schottky diode [2]

ers, and the metal's contribution to it is minimal due to the surplus of electrons present in the metal.

### 1. Reverse-biased Schottky Barrier

In the reverse bias scenario, the metal is connected to the negative terminal, while the semiconductor is connected to the positive terminal of the battery. Electrons within the semiconductor migrate towards the positive battery terminal, resulting in an increase in both the height and width of the potential barrier in the depletion region, while maintaining  $\Phi_B$  constant. The application of reverse bias reduces the significance of diffusion current due to the substantial potential barrier, giving prominence to a minor drift current. The region between the two extremes of the depletion region acts as a capacitor, devoid of free charge carriers, with the boundaries carrying opposite charges.

The Schottky diode can be envisioned as a parallel arrangement of a capacitor (C) and a resistor  $(R_L)$ , representing leakage) along with a resistor  $(R_S)$ , resembling the neutral bulk region beyond the depletion layer) connected in series to them. In the case of high-quality diodes, characterized by significant doping density, the impedance generated by  $R_L$  and C is sufficiently large in comparison to the impedance produced by the series resistor RS. Consequently,  $R_S \approx 0$  and can be disregarded.

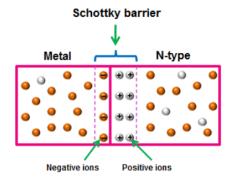


FIG. 3: Reverse biased Schottky diode [3]

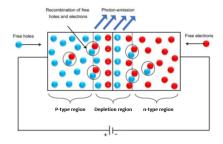


FIG. 4: Schematic showing recombination of electrons and holes in LEDs [4]

## B. Light Emitting Diode(LED)

Light Emitting Diodes (LEDs) operate as p-n junction diodes, converting electrical energy into light energy. Electrons within the semiconductor recombine with holes, releasing energy in the form of photons through radiative emission. LEDs have become the preferred choice over incandescent lamps and CFL tubes in lighting applications due to their energy efficiency and longer lifespan. In contemporary applications, Organic LEDs (OLEDs) are designed using organic electroluminescent materials, serving various purposes such as displays in TVs, laptops, mobile phones, and other electronic devices.

Despite the generally favorable characteristics of LEDs, drawbacks include restrictions on electrical input to low voltage, typically limited to DC (not AC) power. LEDs face challenges in delivering consistent illumination from a pulsating DC or AC electrical supply source. Additionally, they exhibit lower maximum operating and storage temperatures.

#### C. Mosfet

Metal-Oxide-Semiconductor Field-Effect Transistors (MOSFETs) are widely used in electrical circuits as switches or amplifiers. In this work, we investigated an N-channeled 2N7000 MOSFET with three pins: source, gate, and drain. The gate voltage controls the current

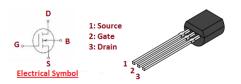


FIG. 5: N-channel Enhancement MOSFET 2N7000 [5]

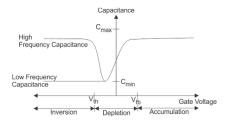


FIG. 6: Three modes of MOSFETs

flow between the source and the drain. To establish the Capacitance-Voltage (C-V) profile, we supplied an AC voltage to the gate terminal and measured the capacitance between it and the source or drain terminals.

The MOSFET operates in three fundamental modes: accumulation, depletion, and inversion. These modes characterize the behavior of charge carriers within the semiconductor material of the transistor.

- Accumulation: When we put a voltage on the metal gate, electrons from the semiconductor gather near the metal-semiconductor interface, forming a layer that improves the flow of electricity between the source and drain.
- **Depletion:** Without any voltage or with a small positive voltage on the gate, a region near the surface of the semiconductor gets depleted of charge carriers, making it less conductive.
- Inversion: Applying a strong positive voltage to the gate attracts electrons from the semiconductor to the surface, forming a conductive channel between the source and drain. This process, called "inversion," changes the semiconductor's type from p-type to n-type.

## D. Capacitance of the Schottkey Diode

To analyze the capacitance-voltage profile, we apply a reverse DC bias to the diode along with a small AC signal. This setup allows the AC signal to pass through, as a capacitor offers infinite resistance to a DC signal. If the angular frequency of the AC signal in the circuit is denoted as  $\omega$ , the resulting output current is expressed as:

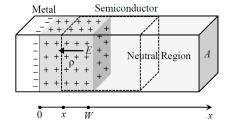


FIG. 7: Depletion region of a Schottky diode along with a chosen rectangular Gaussian surface [6]

$$I = \frac{V_{ac}}{Z} = V_{ac} \left( \frac{1}{R_L} + i\omega C \right) \tag{1}$$

So, we get two components of the output current,  $I_x$  being proportional to  $^1/R_L$  which is in-phase with the input signal to the diode, and  $I_y$  is proportional to  $\omega C$  which is 90° out-of-phase with respect to the input signal. Corresponding voltages,  $V_x$  is called the in-phase component, and  $V_y$  is called the quadrature component of the output voltage.

We take a capacitor of known capacitance  $(C_0)$  as a reference. By measuring the corresponding voltage  $(V_0)$  of this capacitor, we can determine the capacitance of the diode by using the expression:

$$C = C_0 \frac{V}{V_0} \tag{2}$$

Accounting for the small phase shifts from the amplifiers and cables, the above equation gets modified as:

$$C_{diode} = \frac{(V_x V_{x_0} + V_y V_{y_0})}{(V_{x_0}^2 + V_{y_0}^2)} C_{ref}$$
 (3)

# E. Capacitance-Voltage Profiling Of Schottky Diode

Consider a Schottky barrier with a cross-sectional area A and an x-axis, aligned along the length of the diode, where the origin is the metal-semiconductor interface (see Fig. 9). Assuming that positively charged dopant atoms are incorporated into the semiconductor lattice in a position-dependent manner, the doping density  $\rho(x)$  becomes a function of the distance from the metal-semiconductor interface.

If an external reverse bias voltage  $-V_R$  is applied, then the total potential at the barrier will be:

$$V_0 = -(V_R + V_{bi})$$

and the total charge stored in the metal surface will be -Q (since reverse bias). Let the width of the depletion region be W, beyond which the semiconductor is neutral.

Taking a rectangular Gaussian surface as shown in Figure 8 and using Gauss' law:

$$\epsilon EA = \frac{e\rho(x)A(W-x)}{\epsilon_0} \tag{4}$$

For electric potential V(x), we get two boundary conditions:

$$V(0) = -(V_R + V_{bi}), \qquad V(W) = 0$$

Thus, from  $V(W)-V(0)=-\int_W^0 E\dot{d}x$ , we get:

$$V_R + V_{bi} = \frac{e}{\epsilon \epsilon_0} \int_w^0 x \rho(x) dx \tag{5}$$

If the bias voltage is increased by a small amount  $dV_R$ , the depletion width increases by dW along with creating extra space charge of  $dQ = e\rho(W)AdW$ , where  $\rho(W)$  is the doping density at the edge of the depletion region. So,

$$dV_R = \frac{e}{\epsilon \epsilon_0} W \rho(W) dW \tag{6}$$

Thus, the capacitive response is given by:

$$C \equiv \frac{dQ}{dV_R} = \frac{e\rho(W)AdW}{\frac{e}{\epsilon\epsilon_0}W\rho(W)dW} = \frac{\epsilon\epsilon_0 A}{W}$$
 (7)

If we plot C vs V, we can see that the capacitance is inversely proportional to the square root of the applied  $V_R$ . So, plotting  $^1/c^2$  vs V should be linear in nature. So:

$$\frac{d}{dV_R} \left( \frac{1}{C^2} \right) = \frac{1}{(\epsilon \epsilon_0 A)^2} 2W \frac{dW}{dV_R} \tag{8}$$

$$\frac{d}{dV_R} \left( \frac{1}{C^2} \right) = \frac{2}{(\epsilon \epsilon_0 A)^2 \rho(W)} \tag{9}$$

This is the Profiler's equation, used to characterize the spacial distance of dopants in the semiconductor.

For a constant doping density  $(\rho(x) = \rho)$ , the width of the depletion region W, corresponding to  $V_R$ , is given by  $W = \epsilon \epsilon_0 A/C$  and the doping density as W is

$$\rho = \frac{2}{e\epsilon\epsilon_0 A^2 m} \tag{10}$$

where m is the slope of the linear plot of  $^1/^{2}$  vs V. Let b be the y-intercept of the plot, then the build-in potential can be calculated as:

$$V_{bi} = \frac{b}{m} \tag{11}$$

#### II. LOCK-IN AMPLIFIER

A Lock-in Amplifier is a tool designed for measuring AC signals accompanied by noise. It finds applications in engineering, particularly when the signal of interest is weak, comparable to the accompanying noise that needs extraction. This amplifier works by multiplying the input signal, denoted as  $\omega_s$ , with a reference signal of frequency  $\omega_r$ .

$$V_S = V_{0_s} \sin \omega_s t \tag{12}$$

$$V_S = V_{0_r} \sin \omega_r t \tag{13}$$

If  $V_{0_r} = 2$  (amplitude of the reference signal), then the product of the two becomes

$$2V_{0_s}\sin\omega_s t\sin\omega_r t = V_{0_s}[\cos(\omega_s t - \omega_r t) - \cos(\omega_s t + \omega_r t)]$$
(14)

As a result, the product involves two frequencies: one is the sum, and the other is the difference of  $\omega_s$  and  $\omega_r$ . When  $\omega_s = \omega_r$ , the difference-frequency sinusoid becomes a DC voltage with amplitude  $V_0$ . Utilizing a low-pass filter allows us to obtain the final DC value. Consequently, this approach enables the determination of the amplitude of the sinusoidal component within the experimental waveform, where its frequency matches that of the reference, effectively filtering out higher frequency noise.

## III. LAB-VIEW PROGRAM

In lieu of a commercial Lock-in amplifier, our approach utilizes a LabVIEW code for DC signal amplitude extraction. The code encompasses reference signal generation, phase-sensitive detection (PSD), and low-pass filtering. The MFR-2230M function generator, controlled by a LabVIEW driver, varies the DC offset voltage incrementally. Software triggering generates the reference signal, synchronized with the output signal from the function generator. This signal triggers the DAQ device for measurements.

To calculate capacitance, both in-phase and quadrature components of potential are required. Two reference signals with a 90° phase difference feed into separate PSDs, followed by low-pass filters. The Fast Fourier Transform is employed for low-pass filtering, extracting the DC component's amplitude. The LabVIEW code records voltage values corresponding to reverse bias voltage in an Excel sheet.

### IV. PROCEDURE

We varied the reverse bias of the device from 0 V to 4 V in increments of 0.05 V. The AC signal's amplitude remained at 30 mV, and its frequency was set to 1 kHz. We

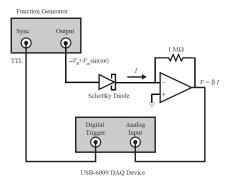


FIG. 8: Circuit diagram for low-cost implementation of capacitance profiling using USB-60009 DAQ device

sampled data at a rate of 32,000 samples/sec, collecting a total of 16,384 samples.

To use the auto-phasing technique, we initially recorded in-phase and quadrature voltage values after replacing the device with a calibration capacitor having  $C_0=1\,nF$ . These values were then plugged into Eq 3 to find the device's capacitance, and a graph of C versus V was created.

Subsequently, we plotted  $1/C^2$  against  $V_R$ . The resulting straight line suggests that the diode's doping density remains constant over the spatial profile. Using Eq 10 and Eq 11 we calculated the doping density and the diode's built-in potential.

<sup>[1]</sup> How to identify the pins of schottky diodes? (2023), accessed on 2023-11-24.

<sup>[2]</sup> S. Zhang, Z. Liu, Y. Liu, Y. Zhi, P. Li, Z. Wu, and W. Tang, Electrical characterizations of planar ga2o3 schottky barrier diodes, Micromachines (Basel) 12, 259 (2021).

<sup>[3]</sup> A. Shaik, Schottky diode, accessed on 2023-11-24.

<sup>[4]</sup> D. D. Costa, M. D. Anjos, D. Oliveira, A. Machado, J. Assis, and R. Lopes, Semiconductors (leds) quality control

based on high-resolution 3d x-ray microscope, Braz. J. Radiat. Sci. 10 (2022).

<sup>[5]</sup> D. Watson and S. Z. Nasir, Introduction to 2n7000 (2018), accessed on 2023-11-24.

<sup>[6]</sup> N. D. Reynolds, C. D. Panda, and J. M. Essick, Capacitance-voltage profiling: Research-grade approach versus low-cost alternatives, Am. J. Phys. 82, 196 (2014).