

safe-RTOS - Manual

Peter Vranken

Table of Contents

1.	Scope	1	
2.	Abbreviations	1	
3.	References	2	,
4.	Introduction	2	,
5.	The RTOS	4	Ŀ
	5.1. Overview Functionality	4	Ŀ
	5.2. Scheduler and preemption	6	,
	5.3. Events	6	,
	5.4. The operating system clock	7	,
	5.5. Priority of tasks and interrupts	7	,
	5.6. Exception handling	8	,
	5.7. Deadline monitoring	9)
	5.7.1. Deadline monitoring: To be used or better not?	. 11	
	5.8. Distribution and integration	. 11	
	5.8.1. Single image versus three images	. 11	-
6.	The safety concept	. 12	
7.	I/O driver model	. 13	,
	7.1. Memory mapped I/O driver	. 14	r
	7.2. Callbacks	. 15	,
	7.3. The system call	. 16	,
	7.3.1. Conformance classes	. 17	,
	Basic handler	. 17	,
	Simple handler	. 18)
	Full handler	. 19)
	7.3.2. Safety concept	. 19)
	7.3.3. Maintaining the system call table	. 20)
	System calls of safe-RTOS	. 21	-
	System calls of sample I/O drivers	. 22	
	7.3.4. Sample code	. 22	
8.	The API of safe-RTOS	. 23	,
	8.1. Naming conventions	. 23	,
	8.2. Table of available services	. 23	,
	8.3. System configuration and initialization	. 25	,
	8.3.1. Allocated MCU resources	. 25	,
	8.3.2. Error codes	. 25	,

	8.3.3. Create an event	. 26	3
	8.3.4. Registering a task	. 27	7
	8.3.5. Initialize the interrupt hardware	. 28	3
	8.3.6. Registering an ISR	. 29)
	8.3.7. Configure privileges for inter-process function calls	. 29)
	8.3.8. Configure privileges for suspending processes	. 30)
	8.3.9. Start of kernel	. 30)
	8.4. Control tasks and processes	. 30)
	8.4.1. Trigger an event	. 30)
	8.4.2. Inter-process function call	. 31	L
	8.4.3. Task abortion or termination	. 32	2
	8.4.4. Suspend a process	. 32	2
	8.5. Critical sections	. 32	2
	8.5.1. Mutual exclusion of all contexts	. 32	2
	8.5.2. Priority ceiling protocol for tasks	. 33	3
	8.6. System call interface	. 34	ŀ
	8.6.1. Do a system call	. 34	ŀ
	8.6.2. Abort a system call	. 34	ŀ
	8.6.3. Check memory address for read or write access	. 35	5
	8.7. Query system state	. 35	5
	8.7.1. Get index of executing core	. 35	5
	8.7.2. Get core status register	. 36	3
	8.7.3. Get interrupt suspension status	. 36	3
	8.7.4. Process state	. 36	3
	8.8. Diagnostic interface	. 36	3
	8.8.1. Task overrun	. 37	7
	8.8.2. Exception count	. 37	7
	8.8.3. Stack space	. 38	3
	8.8.4. Average CPU load	. 38	3
9	. Memory layout	. 38	3
	9.1. Linker script	. 40)
	9.2. Defining data objects	. 43	3
	9.3. Common access rules	. 45	3
	9.4. Common cache rules	. 46	3
	9.5. Legacy code	. 46	3
	9.6. Legacy build environments	. 47	7
	9.7. The C library	. 47	7

. The sample applications	48
10.1. Sample application "initial"	48
10.2. Sample application "default"	49
10.3. Sample application "basicTest"	49
10.4. Sample applications "testPCP" and "roundRobin"	50
10.5. Sample application "benchmark"	50



1. Scope

safe-RTOS is a successor of the simple RTOS (Ref. 1) previously published in GitHub. The successor RTOS implements the mechanisms, which are the prerequisite for an operating system kernel that is intended for use in the software for a safe system, according to the relevant safety standards, like ISO 26262.

2. Abbreviations

Abbreviation	Meaning
ADC	Analog-digital converter
ВСС	Basic conformance class
CPU	Central processing unit
GUI	Graphical user interface
LCD	Liquid crystal display
LED	Light-emitting diode
I/O	Input/output
ISO	International Organization for Standardization
ISR	Interrupt service routine
MCU	Microcontroller unit
MMU	Memory management unit
MPU	Memory protection unit
OS	Operating system (kernel plus I/O drivers)
OSEK	Offene Systeme und deren Schnittstellen für die Elektronik im Kraftfahrzeug
PCP	Priority ceiling protocol
RAM	Random access memory
ROM	Read only memory
RTOS	Real time operating system
SD	Secure Digital
SDA	Small data area
SPR	Special purpose register
VDX	Vehicle Distributed Executive



Abbreviation	Meaning
WET	Worst (case) execution time

3. References

	Document	Description
Ref. 1	https://github.com/	Simple RTOS
	PeterVranken/TRK-USB-	
	MPC5643L/tree/master/	
	LSM/RTOS	

4. Introduction

safe-RTOS is a successor of the simple RTOS previously published in GitHub. The scheduler implements rate monotonic scheduling, i.e., it implements a strictly hierarchical preemption pattern, which is for example called tasks of "Basic Conformance Class" in the OSEK/VDX-OS standard and which — as a matter of experience and despite of its simplicity — suffices to drive the majority of industrial applications.

By means of compile-time configuration, the kernel can be instantiated on any set of cores. Nonetheless, safe-RTOS is still not a multi-core RTOS. The different kernel instantiations don't have any awareness of one another and there are no core-spawning scheduling strategies. However, a number of core-to-core comunication basics is offered; we have a shared memory concept, which considers the complexity introduced by the cache, mutex objects, spin locks and an interrupt based core-to-core notification mechanism.

To meet the demands of safety-critical software, the concept of processes has been added to the kernel. Software partitions or applications of different criticality levels can be implemented and run in different processes without fearing harmful interferences between them. A process is a set of tasks, which have their own resources and cannot touch the resources of the tasks from another process. These "resources" are basically memory (data objects) and CPU (computation time; here the resource protection has its limits, see deadline monitoring for details). The kernel offers the mechanisms to design I/O drivers in a way that I/O channels or I/O data become protected resources, too.

Memory protection is implemented with the memory protection unit (MPU) of the microcontroller. The MPU contains a number of memory area descriptors, which associate a range of memory addresses (defined by start and end address) with access rights. Mre precise, it are addresses, regardless whether memory, I/O registers or nothing is found at these addresses. Any load and store of the CPU is either permitted by at least one of the descriptors and then executed or it is suppressed and leads to an exception. The access rights can be

2/51 3. References



granted for read and/or write, they depend on the CPU's current execution mode ("problem state", see below) and they can be granted to either all or only a particular process.

The configuration of the memory area descriptors in the MPU, i.e., the assignment of memory areas and/or I/O address space to the processes, is done statically, it is done once at system startup. This has several implications:

- Simple and lean code architecture with zero overhead for memory protection (no swapping of memory area descriptors)
- No indeterministic timing due to hit-miss-interrupts and according corrective actions
- Limitation of number of processes due to the given, fixed number of memory area descriptors in the MPU (four application processes plus one kernel process in the default configuration)
- Simple, barely changeable memory layout for kernel and processes (see below for details)
- Implementation of C code is tightly coupled with linker script. This is a strong disadvantage if the kernel should be integrated into an existing software development project, which will already have its own linker script. The essential requirements and implementation elements from both linker scripts need to be identified, coordinated and merged

The protection of the other resource, CPU ownership, is mainly done by time monitoring of the tasks. If a task doesn't terminate timely then it causes an exception. The kernel supports deadline monitoring; a task (may) have a termination date and if it hasn't terminated at that time then it is aborted by exception. This concept ensures that a task either meets its deadline (i.e., has produced its results timely) or the timing problem has been recorded and is reported, typically to some supervisory task.

Note, deadline monitoring always punishes the failing task, although it is not necessarily the causing task. A task may fail to meet its deadline because it has been overly blocked by other tasks of higher priority - if these do not exceed their deadline then only the poor task of lower priority is punished. This may be not fair but it is to the point as the system design fails to meet the timing requirements for the punished task.

A second, simpler yet often advantageous mechanism is offered for time protection. The situation is recorded and reported as an "activation loss" error when an event is triggered but not all tasks associated with the event have terminated yet after the preceding trigger of the event. For the most typical use case of timer events and regular tasks this would have the meaning of a task overrun.

The kernel offers the priority ceiling protocol (PCP) to the tasks for implementing mutual exclusion. A minor modification of this common technique is a measure to protect the scheduling of the CPU against abuse or software faults. The PCP is limited to tasks of a certain, configurable maximum priority. PCP cannot hinder application tasks to execute, which have a higher priority and it is therefore possible to implement a trusted supervisory task, which can



detect forbidden and potentially unsafe blocking states caused by failing or malicious functional tasks.

The outlined protection mechanisms were useless if application code could circumvent them - be it by intention or because of uncontrolled execution of arbitrary code fragments after a failure in the task. A task could for example try changing a memory area descriptor in the MPU prior to accessing otherwise forbidden memory or it could try suspending all interrupt processing to get exclusive ownership of the CPU.

All of this is hindered by the two "problem states" of the CPU. It knows the user and the supervisor mode. The CPU starts up in supervisor mode. In this mode all instructions are enabled. The startup code configures the MPU and ensures that the register set of the MPU belongs to a memory area, which is accessible only for supervisor mode. The kernel switches to user mode when an application task is started. Instructions, which would change back to supervisor mode are not available in user mode. The application task code cannot change the MPU configuration in its problem state (MPU hinders access in user mode) and it cannot enter the supervisor mode to do it then.

More general, what has been outlined specifically for the MPU holds for all the I/O registers and many of the special purpose registers (SPR) of the CPU. All of these can be accessed in supervisor mode only. Consequently, a user task cannot access or re-configure any I/O device or protected SPR.

All of the described mechanisms together allow the design of a "safe software" on top of this RTOS. (You can find a definition of a safe software in our context in Section 6.)

5. The RTOS

5.1. Overview Functionality

The features of safe-RTOS:

- Configurable to run on any core
- · Preemptive, priority controlled scheduling
- Five pre-configured processes (including kernel) with disjunct memory address spaces and hierarchic privileges
- Tasks belong to processes and share the process owned memories
- Globally shared memory for communication purpose may be used
- Hardware memory protection to ensure integrity of process owned memories
- Secured priority ceiling protocol for communication purpose

4/51 5. The RTOS



- Inter-process function calls for communication purpose
- · Deadline monitoring and activation loss counters for avoidance of blocking tasks
- Exception handling to catch failures like use of privileged, illegal or misaligned instructions or forbidden access to memory or I/O
- Diagnostic API to gather information about failing processes and the possibility to halt critical processes
- I/O driver model for safe implementation of a complete operating system

The proposed RTOS is little exciting with respect to its functionality. The scheduler implements the functionality of what is called the "Basic Conformance Class 1" (BCC1) of the OSEK/VDX-OS standard and of its BCC2 with the exception of activation queuing.

The scheduler offers an API to create events that can activate tasks. An event is either a regular timer event, triggered by the RTOS system clock, or a software triggered event. The latter can be triggered either from user code (if it has sufficient privileges) or from ISRs belonging to the operating system.

The RTOS offers a pre-configured set of four user processes. The limitation to four is a hardware constraint and for sake of simplicity no virtualizing by software has been shaped. The operating system forms a fifth process. The operating system startup code will register the needed tasks. The registration assigns them to one of the processes and associates them with one of the created events.

All scheduling is strictly priority controlled. The triggering of an event makes all associated tasks ready to run. This is called task activation. At any time, the scheduler decides by priority, which of the *ready* tasks becomes the one and only *running* task. This may involve preemption of tasks.

The operating system startup code can install needed interrupt service routines (ISR). This will mostly appear in the initialization of the added I/O drivers.

For mutual exclusion of tasks, if shared data is involved, a lock API is offered that implements the priority ceiling protocol (PCP). It is secured so that supervisory tasks cannot be accidentally or purposely blocked.

There are two slightly differing mechanisms to suspend and resume interrupts but they are not available to application code, only the operating system may use them (mainly for I/O driver implementation).

The use of the RTOS is further supported by some diagnostic functions. They offer stack usage information, information about caught exceptions and averaged CPU load information. The diagnostics come along with an API to halt the execution of a (failing) process. Permission to use this API is granted only to what is considered the safety process or task.



5.2. Scheduler and preemption

The RTOS implements only tasks of basic conformance class (BCC). A task is a finite code sequence, which is entirely executed, when it comes to a task activation. BCC means that a task will have to complete before any other task of same or lower priority can execute. Preemption occurs only when a task is activated, which has a priority higher than the currently running task. The preempting task is started and needs to complete before the preempted task can continue execution. The preemption pattern of tasks is strictly hierarchical, similar to the execution of nested functions in a C program, see figure Figure 1.^[1]

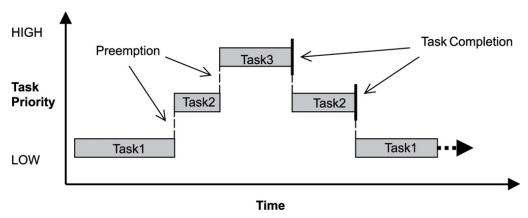


Figure 1. Hierarchical task scheduling

The hierarchical preemption pattern of tasks enables stack re-usage. Basically, all tasks could share a single stack. However, the process concept requires a separate stack per process, be it kernel or user process. Moreover, all cores have an independent instance of the kernel. Hence, given the number of user processes on the three cores be n1, n2 and n3 then we would have a total of 3+n1+n2+n3 stacks.

Although BCC means a significant reduction of complexity and functionality in comparison to a full featured real time kernel, the embedded practice mostly doesn't require more than this. The typical data flow paradigm of an industrial embbeded application is to have event triggered tasks, which serve the asynchronous I/O channels and strictly cyclic application tasks, which process the data and implement the control strategies. The communication between ISRs and tasks is done either by queues or by overwriting (last recent value supersedes earlier ones), that depents. It's a simple model, which has the advantage of being well understood, transparent and by nature free of dead locks. The latency times are higher than for consequently designed event controlled systems but they are predictable and have easy to determine upper bounds. Last but not least, software design can determine the upper bounds by choosing appropriate cycle times.

5.3. Events

A task activation always happens by means of an event. The event is an RTOS object, which is created in the initialization code sequence. A set of tasks can be associated with an event. We



have the relation 1:n for events to tasks. Any task is associated with exactly one event. An event has a method to trigger it. When the event is triggered then all associated tasks are triggered (and the scheduler will execute them in the order of priority).

An event can be configured such that it is implicitly triggered by the RTOS clock. This functionality is limited to an arbitrary time for the first trigger and an infinite, regular sequence of further triggers. Evidently, this aims at "normal", regular tasks. However, even these events still have the method for explicit trigger by software so that more complex activation patterns could be implemented.

Triggering an event is a privileged operation. By configuration it is decided, which process may use the method for which event. For the majority of events, this will only be the kernel process but there are reasonable use cases for user tasks triggering specific events, too, and — as long as privileges are granted with care — without breaking the safety concept.

The method to trigger an event can be used from ISRs and from tasks. The former can be used to implement deferred interrupt handling.

5.4. The operating system clock

The RTOS is clocked by a timer interrupt. The clock rate is a compile time configuration item and can be adjusted in units of a Millisecond. Most sample applications of safe-RTOS use a 1 ms or a 10 ms clock tick. This configured clock tick is the resolution of controlling the period of cyclic tasks.

The clock is generated by one of the MCU's PID devices. If safe-RTOS is configured to run on different cores then each core uses its dedicated PID timer. The configured timers are not available to the application. If the application requires to use the other PID timers then the initialization needs to be done with care: For the PIT devices, there are common settings, which affect all PID timers. You need to align your initialization code with the RTOS kernel initialization, see <code>rtos_osInitKernel()</code>.

5.5. Priority of tasks and interrupts

The priority scheme of tasks is disjunct with that of interrupts. The priority range of interrupts is 1..15. The priority range of tasks is 1..UINT_MAX. Regardless of the chosen numbers, any interrupt has a priority higher than any task. An application task cannot shape a critical section with interrupts but an OS task can do. (Which is one of the many reasons, why an OS, which is built on this RTOS, must not make OS tasks available to untrusted application code.)

Preemption takes place only by higher priority; once a task is running it'll not be preempted by any other of same or lower priority. If two or more tasks of same priority become ready at the same time then they are executed sequentially, i.e., one after another. This introduces a kind of sub-ordinated priority, which determines the order of execution in this situation. This sub-



ordinated priority is defined at RTOS configuration time; in the given situation, the tasks would be executed primarily in order of creation of the events, they are associated with, and secondarily in order of registration, if they are associated with one and the same event; see $rtos_osCreateEvent()$, $rtos_osRegisterOSTask()$ and $rtos_osRegisterUserTask()$ for details.

What does "become ready at the same time" mean? This can be as easy as two cyclic tasks that become due at the same nominal operating system clock tick. For event tasks, which are triggered from one or more ISRs it's less evident. One ISR can trigger several events or several nesting, preempting ISRs can each trigger one or more events. Due to the generally higher priority of interrupts in comparison to tasks, all of the tasks, which are associated with any of the triggered events, become effectively due at the (logically) same time and compete for the CPU immediately after return from the last of the nested interrupts. In this situation, the subordinated priority counts for those of same priority.



A most important aspect of tasks of same priority—it doesn't matter whether they are associated with the same event or with different events of same priority—is that there are by principle no race condition between them. They can easily share data objects without any concern about using keyword *volatile* or the need to implement critical section code.

5.6. Exception handling

The RTOS catches all possible MCU exceptions. Normal, failure free operation of OS and application tasks will not cause exceptions; the RTOS makes barely use of exceptions as principle of operation - like it would for example when using the MPU exception for reloading some memory descriptors. Therefore, an exception always means reporting an error.

Any exception handler will first check, which process the exception causing task belongs to. The RTOS maintains process related error counters and the according counter is incremented. The exception handler will then abort the failing task, i.e., it does do basically the same as the RTOS API $rtos_terminateTask()$ does, which voluntarily ends a task. Code execution does not return to the failing code location. If a regular, time triggered task fails, then it'll be triggered again at next due time, regardless of the number of counted failures.

This is virtually all, the RTOS does. In particular, there's no error callback or code to investigate the cause of the problem and to maybe repair it. Similarly, there's no decision logic which would limit the number of failures and to stop a process in case.

Instead, our concept is to have a supervisory task—either as an element of the implemented operating system or in the application code—, which uses the RTOS' APIs to observe the number of reported failures and to take the decisions for halting bad processes, switching off, shutting down or what else seems appropriate.

Our working assumption is that the OS code is proven to have no faults, so there's no need to



handle an exception in this code. (The assumption of fault free code is often referred to as "trusted code".) However, nobody is perfect and even kernel or an I/O driver may contain undiscovered errors. There's no way to handle an exception caused by the OS code. In this case, the exception handler enters an infinite loop to effectively halt the software execution. It's considered a matter of appropriate configuration of watchdogs and of appropriate hardware design to ensure that this will keep the system, which the software is made for, in a safe state.

5.7. Deadline monitoring

User tasks, regardless if triggered by events or run by services $rtos_osRunTask()$ or $rtos_runTask()$, can have a bounded timespan for completion. The ultimate end time is called the deadline of the task and the supervision is called deadline monitoring.

The timespan is the world time, not an execution time budget. At the instance of starting the task its end time is defined. To the supervision, it doesn't matter whether the task really executes or if other tasks of higher priority get the CPU most of the time. It is considered a failure of the task if it doesn't terminate prior to its deadline. This causes an exception, which is counted in the process. The deadline exception has an own counter and so it can be distinguished from all other exceptions; this is essential because it'll mostly be necessary to judge differently on this exception in comparison to others (see below).

The way it works is simple and efficient. The RTOS has a simple BCC kernel, that doesn't allow a task to suspend voluntarily. It is ready from triggering till termination. This leads to a strictly hierarchical preemption scheme (see Figure 1) and, as a consequence, to a single, ordinary stack for the kernel process. Each started task is represented by a stack frame on this stack. When starting the task, the kernel creates the stack frame and stores the deadline as an element. If the task is preempted then a new stack frame is put on the stack (for an ISR or a task of higher priority). During the execution of the preempting context the kernel doesn't care, whether the deadline of the preempted task is exceeded or not—the task can't do any harm, it's not executing and the kernel could anyway not remove it from somewhere in the middle of the stack. Only on return from the preempting context, when normally all registers of the preempted context would be restored from the stack, the deadline condition is checked. This requires only a few instructions; it's an arithmetic comparison of the stored end time with the CPU's time base register. The decision is clear - either we complete the return to the preempted context or we raise an exception, which kills it. The implementation can be that easy because the check is done when and only when we return to the stack frame of the preempted, deadline-monitored task: Now the end time is easily accessible and killing the task in case is simply doable, because it's on top of the stack.

The deadline monitoring aims only at protecting a supervisor user task of high priority against starvation. Without it, a notification callback from an ISR could spin in an infinite (or very long lasting) loop and the supervisory task would not be scheduled until it returns.



Deadline monitoring is not meant a mechanism to control some task timing in a functional sense. Any application design, which considers regular or even occasional intervention of the mechanism as normal, will be bad design! Therefore, a supervisory task should not generally tolerate deadline exceedance exceptions in the supervised processes. It may need to tolerate very rare occurrences due to exceptional high system load and an accordingly high jitter in the task timing.

Understanding these aims of the mechanism it becomes clear, why its weaknesses are not painful. The check is only done on return from a preempting context to the monitored task. This limits the time resolution. The RTOS itself has a 1 ms interrupt, so the only general guarantee is an according time resolution. The idea to limit, e.g., a notification callback to 50 μ s will not work. If you think 50 μ s should be enough under all circumstances then you should indeed specify this time span. But regardless, the callback may run up to 1 ms before it is surely killed.

You can of course count on a better time resolution if you have an interrupt of higher frequency but if it pays off to install such an interrupt only for the particular purpose of increasing the time resolution will depend.

Despite of the enormous possible relative timing error we see in our example it doesn't matter much with respect to the safety supervisory task. When it becomes due the next time this will surely be connected to an RTOS timer tick and this tick would mean the killing event for the bad callback. No blocking for the safety task.

The worst thing, which can happen to the safety supervisory task: Its n-th activation may be preempted by an ISR which invokes a bad, non returning callback. The callback is killed at latest at the next RTOS timer tick. If this tick is the same one at which the safety task becomes due the (n+1)st time then the task would suffer from an activation loss; its n-th activation would be resumed rather than starting the (n+1)st. If this endangers the safety concept then the effect can be avoided by configuring the RTOS timer tick frequency higher than the activation frequency needed for the safety supervisory task.

Less obvious is a priority issue. An ISR, which runs a potentially failing callback, can have an interrupt priority higher than the RTOS timer and any other regular interrupt. So that there's no upper boundary for the maximum execution time of the callback. This consideration leads to the safety requirement for the aimed operating system that any ISRs, which run at a priority higher than the RTOS timer interrupt must not make use of the service $rtos_osRunTask()$. The requirement is easy to fulfill as all affected code is in the trusted sphere and most of it are static configuration decisions.

By principle, a deadline exception (as any other, too) can leave the system in an inconsistent (yet not instable) state. The task may have been killed in the middle of a critical section, in the middle of whatever transaction. This may make other tasks fail, too, and lead to more exceptions in the worst case. An important requirement for the safety process is (and actually not only because of this effect) that it must be functional regardless of the consistency of the



data owned by the supervised processes.

5.7.1. Deadline monitoring: To be used or better not?

The design of an operating system building on safe-RTOS can make the consideration, whether or not deadline monitoring needs to be applied at all. If some design rules are obyed then the observation of the event activation loss counters from the safety supervisory task will be sufficient in most cases (see service $rtos_getNoActivationLoss()$).

Using deadline monitoring is absolutely unavoidable if ISRs make use of callbacks into user processes (using service $rtos_osRunTask()$). However, in many situations this construct can be replaced by deferred interrupt handling, i.e., by triggering an OS task that takes over the work from the ISR. The triggered task would have a priority below the safety task and if it is blocked by a non-returning, bad callback into the user process then the safety task would immediately see the activation losses for the event triggered by the ISR and likely some other (timer) events.

Typically, the latency times resulting from observation of activation losses will be a bit higher than when applying deadline monitoring. This may have an impact on the design decisions.

5.8. Distribution and integration

The RTOS itself is not a runnable piece of software. It requires some application code. The RTOS is distributed as a set of source files with makefile and linker scripts and a few sample applications. The makefile can take the name of an arbitrary file folder as root folder of an application. This is the way a particular sample application is chosen. The specified folder is recursively scanned for C/C++ and assembler source files, which are compiled together with the RTOS source files and the compilation ends up with a flashable binary file, which contains the entire runnable software.

If you consider using safe-RTOS for your purposes, then it's likely that you already have your own development environment in place. If you want to integrate the RTOS into this environment then it's unfortunately more complicated then just copying our RTOS sources into your project and compiling them there—the RTOS implementation depends on several definitions made and decisions taken in the linker scripts and these needed to be adopted by your compilation process. Please, refer to Section 9 for details about the linker script.

5.8.1. Single image versus three images

The NXP code samples for the DEVKIT-MPC5748G produce three separate memory images, one per core. Our makefile produces just one for all cores. There are several implications:

- Debugger configuration: Three instances are launched. In our project configuration, only the first one will load the image. The other two will just load the symbols
- In our project we have a single run of the linker; the NXP concept requires the run of the



linker for each core. Therefore, we don't need preallocation of memory space to cores as done in the NXP samples. Linkage will fail only if the overall consumption of memory exceeds the physical limits

- Code is generally shared between the cores. No need to link identical function code repeatedly into the distinct images of the cores. The C library code and our RTOS are found once in ROM and executed by all cores
- We have only one symbol and address space for code and data on all cores. On source code level, core-to-core communication barely makes a difference to task-to-task communication on one core: The code running on different cores can simply use the same variable names to access shared recourses and they will really address to the same object at the same address
- The NXP approach requires a kind of manual linkage for core-to-core communication. Shared definitions in the three linker scripts and/or related #define's in the source code are needed to ensure that the basically independent compile-and-link runs all allocate shared data at the same absolute address. This reduces the flexibility of interface design and implementation and it is error prone
- Our approach has a single, big disadvantage: By principle, the three cores share the SDA and SDA2 address areas. This limits the amount of small data address space to a total of 64 kByte each, i.e., the small data of all three cores together need to fit into the 64 kByte. The NXP approach with independent runs of the linker provides the 64 kByte separately to each of the cores.

6. The safety concept

This sections aims at giving an overview on the safety concept.

A typical nowadays embedded project consists of a lot of code coming from various sources. There may be an Open Source Ethernet stack, an Open Source Web server plus self-made Web services, there may be an Open Source driver software for a high resolution LCD, a framework for GUIs plus a self-designed GUI, there will be the self-made system control software, possibly a file system for data logging on an SD storage, the C libraries are used, and so on. All in all many hundred thousand lines of code.

If the system can reach a state, which is potentially harmful to people or hardware, then it'll typically need some supervisory software, too, which has the only aim of avoiding such a state. Most typical, the supervisory software can be kept very lean. Depending on what kind of system we talk, it may, e.g., be sufficient to read a temperature sensor, check the temperature against a boundary and to control the coil of the main relay, which powers the system. If the temperature exceeds a limit or if the temperature reading is somehow implausible then the relay is switched off and the entire system unpowered. That's all. A few hundred lines of code can already suffice for such a task.

12/51 6. The safety concept



All the rest of the software is not safety relevant. A fault in this majority of code may lead to wrong system behavior, customer dissatisfaction, loss of money, frustration, etc. but will not endanger the safety of the system or the people using it.

If we rate the safety goal higher than the rest then we have a significant gain in terms of development effort if we can ensure that the few hundred lines of supervisory code will surely work always well and even despite of potential failures of the rest of the code.

Using a safety-aware RTOS can be one means to ensure the "working always well" of the supervisory code. The supervisory code is put into a process of higher privileges and the hundred thousands of lines of other code are placed into a separate process with lower privileges. By principle, the code in one process can not harm or damage the resources of the other process (data and access to CPU or computation time). Nor can a process of low privileges get access to I/O deemed safety-critical. (Only) RTOS and supervisory code need to be carefully reviewed, tested, validated to guarantee the "working always well". Using a "normal" RTOS, where a fault in any part of the code can easily crash the entire software runtime system, the effort for reviews, tests and validation needed to be extended to all of the many hundred thousand lines of code. The economic difference and the much higher risk of not discovering a fault are evident.

These basic considerations result in a single top-level safety requirement for our safe-RTOS:

• If the implementation of a task, which is meant the supervisory or safety task, is itself free of faults then the RTOS shall guarantee that this task is correctly and timely executed regardless of whatever imaginable failures are made by any other processes, be it on the same or another core.

This requirement serves at the same time as the definition of the term "safe", when used in the context of this RTOS. safe-RTOS promises no more than this requirement says. As a consequence, a software made with this RTOS is not necessarily safe and even if it is then the system using that software is still not necessarily safe. Here, we just deal with the tiny contribution an operating system kernel can make to a safe system.

All other technical safety requirements are derived from this one.

7. I/O driver model

The RTOS implements only the kernel of an operating system. It doesn't do I/O configuration and processing beyond what's needed for the kernel operation. The user of the RTOS will most likely develop a software layer around the kernel, which configures and operates the MCU's I/O devices.

The implementation of servicing a particular I/O channel is usually called an I/O driver and the union of kernel and all required or supported I/O drivers can be considered the operating



system.

An I/O driver can't simply be programmed just like that. It has to interact with the kernel - a safety concept for the entire software would otherwise be impossible. Usually, the I/O driver interfaces between hardware and application task. Therefore it becomes a bridge between supervisor and user mode. The programming of the MCU's I/O registers and servicing the I/O devices' interrupts requires supervisor mode but the API for the application tasks to fetch or set the conveyed I/O data needs to be executable in user mode.

7.1. Memory mapped I/O driver

The simplest way to implement an I/O driver is the memory mapped driver. All conveyed information is placed in memory, which can be accessed from the application tasks and from the OS.

The API is a set of getters and/or setters, which simply read from or write to this memory. The I/O driver registers a function at the OS to process the data. This function can either be a regular timer based OS task or an interrupt service routine (ISR). This function is executed in supervisor mode and can do both, access the API memory and the I/O registers.

Such a driver has one major drawback. There's no immediate data flow between data source and application task. A typical example would be an analog input driver, which regularly samples the voltage at the input pins, e.g., once a Millisecond. The conversion-complete interrupt would read the ADC result registers and place the samples into the API memory. The application tasks can read that memory at any time. They surely get the last recently acquired samples but don't really know the age of the samples - which can be anything between zero and one Millisecond in our example. This behavior has a significant impact on worst execution time (WET) considerations.

A related issue can be the consistency of the data set. The ADC may provide several input channels, which are sampled coincidentally. The result-fetching ISR has a priority above those from the application tasks. Therefore, the ISR can preempt the application task while it is busy with reading all the channel results. As an effect, the application task will see some samples from before and some from after the preemption. The set of samples is inconsistent; the age of the samples differs by one cycle.

If consistency of a data set matters for an interrupt driven I/O driver then it can either apply a double-buffering strategy or it delegate the API update to an OS task of sufficiently high priority. Delegation means the ISR just triggers the event the task is associated with. The task reads the I/O registers and writes the results into the API buffers. This design is often referred to as "deferred interrupt handling". The difference is that the API now can implement critical section code—this is possible between different tasks, between OS tasks and ISRs but not between application tasks and ISRs.



Memory mapped I/O drivers are the best choice whenever the sketched drawbacks don't matter — and in particular for input channels: The application task only reads the API memory and reading memory is not restricted for any of the processes. The memory can be owned by the driver implementation and the getters read the results without fearing an MPU exception.

Additional considerations are required for output channels. It's still quite easy if only one process is granted access to the API. Now, the API memory is owned by this process. It can write to this memory through the setters and the driver code can read and modify it (race conditions disregarded here).

If however two or more processes want to use the I/O channel then a remaining simple way of doing is putting the API memory into the shared memory, which can be written by all the processes. Such an architecture needs attention as this opens the door for race conditions between processes and manipulation or violation of data that has been written by one process by another process. Which can mean a violation of the safety concept of the aimed software.

An alternative can be a driver architecture with two or more API memory buffers, one for each process and owned by that process. Note, this concept requires some arbitration if more than one process wants to control an output channel in this way.

Memory mapped drivers allow the implementation of privileged output channels in the most simple way. For example, a safety critical actuator must be available exclusively to the safety process. Just let the API memory be owned by that process and any other process trying to access the output will be punished by an MPU exception but not be able to operate the actuator.

7.2. Callbacks

Particularly for input channels, the main disadvantage of memory mapped drivers, the disrupted data flow, can be eliminated with an I/O driver using callbacks.

Two possibilities exist. Firstly, the driver may offer to serve a user defined callback. The application task would specify a function to be called from the I/O driver if some data becomes available. The I/O driver will likely be implemented as an ISR, which is invoked by hardware, when the I/O device acquired the data. Inside the ISR, the implementation will make use of the RTOS API to run a user task, namely $rtos_osRunTask()$. The task function is of course the agreed callback.

The callback is executed in the context of the aimed application process. If it would fail (e.g., forbidden memory access causes an MPU exception) then it would be aborted and control went immediately back to the task starting ISR.

A typical element of this architecture would be the use of deadline monitoring. The callback is a sub-routine of the ISR and its execution time would prolongate the execution time of the ISR -



which is constrained in typical scenarios. A deadline for the (unknown, untrusted) user callback code will limit the possible damage by bad callback behavior.

The callback is executed at same priority as the ISR, i.e., a priority above all normal tasks and particularly above the safety task. This involves a safety risk: Deadline monitoring is not generally available to tasks with an interrupt priority greater or equal to the kernel priority (a configurable compile-time constant) and running untrusted callback code without an execution time constraint would break the safety concept of the aimed software; an infinite loop would already suffice to hinder the supervisory task from executing. [2]

The second way to implement a callback is using a dedicated event. The callback is implemented as a task, which is associated with the event. By triggering the event, the ISR activates the task. Independently, the scheduler of the RTOS decides when to make the task running. The task is user code owned, belongs to the same, supervised process and can implement the notification as suitable in this context.

There are significant differences between both solutions:

- Using an event means less time uncertainty for the ISR implementation. The event has a lower priority than the ISR, so the ISR is surely not preempted and triggering the event will be done in no time. The ISR can return soon
- Using the event means to have better control on priorities. The callback has a priority, which can be balanced with the other tasks. The other side of the coin: This can break the intended tight coupling in time, which is normally expected from interruppt based I/O drivers

Please refer to the sample I/O driver ledAndButton for additional details. This driver uses the first method to implement an immediate notification of a user process when a button on the evaluation board is pressed or released.

7.3. The system call

The next way to design an I/O driver is the system call. The system call is a function, which is executed in supervisor mode. In our RTOS, the supervisor mode is not constrained in accessing I/O registers and memory locations. Therefore, a system call can be applied to do any kind of I/O.

16/51 7.3. The system call





The system call function is executed in supervisor mode and doesn't have exception handling or failure reporting and handling. By principle, the implementation belongs into the sphere of proven, trusted code. A user or application supplied function must never be accepted or installed as a system call or be called as a sub-routine of a system call, only proven driver code can serve as system call. Any exception from this rule will potentially break the safety concept.

From the perspective of the calling application code, a system call behaves like an ordinary function call. It has a number of arguments and it returns a result. Many operating system services can be modelled in this way.

The kernel offers three kinds of system call functions. They are called conformance classes and the choice of the right class is a trade-off between functionality and ease of implementation on the one hand and overhead or execution time on the other hand.

7.3.1. Conformance classes

Basic handler

The leanest and fastest system call is the basic handler:

- The basic system call function must be implemented in assembler. The RTOS doesn't prepare the CPU context as required for a C compiler made function
- The handler is invoked with interrupt handling being suspended. It is non-preemptable and must not resume interrupt processing
- The handler must neither use the stack and nor the SDA pointers r2 and r13
- The handler must comply with the usual EABI requirements for volatile and non-volatile registers
- The basic system call offers a maximum of flexibility and control; the handler is not restricted to be just an ordinary synchronous function call with return. For example, the "throw exception" system call, i.e., $rtos_terminateTask()$, is implemented this way, it returns to the operating system but not from the system call

The programmer of a basic system call has the full responsibility for every detail. The only things the RTOS code does are the switch to supervisor mode and the table lookup operation to find the entry into the handler. The implementation of the handler takes care for everything else. For example, if it needs a stack then it is responsible for getting one — which may be the kernel stack or any memory else, which is known to be safe. If it wants to make use of the short addressing modes then it would have to validate or repair the SDA pointers first.

However, as a rule of thumb: If your handler really intends to do these kind of things then you



are likely using the wrong handler conformance class. Have a look at the others, which provide such kind of services to you.

The true intention of the basic handler is writing system calls, which consist of a few machine instructions only, which are then executed without the significant overhead of the other conformance classes.

Examples are simple I/O drivers: Getting or setting a digital port is a matter of loading an address plus a load or store - all in all two or three instructions. Here, the basic handler perfectly suits.

Simple handler

The "simple handler" will mostly suit for low-computational operations. It executes slower than a basic handler but can be implemented as a C function:

- · Stack is available
- The handler is a synchronous function call, i.e., it will return a result to the calling code
- The handler receives a variable number of function arguments. Note, only register based function arguments are supported, which limits the function argument data to seven 32 Bit values or accordingly less 64 Bit values. No error is reported if a system call implementation would have more arguments; undefined, bad system call behavior would result
- The handler receives the ID of the calling process. The implementation of a process based concept of privileges is easy and straightforward
- The handler may throw an exception, typically in case of bad function arguments. An error would be reported for the process and the calling task would be aborted
- SDA pointers are validated, short addressing modes can be used
- C code can implement the handler and using C is recommended
- The handler is invoked with interrupt handling being suspended. It is non-preemptable and must not resume interrupt processing. No functions must be called, neither in the handler function itself and nor in any of its sub-functions, which can potentially enable the External Interrupt processing. This includes but is not limited to:
 - rtos_osResumeAllInterrupts()
 - rtos_osLeaveCriticalSection()
 - rtos_osResumeAllTasksByPriority()
 - rtos_osRunTask()
 - rtos_osTriggerEvent()

The simple handler should be chosen for quickly executing services, because it implicitly forms



a critical section. Note, this is not a technical must; the execution time has a behavioral impact but doesn't harm the system stability and not even the safety concept if there's at least an acceptable upper bounds.

The handler uses the kernel stack, which cannot be protected by the MPU like the user process stacks. For a safe software design, it's unavoidable that the static stack calculation for the handler implementation is considered for the kernel stack usage estimation.

Full handler

Operations, which take a significant amount of computation time (in relation to the intended interrupt and task timing of the system), should be implemented as a "full handler". It executes slower than a simple handler. It has all the advantages of the simple handler plus some additional:

- The full handler is preemptable. It is entered with External Interrupt processing enabled and race conditions appear with other contexts
- All OS services may be used in the implementation, including critical section operations and running a user task or triggering an event to activate the associated tasks

The handler uses the kernel stack, which cannot be protected by the MPU like the user process stacks. For a safe software design, it's unavoidable that the static stack calculation for the handler implementation is considered for the worst case kernel stack usage estimation.

TODO: The user requires a proven and complete table of all services, telling in which mode/handler class/ISR/OS/application task it can be used.

7.3.2. Safety concept

The implementation of a system call handler—regardless which conformance class—can easily break the safety concept of the software built on top of this RTOS. It is executed in supervisor mode and the error catching and reporting mechanisms for user processes and tasks are not available. This has several implications:

- The implementation of a system call generally belongs into the sphere of trusted code
- If the implementation of the system call causes an exception then the software execution will be halted on the core. It depends on the chosen watchdog concept what this means to the safety concept
- The implementation must not trust any piece of information got from the calling user code, which could cause an error or exception:
 - It's common practice in C to pass a pointer to a function in order to pass input data by reference. This will potentially cause an MMU or MPU exception if the address is outside the used portions of RAM or ROM. Moreover, reading I/O registers can have



unwanted side effects, which harmfully impact an I/O driver

- It's common practice in C to pass a pointer to a function in order to let it place the function result at the addressed memory location. This will potentially harm the memories of another process or even the kernel
- $_{\circ}$ Array indexes can be out of bounds and can then lead to the same problems as discussed for pointers
- Referenced I/O devices or channels could be connected to safety critical actuators, which must not be controllable by the calling user process
- The stack consumption of the implementation needs to be considered for the safe definition of the kernel stack
 - For full handlers, preemption of user tasks has to be taken into account: It's theoretically possible that all preemption levels make use of the same system call, each burdening the stack with the static consumption computed for the system call

The RTOS offers convenience functions to validate user provided pointers. Although using pointers as arguments of system calls is not recommended at all, it can be safely done. Please, see *rtos_checkUserCodeReadPtr()* and *rtos_checkUserCodeWritePtr()*.

A single system call that blindly trusts a user provided pointer or array index for either reading or writing breaks the safety concept. It can crash the entire software system.



Note: For such a crash, we don't even need to assume malicious software, which purposely abuses the system call; a simple failure in a user process—totally unrelated to our system call—can lead to a straying task, which hits a system call instruction and enters the system call with arbitrary register contents (i.e., function arguments) and it would crash the system.

Note, we didn't mention ordinary programming errors here. It's a general working assumption that all operating system code is quality proven.

7.3.3. Maintaining the system call table

System call functions are statically defined. They are registered at compilation time. They are all held in an RTOS owned table of such and the calling code refers to a particular function by index. All the RTOS has to do to avoid running untrusted code as a system call in supervisor mode is to do a bounds check of the demanded index.

Organizing all system calls in one global, RTOS owned table requires some attention drawn to the source code structure. System calls can be offered by different independent I/O drivers and we want the implementation of such a driver be self-contained. Instead of making all drivers dependent on a shared file (which defines the table of system calls) we propose a code and

20/51 7.3. The system call



header file structure, which avoids unwanted code dependencies. A driver implementation, which offers system calls, will expose them in an additional, dedicated header file, from which the RTOS source code then can compile the table. The file is named <code>mnm_driverName_defSysCalls.h</code>. This involves mechanisms to safely avoid both, conflicting, doubly defined table entries and undefined, empty table entries.

Each core has its own system call table. This has been decided to allow having different implementations of one and the same service on different cores. An I/O driver could, e.g., be implemented to mainly run on the first core. Here, the system call implementation will really service the I/O device. On the other cores, the same system call would rather implement some core-to-core communication to just get the data, which had already been acquired on the first core.



After successful compilation of module *rtos_systemCall.c* and if you specify SAVE_TMP=1 on the command line of *make* then you can find the actual, complete system call table in file *bin/(..)/obj/rtos_systemCall.i*. Open the file in a text editor and search for const rtos_systemCallDesc_t rtos_systemCallDescAry. You will have a match per core.

The table of system calls has a fixed, maximum number of entries. The table size is a compile time constant, see macro *RTOS_NO_SYSTEM_CALLS* in file *rtos_systemCall.h*. Note, more than one code location needs maintenance if the constant is changed. Follow the hints given in the source code comments.

If you design your own I/O drivers it's good practice to reserve index ranges for each driver, e.g., start the indexes of a driver at multiples of five or ten. Extensions of the drivers become possible without index clashes (which are properly reported during the build) and without the need for reworking other drivers to sort them out.

The system call indexes don't need to form a consecutive sequence of numbers. Not using certain indexes does no more harm than wasting 8 Byte of ROM for each unused entry. There's no runtime penalty and, particularly, no danger of breaking the safety concept due to undefined entries.

System calls of safe-RTOS

The RTOS implementation itself makes use of a few system calls. The index range 0 .. 19 is reserved for extensions of the kernel and must therefore not be used by user added code.

Index	Function	Class	Description
0	rtos_scBscHdlr_terminateUserTask	Basic	(Premature) task abortion by user code
1	rtos_scBscHdlr_ suspendAllTasksByPriority	Basic	PCP: Get resource or enter critical section



Index	Function	Class	Description
2	rtos_scBscHdlr_ resumeAllTasksByPriority	Basic	PCP: Release resource or leave critical section
3	rtos_scFlHdlr_triggerEvent	Full	Event trigger by software
4	rtos_scFlHdlr_runTask	Full	Run a user task or inter-process function call
5	rtos_scSmplHdlr_suspendProcess	Simple	Suspend a process forever
6	assert_scBscHdlr_assert_func	Basic	Implementation of C assert macro
7-19	rtos_scBscHdlr_sysCallUndefined	Basic	Index space reserved for RTOS extensions

Table 1. System call indexes in use by safe-RTOS

System calls of sample I/O drivers

A few more system call indexes are used by the sample I/O drivers, LED and button driver, PWM driver, serial interface driver and system time service. If the drivers are not used by the client code then these indexes can be reused. Moreover, it is straightforward to put the drivers onto another index of your choice. Just have a look at the header files of the drivers.

Index	Function	Class	Description
20	sio_scFlHdlr_writeSerial	Full	Serial I/O driver: Write text string into serial port
25	lbd_scSmplHdlr_setLED	Simple	LED driver: Control an LED
26	lbd_scSmplHdlr_getButton	Simple	LED driver: Get button state
30	stm_scBscHdlr_getSystemTime	Basic	System timers: Get current time
35	pwm_scSmplHdlr_setPwmOutFAnd Dc	Simple	PWM driver: Set frequency and duty cycle
36	pwm_scSmplHdlr_getPwmInT	Simple	PWM driver: Get input period time

Table 2. System call indexes in use by sample I/O drivers

7.3.4. Sample code

Please refer to the sample I/O drivers for additional details and consider using these files as starting point for your own system call based I/O driver. The samples cover all conformances classes from the I/O driver model.

22/51 7.3. The system call



8. The API of safe-RTOS

The RTOS offers an API for using it. The available functions are outlined here; more detailed information is found as source code comments in the files in folder code/system/RTOS and particularly in the main header file, code/system/RTOS/rtos.h.

Furthermore, there is the Doxygen API reference at doc/doxygen/html. Unfortunately, it is of limited value; Doxygen doesn't scan the assembly files and a good portion of the required information is missing.

8.1. Naming conventions

The RTOS API distinguishes functions available to application tasks from those, which are intended for the operating system only, which is built on top of the RTOS:

- OS functions are named rtos_os<FctName>
- Application functions are named rtos_<fctName>

OS functions must be used in supervisor mode only, i.e., from ISRs or OS tasks. Application tasks are executed in user mode. If they try calling an OS function then they will be punished by an exception.

For application functions it depends. Some may be safely called by both, application and OS code. (These are mostly very simple memory reading getter functions.) The documentation of a function rtos <fctName> would indicate if it were callable also by OS code.

The rest of the application functions is simply not available to OS code and an attempt to invoke them from an ISR or OS task will halt the software execution. In case of these functions, there will — with a few exceptions — always be a pair of API functions, one for OS and one for user code with nearly same functionality. The function documentation will name the constraints.



As a matter of experience, during software development time the call of an application function (mostly it is the system call service rtos_systemCall) from an OS task is the most typical reason for the software execution being halted in the kernel.

8.2. Table of available services

Here is a table with an overview on all services, which are available to user and OS tasks, interrupt service routines and bare-metal applications:



Service	Callable from	Remarks
rtos_osCreateEvent()	OS	
rtos_osRegisterInitTask()	OS	
rtos_osRegisterUserTask()	OS	
rtos_osRegisterOSTask()	OS	
rtos_osInitINTCInterruptController()	OS	
rtos_osRegisterInterruptHandler()	OS, bare-metal	
rtos_osGrantPermissionRunTask()	OS	
rtos_osGrantPermissionSuspendProcess()	OS	
rtos_osInitKernel()	OS	
rtos_osTriggerEvent()	OS, ISR	
rtos_triggerEvent()	user	inline
rtos_osRunTask()	OS, ISR	inline
rtos_runTask()	user	inline
rtos_terminateTask()	OS	inline
rtos_osSuspendProcess()	OS, ISR	
rtos_suspendProcess()	user	inline
rtos_osSuspendAllInterrupts()	OS, ISR, bare-metal	inline
rtos_osResumeAllInterrupts()	OS, ISR, bare-metal	inline
rtos_osEnterCriticalSection()	OS, ISR, bare-metal	inline
rtos_osLeaveCriticalSection()	OS, ISR, bare-metal	inline
rtos_osSuspendAllTasksByPriority()	OS	
rtos_osResumeAllTasksByPriority()	OS	
rtos_suspendAllTasksByPriority()	user	
rtos_resumeAllTasksByPriority()	user	
rtos_systemCall()	user	
rtos_osSystemCallBadArgument()	OS (system call)	
rtos_checkUserCodeReadPtr()	all	inline
rtos_checkUserCodeWritePtr()	all	
rtos_osGetIdxCore()	OS, ISR, bare-metal	inline
rtos_getIdxCore()	user, OS (deprecated)	



Service	Callable from	Remarks
rtos_getCoreStatusRegister()	user, OS (deprecated)	
rtos_osGetAllInterruptsSuspended()	OS, ISR, bare-metal	inline
rtos_isProcessSuspended()	user, OS, ISR	
rtos_getNoActivationLoss()	user, OS	
rtos_getNoTotalTaskFailure()	user, OS	
rtos_getNoTaskFailure()	user, OS	
rtos_getStackReserve()	user, OS, bare-metal	
gsl_osGetSystemLoad()	OS idle	

Table 3. Overview on kernel services

8.3. System configuration and initialization

8.3.1. Allocated MCU resources

The RTOS implementation makes use of a few MCU devices. It takes care of their initialization and run-time code. Your code must not touch any of the registers of these devices. Additional to these devices there are some allocated registers, which you must not touch, neither. The allocated MCU resources are:

- The IVOR registers
- The software-use SPR
- The process ID register, PID0
- The cache control registers
- The interrupt controller, INTC
- · The memory management unit, MMU
- The memory protection unit, MPU
- A periodic interrupt timer per core running safe-RTOS. Which one is compile-time configuration
- The system timer, STM

8.3.2. Error codes

All of the API functions, which are called at system initialization time to configure the RTOS appropriately for the implemented operating system, return an enumeration value, rtos_errorCode_t, indicating, whether or which problem appeared.



The configuration of the RTOS is generally static, i.e., the sets of events and tasks and the granted privileges will not depend on variable input data and so the success of the RTOS initialization neither won't. Consequently, there's no need for a dynamic, intelligent error handling strategy. The implemented strategy will simply be to start the application software if and only if all RTOS configuration and initialization calls return "no error".

The added value of the enumeration only is development support. Having the error code it's much easier to find or identify the bad configuration element. Once a configuration is found to be alright all future RTOS initializations using this configuration won't ever fail again. (Therefore even a simple assertion would suffice to evaluate the error return codes.)

Please refer to the definition of the enumeration in rtos.h for the list of recognized configuration errors.

```
#include "rtos.h"
typedef enum rtos_errorCode_t;
```

8.3.3. Create an event

Tasks are activated by events. At OS initialization time, at first events are created to specify conditions under which the aimed tasks shall be activated. These are mostly (regular) time triggers but software trigger (e.g., from within an ISR) is supported, too.

The returned event IDs form a sequence of numbers 0, 1, 2, ... in the order of creation calls. The ID is required as input to some other API functions that relate to an event, rtos_triggerEvent in the first place.

The priority is a non zero integer number. Regardless of the number, any event (and thus all of the associated tasks) will have a priority below any interrupt. See Section 5.5 and Section 8.3.6 also.

Parameter minPIDToTriggerThisEvent restricts the use of the API rtos_triggerEvent for the given event to processes of sufficient privileges.

Parameter taskParam is provided to the task function as argument. It can be used as context information, e.g., if the same task function should be associated with different events. (Which



makes them different tasks executing the same shared code.)

8.3.4. Registering a task

Tasks are not created dynamically, on demand, but they are registered at the RTOS before the scheduler is started. The registration of a task specifies the task function and the event, which will activate the task. The task function is associated with the event.

Any number of tasks (up to a configurable compile time constant) can be associated with an event. Later, when the event is triggered, they will all be executed, in the order of registration, each in its process and without mutual race conditions.

The RTOS differentiates between three kinds of tasks:

- OS tasks. They belong to the kernel process with PID=0. They are executed in supervisor mode and are not protected by the exception mechanism. They are intended for use inside the intended operating system only. (It'll be very difficult to implement a safe software if application code would be run from such a task.) Typical use case are regular update functions in I/O drivers
- User tasks. "User" relates to the CPU's problem state; these tasks are executed in user mode. Such a task belongs to a user process with PID=1..4. User tasks are run under protection and, consequently, you can specify a time budget for these tasks
- Initialization tasks. Up to one such task can be specified per process (including the kernel process). User process initialization tasks are run under protection and, consequently, you can specify a time budget for these tasks

The need for the initialization tasks may not be evident. It may look simpler to let the aimed operating system simply invoke some callback defined in the application code for initialization. This would however break the safety concept; application code could fail or take control of the system. The registered initialization tasks will be executed in user mode in the according process and can't do any harm to the system stability.



Note the return value of the registered user and initialization task functions. These tasks are run under protection and an error is reported in their process if they fail. The return value permits to let the task voluntarily report a failure in their process the same way a kernel caught failure would. Use case is hindering the system from startup if something goes wrong during initialization.

The task functions receive the 32 Bit argument taskParam. For regular timer tasks its widely irrelevant; they receive the constant value, which is specified at event creation time (see Section 8.3.3). Event triggered tasks receive the value, which is sent with *rtos_osTriggerEvent()* or *rtos_triggerEvent()*.

8.3.5. Initialize the interrupt hardware

The RTOS communicates intensively with the interrupt controller of the MCU. Therefore it has its own initialization routine for this MCU device. You will need to call this function prior to the first call of rtos_osRegisterInterruptHandler and prior to the kernel startup, rtos_osInitKernel.

Your own MCU initialization code must not contain any further or alternative code, which accesses the registers of the interrupt controller.

```
#include "rtos.h"
void rtos_osInitINTCInterruptController(void);
```

Most of the MCU hardware initialization required by the RTOS is integrated into the function to start the kernel and doesn't appear in the API. The added value of making the initialization of the interrupt controller appear in the API is the option to register your ISRs either before or after the start of the kernel. Without, it would only be possible after.



Note, on a multi-core MCU, this function is called only once, usually on the boot core and prior to starting the other cores.

8.3.6. Registering an ISR

This function lets your operating system code define a handler (ISR) for all needed interrupt sources.

processorID selects the core, which runs the ISR if the interrupt occurs. Usually, this will be the core the function call is used on (see Section 8.7.1 to find out) but it is also possible to centralize all interrupt configuration at startup-time on the boot core.

vectorNum relates to the hard-wired interrupt sources of the MCU, see reference manual. Note that the RTOS itself makes use of PID timers as interrupt source, one on each core running safe-RTOS. The configured PIT timers must thus never be used anywhere else.

The priority is an integer number in the range 1..15. See Section 5.5 and Section 8.3.3 also.

The use case for this function is the initialization code of I/O drivers. Such drivers will frequently make use of interrupts.

Note, this API may be used on a core running a bare-metal application, i.e., a core which doesn't start the safe-RTOS kernel.

8.3.7. Configure privileges for inter-process function calls

An OS or a user task can run a task in another process. (Where "task" effectively is an arbitrary function with only some constrained function arguments.) This kernel service is intended for inter-process communication but can easily break the safety concept of the aimed software. Therefore, the use of the service is forbidden by default. It's a matter of explicit configuration to permit certain processes to run tasks in certain other processes.



8.3.8. Configure privileges for suspending processes

The OS or a user task can suspend another process from further execution. This kernel service is intended for a safety supervisory processes, which would halt a functional process if it detects potentially harmful failures of that process. The unrestricted use of this OS service would easily break the safety concept of the aimed software. Therefore, the use of the service is forbidden by default. It's a matter of explicit configuration to permit certain processes to suspend certain other processes.

8.3.9. Start of kernel

After completing the configuration of events, tasks and privileges, the scheduler of the RTOS is started with a simple API call:

```
#include "rtos.h"
rtos_errorCode_t rtos_osInitKernel(void);
```

The initialization tasks are run during the call of this function and the regular OS and user tasks start spinning. All code, which is found in ordinary, sequential order behind this function call, becomes the idle task. The idle task is executed in supervisor mode and belongs to the OS.

8.4. Control tasks and processes

8.4.1. Trigger an event

Most events are typically time triggered. The rest is triggered on demand. Here's the API to trigger such an event. Use cases are inter-process communication and deferred interrupt handling. This service is available to ISRs, OS and user tasks and system call handlers of full conformance class. System call handlers of lower conformance class must not use it.

```
#include "rtos.h"
bool rtos_osTriggerEvent(unsigned int idEvent, uintptr_t taskParam);
bool rtos_triggerEvent(unsigned int idEvent, uintptr_t taskParam);
```

Triggering the event can fail if at least one of the associated tasks has not yet completed the previous activation. This is counted as an activation loss error for the event. In this situation, the new trigger is entirely lost, i.e., none of the associated tasks will be activated by the new



trigger.

The trigger of an event can be used to specify the value taskParam, which is delivered to the associated tasks as function argument, when they are activated. Main use case is deferred interrupt handling; an ISR can send some context information about what to do to the task. This is likely the most simple available coherent, process boundary crossing communication channel. [3]

Unrestricted use of event triggers would easily break the safety concept of the aimed software. Therefore, the use of this kernel service is subject to privilege configuration: See function rtos_osCreateEvent, argument minPIDToTriggerThisEvent; it's a matter of explicit configuration to permit certain processes to trigger a particular event.

8.4.2. Inter-process function call

A preemptable ISR, an OS or user task or a system call handler of full conformance class can run a task in another process, where "task" effectively is an arbitrary function with only some constrained function arguments. The function can return a value from the destination process to the calling process.

Use cases are inter-process communication and notification callbacks.

rtos_taskDesc_t is an object, which specifies the function pointer, the destination process and optionally a time budget for the execution. (Not terminating within the granted time span would cause an exception in the destination process.)

From the perspective of the calling task, these APIs are synchronous function calls. The started task inherits the priority of the calling task.

The task function takes a 32 Bit argument and may return either a 31 Bit result or an error indication, which is counted as an exception in the destination process.

The OS variant of the service is intended for implementing callbacks from ISRs or OS tasks into application code, e.g., for notifying events or delivering data.



8.4.3. Task abortion or termination

Any task is implemented as a function. The task terminates when this function is left. However, the task implementation may decide to terminate or abort earlier. The return value decides whether it is an abnormal abortion (counted as process failure) or voluntary termination.

Only where this makes sense, the return value is delivered to some caller; so for tasks started with API rtos_osRunTask() or rtos_runTask(). Anywhere else it just has a Boolean meaning, error or no error.

Use case is leaving nested, complex operations without concerns about stack unwinding.

```
#include "rtos.h"
_Noreturn void rtos_terminateTask(int32_t taskReturnValue);
```

8.4.4. Suspend a process

The execution of the tasks of a process can be halted by another process with according privileges. Activated tasks are aborted and no new task belonging to that process is activated any more.

The kernel has no state machine to alternatingly suspend and resume a process. Suspending always is a final decision. Use case is the emergency stop; a supervisory safety task can suspend the functional process(es) in case of recognized, safety-critical errors.

```
#include "rtos.h"
void rtos_osSuspendProcess(uint32_t PID);
void rtos_suspendProcess(uint32_t PID);
```

Note, safe-RTOS is rather a single-core kernel with the ability of running on several cores but a true multi-core kernel. The operations on the cores are widely de-coupled. For suspension of processes it means that the API only impacts the tasks of the process, which are configured to run on the core, which calls the API. If a supervisory task running one core wants to suspend a process entirely then it needs to implement according core-to-core communication to all others cores. It could, e.g., use service rtos_runTask() to run rtos_suspendProcess() on all cores.

8.5. Critical sections

8.5.1. Mutual exclusion of all contexts

The RTOS offers the traditional services for mutual exclusion of all contexts on a core, i.e., ISRs and tasks, by suspending all interrupt processing on the core. Since this service would break any safety concept it is generally unavailable to user tasks.

32/51 8.5. Critical sections



Use case is the very efficient avoidance of race conditions in the implementation of an operating system, e.g., in its I/O drivers.

The two pairs of functions differ in that only rtos_osEnterCriticalSection() /rtos_osLeaveCriticalSection() is nestable — at the price of an a bit higher execution time.

All of these functions are implemented as inline functions, which expand to a few machine instructions.

```
#include "rtos.h"
void rtos_osSuspendAllInterrupts(void);
void rtos_osResumeAllInterrupts(void);
uint32_t rtos_osEnterCriticalSection(void);
void rtos_osLeaveCriticalSection(uint32_t oldState);
```

Note, all of these APIs may be used on a core running a bare-metal application, i.e., a core which doesn't start the safe-RTOS kernel.

8.5.2. Priority ceiling protocol for tasks

A common method of inhibiting other tasks from coincidentally accessing the same shared resources (mostly data objects in RAM) is the priority ceiling protocol. The currently running task is temporarily given a new, higher priority and all other tasks of same or lower priority will surely not become running.

PCP is the only service for critical sections or mutual exclusion the kernel offers to user tasks.

In this implementation, the PCP has undergone a modification: The RTOS defines an upper limit for the priority level, which can be achieved by the calling task. This way it's impossible to hinder user process tasks of higher priority from execution. The modification guarantees to a safety supervisory task that it will always execute so that it can safely recognize potentially harmful software states under all circumstances.

Because of their system call interface, the cost of calling these functions from user tasks is significantly higher than of the OS functions. They should be used with care. Software design should preferably make use of lock-free communication concepts.



It is generally not possible for a user task to implement mutual exclusion with an ISR. Where this matters, software design needs to make use of lock-free communication concepts.

In a typical OS design, these functions won't be directly exposed to the user. Instead, they will be wrapped in a set of macros, like os_getResource(resource) and os_releaseResource(resource). Such macros take the perspective of the user, who is interested in access to data objects but doesn't want to deal with task priorities. In this concept, the "resource" objects in the macros hide the priorities a task must (temporarily) have at minimum to surely exclude all possible competitors.

8.6. System call interface

8.6.1. Do a system call

System calls are functions, which are provided by the implementer of an operating system, that would build on this RTOS. These function are executed in supervisor mode and can, e.g., implement I/O drivers. A user task invokes such a function with this API:

```
#include "rtos.h"
uint32_t rtos_systemCall(uint32_t idxSysCall, ...);
```

The ellipsis stands for the function arguments of the particular system call; different system calls will have different argument lists.

Note that user source code will barely contain a call of rtos_systemCall(). It's common practice to wrap the call into a function or macro with meaningful name and dedicated signature and which hides the index idxSysCall of the aimed system call.

8.6.2. Abort a system call

The implementation of a system call must take outermost care that any imaginable user provided argument data will never be able to harm the stability of kernel or other processes. It's common practice to let the implementation first check all arguments. If anything is suspicious then the system call implementation will call this API to report the problem to the kernel. It raises an exception in the calling process and control doesn't return to the system calling task code.

```
#include "rtos.h"
_Noreturn void rtos_osSystemCallBadArgument(void);
```

8.6. System call interface



8.6.3. Check memory address for read or write access

The implementation of a system call must take outermost care that any imaginable user provided argument data will never be able to harm the stability of kernel or other processes. If a pointer is passed in then the system call implementation needs to double-check that read or write access to the referenced memory addresses is granted to the calling process. See Section 9 for details.

Note, the use of pointers as function call arguments is possible but not recommended. The call of these checker functions will mostly be too expensive in relation to the intended pointer operation.

8.7. Query system state

8.7.1. Get index of executing core

If safe-RTOS is run on more than one core then much of the code can be shared between these core. For example, the entire RTOS implementation itself is shared between them. At some code locations, core specific decisions may be required, there are, e.g., hardware registers, which are core related so that an I/O driver serving these registers would need to know, on which core it is executing. These services just return the index of the executing core.

```
#include "rtos.h"
unsigned int rtos_osGetIdxCore(void);
unsigned int rtos_getIdxCore(void);
```

Note, even service rtos_getIdxCore may be called from OS contexts. However, OS contexts shouldn't because of the performance penalty. They should only use the intrinsic rtos_osGetIdxCore() instead.

Note, service rtos_osGetIdxCore() may be used on a core running a bare-metal application, i.e., a core which doesn't start the safe-RTOS kernel.



8.7.2. Get core status register

Reading the status register of the core is a privileged operation in the Power Architecture although it has no side effects and doesn't do any harm. This service provides the status of the executing core to a user process. Use case is code, which is shared between OS and user tasks and which needs to take according decisions, like which particular API to call to get a needed service.

```
#include "rtos.h"
rtos_getCoreStatusRegister
```

Note, this function can be called from OS and user code. OS contexts should however better use an intrinsic to read the MSR and in order to save the function call overhead.

8.7.3. Get interrupt suspension status

This is an intrinsic function to read the executing core's status register and to see, whether processing of External Interrupts is currently enabled or not.

```
#include "rtos.h"
bool rtos_osGetAllInterruptsSuspended(void);
```

Note, service rtos_osGetAllInterruptsSuspended() may be used on a core running a bare-metal application, i.e., a core which doesn't start the safe-RTOS kernel.

8.7.4. Process state

This API is the counterpart of rtos_suspendProcess(). Any OS or user task can query if a particular process has been suspended on the executing core or not.

```
#include "rtos.h"
bool rtos_isProcessSuspended(uint32_t PID);
```

8.8. Diagnostic interface

The kernel recognizes or catches several different failures. The kernel hinders the failing code from doing any harm to the other processes but it doesn't take any remedial actions. It just records the occurrences of failures. The diagnostic API supports implementing a supervisory task that looks at the occurring errors and which can then take the appropriate decisions.

8.8. Diagnostic interface



8.8.1. Task overrun

Tasks are activated by triggering an event. Triggering an event may fail if any of its associated tasks have not yet completed after their preceding activation. This leads to a loss of the event trigger and to not activating its associated tasks — effectively a task overrun.

This failure is counted for each distinct event.

```
#include "rtos.h"
unsigned int rtos_getNoActivationLoss(unsigned int idEvent);
```

The API can be called from OS and user tasks.

8.8.2. Exception count

These services return the number of exceptions caught since system startup from any of the tasks belonging to a particular, given process, but only for the core, which this call is made on.

1 rtos_getNoTotalTaskFailure() returns the total number of exceptions for a given process whereas rtos_getNoTaskFailure() breaks the count down into several different exception kinds. You could, e.g., try to decide, whether an exception is a possibly tolerable timeout exception.

In typical application design, exceptions will really be exceptional—they must not occur and any count other than zero will point to a serious programming error in your software. Nonetheless, there's an exception from the last statement: If your operating system makes use of time budgets for user tasks than it may be a matter of getting occasional time-out exceptions because of temporary high system load.

Note, internally, rtos_getNoTotalTaskFailure() always is the sum of counts of all exception kinds. However, there's no API concept to deliver all counts coherently to a user task and so this invariant won't hold for queried counts.

The differentiated kinds of exceptions are enumerated and documented in the header file rtos.h.

Both services can be used by OS and user tasks.



8.8.3. Stack space

The function computes how many bytes of the stack area of a particular process are still unused on the core which this call is made on.

```
#include "rtos.h"
unsigned int rtos_getStackReserve(unsigned int PID);
```

Note, the computation is expensive and should be done only in a task of low priority.

The service can be used by OS and user tasks.

The service may be used on a core running a bare-metal application, i.e., a core which doesn't start the safe-RTOS kernel. In this case, argument *PID* is necessarily zero, the ID of the OS process.

8.8.4. Average CPU load

A function is available to estimate the current system load on the core which this call is made on.

Note, this function doesn't really belong to the RTOS but it can be integrated together with the RTOS into the aimed operating system. If so, it would be continuously called from the idle task and would then consume most of the idle time for load computation.

```
#include "gsl_systemLoad.h"
unsigned int gsl_osGetSystemLoad(void);
```

The load is returned in tens of percent.

The function may be called from any OS task, but the only meaningful use case is calling it from the OS idle task.

9. Memory layout

The RTOS comes along with a memory layout, that organizes the memories of the software (kernel, OS and application) in a way, which is essential for the safety concept and compatible with the simple static use of the two MPUs.

The complete address space, we have to control, is depicted in the left part of Figure 2. With respect to flash ROM and address space of the peripherals, this part of the image is already detailed enough for the further; the used flash ROM and the entire peripheral space are memory chunks, which are not further divided and which are controlled with one memory area descriptor each in the first MPU (device *SMPU 0*).

38/51 9. Memory layout



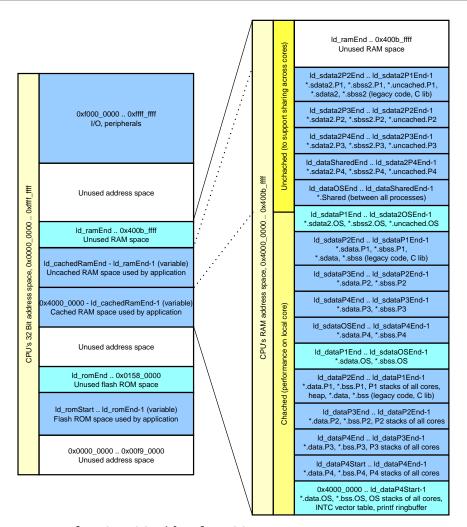


Figure 2. Memory Map of MPC5748G with safe-RTOS

With respect to RAM, the chosen memory map ensures that all the memories, which are owned by a process, form exactly three solid memory areas in the address space. Per process, we have one area with SDA data, one area with SDA2 data (both accessible through short addressing modes) and one with all the other, normal data. This is depicted in the right part of Figure 2. Initialized and uninitialized data are laid one after another inside these areas.

The three areas of a process correspond to three memory area descriptors in the second MPU (device *SMPU_1*).

Two additional memory area descriptors are applied to grant write access to all used RAM to the operating system process and read access to all used RAM for everybody. These area descriptors are used at the same time to declare one portion of the RAM as cached and the other one as uncached.

An additional memory area descriptor grants write access to all user processes. This area is meant for process-to-process communication. In order to make this work regardless on which core a process's task is running, the area has been laid into the uncached RAM.



The two areas, which spawn the entire used RAM, will often overlap with one of the three process-related or the shared memory area. The internal priority rules of the MPU device ensure that the write access rights for the given process are added and that the cache on/off decision is respected.

The sixteen available descriptors allow having up to four user processes together with the three additional descriptors. The fifteen memory areas, which are configured in *SMPU_1* are shown as dark blue fields in the right part of Figure 2 and in the middle of its left part.

The remaining two dark blue fields in the left part of the figure relate to the area descriptors for ROM and peripherals in *SMPU_0*.

An important particularity is the decision to put the SDA2 sections into the uncached RAM. For normal SDA2 data objects this means a performance degradation. On the other hand, having one of the three memory chunks of a process in uncached RAM supports in-process communication from core-to-core. Tasks on different cores, which belong to the same process can use simple shared-memory patterns for communication purpose. [5]

9.1. Linker script

The build scripts, which are part of the repository, contain a linker script that implements the memory map from Figure 2. It redirects the data objects and code snippets from all the compilation units into the aimed location in this map. Moreover, it communicates the actual area address and size information by means of linker defined symbols to the source code of the MPU driver, so that it can configure the MPUs accordingly.

An excerpt from the linker script demonstrates, how input section filters are used to form the three memory areas of a process. It doesn't matter, which or how many input sections are mapped into such an area, you may add more of them. Let's have a look at the definition of the memory area for normally addressed data objects in RAM, owned by process 4:

40/51 9.1. Linker script



```
.data.P4 : ALIGN(16)
    /* Data sections for process P4. */
    \cdot = ALIGN(16);
   ld_dataP4Start = ABSOLUTE(.);
    *_P4_*.o(.data)
    *_P4_*.o(.data.*)
    *(.data.P4)
    *(.data.P4.*)
} >memData AT>memFlash
.bss.P4 (NOLOAD) : ALIGN(16)
    *_P4_*.o(.bss)
    *_P4_*.o(.bss.*)
    *(.bss.P4)
    *(.bss.P4.*)
   /* Stacks of process P4, one for each core . */
    . = ALIGN(8); /* Stacks need to be 8 Byte aligned. */
   ld_stackStartP4Core2 = ABSOLUTE(.);
    . += ld_stackSizeP4Core2;
    . = ALIGN(8);
   ld_stackEndP4Core2 = ABSOLUTE(.);
   ld_stackStartP4Core1 = ABSOLUTE(.);
    . += ld_stackSizeP4Core1;
    . = ALIGN(8);
   ld_stackEndP4Core1 = ABSOLUTE(.);
   ld_stackStartP4Core0 = ABSOLUTE(.);
    . += ld_stackSizeP4Core0;
    . = ALIGN(8);
    ld_stackEndP4Core0 = ABSOLUTE(.);
    \cdot = ALIGN(16);
    ld_dataP4End = ABSOLUTE(.);
} >memData
```

The shown, pre-defined filters put all input sections with initialized and uninitialized RAM data objects and which are considered to be owned by process 4, between two boundary addresses, which are labeled *ld_dataP4Start* and *ld_dataP4End* and which are globally visible:

- Input sections named .data.P4 or .data.P4.* (initialized data objects)
- Input sections named .bss.P4 or .bss.P4.* (uninitialized data objects)
- Standard sections for initialized and uninitialized data (.data, .data.*, .bss, .bss.*), if they come from a compilation unit with a name containing _P4_
- Stack memory for process 4 is placed here, too, by moving the current address (. += ld_stackSizeP4CoreN)



You may add additional input section filters to assign memory to the given process as long as they appear between the two labels *ld_dataP4Start* and *ld_dataP4End*.

A similar construct can be found for SDA data. A major difference is the placement of input section filters for both, initialized and uninitialized data, into one and the same output section. This is a compromise between different contradictory requirements:

- The linker doesn't support output section names like .sdata.P1 or .sbss.P4. If the output section has a name other than .sdata or .sbss then the linker will no longer recognize is as small data area. Hence, it will reject relocating code, which tries to access data objects that are placed in that output section with short instructions
- We want to place all process's short data in one contiguous chunk of memory in order to stick to a total of no more of three chunks per process (limitation of number of memory area descriptors in MPU)

The drawback of placing initialized and uninitialized data into the same output section is the waste of ROM. Even for all uninitialized RAM, we will end up with a mirror in ROM. Looking at the maximum possible size of the small data area, this looks like a tolerable problem.

```
.sdata : ALIGN(16)
    (\ldots)
    /* Small data sections for process P4. */
    \cdot = ALIGN(16);
    ld_sdaP4Start = ABSOLUTE(.);
    *_P4_*.o(.sdata)
    *_P4_*.o(.sdata.*)
    *(.sdata.P4)
    *(.sdata.P4.*)
    * P4 *.o(.sbss)
    *_P4_*.o(.sbss.*)
    *(.sbss.P4)
    *(.sbss.P4.*)
    . = ALIGN(16);
    ld_sdaP4End = ABSOLUTE(.);
    (..)
} >memData AT>memFlash
```

SDA2 data is handled quite similar to SDA, with one noticeable difference: We have input filters for data objects to be placed in process owned uncached RAM. The use case are data objects that can be read and written from tasks belonging to the same process but running on different cores.

42/51 9.1. Linker script



```
.sdata2 : ALIGN(16)
    (\ldots)
    /* Small data sections for process P4. */
    \cdot = ALIGN(16);
    ld_sda2P4Start = ABSOLUTE(.);
    *_P4_*.o(.sdata2)
    *_P4_*.o(.sdata2.*)
    *(.sdata2.P4)
    *(.sdata2.P4.*)
    *_P4_*.o(.sbss2)
    *_P4_*.o(.sbss2.*)
    *(.sbss2.P4)
    *(.sbss2.P4.*)
    *(.uncached.P4) /* Uncached data for core-to-core in-process */
    *(.uncached.P4.*) /* communication */
    \cdot = ALIGN(16);
    ld sda2P4End = ABSOLUTE(.);
    (..)
} >memData AT>memFlash
```

The actual size and address location of all the memory areas are communicated to the C source code by means of linker defined symbols. By convention, all of these symbols begin with ld_.. In the MPU configuration code (file rtos_systemMemoryProtectionUnit.c), you can find the initialization of three memory area descriptors, which are based on the address boundaries:

- [ld dataP4Start, ld dataP4End-1]
- [ld_sdaP4Start, ld_sdaP4End-1]
- [ld sda2P4Start, ld sda2P4End-1]

The frequently appearing statements . = ALIGN(16); are required for the MPU, it supports an address resolution of 4 Bit.

The same constructs are of course found for the other processes, too.

9.2. Defining data objects

The filters route the input sections to the process memory areas. So if we want a particular data object to be owned by a particular process, e.g., *P4*, then we need to make it reside in one of the filtered sections. The compiler offers a type decoration for this purpose (see GCC manual): A term like __attribute__((section(".data.P4"))) would be added to the variable definition, e.g.:



```
static uint16_t myVariable __attribute__((section(".data.P4.myVariable"))) = 99;
```

Two remarks: Firstly, the section name contains ".data.P4": This makes the variable go into process *P4*'s memory area for normally addressed data. Secondly, the chosen section name ends on the name of the variable. This is optional and it has no impact on the code but it makes the variable appear in the linker generated map file—which is often useful to double-check proper locating of data objects.

The type decoration makes a variable definition somewhat bulky, particularly when using the section name with contained variable name. Therefore safe-RTOS offers some convenience macros to hide it. Consider typing:

```
#include "typ_types.h"
static uint16_t DATA_P4(myVariable) = 99;
```

instead of the previous example. Both are equivalent.

Similar macros are defined for uninitialized data objects or to place a variable in the SDA or SDA2 RAM or accordingly in the other processes' memory areas (including OS memory). They are defined in file typ_types.h; please #include this header file.

If the macros are applied to arrays then the array index(es) are placed behind the closing parenthesis of the macro:

A function pointer definition could look like this:

```
static uint8_t (* SBSS_P2(myFctPtr))(uint16_t);
```

A process owned data object, which should be changeable from more than one core, needs to be located in the uncached RAM area of that process:

```
uint32_t UNCACHED_P2(myP2DataObjAccessedFromSeveralCores);
```

A data object, which should be changeable by all processes and from any core, needs to be located in the shared, uncached RAM area:

```
uint32_t SHARED(myDataObjSharedBetweenCoresAndProcesses);
```

44/51 9.2. Defining data objects





Normally, the type decoration is required only for the object definition, but rarely you will need to place the same at a publicly visible declaration in the header file, too. See next paragraphs, why.

Having the type decoration twice — as usual in the data object definition but also in the object's public declaration in a header file — may become necessary if you force a data object to be in a data or bss section, which would normally go into a small data area. "Normally" means decided by the compiler's internal rules. Data objects with a size of up to 8 Byte would for example be normally placed in the small data area. If the declaration of such a data object doesn't contain the section attribute and when compiling another source file, which only reads the declaration, then the compiler will emit code with short addressing mode while the variable is not in a small data area. The linker will refuse to resolve the address offsets in the short-addressing-mode-instructions in the object file of that other source file.

Note, there's no support for shared objects located in small data areas. This relates to shared (macro *SHARED()*) between cores and processes but also to owned by one process but accessed from different cores (marcos *UNCACHED_Pi()*). Therefore, the sketched situation will mainly occur with such shared data objects. ^[6]



If you write your first code samples and use these macros the first time then you are strongly encouraged to inspect the map file after the build to see the effect. Make some spot checks to see whether your data objects really go into the memory area of the aimed processes.

If your code executes with exceptions then the most likely reason is a wrong or missing type decoration for a data object. A variable without decoration is basically fine, it goes into the memory area of process P1, but if that variable is write-accessed by any other process then an exception is raised.

Another typical reason for exceptions is the use of a static variable inside a function, which is called by different processes. This will fail even if your code handles the race conditions; the variable will not be write-accessible by all calling processes. Maybe, the solution is the use of the shared memory area but this can easily break the safety concept.

Note, automatic variables, which are placed on the stack, are not affected. Each process has its own stacks (one per core) in its own memory area.

9.3. Common access rules

The memory area descriptors are attributed with access rights for the different processes. The set of granted rights can be summarized in the following rules:

• All processes have read-access to the used portion of the ROM (both, instruction read and



data read). The unused portion of ROM is generally unaccessible

- All processes have data read-access to the used portions of the RAM. The unused portion of RAM is generally unaccessible
- The kernel process (OS code, including I/O drivers) has write-access and instruction readaccess to all used RAM
- Any user process has write-access and instruction read-access to its own three RAM areas
- · All processes have write-access to the shared RAM area
- The kernel process has data read- and write access to the I/O address space

Any other access is forbidden and will yield an MPU exception.

9.4. Common cache rules

The memory area descriptors control the use of the caches. The configuration can be summarized in the following rules:

- · All instruction read access to the ROM is cached
- · All read access to normally addressed data objects and to SDA data objects are cached
- All read access to SDA2 data objects is uncached
- All read access to shared data objects (all processes, all cores, macro SHARED()) is uncached
- All read access to user process-wide shared data objects (all tasks of given process, regardless on which core) is uncached
- All write access to cached data objects updates the cache
- All write access is buffered in the eight store buffers. Control returns to the CPU after writing to the buffer. The buffers are immediately transferred to the main memory, but with delay and asynchronously to and in parallel to the execution of the subsequent CPU instructions

9.5. Legacy code

The linker script routes all unspecified data objects into the memory areas of process *P1*. This process has the lowest privileges and is intended to host the functional application code, which normally is the majority of code. If such application source code does already exist then it can be used without modification with the RTOS. In particular, you don't need to "grep" for all data definitions in order to add the type decoration.

If there's already some legacy safety code, which should run in a higher privileged process, e.g., *P2*, then you have two choices:



- 1. Look for all data definitions and add the macros to make the data objects be owned by process *P2*.
- 2. Rename the source files such that their names contain the pattern $_P2$. This makes unspecified data objects go into the memory areas of process P2.

Note, automatic variables, which are placed on the stack, are not affected. Each process has its own stacks (one per core) in its own memory area.

9.6. Legacy build environments

If there is some legacy application source code then there will likely be some legacy build scripts, too. The legacy build scripts can't easily be used with safe-RTOS; the tight interference between the RTOS' own linker script and the source code (MPU configuration and ownership of data objects) needs to be adopted by the legacy scripts. Which is not impossible but it shall be difficult. The existing build scripts will have their own requirements concerning partitioning the memory map and conflicts with safe-RTOS' concept of having three solid RAM areas per process can easily arise. Careful analysis and deep understanding of the existing linker script will be required to see if a migration is possible. No general recipe can be given.

9.7. The C library

The C library places all its static data objects in the normal *data* and *bss* sections. Its source code does of course not make use of our macros and all static data objects are owned by process *P1*. Therefore, *P1* is the only process, which can make safe use of the C library functions.

The memory, which is reserved to the heap functions, has been placed in process *P1*, too. All memory, which is got from the C library's *malloc* functions, is implicitly owned by process *P1* and can't be written from other processes.

Many, if not most functions from the library won't make use of static data and do not depend on heap memory. They could therefore be used from other processes, too. Regardless, this is not recommended for these reasons:

- The C library is an imported, untrusted, potentially unsafe piece of code, which should not be applied just like that from a safety process
- The compilation of the C library requires care if it is going to be used in a multi-threading environment. We use the original, pre-compiled binaries, which have not been compiled considering the particularities of our multi-threading environment. This makes its concurrent use from more than one thread, and even more from different cores, potentially unsafe which may be tolerated for the functional code in *P1* but surely not for higher privileged safety processes



Summarizing, a reasonable safety requirement would be allowing the use of the C library in process *P1* (as a matter of experience, we never faced a problem with concurrent use) but not allowing its use in operating system code or in a safety process.

10. The sample applications



Text down here has not yet been revised with respect to MPC5748G derivative.

The RTOS is a set of services, which permit the implementation of an operating system that runs some application code. It is not a self-contained, runnable piece of software. The build process requires the specification of some sample application code, which is compiled and linked with the RTOS code. Now, the build process yields a flashable and runnable binary.

The concept is to specify an additional source code folder on the command line of the make processor. All source code, which is found in the folder or one of its sub-folders, is considered the sample application.

The safe-RTOS repository contains a few such sample applications.

10.1. Sample application "initial"

Sample application "initial" is a minimal configuration of the RTOS, meant to demonstrate the use of the APIs to configure and run the RTOS: Create an event, associate a task with the event and start the kernel.

To see how the RTOS sample application works you need to open a terminal software on your host machine. You can find a terminal as part of the CodeWarrior Eclipse IDE; go to the menu, "Window/Show View/Other/Terminal/Terminal".

Open the serial port, which is offered by the TRK-USB-MPC5643L. (On Windows, open the Computer Management and go to the Device Manager to find out.) The Baud rate has been selected as 115200 Bd in file code\application\default\mai_main.c, 8 Bit, no parity, 1 start and stop Bit. The terminal should print the messages, which are regularly sent by the sample code running on the evaluation board.

To compile the RTOS with this sample application, have

APP=code/application/initial/

in the command line of the make process.



10.2. Sample application "default"

The next sample application is a migration of the according code from the elder TRK-USB-MPC5643L sample "RTOS-VLE". It has been put into file code\application\default\mai_main.c.

The migration mainly considers the API changes of the RTOS and the functionality is still quite similar to TRK-USB-MPC5643L sample "RTOS-VLE" with its blinking LEDs. Several tasks are running concurrently and the LEDs are driven by different tasks. Some progress information is printed to the serial output but much of the operation can be observed only in the debugger. This sample application doesn't make much use of the safety concepts of the new RTOS.

Progress and status are reported through the serial interface. Setting up a terminal program on the development computer is identical to Section 10.1.

Try pressing button SW3 on the evaluation board and see what happens.

To compile the RTOS with this sample application, have

APP=code/application/default/

in the command line of the make process.

10.3. Sample application "basicTest"

A more meaningful application of the RTOS can be found in <code>code\application\basicTest</code>. It demonstrates the safety capabilities of the RTOS. The principal task consists of a large switch-case-statement, where each case is the implementation of a software fault—floating point errors, attempts to destroy memory contents owned by the kernel or another process, overwriting own memories, destroying the own stack, using illegal or protected machine instructions and so on. Some controlling tasks demand specific faults and double-check that the failing process neither harms the data of other processes, nor endangers stable system run and that the failures are correctly recognized, caught and reported by the kernel.

Progress and status are reported through the serial interface. Setting up a terminal program on the development computer is identical to Section 10.1.

The process related API is used by the controlling task to halt software execution if any deviation from the expectations should be recognized - which must of course never happen. The situation would be observable even without connected terminal as the LED stops blinking.

To compile the RTOS with this sample application, have

APP=code/application/basicTest/



in the command line of the make process.

10.4. Sample applications "testPCP" and "roundRobin"

These sample applications serve as test of the scheduler of the RTOS. Progress and status are reported through the serial interface. Setting up a terminal program on the development computer is identical to Section 10.1.

To compile the RTOS with this sample applications, have

APP=code/application/testPCP/

or, respectively,

APP=code/application/roundRobin/

in the command line of the make process.

10.5. Sample application "benchmark"

The sample application simulates a true RTOS application with respect to scheduling and task timing so that it can make a statement about the overhead imposed by the kernel—at least in direct comparison of different kernels. (The absolute result figures are rather meaningless.)

The application does do nothing but incrementing some task counters in order to get an alive indication of the tasks. The rest of the task bodies is busy waiting. The configured tasks and their individual busy wait times are chosen as considered realistic for a true embedded application.

A typical inter-task communication pattern has been simulated: Mutual exclusion with a subset of other tasks is implemented at entry and on exit from a task. This simulates a data flow based task interface: Input data is copied from some shared area at the beginning of the task execution. Then the task spends most of its execution time with computation of its results and at the end it again uses a critical section with mutual exclusion to copy its results to some other shared areas.

A relative high interrupt load has been configured, too. The interrupts have different priorities and preempt each other. The application tasks are frequently preempted by the interrupts.

None of the actual operations of a true application has been simulated, just the timing. But due to the significant interrupt load and the splitting of the busy times into phases of mutual



exclusion with other tasks and pure, autonomous computations the timing and activity of the kernel should resemble a true application.

The application regularly reports the averaged total CPU load and the portion, which is spent in the kernel.

The reported kernel CPU times have been computed as difference of the overall CPU load and the sum of applied busy wait times. The reported value therefore includes everything but busy waiting, e.g., the call of the nearly empty ISRs, the call of the task functions and incrementing of the alive counters. So it's not only the time spent in actual kernel functions.

The reported value has no particular meaning on an absolute scale but it can be useful to compare different revisions or variants of the RTOS, like with/without safety support or HW versus SW scheduler. It may also be useful to compare with other RTOSs, if they offer a similar API.

Progress and results are reported through the serial interface. Setting up a terminal program on the development computer is identical to Section 10.1.

To compile the RTOS with this sample application, have

APP=code/application/benchmark/

in the command line of the make process.

- [1] The picture has been downloaded at http://www.embeddedlinux.org.cn/rtconforembsys/5107final/images/other-0405_0.jpg on Nov 19, 2017.
- [2] It would be a considerable design decision to implement the safety task in turn as a callback from a (regular timer) ISR of even higher priority to overcome this problem.
- [3] It may look like an inconsistent API design if all associated tasks receive the same value taskParam from the triggering event. The service $rtos_triggerEvent()$ could easily offer an API, which provides an individual value to each associated task. The only reason not to do so is the additional overhead in combination with the very few imaginable use cases. In most cases an explicitly triggered event will have just one associated task; events with more than one task will mostly be regular timer tasks, which make rarely use of the task parameter.
- [4] Tasks belonging to the given process but running on another core are not included. Core-to-core communication can be applied to collect all of this information.
- [5] If the application design doesn't make use of processes with tasks on more than one core then it'll be likely better to move the SDA2 chunks to cached RAM. A small change of the linker script would suffice.
- [6] Seeing that our concept anyway makes the use of explicit type decorations at the data definitions omnipresent in the source code, it may be considerable to turn the internal compiler rule off (a single command line switch) and to let it assume all data objects be normally addressed by default.