Simulation of CXRS spectra using Raysect and CHERAB frameworks

Aleksei Shabashov a.shabashov@iterrf.ru

Contents

1	Pur	pose	2
2	Sco	pe	2
3	Defi	initions	2
4	Intr	roduction	3
	4.1	CXRS Diagnostics	3
		4.1.1 CXRS for Plasma Measurements	3
		4.1.2 CXRS in ITER	3
	4.2	Development of the New Simulation Code	4
		4.2.1 Existing Code	4
		4.2.2 Motivation	5
	4.3	Raysect and CHERAB	6
5	Sim	ulation of CXRS Specrta	6
6	Con	aclusion	6
$\mathbf{A}_{\mathtt{J}}$	ppen	dices	7
\mathbf{A}	For	Users	7
	A.1	Installation	7
	A.2	Preparations for the first run	8
	A.3	Usage	8
		A.3.1 Performing a simulation	8
		A.3.2 Print plasma profiles	9
		A.3.3 Print plasma composition	9
		A.3.4 Configuration	9
		A.3.5 Emission parameters	9
		A.3.6 Plasma, beam, fibre, optics, camera, scanner and spectrometer parameters	9
		A.3.7 Emission lines	9
		A.3.8 DNB	10
		A.3.9 Wavelength ranges and geometry	10
В	For	Developers	10
	B.1	Project Structure	10
	B.2	Reading data from IMAS	11
		B.2.1 Supplementary Functions	11
		B.2.2 equilibrium IDS	11

	B.2.3	core_profiles IDS	11
	B.2.4	edge_profiles IDS	12
	B.2.5	charge_exchange IDS	12
	B.2.6	nbi IDS	13
В.3	Setting	g the Wall	13
B.4	Observ	vers	13
	B.4.1	Base Class	14
	B.4.2	Sightlines	14
	B.4.3	Optics	14
	B.4.4	Fibres	14
	B.4.5	Camera	14
	B.4.6	Others	14
B.5	Popula	ating CHERAB's Atomic Database	14
B.6	Utility	Functions	14
	B.6.1	Parsing XML Configuration File	14
	B.6.2	Setting Emission Parameters	14
	B.6.3	Math Functions	14
	B 6 4	Others	1/

1 Purpose

empty

2 Scope

This document is applicable to the 55.EC CXRS Edge diagnostic. The CXRS Edge system is an optical diagnostic that collects the light emitted by the plasma upon interaction with the Diagnostic Neutral Beam (DNB) and analyses this light to extract the ion temperature, plasma rotation velocities and impurity content of the plasma. An overview of the CXRS Edge system is given in the Design Description document (DDD) [1].

3 Definitions

For a complete list of ITER abbreviations see [2]. Below abbreviations used in this document are given.

CXRS Charge eXchange Recombination Spectroscopy DNB Diagnostic Neutral Beam

4 Introduction

4.1 CXRS Diagnostics

4.1.1 CXRS for Plasma Measurements

The Charge Exchange Recombination Spectroscopy (CXRS) diagnostics measures line emissions of several impurity isotopes in the plasma excited by charge exchange reactions with neutral hydrogen atoms injected into the plasma by the diagnostic neutral beam (DNB) (eqs. (1) and (2)). This line emission (table 1) provides essential information for plasma control and physics studies: ion temperature T_i (eq. (3)), toroidal (v_{tor}) and poloidal (v_{pol}) plasma rotation velocity (eq. (4)), helium ash and low Z impurity densities (beryllium, carbon, neon etc.) and the derived quantities such as Z_{eff} (eq. (5)).

$$X^{Z+} + H^0 \to X^{(Z-1)+}(n_2) + H^+$$
 (1)

$$X^{(Z-1)+}(n_2) \to X^{(Z-1)+}(n_1) + h\nu$$
 (2)

$$kT_{\rm ion} = mc^2 \frac{\Delta \lambda_{\rm Dopp}^2}{\lambda_0^2} \tag{3}$$

where k – Boltzmann constant, $\Delta \lambda_{\text{dopp}}$ – line's width due to Doppler broadening, λ_0 – "natural", unshifted wavelength of the line's center.

$$v_{\rm rot} = c \frac{\Delta \lambda_{\rm rot}}{\lambda_0 \cos \alpha} \tag{4}$$

where $\Delta \lambda_{\rm rot}$ – line's shift due to Doppler effect, α – angle between line of sight and toroidal direction.

$$n_{\rm imp} = \frac{4\pi \int I(\lambda) \, d\lambda}{n_{\rm b} Q_{\rm CX}^{\rm eff}(v_{\rm b}) \, dl} \tag{5}$$

where $I(\lambda)$ – intensity of the line, $n_{\rm b}$ – local neutral beam density, $Q_{\rm CX}^{\rm eff}(v_{\rm b})$ – effective rate coefficient due to charge exchange, l – coordinate along a line of sight.

4.1.2 CXRS in ITER

The CXRS Edge diagnostic is a distributed system with components throughout the ITER tokamak complex. The primary viewing components (front-end optics) are installed in Equatorial port 3 (EP3), viewing the Diagnostic Neutral Beam (DNB) that enters the plasma in the neighboring section 4. Front-end optics consists of two light collecting systems: Upper and Lower. The scope of the 55.EC CXRS Edge diagnostic for Upper system ends at the image plane in the port interspace (11-L1-C03) where the collected signal is coupled into optical fibre bundles.

Table 1. Specifoscopic illies asca ill Callos	Table 1. S	Spectroscopic	lines used	in (CXRS.
---	------------	---------------	------------	------	-------

Ion	Transition	Wavelength
BeIV BeIV HeII	$6 \rightarrow 5$ $8 \rightarrow 6$ $4 \rightarrow 3$	465.8 nm 468.5 nm 468.5 nm
ArXVIII NeX CVI	$16 \rightarrow 15$ $11 \rightarrow 10$ $8 \rightarrow 7$	522.5 nm 524.9 nm 529.1 nm
$H\alpha$ MSE		656.3 nm 659.1 nm

For Lower system, however, 55.EC CXRS Edge diagnostic is responsible for light collection system, light transportation and detection. The collected signal is transported through optical fibre bundles to the Tritium building (Building 14 – Level 2 – Room 4), where the detection systems are located.

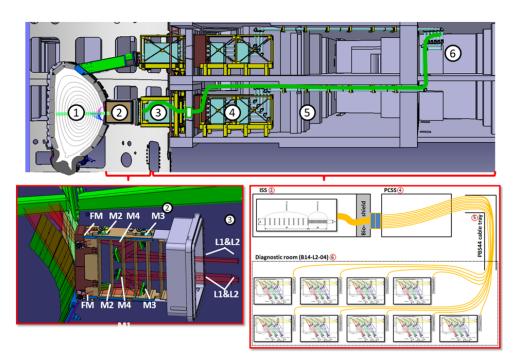


Figure 1. An overview of the CXRS Edge diagnostic design.

4.2 Development of the New Simulation Code

4.2.1 Existing Code

Simulation of Spectra (SOS) code by M. G. von Hellermann [3] Features:

- Simulation takes into account many physical effects (halo effect, crossection effect, plume effect and others);
- Written in Matlab;
- Has Graphical User Interface (fig. 2).

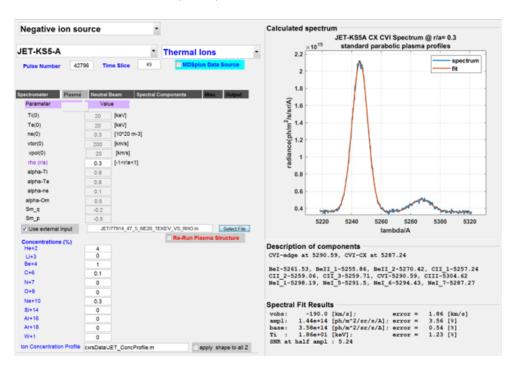


Figure 2. SOS interface.

4.2.2 Motivation

Existing code (Simulation of Spectra – SOS) lacks some features:

- Simplified plasma, tokamak and diagnostic geometry (e.g. elliptical plasma, point emission and others);
- Does not take reflections into account;
- Cannot use data from IMAS directly;
- Requires Matlab license, hard to extend by new developers.

The goal was to create an open and extensible simulation code using Python. Sub goals:

- Implement interaction with IMAS database (read and write);
- Use IMAS data to create a plasma and diagnostic beam with spatial distributions;
- Use a ray-tracing engine to simulate spectra, this includes how reflections affect simulated spectra;
- Ensure that emission models include all physics already captured by SOS.

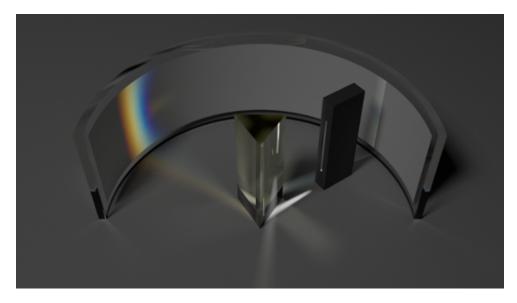


Figure 3. Demonstration of Raysect features.

4.3 Raysect and CHERAB

Raysect [4] is a ray-tracing framework for Python designed for scientific purposes.

- Supports scientific ray-tracing of spectra from physical light sources such as plasmas.
- Easily extensible, written with user customisation of materials and emissive sources in mind.
- Different observer types supported such as pinhole cameras and optical fibres.

CHERAB [5] is a Python library for forward modelling diagnostics based on spectroscopic plasma emission which provides physical models for Raysect. Provided models for Raysect:

- Tools for plasma and diagnostic beam simulations;
- Physical emission models (active charge exchange, bremsstrahlung and more).

5 Simulation of CXRS Specrta

Main part

6 Conclusion

Conclusion

References

- [1] Zvonkov A., Serov S., and Tugarinov S. System Design Description (DDD) 55.EC CXRS Edge. Version 4.1. Apr. 2020.
- [2] ITER Abbreviations. Version 1.17. Mar. 2018.

- [3] Manfred von Hellermann et al. "Simulation of Spectra Code (SOS) for ITER Active Beam Spectroscopy". In: *Atoms* 7.1 (Mar. 2019), p. 30. DOI: 10.3390/atoms7010030.
- [4] Dr Alex Meakins and Matthew Carr. raysect/source: v0.5.2 Release. Version v0.5.2. Aug. 2018. DOI: 10.5281/zenodo.1341376. URL: https://doi.org/10.5281/zenodo.1341376.
- [5] Dr Carine Giroud et al. CHERAB Spectroscopy Modelling Framework. Version v0.1.0. Mar. 2018. DOI: 10.5281/zenodo.1206142. URL: https://doi.org/10.5281/zenodo. 1206142.

Appendices

A For Users

A.1 Installation

Clone this repository then go to its root folder:

```
git clone ssh://git@git.iter.org/diag/cxrs.git
cd cxrs
```

First of all you have to load all required modules:

```
source env.sh
```

This will purge all loaded modules and load ones that necessary to install and use cxrs. To install cxrs on your computer run

```
pip install --user .
```

while in the the cxrs root directory.

Note: you can omit python -m part later by adding \$HOME/.local/bin to your PATH. To do so, locate file .bashrc in your home directory and add the following line at the end of the file:

```
export PATH="$PATH:/home/ITER/<username>/.local/bin"
```

where **<username>** is your username at ITER GPC. You can look at it by executing next command via command line: **echo \$USER**.

A.2 Preparations for the first run

Step 1: Create environment file

In order to create environment file, run

This will create the default environment file, that loads all needed modules. To do so, run

It will purge all loaded modules and will load modules necessary to use cxrs.

Note: you have to do this for every new session on ITER GPC.

Step 2: Create configuration file

cxrs behaviour controlled by configuration file which is necessary to run the code.

To create default configuration file, run

This will create a configuration file with a name config.xml in current directory.

Step 3: Populate local atomic database

cxrs uses a local atomic database. To create one, run

Atomic data will be copied to the \$HOME/.cherab directory.

A.3 Usage

A.3.1 Performing a simulation

Main part of cxrs is simulation routine, to use it for pulse with <shot> shot number and <run> run number for time slice <time> use:

```
python -m cxrs simulate -s <shot> -r <run> -t <time> -c <config>
```

where **<config>** is a path to configuration file.

It will perform a simulation and will store result in newly created folder cxrs_output.

Note: time can be omitted. In that case time slice in the middle of the time range will be used. This is particularly useful for time slices with a lot of digits after after decimal separator. For example:

```
python -m cxrs simulate -s 134000 -r 30 -c config.xml
```

For additional information use help:

```
python -m cxrs simulate --help
```

A.3.2 Print plasma profiles

cxrs info subprogram can be used to inspect different distributions of plasma and DNB parameters. To use it, run

```
python -m cxrs info -s <shot> -r <run>
```

It will produce variety of plots and tables and place it in cxrs_output folder. *Note:* 1D profiles represent values at the DNB axis.

A.3.3 Print plasma composition

You can quickly look at plasma composition for requested pulse by using

```
python -m cxrs composition -s <shot> -r <run>
```

Omit arguments to print composition for all pulses available by scenario_summary program.

A.3.4 Configuration

cxrs accepts user's configurations as xml-file.

To change option's value, change value attribute in double quotes corresponding to the option. For more information on the meaning of certain parameter, look at its description.

Note: type attribute is actually important. For string values use **str**, for floating-point values use **float** and **int** for integers.

Warning: Do not change tags, like <user_options> or others, this will stop the program from working.

A.3.5 Emission parameters

Section emission_parameters controls which emission types are used during a simulation. Each of them can be turned on or off separately.

A.3.6 Plasma, beam, fibre, optics, camera, scanner and spectrometer parameters

Each of those sections controls appropriate aspect of simulation. For information on each parameter look at its description in configuration file.

A.3.7 Emission lines

List of emission lines suited for observations is placed in <emission_parameters> section:

```
<emission_lines description="CXRS elements to observe.">
    <HI>
        <name
            description="Name of the element."
            unit="n.a."
            type="str"
            value="hydrogen"/>
        <charge
            description="Charge of the ion."
            unit="n.a."
            type="int"
            value="0"/>
        <transition_levels</pre>
            description="Transition levels [upper, lower]."
            unit="n.a."
            type="int"
            value="[3, 2]"/>
    </HI>
    ... more lines omitted
</emission_lines>
```

You can change and add new entries in this section following given template. Added emission lines will be simulated if atomic data exists for them.

A.3.8 DNB

DNB section of the configuration file contains parameters for Diagnostic Neutral Beam. Structure of this section replicates structure of nbi IDS.

A.3.9 Wavelength ranges and geometry

These two sections contain all information for CXRS diagnostics.

B For Developers

B.1 Project Structure

Most of the functions implemented in this project contain docstrings written in "classic" Python style using **reStructuredText** syntax. Each doscstring contains a short description of a function, list of arguments and their types and list of exceptions which can be rised during execution of the function.

B.2 Reading data from IMAS

Module responsible for reading data from IMAS and creating appropriate plasma and DNB models is stored in cxrs/imas directory.

B.2.1 Supplementary Functions

File ids.py contains only one function ids_get which is used to check and load requested IDS. For example

```
charge_exchange_ids = ids_get(
    "charge_exchange",
    134000,
    30,
    user="public",
    database="iter",
    version="3",
    occurrence=0
)
```

will return an IDS object associated with charge exchange diagnostic for particular pulse from ITER public database. Each IDS can store several occurrences (refer to the description of an IDS). For example in charge_exchange IDS occurrences used to store data related to different diagnostics.

File find_nearest.py contains only one function find_nearest. It is used for locating nearest time slice to the time requested by user.

B.2.2 equilibrium IDS

File equilibrium.py contains EquilibriumIDS class which is used to read data from equilibrium IDS and create CHERAB's EFITEquilibrium object via time method. It is later used to build core plasma model.

```
equilibrium_ids = EquilibriumIDS(134000, 30)
equilibrium = equilibrium_ids.time(-1)
```

here -1 for time is used to aquire a time slice in the middle of time range for this particular pulse.

B.2.3 core_profiles IDS

File core_profiles.py contains CoreProfilesIDS class which is used to read data from core_profiles IDS and create CHERAB's Plasma object via create_plasma method. It is poses as core plasma model.

```
core_profiles_ids = CoreProfilesIDS(134000, 30)
core_plasma = core_profiles_ids.create_plasma(equilibrium)
```

Note that create_plasma method does not require time value since it uses one that stored in equilibrium.

One required argument of create_plasma is equilibrium. It provides Ψ_{norm} distribution which is used to map density, temperature and bulk velocity distributions of plasma. Functions distribution_density, distribution_temperature and distribution_velocity are doing exactly that. *Note:* distribution_temperature tries to use average ion temperature or electron temperature if species' own temperature profile is absent in the IDS.

Function detect_species is used to recognise ion and neutral species from label given in IDS. Since there was no convention on the labeling at the time this appeared to be a huge problem. detect_species uses regulat expressions to math species label along some other tricks. It returns CHERAB's Element object and species charge as a number (0 for neutrals).

B.2.4 edge_profiles IDS

File edge_profiles.py contains EdgeProfilesIDS class which is used to read data from edge_profiles IDS and create CHERAB's Plasma object via create_plasma method. It is poses as edge plasma model.

edge_profiles IDS requires its own class because values there set to a mesh instead of 1D profile as in core_profiles IDS. Second reason is that

```
edge_profiles_ids = EdgeProfilesIDS(134000, 30)
edge_plasma = edge_profiles_ids.create_plasma(time=-1)
# or
edge_plasma = edge_profiles_ids.create_plasma(equilibrium=equilibrium)
```

Note that create_plasma has two optional arguments: time and equilibrium, but at least one of them is required. time=-1 is for the same reason as in section B.2.2.

B.2.5 charge_exchange IDS

File charge_exchange.py contains ChargeExchangeIDS class which is used to read data from charge_exchange IDS and create different types of observers.

```
charge_exchange_ids = ChargeExchangeIDS(134000, 30)
sightlines = SightlineGroup(ids=charge_exchange_ids)
```

For information on SightlineGroup, see section B.4.2

B.2.6 nbi IDS

File nbi.py contains NBIIDS class which is used to read data from nbi IDS and create CHERAB's Beam object via create_beam method. It is poses as DNB model.

```
nbi_ids = NBIIDS(134000, 30)
beam = nbi_ids.create_beam(
    time=-1,
    plasma=core_plasma,
    atomic_data=adas,
    attenuation_instructions=attenuation_instructions,
    emission_instructions=emission_instructions
)
```

here time=-1 for the same reasona as in section B.2.2. For more information on adas see section B.5, on attenuation_instructions and emission_instructions see section B.6.2.

At the time Beam supports model with only one beamlet and create_beam is designed with this in mind.

B.3 Setting the Wall

cxrs/machine/pfc_mesh.py

B.4 Observers

cxrs/observers

- B.4.1 Base Class
- B.4.2 Sightlines
- B.4.3 Optics
- B.4.4 Fibres
- B.4.5 Camera
- B.4.6 Others
- B.5 Populating CHERAB's Atomic Database
- **B.6** Utility Functions
- B.6.1 Parsing XML Configuration File
- **B.6.2** Setting Emission Parameters
- **B.6.3** Math Functions
- B.6.4 Others