# <u>Autoware Universe and AWSIM Installation</u> <u>Guide</u>

Below you can find instructions on how to setup the self-driving demo of AWSIM simulation controlled by Autoware. The instruction assumes using the Ubuntu OS.

### Required PC Specs:

Please make sure that your machine meets the following requirements in order to run the simulation correctly:

OS Ubuntu 22.04

CPU 6cores and 12thread or higher

GPU RTX2080Ti or higher

Nvidia Driver (Windows) >=472.50 Nvidia Driver (Ubuntu 22) >=515.43.04

#### Localhost settings:

The simulation is based on the appropriate network setting, which allows for trouble-free communication of the AWSIM simulation with the Autoware software. To apply required localhost settings please add the following lines to  $\sim$ /.bashrc file

```
if [!-e/tmp/cycloneDDS_configured]; then sudo sysctl-w net.core.rmem_max=2147483647 sudo ip link set lo multicast on touch /tmp/cycloneDDS_configured fi
```

and these lines to ~/.profile or in either of files: ~/.bash profile or ~/.bash login:

```
export ROS_LOCALHOST_ONLY=1
export RMW IMPLEMENTATION=rmw cyclonedds cpp
```

Note: A system restart is required for these changes to work.

## 1.Download and Run AWSIM Demo Binary

a. Install Vulkan Graphics Library

```
$ sudo apt update
$ sudo apt install libvulkan1
```

b. Download and Run AWSIM Demo binary.

https://github.com/tier4/AWSIM/releases/download/v1.2.0/AWSIM\_v1.2.0.zip


Unzip the downloaded file and Make the AWSIM\_v1.2.0.x86\_64 file executable. Rightclick the AWSIM\_v1.2.0.x86\_64 file and check the Execute checkbox



or execute the command below. chmod  $+x < path to AWSIM folder > /AWSIM_v1.2.0.x86_64$ 

c. Launch AWSIM v1.2.0.x86 64

\$ ./<path to AWSIM folder>/AWSIM\_v1.2.0.x86\_64

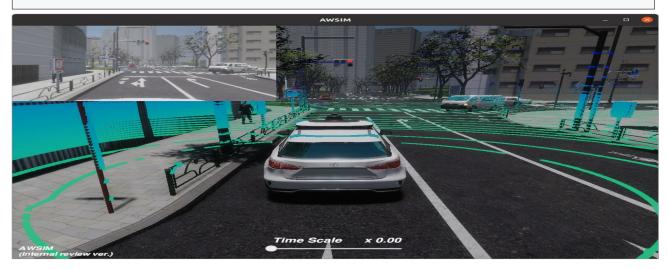

## 2. Launching Autoware

In order to configure and run the Autoware software with the AWSIM demo, please:

1.Download map files (pcd, osm) and unzip them.

https://github.com/tier4/AWSIM/releases/download/v1.1.0/nishishinjuku\_autoware\_map.zip

2.Clone <u>Autoware</u> and move to the directory.

```
$ git clone https://github.com/autowarefoundation/autoware.git
$ cd autoware
```

3. Switch branche to awsim-stable

```
$ git checkout awsim-stable
```

4. Configure the environment

```
$ ./setup-dev-env.sh
```

5. Create the src directory and clone external dependent repositories into it

```
$ mkdir src
$ vcs import src < autoware.repos</pre>
```

6.Install dependent ROS packages

```
$ source /opt/ros/humble/setup.bash
$ rosdep update
$ rosdep install -y --from-paths src --ignore-src --rosdistro $ROS_DISTRO
```

#### 7.Build the workspace

\$ colcon build --symlink-install --cmake-args -DCMAKE\_BUILD\_TYPE=Release
-DCMAKE\_CXX\_FLAGS="-w"

#### 8.Launch Autoware.

\$ source install/setup.bash

\$ ros2 launch autoware\_launch e2e\_simulator.launch.xml
vehicle\_model:=sample\_vehicle sensor\_model:=awsim\_sensor\_kit
map\_path:=<your mapfile location>




# 3 Let's run the self-Driving simulation


1.Launch AWSIM and Autoware according to the steps described earlier in this document.




2. The Autoware will automatically set its pose estimation as presented below.

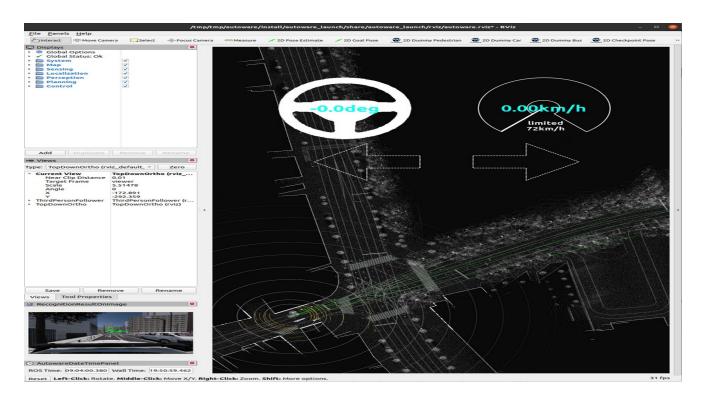

3.Set the navigation goal for the vehicle.

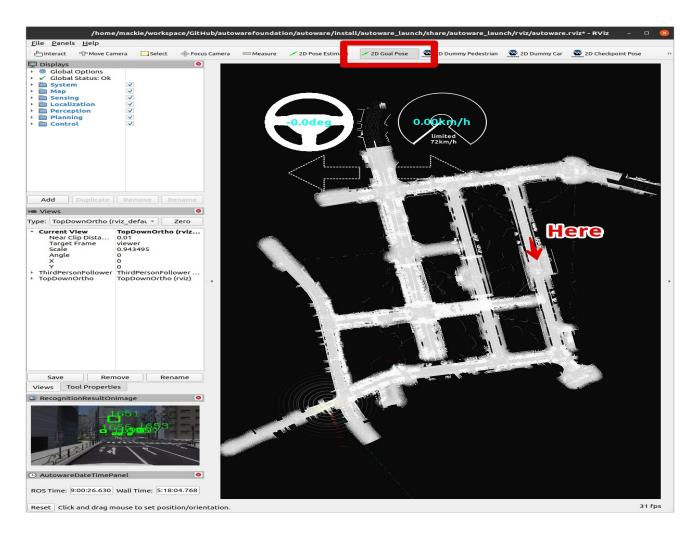

The generated path can be seen.

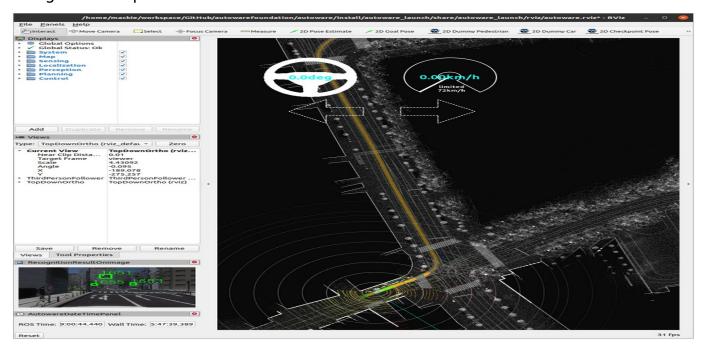

### 4. Enable self-driving.

- \$ cd autoware
- \$ source install/setup.bash
- \$ ros2 topic pub /autoware/engage autoware\_auto\_vehicle\_msgs/msg/Engage
  '{engage: True}' -1



The self-driving simulation demo has been successfully launched !!!!!!