


Chapter 3

Underlying Technology

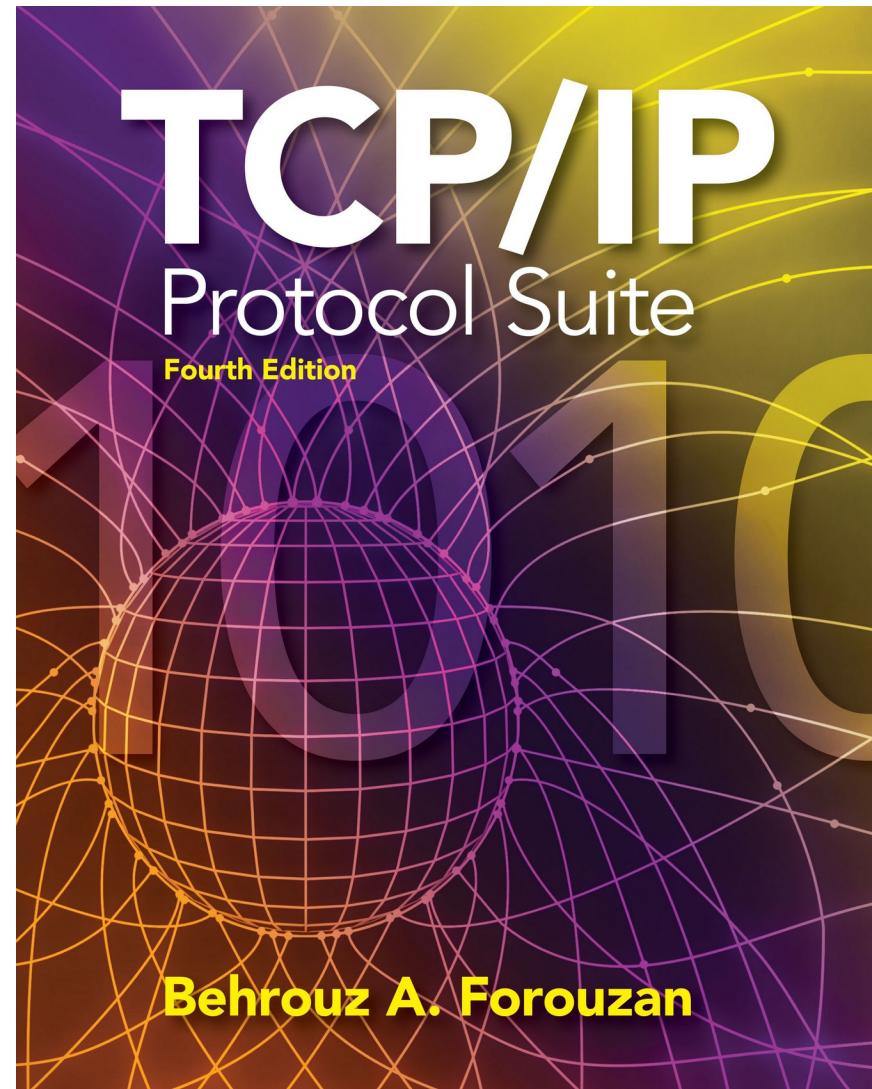

OBJECTIVES:

- To briefly discuss the technology of dominant wired LANs, Ethernet, including traditional, fast, gigabit, and ten-gigabit Ethernet.
- To briefly discuss the technology of wireless WANs, including IEEE 802.11 LANs, and Bluetooth.
- To briefly discuss the technology of point-to-point WANs including 56K modems, DSL, cable modem, T-lines, and SONET.

Chapter Outline

- 3.1 *Wired Local Area Netwo***
- 3.2 *Wireless LANs***

3-1 WIRED LOCAL AREA NETWORKS

A local area network (LAN) is a computer network that is designed for a limited geographic area such as a building or a campus. Although a LAN can be used as an isolated network to connect computers in an organization for the sole purpose of sharing resources, most LANs today are also linked to a wide area network (WAN) or the Internet.

The LAN market has seen several technologies such as Ethernet, token ring, token bus, FDDI, and ATM LAN, but Ethernet is by far the dominant technology. ⁴

Topics Discussed in the Section

- ✓ IEEE Standards
- ✓ Frame Format
- ✓ Addressing
- ✓ Ethernet Evolution
- ✓ Standard Ethernet
- ✓ Fast Ethernet
- ✓ Gigabit Ethernet
- ✓ Ten-Gigabit Ethernet

Figure 3.1 IEEE standard for LANs

LLC: Logical link control
MAC: Media access control

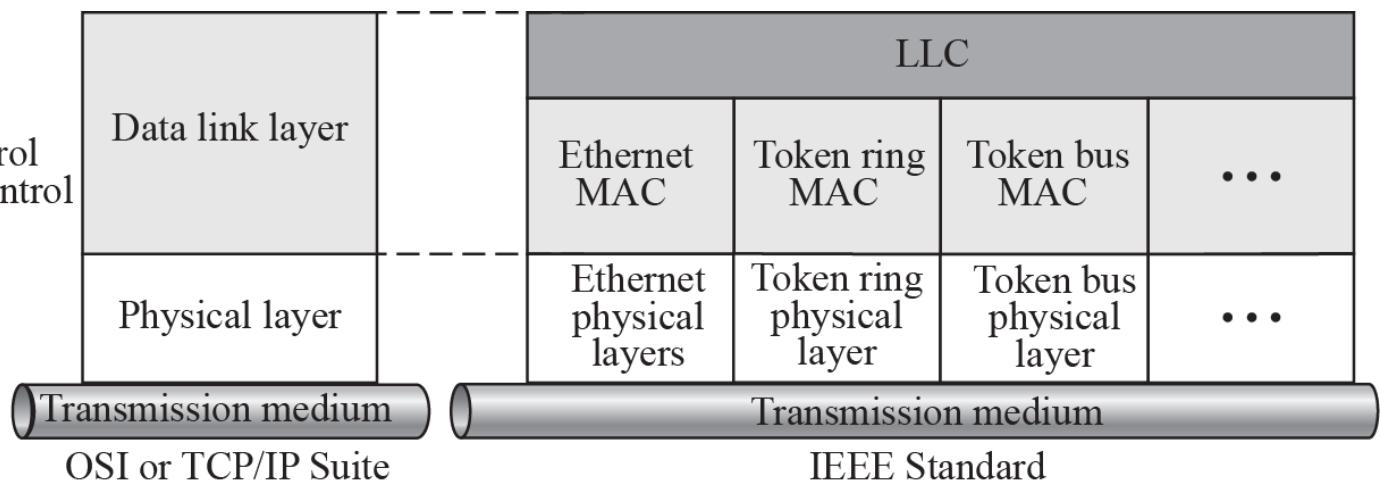


Figure 3.2 Ethernet Frame

Preamble: 56 bits of alternating 1s and 0s.

SFD: Start frame delimiter, flag (10101011)



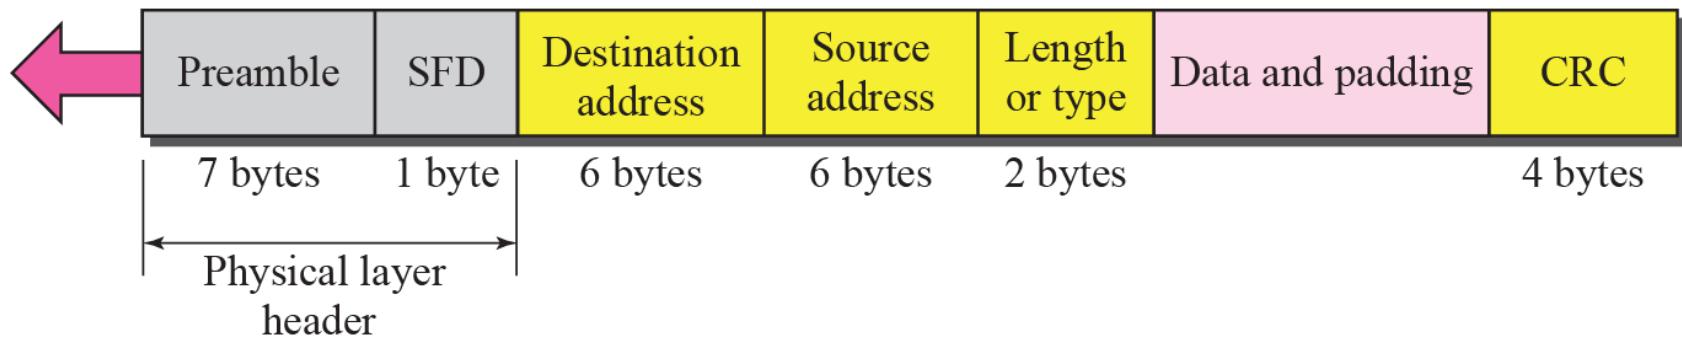


Figure 3.3 Maximum and minimum lengths

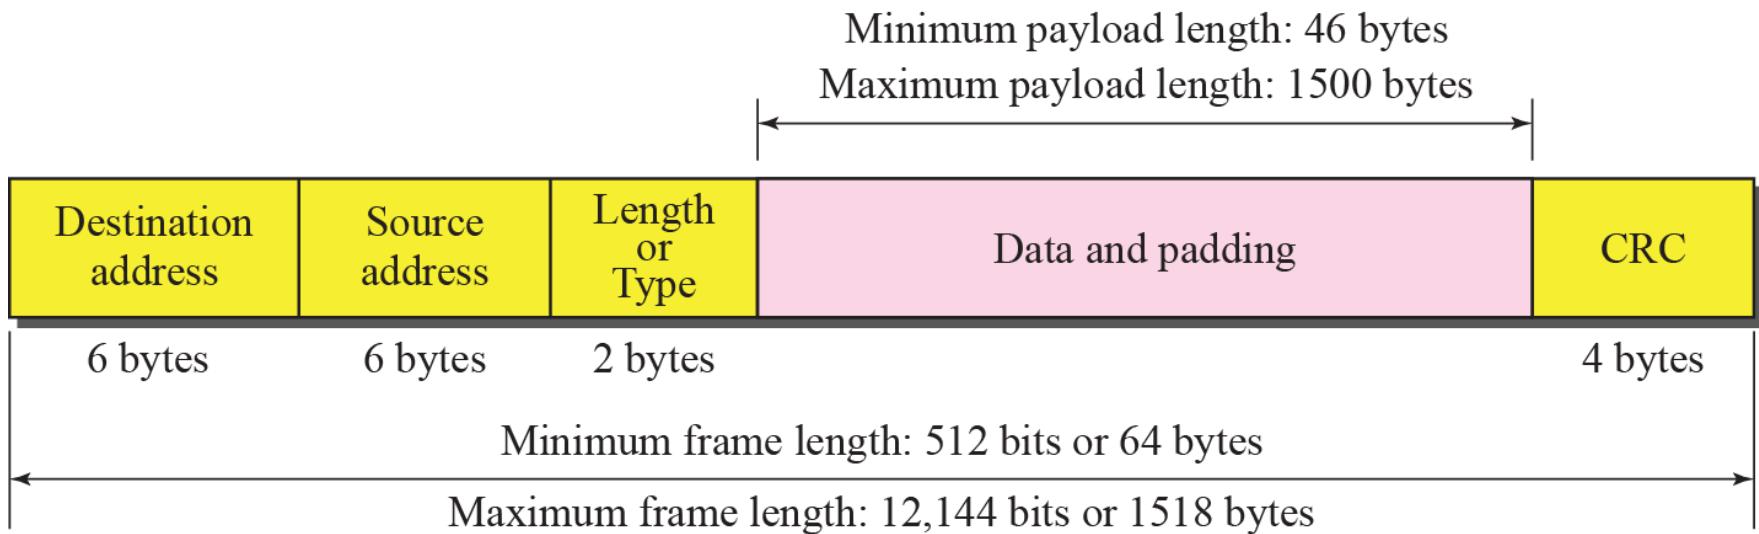

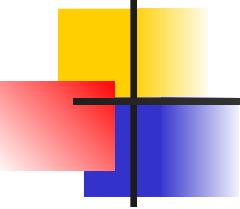

Note

Minimum length: 64 bytes (512 bits)

Maximum length: 1518 bytes (12,144 bits)

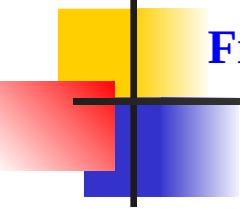



Figure 3.4 Ethernet address in hexadecimal notation


d: Hexadecimal digit

$$\mathbf{d_1d_2 : d_3d_4 : d_5d_6 : d_7d_8 : d_9d_{10} : d_{11}d_{12}}$$

6 bytes = 12 hexadecimal digits = 48 bits


Figure 3.5 *Unicast and multicast addresses*

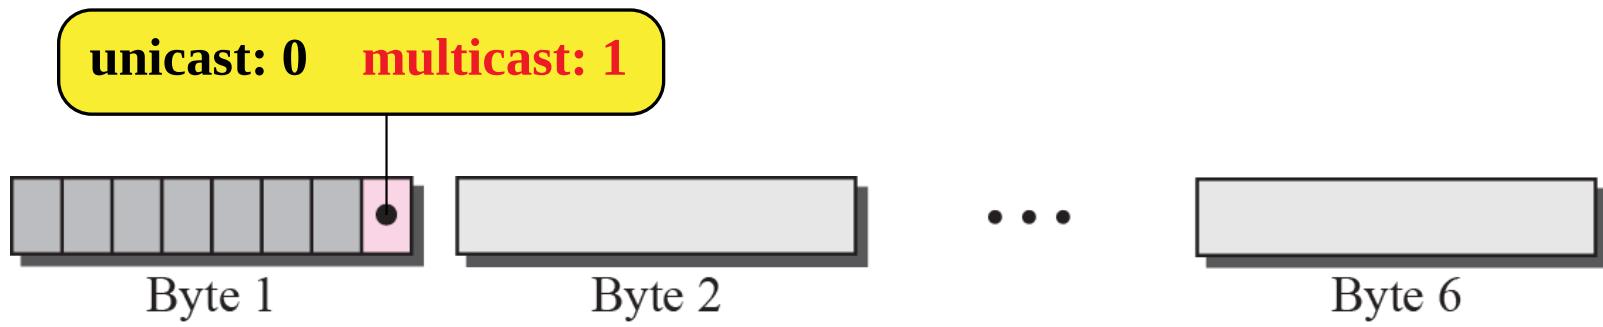

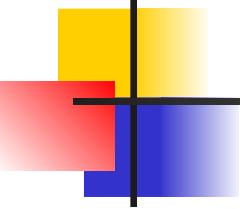

Note

The broadcast destination address is a special case of the multicast address in which all bits are 1s.

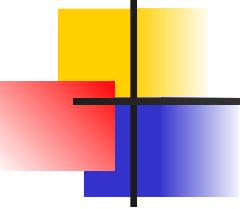

Note

*The least significant bit of the first byte defines the type of address.
If the bit is 0, the address is unicast;
otherwise, it is multicast.*

Example 3.1

Define the type of the following destination addresses:

- a. 4A:30:10:21:10:1A
- b. 47:20:1B:2E:08:EE
- c. FF:FF:FF:FF:FF:FF

Solution

To find the type of the address, we need to look at the second

hexadecimal digit from the left. If it is even, the address is unicast. If it is odd, the address is multicast. If all digits are F's, the address is broadcast. Therefore, we have the following:

- a. This is a unicast address because A in binary is 1010 (even).
- b. This is a multicast address because 7 in binary is 0111 (odd).
- c. This is a broadcast address because all digits are 14

Example 3.2

Show how the address 47:20:1B:2E:08:EE is sent out on line.

Solution

The address is sent left-to-right, byte by byte; for each byte, it is sent right-to-left, bit by bit, as

← 11100010 00000100 11011000 01110100 00010000
 01110111

Figure 3.6 *Ethernet evolution through four generations*

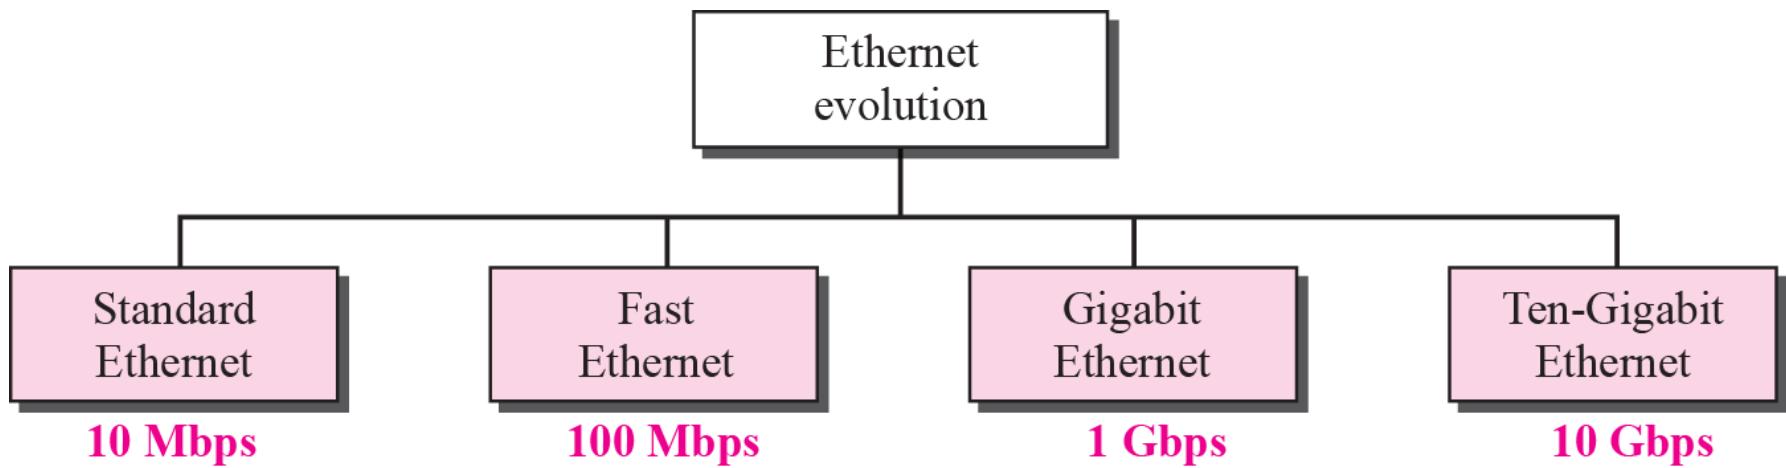


Figure 3.7 Space/time model of a collision in CSMA


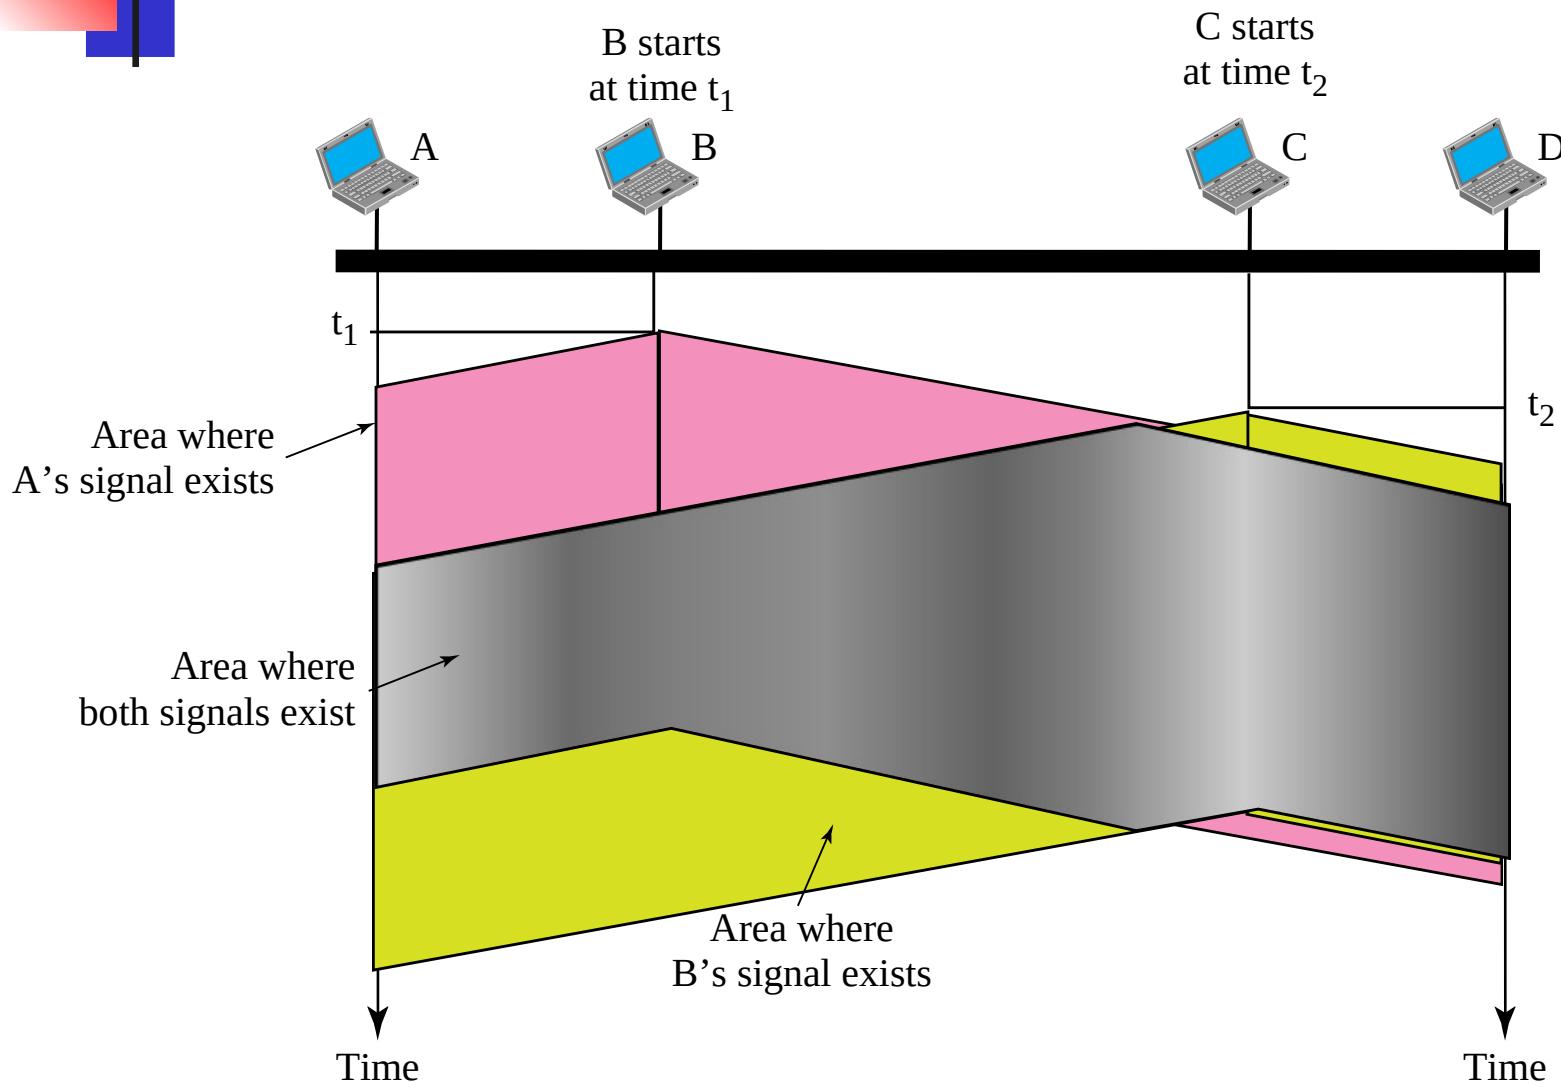


Figure 3.8 Collision of the first bit in CSMA/CD

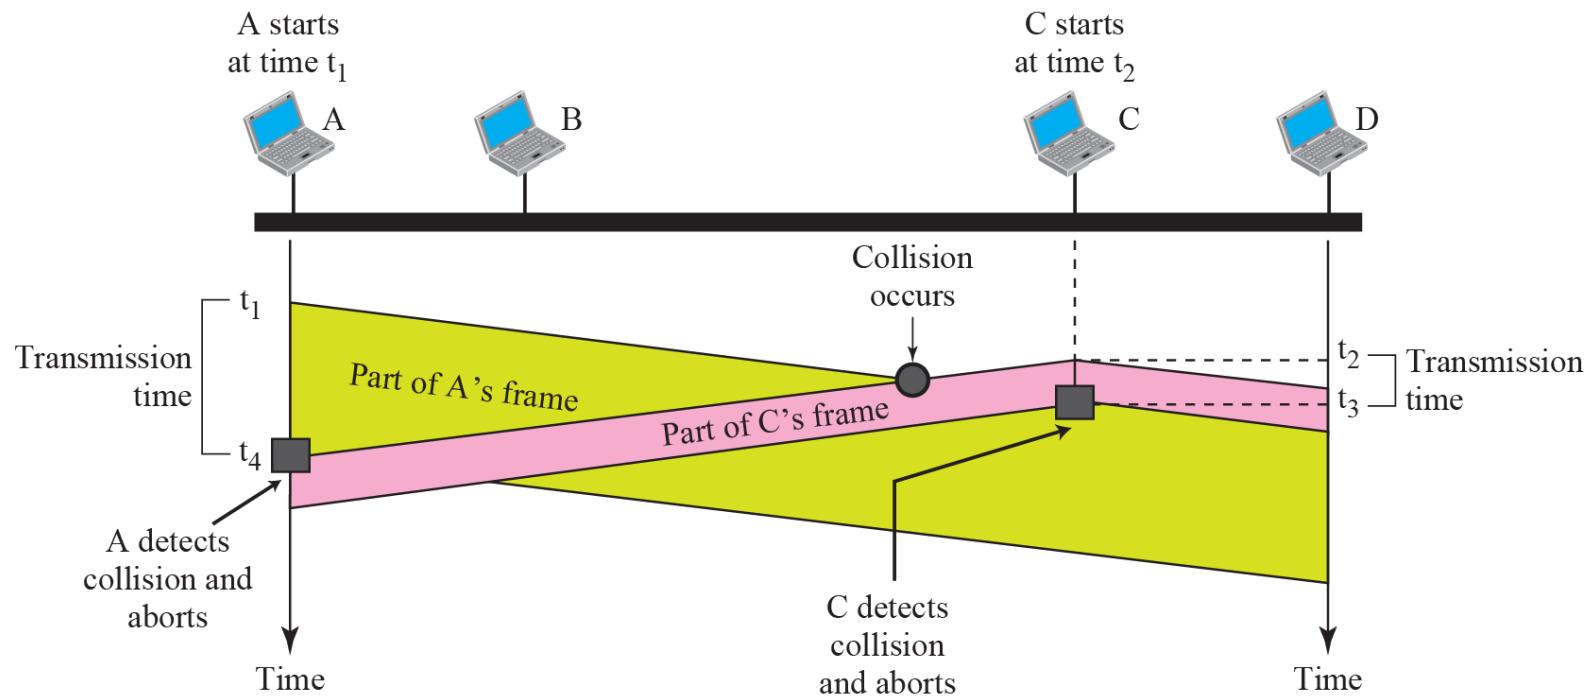

Example 3.3

In the standard Ethernet, if the maximum propagation time is $25.6 \mu\text{s}$, what is the minimum size of the frame?

Solution

The frame transmission time is $T_{fr} = 2 \times T_p = 51.2 \mu\text{s}$. This means, in the worst case, a station needs to transmit for a period of $51.2 \mu\text{s}$ to detect the collision. The minimum size of the frame is $10 \text{ Mbps} \times 51.2 \mu\text{s} = 512 \text{ bits or } 64 \text{ bytes}$. This is actually the minimum size of the frame for Standard Ethernet, as we discussed before.

Figure 3.9 CSMA/CD flow diagram

Legend

T_{fr} : Frame average transmission time
 K: Number of attempts
 R (random number): 0 to $2^K - 1$
 T_B (Back-off time) = $R \times T_{fr}$


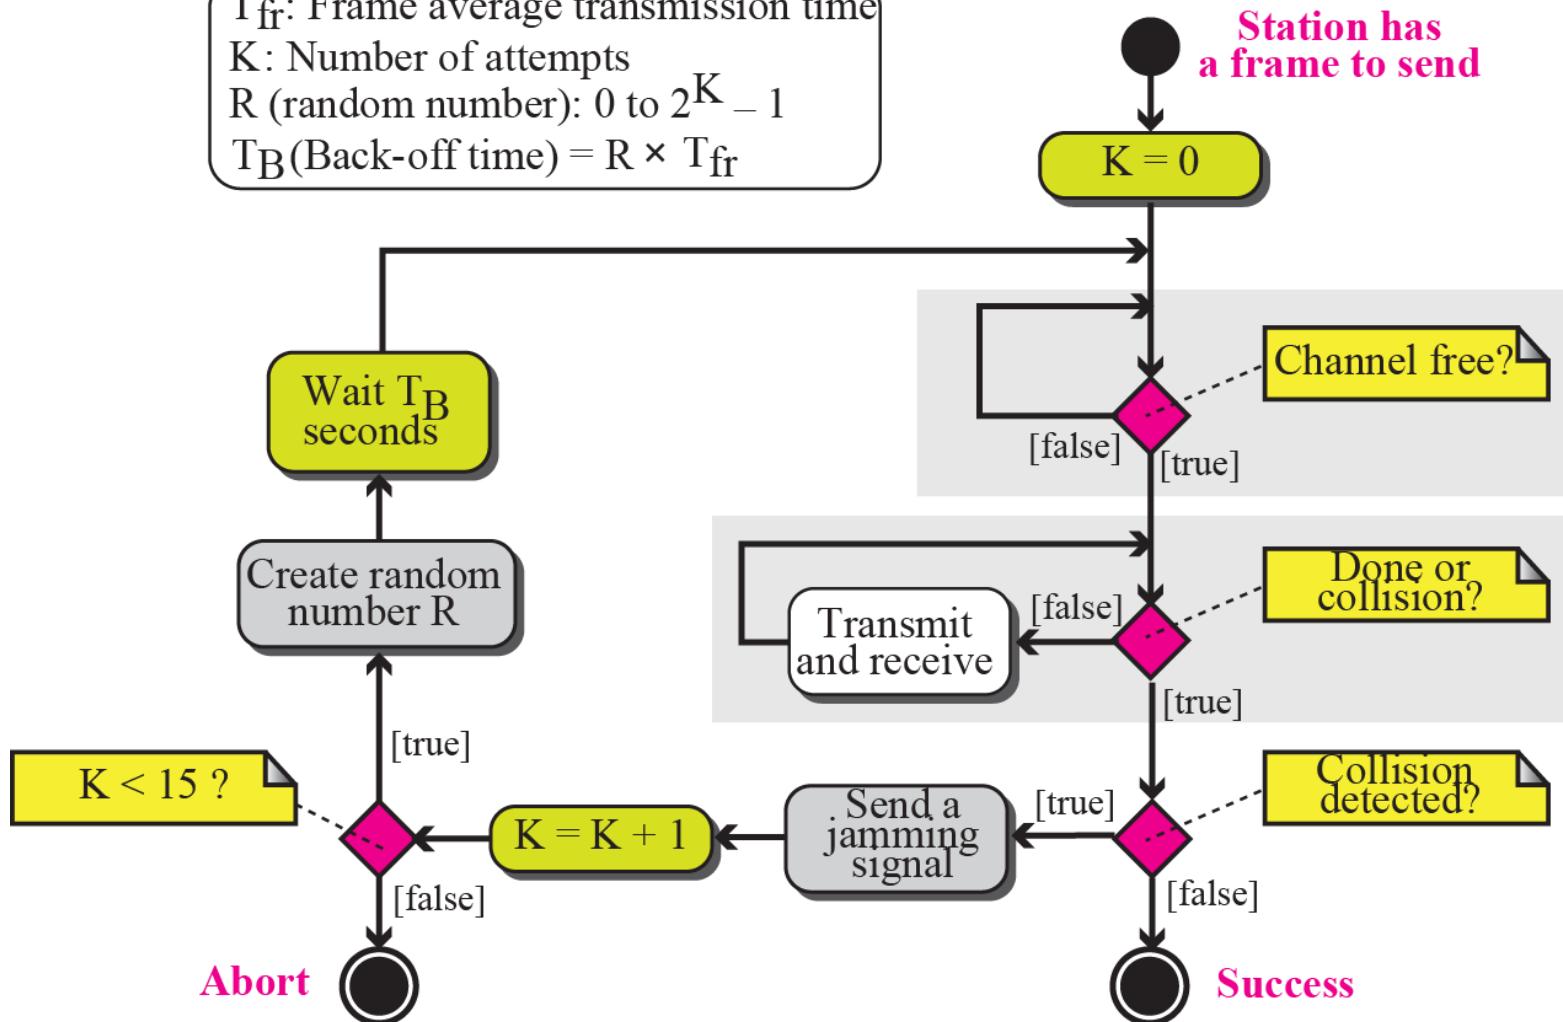



Table 3.1 *Summary of Standard Ethernet implementations*

<i>Characteristics</i>	<i>10Base5</i>	<i>10Base2</i>	<i>10Base-T</i>	<i>10Base-F</i>
Medium	Thick coax	Thin coax	2 UTP	2 Fiber
Maximum length	500 m	185 m	100 m	2000 m


Figure 3.10 Standard Ethernet implementation

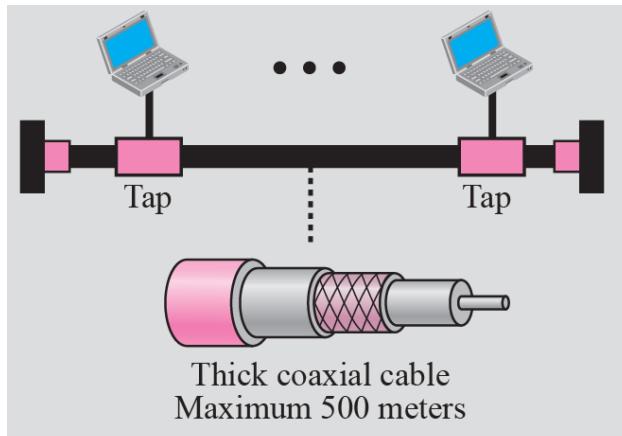


a. 10BASE5

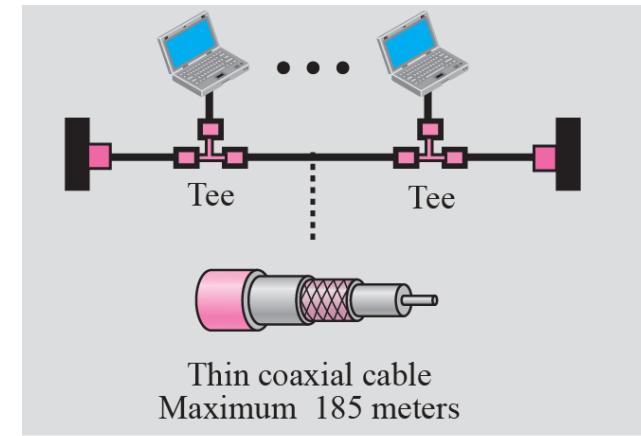

b. 10BASE2

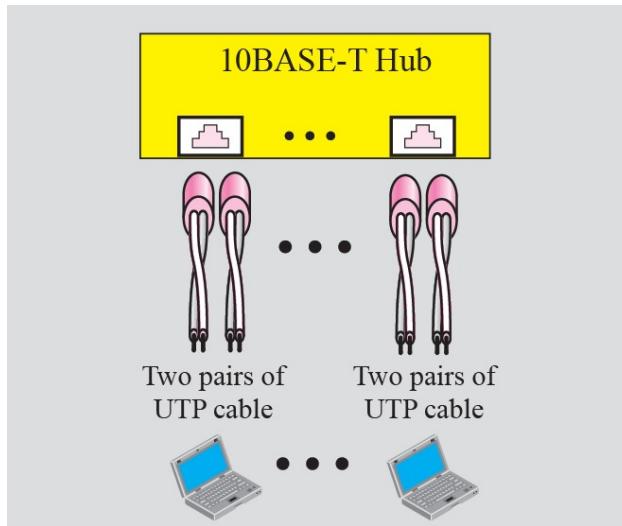

c. 10BASE-T

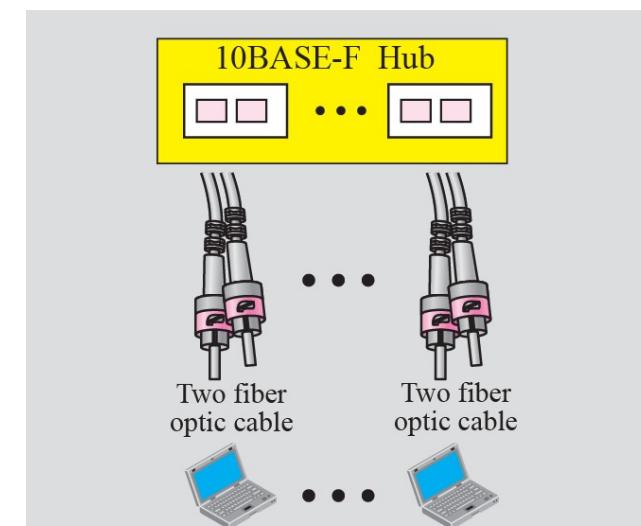


d. 10BASE-F


Table 3.2 *Summary of Fast Ethernet implementations*

<i>Characteristics</i>	<i>100Base-TX</i>	<i>100Base-FX</i>	<i>100Base-T4</i>
Media	STP	Fiber	UTP
Number of wires	2	2	4
Maximum length	100 m	100 m	100 m


Figure 3.11 *Fast Ethernet implementation*

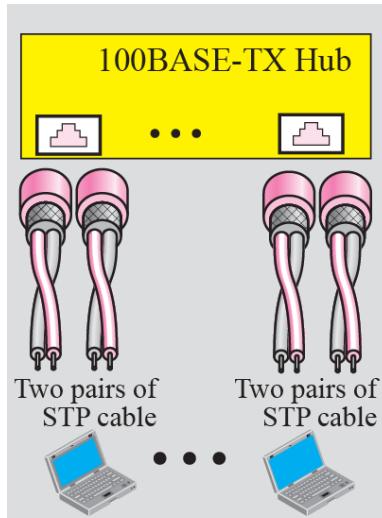

a. 100BASE-TX

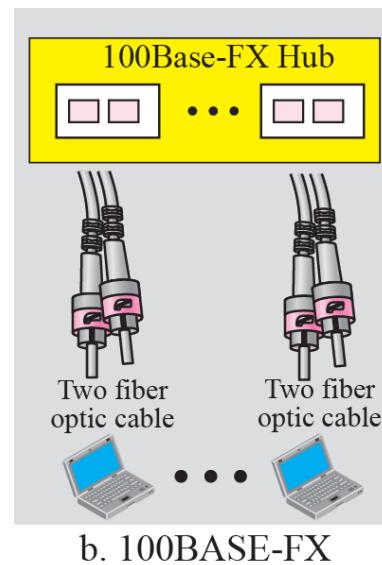


b. 100BASE-FX

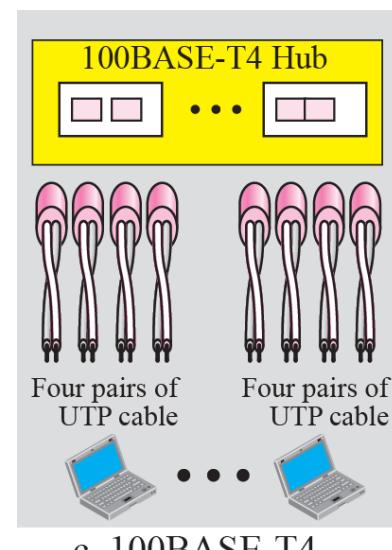

c. 100BASE-T4

Table 3.3 Summary of Gigabit Ethernet implementations

Characteristics	1000Base-SX	1000Base-LX	1000Base-CX	1000Base-T4
Media	Fiber short-wave	Fiber long-wave	STP	Cat 5 UTP
Number of wires	2	2	2	4
Maximum length	550 m	5000 m	25 m	100 m

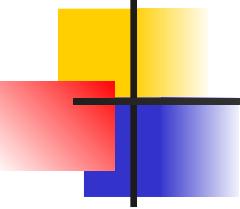

Note

In the full-duplex mode of Gigabit Ethernet, there is no collision; the maximum length of the cable is determined by the signal attenuation in the cable.

Figure 3.12 Gigabit Ethernet implementation

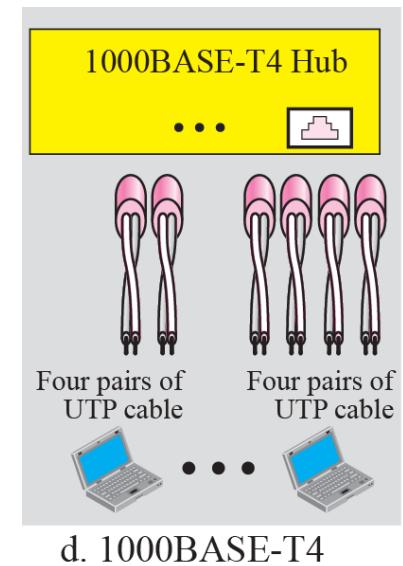
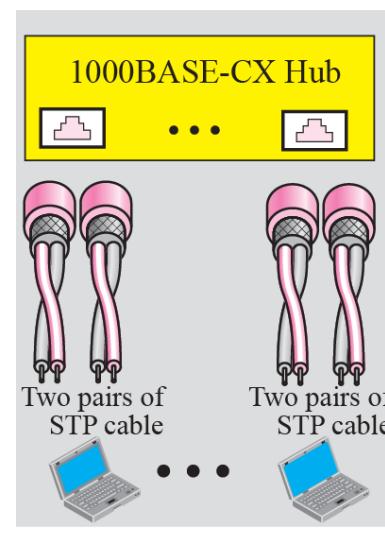
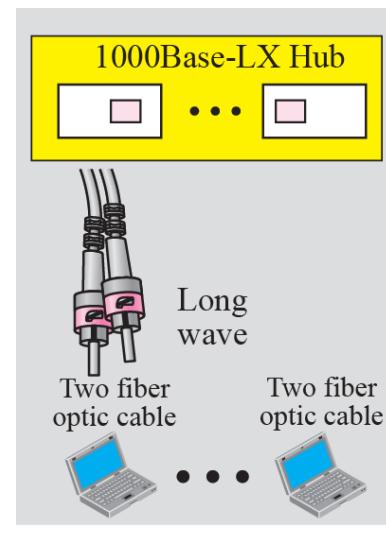
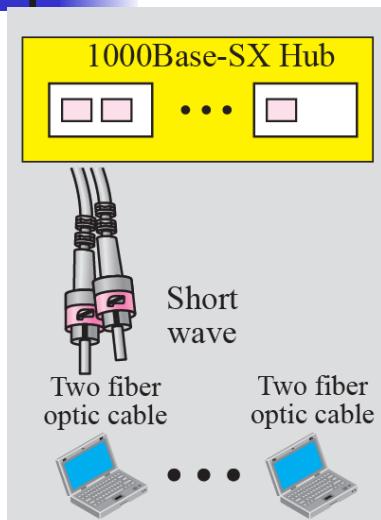


Table 3.4 *Ten-Gigabit Ethernet Implementation*

<i>Characteristics</i>	<i>10GBase-S</i>	<i>10GBase-L</i>	<i>10GBase-E</i>
Media	multi-mode fiber	single-mode fiber	single-mode fiber
Number of wires	2	2	2
Maximum length	300 m	10,000 m	40,000 m

3-2 WIRELESS LANS


Wireless communication is one of the fastest growing technologies. The demand for connecting devices without the use of cables is increasing everywhere. Wireless LANs can be found on college campuses, in office buildings, and in many public areas. In this section, we concentrate on two wireless technologies for LANs: IEEE 802.11 wireless LANs, sometimes called wireless Ethernet, and Bluetooth, a technology for small wireless LANs.

Topics Discussed in the Section

- ✓ IEEE 802.1
- ✓ MAC Sublayer
- ✓ Addressing Mechanism
- ✓ Bluetooth


Figure 3.13 Basic service sets (BSSs)

BSS: Basic service set

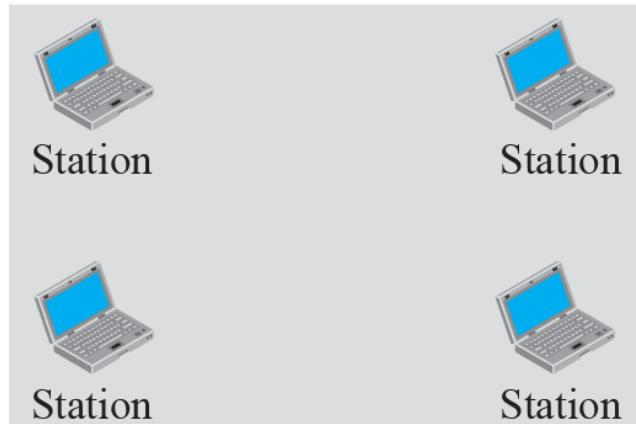

Ad hoc network (BSS without an AP)

AP: Access point

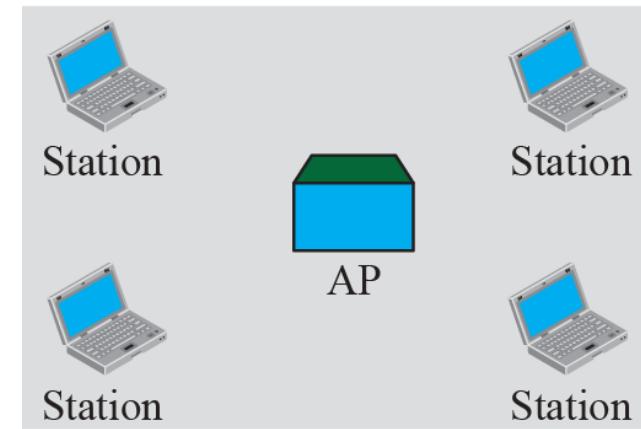

Infrastructure (BSS with an AP)

Figure 3.14 *Extended service sets (ESSs)*

ESS: Extended service set
BSS: Basic service set
AP: Access point

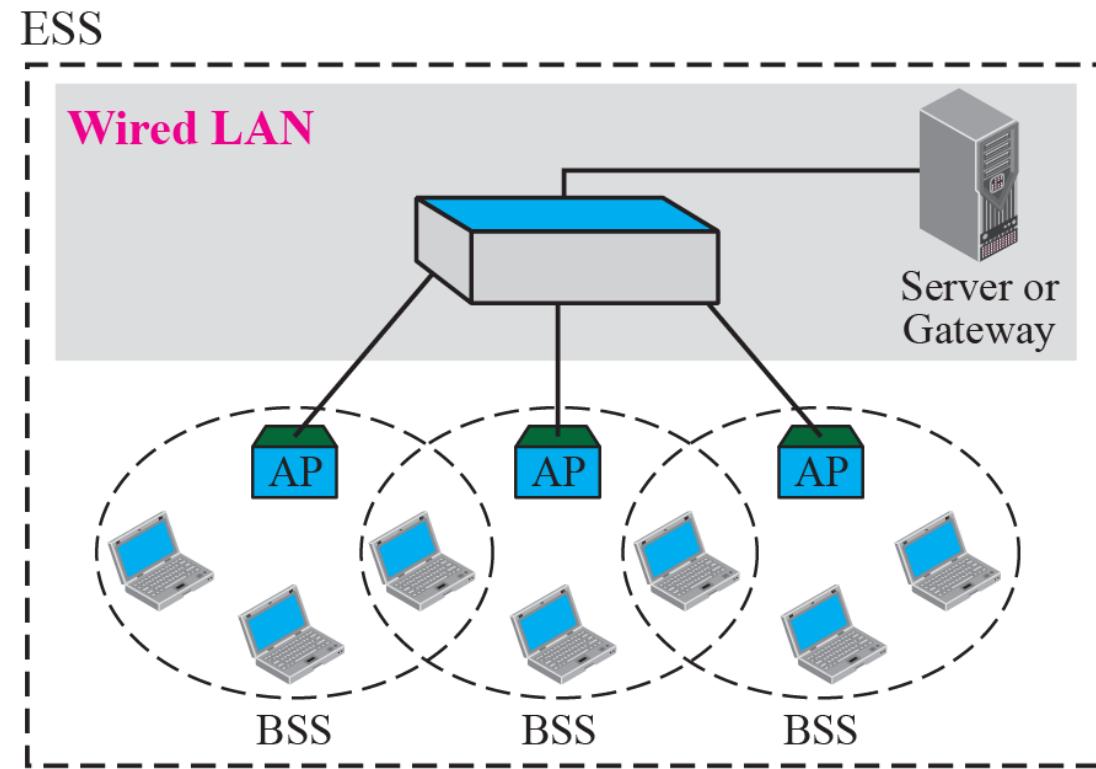


Figure 3.15 CSMA/CA flow diagram

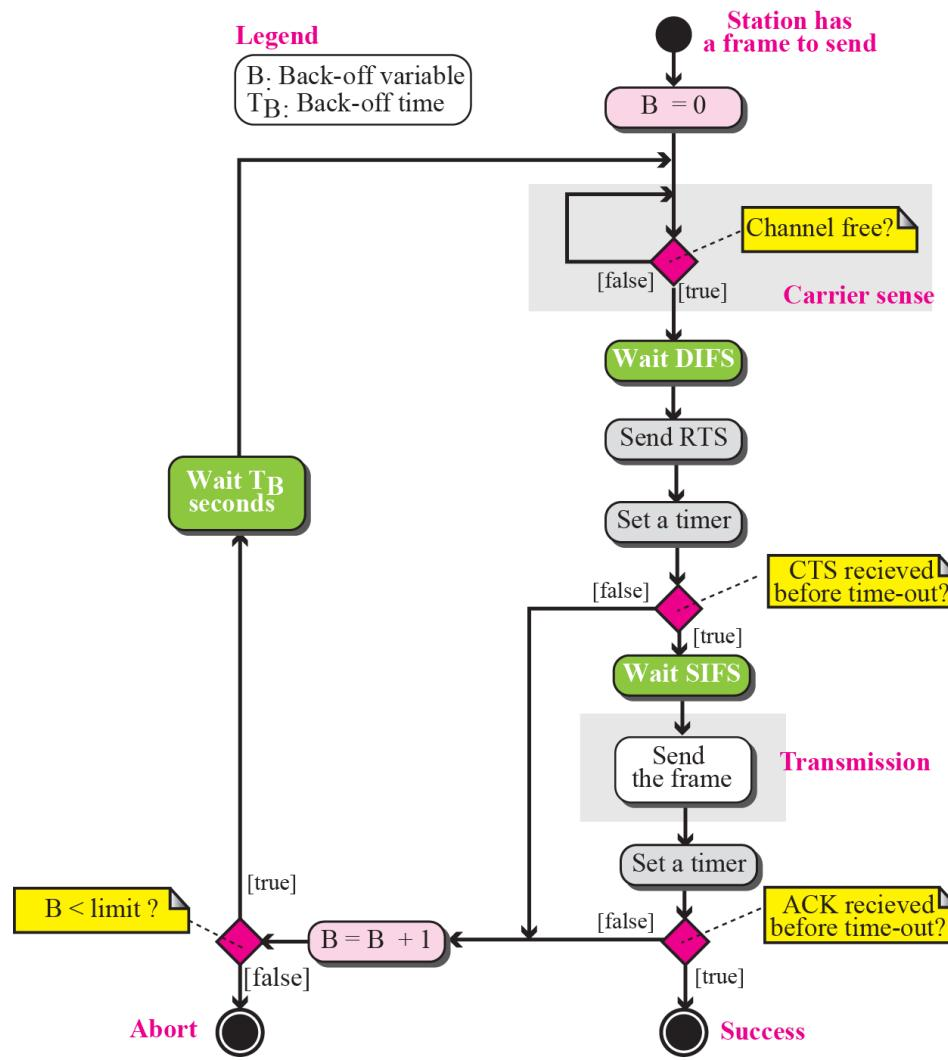


Figure 3.16 CSMA/CA and NAV

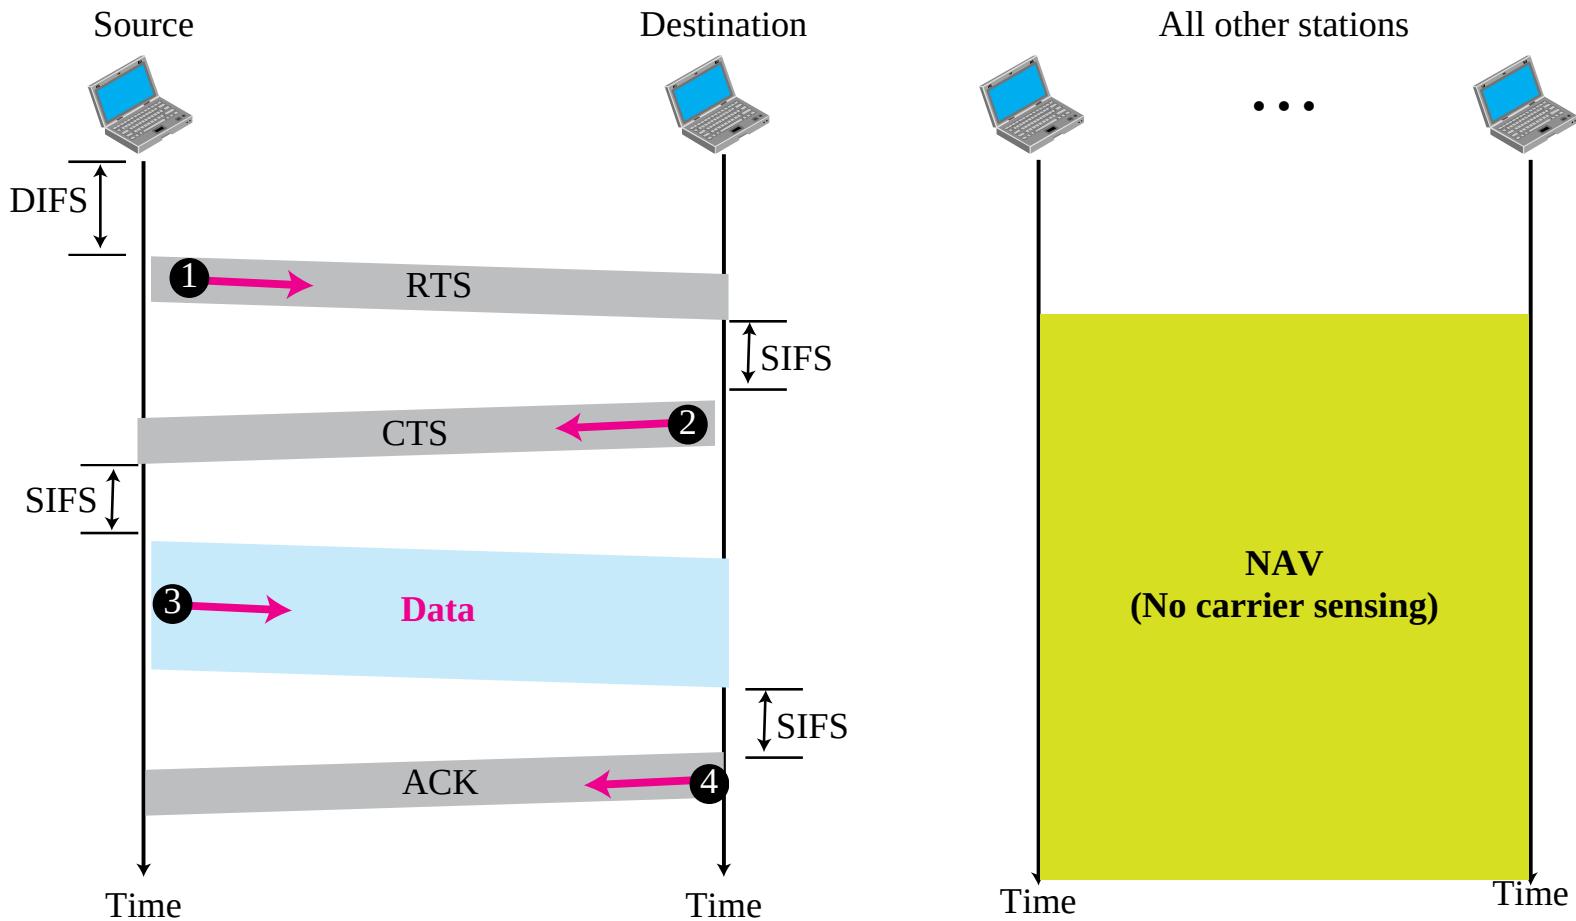


Figure 3.17 Frame format

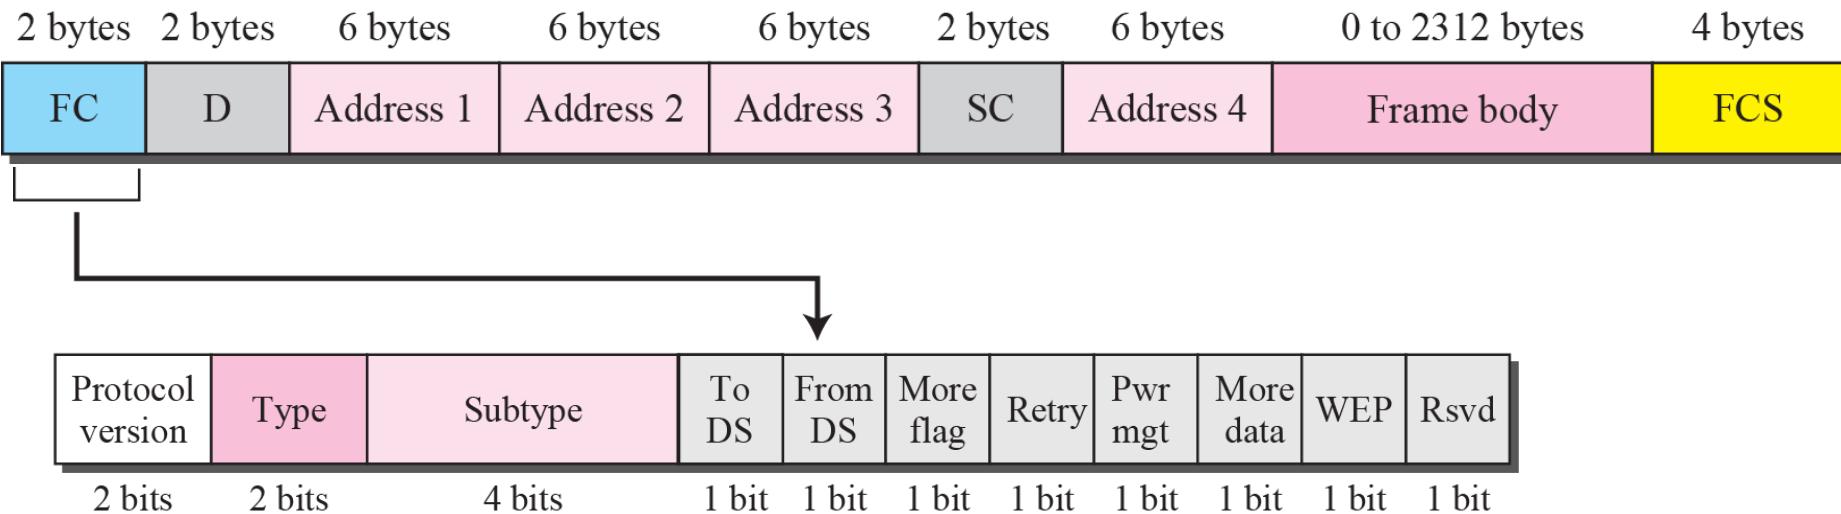


Table 3.5 *Subfields in FC field*

<i>Field</i>	<i>Explanation</i>
Version	Current version is 0
Type	Type of information: management (00), control (01), or data (10)
Subtype	Subtype of each type (see Table 3.6)
To DS	Defined later
From DS	Defined later
More flag	When set to 1, means more fragments
Retry	When set to 1, means retransmitted frame
Pwr mgt	When set to 1, means station is in power management mode
More data	When set to 1, means station has more data to send
WEP	Wired equivalent privacy (encryption implemented)
Rsvd	Reserved

Figure 3.18 Control frames

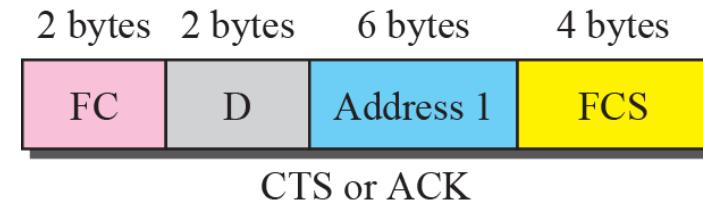
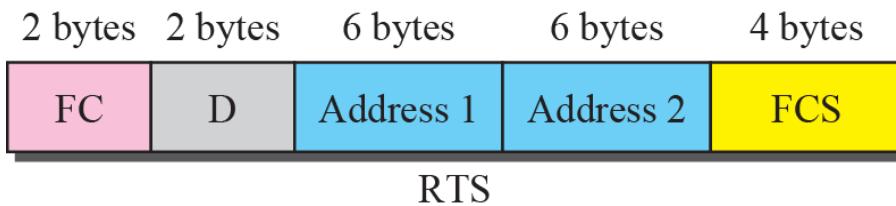



Table 3.6 *Values of subfields in control frames*


<i>Subtype</i>	<i>Meaning</i>
1011	Request to send (RTS)
1100	Clear to send (CTS)
1101	Acknowledgment (ACK)

Table 3.7 Addresses

To DS	From DS	Address 1	Address 2	Address 3	Address 4
0	0	Destination	Source	BSS ID	N/A
0	1	Destination	Sending AP	Source	N/A
1	0	Receiving AP	Source	Destination	N/A
1	1	Receiving AP	Sending AP	Destination	Source

Figure 3.19 *Hidden station problem*

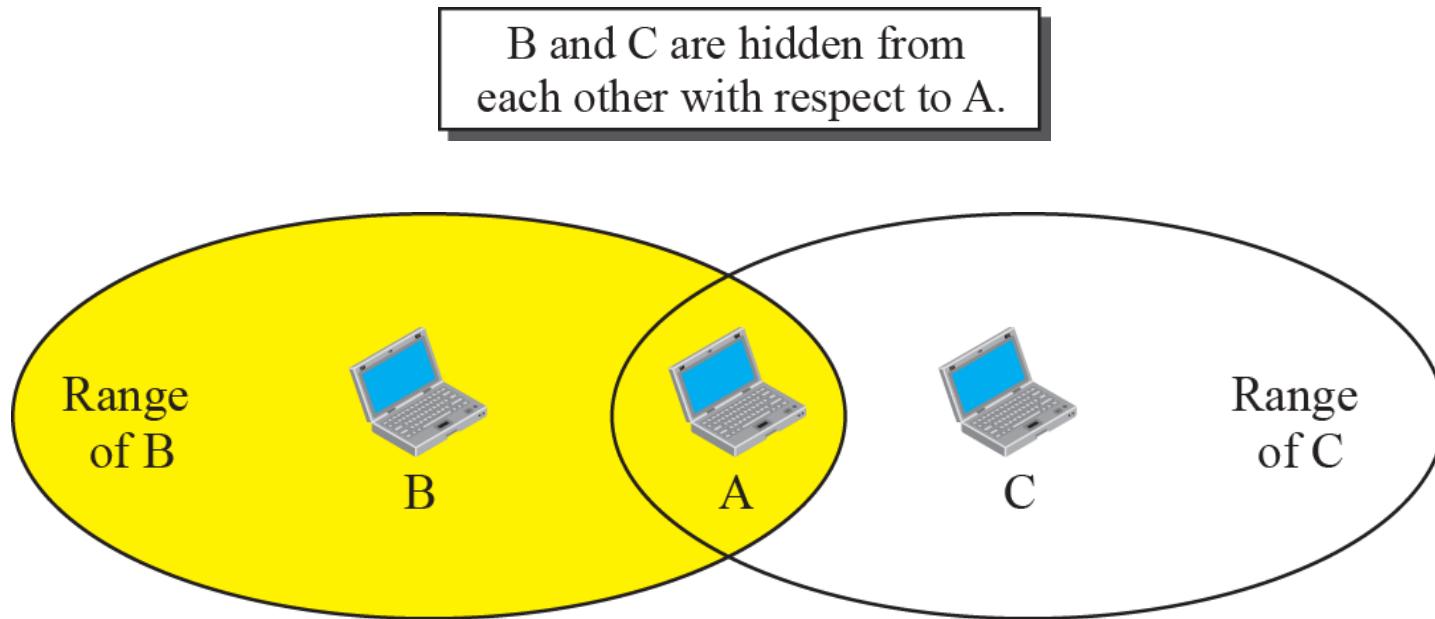

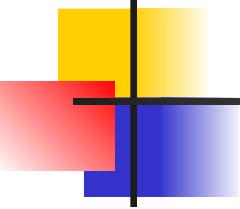

Note

The CTS frame in CSMA/CA handshake can prevent collision from a hidden station.

Figure 3.20 *Use of handshaking to prevent hidden station problem*

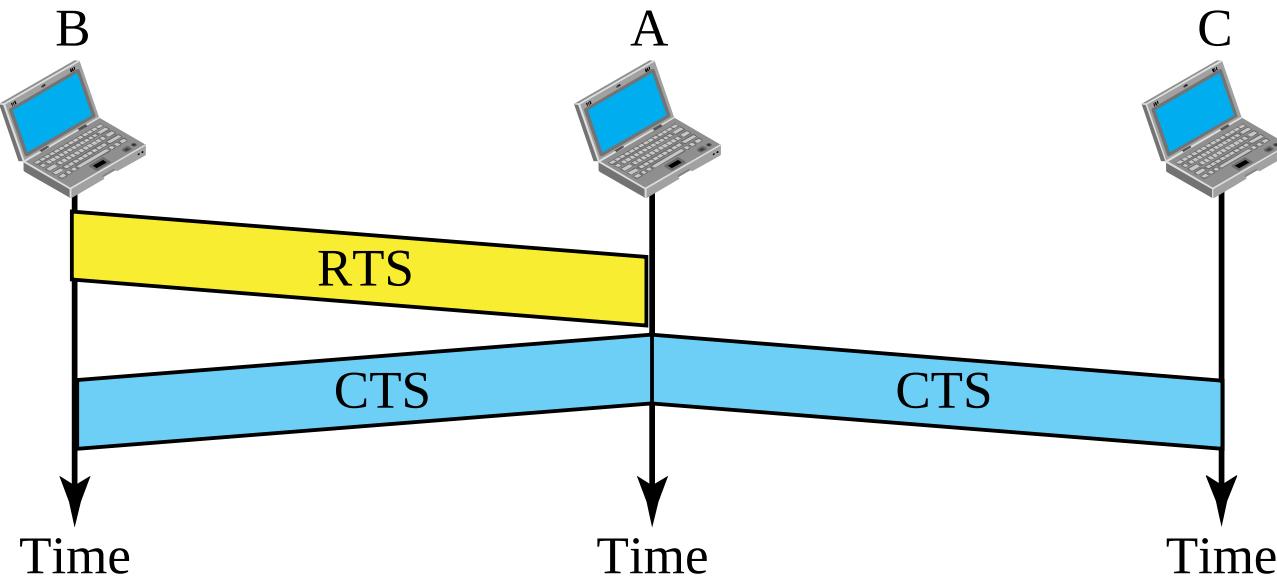


Figure 3.21 *Exposed station problem*

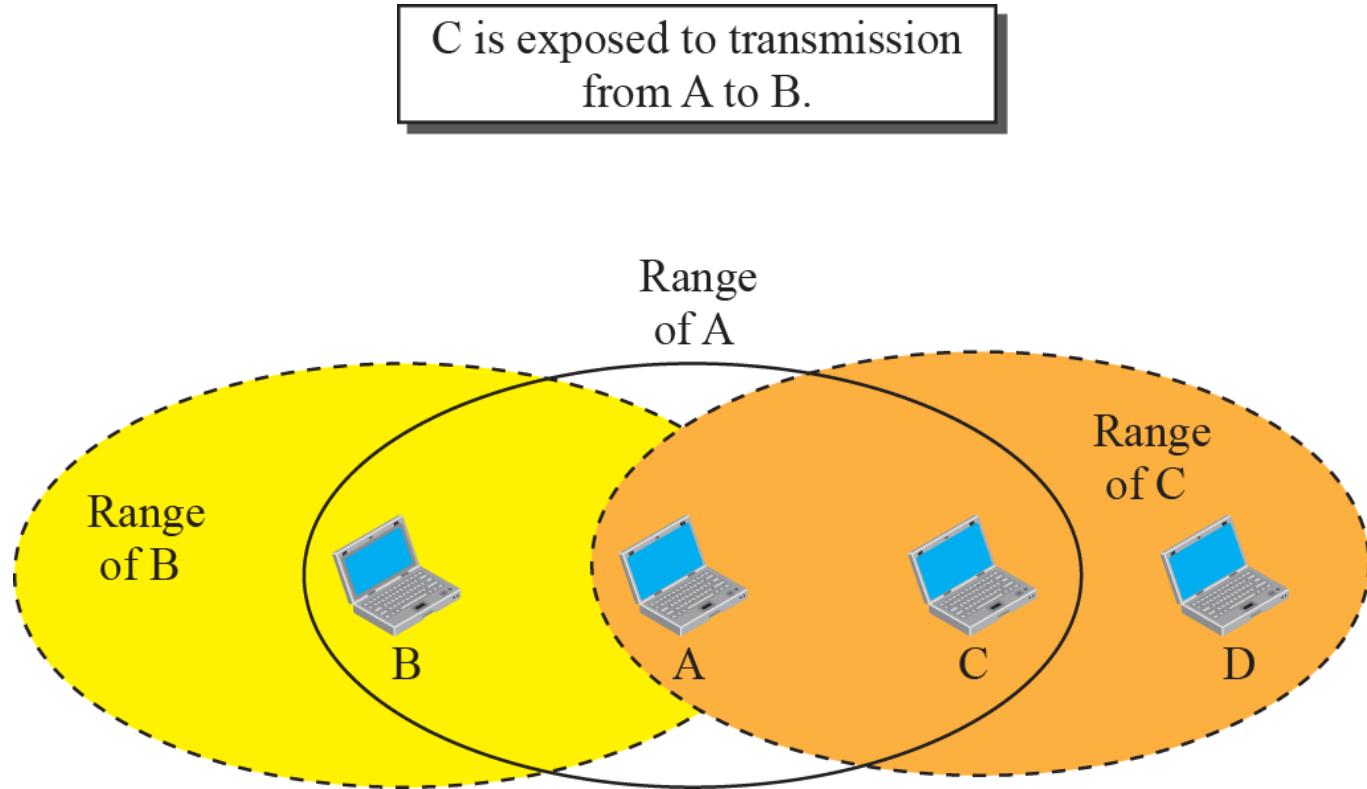


Figure 3.22 Use of handshaking in exposed station problem

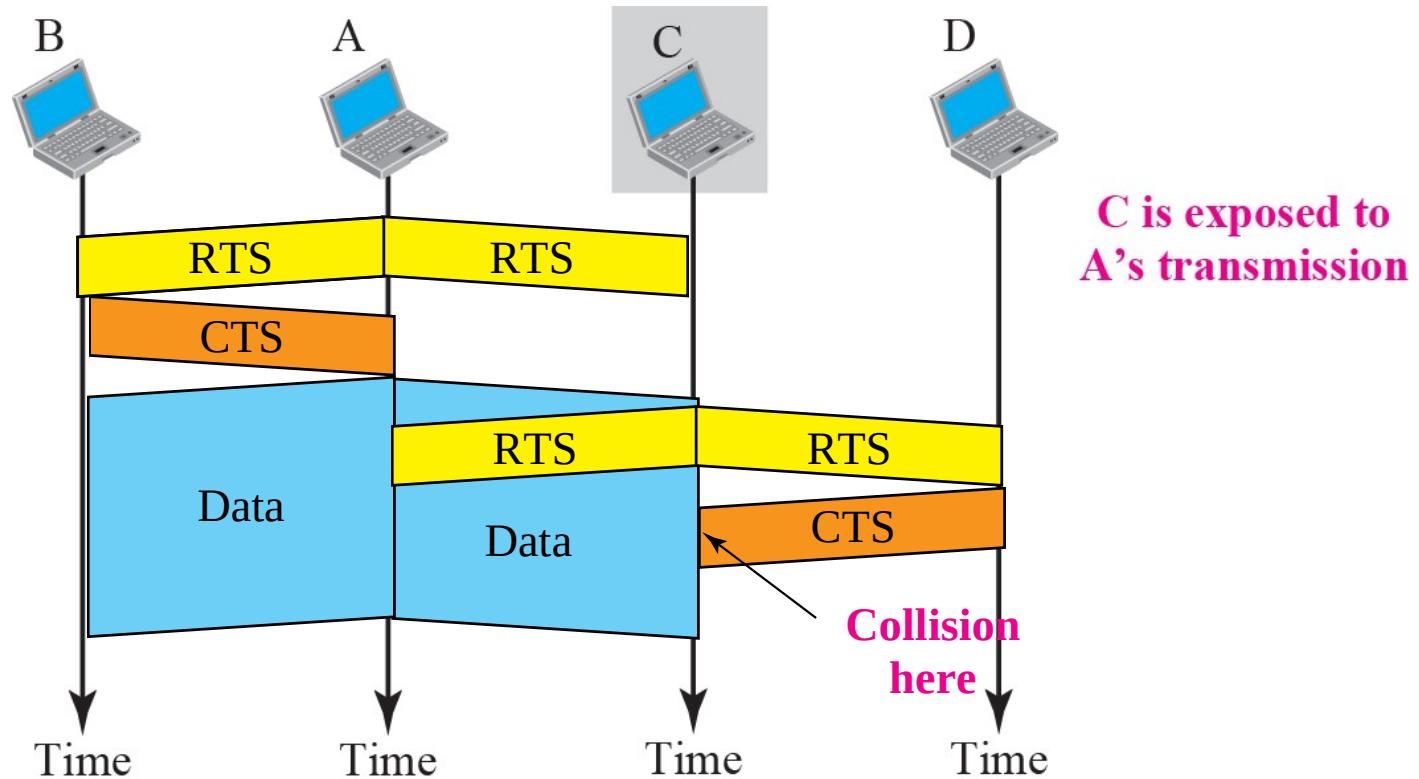


Figure 3.23 Piconet

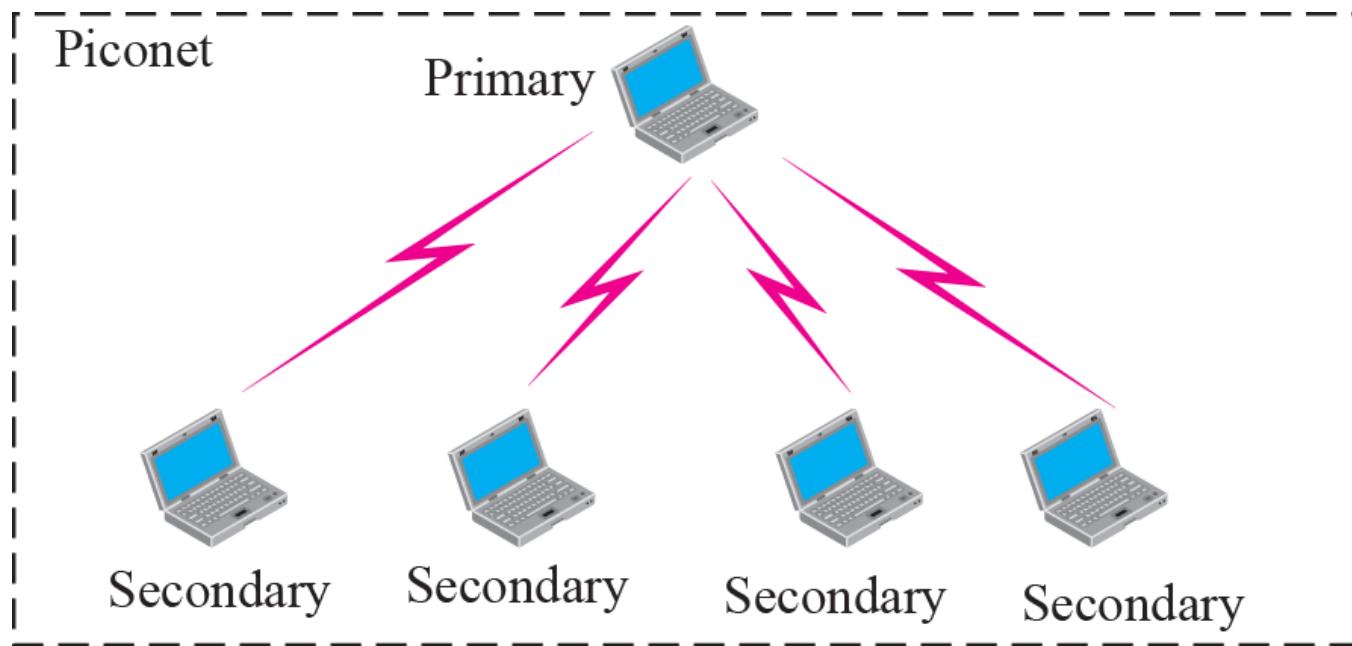


Figure 3.24 Scatternet

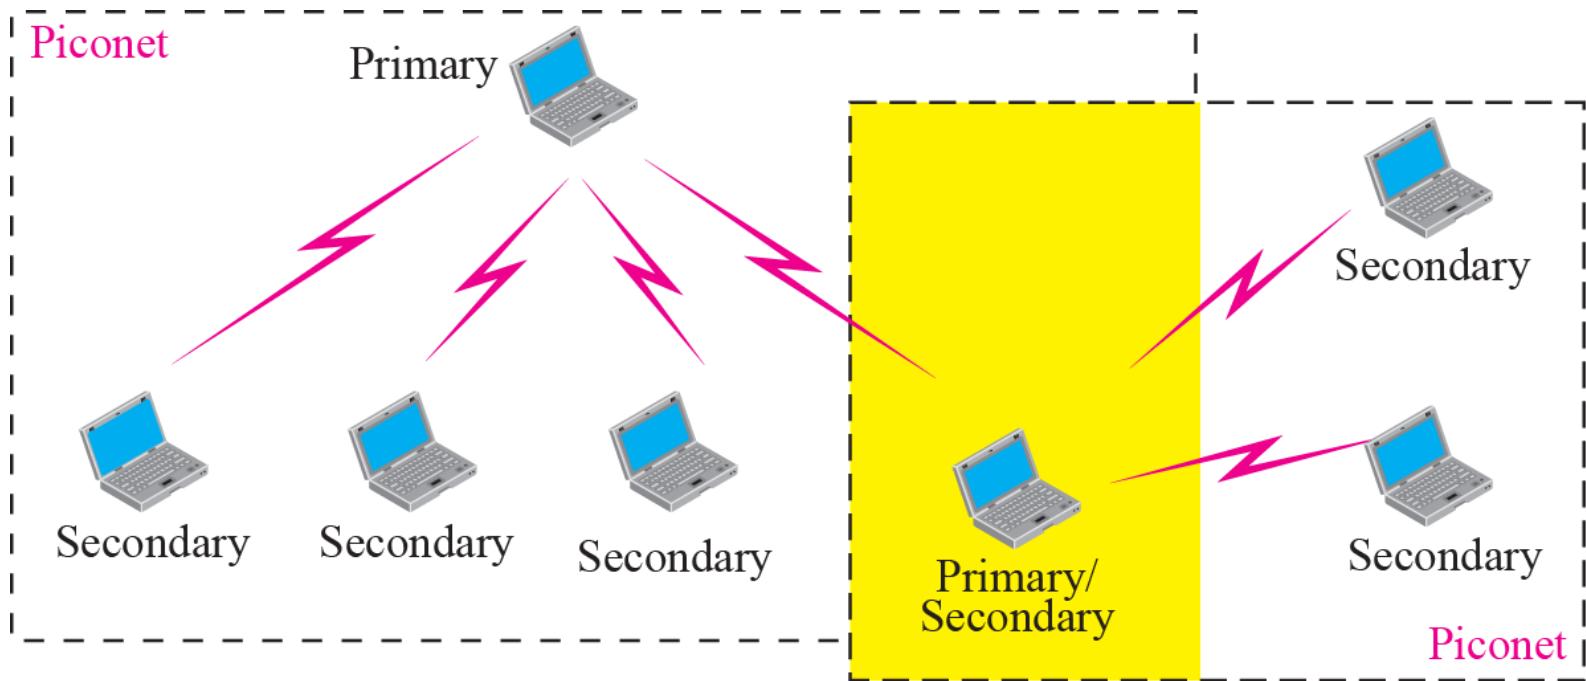


Figure 3.25 Frame format types

