

<b>Document Title</b>	AUTOSAR Diagnostic Extract Template
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	673
<b>Document Classification</b>	Standard

Document Status	Final	
Part of AUTOSAR Standard	Classic Platform	
Part of Standard Release	4.3.0	

	Document Change History					
Date	Release	Changed by	Description			
2016-11-30	4.3.0	AUTOSAR Release Management	<ul> <li>Support for OBD</li> <li>Support for J1939</li> <li>Support for Fim configuration</li> <li>Support for environmental conditions</li> <li>Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation</li> </ul>			
2015-07-31	4.2.2	AUTOSAR Release Management	Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation			
2014-10-31	4.2.1	AUTOSAR Release Management	Initial Release			



#### **Disclaimer**

This specification and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

#### Advice for users

AUTOSAR specifications may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the specifications for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such specifications, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.



# **Table of Contents**

1	Intro	duction		9
	1.1 1.2 1.3 1.4 1.5	1.1.1 1.1.2 1.1.3 1.1.4 1.1.5 1.1.6 1.1.7 Scope . Abbreviat Documer	OEM Application Developer ECU-Supplier Exchanging of Files Relationship to software-component Service Needs Recommendation and Hints Limitations tions At Conventions Tracing	9 10 11 12 13 14 15 16 18 20
2	Use	Cases		24
	2.1 2.2 2.3 2.4 2.5	Configura Configura 2.4.1 2.4.2 Configura 2.5.1	ation of DCM ation of DEM	24 24 25 27 27 28 29
3	Con	2.5.2 ceptual Bac	J1939 Diagnostic Content modeled in the Diagnostic Extract	29 30
3	3.1 3.2 3.3	Definition Abstraction	of relevant Diagnostic Elements	30 30 31 31 31
4	Con	nmon Meta	Model Elements	31
	4.1 4.2 4.3 4.4 4.5 4.6	Data Ider 4.2.1 4.2.2 4.2.3 Textual D Diagnosti Diagnosti	on htifier vs. Routine vs. Data Element Usage of SwDataDefProps Definition of Arrays Definition of textual Strings ocumentation ic Contribution ic Protocol ic Common Properties	31 32 39 45 46 46 50 54 59





5	Diag	nostic S	ervices	66
	5.1	Introd	uction	66
	5.2	Servic	ce Instance vs. Service Class	66
	5.3	Acces	s Permission, Session, Security Level	69
		5.3.1	Introduction to Access Permission	69
		5.3.2	Prioritization of Access Permission	74
	5.4	Enviro	onmental Conditions for the Execution of Diagnostic Services	77
		5.4.1	Environmental Condition Formula	79
		5.4.2	Atomic Conditions	81
		5.4	4.2.1 Data Condition	82
		5.4	4.2.2 Mode Condition	82
	5.5	Diagn	ostic Services supported by AUTOSAR	86
		5.5.1	DataByldentifier	87
		5.5.2	IOControl	92
		5.5.3	EcuReset	94
		5.5.4	ClearDiagnosticInformation	97
		5.5.5	MemoryByAddress	99
		5.5.6	CommunicationControl	111
		5.5.7	DynamicallyDefineDataIdentifier	116
		5.5.8	ReadDataByPeriodicIdentifier	119
		5.5.9	ControlDTCSetting	122
		5.5.10	ResponseOnEvent	123
		5.5.11	ReadDTCInformation	128
		5.5.12	RoutineControl	131
		5.5.13	SecurityAccess	136
		5.5.14	SessionControl	139
		5.5.15	RequestFileTransfer	140
	5.6	OBD [	Diagnostic Services supported by AUTOSAR	142
		5.6.1	OBD Mode 0x01 (RequestCurrentPowertrainDiagnosticData)	145
		5.6.2	OBD Mode 0x02 (RequestPowertrainFreezeFrameData)	146
		5.6.3	OBD Mode 0x03 / 0x07 (RequestEmissionRelatedDiagnos-	
			ticTroubleCodes)	148
		5.6.4	OBD Mode 0x04 (ClearResetEmissionRelatedDiagnosticIn-	
			formation)	150
		5.6.5	OBD Mode 0x06 (RequestOnBoardMonitoringTestResults) .	151
		5.6.6	OBD Mode 0x08 (RequestControlOfOnBoardDevice)	153
		5.6.7	OBD Mode 0x09 (RequestVehicleInformation)	155
		5.6.8	OBD Mode 0x0A (RequestEmissionRelatedDiagnosticTrou-	
			bleCodesPermanentStatus)	158
	5.7		Diagnostic Services for supporting WWH-OBD	160
	5.8	Diagn	ostic Service Mapping	162
		5.8.1	Diagnostic Service Data Mapping	166
		5.8.2	Diagnostic Service Software Mapping	170
6	Diag	nostic E	vent Handling	174
	6.1	Introd	uction	174





	6.2	DiagnosticEvent	175
	6.3	DiagnosticTroubleCode	183
	6.4	DiagnosticExtendedDataRecord	198
	6.5	DiagnosticFreezeFrame	200
	6.6	DiagnosticCondition	201
	6.7	DiagnosticConditionGroup	203
	6.8	DiagnosticMapping	204
		6.8.1 DiagnosticEvent to DtcUds Mapping	206
		6.8.2 DiagnosticEvent to DiagnosticOperationCycle Mapping	206
		6.8.3 DiagnosticEvent to DebounceAlgorithm Mapping	207
		6.8.4 DiagnosticEvent to EnableConditionGroup Mapping	214
		6.8.5 DiagnosticEvent to StorageConditionGroup Mapping	215
		6.8.6 DiagnosticEvent to Port Mapping	216
		6.8.7 DiagnosticOperationCycle to Port Mapping	218
		6.8.8 DiagnosticEnableCondition to Port Mapping	219
		6.8.9 DiagnosticStorageCondition to Port Mapping	220
	0.0	6.8.10 Provided Data Mapping	221
	6.9	DiagnosticOperationCycle	
	6.10		
	6.11 6.12		224 226
	6.13	<b>3</b>	227
	0.13	6.13.1 Dem Configuration for OBD-II	
		6.13.2 Dem Configuration for WWH-OBD	234
_	_	-	
7	Fund	ctional Inhibition	235
	7.1	Introduction	235
	7.2	Alias Events	235
	7.3	Function Identifier	
	7.4	Mapping between Inhibition Source and Diagnostic Event	
	7.5	Alias Event Mapping	237
	7.6	Mapping of Function Identifiers to the corresponding Monitors	245
8	Diag	gnostics on J1939	247
	8.1	Introduction	247
	8.2	Suspect Parameter Number	248
	8.3	J1939Dcm-related Modeling	249
	8.4	Dem-related Modeling	249
	8.5	Mapping between Software-Components and Controller Applications	253
^			
Α	wen	tioned Class Tables	254
В	Histo	ory of Constraints and Specification Items	284
	B.1	Constraint History of this Document according to AUTOSAR R4.2.1	284
		B.1.1 Added Specification Items in R4.2.1	284
		B.1.2 Added Constraints in R4.2.1	287
	B.2	Constraint History of this Document according to AUTOSAR R4.2.2	289





		B.2.1	Added Traceables in 4.2.2	289
		B.2.2	Changed Traceables in 4.2.2	289
		B.2.3	Deleted Traceables in 4.2.2	289
		B.2.4	Added Constraints in 4.2.2	289
		B.2.5	Changed Constraints in 4.2.2	290
		B.2.6	Deleted Constraints in 4.2.2	290
	B.3	Constrair	nt History of this Document according to AUTOSAR R4.3.0	290
		B.3.1	Added Traceables in 4.3.0	290
		B.3.2	Changed Traceables in 4.3.0	291
		B.3.3	Deleted Traceables in 4.3.0	291
		B.3.4	Added Constraints in 4.3.0	
		B.3.5	Changed Constraints in 4.3.0	
		B.3.6	Deleted Constraints in 4.3.0	293
С	Gloss	sary		293
D	Mode	eling of Inst	tanceRef	296
	D.1	Introducti	ion	296
	D.2			297
_	Lloots	·		200
Е	Upstr	ream Mapp	oing	302
	E.1	Introducti	on	302
	E.2	Dcm		302
	E.3	Dem		463
	E.4	Fim		506
	E.5	J1939 Do	cm	509
F	Splita	able Eleme	nts in the Scope of this Document	520
			in the Scope of this Document	521



# **Bibliography**

- [1] Specification of RTE Software AUTOSAR\_SWS\_RTE
- [2] Layered Software Architecture
  AUTOSAR EXP LayeredSoftwareArchitecture
- [3] Specification of ECU Configuration AUTOSAR TPS ECUConfiguration
- [4] ASAM MCD 2D ODX http://www.asam.net ASAM MCD-2D ODX v2.2.0.pdf
- [5] XML Schema Production Rules
  AUTOSAR TPS XMLSchemaProductionRules
- [6] System Template AUTOSAR\_TPS\_SystemTemplate
- [7] Specification of ECU Configuration Parameters (XML) AUTOSAR MOD ECUConfigurationParameters
- [8] Software Component Template AUTOSAR\_TPS\_SoftwareComponentTemplate
- [9] Basic Software Module Description Template
  AUTOSAR TPS BSWModuleDescriptionTemplate
- [10] Specification of Diagnostic Communication Manager AUTOSAR\_SWS\_DiagnosticCommunicationManager
- [11] Specification of Diagnostic Event Manager AUTOSAR SWS DiagnosticEventManager
- [12] Standardization Template AUTOSAR\_TPS\_StandardizationTemplate
- [13] Requirements on Diagnostic Extract Template AUTOSAR\_RS\_DiagnosticExtractTemplate
- [14] Specification of Function Inhibition Manager AUTOSAR SWS FunctionInhibitionManager
- [15] SAE J1939 Top Level Document
- [16] Unified diagnostic services (UDS) Part 1: Specification and requirements (Release 2006-12) http://www.iso.org
- [17] Road vehicles End-of-life activation of on-board pyrotechnic devices Part 2: Communication requirements



http://www.iso.org

- [18] Road vehicles Communication between vehicle and external equipment for emission-related diagnostic - Part 5: Emission-related diagnostic services. http://www.iso.org
- [19] Road vehicles Implementation of World-Wide Harmonized On-Board Diagnostics (WWH-OBD) communication requirements Part 3: Common message dictionary http://www.iso.org
- [20] SAE J1939-73 Application Layer Diagnostics
- [21] Software Process Engineering Meta-Model Specification http://www.omg.org/spec/SPEM/2.0/
- [22] Generic Structure Template
  AUTOSAR\_TPS\_GenericStructureTemplate



## 1 Introduction

#### 1.1 Overview

The distributed nature of an AUTOSAR ECU development requires an optimized capturing of information. In particular, diagnostic information (i.e. DEM and DCM configuration) shall be captured only once by the person with the best knowledge and therefore being able to take responsibility better than one centralized individual.

In the configuration approach before the advent of the <code>DiagnosticExtract</code>, the Basic Software Modules DCM and DEM are entirely configured centrally. During integration, all SW-Cs above the RTE [1] (Application Software) introduce ports to be connected to the BSW modules [2]. Additionally, SW-Cs express needs which shall be fulfilled by the BSW.

The market shows a high demand for transferring diagnostic demands of the OEM-specific configuration process to their tier-1 suppliers.

In the past, due to the absence of integral options, many different file formats like ODX or EcuC [3] are often used. But neither ODX nor EcuC is well suited to transfer this information.

For example, ODX [4] lacks in fault memory details and EcuC (which was never designed for becoming the vehicle for data exchange between different organizations) has a very generic nature that renders the enforcement of a strict model formalization very difficult.

On top of that, the integration of EcuC definitions into an existing configuration (especially the PDUs) cannot be fully automated.

Therefore, the obvious solution approach has been to define a new standardized AUTOSAR exchange format on diagnostic functionality that can be used similar to a System Description, formalized as an ARXML [5] file.

In this spirit, the configuration of diagnostic functionality becomes similar to the configuration of the communication part within the System Description [6].



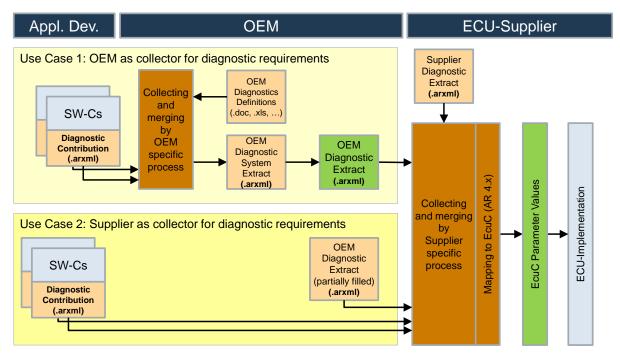


Figure 1.1: Scope of this document in the ECU Development work-flow

Figure 1.1 shows the configuration process of diagnostics for two generalized use cases. This process involves three parties:

- OEM or diagnostic requester
- Application Developer or Application Developer
- ECU-Supplier or integrator

The specific role of these contributors to the diagnostic extract is in detail explained in the following sub-chapters.

#### 1.1.1 OEM

The **OEM** or requester of diagnostic data uses the <code>DiagnosticExtract</code> to define the diagnostic interfaces of one or multiple ECUs. It may also define some <code>InternalBehaviors</code> as requirements for the **ECU-Supplier** or **Application Developer** 

- Defines the values of the DTCs
- Defines the UDS services and sub-services supported by the ECUs
- Defines the required events needed by a specific composition implemented by an Application Developer

**NOTE:** This list represents an example; this document does not define a specific ownership of each element.



In the first use case, the DiagnosticExtract is used to exchange information which is transformed into the EcuC configuration (M2 to M1 mapping, see also [3] and [7]).

Second, the **OEM** uses the <u>DiagnosticExtract</u> to document requirements to be implemented by a supplier. These requirements are expressed in textual language and can not be mapped directly to any EcuC configuration parameters (no M2 to M1 mapping possible).

#### 1.1.2 Application Developer

The Application Developers implement their **software-components** with the corresponding **software-component description**. The role "Application Developer" can be assumed by both an OEM and a supplier. In other words, both OEM and supplier may contribute application software to a given ECU.

With the introduction of this concept, the Application Developer has the possibility to provide diagnostic information relevant to the software-components as part of the DiagnosticExtract.

The Application Developer may also receive some input as requirement from the **OEM** within the <code>DiagnosticExtract</code> in textual form as for example:

- Definition of the content of a specific ReadDataByIdentifier implemented by this software-component
- Definition of the events needed for this software-component

**NOTE:** Only as example, this document does not define a specific ownership of each element.

In the first use case, the Application Developer defines the parameters of a specific ReadDataByIdentifier, i.e. the content of the diagnostic request but not the DID itself. The DID of this command will usually be defined by the **OEM**.

Secondly, the software-component events including information like Debouncing and OperationCycle may be defined by the **Application Developer**. The **Application Developer**may also define events and diagnostic jobs which are not needed by a specific **OEM** but for another one.

Suppliers may use the same software for multiple **OEMs** and need to reuse it. This implies that some <code>DiagnosticExtract</code> information coming from a software-component may be ignored during the integration if not needed for a specific project.

#### 1.1.3 ECU-Supplier

The **ECU-Supplier** or integrator receives one or several <code>DiagnosticExtract</code> files from the **OEM** and from multiple **Application Developers**. The main goal of the **In-**



**tegrator** is to integrate all delivered DiagnosticExtract and to generate the EcuC configuration from it.

Since this concept does not define a specific ownership for each element like DIDs, parameters of a UDS service, Events, Sessions, etc. the integrator has to ensure that the complete information is still valid after merging it.

- Mapping of DTCs to Events
- Merge of Events
- Mapping of services

Some DTCs may already be mapped to events - especially in cases where both come from the same party. But if the DTCs are defined by the **OEM** and the SW implemented by other supplier acting as an **Application Developer** the integrator has to ensure that both are mapped together.

In some cases, an Event may be defined multiple times. An **OEM** defines the Events which shall be implemented by an **Application Developer**. A Supplier implements a software-component which will be used in multiple projects and which also detects this type of error and also defines this same event.

Both events may have different naming but the same meaning. The integrator has to detect this redundancy during the integration and merge them together.

In another case, the **OEM** requires a specific ReadDataByIdentifier and an **Application Developer** implements it. If the implementation is performed for one specific project only, the **Application Developer** may map the DID from the **OEM** to the already defined job in their software-component.

In other cases in which the **Application Developer** implements a generic diagnostic job, it will be a task of the **ECU-Supplier** to merge this information and to map the jobs to the corresponding DID.

#### 1.1.4 Exchanging of Files

During an ECU development project, the three main roles (OEM, Application Developer, ECU Integrator) exchange <code>DiagnosticExtract</code> files. The timing and frequency of exchanges and the content in each of these exchanged files is highly dependent on the individual project setup and situation.

Therefore, the <code>DiagnosticExtract</code> format has been designed to allow for gradual enrichment of definitions contributed at largely arbitrary points in time by the different roles in order to meet the needs of "Decentralized Configuration".

For any exchange path between any two roles, the same file format based on the <code>DiagnosticExtract</code> template is used. It is then up to a company specific process and tooling to merge the collected <code>DiagnosticExtract</code> files while resolving conflicts (contradictions, redundancies etc.).



As final result, a consistent and complete DiagnosticExtract file is available which is input to derivation of the configuration for the diagnostic modules of the Basic Software.

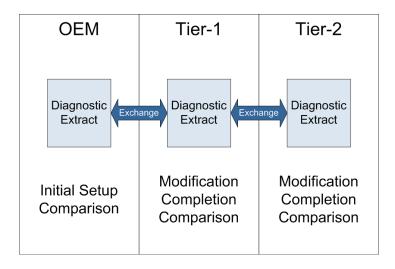


Figure 1.2: Exchange of diagnostic configuration between OEM, Tier-1, and Tier-2

Even after the DiagnosticExtract has been fully integrated and is ready to go for deriving the configuration of the diagnostic stack on EcuC level it is still foreseen to feed it back to e.g. an OEM.

In this case the OEM has the ability to review the configuration of the diagnostic stack on the level of the diagnostic extract.

At some point, this information may also be taken to (directly or via indirection of other formats) create a configuration of a diagnostic client.

#### 1.1.5 Relationship to software-component Service Needs

Before the introduction of the Diagnostic Extract, Service Needs were used to describe diagnostic requirements on software-component level. These configuration requirements are referenced to the related BSW module DCM or DEM in order to provide the corresponding configuration on BSW level.

The usage of Service Needs is only possible on Atomic software-component level whereas the assignment of diagnostic demands must be possible on Composition level.

The software-component Service Needs within the software-component Description are still to be used along with the DiagnosticExtract in order to annotate the software-component ports which are relevant for further mapping and handling as defined by the DiagnosticExtract.

From software-component Developer's perspective, the <code>DiagnosticExtract</code> is therefore used partially as substitution and partially as extension of the <code>software-</code>



component Service Needs. The reasoning for "substitution" is the avoidance of redundant diagnostic definitions.

Since some diagnostic properties potentially definable by software-component Developers are not covered in software-component Service Needs, the DiagnosticExtract can also be viewed as "extension" to the original purpose of software-component Service Needs.

#### 1.1.6 Recommendation and Hints

Multiple parties may have different understanding of which parts shall be provided by each one. There is no defined rule to indicate who is responsible for each part. At the end, it is the **ECU-Supplier** in his role as integrator who has to ensure that all mappings are done and that the ECU runs as expected by the **OEM**.

In case the **OEM** does not have his own diagnostic requirements, the **ECU-Supplier** has to provide the complete <code>DiagnosticExtract</code>. In this case, the **OEM** may only receive the <code>DiagnosticExtract</code> as part of the delivery. The process itself how the parties work with this format is not defined within this specification.

Figure 1.1 shows a recommended way how to handle the <code>DiagnosticExtract</code> between the different parties. In use case 1, some software-components are implemented by the **OEM** (or by a Supplier of the OEM) and the first merging of <code>DiagnosticExtract</code> data occurs at the **OEM**.

In use case 2, the **OEM** provides the diagnostic requirements via <code>DiagnosticExtract</code> and multiple **Application Developer**provide information related to their implementation, the merging is performed completely by the **ECU-Supplier**.

Also a combination of use cases 1 and 2 is allowed. Also the **ECU-Supplier** may implement some part of the SW inclusive their corresponding <code>DiagnosticExtract</code>.

#### 1.1.7 Limitations

This first release of the <code>DiagnosticExtract</code> template focuses on defining diagnostic requirements a single ECU only. That means that currently, distributed diagnostic functionality for a system or partial system consisting of multiple ECUs cannot be defined using the <code>DiagnosticExtract</code> template.

In future releases, the <code>DiagnosticExtract</code> template is expected to be extended to also cover configuration of distributed diagnostic functionality. Similar to the description of communication dependencies in the System Description, it shall be possible to describe diagnostic demands on system level to derive the diagnostic demands for a specific ECU from this description.

In general, the <code>DiagnosticExtract</code> does not support process-related parts to document the maturity of diagnostic configuration data. This means, that a data object



cannot be marked as "draft" or "released". This issue needs to be solved by AUTOSAR within a general concept in a future release. Therefore, it does not make sense to introduce a solution for diagnostics only.

# 1.2 Scope

This document describes the formal description of contributions to the diagnostic configuration.

On the level of meta-modeling, the content described in this document conceptually relates to the definition of software-componentServiceDependency resp. BswServiceDependency, as defined by the Software Component Template [8] resp. Basic Software ModuleDescription Template [9].

Further relations exist to the specification of communication in AUTOSAR systems as described by the System Template [6].

Further relations exist to the specification of the Diagnostic Communication Manager [10] as well as to the Diagnostic Event Manager [11].

The relation of the DiagnosticExtract to the rest of the AUTOSAR meta-model is sketched in Figure 1.3.



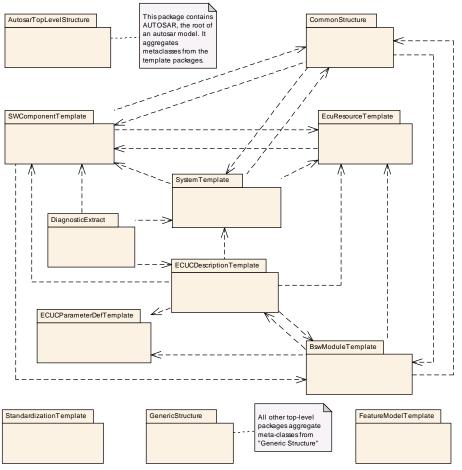


Figure 1.3: The relation of the DiagnosticExtract to the rest of the AUTOSAR metamodel

### 1.3 Abbreviations

The following table contains a list of abbreviations used in the scope of this document along with the spelled-out meaning of each of the abbreviations.

Abbreviation	meaning			
API	Application Programming Interface			
BSW	Basic Software			
BswM	Basic Software Manager			
CAN	Controller Area Network			
CSE	Codes for Scaling Units			
DEM	Diagnostics Communication Manager			
DCY	Driving Cycle			
DEM	Diagnostics Event Manager			
DID	Diagnostic Identifier			
DTC	Diagnostic Trouble Code			



Abbreviation	meaning			
DTR	Diagnostic Test Result			
DoIP	Diagnostics over IP			
ECU	Electrical Control Unit			
ECUC	ECU Configuration			
FID	Function Identifier			
FIM	Function Inhibition Manager			
GID	Group Identifier			
ID	Identifier			
Ю	Input/Output			
IP	Internet Protocol			
IUMPR	In-Use Monitor Performance Ratio			
ISO	International Organization for Standardization			
LIN	Local Interconnect Network			
NRC	Negative Response Code			
OBD	On-Board Diagnostic			
ODX	Open Diagnostic Data Exchange			
OEM	Original Equipment Manufacturer			
PDU	Protocol Data Unit			
PID	Parameter Identifier			
PTO	Power Take Off			
RA	Routing Activation			
RAM	Random Access Memory			
RID	Routine Identifier			
ROE	Response on Event			
ROM	Read-Only Memory			
RTE	Run-Time Environment			
RS	Requirements Specification			
RX	Receive			
SPN	Suspect Parameter Number			
SW	Software			
SWC	Software Component			
SWCD	Software Component Description			
TID	Test Identifier			
TPS	Template Specification			
TX	Transmit			
SWS	Software Specification			
UDS	Unified Diagnostic Services			
UML	Unified Modeling Language			
VFB	Virtual Functional Bus			
VIN	Vehicle Identification Number			
WWH-OBD	World-Wide Harmonized On-Board Diagnostics			
XML	Extensible Markup Language			



Abbreviation	meaning
XSD XML Schema Definition	

Table 1.1: Abbreviations used in the scope of this Document

#### 1.4 Document Conventions

Technical terms are typeset in mono spaced font, e.g. PortPrototype. As a general rule, plural forms of technical terms are created by adding "s" to the singular form, e.g. PortPrototypes. By this means the document resembles terminology used in the AUTOSAR XML Schema.

This document contains constraints in textual form that are distinguished from the rest of the text by a unique numerical constraint ID, a headline, and the actual constraint text starting after the \[ \cric \text{character} and terminated by the \[ \cric \text{character}.

The purpose of these constraints is to literally constrain the interpretation of the AUTOSAR meta-model such that it is possible to detect violations of the standardized behavior implemented in an instance of the meta-model (i.e. on M1 level).

Makers of AUTOSAR tools are encouraged to add the numerical ID of a constraint that corresponds to an M1 modeling issue as part of the diagnostic message issued by the tool.

The attributes of the classes introduced in this document are listed in form of class tables. They have the form shown in the example of the top-level element AUTOSAR:

Class	AUTOSAR				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::AutosarTopLevelStructure			
Note	Root element of an AUTOSAR description, also the root element in corresponding XML documents.  Tags: xml.globalElement=true				
Base	ARObject				
Attribute	Туре	Mul.	Kind	Note	
adminData	AdminData	01	aggr	This represents the administrative data of an Autosar file.  Tags: xml.sequenceOffset=10	
arPackage	ARPackage	*	aggr	This is the top level package in an AUTOSAR model.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=blueprintDerivationTime xml.sequenceOffset=30	



Attribute	Туре	Mul.	Kind	Note
introductio n	Documentation Block	01	aggr	This represents an introduction on the Autosar file. It is intended for example to rpresent disclaimers and legal notes.
				Tags: xml.sequenceOffset=20

**Table 1.2: AUTOSAR** 

The first rows in the table have the following meaning:

Class: The name of the class as defined in the UML model.

**Package**: The UML package the class is defined in. This is only listed to help locating the class in the overall meta model.

**Note**: The comment the modeler gave for the class (class note). Stereotypes and UML tags of the class are also denoted here.

**Base Classes**: If applicable, the list of direct base classes.

The headers in the table have the following meaning:

**Attribute**: The name of an attribute of the class. Note that AUTOSAR does not distinguish between class attributes and owned association ends.

**Type**: The type of an attribute of the class.

**Mul.**: The assigned multiplicity of the attribute, i.e. how many instances of the given data type are associated with the attribute.

**Kind**: Specifies, whether the attribute is aggregated in the class (aggr aggregation), an UML attribute in the class (attr primitive attribute), or just referenced by it (ref reference). Instance references are also indicated (iref instance reference) in this field.

**Note**: The comment the modeler gave for the class attribute (role note). Stereotypes and UML tags of the class are also denoted here.

Please note that the chapters that start with a letter instead of a numerical value represent the appendix of the document. The purpose of the appendix is to support the explanation of certain aspects of the document and does not represent binding conventions of the standard.

The verbal forms for the expression of obligation specified in [TPS\_STDT\_00053] shall be used to indicate requirements, see Standardization Template, chapter Support for Traceability ([12]).

The representation of requirements in AUTOSAR documents follows the table specified in [TPS\_STDT\_00078], see Standardization Template, chapter Support for Traceability ([12]).



# 1.5 Requirements Tracing

The following table references the requirements specified in [13] and links to the fulfillment of these.

Requirement	Description	Satisfied by
[RS DEXT 00001]	Diagnostic data exchange	[TPS_DEXT_01003] [TPS_DEXT_01004]
		[TPS_DEXT_01005] [TPS_DEXT_01007]
		[TPS_DEXT_01008] [TPS_DEXT_01014]
		[TPS_DEXT_01019] [TPS_DEXT_01020]
		[TPS_DEXT_01022] [TPS_DEXT_01023]
		[TPS_DEXT_01024] [TPS_DEXT_01025]
		[TPS_DEXT_01026] [TPS_DEXT_01027]
		[TPS_DEXT_01028] [TPS_DEXT_01029]
		[TPS_DEXT_01046] [TPS_DEXT_01055]
		[TPS_DEXT_01056] [TPS_DEXT_01057]
		[TPS_DEXT_01060] [TPS_DEXT_01062]
		[TPS_DEXT_01063] [TPS_DEXT_01066]
		[TPS_DEXT_01069] [TPS_DEXT_01075]
[RS_DEXT_00002]	No description	[TPS_DEXT_01003] [TPS_DEXT_01004]
		[TPS_DEXT_01005] [TPS_DEXT_01038]
		[TPS_DEXT_01047] [TPS_DEXT_01055]
		[TPS_DEXT_01062] [TPS_DEXT_01063]
[RS_DEXT_00003]	SessionControl	[TPS_DEXT_01039] [TPS_DEXT_01045]
		[TPS_DEXT_01081] [TPS_DEXT_01082]
[RS_DEXT_00004]	ECUReset	[TPS_DEXT_01019] [TPS_DEXT_01020]
		[TPS_DEXT_01021] [TPS_DEXT_01045]
		[TPS_DEXT_01056]
[RS_DEXT_00005]	ClearDiagnosticInformation	[TPS_DEXT_01022] [TPS_DEXT_01045]
[RS_DEXT_00006]	ReadDTCInformation	[TPS_DEXT_01034] [TPS_DEXT_01045]
		[TPS_DEXT_01060]
[RS_DEXT_00007]	ReadDataByIdentifier	[TPS_DEXT_01045] [TPS_DEXT_01050]
IDO DEVE 000001	Dog al Marza a w. D. Andalya a a	[TPS_DEXT_01054]
[RS_DEXT_00008]	ReadMemoryByAddress	[TPS_DEXT_01024] [TPS_DEXT_01045]
[RS_DEXT_00009]	SecurityAccess	[TPS_DEXT_01036] [TPS_DEXT_01037] [TPS_DEXT_01038] [TPS_DEXT_01045]
		[TPS_DEXT_01036] [TPS_DEXT_01043]
[RS DEXT 00010]	CommunicationControl	[TPS_DEXT_01033] [TPS_DEXT_01029] [TPS_DEXT_01030]
[HO_DEXI_00010]	CommunicationControl	[TPS_DEXT_01029] [TPS_DEXT_01030] [TPS_DEXT_01032]
		[TPS_DEXT_01045] [TPS_DEXT_01057]
		TPS DEXT_01043][11 3_DEXT_01037]
IRS DEXT 000111	ReadDataByPeriodicIdentifier	[TPS_DEXT_01045]
[RS_DEXT_00012]	DynamicallyDefineDataIdentifier	[TPS_DEXT_01045]
[RS DEXT 00013]	WriteDataByIdentifier	[TPS DEXT 01045] [TPS DEXT 01050]
[	,	[TPS_DEXT_01054]
[RS DEXT 00014]	IOControl	[TPS_DEXT_01015] [TPS_DEXT_01016]
. =_ :==:		[TPS_DEXT_01017] [TPS_DEXT_01018]
		[TPS_DEXT_01045] [TPS_DEXT_01051]
[RS_DEXT_00015]	RoutineControl	[TPS_DEXT_01035] [TPS_DEXT_01045]
		[TPS_DEXT_01049] [TPS_DEXT_01077]
		[TPS_DEXT_01078] [TPS_DEXT_01079]
		[TPS_DEXT_01080]
[RS_DEXT_00016]	RequestDownload	[TPS_DEXT_01027] [TPS_DEXT_01045]
[RS_DEXT_00017]	RequestUpload	[TPS_DEXT_01028] [TPS_DEXT_01045]
[RS_DEXT_00018]	TransferData	[TPS_DEXT_01026] [TPS_DEXT_01045]



IDC DEVE 000401	Decuses Tremefor Tuit	ITDO DEVI 0100ELITEO DEVI 0104EL
[RS_DEXT_00019]	RequestTransferExit	[TPS_DEXT_01025] [TPS_DEXT_01045] [TPS_DEXT_01023] [TPS_DEXT_01045]
[RS_DEXT_00020]	WriteMemoryByAddress	
[RS_DEXT_00021]	ControlDTCSetting	[TPS_DEXT_01045] [TPS_DEXT_01075] [TPS_DEXT_01076]
[RS_DEXT_00022]	ResponseOnEvent	[TPS DEXT 01033] [TPS DEXT 01045]
[RS DEXT 00023]	Configuration of events	[TPS_DEXT_01048] [TPS_DEXT_01067]
[]	garanon or overno	[TPS_DEXT_01068] [TPS_DEXT_01069]
		[TPS DEXT 01083] [TPS DEXT 01084]
		[TPS DEXT 01085] [TPS DEXT 03002]
		[TPS_DEXT_03003] [TPS_DEXT_03004]
		TPS DEXT 03005 TPS DEXT 03007
		[TPS_DEXT_03011] [TPS_DEXT_03015]
		[TPS_DEXT_03016]
[RS_DEXT_00024]	Configuration of DTCs	[TPS_DEXT_01064] [TPS_DEXT_01065]
		[TPS_DEXT_01066] [TPS_DEXT_01086]
		[TPS_DEXT_03000] [TPS_DEXT_03003]
		[TPS_DEXT_03012] [TPS_DEXT_03013]
		[TPS_DEXT_03014]
[RS_DEXT_00025]	Combined Events	[TPS_DEXT_03003]
[RS_DEXT_00026]	Enable Conditions	[TPS_DEXT_03015] [TPS_DEXT_03018]
[RS_DEXT_00027]	Storage Conditions	[TPS_DEXT_03001] [TPS_DEXT_03006]
		[TPS_DEXT_03010] [TPS_DEXT_03016]
		[TPS_DEXT_03019]
[RS_DEXT_00028]	Enable Condition Groups	[TPS_DEXT_01084] [TPS_DEXT_03010]
IDC DEVT 000001	Storage Condition Croups	[TPS_DEXT_03015]
[RS_DEXT_00029] [RS_DEXT_00030]	Storage Condition Groups Assignment of Enable Condition	[TPS_DEXT_01084] [TPS_DEXT_03016] [TPS_DEXT_03010]
[H9_DEX1_00030]	Groups	[1F3_DEX1_03010]
[RS_DEXT_00031]	Assignment of Storage	[TPS_DEXT_03010]
[	Condition Group	[ 0_= =000]
[RS_DEXT_00032]	Configuration of Extended Data	[TPS_DEXT_03008]
	Records	
[RS_DEXT_00033]	Configuration of Snapshot	[TPS_DEXT_03009]
	Records	
[RS_DEXT_00034]	Description of Data Identifiers	[TPS_DEXT_01000] [TPS_DEXT_01001]
		[TPS_DEXT_01002] [TPS_DEXT_01017]
		[TPS_DEXT_01050] [TPS_DEXT_01054]
		[TPS_DEXT_01072] [TPS_DEXT_01134]
		[TPS_DEXT_01135] [TPS_DEXT_01136] [TPS_DEXT_01137] [TPS_DEXT_01138]
[RS DEXT 00035]	Description of Dynamic Data	[TPS DEXT_01000]
[110_DEX1_00000]	Identifiers	[ 0_527.1_01000]
[RS DEXT 00036]	Description of Routine	[TPS DEXT 01088]
	Identifiers	
[RS_DEXT_00037]	Description of I/O Identifiers	[TPS_DEXT_01089]
[RS_DEXT_00038]	Description of array data types	[TPS_DEXT_01001] [TPS_DEXT_01002]
[RS_DEXT_00039]	Diagnostic Service Table	[TPS_DEXT_01006]
[RS_DEXT_00040]	Diagnostic Sessions	[TPS_DEXT_01011] [TPS_DEXT_01081]
		[TPS_DEXT_01082] [TPS_DEXT_01139]
[RS_DEXT_00041]	Access Permissions	[TPS_DEXT_01012] [TPS_DEXT_01052]
		[TPS_DEXT_01061] [TPS_DEXT_01062]
		[TPS_DEXT_01063] [TPS_DEXT_01071]
[RS_DEXT_00042]	Security Levels	[TPS_DEXT_01012] [TPS_DEXT_01038]
		[TPS_DEXT_01053]



IDO DEVE COCACI	D ::: (1: 1	ITDO DEVT 000001
[RS_DEXT_00043]	Description of data elements	[TPS_DEXT_03020]
[RS_DEXT_00045]	Textual descriptions	[TPS_DEXT_01064] [TPS_DEXT_01065]
		[TPS_DEXT_01066] [TPS_DEXT_01067]
		[TPS_DEXT_01068] [TPS_DEXT_01069]
		[TPS_DEXT_01071]
[RS_DEXT_00047]	Custom Diagnostic Service	[TPS_DEXT_01009] [TPS_DEXT_01010]
		[TPS_DEXT_01021] [TPS_DEXT_01030]
		[TPS_DEXT_01031]
[RS_DEXT_00048]	Diagnostic Properties that are	[TPS_DEXT_01073]
	specific for one ECU	
[RS_DEXT_00049]	Properties of individual	[TPS_DEXT_01013] [TPS_DEXT_01052]
	diagnostic services	[TPS_DEXT_01061]
[RS_DEXT_00050]	Properties of all diagnostic	[TPS DEXT 01061]
[	services of a given kind	[ 5_5_755]
[RS_DEXT_00051]	Subfunctions of Diagnostic	[TPS_DEXT_01013] [TPS_DEXT_01014]
[C_DEX1_00001]	Services	[TPS_DEXT_01018] [TPS_DEXT_01019]
	33, 1,000	[TPS DEXT_01010] [TPS DEXT_01013]
		[TPS_DEXT_01022] [TPS_DEXT_01023]
		[TPS_DEXT_01024] [TPS_DEXT_01025]
		[TPS_DEXT_01024] [TPS_DEXT_01025]
		[TPS_DEXT_01028] [TPS_DEXT_01029]
		[TPS_DEXT_01030] [TPS_DEXT_01031]
		[TPS_DEXT_01034] [TPS_DEXT_01039]
		[TPS_DEXT_01056] [TPS_DEXT_01057]
		[TPS_DEXT_01060] [TPS_DEXT_01075]
		[TPS_DEXT_01076] [TPS_DEXT_01078]
[RS_DEXT_00052]	Mapping of diagnostic services	[TPS_DEXT_01040] [TPS_DEXT_01041]
	to the PortPrototypes of	[TPS_DEXT_01042] [TPS_DEXT_01043]
Ť.		
	ApplicationSwComponentTypes	[TPS_DEXT_01044] [TPS_DEXT_01049]
	ApplicationSwComponentTypes	[TPS_DEXT_01050] [TPS_DEXT_01051]
	ApplicationSwComponentTypes	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007]
	ApplicationSwComponentTypes	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018]
		[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020]
[RS_DEXT_00053]	ApplicationSwComponentTypes  Debouncing of diagnostic	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004]
[RS_DEXT_00053]		[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017]
[RS_DEXT_00054]	Debouncing of diagnostic	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_01086] [TPS_DEXT_01087]
	Debouncing of diagnostic events Operation cycles Aging	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_01086] [TPS_DEXT_01087] [TPS_DEXT_03021]
[RS_DEXT_00054]	Debouncing of diagnostic events Operation cycles	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_01086] [TPS_DEXT_01087]
[RS_DEXT_00054] [RS_DEXT_00055]	Debouncing of diagnostic events Operation cycles Aging	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_01086] [TPS_DEXT_01087] [TPS_DEXT_03021]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056]	Debouncing of diagnostic events Operation cycles Aging Indicator	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_01086] [TPS_DEXT_01087] [TPS_DEXT_03021] [TPS_DEXT_03022]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056] [RS_DEXT_00057]	Debouncing of diagnostic events Operation cycles Aging Indicator RequestFileTransfer	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_01086] [TPS_DEXT_01087] [TPS_DEXT_03021] [TPS_DEXT_03022] [TPS_DEXT_01090]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056] [RS_DEXT_00057]	Debouncing of diagnostic events Operation cycles Aging Indicator RequestFileTransfer Indicate that an ECU supports	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_01086] [TPS_DEXT_01087] [TPS_DEXT_03021] [TPS_DEXT_03022] [TPS_DEXT_01090]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056] [RS_DEXT_00057] [RS_DEXT_00058]	Debouncing of diagnostic events Operation cycles Aging Indicator RequestFileTransfer Indicate that an ECU supports ODB	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_01086] [TPS_DEXT_01087] [TPS_DEXT_03021] [TPS_DEXT_03022] [TPS_DEXT_01090] [TPS_DEXT_01122]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056] [RS_DEXT_00057] [RS_DEXT_00058]	Debouncing of diagnostic events Operation cycles Aging Indicator RequestFileTransfer Indicate that an ECU supports ODB Support for different protocols	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_03005] [TPS_DEXT_01087] [TPS_DEXT_03021] [TPS_DEXT_03022] [TPS_DEXT_01090] [TPS_DEXT_01122]  [TPS_DEXT_01124] [TPS_DEXT_01096] [TPS_DEXT_01097]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056] [RS_DEXT_00057] [RS_DEXT_00058]	Debouncing of diagnostic events Operation cycles Aging Indicator RequestFileTransfer Indicate that an ECU supports ODB Support for different protocols	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_03005] [TPS_DEXT_01087] [TPS_DEXT_03021] [TPS_DEXT_03022] [TPS_DEXT_01090] [TPS_DEXT_01122]  [TPS_DEXT_01124] [TPS_DEXT_01096] [TPS_DEXT_01097] [TPS_DEXT_01098] [TPS_DEXT_01099]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056] [RS_DEXT_00057] [RS_DEXT_00058]	Debouncing of diagnostic events Operation cycles Aging Indicator RequestFileTransfer Indicate that an ECU supports ODB Support for different protocols	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_03005] [TPS_DEXT_01087] [TPS_DEXT_03021] [TPS_DEXT_03022] [TPS_DEXT_01090] [TPS_DEXT_01122]  [TPS_DEXT_01124] [TPS_DEXT_01096] [TPS_DEXT_01097] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01101]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056] [RS_DEXT_00057] [RS_DEXT_00058]  [RS_DEXT_00059] [RS_DEXT_00060]	Debouncing of diagnostic events Operation cycles Aging Indicator RequestFileTransfer Indicate that an ECU supports ODB Support for different protocols Function	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_03005] [TPS_DEXT_01087] [TPS_DEXT_03021] [TPS_DEXT_03022] [TPS_DEXT_01090] [TPS_DEXT_01122]  [TPS_DEXT_01124] [TPS_DEXT_01096] [TPS_DEXT_01097] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01101] [TPS_DEXT_01121]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056] [RS_DEXT_00057] [RS_DEXT_00058]	Debouncing of diagnostic events Operation cycles Aging Indicator RequestFileTransfer Indicate that an ECU supports ODB Support for different protocols Function Relationship between functions	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_01048] [TPS_DEXT_03017] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_01086] [TPS_DEXT_01087] [TPS_DEXT_03022] [TPS_DEXT_03022] [TPS_DEXT_01090] [TPS_DEXT_01122]  [TPS_DEXT_01124] [TPS_DEXT_01096] [TPS_DEXT_01097] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01101] [TPS_DEXT_01121] [TPS_DEXT_01095] [TPS_DEXT_01098]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056] [RS_DEXT_00057] [RS_DEXT_00058]  [RS_DEXT_00059] [RS_DEXT_00060]	Debouncing of diagnostic events Operation cycles Aging Indicator RequestFileTransfer Indicate that an ECU supports ODB Support for different protocols Function	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_01048] [TPS_DEXT_030017] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_01086] [TPS_DEXT_01087] [TPS_DEXT_03021] [TPS_DEXT_03022] [TPS_DEXT_01090] [TPS_DEXT_01122]  [TPS_DEXT_01124] [TPS_DEXT_01096] [TPS_DEXT_01097] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01101] [TPS_DEXT_01121] [TPS_DEXT_01099] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056] [RS_DEXT_00057] [RS_DEXT_00058]  [RS_DEXT_00059] [RS_DEXT_00060]	Debouncing of diagnostic events Operation cycles Aging Indicator RequestFileTransfer Indicate that an ECU supports ODB Support for different protocols Function  Relationship between functions and diagnostic events	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_03005] [TPS_DEXT_01087] [TPS_DEXT_03021] [TPS_DEXT_03022] [TPS_DEXT_03022] [TPS_DEXT_01122]  [TPS_DEXT_01122]  [TPS_DEXT_01124] [TPS_DEXT_01096] [TPS_DEXT_01097] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01101] [TPS_DEXT_01121] [TPS_DEXT_01129] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01101]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056] [RS_DEXT_00057] [RS_DEXT_00058]  [RS_DEXT_00059] [RS_DEXT_00060]	Debouncing of diagnostic events Operation cycles Aging Indicator RequestFileTransfer Indicate that an ECU supports ODB Support for different protocols Function  Relationship between functions and diagnostic events  Pre-configuration of the Fim	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_01048] [TPS_DEXT_030017] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_01086] [TPS_DEXT_01087] [TPS_DEXT_03021] [TPS_DEXT_03022] [TPS_DEXT_01090] [TPS_DEXT_01122]  [TPS_DEXT_01124] [TPS_DEXT_01096] [TPS_DEXT_01097] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01101] [TPS_DEXT_01121] [TPS_DEXT_01099] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100]
[RS_DEXT_00054] [RS_DEXT_00055] [RS_DEXT_00056] [RS_DEXT_00057] [RS_DEXT_00058]  [RS_DEXT_00059] [RS_DEXT_00060]	Debouncing of diagnostic events Operation cycles Aging Indicator RequestFileTransfer Indicate that an ECU supports ODB Support for different protocols Function  Relationship between functions and diagnostic events	[TPS_DEXT_01050] [TPS_DEXT_01051] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020] [TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017] [TPS_DEXT_03005] [TPS_DEXT_01087] [TPS_DEXT_03021] [TPS_DEXT_03022] [TPS_DEXT_03022] [TPS_DEXT_01122]  [TPS_DEXT_01122]  [TPS_DEXT_01124] [TPS_DEXT_01096] [TPS_DEXT_01097] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01101] [TPS_DEXT_01121] [TPS_DEXT_01129] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01101]



[RS_DEXT_00063]	Relation between functions on	[TPS_DEXT_01102]
	Fim level and	
	software-components	
[RS_DEXT_00064]	Definition of an SPN	[TPS_DEXT_01103] [TPS_DEXT_01106]
[RS_DEXT_00065]	Definition of freeze frames on	[TPS_DEXT_01104] [TPS_DEXT_01105]
	J1939	
[RS_DEXT_00066]	Mapping between a J1939	[TPS_DEXT_01108]
	controller application and a	
	software-component	
[RS_DEXT_00067]	Definition of J1939 DTC	[TPS_DEXT_01107]
[RS_DEXT_00068]	Definition of a Diagnostic	[TPS_DEXT_01092]
	Parameter Identifier	
[RS_DEXT_00069]	Support for OBD Mode 0x01	[TPS_DEXT_01125]
	(RequestCurrentPowertrain	
	DiagnosticData)	
[RS_DEXT_00070]	Support for OBD Mode 0x02	[TPS_DEXT_01126]
	(RequestPowertrainFreeze	
	FrameData)	
[RS_DEXT_00071]	Support for OBD ModeModes	[TPS_DEXT_01127]
	0x03 / 0x07 / 0x0A (Request	
	EmissionRelatedDiagnostic	
	TroubleCodes)	
[RS_DEXT_00072]	Support for OBD Mode 0x04	[TPS_DEXT_01128]
	(ClearResetEmissionRelated	
	DiagnosticInformation)	
[RS_DEXT_00073]	Support for OBD Mode 0x06	[TPS_DEXT_01129]
	(RequestOnBoardMonitoring	
	TestResults)	
[RS_DEXT_00074]	Support for OBD Mode 0x08	[TPS_DEXT_01130]
	(RequestControlOfOnBoard	
	Device)	
[RS_DEXT_00075]	Support for OBD Mode 0x09	[TPS_DEXT_01131]
	(RequestVehicleInformation)	
[RS_DEXT_00076]	Definition of Diagnostic Test	[TPS_DEXT_01132]
	Identifier	
[RS_DEXT_00077]	Description of the utilization of	[TPS_DEXT_01133]
	UDS for supporting WWH-OBD	
[RS_DEXT_00078]	Support for In Use Monitor	[TPS_DEXT_01110]
	Performance Ratio	
[RS_DEXT_00079]	Support for environment	[TPS_DEXT_01113] [TPS_DEXT_01114]
	conditions	[TPS_DEXT_01115] [TPS_DEXT_01116]
		[TPS_DEXT_01117] [TPS_DEXT_01118]
		[TPS_DEXT_01119] [TPS_DEXT_01120]

Table 1.3: RequirementsTracing



# 2 Use Cases

# 2.1 Use cases for diagnostic data exchange

The basic usage of the <code>DiagnosticExtract</code> is the exchange of diagnostic data between the different parties involved in the diagnostic development process to allow the configuration of the DCM and the DEM and to provide the description of corresponding application interfaces to implement diagnostic services and fault handling.

# 2.2 Configuration of DCM

The configuration of the DCM includes the setup of diagnostic services and the assignment of data objects provided by one or more software components (e.g. Composition 1, Composition 2).

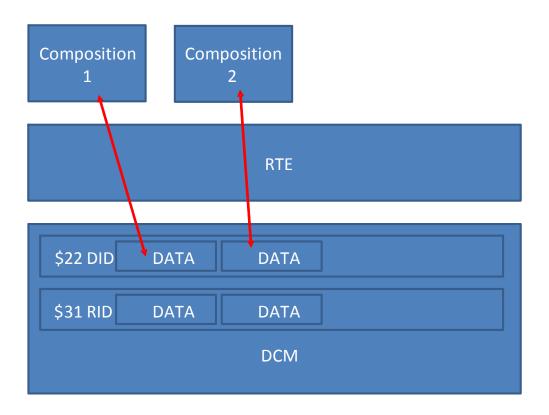


Figure 2.1: Assignment of DCM-related data objects



# 2.3 Configuration of DEM

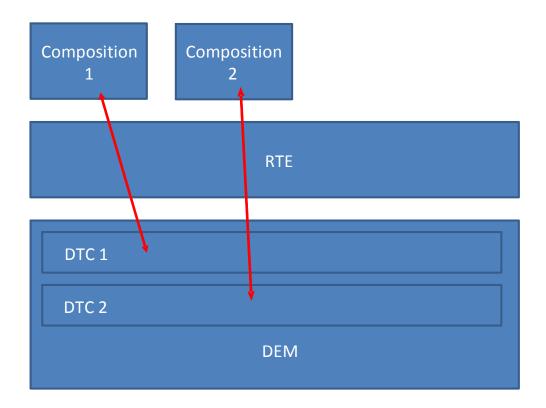


Figure 2.2: Assignment of DEM-related data objects

The configuration of the DEM includes fault memory data (DTCs and environmental data) and the assignment of corresponding data by one or more SwComponentTypes (e.g. Composition 1, Composition 2).

As already explained, the diagnostic development process is distributed among different parties. On the one hand side, the OEM needs to describe the general requirements for a diagnostic system that have to be implemented by an ECU:

- 1. Depending on the diagnostic system, the OEM can provide a completely or partly-filled DiagnosticExtract including the description of PortInterfaces:
  - Integrator/SWC developer (OEM or Tier 1) is responsible for the completion (detailing of predefined diagnostic content).
  - Integrator/SWC developer (OEM or Tier 1) is responsible for the specific configuration of diagnostic content defined by himself).
  - New integration of updated Diagnostic descriptions by integrator.
- 2. Return of completely or partly-filled DiagnosticExtract to OEM for:
  - Documentation



- ECU testing
- Integration reviews
- Failure correction

#### Use case examples:

- Configuration of UDS service 0x22 (ReadDataByIdentifier)
- Configuration of UDS service 0x2E (WriteDataByIdentifier)
- Configuration of UDS service 0x31 (RoutineControl)
- Configuration of UDS service 0x2F (I/O-Control)
- Configuration of DEM DTCs
- Configuration of Combined Events
- Mapping of events to DTCs
- Configuration of DTC-related environmental data
- Mapping of DEM Events to their corresponding Enable Conditions and Storage Conditions
- Configure general DCM parameters
- Description of diagnostic demands that are not relevant for code generation but have to be exchanged between OEM and Tier1 (e.g. set and reset condition for a DTC)

#### Refinement of use cases:

The OEM already provides a System Template for an ECU which describes the ECU Supplier SW parts as a CompositionSwComponentType where only inputs and outputs are known.

- 1. The OEM creates a DiagnosticExtract which describes the diagnostic interfaces of an ECU. Supported services are described (e.g. RDBI/WDBI/Routine Control) as well as their corresponding input/output parameters and return values (those which are optional in UDS standard).
- 2. SWC Developer at OEM or OEM SW Supplier develops SWC and also describes the Diagnostic information using ServiceNeeds as diagnostic contribution.
- 3. The OEM Diagnose Responsible for a Project creates the mappings between the DiagnosticExtract and the SWC available on OEM side (from 2.).
- 4. The OEM Diagnostic Responsible for a Project creates the mappings between the DiagnosticExtract and the CompositionSwComponentTypes which will be implemented by the ECU Supplier or SW Developer.
- 5. The ECU Suppliers receives the ECU Extract including DiagnosticExtract from the OEM and imports it to the project.



6. In the same way is in point 2., the SWC Developer on supplier or Tier 2 side describes the Diagnostic information using ServiceNeeds as diagnostic contribution.

In the same way as in point 3: The ECU Supplier Diagnostic Responsible creates the mapping between the PortInterfaces of the DiagnosticExtract (from 5.) and the SwComponentTypes as provided in 6.

For the usage of indicators, it might happen that indicators defined on BSW level in DEM might not be automatically mapped to the implementation on SWC level. This would then require a manual mapping step by the integrator to resolve the mismatch.

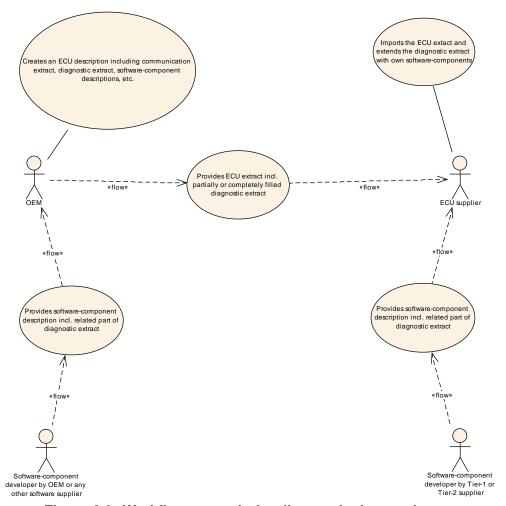


Figure 2.3: Workflow scenario for diagnostic data exchange

# 2.4 Configuration of the Fim

#### 2.4.1 Model Function Inhibition

A typical use case for the Fim is the definition of "control mechanisms for software components and the functionality therein" [14]. By this means, the Fim can significantly



modify the behavior of the application software at run-time, e.g. in response to a sensor failure.

The conditions for deciding about inhibitions are derived from *diagnostic events*. If a *diagnostic event* that relates to a hardware sensor is reported as "failed" then the Fim can degrade the behavior of the application software to no longer rely on the sensor information that has become unreliable.

Consequently, the <code>DiagnosticExtract</code> needs to provide the basic mechanisms to create the definition of such inhibition rules that relate pieces of the application software (which are visible to the <code>DiagnosticExtract</code> as formally defined <code>SwComponentTypes</code>) to the definition of <code>diagnostic events</code>.

#### 2.4.2 Model Fim configuration before Dem exists

The configuration of the Fim module and the Dem module are closely intertwined because the Fim uses the *diagnostic events* defined in the context of the Dem. This means that the Fim can only be configured if the Dem exists as a basis for creating this configuration.

Clearly, this is contradicting the approach of a "decentralized configuration" of the diagnostics stack's behavior. It may happen that the configuration of the Fim and the configuration of the Dem by means of the <code>DiagnosticExtract</code> are distributed over different organizations within a concrete vehicle project.

However, the organizations would not be able to make progress independently from each other because the work product of one is the immediate prerequisite that the other organization can start working.

Therefore one important use case for the <code>DiagnosticExtract</code> is the ability to configure the Fim module in the scope of the <code>DiagnosticExtract</code> without the immediate need to already have access to the corresponding configuration of the <code>Dem module</code>.

In other words, a typical work-flow could look like this:

- 1. Create the Fim configuration on the basis of a collection of alias objects that represent the *diagnostic events* that are defined in the context of the Dem module within the configuration of the Fim and **in parallel** create the Dem configuration and thereby add definitions of the actual *diagnostic events*.
- 2. Ship the configuration of the Dem to the organization that is responsible for the creation of the configuration of the Fim.
- 3. Let this organization take care of resolving the alias *diagnostic events* by way of referring from the Fim configuration to the the *diagnostic events* contained in the actual Dem configuration.



# 2.5 Configuration of J1939 Diagnostics

Within the System Extract, J1939 diagnostic is configured on a service level by the diagnostic messages DM01.. DM57, which will be handled by J1939 Dcm.

The diagnostic content which is provided by the diagnostic messages is defined within the <code>DiagnosticExtract</code> separately for each J1939 function, and contributes to the configuration of the J1939 Dcm as well as the parts of the Dem configuration that are relevant for J1939.

J1939 functions (known as Controller Application or CA within the SAE J1939 Standard [15]) are identified by a NAME and an address (assigned at run-time) and are represented in AUTOSAR by the J1939NmNode.

#### 2.5.1 Modeling of J1939 Diagnostic Aspects independent of the Deployment

The main use case for modeling the J1939 in the <code>DiagnosticExtract</code> is the possibility to create the diagnostic configuration relevant for a J1939 function, even if the underlying communication architecture is not (fully) defined and if no vehicle model (represented by a <code>System</code>) exists.

The J1939 diagnostics modeling is done during functional development before the System exists where the functions are deployed. This approach represents a case of decentralized configuration of the diagnostic stack.

## 2.5.2 J1939 Diagnostic Content modeled in the Diagnostic Extract

The diagnostic content for J1939 consists of the following topics:

- **SPN** The Suspect Parameter Number is used throughout the J1939 specification to identify measured values (physical signals) and commands, the communication signals to which these are mapped, and diagnostic events caused by these.
- **Signals** Communication signals that are relevant for diagnostics are specifically annotated, and reported by the J1939 diagnostics.
- **DTCs** J1939 DTCs consist of an SPN, identifying the source of the diagnostic event, and an FMI (Failure Mode Indicator), identifying the problem with this source, like a boundary exception. In addition, an event counter is contained in the DTC.

**Freeze Frames** contain measured valued captured at the time a diagnostic event is reported as failed. J1939 supports two different kinds of freeze frames:

- standardized freeze frames (reported by DM04), which have a legislated layout
- expanded freeze frames (reported by DM24/DM25), which have a configurable layout



# 3 Conceptual Background

Chapter 1 has already given an overview on the intended way of using the Diagnos-ticExtract template and files. This chapter gives further background information on the overall concept behind the new format to create a better basis for understanding of the meta-model described in Chapter 4.

## 3.1 Definition of relevant Diagnostic Elements

[TPS\_DEXT\_01046] ECU configuration is not suitable to be exchanged between partners in an ECU development project ☐ The ECU configuration (EcuC) parameters defined by the AUTOSAR Software Specification (SWS) documents for Dem and Dcm are not suitable to be exchanged between partners in an ECU development project.

Besides proprietary ways of using the EcuC format, the main reason for EcuC parameters being inappropriate to be exchanged is their closeness to implementation (e.g. parameter on buffer sizes). |(RS\_DEXT\_00001)

[TPS\_DEXT\_01047] Differences in the development processes for diagnostics at automotive OEMs and ECU suppliers [ Additionally, there are differences in the development processes for diagnostics at automotive OEMs and ECU suppliers resulting in different views on relevant diagnostic properties to be exchanged and different ways of deriving and defining them as diagnostic requirements. | (RS\_DEXT\_00002)

Therefore, the identification of all diagnostic properties and requirements as superset from the companies' views forms the basis on which the <code>DiagnosticExtract</code> template has been defined.

#### 3.2 Abstraction from EcuC Level

The DiagnosticExtract template does not only focus on relevant diagnostic properties and requirements but also - if required - lift them onto an appropriate abstraction level to make them meaningfully exchangeable (e.g. debouncing requirements that abstract from mapping on a concrete ECU).

However, for many EcuC parameters identified as relevant, an abstraction is not useful or not required and thus, these parameters are mapped 1:1 to equivalent elements of the DiagnosticExtract template.



## 3.3 Independence of Definition

With respect to development processes, the <code>DiagnosticExtract</code> format also enables more independence when defining requirements on diagnostic functionality than possible with <code>EcuC</code> parameters. The approach of "decentralized configuration" is met in the <code>DiagnosticExtract</code> template in mainly two ways described in the following sub-chapters.

# 3.3.1 Use of $\ll$ atpSplitable $\gg$ enabling separation of elements over several physical files

Most elements of the <code>DiagnosticExtract</code> template can be split over several physical files. Therefore, parts of these elements (e.g. certain attributes) can be defined by, for example, an OEM and other parts of these elements by, for example, an ECU supplier.

#### 3.3.2 Use of self-contained mapping elements

Many diagnostic requirements are established by mappings between diagnostic elements (e.g., DTC to DemEvent mapping). However, the "decentralized configuration" approach requires that these mappings can be flexibly defined at almost any time within the ECU development process and by any of the involved companies respectively roles.

Therefore, the DiagnosticExtract template defines self-contained mapping elements that have references to two (or potentially more) diagnostic elements to define a mapping.

The self-contained mapping elements can be created any time after the diagnostic elements to be mapped together have been defined. Alternatively, a mapping element can be created after only one diagnostic element has been defined indicating the need to make the mapping complete by defining the additional diagnostic element(s) to map to.

# 4 Common Meta Model Elements

#### 4.1 Introduction

This chapter contains a description of the meta-model for the specification of the DiagnosticExtract in AUTOSAR. The goal of the specification of the DiagnosticExtract is to contribute to the description of the configuration of the Diagnostic Communication Manager [10] (Dcm) and the Diagnostic Event Manager [11] (Dem)



The meta-model can be roughly divided into five sections

- A common section that contains meta-classes shared between the description of the diagnostic services (that roughly corresponds to the Dcm) and the diagnostic event handling (that roughly corresponds to the Dem), see section 4.2.
- A section dedicated to the configuration of the diagnostic services, see section 5.
- A section dedicated to the configuration of the diagnostic event handling, see section 6.
- A section dedicated to the configuration of the functional inhibition from the diagnostics point of view, see section 7.
- A section dedicated to the configuration of the diagnostics on J1939, see section 8.

## 4.2 Data Identifier vs. Routine vs. Data Element

This chapter highlights the formal modeling of some of the central parts of AUTOSAR diagnostics when it comes to configuration. There are some concepts widely used that need to be reflected in the meta-model.



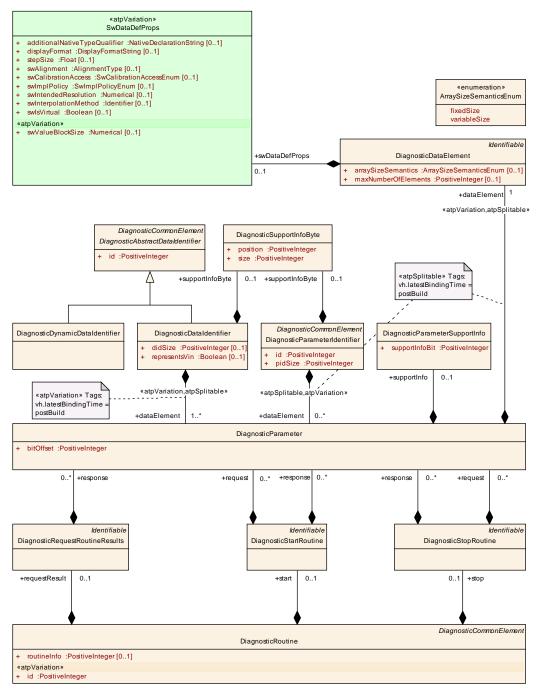


Figure 4.1: Common Diagnostic elements

Class	DiagnosticCommonElement (abstract)					
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::CommonDiagnostics		
Note	This meta-class represents a common base class for all diagnostic elements. It does not contribute any specific functionality other than the ability to become the target of a reference.					
Base	1	ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Type Mul. Kind Note				
_	_	_	_	_		



Attribute	Type	Mul.	Kind	Note
-----------	------	------	------	------

**Table 4.1: DiagnosticCommonElement** 

Class	DiagnosticParameter					
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::CommonDiagnostics		
Note	This meta-class represents the ability to describe information relevant for the execution of a specific diagnostic service, i.e. it can be taken to parameterize the service.					
Base	ARObject					
Attribute	Туре	Mul.	Kind	Note		
bitOffset	PositiveInteger	1	attr	This represents the bitOffset of the DiagnosticParameter		
dataEleme nt	DiagnosticData Element	1	aggr	This represents the related dataElement of the DiagnosticParameter		
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=postBuild		
supportInfo	DiagnosticPara meterSupportInf o	01	aggr			

**Table 4.2: DiagnosticParameter** 

The purpose of the DiagnosticCommonElement is to provide a common reference target for all kinds of diagnostic elements. This aspect is explained in more detail in section 4.4.

The purpose of a Data Identifier (DID) is to associate a unique numerical value to a piece of data related to diagnostics. From the modeling point of view, this means that the modeling of the Data Identifier needs to provide an attribute that represents the numeric value as well as a relation to a Data Element representing a set of diagnostic piece of data.

## [TPS\_DEXT\_01000] AUTOSAR diagnostics supports two kinds of data identifiers \[ In AUTOSAR, two kinds of data identifiers are supported:

- The DiagnosticDataIdentifier inherits from DiagnosticAbstract-DataIdentifier and is used to define data identifiers fully known at configuration time. A DiagnosticDataIdentifier shall have at least 1 dataElement.
- The DiagnosticDynamicDataIdentifier inherits from DiagnosticAbstractDataIdentifier and is used to define data identifiers fully known only at run time. Consequently, there is **no formal means** to define dataElement at configuration time.

|(RS\_DEXT\_00034, RS\_DEXT\_00035)



Class	DiagnosticDataldentifier					
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::CommonDiagnostics		
Note	This meta-class represents the ability to model a diagnostic data identifier (DID) that is fully specified regarding the payload at configuration-time.  Tags: atp.recommendedPackage=DiagnosticDataIdentifiers					
Base	ARElement, ARObject, CollectableElement, DiagnosticAbstractDataIdentifier, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable					
Attribute	Туре	Mul.	Kind	Note		
dataEleme nt	DiagnosticPara meter	1*	aggr	This is the dataElement associated with the DiagnosticDataIdentifier.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=dataElement, variation Point.shortLabel vh.latestBindingTime=postBuild		
didSize	PositiveInteger	01	attr	This attribute indicates the size of the DiagnosticDataIdentifier.		
represents Vin	Boolean	01	attr	This attributes indicates whether the specific DiagnosticDataIdentifier represents the vehicle identification.		
supportInfo Byte	DiagnosticSupp ortInfoByte	01	aggr	This attribute represents the supported information associated with the DiagnosticDataldentifier.		

**Table 4.3: DiagnosticDataIdentifier** 

Class	DiagnosticDynamicDataldentifier				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::CommonDiagnostics	
Note	This meta-class represents the ability to define a diagnostic data identifier (DID) at run-time.  Tags: atp.recommendedPackage=DiagnosticDataIdentifiers				
Base	ARElement, ARObject, CollectableElement, DiagnosticAbstractDataIdentifier, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable				
Attribute	Туре	Mul.	Kind	Note	
_	_	_	_	-	

Table 4.4: DiagnosticDynamicDataldentifier

Class	DiagnosticAbstractDataIdentifier (abstract)					
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics				
Note	This meta-class represents an abstract base class for the modeling of a diagnostic data identifier (DID).					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		



Attribute	Туре	Mul.	Kind	Note
id	PositiveInteger	1	attr	This is the numerical identifier used to identify the DiagnosticAbstractDataIdentifier in the scope of diagnostic workflow

Table 4.5: DiagnosticAbstractDataIdentifier

[TPS\_DEXT\_01072] Purpose of attribute DiagnosticDataIdentifier.representsVin | There is a use case for identifying a specific DiagnosticDataIdentifier that carries the so-called *vehicle identification number* (VIN).

It is therefore important to be able to formally indicate this characteristic. For this purpose the attribute <code>DiagnosticDataIdentifier.representsVin</code> is available. |(RS\_DEXT\_00034)

[constr\_1324] Existence of attribute DiagnosticDataIdentifier.representsVin [ Within the context of a given DiagnosticContributionSet, the attribute DiagnosticDataIdentifier.representsVin shall have the value true for only a single DiagnosticDataIdentifier. ]()

Please note that the VIN is only relevant in the context of *diagnostics over IP* (DoIP). However, there is no constraint that bounds the validity of [constr\_1324] to the existence of a <code>DiagnosticConnection</code> that is build on top of an IP stack.

If the attribute exists and there is no IP used then the meaning of the attribute is simply irrelevant. Anyway, this situation should not be attributed to a misconfiguration.

The concept of the Data Element represents a piece of information decomposed from the data identified by a DID and exchanged between the DEM and, for example, a tester.

The nature of such a Data Element could be compared to the nature of an ISignal and therefore the modeling of a Data Element by means of the meta-class DiagnosticDataElement aggregates SwDataDefProps in the role swDataDefProps in order to provide a reference to SwBaseType.

The aggregation of SwDataDefProps can also be used to refer to a DataConstr in order to specify a valid data range for the DiagnosticDataElement.

Class	DiagnosticDataElement					
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics				
Note	This meta-class represents the ability to describe a concrete piece of data to be taken into account for diagnostic purposes.					
Base	ARObject, Identifi	ARObject, Identifiable, MultilanguageReferrable, Referrable				
Attribute	Туре	Mul.	Kind	Note		
arraySizeS emantics	ArraySizeSema nticsEnum	01	attr	This attribute controls the meaning of the value of the array size.		

<sup>&</sup>lt;sup>1</sup>which represents the payload in "regular" bus communication



Attribute	Туре	Mul.	Kind	Note
maxNumb erOfEleme nts	PositiveInteger	01	attr	The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.
swDataDef Props	SwDataDefProp s	01	aggr	This property allows to specify data definition properties in order to support the definition of e.g. computation formulae and data constraints.

Table 4.6: DiagnosticDataElement

[constr\_1394] Value of DiagnosticDataElement.maxNumberOfElements depending on its existence [ If the attribute DiagnosticDataElement.maxNumberOfElements exists then its value shall be greater than 0. |()

[TPS\_DEXT\_01134] Definition of a DiagnosticDataElement used in the context of a DID obtained by sender-receiver communication [ If the DiagnosticDataElement is aggregated by a DiagnosticParameter that in turn is aggregated by a subclass of DiagnosticAbstractDataIdentifier and the DiagnosticDataElement is also referenced by a DiagnosticServiceDataMapping then the referenced DiagnosticDataElement (by way of SwDataDefProps) shall refer to a SwBaseType with attribute baseTypeSize set to either 8, 16, or 32 and attribute baseTypeEncoding set to either NONE or 2C.

In this case it is possible to define the <code>DiagnosticDataElement</code> either as a scalar or as an array (see [TPS\_DEXT\_01001], [TPS\_DEXT\_01002]). |(RS\_DEXT\_00034)

[TPS\_DEXT\_01135] Definition of a DiagnosticDataElement used in the context of a DID obtained by client/server communication [ If the DiagnosticDataElement is aggregated by a DiagnosticParameter that in turn is aggregated by a subclass of DiagnosticAbstractDataIdentifier and the DiagnosticDataElement is also referenced by a DiagnosticServiceSwMapping then the referenced DiagnosticDataElement (by way of SwDataDefProps) shall refer to a SwBase—Type with attribute baseTypeSize set to 8 and attribute baseTypeEncoding set to NONE.

In this case it is only possible to define the <code>DiagnosticDataElement</code> as an array (see [TPS\_DEXT\_01001], [TPS\_DEXT\_01002]). The ability to define a Variable-Size Array shall only be used for the last element of the DID. |(RS\_DEXT\_00034)

[TPS\_DEXT\_01136] Definition of a DiagnosticDataElement used in the context of a diagnostic routine [ If the DiagnosticDataElement is aggregated by a DiagnosticParameter that in turn is aggregated by either a DiagnosticStartRoutine, DiagnosticStopRoutine, or DiagnosticRequestRoutineResults then the DiagnosticDataElement (by way of SwDataDefProps) shall refer to a SwBaseType with attribute baseTypeSize to either 8, 16, or 32 and attribute baseTypeEncoding set to either NONE or 2C.

In this case it is possible to define the <code>DiagnosticDataElement</code> either as a scalar or as an array (see [TPS\_DEXT\_01001], [TPS\_DEXT\_01002]). The ability to define a



Variable-Size Array shall only be used for the last argument to the diagnostic routine. 

(RS DEXT 00034)

[constr\_1470] Value of DiagnosticParameter.bitOffset [ The value of DiagnosticParameter.bitOffset shall only be set to a multiple of 8. | ()

Enumeration	ArraySizeSemanticsEnum
Package	M2::AUTOSARTemplates::CommonStructure::ImplementationDataTypes
Note	This type controls how the information about the number of elements in an ApplicationArrayDataType is to be interpreted.
Literal	Description
fixedSize	This means that the ApplicationArrayDataType will always have a fixed number of elements.  Tags: atp.EnumerationValue=0
variableSize	This implies that the actual number of elements in the ApplicationArrayDataType might vary at run-time. The value of arraySize represents the maximum number of elements in the array.  Tags: atp.EnumerationValue=1

Table 4.7: ArraySizeSemanticsEnum

[TPS\_DEXT\_01137] Applicability of DiagnosticDataIdentifier.didSize [The attribute DiagnosticDataIdentifier.didSize may exist if the value of DiagnosticDataIdentifier.id is in the range 0xF400-0xF4FF.

A typical case for the existence of <code>DiagnosticDataIdentifier.didSize</code> is the understanding that the <code>DiagnosticDataIdentifier</code> is relevant for OBD and the <code>DiagnosticDataIdentifier.id</code> is in the designated range. <code>J(RS\_DEXT\_00034)</code>

[constr\_1471] Existence of DiagnosticDataIdentifier.didSize [ The attribute DiagnosticDataIdentifier.didSize shall not exist if the value of DiagnosticDataIdentifier.id is outside the range 0xF400-0xF4FF. |()

[TPS\_DEXT\_01138] Applicability of DiagnosticDataIdentifier.supportInfoByte | The attribute DiagnosticDataIdentifier.supportInfoByte may exist if the value of DiagnosticDataIdentifier.id is in the range 0xF400-0xF4FF.

A typical case for the existence of <code>DiagnosticDataIdentifier.supportInfoByte</code> is the understanding that the <code>DiagnosticDataIdentifier</code> is relevant for OBD and the <code>DiagnosticDataIdentifier.id</code> is in the designated range. <code>J (RS DEXT 00034)</code>

[constr\_1472] Existence of DiagnosticDataIdentifier.supportInfoByte | The attribute DiagnosticDataIdentifier.supportInfoByte shall not exist if the value of DiagnosticDataIdentifier.id is outside the range 0xF400-0xF4FF. ]()



### 4.2.1 Usage of SwDataDefProps

Please note that the definitions of properties like computation methods<sup>2</sup>, limits<sup>3</sup>, or units<sup>4</sup> of diagnostic data elements is based on shared resources of the AUTOSAR meta-model, namely by aggregation of meta-class SwDataDefProps.

This meta-class contributes a wealth of possible properties related to the definition of data in general and, in this case, diagnostics in particular.

However, it is important to understand that SwDataDefProps is so expressive and versatile that its applicability needs to be constrained (in this specific case, see [constr\_1325]) for specific deployments according to the requirements that originate from the semantics of the piece of data that is decorated by SwDataDefProps.

[constr\_1325] Allowed attributes of SwDataDefProps for DiagnosticDataElement.swDataDefProps [ The allowed attributes of SwDataDefProps for the aggregation in the role DiagnosticDataElement.swDataDefProps are defined in table 4.8. ]()

Attributes of SwDataDefProps	DiagnosticDataElement.swDataDefProps
additionalNativeTypeQualifier	N/A
annotation	N/A
baseType.baseTypeDefinition.baseTypeEncoding	D
baseType.baseTypeDefinition.baseTypeSize	D
baseType.baseTypeDefinition.byteOrder	D
baseType.baseTypeDefinition.maxBaseTypeSize	N/A
baseType.baseTypeDefinition.memAlignment	N/A
baseType.baseTypeDefinition.nativeDeclaration	N/A
compuMethod	D
dataConstr	D
displayFormat	D
implementationDataType	N/A
invalidValue	N/A
swAddrMethod	N/A
swAlignment	N/A
swBitRepresentation	N/A
swCalibrationAccess	N/A
swCalprmAxisSet	N/A
swComparisonVariable	N/A
swDataDependency	N/A
swImplPolicy	N/A
swIntendedResolution	N/A
swInterpolationMethod	N/A
swIsVirtual	N/A
swPointerTargetProps	N/A
swRecordLayout	N/A
swRefreshTiming	N/A
swTextProps	N/A

<sup>&</sup>lt;sup>2</sup>formalized as CompuMethod in AUTOSAR

<sup>&</sup>lt;sup>3</sup>formalized as DataConstr in AUTOSAR

<sup>&</sup>lt;sup>4</sup>formalized as Unit in AUTOSAR



Attributes of SwDataDefProps	DiagnosticDataElement.swDataDefProps
swValueBlockSize	N/A
unit	D
valueAxisDataType	N/A

Table 4.8: Allowed attributes of SwDataDefProps for DiagnosticDataElement.swDataDefProps

The following legend applies to table 4.8:

Abbr.	Description
D	<b>Define</b> the attribute independent from settings to the left.
I	Inherit the definition from the left for usage in the scope of this element.
N/A	Attribute is <b>not applicable</b> for usage in the scope of this element.
M	Attribute is meaningless in the scope of this element. As it was allowed in previous ver-
	sions, declaring it as Not Applicable (NA) would break compatibility. Tools shall ignore such
	an attribute without a warning.

Table 4.9: Legend of table 4.8

Please note that, in comparison to similar tables appearing in other AUTOSAR documents (e.g. [8]), table 4.8 intentionally goes into more detail regarding the applicability of the attributes of SwBaseType. This is in contrast to similar tables contained in, e.g. the specification of the Software-Component Template [8]

The attributes of SwBaseType are considered of paramount importance for the definition of the semantics of the enclosing DiagnosticDataElement and thus the emphasis is justified.



Class	≪atpVariatio	n≫ Sw[	DataDefl	Props			
Package	M2::MSR::DataDi	ctionary	::DataDe	efProperties			
Note	This class is a collection of properties relevant for data objects under various aspects. One could consider this class as a "pattern of inheritance by aggregation". The properties can be applied to all objects of all classes in which SwDataDefProps is aggregated.						
	Note that not all of the attributes or associated elements are useful all of the time. Hence, the process definition (e.g. expressed with an OCL or a Document Control Instance MSR-DCI) has the task of implementing limitations.						
	SwDataDefProps	covers	various a	aspects:			
	curve, or a are mappe	map, bud/conve d/conve ). This is	ıt also th rted to th	ent for calibration use cases: is it a single value, a ne recordLayouts which specify how such elements ne DataTypes in the programming language (or in expressed by properties like swRecordLayout and			
	swVariable	Accessi	mplPolic	ainly expressed by swImplPolicy, cy, swAddrMethod, swPointerTagetProps, baseType, nd additionalNativeTypeQualifier			
	Access pol	icy for th	ne MCD	system, mainly expressed by swCalibrationAccess			
	<ul> <li>Semantics unit, dataC</li> </ul>			nent, mainly expressed by compuMethod and/or ue			
	<ul> <li>Code generation policy provided by swRecordLayout</li> <li>Tags: vh.latestBindingTime=codeGenerationTime</li> </ul>						
Base	ARObject	Taning i iii	10-0000	actionalion time			
Attribute	Туре	Mul.	Kind	Note			
additionalN ativeType Qualifier	NativeDeclarati onString	01	attr	This attribute is used to declare native qualifiers of the programming language which can neither be deduced from the baseType (e.g. because the data object describes a pointer) nor from other more abstract attributes. Examples are qualifiers like "volatile", "strict" or "enum" of the C-language. All such declarations have to be put into one string.			
				Tags: xml.sequenceOffset=235			
annotation	Annotation	*	aggr	This aggregation allows to add annotations (yellow pads) related to the current data object.  Tags: xml.roleElement=true; xml.roleWrapper Element=true; xml.sequenceOffset=20; xml.type Element=false; xml.typeWrapperElement=false			
baseType	SwBaseType	01	ref	Base type associated with the containing data object.			
				Tags: xml.sequenceOffset=50			





Attribute	Туре	Mul.	Kind	Note
compuMet hod	CompuMethod	01	ref	Computation method associated with the semantics of this data object.
				Tags: xml.sequenceOffset=180
dataConstr	DataConstr	01	ref	Data constraint for this data object.
				Tags: xml.sequenceOffset=190
displayFor mat	DisplayFormatS tring	01	attr	This property describes how a number is to be rendered e.g. in documents or in a measurement and calibration system.
				Tags: xml.sequenceOffset=210
implement ationDataT ype	Implementation DataType	01	ref	This association denotes the ImplementationDataType of a data declaration via its aggregated SwDataDefProps. It is used whenever a data declaration is not directly referring to a base type. Especially
				<ul> <li>redefinition of an ImplementationDataType via a "typedef" to another ImplementationDatatype</li> </ul>
				<ul> <li>the target type of a pointer (see SwPointerTargetProps), if it does not refer to a base type directly</li> </ul>
				<ul> <li>the data type of an array or record element within an ImplementationDataType, if it does not refer to a base type directly</li> </ul>
				<ul> <li>the data type of an SwServiceArg, if it does not refer to a base type directly</li> </ul>
				Tags: xml.sequenceOffset=215
invalidValu e	ValueSpecificati on	01	aggr	Optional value to express invalidity of the actual data element.
				Tags: xml.sequenceOffset=255
stepSize	Float	01	attr	This attribute can be used to define a value which is added to or subtracted from the value of a DataPrototype when using up/down keys while calibrating.
swAddrMet hod	SwAddrMethod	01	ref	Addressing method related to this data object. Via an association to the same SwAddrMethod it can be specified that several DataPrototypes shall be located in the same memory without already specifying the memory section itself.
				Tags: xml.sequenceOffset=30





Attribute	Туре	Mul.	Kind	Note
swAlignme nt	AlignmentType	01	attr	The attribute describes the intended alignment of the DataPrototype. If the attribute is not defined the alignment is determined by the swBaseType size and the memoryAllocationKeywordPolicy of the referenced SwAddrMethod.
				Tags: xml.sequenceOffset=33
swBitRepr esentation	SwBitRepresent ation	01	aggr	Description of the binary representation in case of a bit variable.
				Tags: xml.sequenceOffset=60
swCalibrati onAccess	SwCalibrationA ccessEnum	01	attr	Specifies the read or write access by MCD tools for this data object.
				Tags: xml.sequenceOffset=70
swCalprm AxisSet	SwCalprmAxisS et	01	aggr	This specifies the properties of the axes in case of a curve or map etc. This is mainly applicable to calibration parameters.
				Tags: xml.sequenceOffset=90
swCompari sonVariabl e	SwVariableRefP roxy	*	aggr	Variables used for comparison in an MCD process.
				<b>Tags:</b> xml.sequenceOffset=170; xml.type Element=false
swDataDe pendency	SwDataDepend ency	01	aggr	Describes how the value of the data object has to be calculated from the value of another data object (by the MCD system).
				Tags: xml.sequenceOffset=200
swHostVar iable	SwVariableRefP roxy	01	aggr	Contains a reference to a variable which serves as a host-variable for a bit variable. Only applicable to bit objects.
				<b>Tags:</b> xml.sequenceOffset=220; xml.type Element=false
swImplPoli cy	SwImplPolicyEn um	01	attr	Implementation policy for this data object.
				Tags: xml.sequenceOffset=230





Attribute	Туре	Mul.	Kind	Note
swIntende dResolutio n	Numerical	01	attr	The purpose of this element is to describe the requested quantization of data objects early on in the design process.
				The resolution ultimately occurs via the conversion formula present (compuMethod), which specifies the transition from the physical world to the standardized world (and vice-versa) (here, "the slope per bit" is present implicitly in the conversion formula).
				In the case of a development phase without a fixed conversion formula, a pre-specification can occur through swIntendedResolution.
				The resolution is specified in the physical domain according to the property "unit".
				Tags: xml.sequenceOffset=240
swInterpol ationMetho d	Identifier	01	attr	This is a keyword identifying the mathematical method to be applied for interpolation. The keyword needs to be related to the interpolation routine which needs to be invoked.
				Tags: xml.sequenceOffset=250
swlsVirtual	Boolean	01	attr	This element distinguishes virtual objects. Virtual objects do not appear in the memory, their derivation is much more dependent on other objects and hence they shall have a swDataDependency.
swPointerT	SwPointerTarge	01	aggr	Tags: xml.sequenceOffset=260  Specifies that the containing data object is a
argetProps	tProps	01	aggr	pointer to another data object.
				Tags: xml.sequenceOffset=280
swRecordL ayout	SwRecordLayo ut	01	ref	Record layout for this data object.
aDafuaah	NA. dii aliaa aa ai aa a	0.1		Tags: xml.sequenceOffset=290
swRefresh Timing	Multidimensiona ITime	01	aggr	This element specifies the frequency in which the object involved shall be or is called or calculated. This timing can be collected from the task in which write access processes to the variable run. But this cannot be done by the MCD system.
				So this attribute can be used in an early phase to express the desired refresh timing and later on to specify the real refresh timing.
				Tags: xml.sequenceOffset=300



Attribute	Туре	Mul.	Kind	Note
swTextPro ps	SwTextProps	01	aggr	the specific properties if the data object is a text object.
				Tags: xml.sequenceOffset=120
swValueBl ockSize	Numerical	01	attr	This represents the size of a Value Block  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime xml.sequenceOffset=80
unit	Unit	01	ref	Physical unit associated with the semantics of this data object. This attribute applies if no compuMethod is specified. If both units (this as well as via compuMethod) are specified the units shall be compatible.
			_	Tags: xml.sequenceOffset=350
valueAxisD ataType	ApplicationPrimi tiveDataType	01	ref	The referenced ApplicationPrimitiveDataType represents the primitive data type of the value axis within a compound primitive (e.g. curve, map). It supersedes CompuMethod, Unit, and BaseType.
				Tags: xml.sequenceOffset=355

Table 4.10: SwDataDefProps

### 4.2.2 Definition of Arrays

There are several use cases for a DiagnosticDataElement that actually represents an array of information. In some cases the array size is static and will not change at run-time, and in some cases the array size needs to change at run-time to fulfill the intended purpose.

[TPS\_DEXT\_01001] Definition of a fixed-sized array [ A DiagnosticDataElement shall be interpreted as a fixed-size array if all of the following conditions apply:

- 1. The attribute DiagnosticDataElement.maxNumberOfElements exists.
- 2. The value of the attribute DiagnosticDataElement.maxNumberOfElements is set to a value > 0.
- 3. The value of DiagnosticDataElement.arraySizeSemantics either does not exist or is set to ArraySizeSemanticsEnum.fixedSize.

\((RS\_DEXT\_00034, RS\_DEXT\_00038)\)

[TPS\_DEXT\_01002] Definition of a variable-sized array [ADiagnosticDataElement shall be interpreted as a variable-size array if all of the following conditions apply:

1. The attribute DiagnosticDataElement.maxNumberOfElements exists.



- 2. The value of the attribute DiagnosticDataElement.maxNumberOfElements is set to a value > 0.
- 3. The value of DiagnosticDataElement.arraySizeSemantics is set to ArraySizeSemanticsEnum.variableSize.

The value of <code>DiagnosticDataElement.maxNumberOfElements</code> shall be considered the maximum array size in terms of the number of elements. <code>J(RS\_DEXT\_00034, RS\_DEXT\_00038)</code>

[constr\_1326] Existence of a variable-sized array [ The value of the attribute DiagnosticDataElement.arraySizeSemantics shall not be set to ArraySizeSemanticsEnum.variableSize if the respective DiagnosticDataElement is referenced from a DiagnosticServiceDataMapping. | ()

### 4.2.3 Definition of textual Strings

DiagnosticDataElement can be used to model a **textual string** that shall be send to or received from the ECU by the tester.

In this case it will be necessary to define the **intended encoding** such that the part of the software on the ECU that produces or consumes of the string on the ECU can be checked (after the establishment of a <code>DiagnosticMapping</code>) for a matching encoding specification.

The encoding in the scope of the <code>DiagnosticDataElement</code> can be defined using the attribute <code>DiagnosticDataElement.swDataDefProps.baseType-Definition.baseTypeEncoding</code>.

#### 4.3 Textual Documentation

A Data Identifier also usually comes with some textual description that explains the meaning of the Data Identifier in short form. This ability is available via the inheritance from Identifiable, in particular by means of the attributes desc and/or introduction (see Figure 4.2).

This also means that the ability to add some form of textual description is widely usable in the scope of the <code>DiagnosticExtract</code>. Many meta-classes are derived from e.g. <code>DiagnosticCommonElement</code> (which inherits from <code>Identifiable</code>) or directly from <code>Identifiable</code> and therefore qualify for the described form of documentation.

In other words, the technology described in Figures 4.2 and 4.3 is not limited to <code>DiagnosticDataElement</code> but has a much wider applicability in the context of the <code>DiagnosticExtract</code>.



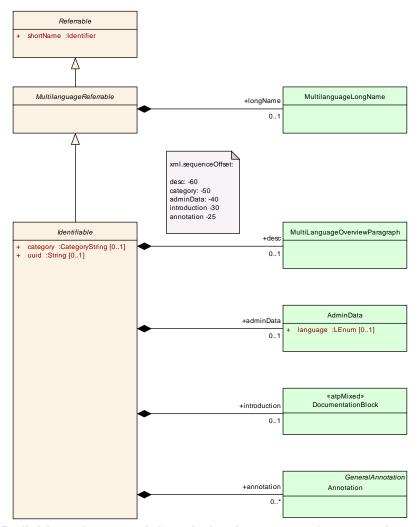


Figure 4.2: Definition of a textual description by means of desc and introduction

The details regarding the specification of textual content that goes along a given diagnostics element is detailed in Figure 4.3. In fact, <code>DocumentationBlock</code> provides a very sophisticated ability to define structured text that may consist e.g. of multiple paragraphs (formalized by meta-class <code>MultiLanguageOverviewParagraph</code> aggregated in the role p).

In addition to the ability to attach structured text, it is also possible to use the annotation (see Figure 4.2) to add short annotations (comparable to the usage of sticky notes) to diagnostic elements.



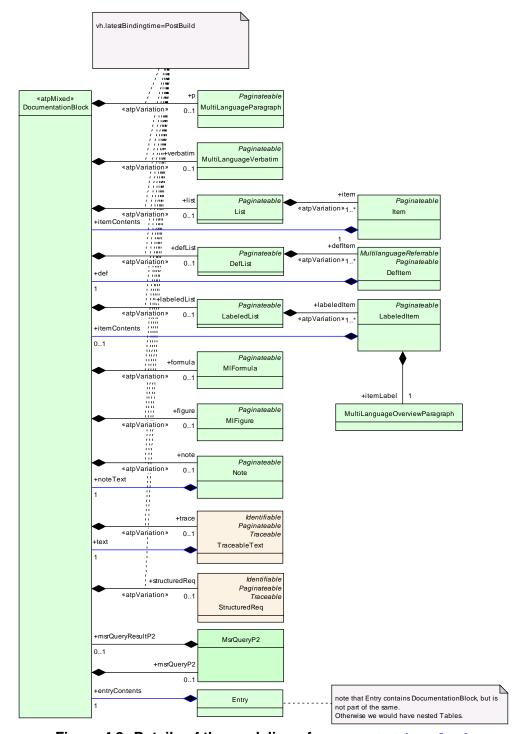


Figure 4.3: Details of the modeling of DocumentationBlock

Class	≪atpMixed≫ DocumentationBlock			
Package	M2::MSR::Documentation::BlockElements			
Note	This class represents a documentation block. It is made of basic text structure elements which can be displayed in a table cell.			
Base	ARObject			
Attribute	Туре	Mul.	Kind	Note





Attribute	Туре	Mul.	Kind	Note
defList	DefList	01	aggr	This represents a definition list in the documentation block.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=40
figure	MIFigure	01	aggr	This represents a figure in the documentation block.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=70
formula	MIFormula	01	aggr	This is a formula in the definition block.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=60
labeledList	LabeledList	01	aggr	This represents a labeled list.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=50
list	List	01	aggr	This represents numbered or unnumbered list.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=30
msrQuery P2	MsrQueryP2	01	aggr	
note	Note	01	aggr	This represents a note in the text flow.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=80
р	MultiLanguageP aragraph	01	aggr	This is one particular paragraph.
	al agraph			Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=10
structured Req	StructuredReq	01	aggr	This aggregation supports structured requirements embedded in a documentation block.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=100



Attribute	Туре	Mul.	Kind	Note
trace	TraceableText	01	aggr	This represents traceable text in the documentation block. This allows to specify requirements/constraints in any documentation block.  The kind of the trace is specified in the category.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=90
verbatim	MultiLanguageV erbatim	01	aggr	This represents one particular verbatim text.  Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=20

Table 4.11: DocumentationBlock

Class	MultiLanguageOverviewParagraph					
Package	M2::MSR::Docum	entation	::TextMo	odel::MultilanguageData		
Note	This is the conten	t of a mu	ultilingua	al paragraph in an overview item.		
Base	ARObject					
Attribute	Туре	Type Mul. Kind Note				
12	LOverviewPara graph	1*	aggr	This represents the text in one particular language.		
		Tags: xml.roleElement=true; xml.roleWrapper Element=false; xml.sequenceOffset=20; xml.type Element=false; xml.typeWrapperElement=false				

Table 4.12: MultiLanguageOverviewParagraph

## 4.4 Diagnostic Contribution

[TPS\_DEXT\_01003] DiagnosticContributionSet is the central part of the DiagnosticExtract [ The central part of formalization of the concept of the DiagnosticExtract is the DiagnosticContributionSet.

To some extent, it fulfills a similar role as the System [6] in the communication domain. | (RS\_DEXT\_00001, RS\_DEXT\_00002)

The DiagnosticContributionSet maintains references to DiagnosticCommonElement and by this means the actual definition of the extent of diagnostic contribution takes place.

In other words, the actual extent of a given contribution is created by the collection of DiagnosticCommonElements referenced by the DiagnosticContributionSet.



[TPS\_DEXT\_01004] DiagnosticContributionSet defines the scope of the DiagnosticExtract [The DiagnosticContributionSet has the ability to define the scope of the given DiagnosticExtract. This means that the DiagnosticContributionSet represents the DiagnosticExtract for the rest of the AUTOSAR model.

The scope may vary between the scope of an entire system down to the contribution of a specific tier-1 supplier to a much bigger context. \( \( (RS\_DEXT\_00001, RS\_DEXT\_00002) \)

**[TPS\_DEXT\_01055]** Standardized values of DiagnosticContribution—Set.category [ The scope of the DiagnosticContributionSet, on the other hand is determined by the value of its category. The following values are predefined by AUTOSAR:

- DIAGNOSTICS\_ABSTRACT\_SYSTEM\_DESCRIPTION: this DiagnosticContributionSet represents a more or less high-level definition that can be taken as a template for creating concrete DiagnosticContributionSets of category DIAGNOSTICS\_SYSTEM\_EXTRACT or DIAGNOSTICS\_ECU\_EXTRACT
- DIAGNOSTICS\_SYSTEM\_EXTRACT: the scope of this DiagnosticContributionSet consists of several EcuInstances.
- DIAGNOSTICS\_ECU\_EXTRACT: the scope of this DiagnosticContribution— Set consists of a single EcuInstances.

(RS DEXT 00001, RS DEXT 00002)

[constr\_1327] Multiplicity of DiagnosticEcuInstanceProps.ecuInstance | The multiplicity of DiagnosticEcuInstanceProps.ecuInstance shall be limited to 1 and the enclosing DiagnosticContributionSet shall only refer to at most one DiagnosticEcuInstanceProps if the enclosing DiagnosticContributionSet is of category DIAGNOSTICS\_ECU\_EXTRACT. | ()

Please note that [constr\_1328] resolves an intentional redundancy in the meta-model. Both DiagnosticContributionSet and DiagnosticServiceTable are able refer to EcuInstance with the idea that both DiagnosticContributionSet and DiagnosticServiceTable can be modeled independently from each other.

Of course, once the <code>DiagnosticContributionSet</code> and <code>DiagnosticServiceTable</code> are integrated in the same context (in particular by establishing the reference <code>DiagnosticContributionSet.serviceTable</code>) the individual references to the applicable <code>EcuInstances</code> need to be consistent.



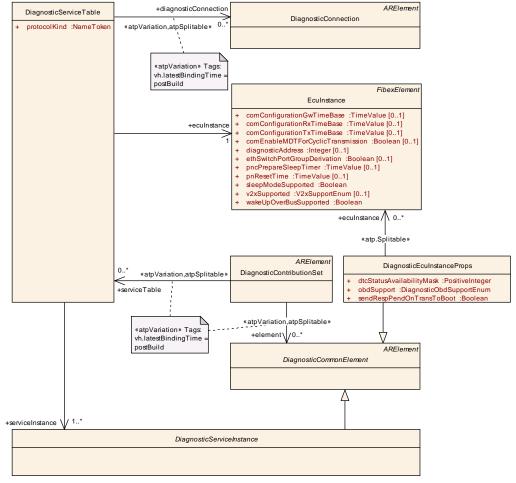


Figure 4.4: Diagnostic Contribution

[TPS\_DEXT\_01005] DiagnosticContributionSet can exist independently [ The DiagnosticContributionSet has been modeled as an ARElement so that its instances can exist independently from the existence of context-providing model-elements inside a given ARPackage. | (RS\_DEXT\_00001, RS\_DEXT\_00002)

Class	ARElement (abstract)			
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::ARPackage		
Note	An element that can be defined stand-alone, i.e. without being part of another element (except for packages of course).			
Base	ARObject, CollectableElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable			
Attribute	Туре	Mul.	Kind	Note
_	_	_	_	_

**Table 4.13: ARElement** 



Class	ARPackage					
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::ARPackage					
Note	AUTOSAR packag ARElements.	ge, allow	ing to c	reate top level packages to structure the contained		
		•		means that in a file based description system ally describe the contents of a package.		
	This is an extende	ed version	on of MS	R's SW-SYSTEM.		
Base	ARObject, AtpBlu			rintable, CollectableElement, Identifiable, ble		
Attribute	Туре	Mul.	Kind	Note		
arPackage	ARPackage	*	aggr	This represents a sub package within an ARPackage, thus allowing for an unlimited package hierarchy.		
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=blueprintDerivationTime xml.sequenceOffset=30		
element	PackageableEle ment	*	aggr	Elements that are part of this package  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=systemDesignTime xml.sequenceOffset=20		
referenceB ase	ReferenceBase	*	aggr	This denotes the reference bases for the package. This is the basis for all relative references within the package. The base needs to be selected according to the base attribute within the references.  Stereotypes: atpSplitable Tags: atpSplitkey=shortLabel xml.sequenceOffset=10		

Table 4.14: ARPackage

[TPS\_DEXT\_01005] elaborates on an important aspect that makes the <code>Diagnos-ticExtract</code> independent from the existence of a context. For example, it would have been possible to aggregate <code>DiagnosticContributionSet</code> somewhere, e.g. at <code>System</code>.

This kind of modeling intentionally puts DiagnosticContributionSet on the same level as e.g. System, as far as model granularity is concerned.



Class	DiagnosticContri	DiagnosticContributionSet				
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticContribution					
Note	of diagnostic mod arbitrary in order t contributors can c	This meta-class represents a root node of a diagnostic extract. It bundles a given set of diagnostic model elements. The granularity of the DiagonsticContributionSet is arbitrary in order to support the aspect of decentralized configuration, i.e. different contributors can come up with an own DiagnosticContributionSet.  Tags: atp.recommendedPackage=DiagnosticContributionSets				
Base	ARElement, ARO			eElement, Identifiable, MultilanguageReferrable,		
Attribute	Туре	Mul.	Kind	Note		
commonPr operties	DiagnosticCom monProps	01	aggr	Stereotypes: atpSplitableTags: atp. Splitkey=commonProperties		
element	DiagnosticCom monElement	*	ref	This represents a DiagnosticCommonElement considered in the context of the DiagnosticContributionSet  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=element, variationPoint.short Label vh.latestBindingTime=postBuild		
serviceTab le	DiagnosticServi ceTable	*	ref	This represents the collection of DiagnosticServiceTables to be considered in the scope of this DiagnosticContributionSet.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=serviceTable, variation Point.shortLabel vh.latestBindingTime=postBuild		

Table 4.15: DiagnosticContributionSet

## 4.5 Diagnostic Protocol

[TPS\_DEXT\_01124] Semantics of meta-class <code>DiagnosticProtocol</code> [ The meta-class <code>DiagnosticProtocol</code> can be used to describe the usage of different diagnostic protocols as well as their priority.  $|(RS_DEXT_00059)|$ 

Class	DiagnosticProtoc	DiagnosticProtocol				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticContribution				
Note	This meta-class represents the ability to define a diagnostic protocol.  Tags: atp.recommendedPackage=DiagnosticProtocols					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		



Attribute	Туре	Mul.	Kind	Note
diagnostic Connectio n	DiagnosticConn ection	*	ref	This represents the collection of applicable DiagnosticConnections for this DiagnosticProtocol.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=diagnosticConnection, variationPoint.shortLabel vh.latestBindingTime=postBuild
priority	PositiveInteger	1	attr	This represents the priority of the diagnostic protocol in comparison to other diagnostic protocols.  Lower numeric values represent higher protocol priority:  • 0 - Highest protocol priority  • 255 - Lowest protocol priority
protocolKin d	NameToken	1	attr	This identifies the applicable protocol.
serviceTab le	DiagnosticServi ceTable	01	ref	This represents the service table applicable for the given diagnostic protocol.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=serviceTable, variation Point.shortLabel vh.latestBindingTime=postBuild

Table 4.16: DiagnosticProtocol

Each DiagnosticProtocol refers to at most one DiagnosticServiceTable and to a collection of DiagnosticConnections.

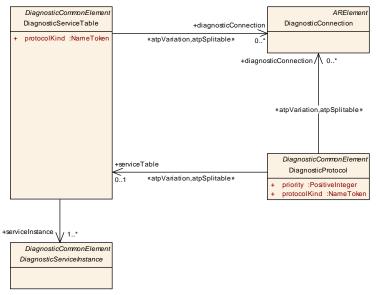


Figure 4.5: Modeling of DiagnosticProtocol



Please note that both DiagnosticServiceTable and DiagnosticProtocol have an attribute named protocolKind.

Class	DiagnosticServic	eTable				
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticContribution					
Note	services applicable	This meta-class represents a model of a diagnostic service table, i.e. the UDS services applicable for a given ECU.  Tags: atp.recommendedPackage=DiagnosticServiceTables				
Base				eElement, DiagnosticCommonElement, Identifiable, eableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note		
diagnostic Connectio n	DiagnosticConn ection	*	ref	This represents the DiagnosticConnection that is taken for handling the data transmission for the enclosing DiagnosticServiceTable.  It is possible to refer to more than one diagnosticConnections in order to support more than one diagnostic tester.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=diagnosticConnection, variationPoint.shortLabel vh.latestBindingTime=postBuild		
eculnstanc e	Eculnstance	1	ref	This represents the applicable Eculnstance for this DiagnosticServiceTable.		
protocolKin d	NameToken	1	attr	This identifies the applicable protocol.		
serviceInst ance	DiagnosticServi ceInstance	1*	ref	This represents the collection of DiagnosticServiceInstances to be considered in the scope of this DiagnosticServiceTable,		

Table 4.17: DiagnosticServiceTable

The attribute <code>DiagnosticServiceTable.protocolKind</code> shall be used to define the applicability of a <code>DiagnosticServiceTable</code> for a given protocol before the formal definition of the protocol even exists.

In other words, the attribute gives the designer of the DiagnosticServiceTable a means to express an intention about the usage of the DiagnosticServiceTable.

The attribute DiagnosticServiceTable.protocolKind, on the other hand, is used to define the actual nature of the DiagnosticProtocol.

By means of <code>DiagnosticProtocol.serviceTable</code> both "ends" of this aspect are put together and therefore it is reasonable to express a constraint about the value of attribute <code>protocolKind</code>

[constr\_1405] Value of DiagnosticProtocol.serviceTable vs. Diagnostic-ServiceTable.protocolKind [ If the reference DiagnosticProtocol.serviceTable exists then the value of DiagnosticProtocol.protocolKind shall be identical to the value of DiagnosticServiceTable.protocolKind. |()



**[TPS\_DEXT\_01006] The role of DiagnosticServiceTables** [ The existence of a DiagnosticServiceTable creates a formal relation between a collection of DiagnosticServiceInstances and the DiagnosticConnection that formalizes a conduit for specific pairs of diagnostic request and response messages taken to transmit the diagnostic service invocations from a tester to the applicable instance of the AUTOSAR diagnostic stack and convey the response of the diagnostic stack back to the tester.

In particular, this means that a <code>DiagnosticServiceTable</code> describes the set of <code>DiagnosticServiceInstances</code> that are available via <code>DiagnosticConnection</code> which is finally a request message to address a diagnostic service to an ECU and a response message to be used by the ECU to respond to the service. <code>
(RS DEXT 00039)</code>

Class	DiagnosticConne	ection				
Package	M2::AUTOSARTemplates::SystemTemplate::DiagnosticConnection					
Note	connections.	DiagnosticConncection that is used to describe the relationship between several TP connections.  Tags: atp.recommendedPackage=DiagnosticConnections				
Base	ARElement, ARO PackageableElem	•		eElement, Identifiable, MultilanguageReferrable,		
Attribute	Туре	Mul.	Kind	Note		
functionalR equest	TpConnectionId ent	*	ref	Reference to functional request messages.		
periodicRe sponseUu dt	PduTriggering	*	ref	Reference to UUDT responses.		
physicalRe quest	TpConnectionId ent	01	ref	Reference to a physical request message.		
response	TpConnectionId ent	01	ref	In the vast majority of cases a response is required. However, there are also cases where providing the response is not possible and/or not allowed.		
responseO nEvent	TpConnectionId ent	01	ref	Reference to a ROE message.		

**Table 4.18: DiagnosticConnection** 

Here is an example of a service table for UDS diagnostics:

**\$14** - GroupOfDTC: 0xFFFFF

**\$19** - Subfunction: \$02, Subfunction \$06

**\$22** - DataID: 0x1111, DataID: 0x2222

**\$2E** - DataID: 0x1111, DataID: 0x2222

**\$2F** - IO-ID:0x3333



[TPS\_DEXT\_01091] Relation between a DiagnosticServiceTable and one or more DiagnosticConnections [ In principle, the relation between a Diagnostic-ServiceTable and one or more DiagnosticConnections can be established in two possible ways:

- By means of the reference DiagnosticServiceTable.diagnosticConnection. This way, the concept of protocols and their priorities relative to each other is **not** considered.
- By means of the references <code>DiagnosticProtocol.diagnosticConnection</code> and <code>DiagnosticProtocol.serviceTable</code>. This way, the existence of several protocols and their priorities is positively considered.

()

Please note that alternatives mentioned in [TPS\_DEXT\_01091] may or may not be handled as alternatives in actual projects. It may be possible that in a first modeling step protocols are ignored entirely and therefore the respective relations are created by means of DiagnosticServiceTable.diagnosticConnection.

Later in time and as the project progresses, protocols may become a thing and are consequently introduced in the model. In response to this change, the relation in question is now created by means of the references <code>DiagnosticProtocol.diagnostic-Connection</code> and <code>DiagnosticProtocol.serviceTable</code>.

However, the existing relation created by means of the reference <code>DiagnosticServiceTable.diagnosticConnection</code> is not necessarily required to be removed. It may just as well continue to exist. However, in this case an obvious consistency rule as described in <code>[constr\_1406]</code> applies.

[constr\_1406] DiagnosticServiceTable.diagnosticConnection VS. DiagnosticProtocol.diagnosticConnection  $\lceil$  If a DiagnosticServiceTable exists that fulfills the following conditions:

- reference DiagnosticServiceTable.diagnosticConnection exists
- the DiagnosticServiceTable is referenced by means of DiagnosticProtocol.serviceTable

then all of the <code>DiagnosticConnections</code> referenced by means of <code>DiagnosticServiceTable.diagnosticConnection</code> shall also be referenced in the role <code>diagnosticConnection</code> from a <code>DiagnosticProtocol</code> that in turn references the respective <code>DiagnosticServiceTable</code> in the role <code>DiagnosticProtocol.serviceTable</code>. <code></code> ()




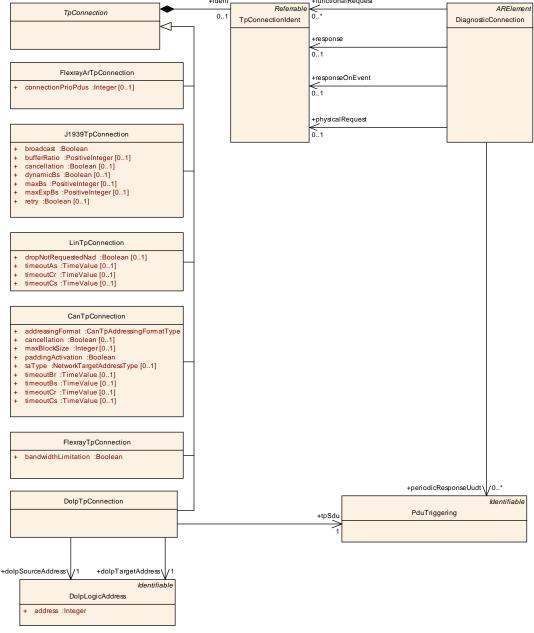


Figure 4.6: Modeling of DiagnosticConnection

### 4.6 Diagnostic Common Properties

**[TPS\_DEXT\_01007] Common properties of a DiagnosticExtract** [ There are some properties of a DiagnosticExtract that are shared among all elements of the DiagnosticExtract. These properties are modeled by means of the meta-class DiagnosticCommonProps. | (RS\_DEXT\_00001)



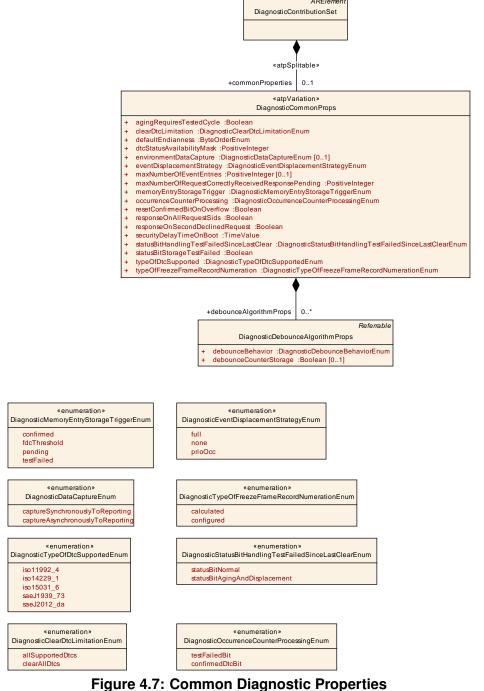

[TPS\_DEXT\_01008] DiagnosticContributionSet defines the scope for the application of the common diagnostic properties [ DiagnosticContributionSet aggregates DiagnosticCommonProps and by this means defines the scope for the application of the common diagnostic properties. |(RS DEXT 00001)



Class	≪atpVariation	n≫ Diag	gnostic	CommonProps				
Package				osticExtract::DiagnosticCommonProps				
Note		This meta-class aggregates a number of common properties that are shared among a diagnostic extract.						
	Tags: vh.latestBir	Tags: vh.latestBindingTime=codeGenerationTime						
Base	ARObject	Г	Т					
Attribute	Туре	Mul.	Kind	Note				
agingRequ iresTested Cycle	Boolean	1	attr	Defines whether the aging cycle counter is processed every aging cycles or else only tested aging cycle are considered.				
				If the attribute is set to TRUE: only tested aging cycle are considered for aging cycle counter.  If the attribute is set to FALSE: aging cycle counter				
				is processed every aging cycle.				
clearDtcLi mitation	DiagnosticClear DtcLimitationEn um	1	attr	Defines the scope of the DEM_ClearDTC Api.				
debounce AlgorithmP rops	DiagnosticDebo unceAlgorithmP rops	*	aggr	Defines the used debounce algorithms relevant in the context of the enclosing DiagnosticCommonProps. Usually, there is a variety of debouncing algorithms to take into account and therefore the multiplicity of this aggregation is set to 0*.				
defaultEndi anness	ByteOrderEnum	1	attr	Defines the default endianness of the data belonging to a DID or RID which is applicable if the DiagnosticDataElement does not define the endianness via the swDataDefProps.baseType attribute.				
dtcStatusA vailabilityM ask	PositiveInteger	1	attr	Mask for the supported DTC status bits by the Dem.				
environme ntDataCap ture	DiagnosticData CaptureEnum	01	attr	This attribute determines whether the capturing of environment data is done synchronously inside the report API function or whether the capturing shall be done asynchronously, i.e. after the report API function already terminated.				
eventDispl acementSt rategy	DiagnosticEvent DisplacementSt rategyEnum	1	attr	This attribute defines, whether support for event displacement is enabled or not, and which displacement strategy is followed.				
maxNumb erOfEvent Entries	PositiveInteger	01	attr	This attribute fixes the maximum number of event entries in the fault memory.				
maxNumb erOfReque stCorrectly ReceivedR esponsePe nding	PositiveInteger	1	attr	Maximum number of negative responses with response code 0x78 (requestCorrectlyReceived-ResponsePending) allowed per request. DCM will send a negative response with response code 0x10 (generalReject), in case the limit value gets reached. Value 0xFF means that no limit number of NRC 0x78 response apply.				



Attribute	Туре	Mul.	Kind	Note
memoryEn tryStorage Trigger	DiagnosticMem oryEntryStorage TriggerEnum	1	attr	Describes the primary trigger to allocate an event memory entry.
occurrence CounterPr ocessing	DiagnosticOccu rrenceCounterP rocessingEnum	1	attr	This attribute defines the consideration of the fault confirmation process for the occurrence counter.
resetConfi rmedBitOn Overflow	Boolean	1	attr	This attribute defines, whether the confirmed bit is reset or not while an event memory entry will be displaced.
responseO nAllReque stSids	Boolean	1	attr	If set to FALSE the DCM will not respond to diagnostic request that contains a service ID which is in the range from 0x40 to 0x7F or in the range from 0xC0 to 0xFF (Response IDs).
responseO nSecondD eclinedReq uest	Boolean	1	attr	Defines the reaction upon a second request (ClientB) that can not be processed (e.g. due to priority assessment).  TRUE: when the second request (Client B) can not be processed, it shall be answered with NRC21 BusyRepeatRequest.  FALSE: when the second request (Client B) can not be processed, it shall not be responded.
securityDel ayTimeOn Boot	TimeValue	1	attr	Start delay timer on power on in seconds.  This delay indicates the time at ECU boot power-on time where the Dcm remains in the default session and does not accept a security access.
statusBitH andlingTes tFailedSinc eLastClear	DiagnosticStatu sBitHandlingTes tFailedSinceLas tClearEnum	1	attr	This attribute defines, whether the aging and displacement mechanism shall be applied to the "TestFailedSinceLastClear" status bits.
statusBitSt orageTest Failed	Boolean	1	attr	This parameter is used to activate/deactivate the permanent storage of the "TestFailed" status bits. true: storage activated false: storage deactivated
typeOfDtc Supported	DiagnosticType OfDtcSupported Enum	1	attr	This attribute defines the format returned by Dem_DcmGetTranslationType and does not relate to/influence the supported Dem functionality.
typeOfFree zeFrameR ecordNum eration	DiagnosticType OfFreezeFrame RecordNumerati onEnum	1	attr	This attribute defines the type of assigning freeze frame record numbers for event-specific freeze frame records.

**Table 4.19: DiagnosticCommonProps** 

Enumeration	DiagnosticMemoryEntryStorageTriggerEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticCommonProps
Note	Trigger types to allocate an event memory entry.
Literal	Description



confirmed	Status information of UDS DTC status bit 3				
	Tags: atp.EnumerationValue=0				
fdcThreshold	Threshold to allocate an event memory entry and to capture the Freeze Frame.				
	Tags: atp.EnumerationValue=1				
pending	Status information of UDS DTC status bit 2.				
	Tags: atp.EnumerationValue=2				
testFailed	Status information of UDS DTC status bit 0.				
	Tags: atp.EnumerationValue=3				

Table 4.20: DiagnosticMemoryEntryStorageTriggerEnum

Enumeration	DiagnosticDataCaptureEnum					
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticCommonProps					
Note	Data triggering types					
Literal	Description					
captureAsyn- chronouslyTo Reporting	This represents the intention to capture the environment data asynchronously after the actual capture API function terminated.					
	Tags: atp.EnumerationValue=0					
captureSyn- chronouslyTo Reporting	This represents the intention to capture the environment data synchronously within the capture API function.					
	Tags: atp.EnumerationValue=1					

Table 4.21: DiagnosticDataCaptureEnum

Enumeration	DiagnosticTypeOfFreezeFrameRecordNumerationEnum						
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticCommonProps						
Note	FreezeFrame record numeration type						
Literal	Description						
calculated	Freeze frame records will be numbered consecutive starting by 1 in their chronological order.  Tags: atp.EnumerationValue=0						
configured	Freeze frame records will be numbered based on the given configuration in their chronological order.						
	Tags: atp.EnumerationValue=1						

Table 4.22: DiagnosticTypeOfFreezeFrameRecordNumerationEnum

Enumeration	DiagnosticClearDtcLimitationEnum			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticCommonProps			
Note	Scope of the DEM_ClearDTC Api.			



Literal	Description
allSupported Dtcs	DEM_ClearDtc API accepts all supported DTC values.
	Tags: atp.EnumerationValue=0
clearAllDtcs	DEM_ClearDtc API accepts ClearAllDTCs only.
	Tags: atp.EnumerationValue=1

Table 4.23: DiagnosticClearDtcLimitationEnum

Enumeration	DiagnosticEventDisplacementStrategyEnum					
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticCommonProps					
Note	Defines the displacement strategy.					
Literal	Description					
full	Event memory entry displacement is enabled, by consideration of priority active/passive status, and occurrence.					
	Tags: atp.EnumerationValue=0					
none	Event memory entry displacement is disabled.					
	Tags: atp.EnumerationValue=1					
prioOcc	Event memory entry displacement is enabled, by consideration of priority and occurrence (but without active/passive status).					
	Tags: atp.EnumerationValue=2					

Table 4.24: DiagnosticEventDisplacementStrategyEnum

Enumeration	DiagnosticOccurrenceCounterProcessingEnum						
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticCommonProps						
Note	The occurrence counter triggering types.						
Literal	Description						
confirmedDtc Bit	The occurrence counter is triggered by the TestFailed bit if the fault confirmation was successful (ConfirmedDTC bit is set).						
to et Feile d Dit	Tags: atp.EnumerationValue=0						
testFailedBit	The occurrence counter is only triggered by the TestFailed bit (and the fault confirmation is not considered).						
	Tags: atp.EnumerationValue=1						

Table 4.25: DiagnosticOccurrenceCounterProcessingEnum

Enumeration	DiagnosticTypeOfDtcSupportedEnum				
Package	2::AUTOSARTemplates::DiagnosticExtract::DiagnosticCommonProps				
Note	Supported Dtc Types				
Literal	Description				



iso11992_4	ISO11992-4 DTC format
	Tags: atp.EnumerationValue=0
iso14229_1	ISO14229-1 DTC format (3 byte format)
	Tags: atp.EnumerationValue=1
iso15031_6	ISO15031-6 DTC format (2 byte format)
	Tags: atp.EnumerationValue=2
saeJ1939_73	SAEJ1939-73 DTC format
	Tags: atp.EnumerationValue=3
saeJ2012_da	SAE_J2012-DA_DTCFormat_00 (3 byte format)
	Tags: atp.EnumerationValue=4

Table 4.26: DiagnosticTypeOfDtcSupportedEnum

In addition to the already described common diagnostic properties there are further properties that are specific to an individual EcuInstance.

[TPS\_DEXT\_01073] Diagnostic properties that are specific to an individual EcuInstance | Diagnostic properties that are specific to an individual EcuInstance are modeled by means of the meta-class DiagnosticEcuProps that is aggregated at EcuInstance in the role diagnosticProps. | (RS\_DEXT\_00048)

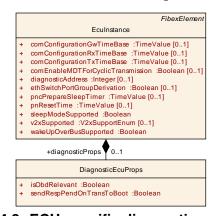


Figure 4.8: ECU-specific diagnostic properties

Class	DiagnosticEcuProps				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticCommonProps			
Note	This meta-class is defined to gather diagnostic-related properties that apply in the scope of an entire ECU.				
Base	ARObject				
Attribute	Type Mul. Kind Note				
isObdRele vant	Boolean	1	attr	This attribute indicates whether the ECU makes any contribution to the OBD.	



Attribute	Туре	Mul.	Kind	Note
sendResp PendOnTr ansToBoot	Boolean	1	attr	The purpose of this attribute is to define whether or not the ECU should send a NRC 0x78 (response pending) before transitioning to the bootloader (in this case the attribute shall be set to "true") or if the transition shall be initiated without sending NRC 0x78 (in this case the attribute shall be set to "false").

Table 4.27: DiagnosticEcuProps

# 5 Diagnostic Services

### 5.1 Introduction

The meta-model for the diagnostic services according to AUTOSAR, to a large degree, takes over aspects of the description of diagnostic services according to the definition of *Unified Diagnostic Services* (UDS) as of ISO 14229 [16].

### 5.2 Service Instance vs. Service Class

When it comes to diagnostic services, the meta-model distinguishes between the concept of a diagnostic service *instance* vs. the concept of a diagnostic service *class*.

As the terminology suggests, the diagnostic service *instance* (formalized as <code>Diagnos-ticServiceInstance</code>) implements a concrete use of a diagnostic service in a given context whereas purpose of the diagnostic service *class* (formalized as <code>Diagnostic-ServiceClass</code>) is to provide properties that are shared among all existing diagnostic service *instance*s in the model.

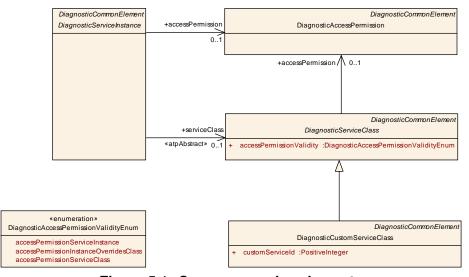


Figure 5.1: Common service elements



[constr\_1329] Existence of concrete sub-classes of DiagnosticServiceClass in the context created by a DiagnosticContributionSet [ One of the following mutually exclusive conditions shall apply for the existence of any concrete sub-class of DiagnosticServiceClass in the context created by a DiagnosticContributionSet:

- The subclass of DiagnosticServiceClass shall only appear once in the context created by a DiagnosticContributionSet
- If the subclass of DiagnosticServiceClass appears multiple times in the context created by a DiagnosticContributionSet then all instances shall have identical values for all of their attributes.

In case of aggregations the number of aggregated elements shall be identical and the values of primitive attributes of aggregated elements shall again be identical.

10

The background of [constr\_1329] is obviously related to the semantics of Diagnos-ticServiceClass which is to define model attributes that are shared among all DiagnosticServiceInstanceS.

This would not be possible if more that one <code>DiagnosticServiceClass</code> with a diverging set of attribute values exists.

Class	DiagnosticServic	DiagnosticServiceClass (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Common Service				
Note		This meta-class provides the ability to define common properties that are shared among all instances of sub-classes of DiagnosticServiceInstance.			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
accessPer mission	DiagnosticAcce ssPermission	01	ref	This represents the collection of DiagnosticAccessPermissions that allow for the execution of the referencing DiagnosticServiceClass.	
accessPer missionVal idity	DiagnosticAcce ssPermissionVa lidityEnum	1	attr	This attribute is responsible for clarifying the validity of the accessPermission reference.	

**Table 5.1: DiagnosticServiceClass** 

Class	DiagnosticServiceInstance (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Common Service			
Note	This represents a concrete instance of a diagnostic service.			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note



Attribute	Туре	Mul.	Kind	Note
accessPer mission	DiagnosticAcce ssPermission	01	ref	This represents the collection of DiagnosticAccessPermissions that allow for the execution of the referencing DiagnosticServiceInstance
serviceCla ss	DiagnosticServi ceClass	01	ref	This represents the corresponding "class", i.e. this meta-class provides properties that are shared among all instances of applicable sub-classes of DiagnosticServiceInstance.
				The subclasses that affected by this pattern implement references to the applicable "class"-role that substantiate this abstract reference.  Stereotypes: atpAbstract

**Table 5.2: DiagnosticServiceInstance** 

**[TPS\_DEXT\_01009] Limited support for the configuration of custom diagnostic services** [ Beside the support for explicitly modeled diagnostic services, there is also a limited support for the configuration of custom diagnostic services.

The formalization, however, goes only so far as to define the DiagnosticCustom-ServiceClass and its attribute customServiceId that allows for the definition of the custom service identifier used for the purpose. |(RS\_DEXT\_00047)

[constr\_1330] Custom service identifier shall not overlap with standardized service identifiers [ The value of the attribute customServiceId shall not be set to any of the values reserved for standardized service identifiers as defined by the ISO 14229-1, see [16]. |()

[TPS\_DEXT\_01010] Configuration of custom diagnostic services [ The support for the configuration of custom diagnostic services within the <code>DiagnosticExtract</code> does not extend beyond the ability to define that attribute <code>DiagnosticCustomServiceId</code>.

There is no corresponding formalization of a diagnostic service instance that supports references to e.g. a DiagnosticDataIdentifier. | (RS\_DEXT\_00047)

Class	DiagnosticCustomServiceClass					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Common Service					
Note	This represents the ability to define a custom diagnostic service class and assign an ID to it. Further configuration is not foreseen from the point of view of the diagnostic extract and consequently needs to be done on the level of ECUC.  Tags: atp.recommendedPackage=DiagnosticCustomServiceClasses					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Type Mul. Kind Note					



Attribute	Туре	Mul.	Kind	Note
customSer viceId	PositiveInteger	1	attr	This attribute may only be used for the definition of custom services. The values shall not overlap with existing standardized service IDs.

Table 5.3: DiagnosticCustomServiceClass

### 5.3 Access Permission, Session, Security Level

This chapter discusses a set of meta-classes that have been created to represent the concept of an *access permission* used in the context of the Dcm.

#### 5.3.1 Introduction to Access Permission

The DiagnosticAccessPermission is used to describe the ability (or the lack thereof) to execute a diagnostic service depending on the referenced Diagnostic-SecurityLevel and DiagnosticSession (see Figure 5.2).

At runtime, DiagnosticSessions are used to create a context for the execution of diagnostic functionality. Servers usually support a variety of different Diagnostic-Sessions. It is possible to switch between DiagnosticSessions at runtime.

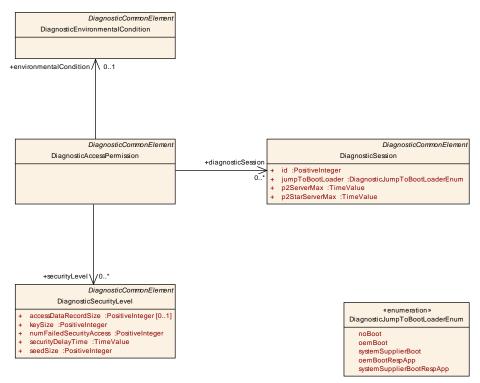


Figure 5.2: Common model elements relevant for the Dcm



[TPS\_DEXT\_01139] Semantics of the references from <code>DiagnosticAccessPermission</code> [ The semantics of the references from <code>DiagnosticAccessPermission</code> to

- DiagnosticSession in the role diagnosticSession
- DiagnosticSecurityLevel in the role securityLevel
- DiagnosticEnvironmentalCondition in the role environmentalCondition

in terms of how access permission is granted is subject to the specification of the Dcm [10]. |(RS\_DEXT\_00040)

[TPS\_DEXT\_01011] Semantics of DiagnosticSession.id | The value of the attribute DiagnosticSession.id has a given semantics according to ISO 14229-1 [16]. For the sake of completeness, the dedicated values of DiagnosticSession.id are:

- **0x01** This represents the *default session*. This session has a specific semantics in the context of diagnostics communication such that e.g. any diagnostic service that is supposed to execute in the *default session* cannot require any reference to a <code>DiagnosticSecurityLevel</code>.
- **0x02** This represents the *programming session*.
- **0x03** This represents the *extended diagnostic session*.
- **0x04** This represents the *safety system diagnostic session*.

The value range **0x40** .. **0x5F** is reserved for manufacturer-specific use. (RS\_DEXT\_00040)

Class	DiagnosticSecurityLevel				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm				
Note	This meta-class represents the ability to define a security level considered for diagnostic purposes.  Tags: atp.recommendedPackage=DiagnosticSecurityLevels				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
accessDat aRecordSi ze	PositiveInteger	01	attr	This represents the size of the AccessDataRecord used in GetSeed. Unit:byte.	
keySize	PositiveInteger	1	attr	This represents the size of the security key. Unit: byte.	
numFailed SecurityAc cess	PositiveInteger	1	attr	This represents the number of failed security accesses after which the delay time is activated.	
securityDel ayTime	TimeValue	1	attr	This represents the delay time after a failed security access. Unit: second.	



Attribute	Туре	Mul.	Kind	Note
seedSize	PositiveInteger	1	attr	This represents the size of the security seed. Unit: byte.

Table 5.4: DiagnosticSecurityLevel

[TPS\_DEXT\_01012] Rationale for the modeling of the multiplicity of DiagnosticAccessPermission.securityLevel | The multiplicity of DiagnosticAccessPermission.securityLevel has been set to 0..\* with the following motivation:

- The DiagnosticSession where the attribute DiagnosticSession.id is set to 0x01 shall not be associated with a DiagnosticSecurityLevel.
- There are no associated DiagnosticSecurityLevels required. As a consequence, the execution of the DiagnosticServiceInstance that references the given DiagnosticAccessPermission is always possible.

(RS DEXT 00041, RS DEXT 00042)

[TPS\_DEXT\_01070] Description of textually semi-formal formulated pre- and runconditions for the validity of <code>DiagnosticAccessPermission</code> [ AUTOSAR supports the description of textually formulated semi-formal pre- and run-conditions for the validity of <code>DiagnosticAccessPermission</code>.

This can be done by means of the attribute DiagnosticAccessPermission.in-troduction.structuredReq. | ()

For more details regarding the modeling of the semi-formal text please refer to Figure 4.3. An example of how the definition of pre- and run-conditions may look like in ARXML is sketched in listing 5.1.

To make this approach work it is important to standardize possible values of the attribute category such that the semi-formal semantics of the definition of pre- and run-conditions is protected by regulation of the AUTOSAR standard.

[TPS\_DEXT\_01071] Standardized values of DiagnosticAccessPermis-sion.introduction.structuredReq [ The following possible values of DiagnosticAccessPermission.introduction.structuredReq are standardized by AUTOSAR:

- **DIAG\_ACCESS\_PERM\_PRE\_COND**: this value describes the pre-condition of the corresponding <code>DiagnosticAccessPermission</code>.
- **DIAG\_ACCESS\_PERM\_RUN\_COND**: this value describes the run-condition of the corresponding <code>DiagnosticAccessPermission</code>.

(RS DEXT 00041, RS DEXT 00045)

Listing 5.1: Example for the definition of pre- and run-conditions for DiagnosticAccessPermission

<DIAGNOSTIC-ACCESS-PERMISSION>

<SHORT-NAME>exampleAccessPermission



```
<INTRODUCTION>
       <STRUCTURED-REQ>
           <SHORT-NAME>precondition
           <CATEGORY>DIAG_ACCESS_PERM_PRE_COND</CATEGORY>
           <DESCRIPTION>
               <P>
                   <L-1 L="EN">This is a textual description of a pre-
                      condition</L-1>
               </P>
           </DESCRIPTION>
       </STRUCTURED-REQ>
        <STRUCTURED-REQ>
           <SHORT-NAME>runcondition
           <CATEGORY>DIAG ACCESS PERM RUN COND
           <DESCRIPTION>
               <P>
                   <L-1 L="EN">This is a textual description of a run-
                      condition</L-1>
           </DESCRIPTION>
        </STRUCTURED-REQ>
   </INTRODUCTION>
    <DIAGNOSTIC-SESSION-REFS>
        <DIAGNOSTIC-SESSION-REF DEST="DIAGNOSTIC-SESSION">/AUTOSAR/
           UseCase_230/ExampleSession</DIAGNOSTIC-SESSION-REF>
   </DIAGNOSTIC-SESSION-REFS>
    <SECURITY-LEVEL-REFS>
        <SECURITY-LEVEL-REF DEST="DIAGNOSTIC-SECURITY-LEVEL">/AUTOSAR/
           UseCase_230/ExampleSecurityLevel</SECURITY-LEVEL-REF>
    </SECURITY-LEVEL-REFS>
</DIAGNOSTIC-ACCESS-PERMISSION>
```

[constr\_1419] Value of DiagnosticSecurityLevel.accessDataRecordSize [ If the attribute DiagnosticSecurityLevel.accessDataRecordSize exists then its value shall be greater than zero.  $\rfloor$ ()

Class	DiagnosticAccessPermission					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm					
Note	This represents the specification of whether a given service can be accessed according to the existence of meta-classes referenced by a particular DiagnosticAccessPermission.  In other words, this meta-class acts as a mapping element between several					
	(otherwise unrelated) pieces of information that are put into context for the purpose of checking for access rights.  Tags: atp.recommendedPackage=DiagnosticAccessPermissions					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Type Mul. Kind Note					
diagnostic Session	DiagnosticSessi on	*	ref	This represents the associated DiagnosticSessions		



Attribute	Туре	Mul.	Kind	Note
environme ntalConditi on	DiagnosticEnvir onmentalConditi on	01	ref	This represents the environmental conditions associated with the access permission.
securityLe vel	DiagnosticSecur ityLevel	*	ref	This represents the associated DiagnosticSecurityLevels

**Table 5.5: DiagnosticAccessPermission** 

Class	DiagnosticSession							
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm							
Note		This meta-class represents the ability to define a diagnostic session.						
	Tags: atp.recomn	nendedF	Package	=DiagnosticSessions				
Base				eElement, DiagnosticCommonElement, Identifiable, eableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note				
id	PositiveInteger	1	attr	This is the numerical identifier used to identify the DiagnosticSession in the scope of diagnostic workflow				
jumpToBo otLoader	DiagnosticJump ToBootLoaderE num	1	attr	This attribute represents the ability to define whether this diagnostic session allows to jump to Bootloader (OEM Bootloader or System Supplier Bootloader).				
				If this diagnostic session doesn't allow to jump to Bootloader the value JumpToBootLoaderEnum.noBoot shall be chosen.				
p2ServerM ax	TimeValue	1	attr	This is the session value for P2ServerMax in seconds (per Session Control).				
				The AUTOSAR configuration standard is to use SI units, so this parameter is defined as a float value in seconds.				
p2StarServ erMax	TimeValue	1	attr	This is the session value for P2*ServerMax in seconds (per Session Control).				
				The AUTOSAR configuration standard is to use SI units, so this parameter is defined as a float value in seconds.				

Table 5.6: DiagnosticSession

Enumeration	DiagnosticJumpToBootLoaderEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm
Note	This enumeration contains the options for jumping to a boot loader.
Literal	Description
noBoot	This diagnostic session doesn't allow to jump to Bootloader.
	Tags: atp.EnumerationValue=0



oemBoot	This diagnostic session allows to jump to OEM Bootloader. In this case the bootloader send the final response.
	Tags: atp.EnumerationValue=1
oemBoot RespApp	This diagnostic session allows to jump to OEM Bootloader and application sends final response.
	Tags: atp.EnumerationValue=3
systemSup- plierBoot	This diagnostic session allows to jump to System Supplier Bootloader. In this case the bootloader send the final response.
	Tags: atp.EnumerationValue=2
systemSup- plierBoot RespApp	This diagnostic session allows to jump to System Supplier Bootloader and application sends final response.
	Tags: atp.EnumerationValue=4

Table 5.7: DiagnosticJumpToBootLoaderEnum

Class	DiagnosticSecurityLevel						
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm						
Note	diagnostic purpos	es.		oility to define a security level considered for			
	Tags: atp.recomm	nendedF	Package:	=DiagnosticSecurityLevels			
Base				eElement, DiagnosticCommonElement, Identifiable, eableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note			
accessDat aRecordSi ze	PositiveInteger	01	attr	This represents the size of the AccessDataRecord used in GetSeed. Unit:byte.			
keySize	PositiveInteger	1	attr	This represents the size of the security key. Unit: byte.			
numFailed SecurityAc cess	PositiveInteger	1	attr	This represents the number of failed security accesses after which the delay time is activated.			
securityDel ayTime	TimeValue	1	attr	This represents the delay time after a failed security access. Unit: second.			
seedSize	PositiveInteger	1	attr	This represents the size of the security seed. Unit: byte.			

**Table 5.8: DiagnosticSecurityLevel** 

## 5.3.2 Prioritization of Access Permission

The definition of *access permission* itself can be done on different levels. It is therefore necessary to define how the existence of *access permission* on these different levels is supposed to be interpreted.



## [TPS\_DEXT\_01061] Supported scenarios for the definition of *access permission* The following scenarios are possible for the definition of *access permission*:

• The access permission is defined on the level of a DiagnosticServiceClass. In this scenario, the **intended semantics** is that this configuration is binding for **all** DiagnosticServiceInstances derived from the DiagnosticServiceClass.

The configuration of a DiagnosticServiceInstance.accessPermission is considered as an error and shall be reported accordingly.

This scenario applies if DiagnosticServiceClass.accessPermissionValidity is set to the value accessPermissionServiceClass.

• The access permission is defined on the level of an individual DiagnosticServiceInstance. In this scenario, the intended semantics is that the DiagnosticServiceClass shall not make any assumptions about the definition of the applicable access permission.

The configuration of a DiagnosticServiceClass.accessPermission is considered as an error and shall be reported accordingly. This scenario applies if DiagnosticServiceClass.accessPermissionValidity is set to the value accessPermissionServiceInstance.

• The definition of both DiagnosticServiceClass.accessPermission and DiagnosticServiceInstance.accessPermission is positively allowed.

In this scenario, the intended semantics is that if <code>DiagnosticService-Class.accessPermission</code> exists the individual <code>DiagnosticServiceIn-stances</code> are not required to define <code>DiagnosticServiceInstance.ac-cessPermission</code> but if they do then the <code>DiagnosticServiceIn-stance.accessPermission</code> gets priority over the definition of <code>Diagnostic-ServiceClass.accessPermission</code>.

This basically boils down to the ability to **override** the setting for *access permission* made on the level of a <code>DiagnosticServiceClass</code> by the setting on the level of an <code>DiagnosticServiceInstance</code>.

At the same time, this scenario saves some file footprint because (given the existence of <code>DiagnosticServiceClass.accessPermission</code>) there is no need to define individual <code>DiagnosticServiceInstance.accessPermission</code> unless there is a dedicated need for them.

This scenario applies if DiagnosticServiceClass.accessPermissionValidity is set to the value accessPermissionInstanceOverridesClass.

(RS DEXT 00041, RS DEXT 00049, RS DEXT 00050)

The scenarios defined by [TPS\_DEXT\_01061] need modeling support in order to allow the user to precisely express the intended semantics of a model with respect to *access permission*. For this purpose the attribute <code>DiagnosticServiceClass.accessPermissionValidity</code> is available.



Enumeration	DiagnosticAccessPermissionValidityEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Common Service
Note	This meta-class provides settings for how the accessPermission shall be resolved between DiagnosticServiceInstance and DiagnosticServiceClass.
Literal	Description
accessPer- mission Instance Overrides Class	This means that accessPermission set at the DiagnosticServiceInstance will override the accessPermission defined at the DiagnosticServiceClass.  Tags: atp.EnumerationValue=1
accessPer- mission ServiceClass	This means that the DiagnosticServiceClass is in charge to define the accessPermission.  Tags: atp.EnumerationValue=2
accessPer- mission Service	This means that the DiagnosticServiceInstance is in charge of defining the accessPermission
Instance	Tags: atp.EnumerationValue=3

Table 5.9: DiagnosticAccessPermissionValidityEnum

[TPS\_DEXT\_01062] Existence of DiagnosticServiceClass.accessPermissionValidity in an incomplete model [ If the attribute DiagnosticServiceClass.accessPermissionValidity does not exist then it shall be assumed that the configuration is incomplete. ](RS\_DEXT\_00001, RS\_DEXT\_00002, RS\_DEXT\_00041)

Please note that the model state described in [TPS\_DEXT\_01062] is still allowed because it may only be possible to decide about the value of the attribute at later points in the model's life cycle.

[TPS\_DEXT\_01063] Existence of DiagnosticServiceClass.accessPermissionValidity in a complete model [ As the model's life cycle approaches the point where the model is considered complete the attribute DiagnosticService-Class.accessPermissionValidity shall exist in order to be able to properly figure out the intended model semantics. 

[RS\_DEXT\_00001, RS\_DEXT\_00002, RS\_DEXT\_00001]

[TPS\_DEXT\_01052] Existence of attribute DiagnosticServiceInstance.accessPermission | Regarding the existence of the attribute DiagnosticServiceInstance.accessPermission the following rules apply:

- If neither the attribute <code>DiagnosticServiceInstance.accessPermission</code> or <code>DiagnosticServiceClass.accessPermission</code> exist it is assumed that the configuration is incomplete as no access permission is defined.
- If either the attribute DiagnosticServiceInstance.accessPermission or DiagnosticServiceClass.accessPermission exists but does not have further references to DiagnosticSession, DiagnosticEnvironmentalCon-



dition, or DiagnosticSecurityLevel then this means that the affected diagnostic services can be executed in any diagnostic session or security level. In other words, no restriction applies.

(RS DEXT 00041, RS DEXT 00049)

# 5.4 Environmental Conditions for the Execution of Diagnostic Services

In some cases, diagnostic functionality can only be executed if the vehicle is in a (safe) state that allows for the respective diagnostics function. For example, one such condition is that the vehicle is not driving, i.e. vehicle speed == 0.

The meta-class DiagnosticEnvironmentalCondition formalizes the idea of a condition which is evaluated during runtime of the ECU by looking at "environmental" states (such as the mentioned vehicle speed).

DiagnosticEnvironmentalConditions are based on the active modes in the application software or basic software or by comparison of DiagnosticDataElements with constant values. Atomic conditions can be combined by logical operations to form more complex conditions.



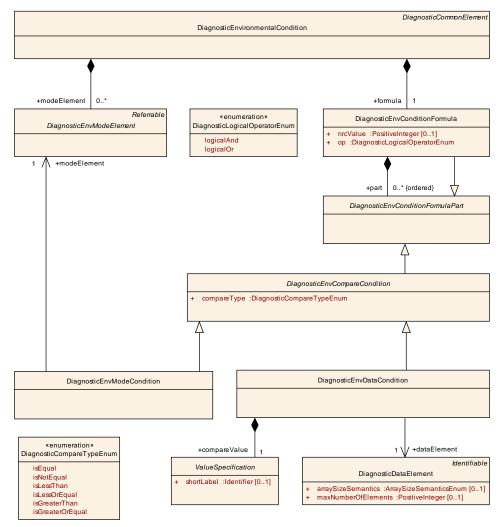


Figure 5.3: Formal modeling of the consideration of environmental conditions

Please note that it is possible to create a nested hierarchy (of arbitrary depth) of DiagnosticEnvConditionFormula. This modeling is supported by the fact that DiagnosticEnvConditionFormula inherits from and, at the same time, aggregates DiagnosticEnvConditionFormulaPart.

Class	DiagnosticEnvironmentalCondition				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dcm::DiagnosticService::Environmental	
Note	which is evaluated (e.g. one such con Tags: atp.recomm	The meta-class DignosticEnvironmentalCondition formalizes the idea of a condition which is evaluated during runtime of the ECU by looking at "environmental" states (e.g. one such condition is that the vehicle is not driving, i.e. vehicle speed == 0).  Tags: atp.recommendedPackage=DiagnosticEnvironmentalConditions			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
formula	DiagnosticEnvC onditionFormula	1	aggr	This attribute represents the formula part of the DiagnosticEnvironmentalCondition.	



Attribute	Туре	Mul.	Kind	Note
modeElem ent	DiagnosticEnvM odeElement	*	aggr	This aggregation contains a representation of ModeDeclarations in the context of a DiagnosticEnvironmentalCondition.

**Table 5.10: DiagnosticEnvironmentalCondition** 

#### 5.4.1 Environmental Condition Formula

The core part of a DiagnosticEnvironmentalCondition is the DiagnosticEnvConditionFormula.

Class	DiagnosticEnvConditionFormula					
Package	M2::AUTOSARTe Condition	mplates	::Diagno	osticExtract::Dcm::DiagnosticService::Environmental		
Note	A DiagnosticEnvConditionFormula embodies the computation instruction that is to be evaluated at runtime to determine if the DiagnosticEnvironmentalCondition is currently present (i.e. the formula is evaluated to true) or not (otherwise). The formula itself consists of parts which are combined by the logical operations specified by DiagnosticEnvConditionFormula.op.  If a diagnostic functionality cannot be executed because an environmental condition fails then the diagnostic stack shall send a negative response code (NRC) back to the client. The value of the NRC is directly related to the specific formula and is therefore formalized in the attribute DiagnosticEnvConditionFormula.nrcValue.					
Base	ARObject, Diagno	sticEnv	Conditio	nFormulaPart		
Attribute	Туре	Mul.	Kind	Note		
nrcValue	PositiveInteger	01	attr	This attribute represents the concrete NRC value that shall be returned if the condition fails.		
ор	DiagnosticLogi calOperatorEnu m	1	attr	This attribute represents the concrete operator (supported operators: and, or) of the condition formula.		
part (or- dered)	DiagnosticEnvC onditionFormula Part	*	aggr	This aggregation represents the collection of formula parts that can be combined by logical operators.		

Table 5.11: DiagnosticEnvConditionFormula

[TPS\_DEXT\_01113] Evaluation of a DiagnosticEnvConditionFormula [ A DiagnosticEnvConditionFormula embodies the computation instruction that is to be evaluated at runtime to determine if the DiagnosticEnvironmentalCondition is currently present (i.e. the formula is evaluated to true) or not (otherwise).

The DiagnosticEnvConditionFormula itself consists of parts which are combined by the logical operations represented by the attribute op. |(RS DEXT 00079)



Class	DiagnosticEnvConditionFormulaPart (abstract)					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Environmental Condition					
Note	A DiagnosticEnvConditionFormulaPart can either be a atomic condition, e.g. a DiagnosticEnvCompareCondition, or a DiagnosticEnvConditionFormula, again, which allows arbitrary nesting.					
Base	ARObject	ARObject				
Attribute	Туре	Mul.	Kind	Note		
_	_	_	_	_		

 Table 5.12: DiagnosticEnvConditionFormulaPart

[TPS\_DEXT\_01114] DiagnosticEnvConditionFormula that has no parts [A DiagnosticEnvConditionFormula that has no parts shall be evaluated to false. This rule shall apply independently of the value of DiagnosticEnvConditionFormula.op. | (RS\_DEXT\_00079)

[TPS\_DEXT\_01115] DiagnosticEnvConditionFormula that has one part [A DiagnosticEnvConditionFormula that has one part shall be evaluated to the evaluation result of this part. This rule shall apply independently of the value of DiagnosticEnvConditionFormula.op. | (RS\_DEXT\_00079)

[TPS\_DEXT\_01116] DiagnosticEnvConditionFormula that has more than one part [The evaluation result of a DiagnosticEnvConditionFormula with more than one part shall be calculated by combining the results of the parts with the logical Operation specified by DiagnosticEnvConditionFormula.op.

The evaluation shall be done in a "short-cut" manner, i.e. following the rules for the evaluation of the logical operators in C.

The consequences of this approach are:

- The parts shall be evaluated in the specified order starting at the first element. This is why the aggregation of part is decorated by the ordered qualifier.
- after the evaluation of each part a check shall be executed if it is still possible
  that the evaluation of the remaining parts (to true or false) could change the
  overall result.
- As soon as a change of the overall result is no longer possible, i.e. any of the following conditions evaluates to false:
  - there are no parts left
  - the current part was evaluated to false and DiagnosticEnvConditionFormula.op == DiagnosticLogicalOperatorEnum.logicalland
  - the current part was evaluated to true and DiagnosticEnvConditionFormula.op == DiagnosticLogicalOperatorEnum.logicalOr



the evaluation of the parts shall be finalized and the evaluation result of the current part shall be considered the overall evaluation result of the formula.

Regarding the strategy for returning NRC values please refer to the specification of the SWS Dcm [10].

(RS\_DEXT\_00079)

**[TPS\_DEXT\_01117]** Semantics of DiagnosticEnvConditionFormula.nrc-Value [ If a diagnostic functionality cannot be executed because an environmental condition fails, i.e. the formula is evaluated to false, then the diagnostic stack shall send an optional negative response code (NRC) back to the client (if it is present).

If no value for NRC is defined then a pre-defined NRC value as defined in the SWS Dcm [10] will be sent back. The value of the NRC is directly related to the specific DiagnosticEnvConditionFormula and is therefore formalized in the attribute DiagnosticEnvConditionFormula.nrcValue. | (RS DEXT 00079)

[constr\_1464] Allowed value range of DiagnosticEnvConditionFormula.nr-cValue | The value of attribute DiagnosticEnvConditionFormula.nrcValue shall be limited to the interval [1..255]. |()

The rationale for the existence of [constr 1464] is provided by ISO 14229-1 [16].

### 5.4.2 Atomic Conditions

Atomic conditions in the context of a <code>DiagnosticEnvConditionFormula</code> are described by means of meta-class <code>DiagnosticEnvCompareConditions</code>. The formulation of <code>DiagnosticEnvCompareConditions</code> is based on the idea of a comparison at runtime of some variable data with a constant value.

The actual type of the comparison (==, !=, <, <=, ...) is specified by means of the attribute DiagnosticEnvCompareCondition.compareType.

Class	DiagnosticEnvCompareCondition (abstract)				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Environmental Condition				
Note	DiagnosticCompareConditions are atomic conditions. They are based on the idea of a comparison at runtime of some variable data with something constant. The type of the comparison (==, !=, <, <=,) is specified in DiagnosticCompareCondition.compareType.				
Base	ARObject, Diagno	ARObject, DiagnosticEnvConditionFormulaPart			
Attribute	Туре	Mul.	Kind	Note	
compareTy pe	DiagnosticCom pareTypeEnum	1	attr	This attributes represents the concrete type of the comparison.	

**Table 5.13: DiagnosticEnvCompareCondition** 

DiagnosticEnvCompareCondition is an abstract meta-class that acts as a base class for two concrete meta-classes designed to handle different operand types.



The specific sub-classes (the details are explained in sections 5.4.2.1 and 5.4.2.2) of DiagnosticEnvCompareCondition support a different set of attributes of DiagnosticCompareTypeEnum for setting the value of attribute compareType.

#### 5.4.2.1 Data Condition

[TPS\_DEXT\_01118] Semantics of DiagnosticEnvDataCondition [ The metaclass DiagnosticEnvDataCondition represents an atomic condition that compares the current value of the referenced DiagnosticDataElement with a constant value defined by the ValueSpecification aggregated in the role compareValue. | (RS\_DEXT\_00079)

[constr\_1465] Allowed values of compareType in the context of a DiagnosticEnvDataCondition [ Within the context of a DiagnosticEnvDataCondition all values of DiagnosticCompareTypeEnum are supported for the inherited attribute compareType. |()

Class	DiagnosticEnvDataCondition						
Package	M2::AUTOSARTe Condition	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Environmental Condition					
Note	A DiagnosticEnvDataCondition is an atomic condition that compares the current value of the referenced DiagnosticDataElement with a constant value defined by the ValueSpecification. All compareTypes are supported.						
Base	ARObject, Diagno	sticEnv	Compare	eCondition, DiagnosticEnvConditionFormulaPart			
Attribute	Туре	Mul.	Kind	Note			
compareV alue	ValueSpecificati on	1	aggr				
dataEleme nt	DiagnosticData Element	1	ref	This reference represents the related diagnostic data element.			

Table 5.14: DiagnosticEnvDataCondition

### 5.4.2.2 Mode Condition

[TPS\_DEXT\_01119] Semantics of DiagnosticEnvModeCondition  $\lceil$  The metaclass DiagnosticEnvModeCondition represents an atomic condition that compares the current value of the referenced ModeDeclarationGroupPrototype with the value of a ModeDeclaration taken as the reference value.  $\rfloor$  (RS\_DEXT\_00079)

The concrete modeling of this aspect is sketched in Figure D.4.

Please note that the ModeDeclarationGroupPrototype as well as the applicable ModeDeclaration are both referenced in the concrete modeling of the attribute DiagnosticEnvSwcModeElement.mode.

The idea behind this modeling approach (for more information, please refer to Figure D.4) is that the ModeDeclaration can only be a member of the specific Mod-



eDeclarationGroup taken to type the respective ModeDeclarationGroupPrototype anyway.

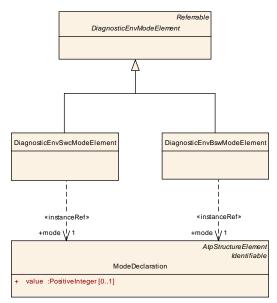


Figure 5.4: Specializations of DiagnosticEnvModeElement

Admittedly, this relation could be expressed by means of two references and a formal constraint **or** it could be expressed by way of a **single** reference that's implying an interpreting of the model in a specific way. AUTOSAR opts for the latter alternative, which is detailed by [TPS DEXT 01120].

[TPS\_DEXT\_01120] Comparison of the value of a ModeDeclarationGroupPrototype with a ModeDeclaration [ For the comparison of the value of a ModeDeclarationGroupPrototype with a ModeDeclaration, two alternatives (see Figure 5.4) apply, depending on whether mode condition is executed in application software (swc) or basic software (bsw):

- The ModeDeclarationGroupPrototype referenced in the role DiagnosticEnvSwcModeElement.mode.contextModeDeclarationGroup shall be compared to the ModeDeclaration referenced in the role DiagnosticEnvSwcModeElement.mode.targetMode.
- The ModeDeclarationGroupPrototype referenced in the role Diagnos-ticEnvBswModeElement.mode.contextModeDeclarationGroup shall be compared to the ModeDeclaration referenced in the role DiagnosticEnvBswModeElement.mode.targetMode.

|(RS\_DEXT\_00079)

[constr\_1466] Allowed values of compareType in the context of a DiagnosticEnvModeCondition [ Within the context of a DiagnosticEnvDataCondition only a subset of the values of DiagnosticCompareTypeEnum is supported for the inherited attribute compareType, namely:



- DiagnosticCompareTypeEnum.isEqual
- DiagnosticCompareTypeEnum.isNotEqual

 $\rfloor 0$ 

[constr\_1467] References in DiagnosticEnvModeCondition [In a DiagnosticEnvModeCondition the reference modeElement shall only point to a DiagnosticEnvModeElement that is aggregated inside the same DiagnosticEnvironmentalCondition as the DiagnosticEnvModeCondition itself. |()

Please note that the main benefit of the existence of the dedicated meta-class <code>DiagnosticEnvModeElement</code> is to keep the (serialized) model clean. Given the fulfillment of [constr\_1467], the potentially lengthy <code>InstanceRef</code> for identifying the operands of a mode comparison does not (if applicable) have to be repeated but can be reused multiple times in the context of the enclosing <code>DiagnosticEnvironmentalCondition</code>.

Class	DiagnosticEnvMo	odeCon	dition		
Package	M2::AUTOSARTe Condition	mplates	::Diagno	osticExtract::Dcm::DiagnosticService::Environmental	
Note	DiagnosticEnvModeCondition are atomic condition based on the comparison of the active ModeDeclaration in a ModeDeclarationGroupProtoype with the constant value of a ModeDeclaration.				
	contains enough i	The formulation of this condition uses only one DiagnosticEnvElement, which contains enough information to deduce the variable part (i.e. the part that changes at runtime) as well as the constant part of the comparison.			
	Only DiagnosticCompareTypeEnum.isEqual or DiagnosticCompareTypeEnum.isNotEqual are eligible values for DiagnosticAtomicCondition.compareType.				
Base	ARObject, Diagno	sticEnv	Compar	eCondition, DiagnosticEnvConditionFormulaPart	
Attribute	Туре	Mul.	Kind	Note	
modeElem ent	DiagnosticEnvM odeElement	1	ref	This reference represents both the ModeDeclarationGroupPrototype and the ModeDeclaration relevant for the mode comparison.	

Table 5.15: DiagnosticEnvModeCondition



Class	DiagnosticEnvMo	DiagnosticEnvModeElement (abstract)					
Package	M2::AUTOSARTe Condition	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Environmental Condition					
Note	All ModeDeclarations that are referenced in a DiagnosticEnvModeCondition must be defined as a DiagnosticEnvModeElement of this DignosticEnvironmentalCondition.  This concept keeps the ARXML clean: It avoids that the DignosticEnvConditionFormula is cluttered by lengthy InstanceRef definitions.  Furthermore, it allows that an InstanceRef only needs to be defined once and can be						
Base	used multiple times in the different DiagnosticEnvModeConditions.  ARObject, Referrable						
Attribute	Туре	Mul.	Kind	Note			
_	_	_	_	-			

Table 5.16: DiagnosticEnvModeElement

Class	DiagnosticEnvSv	DiagnosticEnvSwcModeElement			
Package	M2::AUTOSARTe Condition	mplates	::Diagno	osticExtract::Dcm::DiagnosticService::Environmental	
Note	This meta-class represents the ability to refer to a ModeDeclaration in a concrete System context.				
Base	ARObject, Diagno	sticEnvl	ModeEle	ement, Referrable	
Attribute	Туре	Type Mul. Kind Note			
mode	ModeDeclaratio n	1	iref	This reference identifies both the ModeDeclarationGroupPrototype and the ModeDeclaration for the specific mode comparison.	

Table 5.17: DiagnosticEnvSwcModeElement

Class	DiagnosticEnvBswModeElement				
Package	M2::AUTOSARTe Condition	mplates	::Diagno	sticExtract::Dcm::DiagnosticService::Environmental	
Note		This meta-class represents the ability to refer to a specific ModeDeclaration in the scope of a BswModuleDescription.			
Base	ARObject, Diagno	sticEnvl	ModeEle	ement, Referrable	
Attribute	Туре	Mul.	Kind	Note	
mode	ModeDeclaratio n	1	iref	This reference identifies both the ModeDeclarationGroupPrototype and the ModeDeclaration for the specific mode comparison.	

Table 5.18: DiagnosticEnvBswModeElement



## 5.5 Diagnostic Services supported by AUTOSAR

The following sub-chapters describe the modeling of the collection of relevant diagnostic services as defined in the ISO 14229-1 [16]. This means that the definition of the AUTOSAR DiagnosticExtract does not explicitly support the total collection of diagnostic services as defined by [16].

Some of the diagnostic services compiled in this document define so-called subfunctions that need to be identified to fully specify the nature of the respective diagnostic service.

[TPS DEXT 01045] Supported diagnostic services [ The table 5.19 shows the UDS services supported by the DiagnosticExtract. |(RS DEXT 00003, RS DEXT 00006, RS DEXT 00005, RS DEXT 00004. RS DEXT 00007. RS DEXT 00008. RS DEXT 00009. RS DEXT 00010. RS DEXT 00011. RS DEXT 00012. RS DEXT 00013. RS DEXT 00014. RS DEXT 00015. RS DEXT 00016, RS DEXT 00017, RS DEXT 00018. RS DEXT 00019, RS DEXT 00020, RS DEXT 00021, RS DEXT 00022)

ID	Service
0x10	SessionControl
0x11	EcuReset
0x14	ClearDiagnosticInformation
0x19	ClearDTCInformation
0x22	ReadDataByldentifier
0x23	ReadMemoryByAddress
0x27	SecurityAccess
0x28	CommunicationControl
0x2A	ReadDataByPeriodicIdentifier
0x2C	DynamicallyDefineDataIdentifier
0x2E	WriteDataByldentifier
0x2F	IOControl
0x31	RoutineControl
0x34	RequestDownload
0x35	RequestUpload
0x36	TransferData
0x37	RequestTransferExit
0x3D	WriteMemoryByAddress
0x85	ControlDTCSetting
0x86	ResponseOnEvent

Table 5.19: Supported diagnostic services

[TPS\_DEXT\_01013] Specification of sub-functions by means of attribute DiagnosticServiceInstance.category



In all cases where a diagnostic service defines a sub-function according to ISO 14229-1 [16], the value of the attribute category of the applicable sub-class of <code>Diagnos-ticServiceInstance</code> can be used to specify the applicable sub-function as a textual token.

Constraints are defined to clarify the existence of standardized values of the attribute category for the given sub-function. This implies that an instance of the given sub-class of DiagnosticServiceInstance only has a single sub-function at a time. 

(RS DEXT 00049, RS DEXT 00051)

[TPS\_DEXT\_01014] Possible values of the category attribute for diagnostic services [ AUTOSAR claims the right to standardize the possible values of the attribute category for given diagnostic services. |(RS\_DEXT\_00001, RS\_DEXT\_00051)

If applicable, AUTOSAR allows for the usage of values of the attribute category other than the standardized values.

In this case, however, proprietary values of the attribute category shall be prefixed with a company-specific name fragment in order to avoid collisions that could occur if or when the list of possible values claimed by the AUTOSAR standard itself is extended. Example:

Listing 5.2: Example for the definition of a custom category

## 5.5.1 DataByldentifier

This chapter describes the modeling of diagnostic services ReadDataByIdentifier (0x22) and WriteDataByIdentifier (0x2E).

The purpose of this diagnostic service is to enable a tester to request the values of data records from the AUTOSAR diagnostics stack. The data records are identified by a formally modeled <code>DiagnosticDataIdentifier</code>.

The modeling of this diagnostic service comprises the two meta-classes <code>Diagnos-ticReadDataByIdentifier</code> and <code>DiagnosticWriteDataByIdentifier</code>. These meta-classes both need to specify the set of <code>DiagnosticDataIdentifiers</code> as well as the set of applicable <code>DiagnosticAccessPermissions</code>.

As these properties are shared between instances of <code>DiagnosticReadDataByI-dentifier</code> and <code>DiagnosticWriteDataByIdentifier</code>, an abstract base class <code>named DiagnosticDataByIdentifier</code> has been created that provides the ac-



tual references to DiagnosticDataIdentifier and DiagnosticAccessPermission.

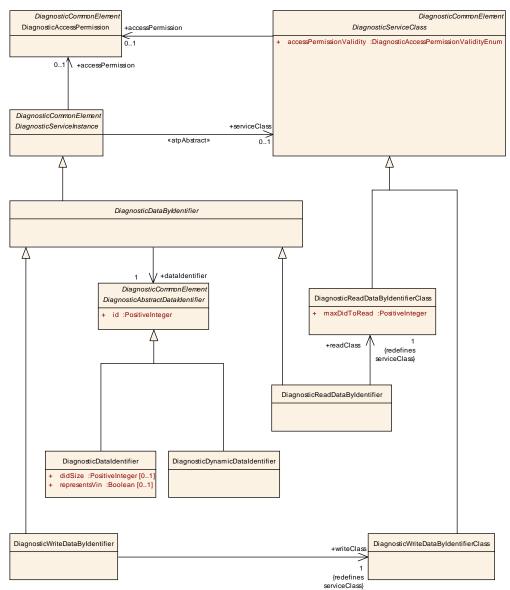


Figure 5.5: Modeling of diagnostic services ReadDataByIdentifier (0x22) and Write-DataByIdentifier (0x2E)

[TPS\_DEXT\_01054] Existence of DiagnosticDataByIdentifier.dataIdentifier [The configuration of a given DiagnosticDataByIdentifier is considered incomplete until the reference in the role DiagnosticDataByIdentifier.dataIdentifier exists. ](RS\_DEXT\_00007, RS\_DEXT\_00013, RS\_DEXT\_00034)

The meaning of [TPS\_DEXT\_01054] is that the reference may be missing in intermediate steps of the configuration work flow. But at the point in time where ECU configuration is generated from the <code>DiagnosticExtract</code> the reference is needed to able to make sense of the model for the given <code>DiagnosticDataByIdentifier</code>.



The ability to read multiple DIDs at run-time is controlled via attribute <code>Diagnosti-cReadDataByIdentifierClass.maxDidToRead</code> and therefore it is sufficient to (at configuration-time) limit the multiplicity of attribute <code>dataIdentifier</code> to 1.

Please note that the reference <code>DiagnosticDataByIdentifier.dataIdentifier</code> goes to <code>DiagnosticAbstractDataIdentifier</code>. This modeling approach allows to actually reference any of the meta-classes that inherit from <code>DiagnosticAbstractDataIdentifier</code>.

<code>DataIdentifier</code>.

Class	DiagnosticRead	DataByl	dentifie	r		
Package	M2::AUTOSARTe Identifier	mplates	::Diagno	osticExtract::Dcm::DiagnosticService::DataBy		
Note	·	This represents an instance of the "Read Data by Identifier" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticDataByIdentifiers				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic DataByldentifier, DiagnosticServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Type	Mul.	Kind	Note		
readClass	DiagnosticRead DataByldentifier Class	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to access shared attributes among all		
				DiagnosticReadDataByIdentifier in the given context.		

Table 5.20: DiagnosticReadDataByldentifier

Class	DiagnosticWritel	DataByl	dentifie	r		
Package	M2::AUTOSARTe Identifier	mplates	::Diagno	osticExtract::Dcm::DiagnosticService::DataBy		
Note	·			e "Write Data by Identifier" diagnostic service.  =DiagnosticDataByIdentifiers		
Base	-	Diagnos	ticServic	eElement, DiagnosticCommonElement, Diagnostic celnstance, Identifiable, MultilanguageReferrable,		
Attribute	Type	Mul.	Kind	Note		
writeClass	DiagnosticWrite DataByldentifier Class	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to				
		Thereby, the reference represents the ability to access shared attributes among all DiagnosticWriteDataByldentifier in the given context.				

Table 5.21: DiagnosticWriteDataByldentifier



Class	DiagnosticWritel	DiagnosticWriteDataByldentifierClass			
Package	M2::AUTOSARTe Identifier	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DataBy Identifier			
Note	Identifier" diagnos	This meta-class contains attributes shared by all instances of the "Write Data by Identifier" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticDataByIdentifiers			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
_	_	_	_	-	

Table 5.22: DiagnosticWriteDataByldentifierClass

Class	DiagnosticDataByldentifier (abstract)				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DataBy Identifier			
Note	This represents an abstract base class for all diagnostic services that access data by identifier.				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Type Mul. Kind Note				
dataldentifi	DiagnosticAbstr 1 ref This represents the linked				
er	actDataIdentifier			DiagnosticDataldentifier.	

Table 5.23: DiagnosticDataByldentifier

The modeling of <code>DiagnosticDataByIdentifier</code> represents concrete instances of diagnostic services within a <code>DiagnosticExtract</code>. However, there are attributes that are shared among all instances of <code>DiagnosticReadDataByIdentifier</code>.

For this purpose the dedicated service class <code>DiagnosticReadDataByIdentifierClass</code> has been introduced.

Class	DiagnosticRead	DiagnosticReadDataByldentifierClass				
Package	M2::AUTOSARTe Identifier	mplates	::Diagno	osticExtract::Dcm::DiagnosticService::DataBy		
Note	This meta-class contains attributes shared by all instances of the "Read Data by Identifier" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticDataByIdentifiers					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Type Mul. Kind Note				
maxDidTo Read	PositiveInteger	1	attr	This attribute represents the maximum number of allowed DIDs in a single instance of DiagnosticReadDataByldentifier.		

Table 5.24: DiagnosticReadDataByldentifierClass



Please note that it is possible to create a reference to a concrete Diagnostic-DataIdentifier from different DiagnosticServiceInstances.

[TPS\_DEXT\_01050] Consistency of DiagnosticServiceSwMapping with respect to data IDs [For each DiagnosticServiceSwMapping that references a DiagnosticValueNeeds and a DiagnosticDataByIdentifier, the value of DiagnosticValueNeeds.didNumber shall be ignored and the value of DiagnosticDataByIdentifier.dataIdentifier.id shall be taken instead. [RS\_DEXT\_00007, RS\_DEXT\_00013, RS\_DEXT\_00034, RS\_DEXT\_00052]

Class	DiagnosticValue	Needs				
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds					
Note	Manager (DCM) v	vhich are	e not rela	e configuration of the Diagnostic Communication ated to a particular item (e.g. a PID). The main use rts to the DCM which are not related to a particular		
				eiver communicated value, the related value shall be signalBasedDiagnostics".		
	communicated via communication (e software specifica	the por .g. appr tions (S	t referer opriate r WS).	mmunicated value, the related value shall be need by asssignedPort. The details of this naming conventions) are specified in the related		
Base	ARObject, Diagno Referrable, Service			ement, Identifiable, MultilanguageReferrable,		
Attribute	Туре	Mul.	Kind	Note		
dataLength	PositiveInteger	01	attr	This attribute is applicable only if the ServiceNeed is aggregated within BswModuleDependency.  This attribute represents the length of data (in bytes) provided for this particular PID signal.		
diagnostic ValueAcce ss	DiagnosticValue AccessEnum	01	attr	This attribute controls whether the data can be read and written or whether it is to be handled read-only.		
didNumber	PositiveInteger	01	attr	This represents a Data identifier for the diagnostic value. This allows to predefine the DID number if the responsible function developer has received a particular requirement from the OEM or from a standardization body.		
fixedLengt h	Boolean	01	attr	This attribute controls whether the data length of the data is fixed.		
processing Style	DiagnosticProce ssingStyleEnum	01	attr	This attribute controls whether interaction requires the software-component to react synchronously on a request or whether it processes the request in background but still the DCM has to issue the call again to eventually obtain the result of the request.		

**Table 5.25: DiagnosticValueNeeds** 



#### 5.5.2 IOControl

This chapter describes the modeling of diagnostic services InputOutput Control (0x2F). The purpose of this service is to provide the tester with the ability to override values exchanged with the AUTOSAR hardware abstraction.

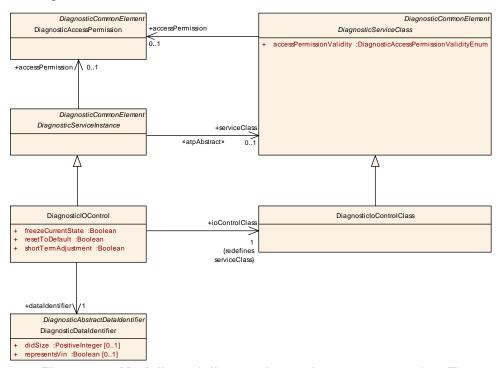


Figure 5.6: Modeling of diagnostic service IOControl (0x2F)

**[TPS\_DEXT\_01015] Meaning of attributes of DiagnosticIOControl** [ The attributes freezeCurrentState, resetToDefault, and shortTermAdjustment represent the capabilities of the server rather than a concrete request message. ] (RS DEXT 00014)

[TPS\_DEXT\_01016] The capability returnControlToEcu [ According to the statement made by [TPS\_DEXT\_01015], there is no formal means provided to configure the capability to execute returnControlToEcu. This lack of configuration is intentional because the capability is always available and cannot be revoked anyway. ] (RS\_DEXT\_00014)

[TPS\_DEXT\_01017] Meaning of DiagnosticIOControl.dataIdentifier | The DiagnosticIOControl.dataIdentifier is taken for specifying the payload for the service.

However, in some cases <code>dataIdentifier</code> models the payload of the request message (<code>DiagnosticIOControl.shortTermAdjustment</code> is set to true) and in some cases it represents the payload of the response message. <code>](RS\_DEXT\_00014, RS\_DEXT\_00034)</code>

Please note that the referenced dataIdentifier itself may aggregate several DiagnosticDataElementS.



At run-time, only some DiagnosticDataElements may be relevant for a specific execution of the service InputOutput Control. For this purpose, the diagnostic message contains the so-called ControlEnableMaskRecord (for more information, please refer to [SWS\_DCM\_00581]).

[TPS\_DEXT\_01089] Definition of an *identifier* of a DiagnosticIOControl [ The *identifier* of a DiagnosticIOControl is defined by the attribute DiagnosticIOControl.dataIdentifier.id. | (RS\_DEXT\_00037)

Class	DiagnosticlOControl					
Package	M2::AUTOSARTe	mplates	::Diagno	osticExtract::Dcm::DiagnosticService::IOControl		
Note	·			e "I/O Control" diagnostic service.		
Base	Tags: atp.recommendedPackage=DiagnosticloControls  ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
dataldentifi er	DiagnosticDatal dentifier	1	ref	This represents the corresponding DiagnosticDataIdentifier		
freezeCurr entState	Boolean	1	attr	Setting this attribute to true represents the ability of the Dcm to execute a freezeCurrentState.		
ioControlCl ass	DiagnosticloCo ntrolClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.		
				Thereby, the reference represents the ability to access shared attributes among all DiagnosticIOControl in the given context.		
resetToDef ault	Boolean	1	attr	Setting this attribute to true represents the ability of the Dcm to execute a resetToDefault.		
shortTerm Adjustment	Boolean	1	attr	Setting this attribute to true represents the ability of the Dcm to execute a shortTermAdjustment.		

**Table 5.26: DiagnosticIOControl** 

Class	DiagnosticloControlClass				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::IOControl			
Note	This meta-class contains attributes shared by all instances of the "IO Control" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticloControls				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
_	_	_	_	-	

**Table 5.27: DiagnosticloControlClass** 



[TPS\_DEXT\_01018] InputOutput Control does not define any sub-functions [The diagnostic service InputOutput Control does not define any sub-functions, therefore the value of DiagnosticIOControl.category does not need to be constrained. |(RS\_DEXT\_00014, RS\_DEXT\_00051)

[TPS\_DEXT\_01051] Consistency of DiagnosticServiceSwMapping with respect to data IDs [For each DiagnosticServiceSwMapping that references a DiagnosticIoControlNeeds and a DiagnosticIoControl, the value of DiagnosticIoControlNeeds.didNumber shall be ignored and the value of DiagnosticIoControl.dataIdentifier.id shall be taken instead. [RS\_DEXT\_00014, RS\_DEXT\_00052]

Class	DiagnosticloCon	DiagnosticloControlNeeds						
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds							
Note	Manager (DCM) v	Specifies the general needs on the configuration of the Diagnostic Communication Manager (DCM) which are not related to a particular item (e.g. a PID). The main use case is the mapping of service ports to the Dcm which are not related to a particular						
Base	ARObject, Diagno Referrable, Service			ement, Identifiable, MultilanguageReferrable,				
Attribute	Туре	Mul.	Kind	Note				
currentVal ue	DiagnosticValue Needs	01	ref	Reference to the DiagnosticValueNeeds indicating the access to the current value via signalBasedDiagnostics.				
didNumber	PositiveInteger	01	attr	This represents a Data identifier for the diagnostic value. This allows to predefine the DID number if the a function developer has received a particular requirement from the OEM or from a standardization body.				
freezeCurr entStateSu pported	Boolean	01	attr	This attribute determines, if the referenced port supports temporary freezing of I/O value.				
resetToDef aultSuppor ted	Boolean	01	attr	This represents a flag for the existence of the ResetToDefault operation in the service interface.				
shortTerm Adjustment Supported	Boolean	01	attr	This attribute determines, if the referenced port supports temporarily setting of I/O value to a specific value provided by the diagnostic tester.				

**Table 5.28: DiagnosticloControlNeeds** 

## 5.5.3 EcuReset

This chapter describes the modeling of diagnostic services EcuReset (0x11).



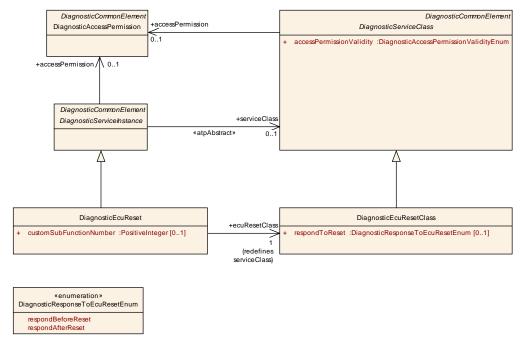


Figure 5.7: Modeling of diagnostic service EcuReset (0x11)

Class	DiagnosticEcuReset				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dcm::DiagnosticService::EcuReset	
Note	This represents a	n instan	ce of the	e "ECU Reset" diagnostic service.	
	Tags: atp.recomm	nendedF	Package:	=DiagnosticEcuResets	
Base	-			eElement, DiagnosticCommonElement, Diagnostic ilanguageReferrable, PackageableElement,	
Attribute	Type Mul. Kind Note				
customSub FunctionN umber	PositiveInteger	01	attr	This attribute shall be used to define a custom sub-function number if none of the standardized values of category shall be used.	
ecuResetC lass	DiagnosticEcuR esetClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.	
				Thereby, the reference represents the ability to access shared attributes among all DiagnosticEcuReset in the given context.	

Table 5.29: DiagnosticEcuReset



Class	DiagnosticEcuResetClass			
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dcm::DiagnosticService::EcuReset
Note	This meta-class contains attributes shared by all instances of the "Ecu Reset" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticEcuResets			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note
respondTo Reset	DiagnosticResp onseToEcuRes etEnum	01	attr	This attribute defines whether the response to the EcuReset service shall be transmitted before or after the actual reset.

Table 5.30: DiagnosticEcuResetClass

Enumeration	DiagnosticResponseToEcuResetEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::EcuReset
Note	
Literal	Description
respondAfter Reset	Answer to EcuReset service should come after the reset.
	Tags: atp.EnumerationValue=0
respond BeforeReset	Answer to EcuReset service should come before the reset.
	Tags: atp.EnumerationValue=1

Table 5.31: DiagnosticResponseToEcuResetEnum

Please note that (as already explained in section 5.5) the SubFunctions of this service are modeled by means of the category attribute.

[TPS\_DEXT\_01056] Applicable values for <code>DiagnosticEcuReset.category</code> [ The following values of the attribute <code>DiagnosticEcuReset.category</code> are standardized by AUTOSAR:

- HARD\_RESET
- KEY\_OFF\_ON\_RESET
- SOFT\_RESET
- ENABLE\_RAPID\_POWER\_SHUT\_DOWN
- DISABLE\_RAPID\_POWER\_SHUT\_DOWN

The meaning of these values is described in the applicable ISO document [16]. (RS\_DEXT\_00001, RS\_DEXT\_00004, RS\_DEXT\_00051)

[TPS\_DEXT\_01019] Correspondence of category values to numerical values mentioned in the ISO 14229-1 [ The ISO 14229-1 [16] standard document defines specific numerical values for the sub-functions of the diagnostic service EcuReset.



The correspondence of the numerical values to the pre-defined values of category according to [TPS\_DEXT\_01056] is pretty obvious because the definition of values defined in [TPS\_DEXT\_01056] has been directly inspired by the ISO 14229-1 [16] standard document. | (RS\_DEXT\_00001, RS\_DEXT\_00004, RS\_DEXT\_00051)

**[TPS\_DEXT\_01020] Manufacturer-specific values for sub-functions of service EcuReset** [The ISO 14229-1 [16] standard document, beyond the standardized numerical values for sub-functions, reserves a numerical range of subFunction identifiers for manufacturer- or supplier-specific use.

[TPS\_DEXT\_01021] Semantics of DiagnosticEcuReset.customSubFunction-Number | The attribute DiagnosticEcuReset.customSubFunctionNumber has been introduced to allow for the specification of a manufacturer- or supplier-specific value to represent the custom sub-function in the diagnostic communication.

The tuple created by the the values of attributes <code>DiagnosticEcuReset.cate-gory</code> and <code>DiagnosticEcuReset.customSubFunctionNumber</code> fully specifies identification of the manufacturer- or supplier-specific sub-function. <code>](RS\_DEXT\_00004, RS\_DEXT\_00004, RS\_DEXT\_000051)</code>

[constr\_1331] Existence of DiagnosticEcuReset.customSubFunctionNumber | The attribute DiagnosticEcuReset.customSubFunctionNumber shall only exist if the value of DiagnosticEcuReset.category is outside the standardized set of values as defined by [TPS\_DEXT\_01056]. |()

[constr\_1332] Value range for DiagnosticEcuReset.customSubfunctionNumber | The allowed value for DiagnosticEcuReset.customSubFunctionNumber shall always be within the closed interval 0x40 .. 0x7E. ]()

## 5.5.4 ClearDiagnosticInformation

This chapter describes the modeling of diagnostic services <code>ClearDiagnosticInformation</code> (0x14). As the name suggests, the purpose of the service is to clear diagnostic information in the AUTOSAR diagnostics stack.



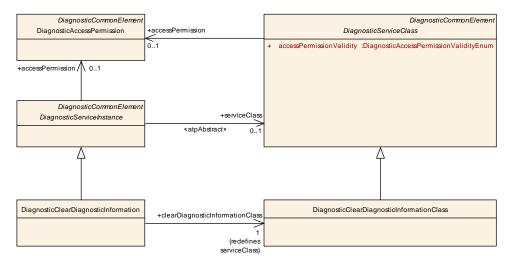


Figure 5.8: Modeling of diagnostic service ClearDiagnosticInformation (0x14)

Please note that there is nothing to configure for DiagnosticClearDiagnosticInformation beyond its mere existence.

Class	DiagnosticClearDiagnosticInformation					
Package	M2::AUTOSARTe DiagnosticInfo	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Clear DiagnosticInfo				
Note	·	This represents an instance of the "Clear Diagnostic Information" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticClearDiagnosticInformations				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Type Mul. Kind Note				
clearDiagn	DiagnosticClear	1	ref	This reference substantiates that abstract		
osticInform ationClass	DiagnosticInfor mationClass	•		reference in the role serviceClass for this specific concrete class.		

Table 5.32: DiagnosticClearDiagnosticInformation

Class	DiagnosticClear	Diagnos	ticInfor	mationClass		
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Clear DiagnosticInfo					
Note	This meta-class contains attributes shared by all instances of the "Clear Diagnostic Information" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticClearDiagnosticInformations					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		



	_	_	_	_	_
--	---	---	---	---	---

 Table 5.33: DiagnosticClearDiagnosticInformationClass

[TPS\_DEXT\_01022] ClearDiagnosticInformation does not define any subfunctions [The diagnostic Service ClearDiagnosticInformation does not define any sub-functions, therefore the value of DiagnosticClearDiagnosticInformation.category does not need to be constrained. 

[RS\_DEXT\_00001, RS\_DEXT\_00051]

## 5.5.5 MemoryByAddress

This chapter describes the modeling of diagnostic services for memory access (0x23, 0x3D, 0x34-0x37). The purpose of these services is to access memory on the diagnostic stack on request of the tester.

The service description for accessing memory for diagnostic purposes is modeled by the abstract meta-class <code>DiagnosticMemoryByAddress</code>. It is supposed to provide all model properties relevant for the memory access.

The description of memory access, to some extent, requires a formal description of the memory segments to take into account. For this purpose the meta-class <code>Diagnos-ticMemoryIdentifier</code> has been introduced and referenced by <code>DiagnosticMemoryAddressableRangeAccess</code> in the role <code>memoryRange</code>.

The intent of this modeling was not to provide a generic memory model but to allow for the specification of memory properties just as far as diagnostics is concerned.

The aggregation of <code>DiagnosticMemoryIdentifier</code> at <code>DiagnosticMemoryByAddress</code> may or may not be relevant for an OEM. However, there is certainly a use case for adding this information to a <code>DiagnosticExtract</code> that goes back from a tier-1 supplier to an OEM as sort of a documentation of the diagnostic configuration.



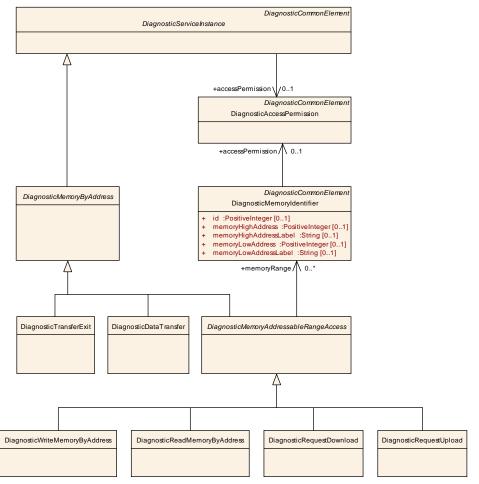


Figure 5.9: Modeling of diagnostic services Memory ((0x23, 0x3D, 0x34-0x37)

As DiagnosticMemoryByAddress represents a generic base class for all kinds of diagnostic memory access, it is also necessary to model the particular sub-classes that address specific use cases for diagnostic memory access.

These sub-classes are conceptually on the same level as other sub-classes of DiagnosticServiceInstance.

In other words, the case of memory access deviates from the modeling of other diagnostic services such that there is one further abstract base class involved.

[constr\_1333] Existence of DiagnosticMemoryIdentifier.memoryLowAddress and DiagnosticMemoryIdentifier.memoryHighAddress [ The attributes DiagnosticMemoryIdentifier.memoryLowAddress as well as DiagnosticMemoryIdentifier.memoryHighAddress shall not exist if the DiagnosticMemoryIdentifier referenced in the role memoryRange is referenced by a DiagnosticRequestDownload or a DiagnosticRequestUpload. |()

[constr\_1411] Existence of DiagnosticMemoryIdentifier.memoryHighAddressLabel VS. DiagnosticMemoryIdentifier.memoryHighAddress [ At most one of the attributes in the following list shall exist:

• DiagnosticMemoryIdentifier.memoryHighAddressLabel



• DiagnosticMemoryIdentifier.memoryHighAddress

 $\rfloor ()$ 

[constr\_1412] Existence of DiagnosticMemoryIdentifier.memoryLowAddressLabel VS. DiagnosticMemoryIdentifier.memoryLowAddress \[ \] At most one of the attributes in the following list shall exist:

- DiagnosticMemoryIdentifier.memoryLowAddressLabel
- DiagnosticMemoryIdentifier.memoryLowAddress

10

Please note that it does not make sense to describe a memory address in this context **both** numerically **and** symbolically. If the address is described at all (see [constr\_1333]) then it shall be done **either** symbolically or numerically. This is the motivation of the existence of [constr\_1411] and [constr\_1412].

Class	DiagnosticMemo	DiagnosticMemoryByAddress (abstract)				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address					
Note	This represents an abstract base class for diagnostic services that deal with accessing memory by address.					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
_	_	_	_	-		

Table 5.34: DiagnosticMemoryByAddress

Class	DiagnosticMemoryAddressableRangeAccess (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address			
Note	This abstract base	class		
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic MemoryByAddress, DiagnosticServiceInstance, Identifiable, Multilanguage Referrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note
memoryRa nge	DiagnosticMem oryldentifier	*	ref	This represents the formal description of the memory segment to which the DiagnosticMemoryByAddress applies.

Table 5.35: DiagnosticMemoryAddressableRangeAccess



Class	DiagnosticMemoryIdentifier					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address					
Note	This meta-class represents the ability to define memory properties from the diagnostics point of view.  Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss					
Base				eElement, DiagnosticCommonElement, Identifiable, eableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note		
accessPer mission	DiagnosticAcce ssPermission	01	ref	This represents that access permission defined for the specific DiagnosticMemoryIdentifier.		
id	PositiveInteger	01	attr	This represents the identification of the memory segment.		
memoryHi ghAddress	PositiveInteger	01	attr	This represents the upper bound for addresses of the memory segment.		
memoryHi ghAddress Label	String	01	attr	This represents a symbolic label for the upper bound for addresses of the memory segment.		
memoryLo wAddress	PositiveInteger	01	attr	This represents the lower bound for addresses of the memory segment.		
memoryLo wAddressL abel	String	01	attr	This represents a symbolic label for the lower bound for addresses of the memory segment.		

Table 5.36: DiagnosticMemoryIdentifier

Class	DiagnosticWritel	DiagnosticWriteMemoryByAddress				
Package	M2::AUTOSARTe Address	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address				
Note	·	This represents an instance of the "Write Memory by Address" diagnostic service. <b>Tags:</b> atp.recommendedPackage=DiagnosticMemoryByAdresss				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic MemoryAddressableRangeAccess, DiagnosticMemoryByAddress, DiagnosticService Instance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
writeClass	DiagnosticWrite MemoryByAddr essClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.		
				Thereby, the reference represents the ability to access shared attributes among all DiagnosticWritememoryByAddress in the given context.		

Table 5.37: DiagnosticWriteMemoryByAddress



Class	DiagnosticWritel	DiagnosticWriteMemoryByAddressClass					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address						
Note	Address" diagnos	This meta-class contains attributes shared by all instances of the "Write Memory by Address" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable						
Attribute	Туре	Mul.	Kind	Note			
_	_	_	_	-			

Table 5.38: DiagnosticWriteMemoryByAddressClass

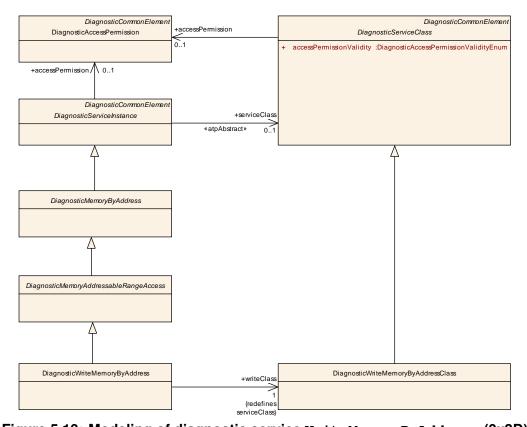


Figure 5.10: Modeling of diagnostic service WriteMemoryByAddress (0x3D)

[TPS\_DEXT\_01023] WriteMemoryByAddress does not define any sub-functions | The diagnostic Service WriteMemoryByAddress does not define any sub-functions, therefore the value of DiagnosticWriteMemoryByAddress.category does not need to be constrained. | (RS\_DEXT\_00001, RS\_DEXT\_00020, RS\_DEXT\_00051)



Class	DiagnosticReadMemoryByAddress					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address					
Note	This represents an instance of the "Read Memory by Address" diagnostic service. <b>Tags:</b> atp.recommendedPackage=DiagnosticMemoryByAdresss					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic MemoryAddressableRangeAccess, DiagnosticMemoryByAddress, DiagnosticService Instance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
readClass	DiagnosticRead MemoryByAddr essClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.		
				Thereby, the reference represents the ability to access shared attributes among all DiagnosticReadMemoryByAddresst in the given context.		

Table 5.39: DiagnosticReadMemoryByAddress

Class	DiagnosticReadMemoryByAddressClass					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address					
Note	Address" diagnos	tic servi	ce.	s shared by all instances of the "Read Memory by =DiagnosticMemoryByAdresss		
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
_	_	_	_	-		

Table 5.40: DiagnosticReadMemoryByAddressClass



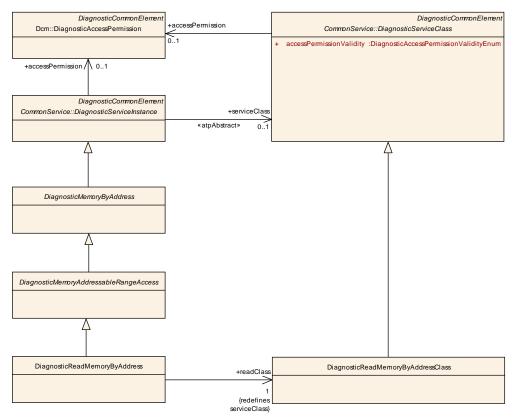


Figure 5.11: Modeling of diagnostic service ReadMemoryByAddress (0x23)

[TPS\_DEXT\_01024] ReadMemoryByAddress does not define any sub-functions [ The diagnostic service ReadMemoryByAddress does not define any sub-functions, therefore the value of DiagnosticReadMemoryByAddress.category does not need to be constrained. |(RS\_DEXT\_00001, RS\_DEXT\_00008, RS\_DEXT\_00051)

Class	DiagnosticTransferExit					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address					
Note	This represents an instance of the "Transfer Exit" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic MemoryByAddress, DiagnosticServiceInstance, Identifiable, Multilanguage Referrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
transferExi tClass	DiagnosticTrans ferExitClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to access shared attributes among all DiagnosticTransferExit in the given context.		

Table 5.41: DiagnosticTransferExit



Class	DiagnosticTransferExitClass					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address					
Note	This meta-class contains attributes shared by all instances of the "Transfer Exit" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
_	_	_	_	-		

Table 5.42: DiagnosticTransferExitClass

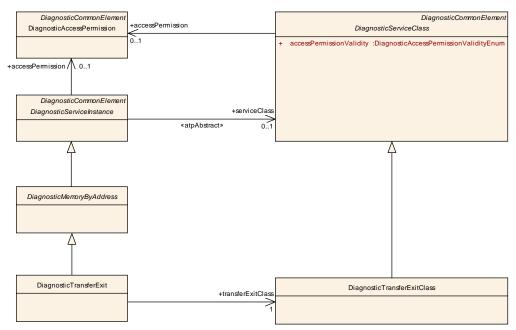


Figure 5.12: Modeling of diagnostic service TransferExit (0x37)

**[TPS\_DEXT\_01025]** TransferExit does not define any sub-functions  $\lceil$  The diagnostic service TransferExit does not define any sub-functions, therefore the value of DiagnosticTransferExit.category does not need to be constrained.  $\rfloor (RS\_DEXT\_00001, RS\_DEXT\_00019, RS\_DEXT\_00051)$ 

Class	DiagnosticDataTr	ansfer				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address					
Note	·	This represents an instance of the "Data Transfer" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic MemoryByAddress, DiagnosticServiceInstance, Identifiable, Multilanguage Referrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		



dataTransf erClass	DiagnosticData TransferClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.
				Thereby, the reference represents the ability to access shared attributes among all DiagnosticDataTransfer in the given context.

Table 5.43: DiagnosticDataTransfer

Class	DiagnosticDataTransferClass				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address				
Note	diagnostic service			s shared by all instances of the "Data Transfer"  =DiagnosticMemoryByAdresss	
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
_	_	_	_	-	

Table 5.44: DiagnosticDataTransferClass

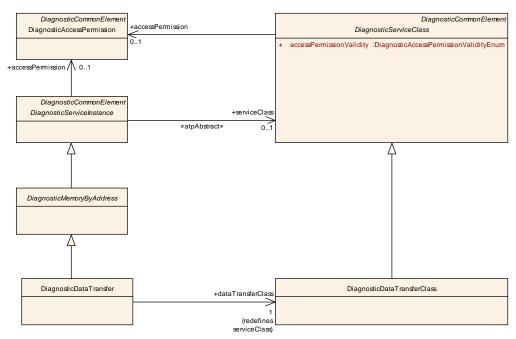


Figure 5.13: Modeling of diagnostic service DataTransfer (0x36)

[TPS\_DEXT\_01026] DataTransfer does not define any sub-functions  $\lceil$  The diagnostic service DataTransfer does not define any sub-functions, therefore the value of DiagnosticDataTransfer.category does not need to be constrained.  $\rfloor (RS\_DEXT\_00001, RS\_DEXT\_00018, RS\_DEXT\_00051)$ 



Class	DiagnosticReque	estDow	nload			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address					
Note	This represents an instance of the "Request Download" diagnostic service.					
	Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic MemoryAddressableRangeAccess, DiagnosticMemoryByAddress, DiagnosticService Instance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
requestDo wnloadCla ss	DiagnosticRequ estDownloadCla ss This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.					
				Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestDownload in the given context.		

Table 5.45: DiagnosticRequestDownload

Class	DiagnosticRequestDownloadClass					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address					
Note	This meta-class contains attributes shared by all instances of the "Request Download" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
_	_	_	_	-		

Table 5.46: DiagnosticRequestDownloadClass



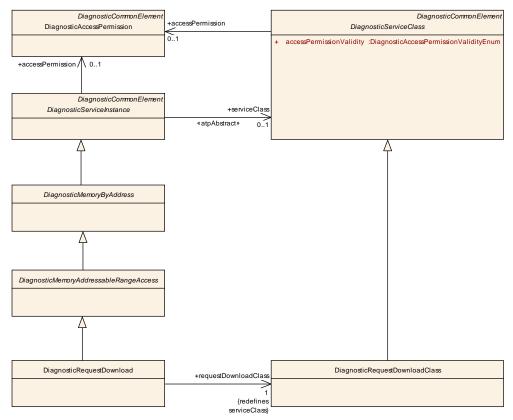


Figure 5.14: Modeling of diagnostic service RequestDownload (0x34)

[TPS\_DEXT\_01027] RequestDownload does not define any sub-functions [ The diagnostic service RequestDownload does not define any sub-functions, therefore the value of DiagnosticRequestDownload.category does not need to be constrained. ](RS\_DEXT\_00001, RS\_DEXT\_00016, RS\_DEXT\_00051)

Class	DiagnosticRequestUpload				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address				
Note	This represents a	This represents an instance of the "Request Upload" diagnostic service.			
	Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic MemoryAddressableRangeAccess, DiagnosticMemoryByAddress, DiagnosticService Instance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
requestUpl oadClass	DiagnosticRequ estUploadClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestUpload in the given context.	

Table 5.47: DiagnosticRequestUpload



Class	DiagnosticReque	estUplo	adClass	3
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryBy Address			
Note	This meta-class contains attributes shared by all instances of the "Request Upload" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note
_	_	_	_	-

Table 5.48: DiagnosticRequestUploadClass

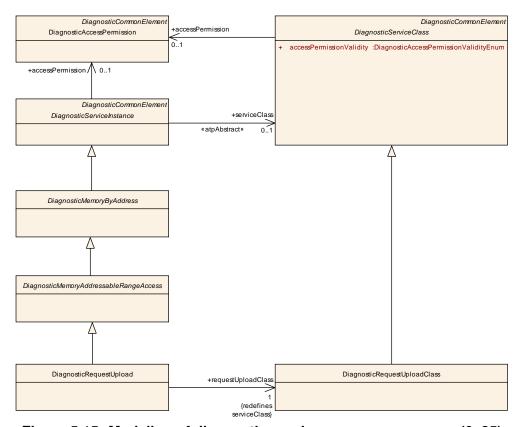


Figure 5.15: Modeling of diagnostic service RequestDownload (0x35)

[TPS\_DEXT\_01028] RequestUpload does not define any sub-functions [ The diagnostic service RequestUpload does not define any sub-functions, therefore the value of DiagnosticRequestUpload.category does not need to be constrained. 

[(RS\_DEXT\_00001, RS\_DEXT\_00017, RS\_DEXT\_00051)]



#### 5.5.6 CommunicationControl

This chapter describes the modeling of diagnostic services CommunicationControl (0x28). The purpose of this diagnostic service is to enable or disable ISignalIP-duGroups.

However, the actual implementation of the enabling or disabling is obviously not executed directly within the diagnostic stack. It requires some interaction with the BswM that in turn implements the enabling algorithm.

Therefore, the meta-class modeled for this purpose does not need to refer to ISignalIPduGroups but implements a mode request to the BswM.

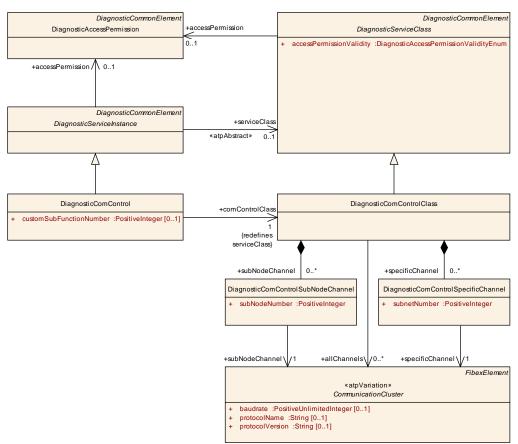


Figure 5.16: Modeling of diagnostic service CommunicationControl (0x28)

[TPS\_DEXT\_01057] Allowed values of <code>DiagnosticComControl.category</code> [ The sub-functions of the diagnostic services <code>CommunicationControl</code> are identified by means of the attribute <code>DiagnosticComControl.category</code>. Standardized values of <code>DiagnosticComControl.category</code> are:

- ENABLE\_RX\_AND\_TX
- DISABLE\_RX\_AND\_TX
- ENABLE\_RX\_AND\_DISABLE\_TX



- DISABLE\_RX\_AND\_ENABLE\_TX
- ENABLE\_RX\_AND\_DISABLE\_TX\_WITH\_ENHANCED\_ADDRESS\_INFORMATION
- ENABLE\_RX\_AND\_TX\_WITH\_ENHANCED\_ADDRESS\_INFORMATION

The meaning of these values is described in the applicable ISO document [16]. (RS\_DEXT\_00001, RS\_DEXT\_00010, RS\_DEXT\_00051)

[TPS\_DEXT\_01029] Correspondence of category values to numerical values mentioned in the ISO 14229-1 [ The ISO 14229-1 [16] standard document defines specific numerical values for the sub-functions of the diagnostic service CommunicationControl.

The correspondence of the numerical values to the pre-defined values of category according to [TPS\_DEXT\_01057] is pretty obvious because the definition of values defined in [TPS\_DEXT\_01057] has been directly inspired by the ISO 14229-1 [16] standard document. | (RS\_DEXT\_00001, RS\_DEXT\_00010, RS\_DEXT\_00051)

**[TPS\_DEXT\_01030] Manufacturer-specific values for sub-functions of service CommunicationControl** [ The ISO 14229-1 [16] standard document, beyond the standardized numerical values for sub-functions, reserves a numerical range of sub-Function identifiers for manufacturer-specific use.

[TPS\_DEXT\_01031] Semantics of DiagnosticComControl.customSubFunctionNumber [The attribute DiagnosticComControl.customSubFunctionNumber has been introduced to allow for the specification of a manufacturer-or supplier-specific value to represent the custom sub-function in the diagnostic communication.

The tuple created by the values of attributes <code>DiagnosticComControl.category</code> and <code>DiagnosticComControl.customSubFunctionNumber</code> fully specifies identification of the manufacturer- or supplier-specific sub-function. <code>J(RS\_DEXT\_00010, RS\_DEXT\_00047, RS\_DEXT\_00051)</code>

[constr\_1334] Existence of DiagnosticComControl.customSubFunctionNumber | The attribute DiagnosticComControl.customSubFunctionNumber shall only exist if the value of DiagnosticComControl.category is outside the standardized set of values as defined by [TPS\_DEXT\_01057]. ]()

[constr\_1335] Possible values for DiagnosticComControl.customSubFunctionNumber | Given the fulfillment of [constr\_1334], the value of a given DiagnosticComControl.customSubFunctionNumber shall always be within the closed interval 0x40 .. 0x5F (for manufacturer-specific sub-functions) or the closed interval 0x60 .. 0x7E (for supplier-specific sub-functions). ]()

[TPS\_DEXT\_01032] Impact of the DiagnosticComControlClass on the state management for CommunicationClusters [ The impact of the DiagnosticCom-



ControlClass on the state management for CommunicationClusters can have two alternative consequences:

• All CommunicationClusters are affected. For this purpose the attribute allChannels has the ability to identify the applicable CommunicationClusters.

It may seem counterintuitive to require a reference to all applicable CommunicationClusters when the expected semantics is actually to define an impact on **all** of them.

However, there could be private CommunicationClusters that are not participating in the diagnostics work-flow: These need to be kept out of scope and therefore the explicit identification of applicable CommunicationClusters makes sense.

• A selected number of CommunicationClusters is affected. This is conceptually different from the other use case in that it requires an additional attribute that keeps a subnetNumber that is typically assigned by the OEM role.

### (RS DEXT 00010)

Class	≪atpVariation	ı≫ Con	nmunica	ationCluster (abstract)		
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology					
Note	The CommunicationCluster is the main element to describe the topological connection of communicating ECUs.  A cluster describes the ensemble of ECUs, which are linked by a communication medium of arbitrary topology (bus, star, ring,). The nodes within the cluster share the same communication protocol, which may be event-triggered, time-triggered or a combination of both.  A CommunicationCluster aggregates one or more physical channels.  Tags: vh.latestBindingTime=postBuild					
Base	ARObject, Collect	ableEle	ment, Fi	bexElement, Identifiable, MultilanguageReferrable,		
	PackageableElem					
Attribute	Туре	Mul.	Kind	Note		
baudrate	PositiveUnlimite dInteger	01	attr	Channels speed in bits/s.		
physicalCh annel	PhysicalChanne I	1*	aggr	This relationship defines which channel element belongs to which cluster. A channel must be assigned to exactly one cluster, whereas a cluster may have one or more channels.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=systemDesignTime		
protocolNa me	String	01	attr	The name of the protocol used.		



pro	otocolVe	String	01	attr	The version of the protocol used.
rsi	on				

Table 5.49: CommunicationCluster

[constr\_1336] Applicable value range for DiagnosticComControlSpecific-Channel.subnetNumber [ The value of attribute DiagnosticComControlSpecificChannel.subnetNumber shall be within the closed interval 1 .. 14. | ()

Please note that the regulation implied by [constr\_1336] has not been introduced on an arbitrary basis but gets its conceptual background from the ISO 14229-1 [16] standard document.

Obviously, a diagnostic service with the name <code>CommunicationControl</code> will have an impact on the enclosing ECU's mode management. This impact, however, is not defined by any further attributes or references, the <code>DiagnosticComControl</code> is the impact.

By defining a DiagnosticComControl and setting the category to one of the applicable values (e.g. ENABLE\_RX\_AND\_TX), it is possible to express the intended semantics to the full extent.

[constr\_1337] Allowed value range for attribute DiagnosticComControlSubN-odeChannel.subNodeNumber [ The value of attribute DiagnosticComControl-SubNodeChannel.subNodeNumber shall not exceed the closed interval 0 .. 65535. ] ()

[TPS\_DEXT\_01074] Difference between the attributes DiagnosticComControl-Class.specificChannel and DiagnosticComControlClass.subNodeChannel [The semantical difference between the attributes DiagnosticComControl-Class.specificChannel and DiagnosticComControlClass.subNodeChannel is that DiagnosticComControlClass.specificChannel actually refers to a CommunicationCluster whereas DiagnosticComControlClass.subNodeChannel basically refers to a CommunicationCluster to which the nodes with the given identification numbers are connected. | (RS DEXT 00010)

Class	DiagnosticComC	DiagnosticComControl					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService:: CommunicationControl						
Note	This represents an instance of the "Communication Control" diagnostic service. <b>Tags:</b> atp.recommendedPackage=DiagnosticCommunicationControls						
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable						
Attribute	Туре	Mul.	Kind	Note			



comContro IClass	DiagnosticCom ControlClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to access shared attributes among all DiagnosticComControl in the given context.
customSub FunctionN umber	PositiveInteger	01	attr	This attribute shall be used to define a custom sub-function number if none of the standardized values of category shall be used.

**Table 5.50: DiagnosticComControl** 

Class	DiagnosticComControlSpecificChannel			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService:: CommunicationControl			
Note	This represents the ability to add further attributes to the definition of a specific channel that is subject to the diagnostic service "communication control".			
Base	ARObject			
Attribute	Туре	Mul.	Kind	Note
specificCh annel	Communication Cluster	1	ref	This represents the affected CommunicationClusters in the role specificChannel
subnetNu mber	PositiveInteger	1	attr	This represents the applicable subnet number (which is an arbitrary number ranging from 114)

Table 5.51: DiagnosticComControlSpecificChannel

Class	DiagnosticComControlClass					
Package		M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService:: CommunicationControl				
Note	This meta-class contains attributes shared by all instances of the "Communication Control" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticCommunicationControls					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
allChannel s	Communication Cluster	*	ref	This reference represents the semantics that all available channels shall be affected. It is still necessary to refer to individual CommunicatuionClusters because there could be private CommunicationClusters in the System Extract that are not subject to the service "communication control".  By referring to the applicable CommunicationClusters it can be made sure that only the affected CommunicationClusters are accessed.		



specificCh annel	DiagnosticCom ControlSpecific Channel	*	aggr	This represents the ability to add additional attributes to the case that only specific channels are supposed to be considered,
subNodeC hannel	DiagnosticCom ControlSubNod eChannel	*	aggr	

Table 5.52: DiagnosticComControlClass

Class	DiagnosticComC	DiagnosticComControlSubNodeChannel				
Package		M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService:: CommunicationControl				
Note	This represents the ability to add further attributes to the definition of a specific sub-node channel that is subject to the diagnostic service "communication control".					
Base	ARObject					
Attribute	Туре	Mul.	Kind	Note		
subNodeC hannel	Communication Cluster	1	ref	This represents the affected CommunicationClusters in the role subNodeChannel		
subNodeN umber	PositiveInteger	1	attr	This represents the applicable subNode number. The value corresponds to the request message parameter nodeldentificationNumber of diagnostic service CommunicationControl (0x28).		

Table 5.53: DiagnosticComControlSubNodeChannel

### 5.5.7 DynamicallyDefineDataIdentifier

This chapter describes the modeling of diagnostic services <code>DynamicallyDefine-DataIdentifier</code> (0x2C). The purpose of the service is to allow for defining data identifiers (DID) at run-time.

By this means it is possible to combine existing diagnostic data into a single DID.

This semantics is reflected by the modeling of the meta-class <code>DiagnosticDynami-callyDefineDataIdentifier</code> that refers to a <code>DiagnosticDynamicDataIdentifier</code> in the role <code>dataIdentifier</code>.

Also, the DiagnosticDynamicallyDefineDataIdentifier inherits a reference to accessPermission from DiagnosticServiceInstance.



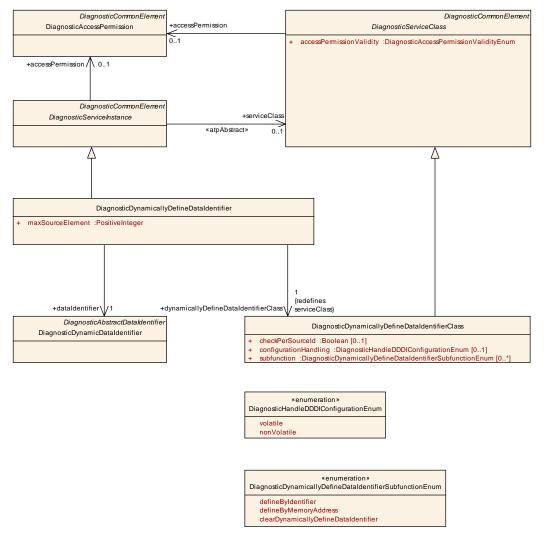


Figure 5.17: Modeling of diagnostic service DynamicallyDefineDataIdentifier (0x2C)

[constr\_1421] Consistency of DiagnosticDynamicallyDefineDataIdenti-fierClass.subfunction | The values of DiagnosticDynamicallyDefineDataIdentifierClass.subfunction shall not repeat, i.e. every value of DiagnosticDynamicallyDefineDataIdentifierSubfunctionEnum shall at most appear once in the subfunction attribute. |()

Class	DiagnosticDynan	DiagnosticDynamicallyDefineDataldentifier					
Package	l .	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Dynamically DefineDataIdentifier					
Note	This represents an instance of the "Dynamically Define Data Identifier" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticDynamicallyDefineDataIdentifiers						
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable						
Attribute	Туре	Mul.	Kind	Note			



dataldentifi er	DiagnosticDyna micDataIdentifie r	1	ref	This represents the applicable DiagnosticDynamicDataIdentfier.
dynamicall yDefineDa taldentifier Class	DiagnosticDyna micallyDefineDa taldentifierClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to access shared attributes among all DiagnosticDynamicallyDefineDataIdentifier in the given context.
maxSourc eElement	PositiveInteger	1	attr	This represents the maximum number of source elements of the dynamically created DID.

Table 5.54: DiagnosticDynamicallyDefineDataIdentifier

Class	DiagnosticDynar	nicallyE	efineDa	ataldentifierClass		
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Dynamically DefineDataIdentifier					
Note	Data Identifier" dia	This meta-class contains attributes shared by all instances of the "Dynamically Define Data Identifier" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticDynamicallyDefineDataIdentifiers				
Base				eElement, DiagnosticCommonElement, Diagnostic nguageReferrable, PackageableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note		
checkPerS ourceld	Boolean	01	attr	If set to TRUE, the Dcm module shall check the session, security and mode dependencies per source DIDs with a ReadDataByldentifier (0x22) with DID in the range 0xF200 to 0xF3FF.  If set to FALSE, the Dcm module shall not check the session, security and mode dependencies per source DIDs with a ReadDataByldentifier (0x22) with DID in the range 0xF200 to 0xF3FF.		
configurati onHandlin g	DiagnosticHandl eDDDIConfigur ationEnum	01	attr	This configuration switch defines whether DDDID definition is handled as non-volatile information or not.		
subfunctio n	DiagnosticDyna micallyDefineDa taldentifierSubfu nctionEnum	*	attr	This attribute contains a list of applicable subfunctions for all DiagnosticDynamicallyDefineDataIdentifier that reference the DiagnosticDynamicallyDefineDataIdentifierClass.		

Table 5.55: DiagnosticDynamicallyDefineDataIdentifierClass

Enumeration	DiagnosticHandleDDDIConfigurationEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService:: DynamicallyDefineDataIdentifier
Note	This meta-class represents the options for controlling how the configuration of the DynamicallyDefineDataIdentifiers is done in the given context.



Literal	Description
nonVolatile	This indicates that the configuration of DynamicallyDefineDataIdentifier shall be stored as non-volatile data.
	Tags: atp.EnumerationValue=0
volatile	This indicates that the configuration of DynamicallyDefineDataIdentifier shall be handled as volatile data.
	Tags: atp.EnumerationValue=1

Table 5.56: DiagnosticHandleDDDIConfigurationEnum

Enumeration	DiagnosticDynamicallyDefineDataldentifierSubfunctionEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService:: DynamicallyDefineDataIdentifier
Note	This meta-class contains a list of possible subfunctions for the UDS service 0x2C.
Literal	Description
clearDynam- icallyDefine	Clear the specified dynamic data identifier.
Dataldentifier	Tags: atp.EnumerationValue=0
defineBy Identifier	The definition of dynamic data identifier shall be done via a reference to a diagnostic data identifier.
	Tags: atp.EnumerationValue=1
defineBy Memory Address	The definition of dynamic data identifier shall be done via a reference to a memory address.
	Tags: atp.EnumerationValue=2

Table 5.57: DiagnosticDynamicallyDefineDataIdentifierSubfunctionEnum

# 5.5.8 ReadDataByPeriodicIdentifier

This chapter describes the modeling of diagnostic services ReadDataByPeriodicI-dentifier (0x2A).



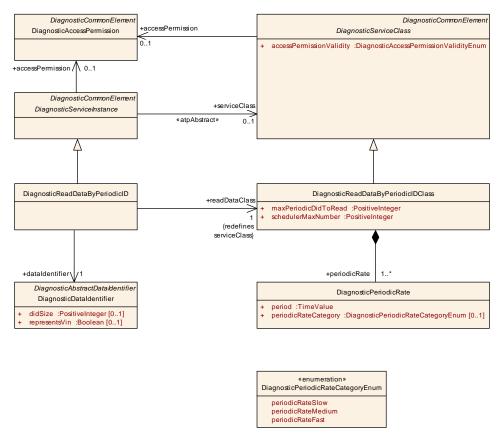


Figure 5.18: Modeling of diagnostic service ReadDataByPeriodicIdentifier (0x2A)

[constr\_1338] Maximum number of aggregated DiagnosticReadDataByPeriodicIDClass.periodicRate [ The number of aggregated periodicRate within the context of one DiagnosticReadDataByPeriodicIDClass shall be within the closed interval 1..3. |()

Class	DiagnosticRead	DataByF	Periodic	ID			
Package	M2::AUTOSARTe PeriodicID	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ReadDataBy PeriodicID					
Note	This represents an instance of the "Read Data by periodic Identifier" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticReadDataByPeriodicIds						
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable						
Attribute	Туре	Type Mul. Kind Note					
dataldentifi er	DiagnosticDatal dentifier	1	ref	This represents the corresponding DiagnosticDataldentifier.			



readDataC lass	DiagnosticRead DataByPeriodicI DClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.
				Thereby, the the reference represents the ability to access shared attributes among all DiagnosticReadDataByPeriodicID in the given context.

Table 5.58: DiagnosticReadDataByPeriodicID

Class	DiagnosticRead	DataByF	Periodic	IDClass		
Package	M2::AUTOSARTe PeriodicID	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ReadDataBy PeriodicID				
Note	periodic Identifier'	This meta-class contains attributes shared by all instances of the "Read Data by periodic Identifier" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticReadDataByPeriodicIds				
Base	-	•		eElement, DiagnosticCommonElement, Diagnostic nguageReferrable, PackageableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note		
maxPeriodi cDidToRea d	PositiveInteger	1	attr	This represents the maximum number of data identifiers that can be included in one request.		
periodicRa te	DiagnosticPerio dicRate	1*	aggr	This represents the description of a collection of periodic rates in which the service can be executed.		
scheduler MaxNumb er	PositiveInteger	1	attr	This represents the maximum number of periodic data identifiers that can be scheduled in parallel.		

Table 5.59: DiagnosticReadDataByPeriodicIDClass

Class	DiagnosticPeriodicRate				
Package	M2::AUTOSARTe PeriodicID	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ReadDataBy PeriodicID			
Note		This represents the ability to define a periodic rate for the specification of the "read data by periodic ID" diagnostic service.			
Base	ARObject	ARObject			
Attribute	Туре	Mul.	Kind	Note	
period	TimeValue	1	attr	This represents the period of the DiagnosticPeriodicRate in seconds.	
periodicRa teCategory	DiagnosticPerio dicRateCategor yEnum	01	attr	This attribute represents the category of the periodic rate.	

Table 5.60: DiagnosticPeriodicRate

Enumeration	DiagnosticPeriodicRateCategoryEnum
-------------	------------------------------------



Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ReadData ByPeriodicID
Note	This meta-class provides possible values for the setting of the periodic rate.
Literal	Description
periodicRate Fast	This value represents a fast periodic rate.
	Tags: atp.EnumerationValue=0
periodicRate Medium	This value represents a medium periodic rate.
	Tags: atp.EnumerationValue=1
periodicRate Slow	This value represents a slow periodic rate.
	Tags: atp.EnumerationValue=2

Table 5.61: DiagnosticPeriodicRateCategoryEnum

The meaning of the values defined in DiagnosticPeriodicRateCategoryEnum is described in the applicable ISO document [16].

#### 5.5.9 ControlDTCSetting

This chapter describes the modeling of diagnostic services ControlDTCSetting (0x85). The purpose of the diagnostic service is to let the tester tell the diagnostic stack to either stop or resume the updating of a diagnostic trouble code.

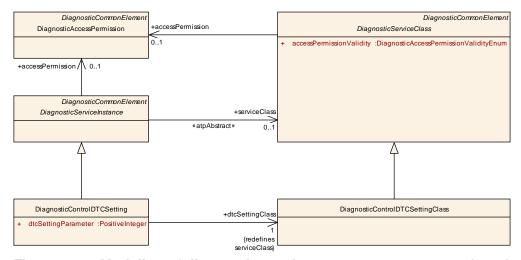


Figure 5.19: Modeling of diagnostic service ControlDTCSetting (0x85)

[TPS\_DEXT\_01075] standardized values for the attribute DiagnosticControlDTCSetting.category [ AUTOSAR does not standardize any of the possible values for the attribute DiagnosticControlDTCSetting.category. ] (RS\_DEXT\_00001, RS\_DEXT\_00021, RS\_DEXT\_00051)

[TPS\_DEXT\_01076] Identification of sub-functions of diagnostic service ControlDTCSetting [ The identification of sub-functions (for which the attribute cat-



egory is used for several other DiagnosticServiceInstances) is done via the attribute DiagnosticControlDTCSetting.dtcSettingParameter.

(RS\_DEXT\_00021, RS\_DEXT\_00051)

Class	DiagnosticControlDTCSetting				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ControlDTC Setting				
Note	This represents an instance of the "Control DTC Setting" diagnostic service.				
	Tags: atp.recommendedPackage=DiagnosticControlDtcSettings				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
dtcSetting Class	DiagnosticContr oIDTCSettingCl ass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the the reference represents the ability to access shared attributes among all	
				DiagnosticControlDTCSetting in the given context.	
dtcSetting Parameter	PositiveInteger	1	attr	This represents the DTCSettingType defined by ISO 14229-1. The pre-defined values are 1 (ON) and 2 (OFF).	

Table 5.62: DiagnosticControlDTCSetting

Class	DiagnosticControlDTCSettingClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ControlDTC Setting			
Note	This meta-class contains attributes shared by all instances of the "Control DTC Setting" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticControlDtcSettings			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note
_	_	_	_	-

**Table 5.63: DiagnosticControlDTCSettingClass** 

### 5.5.10 ResponseOnEvent

This chapter describes the modeling of diagnostic services ResponseOnEvent (0x86). The purpose of this service is to instruct the AUTOSAR diagnostic stack with respect to the starting or stopping of sending responses to a specific event to the tester.



Each DiagnosticResponseOnEvent provides the ability to define a collection of triggers (modelled by means of the abstract meta-class DiagnosticResponseOn-EventTrigger) that cause the sending of a response message.

The actual trigger behavior is defined by the sub-class of DiagnosticResponseOn-EventTrigger used to specify whether the trigger shall be created in response to a data change or in response to a DTC change.

[TPS\_DEXT\_01033] Semantics of triggers in the context of a DiagnosticResponseOnEvent | The semantics of a trigger in the context of a DiagnosticResponseOnEvent can be defined in two ways:

- The meta-class DiagnosticDataChangeTrigger allows for defining a trigger that activates on the change of the value of the referenced (in the role dataIdentifier) DiagnosticDataIdentifier.
- The meta-class DiagnosticDtcChangeTrigger allows for defining a trigger for the activation of the service. The entire proceedings of how the trigger activates and what DTCs are affected in managed at run-time and therefore no further configuration is required at this point.

(RS DEXT 00022)



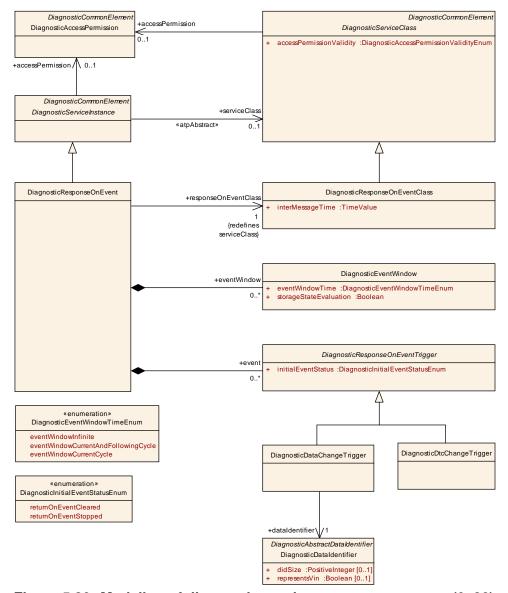


Figure 5.20: Modeling of diagnostic service ResponseOnEvent (0x86)

[constr\_1365] Multiplicity of DiagnosticResponseOnEvent.event | The multiplicity of DiagnosticResponseOnEvent.event shall not exceed the upper bound 255. |()

[constr\_1366] Event ID in the context of diagnostic service ResponseOnEvent shall be unique [ The value of DiagnosticResponseOnEvent.event.dataIdentifier.id shall be unique within the context of a given DiagnosticResponseOnEvent. |()



Class	DiagnosticResponseOnEvent						
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ResponseOn Event						
Note	·			e "Response on Event" diagnostic service.  =DiagnosticResponseOnEvents			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable						
Attribute	Туре	Mul.	Kind	Note			
event	DiagnosticResp onseOnEventTri gger	*	aggr	This represents the collection of DiagnosticResponseOnEventTriggers defined in the context of the enclosing DiagnosticResponseOnEvent.			
eventWind ow	DiagnosticEvent Window	*	aggr	This represents the applicable DiagnosticEventWindows			
responseO nEventCla ss	DiagnosticResp onseOnEventCl ass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to			
				access shared attributes among all DiagnosticResponseOnEvent in the given context.			

Table 5.64: DiagnosticResponseOnEvent

Class	DiagnosticResponseOnEventClass				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ResponseOn Event				
Note	This represents the ability to define common properties for alle instances of the "Response on Event" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticResponseOnEvents				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
interMessa geTime	TimeValue	1	attr	Provide the minimum time in seconds between two consecutive transmissions of an ROE event.	

Table 5.65: DiagnosticResponseOnEventClass

Class	DiagnosticEventWindow						
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ResponseOn Event						
Note	This represents th	This represents the ability to define the characteristics of the applicable event window					
Base	ARObject	ARObject					
Attribute	Туре	Mul.	Kind	Note			
eventWind owTime	DiagnosticEvent WindowTimeEn um	1	attr	This attribute clarifies the validity of the eventWindow			



storageSta	Boolean	1	attr	If this attribute is set to TRUE the StorageStateBit
teEvaluatio				will be evaluated if this EventWindowTime is
n				requested.

# Table 5.66: DiagnosticEventWindow

Class	DiagnosticResponseOnEventTrigger (abstract)					
Package	M2::AUTOSARTe Event	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ResponseOn Event				
Note	•	This represents the ability to further specify the events that are associated with the execution of the diagnostic service.				
Base	ARObject					
Attribute	Туре	Mul.	Kind	Note		
initialEvent Status	DiagnosticInitial EventStatusEnu m	1	attr	This represents the initial status of the enclosing DiagnosticResponseOnEventTrigger.		

# Table 5.67: DiagnosticResponseOnEventTrigger

Class	DiagnosticDataChangeTrigger					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ResponseOn Event					
Note	This represents the ability to define a trigger based on the change of a given DiagnosticDataIdentifier.					
Base	ARObject, Diagno	sticRes	ponseO	nEventTrigger		
Attribute	Туре	Mul.	Kind	Note		
dataldentifi er	DiagnosticDatal dentifier	1	ref	This represents the corresponding DiagnosticDataldentifier.		

# Table 5.68: DiagnosticDataChangeTrigger

Class	DiagnosticDtcChangeTrigger					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ResponseOn Event					
Note	This represents the ability to define a trigger that executes on the change of any DiagnosticTroubleCode.					
Base	ARObject, DiagnosticResponseOnEventTrigger					
Attribute	Type Mul. Kind Note					
_	_	_	_	-		

# Table 5.69: DiagnosticDtcChangeTrigger

Enumeration	DiagnosticInitialEventStatusEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Response OnEvent
Note	This represents the ability to define an initial status for the ROE service.
Literal	Description



returnOn EventCleared	This means that the ResponseOnEvent is initially cleared.
	Tags: atp.EnumerationValue=0
return	This means that the ResponseOnEvent is initially stopped.
OnEvent	
Stopped	Tags: atp.EnumerationValue=1

Table 5.70: DiagnosticInitialEventStatusEnum

Enumeration	DiagnosticEventWindowTimeEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Response OnEvent
Note	This represents the ability to define the semantics of the event window.
Literal	Description
eventWindow CurrentAnd	This means that the window extends to this and the following cycle.
Following Cycle	Tags: atp.EnumerationValue=0
eventWindow CurrentCycle	This means that the window is limited to the current cycle.
	Tags: atp.EnumerationValue=1
eventWindow Infinite	This means that the window extents without a border.
	Tags: atp.EnumerationValue=2

Table 5.71: DiagnosticEventWindowTimeEnum

## 5.5.11 ReadDTCInformation

This chapter describes the modeling of diagnostic services ReadDTCInformation (0x19). The purpose of this service is enable a tester to read a Diagnostic Trouble Code from the AUTOSAR Dcm [10] (that, in turn, fetches the information from the AUTOSAR Dem [11]).



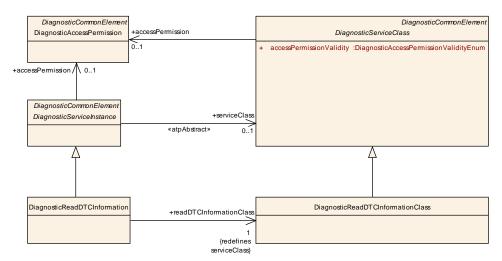


Figure 5.21: Modeling of diagnostic service ReadDTCInformation (0x19)

[TPS\_DEXT\_01034] Sub-functions of the service ReadDTCInformation  $\lceil$  The diagnostics service ReadDTCInformation defines a number of sub-functions that are, as far as the modeling in AUTOSAR goes, identified by a textual identifier.

These sub-functions are **not** modeled explicitly but can be specified by defining a DiagnosticReadDTCInformation and by setting the DiagnosticReadDTCInformation.category to the identifier of the respective sub-function.

The possible values, as far as the AUTOSAR standard is concerned, are defined by [TPS DEXT 01060]. | (RS DEXT 00006, RS DEXT 00051)

[TPS\_DEXT\_01060] Applicable values for <code>DiagnosticReadDTCInformation.category</code> [ The following values of the attribute <code>DiagnosticReadDTCInformation.category</code> are standardized by AUTOSAR:

- REPORT\_NUMBER\_OF\_DTC\_BY\_STATUS\_MASK
- REPORT\_DTC\_BY\_STATUS\_MASK
- REPORT\_MIRROR\_MEMORY\_DTC\_BY\_STATUS\_MASK
- REPORT NUMBER OF MIRROR MEMORY DTC BY STATUS MASK
- REPORT\_NUMBER\_OF\_EMISSIONS\_OBD\_DTC\_BY\_STATUS\_MASK
- REPORT\_EMISSIONS\_OBD\_DTC\_BY\_STATUS\_MASK
- REPORT\_DTC\_SNAPSHOT\_IDENTIFICATION
- REPORT\_DTC\_SNAPSHOT\_RECORD\_BY\_DTC\_NUMBER
- REPORT\_DTC\_STORED\_DATA\_BY\_RECORD\_NUMBER
- REPORT\_DTC\_EXT\_DATA\_RECORD\_BY\_DTC\_NUMBER
- REPORT\_MIRROR\_MEMORY\_DTC\_EXT\_DATA\_RECORD\_BY\_DTC\_NUMBER
- REPORT\_NUMBER\_OF\_DTC\_BY\_SEVERITY\_MASK\_RECORD



- REPORT\_DTC\_BY\_SEVERITY\_MASK\_RECORD
- REPORT\_SEVERITY\_INFORMATION\_OF\_DTC
- REPORT\_SUPPORTED\_DTC
- REPORT\_FIRST\_TEST\_FAILED\_DTC
- REPORT\_FIRST\_CONFIRMED\_DTC
- REPORT\_MOST\_RECENT\_TEST\_FAILED\_DTC
- REPORT\_MOST\_RECENT\_CONFIRMED\_DTC
- REPORT\_DTC\_FAULT\_DETECTION\_COUNTER
- REPORT\_DTC\_WITH\_PERMANENT\_STATUS
- REPORT\_USER\_DEF\_MEMORY\_DTC\_BY\_STATUS\_MASK
- REPORT\_USER\_DEF\_MEMORY\_DTC\_SNAPSHOT\_RECORD\_BY\_DTC\_NUMBER
- REPORT\_USER\_DEF\_MEMORY\_DTC\_EXT\_DATA\_RECORD\_BY\_DTC\_NUMBER
- REPORT\_WWH\_OBD\_DTC\_BY\_MASK\_RECORD
- REPORT\_WWH\_OBD\_DTC\_WITH\_PERMANENT\_STATUS

The meanings of these values are described in the applicable ISO document (ISO 14229-1) [16]. |(RS\_DEXT\_00001, RS\_DEXT\_00006, RS\_DEXT\_00051)

Please note that there is nothing to configure for DiagnosticReadDTCInformation beyond its mere existence.

Class	DiagnosticReadDTCInformation						
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ReadDTC Information						
Note	·	This represents an instance of the "Read DTC Information" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticReadDtcInformations					
Base	-			eElement, DiagnosticCommonElement, Diagnostic ilanguageReferrable, PackageableElement,			
Attribute	Type	Mul.	Kind	Note			
readDTCIn formationC lass	DiagnosticRead DTCInformation Class	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.			
				Thereby, the reference represents the ability to access shared attributes among all DiagnosticReadDTCInformation in the given context.			

Table 5.72: DiagnosticReadDTCInformation



#### 5.5.12 RoutineControl

This chapter describes the modeling of diagnostic services RoutineControl (0x31). The purpose of this diagnostic service is to execute a piece of code, a Diagnostic Routine, on the diagnostic stack at the request of the tester.

Diagnostic Routines consist of up to three possible components:

- Start Routine
- Stop Routine
- Request Routine Results

The impact of this architecture no the meta-model is described by [TPS DEXT 01077]:

**[TPS\_DEXT\_01077] Modeling of DiagnosticRoutine** [From the meta-modeling point of view, the semantics of DiagnosticRoutine is created by aggregating three further meta-classes:

- DiagnosticStartRoutine
- DiagnosticStopRoutine
- DiagnosticRequestRoutineResults

(RS DEXT 00015)

[TPS\_DEXT\_01088] Semantics of DiagnosticRoutine.id | The attribute DiagnosticRoutine.id represents the so-called *identifier* of the DiagnosticRoutine. | (RS\_DEXT\_00036)

[TPS\_DEXT\_01078] Not possible to use the attribute category for the identification of the sub-function of diagnostic service RoutineControl [ In the case of DiagnosticRoutine, it is not possible to use the attribute category for the identification of the sub-function. ] (RS\_DEXT\_00015, RS\_DEXT\_00051)

The sub-functions actually have different properties i.e. the arguments to a Diagnos-ticRoutine) that require a dedicated modeling for this purpose.



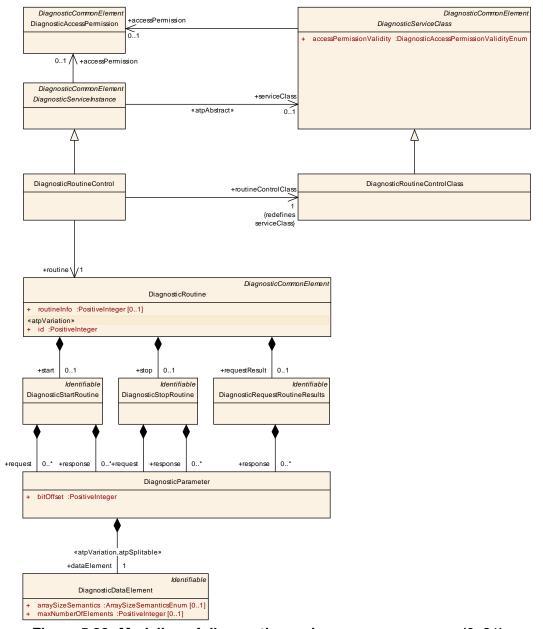


Figure 5.22: Modeling of diagnostic service RoutineControl (0x31)

[TPS\_DEXT\_01079] Modeling of the arguments to a DiagnosticRoutine [ The arguments to a DiagnosticRoutine are modeled by means of DiagnosticParameter that is aggregated in the following roles:

- DiagnosticStartRoutine.request
- DiagnosticStartRoutine.response
- DiagnosticStopRoutine.request
- DiagnosticStopRoutine.response
- DiagnosticRequestRoutineResults.response

(RS\_DEXT\_00015)



A DiagnosticParameter, in turn, aggregates a DiagnosticDataElement (see section 4.2) in the role dataElement.

[TPS\_DEXT\_01080] Diagnostic Routine needs to be started [ISO 14229-1 [16] does not foresee the existence of a Diagnostic Routine that is already executing at boot time. Therefore, a Diagnostic Routine needs to be started at some point in order to make sense of it. |(RS\_DEXT\_00015)

[constr\_1339] Existence of DiagnosticRoutine.start [ In a complete DiagnosticExtract, the attribute DiagnosticRoutine.start shall always exist for any given DiagnosticRoutine. |()

[TPS\_DEXT\_01035] Existence of DiagnosticRoutine.stop and DiagnosticRoutine.requestResult [ In contrast to DiagnosticRoutine.start (as clarified by [constr\_1339]), the existence of DiagnosticRoutine.stop and DiagnosticRoutine.requestResult is truly optional. | (RS DEXT 00015)

[constr\_1340] Consistency of DiagnosticServiceSwMapping with respect to synchronously called DiagnosticRoutineS [ Each DiagnosticServiceSwMapping that references a DiagnosticRoutineControl that only aggregates a DiagnosticStartRoutine in the role start shall only reference a Swc-ServiceDependency or BswServiceDependency that in turn aggregates a DiagnosticRoutineNeeds with attribute diagRoutineType set to DiagnosticRoutineTypeEnum.synchronous. ]()

[constr\_1341] Consistency of DiagnosticServiceSwMapping with respect to asynchronously called DiagnosticRoutines | Each DiagnosticServiceSwMapping that references a DiagnosticRoutineControl that aggregates a DiagnosticStopRoutine and/or DiagnosticRequestRoutineResults in the role stop resp. requestResult shall only reference a SwcServiceDependency or BswServiceDependency that in turn aggregates a DiagnosticRoutineNeeds with attribute diagRoutineType set to DiagnosticRoutineType-Enum.asynchronous. ]()

[TPS\_DEXT\_01049] Consistency of DiagnosticServiceSwMapping with respect to routine IDs [For each DiagnosticServiceSwMapping that references a DiagnosticRoutineNeeds and a DiagnosticRoutineControl, the value of DiagnosticRoutineNeeds.ridNumber shall be ignored and the value of DiagnosticRoutineControl.routine.id shall be taken instead. [(RS\_DEXT\_00015, RS\_DEXT\_00052)]

Class	DiagnosticRoutine						
Package	M2::AUTOSARTen	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics					
Note				ility to define a diagnostic routine.  =DiagnosticRoutines			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable						
Attribute	Туре	Mul.	Kind	Note			



id	PositiveInteger	1	attr	This is the numerical identifier used to identify the DiagnosticRoutine in the scope of diagnostic workflow  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
requestRe sult	DiagnosticRequ estRoutineResu Its	01	aggr	This represents the ability to request the result of a running routine.
routineInfo	PositiveInteger	01	attr	This represents the routine info byte. The info byte contains a manufacturer-specific value (for the identification of record identifiers) that is reported to the tester.
				Other use cases for this attribute are mentioned in ISO 27145 and ISO 26021.
start	DiagnosticStart Routine	01	aggr	This represents the ability to start a routine
stop	DiagnosticStop Routine	01	aggr	This represents the ability to stop a running routine.

**Table 5.73: DiagnosticRoutine** 

Class	DiagnosticStartRoutine					
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::CommonDiagnostics		
Note	This represents th	e ability	to start	a diagnostic routine.		
Base	ARObject, Identifi	ARObject, Identifiable, MultilanguageReferrable, Referrable				
Attribute	Туре	Mul.	Kind	Note		
request	DiagnosticPara meter	*	aggr	This represents the request parameters.		
response	DiagnosticPara meter	*	aggr	This represents the response parameters.		

Table 5.74: DiagnosticStartRoutine

Class	DiagnosticStopRoutine				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::CommonDiagnostics	
Note	This represents th	ne ability	to stop	a diagnostic routine.	
Base	ARObject, Identifiable, MultilanguageReferrable, Referrable				
Attribute	Туре	Mul.	Kind	Note	
request	DiagnosticPara meter	*	aggr	This represents the request parameters.	
response	DiagnosticPara meter	*	aggr	This represents the response parameters.	

**Table 5.75: DiagnosticStopRoutine** 



Class	DiagnosticReque	DiagnosticRequestRoutineResults			
Package	M2::AUTOSARTe	mplates	::Diagno	osticExtract::CommonDiagnostics	
Note	This meta-class represents the ability to define the result of a diagnostic routine execution.				
Base	ARObject, Identifi	able, Mu	ultilangu	ageReferrable, Referrable	
Attribute	Туре	Mul.	Kind	Note	
response	DiagnosticPara meter	*	aggr	This represents the response parameters.	

**Table 5.76: DiagnosticRequestRoutineResults** 

Class	DiagnosticRoutin	DiagnosticRoutineControl					
Package	M2::AUTOSARTe Control	mplates	::Diagno	osticExtract::Dcm::DiagnosticService::Routine			
Note	This represents a	n instan	ce of the	e "Routine Control" diagnostic service.			
	Tags: atp.recomm	nendedF	ackage	=DiagnosticRoutineControls			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable						
Attribute	Туре	Mul.	Kind	Note			
routine	DiagnosticRouti ne	1	ref	This refers to the applicable DiagnosticRoutine.			
routineCon trolClass	DiagnosticRouti neControlClass						
				Thereby, the reference represents the ability to access shared attributes among all DiagnosticRoutineControl in the given context.			

**Table 5.77: DiagnosticRoutineControl** 

Class	DiagnosticRoutineNeeds				
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::ServiceNeeds	
Note	Specifies the general needs on the configuration of the Diagnostic Communication Manager (Dcm) which are not related to a particular item (e.g. a PID). The main use case is the mapping of service ports to the Dcm which are not related to a particular item.				
Base	ARObject, DiagnosticCapabilityElement, Identifiable, MultilanguageReferrable, Referrable, ServiceNeeds				
Attribute	Туре	Mul.	Kind	Note	
diagRoutin eType	DiagnosticRouti neTypeEnum	1	attr	This denotes the type of diagnostic routine which is implemented by the referenced server port.	
ridNumber	PositiveInteger	01	attr	This represents a routine identifier for the diagnostic routine. This allows to predefine the RID number if the a function developer has received a particular requirement from the OEM or from a standardization body.	

**Table 5.78: DiagnosticRoutineNeeds** 



Enumeration	DiagnosticRoutineTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds
Note	This enumerator specifies the different types of diagnostic routines.
Literal	Description
asynchronous	This indicates that the diagnostic server is not blocked while the diagnostic routine is running.  Tags: atp.EnumerationValue=0
synchronous	This indicates that the diagnostic routine blocks the diagnostic server in the ECU while the routine is running.  Tags: atp.EnumerationValue=1

Table 5.79: DiagnosticRoutineTypeEnum

## 5.5.13 SecurityAccess

This chapter describes the modeling of diagnostic services SecurityAccess (0x27).

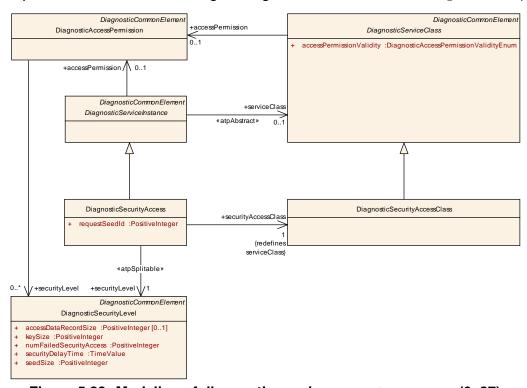


Figure 5.23: Modeling of diagnostic service SecurityAccess (0x27)

[TPS\_DEXT\_01053] Existence of DiagnosticSecurityAccess.securityLevel | The configuration of a given DiagnosticSecurityAccess is considered incomplete until the reference in the role DiagnosticSecurityAccess.securityLevel exists. | (RS\_DEXT\_00009, RS\_DEXT\_00042)



The meaning of [TPS\_DEXT\_01053] is that the reference may be missing in intermediate steps of the configuration work flow. But at the point in time where ECU configuration is generated from the <code>DiagnosticExtract</code> the reference is needed to able to make sense of the model for the given <code>DiagnosticSecurityAccess</code>.

Please note that (as already explained in section 5.5) the sub-functions of this service are modeled by means of the category attribute.

In response to conceptual differences between many other diagnostic services and SecurityAccess, the applicable sub-functions for the diagnostic service SecurityAccess are **not** defined by means of the attribute DiagnosticSecurityAccess.category.

[TPS\_DEXT\_01036] Work-flow within the execution of the diagnostic service SecurityAccess | The work-flow within the execution of the diagnostic service SecurityAccess basically boils down to the tester sending the request to obtain a seed from the diagnostic stack and then sending back a key to the stack.

Thus, the sub-functions could be generically be described as *requestSeed* and *send-Key*, which is precisely what the ISO 14229-1 [16] does.

According to this logic, the *requestSeed* could get a specific number assigned to identify the sub-function and then the *sendKey* sub-function would get assigned the number of the *requestSeed* sub-function + 1. Again, this is fully in line with the ISO 14229-1 [16].  $\int (RS_DEXT_00009)$ 

However, there is further dimension to take into account, namely the DiagnosticSecurityLevel. According to ISO 14229-1 [16], different security levels make different numbers for the sub-function identifier.

[TPS\_DEXT\_01037] Semantics of DiagnosticSecurityAccess.requestSeedId | The attribute DiagnosticSecurityAccess.requestSeedId shall be used to define the number of the sub-function of the diagnostic service SecurityAccess according to the intended security level. | (RS\_DEXT\_00009)

[constr\_1342] Possible values for <code>DiagnosticSecurityAccess.requestSeedId</code>  $\[$  The value of the attribute <code>DiagnosticSecurityAccess.requestSeedId</code> shall only be set to an odd number $^1$ .

The supported value range consists of the following list:

- all odd numbers in the closed interval 0x01 .. 0x41
- **0x5F** (this corresponds to the case of *end-of-life activation of on-board pyrotech-nic devices according to ISO 26021-2 [17]*)
- all odd numbers in the closed interval 0x61 .. 0x7E

 $\rfloor ()$ 

<sup>&</sup>lt;sup>1</sup>The even numbers are reserved for the identification of the corresponding *sendKey* sub-function, as explained by [TPS\_DEXT\_01036].



In contrast to a similar situation in the case of the diagnostic service <code>SessionControl</code> (see section 5.5.14), there is no real evidence that a <code>DiagnosticSecurityLevel</code> always exists before the referencing <code>DiagnosticSecurityAccess</code> is created in order to properly establish the reference in the role <code>DiagnosticSecurityAccess.securityLevel</code>.

[TPS\_DEXT\_01038] Motivation for making the reference DiagnosticSecurityAccess.securityLevel &atpSplitable \simple \textstyle The reference DiagnosticSecurityAccess.securityLevel needs to be decorated with the stereotype &atpSplitable \simple in order to advertise the idea that the reference to a corresponding DiagnosticSecurityLevel is created (potentially in a different artifact) some time after the actual creation of the given DiagnosticSecurityAccess. 

[RS\_DEXT\_00002, RS\_DEXT\_00009, RS\_DEXT\_00042]

Of course, if the DiagnosticSecurityLevel factually exists before the definition of DiagnosticSecurityAccess the reference can directly be inserted into the model.

Class	DiagnosticSecurityAccess					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Security Access					
Note	This represents a	n instan	ce of the	"Security Access" diagnostic service.		
	Tags: atp.recomm	nendedF	Package	=DiagnosticSecurityAccesss		
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
requestSe edId	PositiveInteger	1	attr	This would be 0x01, 0x03, 0x05,  The sendKey id can be computed by adding 1 to the requestSeedId		
securityAc cessClass	DiagnosticSecur ityAccessClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to access shared attributes among all DiagnosticSecurityAccess in the given context.		
securityLe vel	DiagnosticSecur ityLevel	1	ref	This reference identifies the applicable security level for the security access.  Stereotypes: atpSplitable Tags: atp.Splitkey=securityLevel		

Table 5.80: DiagnosticSecurityAccess



#### 5.5.14 SessionControl

This chapter describes the modeling of diagnostic services SessionControl (0x10). The obvious goal of the service is to support the switching from one diagnostic session to another.

[TPS\_DEXT\_01081] Modeling of DiagnosticSessionControl [For the purpose of providing a means to specify the switching from one diagnostic session to another diagnostic session, DiagnosticSessionControl refers to a DiagnosticSession in the role diagnosticSession. | (RS DEXT 00003, RS DEXT 00040)

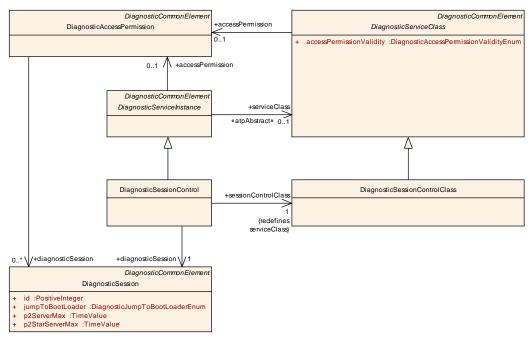


Figure 5.24: Modeling of diagnostic service SessionControl (0x10)

According to ISO 14229-1 [16], the diagnostic service SessionControl defines subfunctions.

[TPS\_DEXT\_01039] Identification of the sub-function of DiagnosticSession—Control [ In the case of DiagnosticSessionControl it would not be a good idea to encode the applicable sub-function by means of the attribute DiagnosticSessionControl.category.

Actually, the possible sub-functions are strongly related to the concept of the diagnostic session, represented by the meta-class DiagnosticSession.

The latter, in turn, has an attribute id that directly corresponds to the number of the applicable sub-function for DiagnosticSessionControl.

In other words, the sub-function of <code>DiagnosticSessionControl</code> is identified by means of the reference <code>DiagnosticSessionControl.diagnosticSession</code>. 

(RS DEXT 00003, RS DEXT 00051)



[TPS\_DEXT\_01082] Existence of DiagnosticSessionControl.diagnostic-Session [ The idea of modeling the sub-function of DiagnosticSessionControl by means of the reference DiagnosticSessionControl.diagnosticSession implies that the applicable DiagnosticSession already exists at the time when the given DiagnosticSessionControl is created.

It is assumed that this will always be the case because the definition of <code>Diagnos-ticSessions</code> is part of laying the groundwork<sup>2</sup> for diagnostic communication. 

(RS DEXT 00003, RS DEXT 00040)

It is hard to foresee a scenario where the <code>DiagnosticSessions</code> are defined near the very end of the work-flow that leads to a complete <code>DiagnosticExtract</code>.

Class	DiagnosticSessionControl					
Package	M2::AUTOSARTe Control	mplates	::Diagno	osticExtract::Dcm::DiagnosticService::Session		
Note	·			e "Session Control" diagnostic service.  =DiagnosticSessionControls		
Base		ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note		
diagnostic Session	DiagnosticSessi on	1	ref	This represents the applicable DiagnosticSessions		
sessionCo ntrolClass	DiagnosticSessi onControlClass 1 ref This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.					
				Thereby, the reference represents the ability to access shared attributes among all DiagnosticSessionControl in the given context.		

Table 5.81: DiagnosticSessionControl

### 5.5.15 RequestFileTransfer

This chapter describes the modeling of diagnostic services RequestFileTransfer (0x38). The purpose of the service is the triggering of the transfer of a *file* from or to the AUTOSAR diagnostic stack.

<sup>&</sup>lt;sup>2</sup>This is similar to the definition of commonly used data types in a software development project



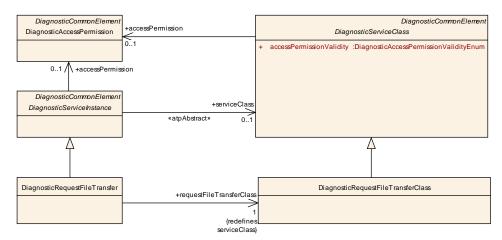


Figure 5.25: Modeling of diagnostic service RequestFileTransfer (0x38)

Please note that there is nothing to configure for DiagnosticRequestFileTransfer beyond its mere existence.

[TPS\_DEXT\_01090] Diagnostic service RequestFileTransfer does not define any sub-functions [ The diagnostic service RequestFileTransfer does not define any sub-functions. therefore, the usage of the attribute category is not constrained for meta-class DiagnosticRequestFileTransfer. ] (RS\_DEXT\_00057)

Class	DiagnosticRequestFileTransfer					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::RequestFile Transfer					
Note		This diagnostic service instance implements the UDS service 0x38.  Tags: atp.recommendedPackage=DiagnosticRequestFileTransfers				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
requestFile TransferCl ass	DiagnosticRequ estFileTransfer Class	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to		
				access shared attributes among all DiagnosticRequestFileTransfer in the given context.		

Table 5.82: DiagnosticRequestFileTransfer



Class	DiagnosticReque	estFileT	ransfer	Class		
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::RequestFile Transfer					
Note	This meta-class contains attributes shared by all instances of the "Request File transfer" diagnostic service.  Tags: atp.recommendedPackage=DiagnosticRequestFileTransfers					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре					
_	_	_	_	-		

Table 5.83: DiagnosticRequestFileTransferClass

# 5.6 OBD Diagnostic Services supported by AUTOSAR

Support for diagnostic services for on-board diagnostics (OBD) [18] requires the definition of further meta-classes similar to e.g. <code>DiagnosticDataIdentifier</code> or <code>DiagnosticRoutine</code>.

**[TPS\_DEXT\_01092] Semantics of DiagnosticParameterIdentifier** [ The meta-class DiagnosticParameterIdentifier is used to reflect the concept of the so-called Parameter Identifiers (PID) in the diagnostic extract. A DiagnosticParameterIdentifier defines the following properties:

- Each DiagnosticParameterIdentifier gets a numerical ID carried in the attribute DiagnosticParameterIdentifier.id.
- DiagnosticParameterIdentifier may also contains a so-called *Support Info Byte*, modeled as DiagnosticSupportInfoByte.
- The definition of a DiagnosticParameterIdentifier also contains a list of data associated with the PID. This list is modeled as an aggregation of DiagnosticParameter.

## (RS DEXT 00068)

As already mentioned in [TPS\_DEXT\_01092], the <code>DiagnosticParameterIdentifier</code> shall not be confused with the <code>DiagnosticParameter</code>. The latter is used "inside" the definition of <code>DiagnosticParameterIdentifier</code>, but also in <code>DiagnosticDataIdentifier</code> or <code>DiagnosticRoutine</code>, to define one (out of potentially many) piece of information held in the scope of a <code>DiagnosticParameterIdentifier</code>.

[constr\_1447] Restrictions for the value of DiagnosticParameterIdentifier.id | The values 0x00, 0x20, 0x40, 0x60, 0x80, 0xA0, 0xC0, and 0xE0 are not allowed to appear in the value of DiagnosticParameterIdentifier.id. ]()



[constr\_1448] Interval of DiagnosticParameterIdentifier.id | The allowed interval for values of DiagnosticParameterIdentifier.id shall not exceed [0..255]. |()

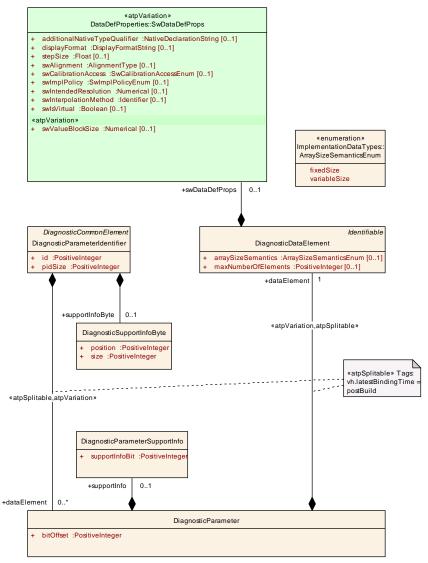


Figure 5.26: Modeling of the DiagnosticParameterIdentifier

[constr\_1449] PID shall only carry a fixed-length collection of data [ The value of DiagnosticParameterIdentifier.dataElement.dataElement.arraySizeSemantics shall not be set to variableSize.]()



Class	DiagnosticParameterIdentifier					
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics					
Note	This meta-class represents the ability to model a diagnostic parameter identifier (PID) for the purpose of executing on-board diagnostics (OBD).  Tags: atp.recommendedPackage=DiagnosticParameterIdentifiers					
Base				eElement, DiagnosticCommonElement, Identifiable, eableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note		
dataEleme nt	DiagnosticPara meter	*	aggr	This represents the data carried by the DiagnosticParameterIdentifier.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=dataElement, variation Point.shortLabel vh.latestBindingTime=postBuild		
id	PositiveInteger	1	attr	This is the numerical identifier used to identify the DiagnosticParameterIdentifier in the scope of diagnostic workflow (see SAE J1979-DA).		
pidSize	PositiveInteger	1	attr	The size of the entire PID can be greater than the sum of the data elements because padding might be applied. Unit: byte.		
supportInfo Byte	DiagnosticSupp ortInfoByte	01	aggr	This represents the supported information associated with the DiagnosticParameterIdentifier.		

Table 5.84: DiagnosticParameterIdentifier

Class	DiagnosticParameterSupportInfo						
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics						
Note	This represents a way to define which bit of the supportInfo is representing this part of the PID						
Base	ARObject						
Attribute	Туре	Mul.	Kind	Note			
supportInfo Bit	PositiveInteger	1	attr	defines the bit in the SupportInfo byte, which represents the PID DataElement pidSize / position / size. Unit: byte.			

Table 5.85: DiagnosticParameterSupportInfo

Class	DiagnosticSupportInfoByte					
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics					
Note	This meta-class defines the support information (typically byte A) to declare the usability of the DataElements within the so-called packeted PIDs (e.g. PID\$68).					
Base	ARObject					
Attribute	Туре	Mul.	Kind	Note		
position	PositiveInteger	1	attr	This represents the position of the supportInfo in the PID. Unit: byte.		
size	PositiveInteger	1	attr	This represents the size of the supportInfo within the PID. Unit: byte.		



#### Table 5.86: DiagnosticSupportInfoByte

#### 5.6.1 OBD Mode 0x01 (RequestCurrentPowertrainDiagnosticData)

The service RequestCurrentPowertrainDiagnosticData is modeled in Figure 5.27.

[TPS\_DEXT\_01125] Support for diagnostic service RequestCurrentPower-trainDiagnosticData [ The modeling support for the OBD diagnostic service RequestCurrentPowertrainDiagnosticData utilizes the new meta-class DiagnosticParameterIdentifier such that the meta-class DiagnosticRequestCurrentPowertrainData maintains a reference to DiagnosticParameterIdentifier in the role pid. ](RS\_DEXT\_00069)

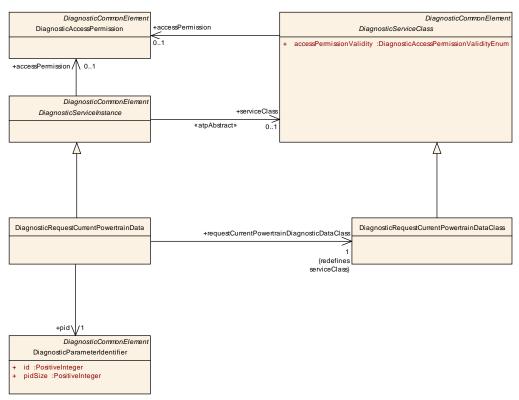


Figure 5.27: Modeling of diagnostic service for OBD Mode 0x01



Class	DiagnosticReque	estCurre	entPowe	ertrainData	
Package	M2::AUTOSARTe RequestCurrentPo	•	_	sticExtract::Dcm::ObdService::Mode_0x01_ sticData	
Note	service.	This meta-class represents the ability to model an instance of the OBD mode 0x01 service.  Tags: atp.recommendedPackage=DiagnosticRequestCurrentPowertrainDatas			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Type	Mul.	Kind	Note	
pid	DiagnosticPara meterIdentifier	1	ref	This represents the PID associated with this instance of the OBD mode 0x01 service.	
requestCur rentPowert rainDiagno sticDataCl ass	DiagnosticRequ estCurrentPowe rtrainDataClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestCurrentPowertrainData in the given context.	

Table 5.87: DiagnosticRequestCurrentPowertrainData

Class	DiagnosticRequestCurrentPowertrainDataClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x01_ RequestCurrentPowertrainDiagnosticData			
Note	This meta-class represents the ability to define common properties for all instances of the "Request current Powertrain Data" OBD diagnostic service.  Tags: atp.recommendedPackage=DiagnosticRequestCurrentPowertrainDatas			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note
_	_	_	_	-

 Table 5.88: DiagnosticRequestCurrentPowertrainDataClass

## 5.6.2 OBD Mode 0x02 (RequestPowertrainFreezeFrameData)

The service RequestPowertrainFreezeFrameData is modeled in Figure 5.28.

[TPS\_DEXT\_01126] Support of OBD service RequestPowertrainFreeze-FrameData [ The modeling support for the ODB diagnostic service RequestPower-trainFreezeFrameData utilizes the new meta-class DiagnosticParameterI-dentifier such that the meta-class DiagnosticRequestCurrentPowertrain-Data maintains a reference to DiagnosticParameterIdentifier in the role pid. | (RS\_DEXT\_00070)



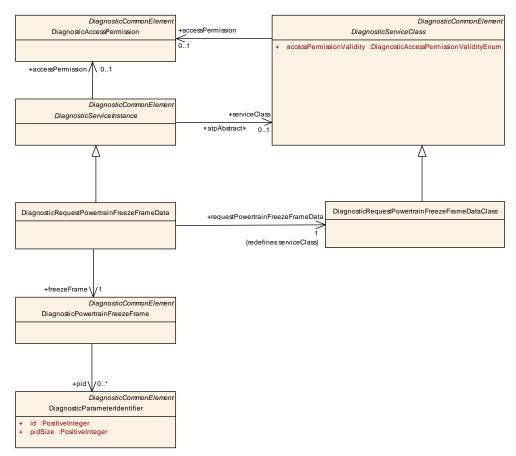


Figure 5.28: Modeling of diagnostic service for OBD Mode 0x02

Class	DiagnosticReque	estPowe	ertrainF	reezeFrameData	
Package	M2::AUTOSARTe RequestPowertrai	•	-	esticExtract::Dcm::ObdService::Mode_0x02_ lata	
Note	This meta-class represents the ability to model an instance of the OBD mode 0x02 service.  Tags: atp.recommendedPackage=DiagnosticPowertrainFreezeFrames				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
freezeFra me	DiagnosticPowe rtrainFreezeFra me	1	ref	This represents the associated freeze-frame.	
requestPo wertrainFr eezeFram eData	DiagnosticRequ estPowertrainFr eezeFrameData Class	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestPowertrainFreezeFrameData in the given context.	

Table 5.89: DiagnosticRequestPowertrainFreezeFrameData



Class	DiagnosticReque	DiagnosticRequestPowertrainFreezeFrameDataClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x02_ RequestPowertrainFreezeFrameData				
Note	This meta-class represents the ability to define common properties for all instances of the "Request Powertrain Freeze Frame Data" OBD diagnostic service.  Tags: atp.recommendedPackage=DiagnosticPowertrainFreezeFrames				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
_	_	_	_	-	

Table 5.90: DiagnosticRequestPowertrainFreezeFrameDataClass

Class	DiagnosticPower	trainFr	eezeFra	me		
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x02_ RequestPowertrainFreezeFrameData					
Note	This meta-class represents a powertrain-related freeze-frame. In theory, this meta-class would need an additional id attribute. However, legal regulations requires only a single value for this attribute anyway.  Tags: atp.recommendedPackage=DiagnosticPowertrainFreezeFrames					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Type Mul. Kind Note				
pid	DiagnosticPara meterIdentifier	*	ref	This represents the PID associated with this instance of the OBD mode 0x02 service.		

**Table 5.91: DiagnosticPowertrainFreezeFrame** 

# 5.6.3 OBD Mode 0x03 / 0x07 (RequestEmissionRelatedDiagnosticTrouble-Codes)

[TPS\_DEXT\_01127] Semantics of meta-class DiagnosticRequestEmissionRe-latedDTC [Two very similar OBD services, subsumed as RequestEmissionRe-latedDiagnosticTroubleCodes are supported by means of the meta-class DiagnosticRequestEmissionRelatedDTC. | (RS DEXT 00071)

The modeling is sketched in Figure 5.29.



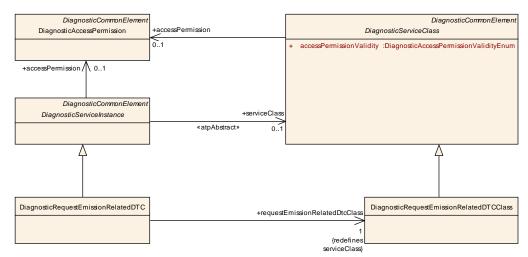


Figure 5.29: Modeling of diagnostic service for OBD Modes 0x03, 0x07

Class	DiagnosticRequestEmissionRelatedDTC					
Package		M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x03_0x07_ RequestEmissionRelatedDTC				
Note	This meta-class represents the ability to model an instance of the OBD mode 0x03/0x07 service.  Tags: atp.recommendedPackage=DiagnosticRequestEmissionRelatedDTCs					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
requestEm issionRelat edDtcClas s	DiagnosticRequ estEmissionRel atedDTCClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestEmissionRelatedDTC in the given context.		

Table 5.92: DiagnosticRequestEmissionRelatedDTC

Class	DiagnosticReque	DiagnosticRequestEmissionRelatedDTCClass			
Package		M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x03_0x07_ RequestEmissionRelatedDTC			
Note	This meta-class represents the ability to define common properties for all instances of the "Request Emission Related DTC" OBD diagnostic service.  Tags: atp.recommendedPackage=DiagnosticRequestEmissionRelatedDTCs				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
_	_	_	_	-	

Table 5.93: DiagnosticRequestEmissionRelatedDTCClass



### 5.6.4 OBD Mode 0x04 (ClearResetEmissionRelatedDiagnosticInformation)

[TPS\_DEXT\_01128] Semantics of meta-class DiagnosticClearResetEmis-sionRelatedInfo [The OBD diagnostic service ClearResetEmissionRelated-DiagnosticInformation is supported by means of the meta-class Diagnostic-ClearResetEmissionRelatedInfo.](RS\_DEXT\_00072)

The modeling is sketched in Figure 5.30.

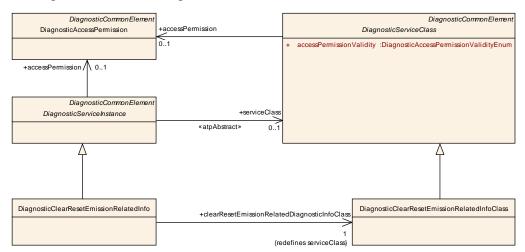


Figure 5.30: Modeling of diagnostic service for OBD Mode 0x04

Class	DiagnosticClear	DiagnosticClearResetEmissionRelatedInfo				
Package	M2::AUTOSARTe ResetEmissionRe	•	_	osticExtract::Dcm::ObdService::Mode_0x04_Clear		
Note	This meta-class represents the ability to model an instance of the OBD mode 0x04 service.					
Base	Tags: atp.recommendedPackage=DiagnosticClearResetEmissionRelatedInfos  ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Type Mul. Kind Note				
clearReset EmissionR elatedDiag nosticInfoC lass	DiagnosticClear ResetEmission RelatedInfoClas s	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to access shared attributes among all DiagnosticClearResteEmissionRelatedInfo in the given context.		

Table 5.94: DiagnosticClearResetEmissionRelatedInfo



Class	DiagnosticClearl	DiagnosticClearResetEmissionRelatedInfoClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x04_Clear ResetEmissionRelatedInfo				
Note	This meta-class represents the ability to define common properties for all instances of the "Clear Reset Emission Related Data" OBD diagnostic service.  Tags: atp.recommendedPackage=DiagnosticClearResetEmissionRelatedInfos				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
_	_	_	_	-	

Table 5.95: DiagnosticClearResetEmissionRelatedInfoClass

#### 5.6.5 OBD Mode 0x06 (RequestOnBoardMonitoringTestResults)

[TPS\_DEXT\_01129] Support for OBD diagnostic service RequestOnBoardMon-itoringTestResults [ The OBD diagnostic service RequestOnBoardMonitoringTestResults is supported by manes of meta-class DiagnosticRequestOn-BoardMonitoringTestResults that refers to the representation of the test result modeled as meta-class DiagnosticTestResult | (RS\_DEXT\_00073)

The modeling is sketched in Figure 5.31.

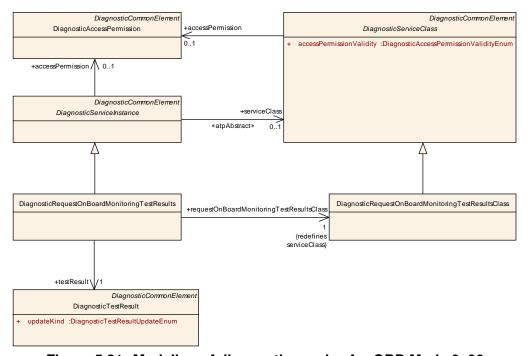


Figure 5.31: Modeling of diagnostic service for OBD Mode 0x06

In general, the mode 0x06 supports the querying of supported test identifiers from a given server. However, this functionality is not supported in AUTOSAR, hence the existence of [constr\_1462].



[constr\_1462] Restrictions for the value of DiagnosticTestResult.testIdentifier.id [ The values 0x00, 0x20, 0x40, 0x60, 0x80, 0xA0, 0xC0, and 0xE0 are not allowed to appear in the value of DiagnosticTestResult.testIdentifier.id. ] ()

Class	DiagnosticReque	estOnBo	oardMo	nitoringTestResults
Package	M2::AUTOSARTe RequestOnBoardl			sticExtract::Dcm::ObdService::Mode_0x06_ esults
Note	This meta-class represents the ability to model an instance of the OBD mode 0x06 service.  Tags: atp.recommendedPackage=DiagnosticRequestOnBoardMonitoringTest Resultss			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Type	Mul.	Kind	Note
requestOn BoardMon itoringTest ResultsCla ss	DiagnosticRequ estOnBoardMon itoringTestResul tsClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestOnBoardMonitoringTestResults in the given context.
testResult	DiagnosticTest Result	1	ref	This reference identifies the applicable test identifier for setting up a request message for mode 0x06.

Table 5.96: DiagnosticRequestOnBoardMonitoringTestResults

Class	DiagnosticReque	DiagnosticRequestOnBoardMonitoringTestResultsClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x06_ RequestOnBoardMonitoringTestResults				
Note	This meta-class represents the ability to define common properties for all instances of the "Request On-Board Monitoring Test Results" OBD diagnostic service.  Tags: atp.recommendedPackage=DiagnosticRequestOnBoardMonitoringTest Resultss				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
_	_	_	_	-	

Table 5.97: DiagnosticRequestOnBoardMonitoringTestResultsClass



Class	DiagnosticTestR	esult		
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticTestResult
Note	This meta-class re	epresent	ts the ab	oility to define diagnostic test results.
	Tags: atp.recomm	nendedF	ackage:	=DiagnosticTestResults
Base				eElement, DiagnosticCommonElement, Identifiable, eableElement, Referrable
Attribute	Туре	Mul.	Kind	Note
event	DiagnosticEvent	01	ref	This attribute represents the diagnostic event that is related to the diagnostic test result.
monitoredl dentifier	DiagnosticMeas urementIdentifie r	1	ref	This attribute represents the related diagnostic monitored identifier.
testIdentifi er	DiagnosticTestI dentifier	1	aggr	This attribute represents the applicable test identifier.
updateKin d	DiagnosticTest ResultUpdateEn um	1	attr	This attribute controls the update behavior of the enclosing DiagnosticTestResult.

Table 5.98: DiagnosticTestResult

## 5.6.6 OBD Mode 0x08 (RequestControlOfOnBoardDevice)

[TPS\_DEXT\_01130] Support of OBD diagnostic service RequestControlOfOn-BoardDevice  $\[$  The OBD diagnostic service RequestControlOfOnBoardDevice is supported by means of meta-class DiagnosticRequestControlOfOnBoardDevice that in turn refers to a DiagnosticTestRoutineIdentifier in the role testId  $\]$  (RS\_DEXT\_00074)

The modeling is sketched in Figure 5.32.



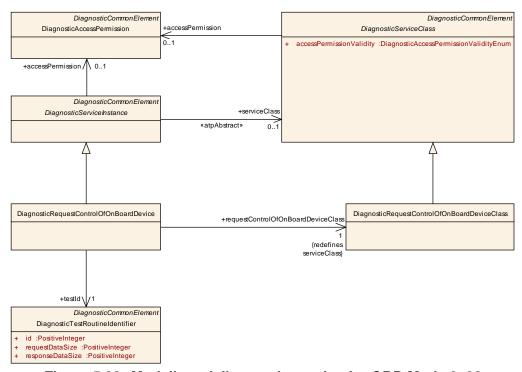


Figure 5.32: Modeling of diagnostic service for OBD Mode 0x08

In general, the mode 0x06 supports the querying of supported test routine identifiers from a given server. However, this functionality is not supported in AUTOSAR, hence the existence of [constr\_1461].

[constr\_1461] Restrictions for the value of DiagnosticTestRoutineIdentifier.id [ The values 0x00, 0x20, 0x40, 0x60, 0x80, 0xA0, 0xC0, and 0xE0 are not allowed to appear in the value of DiagnosticTestRoutineIdentifier.id. ]()

Class	DiagnosticReque	estCont	rolOfOr	BoardDevice	
Package	M2::AUTOSARTe RequestControlOf			osticExtract::Dcm::ObdService::Mode_0x08_	
Note	This meta-class represents the ability to model an instance of the OBD mode 0x08 service.  Tags: atp.recommendedPackage=DiagnosticRequestControlOfOnBoardDevices				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Type	Mul.	Kind	Note	
requestCo ntrolOfOnB oardDevic eClass	DiagnosticRequ estControlOfOn BoardDeviceCla ss	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.  Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestControlOfOnBoardDevice in	
				the given context.	
testId	DiagnosticTest RoutineIdentifier	1	ref	This represents the test Id for the mode 0x08.	



Table 5.99: DiagnosticRequestControlOfOnBoardDevice

Class	DiagnosticReque	DiagnosticRequestControlOfOnBoardDeviceClass				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x08_ RequestControlOfOnBoardDevice					
Note	This meta-class represents the ability to define common properties for all instances of the "Request Control Of On-Board Device" OBD diagnostic service.  Tags: atp.recommendedPackage=DiagnosticRequestControlOfOnBoardDevices					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
_	_	_	_	-		

Table 5.100: DiagnosticRequestControlOfOnBoardDeviceClass

Class	DiagnosticTestR	outinelo	dentifie	•		
Package		M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x08_ RequestControlOfOnBoardDevice				
Note	This represents the test id of the DiagnosticTestIdentifier.  Tags: atp.recommendedPackage=DiagnosticTestRoutineIdentifier					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
id	PositiveInteger	1	attr	This represents the numerical id of the DiagnosticTestIdentifier (see SAE J1979-DA).		
requestDat aSize	PositiveInteger	1	attr	This represents the specified data size for the request message. Unit: byte.		
responseD ataSize	PositiveInteger	1	attr	This represents the specified data size for the response message. Unit:byte.		

 Table 5.101: DiagnosticTestRoutineIdentifier

## 5.6.7 OBD Mode 0x09 (RequestVehicleInformation)

[TPS\_DEXT\_01131] Support for OBD diagnostic service RequestVehicleInformation [ The OBD diagnostic service RequestVehicleInformation is supported by means of meta-class DiagnosticRequestVehicleInfo that in turn references a DiagnosticInfoType in the role infoType. ] (RS\_DEXT\_00075)

The modeling is sketched in Figure 5.33.



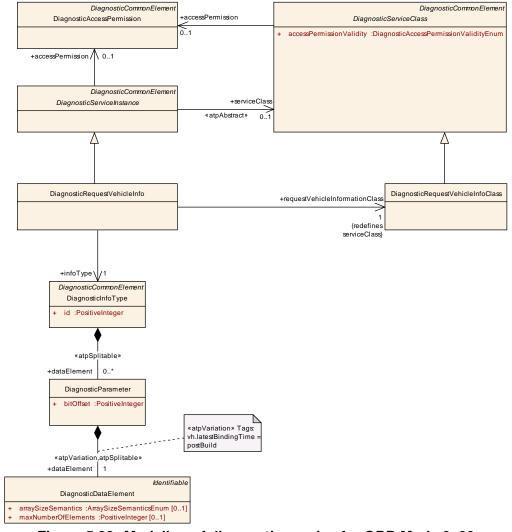


Figure 5.33: Modeling of diagnostic service for OBD Mode 0x09

[constr\_1460] Restrictions for the value of <code>DiagnosticInfoType.id</code>  $\lceil$  The values 0x00, 0x20, 0x40, 0x60, 0x80, 0xA0, 0xC0, and 0xE0 are not allowed to appear in the value of <code>DiagnosticInfoType.id.</code>  $\rfloor$ ()



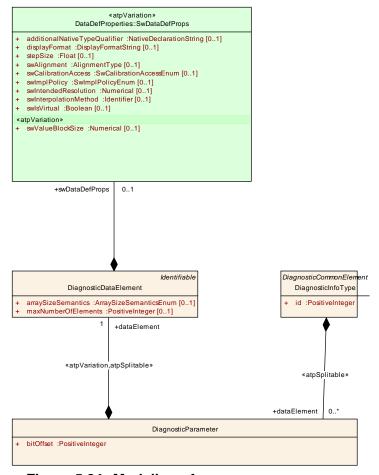


Figure 5.34: Modeling of DiagnosticInfoType

Class	DiagnosticReque	DiagnosticRequestVehicleInfo				
Package	M2::AUTOSARTe RequestVehicleIn	•	_	esticExtract::Dcm::ObdService::Mode_0x09_		
Note	service.					
Base	Tags: atp.recommendedPackage=DiagnosticRequestVehicleInfos  ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
infoType	DiagnosticInfoT ype	1	ref	This represents the info type associated with the mode 0x09 service.		
requestVe hicleInform ationClass	DiagnosticRequ estVehicleInfoCl ass					
				Thereby, the reference represents the ability to access shared attributes among all		

Table 5.102: DiagnosticRequestVehicleInfo



Class	DiagnosticReque	DiagnosticRequestVehicleInfoClass				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x09_ RequestVehicleInformation					
Note	This meta-class represents the ability to define common properties for all instances of the "Request Vehicle Info" OBD diagnostic service.  Tags: atp.recommendedPackage=DiagnosticRequestVehicleInfos					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
_	_	_	_	-		

Table 5.103: DiagnosticRequestVehicleInfoClass

Class	DiagnosticInfoTy	DiagnosticInfoType				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::CommonDiagnostics		
Note	This meta-class re	epresent	ts the ab	oility to model an OBD info type.		
	Tags: atp.recomm	nendedF	ackage:	=DiagnosticInfoTypes		
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
dataEleme nt	DiagnosticPara meter	*	aggr	This represents the data associated with the enclosing DiagnosticInfoType.		
				Stereotypes: atpSplitable Tags: atp.Splitkey=dataElement		
id	PositiveInteger	1	attr	This attribute represents the value of InfoType (see SAE J1979-DA).		

Table 5.104: DiagnosticInfoType

## 5.6.8 OBD Mode 0x0A (RequestEmissionRelatedDiagnosticTroubleCodesPermanentStatus)

[TPS\_DEXT\_01132] Support for OBD diagnostic service RequestEmission-RelatedDiagnosticTroubleCodesPermanentStatus [ The OBD diagnostic service RequestEmissionRelatedDiagnosticTroubleCodesPermanentStatus is supported by means of meta-class DiagnosticRequestEmissionRelatedDTCPermanentStatus.](RS\_DEXT\_00076)

The modeling is sketched in Figure 5.35.



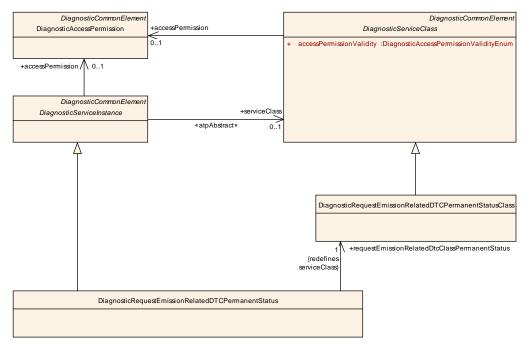


Figure 5.35: Modeling of diagnostic service for OBD Modes 0x0A

Class	DiagnosticReque	estEmis	sionRe	latedDTCPermanentStatus	
Package	M2::AUTOSARTe RequestEmission			osticExtract::Dcm::ObdService::Mode_0x0A_ manentStatus	
Note	This meta-class represents the ability to model an instance of the OBD mode 0x0A service.				
	<b>Tags:</b> atp.recommendedPackage=DiagnosticRequestEmissionRelatedDTC PermanentStatuss				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
requestEm issionRelat edDtcClas sPermane	DiagnosticRequ estEmissionRel atedDTCPerma nentStatusClass	1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class.	
ntStatus				Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestEmissionRelatedDTCPermanentStatus in the given context.	

Table 5.105: DiagnosticRequestEmissionRelatedDTCPermanentStatus



Class	DiagnosticReque	estEmis	sionRe	latedDTCPermanentStatusClass	
Package		M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x0A_ RequestEmissionRelatedDTCPermanentStatus			
Note	the "Request Emis	This meta-class represents the ability to define common properties for all instances of the "Request Emission Related DTC Permanent Status" OBD diagnostic service.  Tags: atp.recommendedPackage=DiagnosticRequestEmissionRelatedDTC PermanentStatuss			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
_	_	_	_	-	

Table 5.106: DiagnosticRequestEmissionRelatedDTCPermanentStatusClass

## 5.7 UDS Diagnostic Services for supporting WWH-OBD

[TPS\_DEXT\_01133] Support for WWH-OBD within the diagnostic extract \[ A support for WWH-OBD [19] within the diagnostic extract involves the usage of the following UDS services and their respective subfunctions:

DiagnosticReadDataByIdentifier (0x22) where the value of attribute DiagnosticDataIdentifier.id inside the interval defined by the OBD range, i.e.:

- F400-F4FF
- F600-F6FF
- F800-F8FF

Please note that the usage of this diagnostic service in an implementation of WWH-OBD corresponds to the existence of a DiagnosticValueNeeds on the side of an AtomicSwComponentType that interacts with the diagnostic service.

DiagnosticRoutineControl (0x31) where the value of attribute DiagnosticRoutine.id is inside the interval defined by the OBD range, i.e. E000-E0FF. Please note that the usage of this diagnostic service in an implementation of WWH-OBD corresponds to the existence of a DiagnosticRoutineNeeds on the side of an AtomicSwComponentType that implements routines executed within the diagnostic service.

DiagnosticClearDiagnosticInformation (0x14)

DiagnosticReadDTCInformation (0x19) with the subfunctions (0x4, 0x6, 0x42)
|(RS DEXT 00077)

When used in a WWH-OBD environment, meta-class <code>DiagnosticRoutine</code> utilizes the attribute <code>routineInfo</code> to support the configuration of the diagnostic response. In a pure UDS environment (except in an application of ISO 26021 [17]) the attribute has no semantics.



Class	DiagnosticValueNeeds						
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds						
Note	Specifies the general needs on the configuration of the Diagnostic Communication Manager (DCM) which are not related to a particular item (e.g. a PID). The main use case is the mapping of service ports to the DCM which are not related to a particular item.  In the case of using a sender receiver communicated value, the related value shall be taken via assignedData in the role "signalBasedDiagnostics".  In case of using a client/server communicated value, the related value shall be communicated via the port referenced by asssignedPort. The details of this communication (e.g. appropriate naming conventions) are specified in the related software specifications (SWS).						
Base	ARObject, DiagnosticCapabilityElement, Identifiable, MultilanguageReferrable, Referrable, ServiceNeeds						
Attribute	Туре	Mul.	Kind	Note			
dataLength	PositiveInteger	01	attr	This attribute is applicable only if the ServiceNeed is aggregated within BswModuleDependency.  This attribute represents the length of data (in bytes) provided for this particular PID signal.			
diagnostic ValueAcce ss	DiagnosticValue AccessEnum	01	attr	This attribute controls whether the data can be read and written or whether it is to be handled read-only.			
didNumber	PositiveInteger	01	attr	This represents a Data identifier for the diagnostic value. This allows to predefine the DID number if the responsible function developer has received a particular requirement from the OEM or from a standardization body.			
fixedLengt h	Boolean	01	attr	This attribute controls whether the data length of the data is fixed.			
processing Style	DiagnosticProce ssingStyleEnum	01	attr	This attribute controls whether interaction requires the software-component to react synchronously on a request or whether it processes the request in background but still the DCM has to issue the call again to eventually obtain the result of the request.			

Table 5.107: DiagnosticValueNeeds

Class	DiagnosticRouti	DiagnosticRoutineNeeds			
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::ServiceNeeds	
Note	Specifies the general needs on the configuration of the Diagnostic Communication Manager (Dcm) which are not related to a particular item (e.g. a PID). The main use case is the mapping of service ports to the Dcm which are not related to a particular item.				
Base	ARObject, DiagnosticCapabilityElement, Identifiable, MultilanguageReferrable, Referrable, ServiceNeeds				
Attribute	Туре	Mul.	Kind	Note	
diagRoutin eType	DiagnosticRouti neTypeEnum	1	attr	This denotes the type of diagnostic routine which is implemented by the referenced server port.	



ridNumber	PositiveInteger	01	attr	This represents a routine identifier for the diagnostic routine. This allows to predefine the RID number if the a function developer has received a particular requirement from the OEM or from a standardization body.
-----------	-----------------	----	------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Table 5.108: DiagnosticRoutineNeeds

## 5.8 Diagnostic Service Mapping

Automotive diagnostics interacts with both application software and basic software in various ways that can be formalized using the AUTOSAR meta-model. This chapter contains a description of the formalization of this interaction along with the applicable constraints.

[TPS\_DEXT\_01040] Use case where the DiagnosticExtract refers to software-components [ This is a list of the potential use case where the DiagnosticExtract refers to software-components in general and PortPrototypes in the context of either CompositionSwComponentTypes or AtomicSwComponentTypes:

- DiagnosticExtract refers to PortPrototype (for the access to dataElement) or SwcServiceDependency in the context of a AtomicSwComponent-Type embedded in the hierarchy created by the rootSoftwareComposition.
- DiagnosticExtract refers to a PortPrototype(for the access to dataElement) or SwcServiceDependency in the context of a AtomicSwComponent— Type embedded in the hierarchy created by a CompositionSwComponent— Type that is nowhere aggregated (for the time being).
- DiagnosticExtract refers to a PortPrototype (for the access to dataElement) or SwcServiceDependencyin the context of an Atomic-SwComponentType.
- DiagnosticExtract refers to a BswServiceDependency.

#### (RS\_DEXT\_00052)

Class	SwcServiceDependency				
Package	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::Service				
	Mapping				
Note	Specialization of ServiceDependency in the context of an SwcInternalBehavior. It allows to associate ports, port groups and (in special cases) data defined for an atomic software component to a given ServiceNeeds element.				
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable, ServiceDependency				
Attribute	Туре	Mul.	Kind	Note	



assignedD ata	RoleBasedData Assignment	*	aggr	Defines the role of an associated data object of the same component.  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
assignedP ort	RoleBasedPort Assignment	*	aggr	Defines the role of an associated port of the same component.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=assignedPort, variation Point.shortLabel vh.latestBindingTime=preCompileTime
represente dPortGrou p	PortGroup	01	ref	This reference specifies an association between the ServiceNeeeds and a PortGroup, for example to request a communication mode which applies for communication via these ports. The referred PortGroup shall be local to this atomic SWC, but via the links between the PortGroups, a tool can evaluate this information such that all the ports linked via this port group on the same ECU can be found.
serviceNee ds	ServiceNeeds	1	aggr	The associated ServiceNeeds.

Table 5.109: SwcServiceDependency

Class	BswServiceDepe	BswServiceDependency				
Package	M2::AUTOSARTe	mplates	::BswMc	oduleTemplate::BswBehavior		
Note	•	e BswM	oduleEn	ncy in the context of an BswInternalBehavior. It tries and data defined for a BSW module or cluster		
Base	ARObject, Service	Depend	dency			
Attribute	Туре	Mul.	Kind	Note		
assignedD ata	RoleBasedData Assignment	*	aggr	Defines the role of an associated data object (owned by this module or cluster) in the context of the ServiceNeeds element.  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime		
assignedE ntryRole	RoleBasedBsw ModuleEntryAss ignment	*	aggr	Defines the role of an associated BswModuleEntry in the context of the ServiceNeeds element.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=assignedEntryRole, variation Point.shortLabel vh.latestBindingTime=preCompileTime		
ident	BswServiceDep endencyldent	01	aggr	This adds the ability to become referrable to BswServiceDependency.  Tags: atp.Status=shallBecomeMandatory xml.sequenceOffset=-100		



serviceNee	ServiceNeeds	1	aggr	The associated ServiceNeeds.
ds				

Table 5.110: BswServiceDependency

[constr\_1450] Service mapping for ODB mode 0x01 for DiagnosticParameterIdentifier [if a DiagnosticServiceSwMapping Or DiagnosticServiceDataMapping refers to a DiagnosticRequestCurrentPowertrainData and a DiagnosticDataElement that is aggregated by a DiagnosticParameterIdentifier then the SwcServiceDependency referenced by the same DiagnosticServiceSwMapping resp. DiagnosticServiceDataMapping shall aggregate a ObdPidServiceNeeds in the role serviceNeeds. | ()

[constr\_1451] Service mapping for OBD mode 0x09 for DiagnosticInfoType | if a DiagnosticServiceSwMapping refers to DiagnosticRequestVehicle-Info and a DiagnosticDataElement that is aggregated by a DiagnosticInfo-Type then the SwcServiceDependency referenced by the same DiagnosticServiceSwMapping shall aggregate a ObdInfoServiceNeeds in the role service-Needs. ]()

[constr\_1452] Service mapping for OBD mode 0x08 for DiagnosticInfoType [ if a DiagnosticServiceSwMapping refers to a DiagnosticRequestControlOfOnBoardDevice then the SwcServiceDependency referenced by the same DiagnosticServiceSwMapping shall aggregate an ObdControlServiceNeeds in the role serviceNeeds. ]()

Class	SwcServiceDependency				
Package	M2::AUTOSARTe Mapping	mplates	::SWCo	mponentTemplate::SwcInternalBehavior::Service	
Note	allows to associat	e ports,	port gro	ncy in the context of an SwcInternalBehavior. It ups and (in special cases) data defined for an iven ServiceNeeds element.	
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable, ServiceDependency				
Attribute	Туре	Mul.	Kind	Note	
assignedD ata	RoleBasedData Assignment	*	aggr	Defines the role of an associated data object of the same component.  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime	
assignedP ort	RoleBasedPort Assignment	*	aggr	Defines the role of an associated port of the same component.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=assignedPort, variation Point.shortLabel vh.latestBindingTime=preCompileTime	



represente dPortGrou p	PortGroup	01	ref	This reference specifies an association between the ServiceNeeeds and a PortGroup, for example to request a communication mode which applies for communication via these ports. The referred PortGroup shall be local to this atomic SWC, but via the links between the PortGroups, a tool can evaluate this information such that all the ports linked via this port group on the same ECU can be found.
serviceNee ds	ServiceNeeds	1	aggr	The associated ServiceNeeds.

Table 5.111: SwcServiceDependency

Class	ObdInfoServiceN	ObdInfoServiceNeeds				
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::ServiceNeeds		
Note	Specifies the abstract needs of a component or module on the configuration of OBD Services in relation to a given InfoType (OBD Service 09) which is supported by this component or module.					
Base	ARObject, Diagno Referrable, Service		•	ement, Identifiable, MultilanguageReferrable,		
Attribute	Туре	Mul.	Kind	Note		
dataLength	PositiveInteger	01	attr	This attribute is applicable only if the ServiceNeeds is aggregated within BswModuleDependency.  This attribute represents the length of data (in bytes) provided for this InfoType.		
infoType	PositiveInteger	01	attr	The InfoType according to ISO 15031-5		

Table 5.112: ObdInfoServiceNeeds

Class	ObdPidServiceN	ObdPidServiceNeeds					
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds					
Note	Specifies the abstract needs of a component or module on the configuration of OBD Services in relation to a particular PID (parameter identifier) which is supported by this component or module.  In case of using a client/server communicated value, the related value shall be communicated via the port referenced by assignedPort. The details of this communication (e.g. appropriate naming conventions) are specified in the related						
_	software specifications (SWS).						
Base	ARObject, DiagnosticCapabilityElement, Identifiable, MultilanguageReferrable, Referrable, ServiceNeeds						
Attribute	Туре	Mul.	Kind	Note			



dataLength	PositiveInteger	01	attr	This attribute is applicable only if the ServiceNeeds is aggregated within BswModuleDependency.
				This attribute represents the length of data (in bytes) provided for this particular PID signal.
parameterl d	PositiveInteger	01	attr	Standardized parameter identifier (PID) according to the OBD standard specified in attribute "standard".
standard	String	01	attr	Annotates the standard according to which the PID is given, e.g. "ISO15031-5" or "SAE J1979 Rev May 2007".

Table 5.113: ObdPidServiceNeeds

Class	ObdControlServiceNeeds				
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::ServiceNeeds	
Note	Specifies the abstract needs of a component or module on the configuration of OBD Service 08 (request control of on-board system) in relation to a particular test-Identifier (TID) supported by this component or module.				
Base		ARObject, DiagnosticCapabilityElement, Identifiable, MultilanguageReferrable, Referrable, ServiceNeeds			
Attribute	Туре	Type Mul. Kind Note			
testId	PositiveInteger	01	attr	Test Identifier (TID) according to ISO 15031-5.	

Table 5.114: ObdControlServiceNeeds

## 5.8.1 Diagnostic Service Data Mapping

Please note that the Dcm is in general entitled to both read and write a dataElement. This applies even if the corresponding PortPrototype is a PPortPrototype. This means that the diagnostic service data mapping is limited to SenderReceiverInterface.



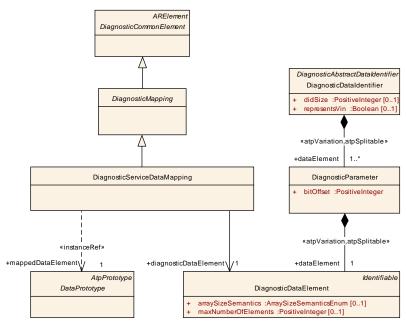


Figure 5.36: Dcm service data mapping

[TPS\_DEXT\_01041] Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement [ By means of the attribute DiagnosticServiceDataMapping.diagnosticDataElement it is possible to specify that the Dcm has access to a dataElement in a PortPrototype typed by a SenderReceiver-Interface.

This type of data access is suitable for the diagnostic services ReadDataByIdentifier (0x22) and WriteDataByIdentifier (0x2E). |(RS\_DEXT\_00052)

Class	DiagnosticServiceDataMapping			
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::ServiceMapping
Note	This represents the ability to define a mapping of a diagnostic service to a software-component. This kind of service mapping is applicable for the usage of SenderReceiverInterfaces.  Tags: atp.recommendedPackage=DiagnosticServiceMappings			
Base	ARElement, AROI	bject, Co	ollectable	eElement, DiagnosticCommonElement, Diagnostic geReferrable, PackageableElement, Referrable
Attribute	Туре	Mul.	Kind	Note
diagnostic DataEleme nt	DiagnosticData Element	1	ref	This represents the applicable payload that corresponds to the referenced DataPrototype in the role mappedDataElement.
mappedDa taElement	DataPrototype	1	iref	This represents the dataElement in the application software that is accessed for diagnostic purpose.

Table 5.115: DiagnosticServiceDataMapping

[constr\_1343] Simultaneous existence of the attributes DiagnosticSer-viceDataMapping.diagnosticDataElement and DiagnosticDataByIdenti-fier.dataIdentifier [ A DiagnosticServiceDataMapping.diagnostic-



DataElement shall also be aggregated by a DiagnosticDataByIdentifier in the role dataIdentifier.dataElement.dataElement. | ()

Please note that [constr\_1343] shall only apply for the step in the methodology where the DiagnosticExtract is considered complete to the point that the configuration of the Dcm and Dem can be derived. Any intermediate step, e.g. hand-over from OEM to tier-1 supplier does not actually enforce [constr\_1343].

In other words, [constr\_1343] makes sure that there is a connection between the DiagnosticServiceDataMapping and the corresponding DiagnosticRead-DataByIdentifier Or DiagnosticWriteDataByIdentifier.

Only by this means the diagnostic service becomes fully usable.

[constr\_1344] Condition for the identification of data types of attributes DiagnosticServiceDataMapping.mappedDataElement and DiagnosticServiceDataMapping.diagnosticDataElement | Both DiagnosticServiceDataMapping.mappedDataElement and DiagnosticServiceDataMapping.diagnosticDataElement shall be typed by either of the following options:

- ApplicationPrimitiveDataType where the value of attribute category is set to VALUE.
- ImplementationDataType where the value of attribute category is set to VALUE or to TYPE\_REFERENCE that eventually resolves to an ImplementationDataType where attribute category is set to VALUE.

10

Class	ApplicationPrimitiveDataType			
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Datatype::Datatypes
Note	A primitive data type defines a set of allowed values.			
	Tags: atp.recommendedPackage=ApplicationDataTypes			
Base	ARElement, ARObject, ApplicationDataType, AtpBlueprint, AtpBlueprintable, Atp Classifier, AtpType, AutosarDataType, CollectableElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note
_	_	_	_	_

Table 5.116: ApplicationPrimitiveDataType



Class	Implementation	ataTyp	е				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::CommonStructure::ImplementationDataTypes					
Note	correspond to a ty	pedef in	C-code	the implementation level. This will typically e.  =ImplementationDataTypes			
Base		Collect	ableEler	int, AtpBlueprintable, AtpClassifier, AtpType, ment, Identifiable, MultilanguageReferrable,			
Attribute	Type	Mul.	Kind	Note			
dynamicAr raySizePro file	String	01	attr	Specifies the profile which the array will follow in case this data type is a variable size array.			
subElemen t (ordered)	Implementation DataTypeEleme nt	*	aggr	Specifies an element of an array, struct, or union data type.  The aggregation of ImplementionDataTypeElement is subject to variability with the purpose to support the conditional existence of elements inside a ImplementationDataType representing a structure.  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime			
symbolPro ps	SymbolProps	01	aggr	This represents the SymbolProps for the ImplementationDataType.  Stereotypes: atpSplitable Tags: atp.Splitkey=shortName			
typeEmitte r	NameToken	01	attr	This attribute is used to control which part of the AUTOSAR toolchain is supposed to trigger data type definitions.			

Table 5.117: ImplementationDataType

In other words, [constr\_1344] requires that both <code>DiagnosticServiceDataMapping.mappedDataElement³</code> and <code>DiagnosticServiceDataMapping.diagnosticDataElement</code> shall be typed by a primitive data type.

Please refer to [8] for a detailed explanation of the meaning of the value of a data type category.

[constr\_1345] DiagnosticDataElement shall not (finally) be aggregated by a DiagnosticRoutine [ A DiagnosticDataElement that is referenced by a DiagnosticServiceDataMapping shall not (finally) be aggregated by a DiagnosticRoutine. ]()

[TPS\_DEXT\_01042] Dem uses DiagnosticServiceDataMapping | There is a use case for the Dem to utilize a DiagnosticServiceDataMapping such that ele-

<sup>&</sup>lt;sup>3</sup>DiagnosticServiceDataMapping.mappedDataElement can be an element of a (potentially large) composite data type. The utility of this is that this way the footprint of the data access to the payload of request and response messages can be kept as low as possible.



ments of a DiagnosticExtendedDataRecord are fetched from dataElements in an ApplicationSwComponentType.

Therefore, [constr\_1345] does intentionally not exclude the aggregation of DiagnosticDataElement by DiagnosticExtendedDataRecord in the context of DiagnosticServiceDataMapping. |(RS\_DEXT\_00052)

Class	ApplicationSwComponentType						
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components						
Note	The ApplicationSwComponentType is used to represent the application software.						
	Tags: atp.recommendedPackage=SwComponentTypes						
Base	ARElement, ARObject, AtomicSwComponentType, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, SwComponentType						
Attribute	Туре	Type Mul. Kind Note					
_	_	_	_	-			

Table 5.118: ApplicationSwComponentType

## 5.8.2 Diagnostic Service Software Mapping

The diagnostic service software mapping is limited to ClientServerInterface or a direct function call (in the case of basic software or complex driver).

Class	ClientServerInterface						
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface						
Note	A client/server interface declares a number of operations that can be invoked on a server by a client.  Tags: atp.recommendedPackage=PortInterfaces						
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Port Interface, Referrable						
Attribute	Type	Mul.	Kind	Note			
operation	ClientServerOp eration	1*	aggr	ClientServerOperation(s) of this ClientServerInterface.  Stereotypes: atpVariation Tags: vh.latestBindingTime=blueprintDerivation Time			
possibleErr or	ApplicationError	*	aggr	Application errors that are defined as part of this interface.			

**Table 5.119: ClientServerInterface** 

[TPS\_DEXT\_01043] Purpose of DiagnosticServiceSwMapping | The metaclass DiagnosticServiceSwMapping has been introduced to support the creation of a relationship between the definition of a given diagnostic service to the SwcSer-



viceDependency (if the service applies to the application software) or BswServiceDependency (if the service applies to the basic software). |(RS\_DEXT\_00052)

It is required to use the applicable form of reference to the target SwcServiceDependency depending on the context of the enclosing AtomicSwComponentType.

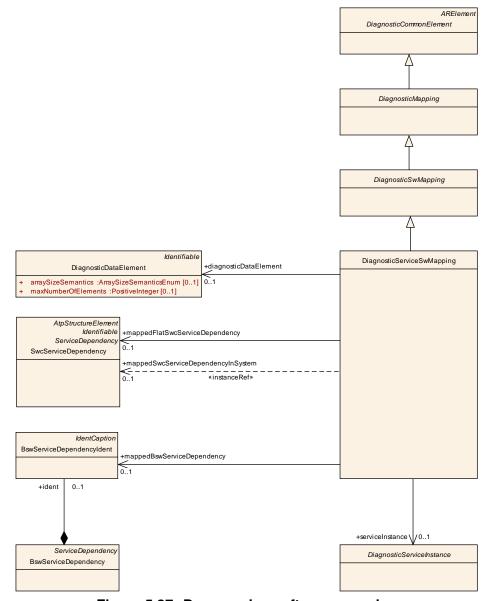


Figure 5.37: Dcm service software mapping



Class	DiagnosticSwMapping (abstract)				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::ServiceMapping	
Note	This represents the ability to define a mapping between a diagnostic information (at this point there is no way to become more specific about the semantics) to a software-component.				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Type Mul. Kind Note				
_	_	_	_	-	

Table 5.120: DiagnosticSwMapping

Class	DiagnosticServiceSwMapping							
Package	M2::AUTOSARTemplates::DiagnosticExtract::ServiceMapping							
Note	This represents the ability to define a mapping of a diagnostic service to a software-component or a basic-software module. If the former is used then this kind of service mapping is applicable for the usage of ClientServerInterfaces.  Tags: atp.recommendedPackage=DiagnosticServiceMappings							
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, DiagnosticSwMapping, Identifiable, MultilanguageReferrable, Packageable Element, Referrable							
Attribute	Туре	Mul.	Kind	Note				
diagnostic DataEleme nt	DiagnosticData Element	01	ref	This represents a DiagnosticDataElement required to execute the respective diagnostic service in the context of the diagnostic service mapping,				
mappedBs wServiceD ependency	BswServiceDep endencyldent	01	ref	This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.				
mappedFla tSwcServic eDepende ncy	SwcServiceDep endency	01	ref	This represents the ability to refer to an AtomicSwComponentType that is available without the definition of how it will be emebdded into the component hiearchy.				
mappedSw cServiceD ependency InSystem	SwcServiceDep endency	01	iref	This represents the ability to point into the component hiearchy (under possible consideration of the rootSoftwareComposition)				
serviceInst ance	DiagnosticServi ceInstance	01	ref	This represents the service instance that needs to be considered in this diagnostics service mapping,				

Table 5.121: DiagnosticServiceSwMapping

[TPS\_DEXT\_01044] BswServiceDependency needs to act as the target of a reference [ As indicated by Figure 5.37, the intention of DiagnosticServiceSwMapping.mappedBswServiceDependency is to refer to a BswServiceDependency in the same way as e.g. DiagnosticServiceSwMapping.mappedFlatSwcServiceDependency does.



However, BswServiceDependency is not derived from meta-class Referrable and can therefore never become the target of a reference like DiagnosticServiceSwMapping.mappedBswServiceDependency.

The remedy for this issue is to define meta-class <code>BswServiceDependencyIdent</code> that inherits from <code>IdentCaption</code> that in turn inherits from <code>Referrable</code>.

Then, by aggregating BswServiceDependencyIdent at BswServiceDependency in the role ident BswServiceDependency can factually become the target of the reference and thus the original idea of DiagnosticServiceSwMapping.mappedBswServiceDependency becomes feasible. | (RS DEXT 00052)

Please note that the introduction [TPS\_DEXT\_01044], although being dangerously close to a hack, is necessary to keep the AUTOSAR XML Schema fully backwards-compatible.

In other words, if <code>BswServiceDependency</code> were updated to inherit from <code>Referrable</code> the consequence would be that all existing AUTOSAR models that contain instances <code>BswServiceDependency</code> would suddenly become invalid because <code>Referrable.shortName</code> is a mandatory attribute in the AUTOSAR XML Schema.

Class	BswServiceDependencyIdent					
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::ServiceMapping				
Note	This meta-class is created to add the ability to become the target of a reference to the non-Referrable BswServiceDependency.					
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, IdentCaption, Identifiable, MultilanguageReferrable, Referrable					
Attribute	Туре	Mul.	Kind	Note		
_	_	_	_	-		

Table 5.122: BswServiceDependencyIdent

[constr\_1346] Allowed values of DiagnosticServiceSwMapping.serviceInstance [ The applicability of the DiagnosticServiceSwMapping is limited to predefined set of diagnostic services.

By regulation of the AUTOSAR standard, <code>DiagnosticServiceSwMapping.serviceInstance</code> shall only point to the following sub-classes of <code>DiagnosticServiceInstance</code>:

- DiagnosticRoutine
- DiagnosticSecurityAccess
- DiagnosticReadDataByIdentifier
- DiagnosticWriteDataByIdentifier
- DiagnosticIOControl

10



[constr\_1347] Existence of attributes of DiagnosticServiceSwMapping [ For any given DiagnosticServiceSwMapping, one and only one of the following references shall exist:

- DiagnosticServiceSwMapping.mappedFlatSwcServiceDependency
- DiagnosticServiceSwMapping.mappedSwcServiceDependencyInSystem
- DiagnosticServiceSwMapping.mappedBswServiceDependency

10

[constr\_1347], among further clarifications, reflects the fact that at most a single Swc-ServiceDependency can be referenced by a DiagnosticServiceSwMapping and this SwcServiceDependency cannot be identified by both mappedSwcServiceDependencyInSystem and mappedFlatSwcServiceDependency.

## 6 Diagnostic Event Handling

#### 6.1 Introduction

This subchapter describes the meta-model elements that define the handling of and the functionality around diagnostic events.

In a standard AUTOSAR Basic Software architecture, the definitions based on the model elements described in this subchapter are realized by the Diagnostic Event Manager (Dem) module.

The following figure gives an overview on the model elements related to the diagnostic event functionality.



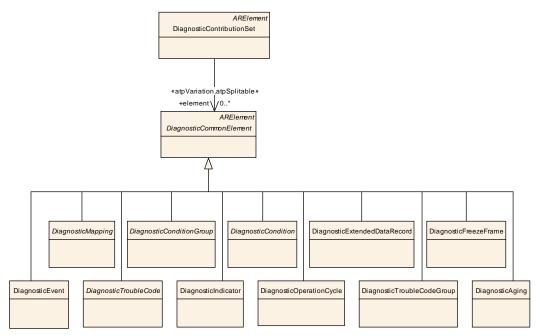


Figure 6.1: Common model elements relevant for the Dem

For the definition of the diagnostic event functionality, a number of model elements are derived from <code>DiagnosticCommonElement</code>. These elements are described in the following sub-chapters.

## 6.2 DiagnosticEvent

**[TPS\_DEXT\_01083] Semantics of a DiagnosticEvent** A DiagnosticEvent - the atomic unit handled by the Dem module - has to be defined together with its properties which affect the event handling behavior and possible interfaces to software-components. | (RS\_DEXT\_00023)

Figure 6.2 depicts the definition of DiagnosticEvent together with its properties.



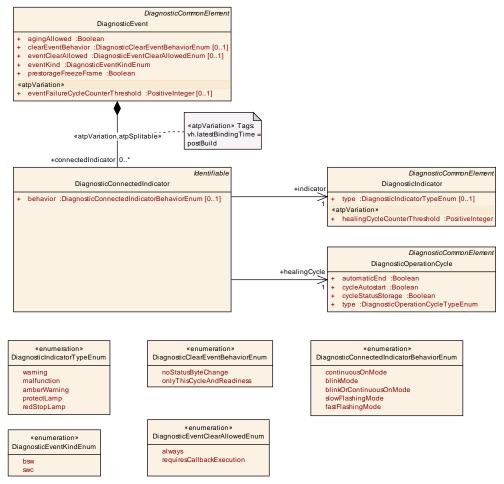


Figure 6.2: Modeling of DiagnosticEvent

The DiagnosticExtract allows the definition of an arbitrary number of DiagnosticEvents.

Although the exchange of a <code>DiagnosticExtract</code> between companies usually involves <code>DiagnosticEvents</code> related to <code>SWC</code> functionality, the event kind <code>BSW</code> is also supported in order to enable definition of handling of BSW events (e.g. definition of associated <code>DiagnosticTroubleCode</code>).

**[TPS\_DEXT\_03011] Clearing request for a DiagnosticEvent** [Furthermore, a clearing request for a DiagnosticEvent might require invocation of a callback to a SWC in order to allow or to prohibit the clearing operation.

The expectation on this callback interface can be expressed using the attribute event-ClearAllowed:

- always indicates that a clearing request for the DiagnosticEvent shall unconditionally be executed.
- never denotes that a clearing for the DiagnosticEvent is intentionally not possible.



• In case of requiresCallbackExecution, the execution of a callback shall decide whether the clearing is permitted.

In other words, the implementation of this decision is up to the developer of the corresponding AtomicSwComponentType.

The latter shall define a SwcServiceDependency with appropriate DiagnosticEventNeeds and a RoleBasedPortAssignment where the value of the attribute role is set to CallbackClearEventAllowed.

### (RS DEXT 00023)

Class	DiagnosticEvent							
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent							
Note	This element is used to configure DiagnosticEvents.  Tags: atp.recommendedPackage=DiagnosticEvents							
Base		ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable						
Attribute	Туре	Mul.	Kind	Note				
agingAllow ed	Boolean	1	attr	This represents the decision whether aging is allowed for this DiagnosticEvent.				
clearEvent Behavior	DiagnosticClear EventBehaviorE num	01	attr	This attribute defines the resulting UDS status byte for the related event, which shall not be cleared according to the ClearEventAllowed callback.				
connectedl ndicator	DiagnosticConn ectedIndicator	*	aggr	Event specific description of Indicators.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=postBuild				
eventClear Allowed	DiagnosticEvent ClearAllowedEn um	01	attr	This attribute defines whether the Dem has access to a "ClearEventAllowed" callback.				
eventFailur eCycleCou nterThresh old	PositiveInteger	01	attr	This attribute defines the number of failure cycles for the event based fault confirmation.  Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild				
eventKind	DiagnosticEvent KindEnum	1	attr	This attribute is used to distinguish between SWC and BSW events.				
prestorage FreezeFra me	Boolean	1	attr	This attribute describes whether the Prestorage of FreezeFrames is supported by the assigned event or not.  True: Prestorage of FreezeFrames is supported False: Prestorage of FreezeFrames is not supported				

Table 6.1: DiagnosticEvent



Class	RoleBasedPortAssignment						
Package	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::Service Mapping						
Note	This class specifies an assignment of a role to a particular service port (RPortPrototype or PPortPrototype) of an AtomicSwComponentType. With this assignment, the role of the service port can be mapped to a specific ServiceNeeds element, so that a tool is able to create the correct connector.						
Base	ARObject						
Attribute	Туре	Mul.	Kind	Note			
portPrototy pe	PortPrototype	1	ref	Service PortPrototype used in the assigned role. This PortPrototype shall either belong to the same AtomicSwComponentType as the SwcInternalBehavior which owns the ServiceDependency or to the same NvBlockSwComponentType as the NvBlockDescriptor.			
role	Identifier	1	attr	This is the role of the assigned Port in the given context.  The value shall be a shortName of the Blueprint of a PortInterface as standardized in the Software Specification of the related AUTOSAR Service.			

Table 6.2: RoleBasedPortAssignment

[TPS\_DEXT\_01085] DiagnosticEvent can be connected to one or multiple indicators [A DiagnosticEvent can be connected to one or multiple indicators (modeled by means of aggregating DiagnosticIndicator in the role connectedIndicator) of a certain type and with certain behavior. | (RS\_DEXT\_00023)

[TPS\_DEXT\_01067] Textually formulated content attached to DiagnosticEvent | The definition of a DiagnosticEvent also consists of textually formulated content that is formalized in structure but cannot be formalized in content.

The purpose of this content is to define e.g. a mature condition that relates to the specific DiagnosticEvent. | (RS\_DEXT\_00023, RS\_DEXT\_00045)

[TPS\_DEXT\_01068] Textual description with respect to the DiagnosticEvent [ Textual description that has the character of requirements with respect to the DiagnosticEvent shall be provided by means of the meta-class StructuredReq, i.e. by means of introduction.structuredReq. | (RS\_DEXT\_00023, RS\_DEXT\_00045)

Class	StructuredReq						
Package	M2::MSR::Documentation::BlockElements::RequirementsTracing						
Note	This represents a structured requirement. This is intended for a case where specific requirements for features are collected.  Note that this can be rendered as a labeled list.						
Base	ARObject, DocumentViewSelectable, Identifiable, MultilanguageReferrable, Paginateable, Referrable, Traceable						
Attribute	Туре	Mul.	Kind	Note			





appliesTo	standardNameE num	*	attr	This attribute represents the platform the requirement is assigned to.
				Tags: xml.namePlural=APPLIES-TO-DEPENDEN CIES; xml.sequenceOffset=25
conflicts	Documentation Block	01	aggr	This represents an informal specification of conflicts.
				Tags: xml.sequenceOffset=40
date	DateTime	1	attr	This represents the date when the requirement was initiated.
				Tags: xml.sequenceOffset=5
dependenc ies	Documentation Block	01	aggr	This represents an informal specifiaction of dependencies. Note that upstream tracing should be formalized in the property trace provided by the superclass Traceable.
	Decompositeties	0.1		Tags: xml.sequenceOffset=30
description	Documentation Block	01	aggr	This represents the general description of the requirement.
:	Obvine	1	- 44	Tags: xml.sequenceOffset=10
importance	String	I	attr	This allows to represent the importance of the requirement.
issuedBy	String	1	attr	Tags: xml.sequenceOffset=8  This represents the person, organization or
issueaby	Sumg	ı	atti	authority which issued the requirement.  Tags: xml.sequenceOffset=6
rationale	Documentation	01	aggr	This represents the rationale of the requirement.
Tationale	Block	01	aggr	Tags: xml.sequenceOffset=20
remark	Documentation	01	aggr	This represents an informal remark. Note that this
roman	Block	<b></b>	ugg.	is not modeled as annotation, since these remark is still essential part of the requirement.
				Tags: xml.sequenceOffset=60
supporting	Documentation	01	aggr	This represents an informal specifiaction of the
Material	Block			supporting material.
				Tags: xml.sequenceOffset=50
testedItem	Traceable	*	ref	This assocation represents the ability to trace on the same specification level. This supports for example the of acceptance tests.
				Tags: xml.sequenceOffset=70



type	String	1	attr	This attribute allows to denote the type of requirement to denote for example is it an "enhancement", "new feature" etc.  Tags: xml.sequenceOffset=7
useCase	Documentation Block	01	aggr	This describes the relevant use cases. Note that formal references to use cases should be done in the trace relation.  Tags: xml.sequenceOffset=35

Table 6.3: StructuredReq

For more details regarding the modeling of the semi-formal text please refer to Figure 4.3.

[TPS\_DEXT\_01069] Standardized values of DiagnosticEvent.introduction.structuredReq [ The following possible values of DiagnosticEvent.introduction.structuredReq are standardized by AUTOSAR:

- **DIAG\_EVENT\_MON\_COND**: this value describes the monitoring condition of the corresponding <code>DiagnosticEvent</code>.
- **DIAG\_EVENT\_MON\_TYPE**: this value describes the monitoring type of the corresponding <code>DiagnosticEvent</code>.
- **DIAG\_EVENT\_MON\_RATE**: this value describes the monitoring rate for the corresponding <code>DiagnosticEvent</code>.
- **DIAG\_EVENT\_MAT\_COND**: this value describes a mature condition of the DiagnosticEvent.
- **DIAG\_EVENT\_DEMAT\_COND**: this value describes a de-mature condition of the DiagnosticEvent.
- **DIAG\_EVENT\_AGING**: this value describes the behavior of the Diagnos-ticEvent regarding aging.
- **DIAG\_EVENT\_LIMP\_IN\_ACT**: this value describes the associated limp-in action for the <code>DiagnosticEvent</code>.
- **DIAG\_EVENT\_MAT\_TIME**: this value describes the mature time for the corresponding <code>DiagnosticEvent</code>, i.e. how long or how often the fault must exist.
- **DIAG\_EVENT\_DEMAT\_TIME**: this value describes the de-mature time for the corresponding <code>DiagnosticEvent</code>, i.e. how long or how often must the OK conditions be fulfilled.

(RS DEXT 00001, RS DEXT 00023, RS DEXT 00045)



The following ARXML fragment exemplifies the usage of StructuredReq along with the standardized values of the attribute category to attach semi-formal textual descriptions to a DiagnosticEvent.

Listing 6.1: Example for the definition of a semi-formal textual elements in the context of a DiagnosticEvent

```
<DIAGNOSTIC-EVENT>
   <SHORT-NAME>ExampleEvent_0001
       <INTRODUCTION>
           <STRUCTURED-REQ>
              <SHORT-NAME>MatureCondition
              <CATEGORY>DIAG_EVENT_MAT_COND</CATEGORY>
              <DESCRIPTION>
                  <P>
                      <L-1 L="EN">This DTC is set if System Voltage is
                         below 9 Volts</L-1>
                  </P>
               </DESCRIPTION>
           </STRUCTURED-REQ>
           <STRUCTURED-REQ>
               <SHORT-NAME>DematureCondition/SHORT-NAME>
               <CATEGORY>DEMATURE COND</CATEGORY>
               <DESCRIPTION>
                  <P>
                      <L-1 L="EN">This DTC is set if System Voltage is
                         above 10 Volts<XFILE><SHORT-NAME>
                         Requirement_Specification/SHORT-NAME><URL>http:
                         //autosar.org</URL></XFILE>
                      </L-1>
                  </P>
               </DESCRIPTION>
           </STRUCTURED-REQ>
       </INTRODUCTION>
   <CLEAR-EVENT-BEHAVIOR>ONLY-THIS-CYCLE-AND-READINESS/CLEAR-EVENT-
      BEHAVIOR>
   <EVENT-CLEAR-ALLOWED>ALWAYS
   <EVENT-FAILURE-CYCLE-COUNTER-THRESHOLD>100</EVENT-FAILURE-CYCLE-COUNTER
      -THRESHOLD>
   <EVENT-KIND>SWC</EVENT-KIND>
   <PRESTORAGE-FREEZE-FRAME>false
</DIAGNOSTIC-EVENT>
```

Class	DiagnosticConnectedIndicator					
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent				
Note	Description of indi	Description of indicators that are defined per DiagnosticEvent.				
Base	ARObject, Identifi	able, Mu	ıltilangu	ageReferrable, Referrable		
Attribute	Туре	Type Mul. Kind Note				
behavior	DiagnosticConn ectedIndicatorB ehaviorEnum	01	attr	Behavior of the linked indicator.		



healingCyc le	DiagnosticOper ationCycle	1	ref	The deactivation of indicators per event is defined as healing of a diagnostic event. The operation cycle in which the warning indicator will be switched off is defined here.
indicator	DiagnosticIndic ator	1	ref	Reference to the used indicator.

**Table 6.4: DiagnosticConnectedIndicator** 

Enumeration	DiagnosticEventClearAllowedEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent
Note	Denotes whether clearing of events is allowed.
Literal	Description
always	The clearing is allowed unconditionally.
	Tags: atp.EnumerationValue=0
requires Callback Execution	In case the clearing of a Diagnostic Event has to be allowed or prohibited through the SWC interface CallbackClearEventAllowed, the SWC has to indicate this by defining appropriate ServiceNeeds (i.e. DiagnosticEventNeeds).
	Tags: atp.EnumerationValue=2

Table 6.5: DiagnosticEventClearAllowedEnum

Enumeration	DiagnosticClearEventBehaviorEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent
Note	Possible behavior for clearing events.
Literal	Description
noStatusByte Change	The event status byte keeps unchanged.
	Tags: atp.EnumerationValue=0
onlyThis	The OperationCycle and readiness bits of the event status byte are reset.
CycleAnd	
Readiness	Tags: atp.EnumerationValue=1

Table 6.6: DiagnosticClearEventBehaviorEnum

Enumeration	DiagnosticEventKindEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent
Note	Applicability of the diagnostic event.
Literal	Description
bsw	The event is assigned to a BSW module.
	Tags: atp.EnumerationValue=0
swc	The event is assigned to a SWC.
	Tags: atp.EnumerationValue=1

Table 6.7: DiagnosticEventKindEnum



Enumeration	DiagnosticConnectedIndicatorBehaviorEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent
Note	Behavior of the indicator.
Literal	Description
blinkMode	The indicator blinks when the event has status FAILED.
	Tags: atp.EnumerationValue=0
blinkOrCon-	The indicator is active and blinks when the event has status FAILED.
tinuousOn	
Mode	Tags: atp.EnumerationValue=1
continuous	The indicator is active when the event has status FAILED.
OnMode	Tags: atp.EnumerationValue=2
fastFlashing	Flash Indicator Lamp should be set to "Fast Flash".
Mode	Trasti indicator Lamp should be set to Trasti lasti.
	Tags: atp.EnumerationValue=3
slowFlashing	Flash Indicator Lamp should be set to "Slow Flash".
Mode	•
	Tags: atp.EnumerationValue=4

Table 6.8: DiagnosticConnectedIndicatorBehaviorEnum

# 6.3 DiagnosticTroubleCode

DiagnosticTroubleCodes (i.e. the ECU external view on diagnostic events) are defined together with their properties and mapped to DiagnosticEvents using DiagnosticEventToTroubleCodeUdsMapping.



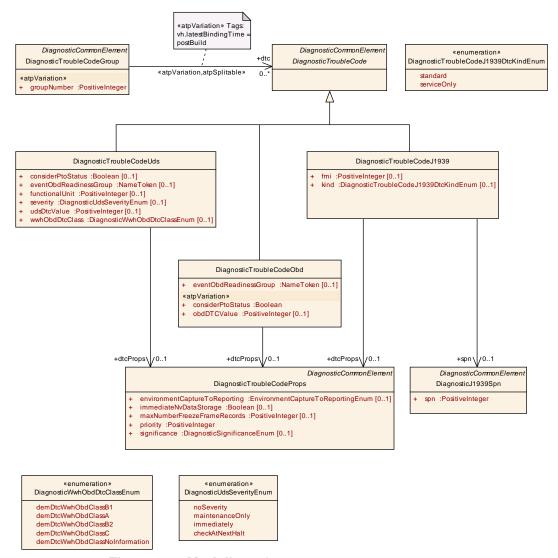


Figure 6.3: Modeling of DiagnosticTroubleCode

**[TPS\_DEXT\_03012] Three kinds of DTCs** [ There are three kinds of DTCs represented as specializations of DiagnosticTroubleCode:

- non OBD relevant DTCs (DiagnosticTroubleCodeUds)
- OBD relevant DTCs (DiagnosticTroubleCodeObd)
- J1939 [20] relevant DTCs (DiagnosticTroubleCodeJ1939)

Properties individual to such a DTC specialization are modeled as attributes of DiagnosticTroubleCodeUds, DiagnosticTroubleCodeObd and DiagnosticTroubleCodeJ1939, respectively. |(RS DEXT 00024)



Class	DiagnosticTroubleCodeUds					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode					
Note	This element is used to describe non OBD-relevant DTCs.					
	Tags: atp.recommendedPackage=DiagnosticTroubleCodes					
Base				eElement, DiagnosticCommonElement, Diagnostic guageReferrable, PackageableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note		
considerPt oStatus	Boolean	01	attr	This attribute describes the affection of the event by the Dem PTO handling.		
				True: the event is affected by the Dem PTO handling. False: the event is not affected by the Dem PTO handling.		
dtcProps	DiagnosticTroub leCodeProps	01	ref	Defined properties associated with the DemDTC.		
eventObd Readiness Group	NameToken	01	attr	This attribute specifies the Event OBD Readiness group for PID \$01 and PID \$41 computation. This attribute is only applicable for emission-related ECUs.		
functionalU nit	PositiveInteger	01	attr	This attribute specifies a 1-byte value which identifies the corresponding basic vehicle / system function which reports the DTC. This parameter is necessary for the report of severity information.		
severity	DiagnosticUdsS everityEnum	01	attr	DTC severity according to ISO 14229-1.		
udsDtcVal ue	PositiveInteger	01	attr	Unique Diagnostic Trouble Code value for UDS.		
wwhObdDt cClass	DiagnosticWwh ObdDtcClassEn um	01	attr	This attribute is used to identify (if applicable) the corresponding severity class of an WWH-OBD DTC.		

Table 6.9: DiagnosticTroubleCodeUds

Class	DiagnosticTroubleCodeObd				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode				
Note	This element is us	ed to de	efine OB	D-relevant DTCs.	
	Tags: atp.recomm	nendedF	Package:	=DiagnosticTroubleCodes	
Base				eElement, DiagnosticCommonElement, Diagnostic guageReferrable, PackageableElement, Referrable	
Attribute	Туре	Mul.	Kind	Note	
considerPt oStatus	Boolean	1	attr	This attribute describes the affection of the event by the Dem PTO handling.	
				True: the event is affected by the Dem PTO handling. False: the event is not affected by the Dem PTO handling.	
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime	



dtcProps	DiagnosticTroub leCodeProps	01	ref	Defined properties associated with the DemDTC.
eventObd Readiness Group	NameToken	01	attr	This attribute specifies the Event OBD Readiness group for PID \$01 and PID \$41 computation. This attribute is only applicable for emission-related ECUs.
obdDTCVa lue	PositiveInteger	01	attr	Unique Diagnostic Trouble Code value for OBD.  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime

Table 6.10: DiagnosticTroubleCodeObd

Class	DiagnosticTroub	DiagnosticTroubleCodeJ1939				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode				
Note	This meta-class represents the ability to model specific trouble-code related properties for J1939.					
				=DiagnosticTroubleCodes		
Base	1			eElement, DiagnosticCommonElement, Diagnostic nguageReferrable, PackageableElement, Referrable		
Attribute	Туре	Type Mul. Kind Note				
dtcProps	DiagnosticTroub leCodeProps	01	ref	Defined properties associated with the J1939 DTC.		
fmi	PositiveInteger	01	attr	This attribute represents the behavior of the Failure Mode Indicator.		
kind	DiagnosticTroub leCodeJ1939Dt cKindEnum	01	attr	This attribute further specifies the DTC in terms of its semantics.		
node	DiagnosticJ193 9Node	01	ref	This represents the related DiagnosticJ1939Node.		
spn	DiagnosticJ193 9Spn	01	ref	This represents the releated SPN.		

Table 6.11: DiagnosticTroubleCodeJ1939



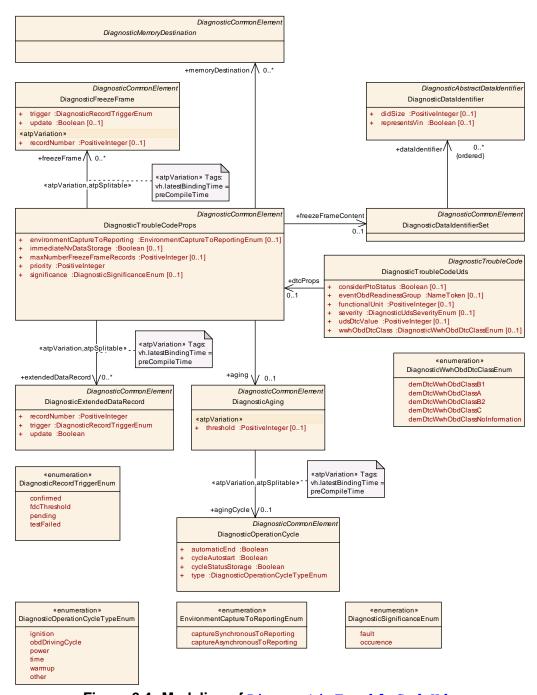


Figure 6.4: Modeling of DiagnosticTroubleCodeUds

[TPS\_DEXT\_03013] Common properties of a DTC | Properties that are often common for a group of DiagnosticTroubleCodeUds elements are modeled as attributes of DiagnosticTroubleCodeProps. | (RS\_DEXT\_00024)

[constr\_1349] Value of udsDtcValue shall be unique  $\lceil$  The value of udsDtcValue shall be unique to any other DTC and DTC group value.  $\rfloor$ ()



Class	DiagnosticTroubleCode (abstract)					
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode				
Note	A diagnostic trouble code defines a unique identifier that is shown to the diagnostic tester.					
Base	1	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note		
_	_	_	_	-		

Table 6.12: DiagnosticTroubleCode

[TPS\_DEXT\_03014] Semantics of DiagnosticTroubleCodeGroup [ The DiagnosticTroubleCodeGroup element is used to define groups of DTCs that belong together. Each DiagnosticTroubleCodeGroup has its own groupNumber value assigned. |(RS\_DEXT\_00024)

Class	DiagnosticTroub	leCode	Group		
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode				
Note	The diagnostic trouble code group defines the DTCs belonging together and thereby forming a group.				
	<u> </u>			=DiagnosticTroubleCodes	
Base	-			eElement, DiagnosticCommonElement, Identifiable, eableElement, Referrable	
Attribute	Туре	Mul.	Kind	Note	
dtc	DiagnosticTroub leCode	*	ref	This represents the collection of DiagnosticTroubleCodes defined by this DiagnosticTroubleCodeGroup.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=dtc, variationPoint.shortLabel vh.latestBindingTime=postBuild	
groupNum ber	PositiveInteger	1	attr	This represents the base number of the DTC group.  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime	

Table 6.13: DiagnosticTroubleCodeGroup

[constr\_1350] Value of DiagnosticTroubleCodeGroup.groupNumber shall be unique [ The value of DiagnosticTroubleCodeGroup.groupNumber shall be unique to any other DTC and DTC group value. |()

[constr\_1351] Value of <code>DiagnosticTroubleCodeGroup.groupNumber</code>  $\lceil$  To be compliant to ISO, the value of <code>DiagnosticTroubleCodeGroup.groupNumber</code> shall be set as defined in ISO 14229-1 [16].  $\rceil$ ()



[TPS\_DEXT\_03000] ISO 14229-1 reserves values of DiagnosticTroubleCode-Group.groupNumber [ Any values other than those mentioned in [constr\_1351] are reserved by ISO 14229-1 [16]. |(RS\_DEXT\_00024)

[constr\_1352] Existence of maxNumberFreezeFrameRecords vs. freezeFrame [ If the attribute DiagnosticTroubleCodeProps.maxNumberFreezeFrameRecords exists than the attribute DiagnosticTroubleCodeProps.freezeFrame shall not exist or vice versa. |()

[constr\_1353] Applicability of [1352] [constr\_1352] shall apply in the identical way (either one or the other attribute shall exist) for all <code>DiagnosticTroubleCodeProps</code> within the context of all <code>DiagnosticContributionSets</code> of <code>category DIAGNOSTIC\_ECU\_EXTRACT</code> that refer to the same <code>EcuInstance.</code> ]()

[constr\_1354] Existence of attribute DiagnosticTroubleCodeProps.freeze-FrameContent [ If one of the attributes DiagnosticTroubleCodeProps.maxNumberFreezeFrameRecords or DiagnosticTroubleCodeProps.freezeFrame exists then the attribute DiagnosticTroubleCodeProps.freezeFrameContent shall exist. | ()

[TPS\_DEXT\_01064] Textually formulated content attached to DiagnosticTroubleCode | The definition of a DiagnosticTroubleCode also consists of textually formulated content that is formalized in structure but cannot be formalized in content.

The purpose of this content is to define e.g. an error text or the possible cause that relates to the specific <code>DiagnosticTroubleCode</code>. <code>J(RS\_DEXT\_00024, RS\_DEXT\_00045)</code>

[TPS\_DEXT\_01065] Different approaches to provide semi-formal textual content attached to a DiagnosticTroubleCode | There are different approaches to provide semi-formal textual content attached to a DiagnosticTroubleCode:

- Textual description that has the character of descriptions of the Diagnostic-TroubleCode shall be provided by means of the meta-class TraceableText, i.e. by means of introduction.trace.
- Textual description that characterizes the DiagnosticTroubleCode with respect to the *ODX long name* shall be provided by means of the attribute long-Name.

](RS\_DEXT\_00024, RS\_DEXT\_00045)



Class	TraceableText	TraceableText			
Package	M2::MSR::Docum	entation	::BlockE	Elements::RequirementsTracing	
Note	This meta-class represents the ability to denote a traceable text item such as requirements etc.				
	The following app	roach a	opliles:		
	shortName	repres	ents the	tag for tracing	
	<ul> <li>IongName</li> </ul>	represe	nts the I	nead line	
	category represents the kind of the tagged text				
Base	ARObject, DocumentViewSelectable, Identifiable, MultilanguageReferrable, Paginateable, Referrable, Traceable				
Attribute	Туре	Mul.	Kind	Note	
text	Documentation Block	1	aggr	This represents the text to which the tag applies.	
				<b>Tags:</b> xml.roleElement=false; xml.roleWrapper Element=false; xml.sequenceOffset=30; xml.type Element=false; xml.typeWrapperElement=false	

Table 6.14: TraceableText

Class	MultilanguageReferrable (abstract)				
Package	M2::AUTOSARTe	mplates	::Generi	cStructure::GeneralTemplateClasses::Identifiable	
Note	Instances of this class can be referred to by their identifier (while adhering to namespace borders). They also may have a longName. But they are not considered to contribute substantially to the overall structure of an AUTOSAR description. In particular it does not contain other Referrables.				
Base	ARObject, Referra	ARObject, Referrable			
Attribute	Туре	Mul.	Kind	Note	
longName	MultilanguageL ongName	MultilanguageL 01 aggr This specifies the long name of the object. Long			

Table 6.15: MultilanguageReferrable

For more details regarding the modeling of the semi-formal text please refer to Figure 4.3.

The usage of TraceableText and StructuredReq alone would not qualify as a semi-formal textual attachment. It is necessary to standardize the value of the category in order to get some level of semi-formal textual description.

[TPS\_DEXT\_01066] Standardized values of DiagnosticTroubleCode.introduction.trace | The following possible values of DiagnosticTroubleCode.introduction.trace are standardized by AUTOSAR:

- **DIAG\_DTC\_ERROR\_TEXT**: this value shall be used to describe an error text.
- **DIAG\_DTC\_REP\_ACT**: this value describes the associated repair for the corresponding <code>DiagnosticTroubleCode</code>.



- **DIAG\_DTC\_CUS\_PER\_SYMP**: this value describes the possible customer perception symptom for the corresponding <code>DiagnosticTroubleCode</code>.
- **DIAG\_DTC\_POSS\_CAUSE**: This value describes the possible cause for the corresponding <code>DiagnosticTroubleCode</code>.

```
\((RS_DEXT_00001, RS_DEXT_00024, RS_DEXT_00045)\)
```

The following ARXML fragment exemplifies the usage of TraceableText along with the standardized values of the attribute category to attach semi-formal textual descriptions to a DiagnosticTroubleCodeUds.

# Listing 6.2: Example for the definition of a semi-formal textual elements in the context of a DiagnosticTroubleCode

```
<DIAGNOSTIC-TROUBLE-CODE-UDS>
   <SHORT-NAME>ExampleDTC_0001
   <LONG-NAME>
       <L-4 L="EN">My little ODX long name</L-4>
   </LONG-NAME>
   <DESC>
       <L-2 L="EN">This DTC is a System Error DTC</L-2>
   </DESC>
   <INTRODUCTION>
       <TRACE>
           <SHORT-NAME>MyErrorText
           <CATEGORY>DIAG DTC ERROR TEXT</CATEGORY>
           <P>
               <L-1 L="LA">Lorem ipsum dolor sit amet, consectetur
                  adipisicing elit</L-1>
           </P>
       </TRACE>
   </INTRODUCTION>
   <DTC-PROPS-REF DEST="DIAGNOSTIC-TROUBLE-CODE-PROPS">/AUTOSAR/
      UseCase_230/ExampleDTC_0001_Props
   <FUNCTIONAL-UNIT>1</FUNCTIONAL-UNIT>
   <SEVERITY>CHECK-AT-NEXT-HALT
   <UDS-DTC-VALUE>0x000001</UDS-DTC-VALUE>
</DIAGNOSTIC-TROUBLE-CODE-UDS>
```

[constr\_1376] Multiplicity of reference DiagnosticTroubleCodeProps.memoryDestination [For every given DiagnosticTroubleCodeProps, the reference in the role DiagnosticTroubleCodeProps.memoryDestination shall not exceed the upper multiplicity 2. [constr\_1377] applies. ]()

[constr\_1377] Existence of reference DiagnosticTroubleCodeProps.memoryDestination | The reference DiagnosticTroubleCodeProps.memoryDestination shall only have the upper multiplicity 2 if one (and only one) of the referenced DiagnosticTroubleCodeProps.memoryDestination is a DiagnosticMemoryDestinationMirror. |()



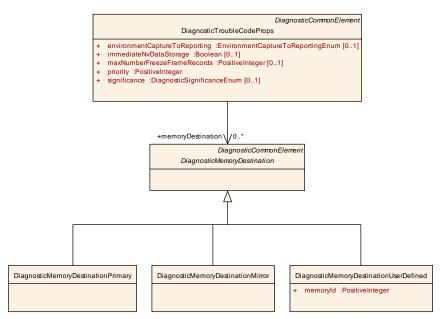


Figure 6.5: Modeling of DiagnosticMemoryDestination

[constr\_1378] Value of DiagnosticMemoryDestinationUserDefined.memoryId [ Within the scope of one DiagnosticContributionSet, no two (or more) DiagnosticMemoryDestinationUserDefineds shall exist that share the same value for attribute DiagnosticMemoryDestinationUserDefined.memoryId ]()

In other words, the value of the attribute <code>DiagnosticMemoryDestinationUserDefined.memoryId</code> shall be unique within any given <code>DiagnosticExtract</code>.

On top of that, it is necessary to make sure that only **one** *primary memory* and only **one** *mirror memory* is defined.

[constr\_1379] Existence of DiagnosticMemoryDestinationPrimary [ Within the scope of one DiagnosticContributionSet only one DiagnosticMemoryDestinationPrimary shall exist. |()

[constr\_1380] Existence of <code>DiagnosticMemoryDestinationMirror</code> [ Within the scope of one <code>DiagnosticContributionSet</code> only one <code>DiagnosticMemoryDestinationMirror</code> shall exist.  $\rfloor$  ()

[TPS\_DEXT\_01094] Semantics of meta-class DiagnosticTroubleCodeUd-sToTroubleCodeObdMapping [ The meta-class DiagnosticTroubleCodeUd-sToTroubleCodeObdMapping can be used to associate a DiagnosticTrouble-CodeUds with a DiagnosticTroubleCodeObd. |()



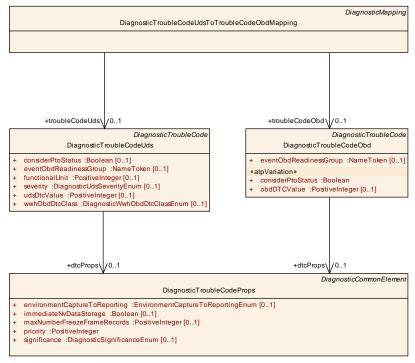


Figure 6.6: Mapping of UDS DTC to OBD DTC

Class	DiagnosticTroubleCodeUds					
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode				
Note	This element is us	ed to de	escribe r	non OBD-relevant DTCs.		
	Tags: atp.recomm	endedF	ackage:	=DiagnosticTroubleCodes		
Base	-			eElement, DiagnosticCommonElement, Diagnostic nguageReferrable, PackageableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note		
considerPt oStatus	Boolean	01	attr	This attribute describes the affection of the event by the Dem PTO handling.		
				True: the event is affected by the Dem PTO handling. False: the event is not affected by the Dem PTO handling.		
dtcProps	DiagnosticTroub leCodeProps	01	ref	Defined properties associated with the DemDTC.		
eventObd Readiness Group	NameToken	01	attr	This attribute specifies the Event OBD Readiness group for PID \$01 and PID \$41 computation. This attribute is only applicable for emission-related ECUs.		
functionalU nit	PositiveInteger	01	attr	This attribute specifies a 1-byte value which identifies the corresponding basic vehicle / system function which reports the DTC. This parameter is necessary for the report of severity information.		
severity	DiagnosticUdsS everityEnum	01	attr	DTC severity according to ISO 14229-1.		
udsDtcVal ue	PositiveInteger	01	attr	Unique Diagnostic Trouble Code value for UDS.		



wwhObdDt cClass	DiagnosticWwh ObdDtcClassEn	01	attr	This attribute is used to identify (if applicable) the corresponding severity class of an WWH-OBD
	um			DTC.

Table 6.16: DiagnosticTroubleCodeUds

Class	DiagnosticTroub	DiagnosticTroubleCodeObd				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode					
Note	This element is us  Tags: atp.recomm			D-relevant DTCs.  =DiagnosticTroubleCodes		
Base				eElement, DiagnosticCommonElement, Diagnostic iguageReferrable, PackageableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note		
considerPt oStatus	Boolean	1	attr	This attribute describes the affection of the event by the Dem PTO handling.  True: the event is affected by the Dem PTO handling. False: the event is not affected by the Dem PTO handling.  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime		
dtcProps	DiagnosticTroub leCodeProps	01	ref	Defined properties associated with the DemDTC.		
eventObd Readiness Group	NameToken	01	attr	This attribute specifies the Event OBD Readiness group for PID \$01 and PID \$41 computation. This attribute is only applicable for emission-related ECUs.		
obdDTCVa lue	PositiveInteger	01	attr	Unique Diagnostic Trouble Code value for OBD.  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime		

Table 6.17: DiagnosticTroubleCodeObd

Class	DiagnosticTroub	DiagnosticTroubleCodeProps			
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticTroubleCode	
Note	This element defines common Dtc properties that can be reused by different non OBD-relevant DTCs.  Tags: atp.recommendedPackage=DiagnosticTroubleCodePropss				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
aging	DiagnosticAging	01	ref	Reference to an aging algorithm in case that an aging/unlearning of the event is allowed.	
environme ntCaptureT oReporting	EnvironmentCa ptureToReportin gEnum	01	attr	This attribute determines the point in time, when the data actually is captured.	



extendedD ataRecord	DiagnosticExten dedDataRecord	*	ref	Defines the links to an extended data class sampler.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime
freezeFra me	DiagnosticFreez eFrame	*	ref	Define the links to a freeze frame class sampler.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime
freezeFra meContent	DiagnosticDatal dentifierSet	01	ref	This represents the content of the a set of DiagnosticFreezeFrames.
immediate NvDataSto rage	Boolean	01	attr	Switch to enable immediate storage triggering of an according event memory entry persistently to NVRAM.  true: immediate non-volatile storage triggering enabled false: immediate non-volatile storage triggering disabled
maxNumb erFreezeFr ameRecor ds	PositiveInteger	01	attr	This attribute defines the number of according freeze frame records, which can maximal be stored for this event. Therefore all these freeze frame records have the same freeze frame class.
memoryDe stination	DiagnosticMem oryDestination	*	ref	The event destination assigns events to none, one or multiple origins.
priority	PositiveInteger	1	attr	Priority of the event, in view of full event buffer. A lower value means higher priority.
significanc e	DiagnosticSignif icanceEnum	01	attr	Significance of the event, which indicates additional information concerning fault classification and resolution.

Table 6.18: DiagnosticTroubleCodeProps

Class	DiagnosticMemoryDestination (abstract)			
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticTroubleCode
Note	This abstract meta-class represents a possible memory destination for a diagnostic event.			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note
_	_	_	-	_

**Table 6.19: DiagnosticMemoryDestination** 



Class	DiagnosticMemoryDestinationPrimary			
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticTroubleCode
Note	This represents a primary memory for a diagnostic event.			
	Tags: atp.recommendedPackage=DiagnosticMemoryDestinations			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic MemoryDestination, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note
_	_	_	_	-

 Table 6.20: DiagnosticMemoryDestinationPrimary

Class	DiagnosticMemoryDestinationMirror			
Package	M2::AUTOSARTe	mplates	::Diagno	osticExtract::Dem::DiagnosticTroubleCode
Note	This represents a mirror memory for a diagnostic event.  Tags: atp.recommendedPackage=DiagnosticMemoryDestinations			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic MemoryDestination, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note
_	_	_	_	-

Table 6.21: DiagnosticMemoryDestinationMirror

Class	DiagnosticMemoryDestinationUserDefined				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticTroubleCode	
Note	This represents a	user-de	fined me	emory for a diagnostic event.	
	Tags: atp.recommendedPackage=DiagnosticMemoryDestinations				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic MemoryDestination, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
memoryld	PositiveInteger	71			
				memory.	

Table 6.22: DiagnosticMemoryDestinationUserDefined

Enumeration	DiagnosticSignificanceEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode
Note	Significance level of a diagnostic event.
Literal	Description
fault	Failure, which affects the component/ECU itself.
	Tags: atp.EnumerationValue=0



occurence	Issue, which indicates additional information concerning insufficient system behavior.
	Tags: atp.EnumerationValue=1

Table 6.23: DiagnosticSignificanceEnum

Enumeration	DiagnosticUdsSeverityEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode
Note	Severity types for a DTC according to ISO 14229-1.
Literal	Description
checkAtNext Halt	Check at next halt.
	Tags: atp.EnumerationValue=0
immediately	Check immediately.
	Tags: atp.EnumerationValue=1
maintenance Only	Maintenance required.
	Tags: atp.EnumerationValue=2
noSeverity	No severity information available.
	Tags: atp.EnumerationValue=3

Table 6.24: DiagnosticUdsSeverityEnum

Class	DiagnosticDataIdentifierSet			
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticTroubleCode
Note	This represents the ability to define a list of DiagnosticDataIdentifiers that can be reused in different contexts.  Tags: atp.recommendedPackage=DiagnosticDataIdentifierSets			
Base	1	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note
datald entifier (ordered)	DiagnosticDatal dentifier	*	ref	Reference to an orderd list of Data Identifiers.

Table 6.25: DiagnosticDataIdentifierSet

Enumeration	DiagnosticWwhObdDtcClassEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode
Note	This meta-class represents the ability to model severity classes of an WWH-OBD DTC.
Literal	Description



demDtcWwh ObdClassA	This attribute represents the severity class A.
	Tags: atp.EnumerationValue=0
demDtcWwh ObdClassB1	This attribute represents the severity class B1.
	Tags: atp.EnumerationValue=1
demDtcWwh ObdClassB2	This attribute represents the severity class B2.
	Tags: atp.EnumerationValue=2
demDtcWwh ObdClassC	This attribute represents the severity class C.
	Tags: atp.EnumerationValue=3
demDtcWwh ObdClassNo Information	This attribute represents the option to intentionally not describe a dedicated severity class of an WWH-OBD DTC.
	Tags: atp.EnumerationValue=4

Table 6.26: DiagnosticWwhObdDtcClassEnum

Class	DiagnosticTroubleCodeUdsToTroubleCodeObdMapping				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticMapping	
Note	This meta-class represents the ability to associate a UDS trouble code to an OBD trouble code.				
	Tags: atp.recomm	nendedF	Package	=DiagnosticMappings	
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Type	Type Mul. Kind Note			
troubleCod eObd	DiagnosticTroub leCodeObd	01	ref	This represents the OBD DTC referenced in the mapping between UDS and OBD DTCs.	
troubleCod eUds	DiagnosticTroub leCodeUds	01	ref	This represents the UDS DTC referenced in the mapping between UDS and OBD DTCs.	

Table 6.27: DiagnosticTroubleCodeUdsToTroubleCodeObdMapping

## 6.4 DiagnosticExtendedDataRecord

[TPS\_DEXT\_03008] Semantics of DiagnosticExtendedDataRecord  $[A DiagnosticExtendedDataRecord contains DiagnosticDataElements that are ordered by the bitOffset. ] (RS_DEXT_00032)$ 

[constr\_1355] Value of recordNumber [ To be compliant to ISO, the value of recordNumber shall be set in the interval as defined in ISO 14229-1 [16]. ]()

[constr\_1356] Value of recordNumber shall be unique [ The value of recordNumber shall be unique among all DiagnosticExtendedDataRecords in the context of the enclosing DiagnosticContributionSet. | ()



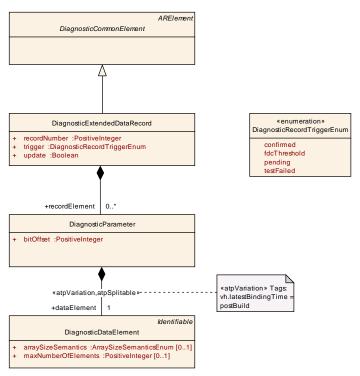


Figure 6.7: Modeling of DiagnosticExtendedDataRecord

Class	DiagnosticExtendedDataRecord				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticExtendedDataRecord	
Note	Description of an extended data record.				
	Tags: atp.recomm	nendedF	ackage	=DiagnosticExtendedDataRecords	
Base	-	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note	
recordEle ment	DiagnosticPara meter	*	aggr	Defined DataElements in the extended record element.	
recordNum ber	PositiveInteger	1	attr	This attribute specifies an unique identifier for an extended data record.	
trigger	DiagnosticReco rdTriggerEnum	1	attr	This attribute specifies the primary trigger to allocate an event memory entry.	
update	Boolean	1	attr	This attribute defines when an extended data record is captured. True: This extended data record is captured every time. False: This extended data record is only captured for new event memory entries.	

Table 6.28: DiagnosticExtendedDataRecord

Enumeration	DiagnosticRecordTriggerEnum				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticFreezeFrame				
Note	Triggers to allocate an event memory entry.				
Literal	Description				



confirmed	capture on "Confirmed"
	Tags: atp.EnumerationValue=0
fdcThreshold	capture on "FDC Threshold"
	Tags: atp.EnumerationValue=1
pending	capture on "Pending"
	Tags: atp.EnumerationValue=2
testFailed	capture on "Test Failed"
	Tags: atp.EnumerationValue=3

Table 6.29: DiagnosticRecordTriggerEnum

### 6.5 DiagnosticFreezeFrame

[TPS\_DEXT\_03009] Semantics of DiagnosticFreezeFrame [ A DiagnosticFreezeFrame needs an ordered list of references to DiagnosticDataIdentifiers. However, this reference is not modeled directly but in the context of meta-class DiagnosticTroubleCodeProps. ](RS\_DEXT\_00033)

For more details, please refer to Figure 6.3.

[constr\_1357] Value of recordNumber [ To be compliant to ISO, the value of recordNumber shall be set in the interval as defined in ISO 14229-1 [16]. ]()

[constr\_1358] Value of recordNumber shall be unique [ The value of record-Number shall be unique among all DiagnosticFreezeFrames in the context of the enclosing DiagnosticContributionSet. |()

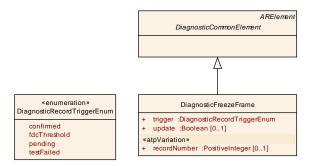


Figure 6.8: Modeling of DiagnosticFreezeFrame



Class	DiagnosticFreezeFrame				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticFreezeFrame			
Note	This element describes combinations of DIDs for a non OBD relevant freeze frame.  Tags: atp.recommendedPackage=DiagnosticFreezeFrames				
Base		ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note	
recordNum ber	PositiveInteger	01	attr	This attribute defines a record number for a freeze frame record.  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime	
trigger	DiagnosticReco rdTriggerEnum	1	attr	This attribute defines the primary trigger to allocate an event memory entry.	
update	Boolean	01	attr	This attribute defines the approach when the freeze frame record is stored/updated. True: FreezeFrame record is captured every time. False: FreezeFrame record is only captured for new event memory entries.	

Table 6.30: DiagnosticFreezeFrame

## 6.6 DiagnosticCondition

[TPS\_DEXT\_03010] Combination of DiagnosticConditions to Diagnostic-ConditionGroups | DiagnosticConditions are combined to Diagnostic-ConditionGroups and define a certain number of checks (e.g. correct voltage range) before the event report is accepted or the event gets qualified. | (RS\_DEXT\_00027, RS\_DEXT\_00028, RS\_DEXT\_00030, RS\_DEXT\_00031)

[TPS\_DEXT\_03001] Different types of conditions [ There are two different types of conditions: DiagnosticEnableConditions and DiagnosticStorageCondition:

- As long as the DiagnosticEnableCondition is not fulfilled, the event reports are not valid and therefore will not be accepted.
- As long as the DiagnosticStorageCondition is not fulfilled, the event is not stored in the event memory.

|(RS\_DEXT\_00027)



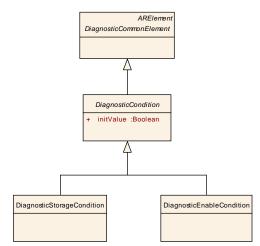


Figure 6.9: Modeling of DiagnosticCondition

Class	DiagnosticCondition (abstract)				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticCondition	
Note	Abstract element	or Store	geCond	litions and EnableConditions.	
Base		ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note	
initValue	Boolean	1	attr	Defines the initial status for enable or disable of acceptance/storage of event reports of a diagnostic event. The value is the initialization after power up (before this condition is reported the first time).  true: acceptance/storage of a diagnostic event enabled false: acceptance/storage of a diagnostic event disabled	

**Table 6.31: DiagnosticCondition** 

Class	DiagnosticEnableCondition			
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticCondition
Note	Specification of ar	enable	condition	on.
	Tags: atp.recommendedPackage=DiagnosticConditions			
Base		ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic		
	Condition, Identifia	Condition, Identifiable, MultilanguageReferrable, PackageableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note
_	_	_	_	-

Table 6.32: DiagnosticEnableCondition



Class	DiagnosticStorageCondition				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticCondition	
Note	Specification of a	storage	conditio	n.	
	Tags: atp.recommendedPackage=DiagnosticConditions				
Base				eElement, DiagnosticCommonElement, Diagnostic	
	Condition, Identifia	able, Mu	Itilangu	ageReferrable, PackageableElement, Referrable	
Attribute	Туре	Type Mul. Kind Note			
_	_	_	_	-	

Table 6.33: DiagnosticStorageCondition

# 6.7 DiagnosticConditionGroup

[TPS\_DEXT\_01084] Semantics of DiagnosticConditionGroups | DiagnosticConditionGroups are used to collect DiagnosticConditions that in turn are assigned to DiagnosticEvents. | (RS\_DEXT\_00023, RS\_DEXT\_00028, RS\_DEXT\_00029)

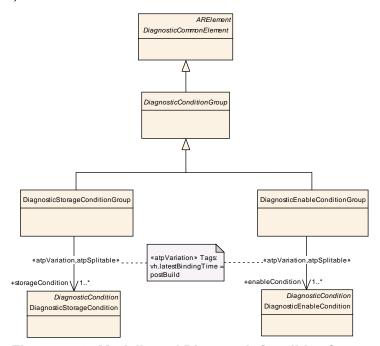


Figure 6.10: Modeling of DiagnosticConditionGroup

Class	DiagnosticCondi	DiagnosticConditionGroup (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticConditionGroup				
Note	Abstract element for StorageConditionGroups and EnableConditionGroups.				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
_	_	_	_	-	



Table 6.34: DiagnosticConditionGroup

Class	DiagnosticEnable	eCondi	tionGro	ир
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticConditionGroup
Note	Enable condition (	group w	hich incl	udes one or several enable conditions.
	Tags: atp.recomm	nendedF	Package:	=DiagnosticConditions
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ConditionGroup, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note
enableCon dition	DiagnosticEnabl eCondition	1*	ref	Reference to enableConditions that are part of the EnableConditionGroup.
	Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=enableCondition, variation Point.shortLabel vh.latestBindingTime=postBuild			

Table 6.35: DiagnosticEnableConditionGroup

Class	DiagnosticStorageConditionGroup					
Package	M2::AUTOSARTe	mplates	::Diagno	osticExtract::Dem::DiagnosticConditionGroup		
Note	Storage condition	group v	vhich inc	sludes one or several storage conditions.		
	Tags: atp.recommendedPackage=DiagnosticConditions					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic ConditionGroup, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
storageCo ndition	DiagnosticStora geCondition	1*	ref	Reference to storageConditions that are part of the StorageConditionGroup.		
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=storageCondition, variation Point.shortLabel vh.latestBindingTime=postBuild		

Table 6.36: DiagnosticStorageConditionGroup

# 6.8 DiagnosticMapping

The mapping concept of the <code>DiagnosticExtract</code> template has been designed to support the decentralized and independent definition of diagnostic requirements that can be linked together at a late point during the development process.



It also supports the use of mapping contributions collected from various sources in order to reduce manual mapping work by the ECU integrator.

**[TPS\_DEXT\_03002] Two kind of mappings** \[ \text{For diagnostic event handling, there are two kind of mappings:

- Mapping between a DiagnosticEvent and another diagnostic definition.
- Mapping between a DiagnosticEvent and a SWC service port.

(RS DEXT 00023, RS DEXT 00052)

Figure 6.11 gives an overview on the different types of mappings available for diagnostic event handling.

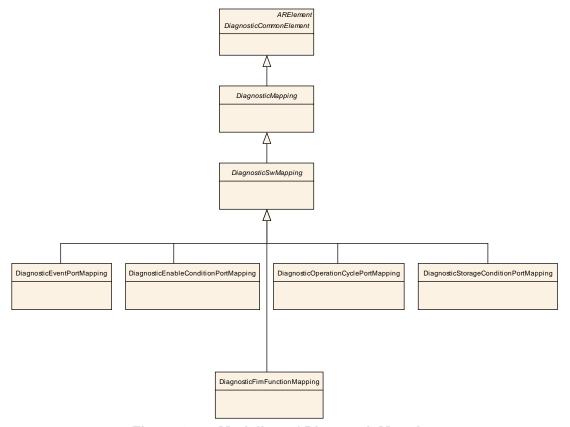


Figure 6.11: Modeling of Diagnostic Mapping

Class	DiagnosticMapping (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticMapping			
Note	Abstract element for different kinds of diagnostic mappings.			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note
_	_	_	_	_

Table 6.37: DiagnosticMapping



#### 6.8.1 DiagnosticEvent to DtcUds Mapping

[TPS\_DEXT\_03003] Semantics of DiagnosticEventToTroubleCodeUdsMapping | The DiagnosticEventToTroubleCodeUdsMapping is used to assign one (1:1) or multiple (n:1) DiagnosticEvents to a DiagnosticTroubleCodeUds.

In case of n:1, multiple instances of <code>DiagnosticEventToTroubleCodeUdsMap-ping</code> with the same reference of role <code>troubleCodeUds</code> but different references of role <code>diagnosticEvent</code> have to be defined. <code>](RS\_DEXT\_00023, RS\_DEXT\_00024, RS\_DEXT\_00025)</code>

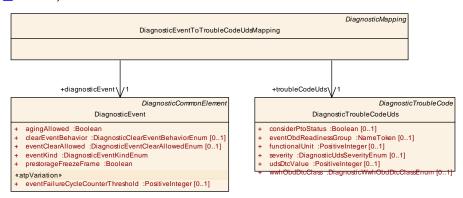


Figure 6.12: DiagnosticEventToDtcUdsMapping

Class	DiagnosticEventToTroubleCodeUdsMapping				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticMapping	
Note	Defines which UDS Diagnostic Trouble Code is applicable for a DiagnosticEvent.				
	Tags: atp.recommendedPackage=DiagnosticMappings				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
diagnostic Event	DiagnosticEvent	1	ref	Reference to a DiagnosticEvent to which a UDS Diagnostic Trouble Code is assigned.	
troubleCod eUds	DiagnosticTroub leCodeUds	1	ref	Reference to an UDS Diagnostic Trouble Code assigned to a DiagnosticEvent.	

Table 6.38: DiagnosticEventToTroubleCodeUdsMapping

#### 6.8.2 DiagnosticEvent to DiagnosticOperationCycle Mapping

[TPS\_DEXT\_01086] Reference to DiagnosticOperationCycle [ A DiagnosticEvent needs to be assigned to exactly one DiagnosticOperationCycle. ] (RS\_DEXT\_00024, RS\_DEXT\_00054)



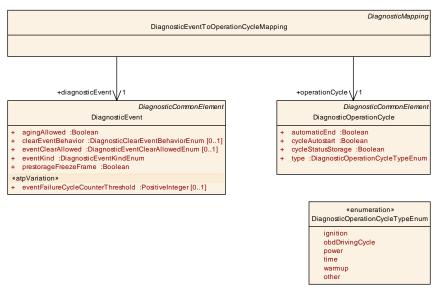


Figure 6.13: DiagnosticEventToOperationCycleMapping

Class	DiagnosticEventToOperationCycleMapping				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticMapping	
Note	Defines which Op	erationC	Cycle is a	applicable for a DiagnosticEvent.	
	Tags: atp.recommendedPackage=DiagnosticMappings				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
diagnostic Event	DiagnosticEvent	1	ref	Reference to a DiagnosticEvent to which an OperationCycle is assigned.	
operationC ycle	DiagnosticOper ationCycle	1	ref	Reference to an OperationCycle assigned to a DiagnosticEvent.	

Table 6.39: DiagnosticEventToOperationCycleMapping

#### 6.8.3 DiagnosticEvent to DebounceAlgorithm Mapping

[TPS\_DEXT\_03004] DiagnosticEvent and DiagnosticDebounceAlgorithm-Props [ If a DiagnosticEvent has to be debounced, it must be mapped to the appropriate DiagnosticDebounceAlgorithmProps. ](RS\_DEXT\_00023, RS\_DEXT\_00053)

[TPS\_DEXT\_03005] Existence of DiagnosticEventToDebounceAlgorith-mMapping [ The DiagnosticEventToDebounceAlgorithmMapping shall not be created if the DiagnosticEvent is not debounced. ](RS\_DEXT\_00023, RS\_DEXT\_00053)



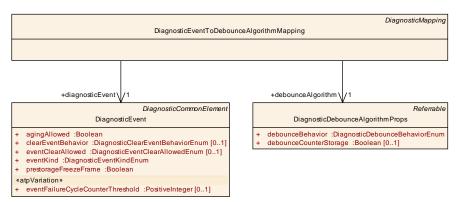


Figure 6.14: DiagnosticEventToDebounceAlgorithmMapping

Class	DiagnosticEventToDebounceAlgorithmMapping				
Package	M2::AUTOSARTe	mplates	::Diagno	osticExtract::Dem::DiagnosticMapping	
Note	Defines which De	bounce	Algorithi	m is applicable for a DiagnosticEvent.	
	Tags: atp.recomn	Tags: atp.recommendedPackage=DiagnosticMappings			
Base				eElement, DiagnosticCommonElement, Diagnostic geReferrable, PackageableElement, Referrable	
Attribute	Туре	Mul.	Kind	Note	
debounce Algorithm	DiagnosticDebo unceAlgorithmP rops	1	ref	Reference to a DebounceAlgorithm assigned to a DiagnosticEvent.	
diagnostic Event	DiagnosticEvent	1	ref	Reference to a DiagnosticEvent to which a DebounceAlgorithm is assigned.	

Table 6.40: DiagnosticEventToDebounceAlgorithmMapping

Class	DiagnosticDebou	DiagnosticDebounceAlgorithmProps				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticDebouncingAlgorithm		
Note	Defines properties	s for the	deboun	ce algorithm class.		
Base	ARObject, Referra	able				
Attribute	Туре	Mul.	Kind	Note		
debounce Algorithm	DiagEventDebo unceAlgorithm	1	aggr	This represents the actual debounce algorithm.		
debounce Behavior	DiagnosticDebo unceBehaviorE num	1	attr	This attribute defines how the event debounce algorithm will behave, if a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled.		
debounce CounterSt orage	Boolean	01	attr	Switch to store the debounce counter value non-volatile or not. true: debounce counter value shall be stored non-volatile false: debounce counter value is volatile		

Table 6.41: DiagnosticDebounceAlgorithmProps

The details regarding the formalization of debouncing behavior are depicted in Figure 6.15.



In particular, DiagnosticCommonProps aggregates DiagnosticDebounceAlgorithmProps in the role debounceAlgorithmProps. The DiagnosticDebounceAlgorithmProps itself does not actually represent the debouncing algorithm but provides attributes relevant for the actual debouncing algorithm.

[TPS\_DEXT\_01048] Actual algorithm for the diagnostic event debouncing [ The actual algorithm for the debouncing is represented by subclasses of DiagEvent-DebounceAlgorithm aggregated in the role DiagnosticDebounceAlgorithm-Props.debounceAlgorithm. | (RS DEXT 00023, RS DEXT 00053)

In other words, the debouncing of diagnostic events can be formulated in two ways:

- The DiagEventDebounceCounterBased represents the ability to implement a counter-based debouncing.
- The DiagEventDebounceTimeBased represents the ability to implement a time-based debouncing.

[constr\_1359] Existence of attribute DiagnosticDebounceAlgorithm-Props.debounceCounterStorage | The attribute DiagnosticDebounceAlgorithmProps.debounceCounterStorage shall only exist if the aggregation DiagnosticDebounceAlgorithmProps.debounceAlgorithm actually aggregates a DiagEventDebounceCounterBased | ()



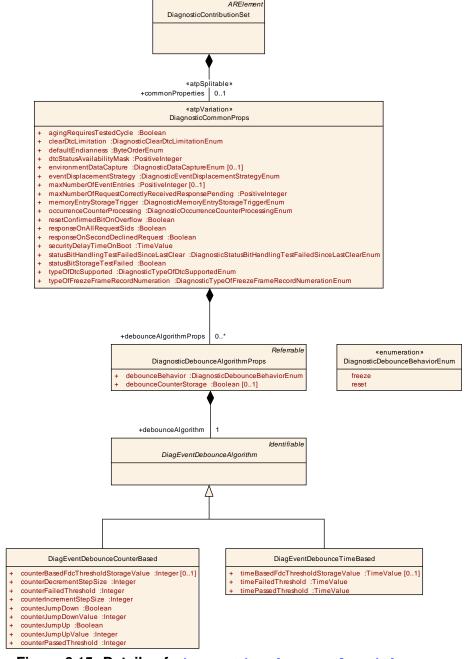


Figure 6.15: Details of DiagnosticDebounceAlgorithmProps

[constr\_1360] Usage of DiagEventDebounceMonitorInternal is not supported in the context of DiagnosticDebounceAlgorithmProps [ The usage of the meta-class DiagEventDebounceMonitorInternal for the aggregation in the role DiagnosticDebounceAlgorithmProps.debounceAlgorithm is not permitted. ]()

For clarification with respect to [constr\_1360], <code>DiagEventDebounceMonitorInternal</code> is used in the context of formulating the <code>DiagnosticEventNeeds</code>, but its usage in the context of the <code>DiagnosticExtract</code> is not foreseen.





Class	DiagnosticEventNeeds						
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds						
Note	Specifies the abstract needs on the configuration of the Diagnostic Event Manager for one diagnostic event. Its shortName can be regarded as a symbol identifying the diagnostic event from the viewpoint of the component or module which owns this element.  In case the diagnostic event specifies a production error, the shortName shall be the name of the production error.						
Base		sticCap	abilityEl	ement, Identifiable, MultilanguageReferrable,			
Attribute	Туре	Mul.	Kind	Note			
considerPt oStatus	Boolean	01	attr	PTO (Power Take Off) has an impact on the respective emission-related event (OBD). This information shall be provided by SW-C description in order to consider the PTO relevance e.g. for readiness (PID \$01) computation. For events with dtcKind set to 'nonEmmissionRelatedDtc' this attribute is typically false.			
deferringFi d	FunctionInhibitio nNeeds	*	ref	This reference contains the link to a function identifier within the FiM which is used by the monitor before delivering a result.			
diagEvent Debounce Algorithm	DiagEventDebo unceAlgorithm	01	aggr	Specifies the abstract need on the Debounce Algorithm applied by the Diagnostic Event Manager.			
dtcKind	DtcKindEnum	01	attr	This attribute indicates the kind of the diagnostic monitor according to the SWS Diagnostic Event Manger.  This attribute applies for the UDS diagnostics use case.			
inhibitingFi d	FunctionInhibitio nNeeds	01	ref	This represents the primary Function Inhibition Identifier used for inhibition of the diagnostic monitor. The FID might either inhibit the monitoring of a symptom or the reporting of detected faults.			
inhibitingS econdaryFi d	FunctionInhibitio nNeeds	*	ref	This represents the secondary Function Inhibition Identifier used for inhibition of the diagnostic monitor. Any of the FID inhibitions leads to an inhibition of the monitoring of a symptom or the reporting of detected faults.			
obdDtcNu mber	PositiveInteger	01	attr	This represents a reasonable Diagnostic Trouble Code. This allows to predefine the Diagnostic Trouble Code, e.g. if the a function developer has received a particular requirement from the OEM or from a standardization body.  This attribute applies for the OBD diagnostics use case.			
reportBeha vior	ReportBehavior Enum	01	attr	This switch indicates whether or not the BSW module is allowed to report the related Events before Dem_Init().			



udsDtcNu mber	PositiveInteger	01	attr	This represents a reasonable Diagnostic Trouble Code. This allows to predefine the Diagnostic Trouble Code, e.g. if the a function developer has received a particular requirement from the OEM or from a standardization body.
				This attribute applies for the UDS diagnostics use case.

## Table 6.42: DiagnosticEventNeeds

Class	DiagEventDebou	DiagEventDebounceAlgorithm (abstract)				
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::ServiceNeeds		
Note	This class represents the ability to specify the pre-debounce algorithm which is selected and/or required by the particular monitor.					
	This class inherits from Identifiable in order to allow further documentation of the expected or implemented debouncing and to use the category for the identification of the expected / implemented debouncing.					
Base	ARObject, Identifiable, MultilanguageReferrable, Referrable					
Attribute	Туре					
_	_	_	_	-		

Table 6.43: DiagEventDebounceAlgorithm

Class	DiagEventDebounceCounterBased					
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds					
Note	This meta-class represents the ability to indicate that the counter-based debounce algorithm shall be used by the DEM for this diagnostic monitor.  This is related to set the ECUC choice container DemDebounceAlgorithmClass to DemDebounceCounterBased.					
Base ARObject, DiagEventDebounceAlgorithm, Identifiable, MultilanguageReferra				gorithm, Identifiable, MultilanguageReferrable,		
Attribute	Туре	Mul.	Kind	Note		
counterBa sedFdcThr esholdStor ageValue	Integer	01	attr	Threshold to allocate an event memory entry and to capture the Freeze Frame.		
counterDe crementSt epSize	Integer	1	attr	This value shall be taken to decrement the internal debounce counter.		
counterFail edThreshol d	Integer	1	attr	This value defines the event-specific limit that indicates the "failed" counter status.		
counterIncr ementStep Size	Integer	1	attr	This value shall be taken to increment the internal debounce counter.		
counterJu mpDown	Boolean	1	attr	This value activates or deactivates the counter jump-down behavior.		



counterJu mpDownV alue	Integer	1	attr	This value represents the initial value of the internal debounce counter if the counting direction changes from incrementing to decrementing.
counterJu mpUp	Boolean	1	attr	This value activates or deactivates the counter jump-up behavior.
counterJu mpUpValu e	Integer	1	attr	This value represents the initial value of the internal debounce counter if the counting direction changes from decrementing to incrementing.
counterPa ssedThres hold	Integer	1	attr	This value defines the event-specific limit that indicates the "passed" counter status.

Table 6.44: DiagEventDebounceCounterBased

Class	DiagEventDebounceTimeBased				
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds				
Note	This meta-class represents the ability to indicate that the time-based pre-debounce algorithm shall be used by the Dem for this diagnostic monitor.  This is related to set the EcuC choice container DemDebounceAlgorithmClass to DemDebounceTimeBase.				
Base	ARObject, DiagEventDebounceAlgorithm, Identifiable, MultilanguageReferrable, Referrable				
Attribute	Type	Mul.	Kind	Note	
timeBased FdcThresh oldStorage Value	TimeValue	01	attr	Threshold to allocate an event memory entry and to capture the Freeze Frame.	
timeFailed Threshold	TimeValue	1	attr	This value represents the event-specific delay indicating the "failed" status.	
timePasse dThreshold	TimeValue	1	attr	This value represents the event-specific delay indicating the "passed" status.	

Table 6.45: DiagEventDebounceTimeBased

Enumeration	DiagnosticDebounceBehaviorEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticDebouncing Algorithm
Note	Event debounce algorithm behavior options.
Literal	Description
freeze	The event debounce counter will be frozen with the current value and will not change while a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. After all related enable conditions are fulfilled and ControlDTCSetting of the related event is enabled again, the event qualification will continue with the next report of the event (i.e. SetEventStatus).
	Tags: atp.EnumerationValue=0



reset	The event debounce counter will be reset to initial value if a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. The qualification of the event will be restarted with the next valid event report.
	Tags: atp.EnumerationValue=1

Table 6.46: DiagnosticDebounceBehaviorEnum

#### 6.8.4 DiagnosticEvent to EnableConditionGroup Mapping

[TPS\_DEXT\_03015] EnableConditions have to be put into a DiagnosticEnableConditionGroup [ EnableConditions that are assigned to a DiagnosticEvent have to be put into a DiagnosticEnableConditionGroup since only a group of EnableConditions can be mapped to a DiagnosticEvent. ] (RS DEXT 00023, RS DEXT 00026, RS DEXT 00028)

[constr\_1361] Number of DiagnosticEventToEnableConditionGroupMapping elements per DiagnosticEvent [ The mapping element DiagnosticEventToEnableConditionGroupMapping shall be created no more than once per DiagnosticEvent.

If several DiagnosticEventToEnableConditionGroupMapping elements referring the same DiagnosticEvent are defined, then the Enable Condition Group mapping shall be regarded as defective. |()

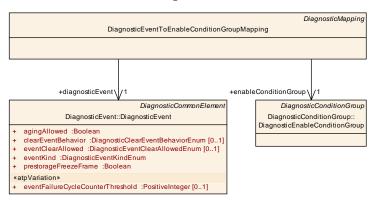


Figure 6.16: DiagnosticEventToEnableConditionGroupMapping

efines which Enat	•		osticExtract::Dem::DiagnosticMapping oup is applicable for a DiagnosticEvent.	
	bleCon	ditionGr	oup is applicable for a DiagnosticEvent.	
Tags: atp.recommendedPackage=DiagnosticMappings				
ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Type Mul. Kind Note				
agnosticEvent	1	ref	Reference to a DiagnosticEvent to which an EnableConditionGroup is assigned.	
a 4	Element, AROb upping, Identifiab pe	Element, ARObject, Coupping, Identifiable, Mul.	Element, ARObject, Collectablupping, Identifiable, Multilangua	



	DiagnosticEnabl eConditionGrou	1	ref	Reference to an EnableConditionGroup assigned to a DiagnosticEvent.
р	р			

Table 6.47: DiagnosticEventToEnableConditionGroupMapping

#### 6.8.5 DiagnosticEvent to StorageConditionGroup Mapping

[TPS\_DEXT\_03016] StorageConditions have to be put into a Diagnostic-StorageConditionGroup [StorageConditions that are assigned to a DiagnosticEvent have to be put into a DiagnosticStorageConditionGroup since only a group of StorageConditions can be mapped to a DiagnosticEvent. ] (RS DEXT 00023, RS DEXT 00027, RS DEXT 00029)

[constr\_1362] Number of DiagnosticEventToStorageConditionGroupMapping elements per DiagnosticEvent [ The mapping element DiagnosticEventToStorageConditionGroupMapping shall be created no more than once or once per DiagnosticEvent.

If several DiagnosticEventToStorageConditionGroupMapping elements referring the same DiagnosticEvent are defined, then the Storage Condition Group mapping shall be regarded as defective. |()

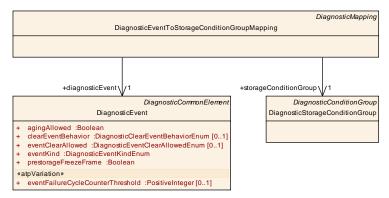


Figure 6.17: DiagnosticEventToStorageConditionGroupMapping

[TPS\_DEXT\_03006] Values of the individual DiagnosticStorageConditions [ The values of the individual DiagnosticStorageConditions need to be algorithmically evaluated in order to find out whether or not the storage of the DiagnosticEvent is permitted.

The algorithm that is supposed to be implemented for this purpose is documented in [SWS Dem 00459]. | (RS DEXT 00027)



Class	DiagnosticEvent	DiagnosticEventToStorageConditionGroupMapping					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticMapping						
Note	Defines which StorageConditionGroup is applicable for a DiagnosticEvent.						
	Tags: atp.recommendedPackage=DiagnosticMappings						
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable						
Attribute	Туре	Mul.	Kind	Note			
diagnostic Event	DiagnosticEvent	1	ref	Reference to a DiagnosticEvent to which a StorageConditionGroup is assigned.			
storageCo nditionGro up	DiagnosticStora geConditionGro up	1	ref	Reference to a StorageConditionGroup assigned to a DiagnosticEvent.			

Table 6.48: DiagnosticEventToStorageConditionGroupMapping

#### 6.8.6 DiagnosticEvent to Port Mapping

[TPS\_DEXT\_03007] Semantics of DiagnosticEventPortMapping [ A DiagnosticEventPortMapping defines which SwcServiceDependencys of a AtomicSwComponentType Or BswServiceDependency of a BswModuleDescription have to be connected to which DiagnosticEvent.

This is realized by defining a DiagnosticEventPortMapping referencing a DiagnosticEvent and (using &instanceRef > an instance of SwcServiceDependency (or BswServiceDependency). |(RS\_DEXT\_00023, RS\_DEXT\_00052)

If such an instance is not yet available, an ordinary reference to SwcServiceDependency can be given alternatively (i.e. without specifying a certain instance).

In this way, the ECU integrator is able to directly derive the actual mapping between SWC (or BSW) service ports and the ports of the Service Components during ECU configuration.

[constr\_1435] Debouncing in the presence of a DiagnosticEventPortMapping | If a DiagnosticEventPortMapping exists and the enclosed DiagnosticEventPortMapping.diagnosticEvent is also referenced by a DiagnosticEventToDebounceAlgorithmMapping then the concrete subclass of the respective DiagnosticEventToDebounceAlgorithmMapping.debounceAlgorithm.debounceAlgorithm shall be identical to the DiagnosticEventPortMapping.swcServiceDependencyInSystem/swcFlatServiceDependency.serviceNeeds.diagEventDebounceAlgorithm.

It is assumed that the <code>DiagnosticEventPortMapping.swcServiceDependencyInSystem/swcFlatServiceDependency.serviceNeeds</code> is a <code>DiagnosticEventNeeds.</code> ]()



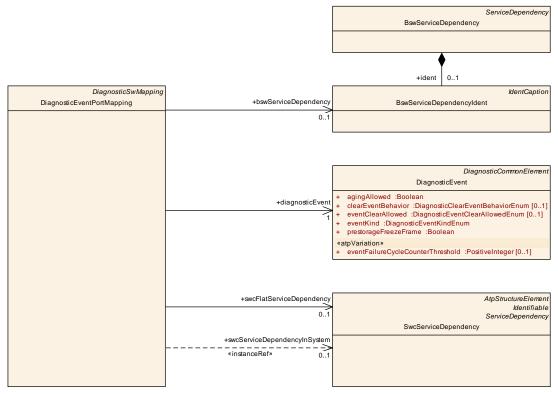


Figure 6.18: DiagnosticEventPortMapping

Class	DiagnosticEventPortMapping						
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticMapping						
Note	Defines to which SWC service ports with DiagnosticEventNeeds the DiagnosticEvent is mapped.  Tags: atp.recommendedPackage=DiagnosticMappings						
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, DiagnosticSwMapping, Identifiable, MultilanguageReferrable, Packageable Element, Referrable						
Attribute	Туре	Mul.	Kind	Note			
bswServic eDepende ncy	BswServiceDep endencyIdent	01	ref	Reference to a BswServiceDependency that links ServiceNeeds to BswModuleEntries.			
diagnostic Event	DiagnosticEvent	1	ref	Reference to the DiagnosticEvent that is assigned to SWC service ports with DiagnosticEventNeeds.			
swcFlatSer viceDepen dency	SwcServiceDep endency	01	ref	Reference to a SwcServiceDependencyType that links ServiceNeeds to SWC service ports.			
swcServic eDepende ncyInSyste m	SwcServiceDep endency	01	iref	Instance reference to a SwcServiceDependency that links ServiceNeeds to SWC service ports.			

Table 6.49: DiagnosticEventPortMapping



### 6.8.7 DiagnosticOperationCycle to Port Mapping

[TPS\_DEXT\_03017] Semantics of DiagnosticOperationCyclePortMapping [A DiagnosticOperationCyclePortMapping defines which SWC service port(s) have to be connected to which DiagnosticOperationCycle.

This is realized by defining a <code>DiagnosticOperationCyclePortMapping</code> referencing a <code>DiagnosticOperationCycle</code> and an instance of <code>SwcServiceDependency</code>. <code>(RS\_DEXT\_00052, RS\_DEXT\_00053)</code>

If such an instance is not yet available, an ordinary reference to SwcServiceDependency can be given alternatively (i.e. without specifying a certain instance).

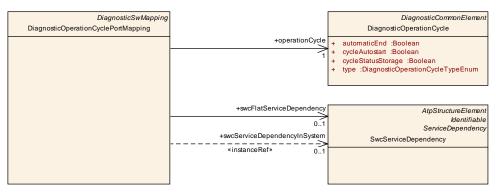


Figure 6.19: DiagnosticOperationCyclePortMapping

Class	DiagnosticOperationCyclePortMapping						
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticMapping						
Note	Defines to which SWC service ports with DiagnosticOperationCycleNeeds the DiagnosticOperationCycle is mapped.  Tags: atp.recommendedPackage=DiagnosticMappings						
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, DiagnosticSwMapping, Identifiable, MultilanguageReferrable, Packageable Element, Referrable						
Attribute	Type	Mul.	Kind	Note			
operationC ycle	DiagnosticOper ationCycle	1	ref	Reference to the DiagnosticOperationCycle that is assigned to SWC service ports with DiagnosticOperationCycleNeeds.			
swcFlatSer viceDepen dency	SwcServiceDep endency	01	ref	Reference to a SwcServiceDependencyType that links ServiceNeeds to SWC service ports.			
swcServic eDepende ncyInSyste m	SwcServiceDep endency	01	iref	Instance reference to a SwcServiceDependency that links ServiceNeeds to SWC service ports.			

Table 6.50: DiagnosticOperationCyclePortMapping



## 6.8.8 DiagnosticEnableCondition to Port Mapping

[TPS\_DEXT\_03018] Semantics of DiagnosticEnableConditionPortMapping A DiagnosticEnableConditionPortMapping defines which SWC service port(s) have to be connected to which DiagnosticEnableCondition. This is realized by defining a DiagnosticEnableConditionPortMapping referencing a DiagnosticEnableCondition and an instance of SwcServiceDependency. 

[RS\_DEXT\_00026, RS\_DEXT\_00052]

If such an instance is not yet available, an ordinary reference to SwcServiceDependency can be given alternatively (i.e. without specifying a certain instance).

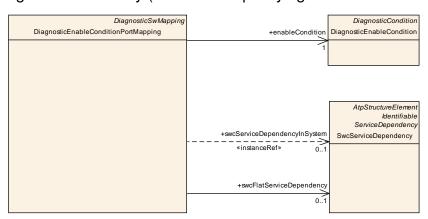


Figure 6.20: DiagnosticEnableConditionPortMapping

Class	DiagnosticEnableConditionPortMapping						
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticMapping			
Note	Defines to which SWC service ports with DiagnosticEnableConditionNeeds the DiagnosticEnableCondition is mapped.  Tags: atp.recommendedPackage=DiagnosticMappings						
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, DiagnosticSwMapping, Identifiable, MultilanguageReferrable, Packageable Element, Referrable						
Attribute	Туре	Mul.	Kind	Note			
enableCon dition	DiagnosticEnabl eCondition	1	ref	Reference to the EnableCondition which is mapped to a SWC service port with DiagnosticEnableConditionNeeds.			
swcFlatSer viceDepen dency	SwcServiceDep endency	01	ref	Reference to a SwcServiceDependencyType that links ServiceNeeds to SWC service ports. This reference can be used in early stages of the development in order to identify the SwcServiceDependency without a full System Context.			
swcServic eDepende ncyInSyste m	SwcServiceDep endency	01	iref	Instance reference to a SwcServiceDependency that links ServiceNeeds to SWC service ports.			

Table 6.51: DiagnosticEnableConditionPortMapping



### 6.8.9 DiagnosticStorageCondition to Port Mapping

[TPS\_DEXT\_03019] Semantics of DiagnosticStorageConditionPortMapping [A DiagnosticStorageConditionPortMapping defines which SWC service port(s) have to be connected to which DiagnosticStorageCondition. This is realized by defining a DiagnosticStorageConditionPortMapping referencing a DiagnosticStorageCondition and an instance of SwcServiceDependency. ] (RS\_DEXT\_00027, RS\_DEXT\_00052)

If such an instance is not yet available, an ordinary reference to SwcServiceDependency can be given alternatively (i.e. without specifying a certain instance).

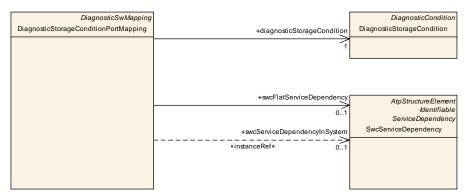


Figure 6.21: DiagnosticStorageConditionPortMapping

Class	DiagnosticStorageConditionPortMapping							
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticMapping				
Note	DiagnosticStorage	Defines to which SWC service ports with DiagnosticStorageConditionNeeds the DiagnosticStorageCondition is mapped.						
Base	Tags: atp.recommendedPackage=DiagnosticMappings  ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, DiagnosticSwMapping, Identifiable, MultilanguageReferrable, Packageable Element, Referrable							
Attribute	Type	Mul.	Kind	Note				
diagnostic StorageCo ndition	DiagnosticStora geCondition	1	ref	Reference to the StorageCondition which is mapped to a SWC service port with DiagnosticStorageConditionNeeds.				
swcFlatSer viceDepen dency	SwcServiceDep endency	01	ref	Reference to a SwcServiceDependencyType that links ServiceNeeds to SWC service ports.				
swcServic eDepende ncyInSyste m	SwcServiceDep endency	01	iref	Instance reference to a SwcServiceDependency that links ServiceNeeds to SWC service ports.				

Table 6.52: DiagnosticStorageConditionPortMapping



### 6.8.10 Provided Data Mapping

[TPS\_DEXT\_03020] Semantics of DiagnosticDemProvidedDataMapping [ The meta-class DiagnosticDemProvidedDataMapping does not seem to fulfill the condition for representing a mapping class because it only has one reference to a DiagnosticDataElement in the role dataElement.

However, the specific nature of this mapping is that the second element (the DiagnosticDemProvidedDataMapping.dataProvider) that is supposed to take place in the mapping cannot precisely be modeled as a single meta-class.

Therefore, there is no better way than to model the <code>DiagnosticDemProvided-DataMapping.dataProvider</code> by a <code>NameToken</code>. Of course, the collection of possible values of this attribute need to be agreed upon up-front, potentially on a project-specific basis.

The semantics of this mapping is to further qualify the access to the Diagnos-ticDataElement referenced in the role dataElement from within the Dem. | (RS DEXT 00043, RS DEXT 00052)

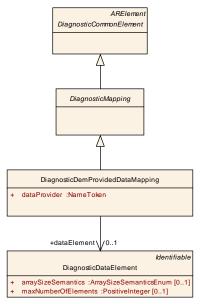


Figure 6.22: Modeling of the DiagnosticDemProvidedDataMapping

Class	DiagnosticDemP	DiagnosticDemProvidedDataMapping					
Package	M2::AUTOSARTemplates::DiagnosticExtract::ServiceMapping						
Note	DiagnsoticDataEle	ement ir	the Der	e the nature of a data access for a m.  =DiagnosticServiceMappings			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable						
Attribute	Туре	Mul.	Kind	Note			



dataEleme nt	DiagnosticData Element	01	ref	This represents the DiagnosticDataElement for which the access is further qualified by the DiagnosticDemProvidedDataMapping.
dataProvid er	NameToken	1	attr	This represents the ability to further specify the access within the Dem.

Table 6.53: DiagnosticDemProvidedDataMapping

## 6.9 DiagnosticOperationCycle

**[TPS\_DEXT\_01087] Semantics of DiagnosticOperationCycle** [ Different types of DiagnosticOperationCycles are supported and defined by the type attribute, e.g. time between powering up and powering down the ECU or between ignition on and ignition off. | (RS\_DEXT\_00054)

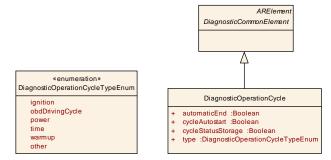


Figure 6.23: Modeling of DiagnosticOperationCycle

Class	DiagnosticOpera	tionCy	cle				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticOperationCycle			
Note	Definition of an operation cycle that is the base of the event qualifying and for Dem scheduling.						
				=DiagnosticOperationCycles			
Base	-	•		eElement, DiagnosticCommonElement, Identifiable, eableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note			
automaticE nd	Boolean	1	attr	If set to true the driving cycle shall automatically end at either Dem_Shutdown() or Dem_Init().			
cycleAutos tart	Boolean	1	attr	This attribute defines if the operation cycles is automatically re-started during Dem_PreInit.			
cycleStatu sStorage	Boolean	1	attr	Defines if the operation cycle state is available over the power cycle (stored non-volatile) or not.  true: the operation cycle state is stored non-volatile false: the operation cycle state is only stored volatile			
type	DiagnosticOper ationCycleType Enum	1	attr	Operation cycles types for the Dem to be supported by cycle-state APIs.			



Table 6.54: DiagnosticOperationCycle

Enumeration	DiagnosticOperationCycleTypeEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticOperationCycle
Note	Type of an operation cycle.
Literal	Description
ignition	Ignition ON / OFF cycle
	Tags: atp.EnumerationValue=0
obdDriving Cycle	OBD Driving cycle
-	Tags: atp.EnumerationValue=1
other	further operation cycle
	Tags: atp.EnumerationValue=2
power	Power ON / OFF cycle
	Tags: atp.EnumerationValue=3
time	Time based operation cycle
	Tags: atp.EnumerationValue=4
warmup	OBD Warm up cycle
	Tags: atp.EnumerationValue=5

Table 6.55: DiagnosticOperationCycleTypeEnum

# 6.10 DiagnosticAging

**[TPS\_DEXT\_03021] Aging** [ It is possible to remove a specific event from the event memory, if its fault conditions are not fulfilled for a certain period of time. This process is called as aging or unlearning.

This semantics is formalized by means of the meta-class <code>DiagnosticAging.</code> <code>J (RS\_DEXT\_00055)</code>



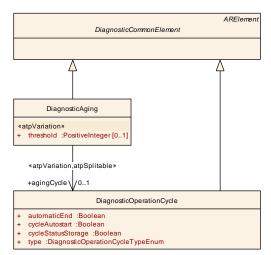


Figure 6.24: Modeling of DiagnosticAging

Class	DiagnosticAging					
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticAging		
Note	Defines the aging	algorith	m.			
	Tags: atp.recomm	nendedF	ackage:	=DiagnosticAgings		
Base	1	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note		
agingCycle	DiagnosticOper ationCycle	01	ref	This represents the applicable aging cycle.		
				Stereotypes: atpSplitable; atpVariation		
				<b>Tags:</b> atp.Splitkey=agingCycle, variationPoint. ShortLabel		
				vh.latestBindingTime=preCompileTime		
threshold	PositiveInteger	01	attr	Number of aging cycles needed to unlearn/delete the event.		
				Stereotypes: atpVariation		
				Tags: vh.latestBindingTime=preCompileTime		

Table 6.56: DiagnosticAging

# 6.11 DiagnosticIndicator

[TPS\_DEXT\_03022] Different kinds of DiagnosticIndicators | Different types of Indicators can be defined with the DiagnosticIndicator element. For this, the attribute DiagnosticIndicator.type shall be used. |(RS\_DEXT\_00056)



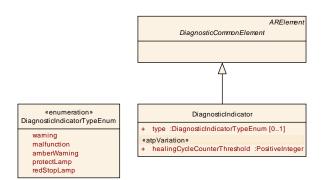


Figure 6.25: Modeling of DiagnosticIndicator

Class	DiagnosticIndica	DiagnosticIndicator			
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticIndicator	
Note	Definition of an inc	dicator.			
	Tags: atp.recomm	nendedF	ackage:	=DiagnosticIndicators	
Base	-			eElement, DiagnosticCommonElement, Identifiable, eableElement, Referrable	
Attribute	Туре	Mul.	Kind	Note	
healingCyc leCounterT hreshold	PositiveInteger	1	attr	This attribute defines the number of healing cycles for the WarningIndicatorOffCriteria	
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime	
type	DiagnosticIndic atorTypeEnum	01	attr	Defines the type of the indicator.	

**Table 6.57: DiagnosticIndicator** 

Enumeration	DiagnosticIndicatorTypeEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticIndicator
Note	Type of an indicator.
Literal	Description
amberWarn- ing	Amber Warning Lamp
	Tags: atp.EnumerationValue=0
malfunction	Malfunction Indicator Lamp
	Tags: atp.EnumerationValue=1
protectLamp	Protect Lamp
	Tags: atp.EnumerationValue=2
redStopLamp	Red Stop Lamp
	Tags: atp.EnumerationValue=3
warning	Warning
	Tags: atp.EnumerationValue=4

Table 6.58: DiagnosticIndicatorTypeEnum



# 6.12 DiagnosticTestResult

«enumeration»

The meta-class <code>DiagnosticTestResult</code> allows for a formal definition of a diagnostic test result. The purpose of this meta-class is to support the reporting of latest test results back to a client. This is of special importance for the OBD service mode <code>0x06</code>, see chapter <code>5.6.5</code>.

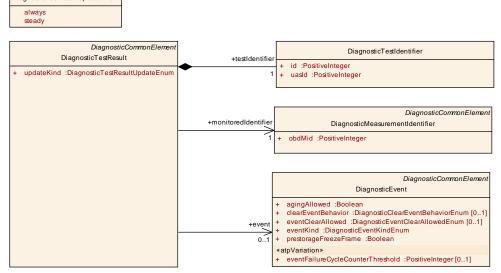


Figure 6.26: Modeling of DiagnosticTestResult

Class	DiagnosticTestResult				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticTestResult	
Note	This meta-class re	epresen	ts the ab	oility to define diagnostic test results.	
	Tags: atp.recomm	nendedF	ackage:	=DiagnosticTestResults	
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
event	DiagnosticEvent	01	ref	This attribute represents the diagnostic event that is related to the diagnostic test result.	
monitoredl dentifier	DiagnosticMeas urementIdentifie r	1	ref	This attribute represents the related diagnostic monitored identifier.	
testIdentifi er	DiagnosticTestI dentifier	1	aggr	This attribute represents the applicable test identifier.	
updateKin d	DiagnosticTest ResultUpdateEn um	1	attr	This attribute controls the update behavior of the enclosing DiagnosticTestResult.	

Table 6.59: DiagnosticTestResult

Enumeration	DiagnosticTestResultUpdateEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTestResult



Note	This meta-class represents the ability to define the update behavior of a DiagnosticTestResult.
Literal	Description
always	Any DTR result reported by the monitor is used by the Dem.  Tags: atp.EnumerationValue=0
steady	The Dem accepts reported DTRs only when the configured debouncing
,	mechanism is stable at the FAIL or PASS limit.
	Tags: atp.EnumerationValue=1

Table 6.60: DiagnosticTestResultUpdateEnum

Class	DiagnosticTestIdentifier					
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticTestResult		
Note	This meta-class re	This meta-class represents the ability to create a diagnostic test identifier.				
Base	ARObject	ARObject				
Attribute	Туре	Mul.	Kind	Note		
id	PositiveInteger	1	attr	This represents the numerical id associated with the diagnostic test identifier.		
uasld	PositiveInteger	1	attr	This represents the unit and scaling ld of the diagnostic test result.		

Table 6.61: DiagnosticTestIdentifier

Class	DiagnosticMeasurementIdentifier					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTestResult					
Note	This meta-class re	present	ts the ab	oility to describe a measurement identifier.		
Base	Tags: atp.recommendedPackage=DiagnosticMeasurementIdentifiers  ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Type Mul. Kind Note				
obdMid	PositiveInteger	1	attr	This represents the numerical measurement Id		

**Table 6.62: DiagnosticMeasurementIdentifier** 

## 6.13 OBD-related aspects of Dem Configuration

The support for OBD-related [18] modeling requires the addition of some pretty global (i.e. on the level of an entire ECU) attribute that could be added to the EcuInstance.

However, this would not align with the idea of a decentralized configuration of the diagnostic stack where information is added at a point in time where an actual <code>EcuIn-stance</code> is not yet available.



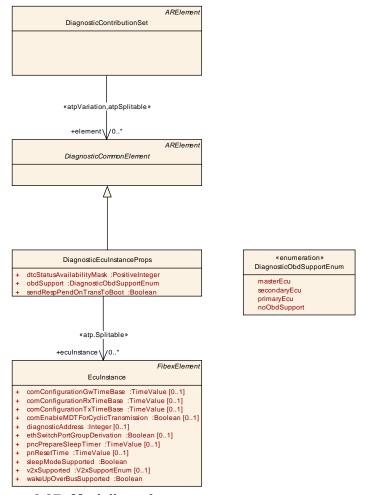


Figure 6.27: Modeling of DiagnosticEcuInstanceProps

Therefore, the attributes applying for the ECU-level are added to the meta-class DiagnosticEcuInstanceProps.

[TPS\_DEXT\_01122] Indication whether a EcuInstance supports OBD [ The attribute DiagnosticEcuInstanceProps.obdSupport is taken to define whether or not a given EcuInstance shall support OBD and in which way OBD shall be supported on this Ecu. | (RS DEXT 00058)

Class	DiagnosticEculns	stanceF	Props				
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticContribution						
Note	This meta-class represents the ability to model properties that are specific for a given Eculnstance but on the other hand represent purely diagnostic-related information.						
	In the spirit of decentralized configuration it is therefore possible to specify the diagnostic-related information related to a given EcuInstance even if the EcuInstance does not yet exist.						
	Tags: atp.recommendedPackage=DiagnosticEcuInstancePropss						
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable,						
	MultilanguageReferrable, PackageableElement, Referrable						
Attribute	Туре	Mul.	Kind	Note			



dtcStatusA vailabilityM ask	PositiveInteger	1	attr	This attribute contains the value of the DTC status availability mask.
eculnstanc e	Eculnstance	*	ref	This represents the actual EcuInstance to which the information conatined in the DiagnosticEcuInstance contribute.  Tags: atp.Splitkey=ecuInstance
obdSuppor t	DiagnosticObdS upportEnum	1	attr	This attribute is used to specify the role (if applicable) in which the DiagnosticEcuInstance supports OBD.
sendResp PendOnTr ansToBoot	Boolean	1	attr	The purpose of this attribute is to define whether or not the ECU should send a NRC 0x78 (response pending) before transitioning to the bootloader (in this case the attribute shall be set to "true") or if the transition shall be initiated without sending NRC 0x78 (in this case the attribute shall be set to "false").

Table 6.63: DiagnosticEcuInstanceProps

Enumeration	DiagnosticObdSupportEnum						
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticContribution						
Note	This meta-class represents the ability to model the roles in which a participation in OBD is foreseen. At the moment, this applies exclusively to the Dem. However, future extension of the Dcm may require this setting as well.						
Literal	Description						
masterEcu	This represent the role "master ECU".						
	Tags: atp.EnumerationValue=0						
noObdSup- port	This represents the ability to explicitly specify that no participation in OBD is foreseen.						
port	Toroscori.						
	Tags: atp.EnumerationValue=1						
primaryEcu	This represents the role "primary ECU".						
	Tags: atp.EnumerationValue=2						
secondary Ecu	This represents the role "secondary ECU".						
	Tags: atp.EnumerationValue=3						

Table 6.64: DiagnosticObdSupportEnum



Class	DiagnosticTroub	leCode(	Obd				
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode						
Note	This element is us	This element is used to define OBD-relevant DTCs.					
	Tags: atp.recomm	Tags: atp.recommendedPackage=DiagnosticTroubleCodes					
Base				eElement, DiagnosticCommonElement, Diagnostic aguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note			
considerPt oStatus	Boolean	1	attr	This attribute describes the affection of the event by the Dem PTO handling.			
				True: the event is affected by the Dem PTO handling. False: the event is not affected by the Dem PTO handling.			
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime			
dtcProps	DiagnosticTroub leCodeProps	01	ref	Defined properties associated with the DemDTC.			
eventObd Readiness Group	NameToken	01	attr	This attribute specifies the Event OBD Readiness group for PID \$01 and PID \$41 computation. This attribute is only applicable for emission-related ECUs.			
obdDTCVa lue	PositiveInteger	01	attr	Unique Diagnostic Trouble Code value for OBD.  Stereotypes: atpVariation			
				Tags: vh.latestBindingTime=preCompileTime			

Table 6.65: DiagnosticTroubleCodeObd

Another OBD-related feature of the Dem is the support for the computation of the *In-Use-Monitor Performance Ratio* (IUMPR). It is possible to define a so-called Diagnostic Iumpr Group that encapsulates the computation of a group of Diagnostic Events.

The modeling of the DiagnosticIumprDenominatorGroup supports the configuration of additional environmental conditions that shall be applied on the incrementation of the IUMPR denominator.

From the modeling point of view, neither DiagnosticIumprGroup nor DiagnosticIumprDenominatorGroup reference the associated DiagnosticEvent directly.

But since the <code>DiagnosticIumpr</code> referenced in the role <code>iumpr</code> in turn references at most one <code>DiagnosticEvent</code> the resulting relation effectively boils down to <code>DiagnosticIumprGroup</code> and <code>DiagnosticIumprDenominatorGroup</code> being able to precisely define the collection of affected <code>DiagnosticEvents</code>.

[TPS\_DEXT\_01110] Standardized values of DiagnosticIumprGroup.category | The semantics of the DiagnosticIumprGroup are identified by means of the attribute DiagnosticIumprGroup.category. Standardized values of DiagnosticIumprGroup.category are:



- IUMPR\_DENOMINATOR\_NONE
- IUMPR\_DENOMINATOR\_PHYSICAL\_API
- IUMPR\_DENOMINATOR\_COLDSTART
- IUMPR\_DENOMINATOR\_EVAP
- IUMPR\_DENOMINATOR\_500\_MILES

### (RS\_DEXT\_00078)

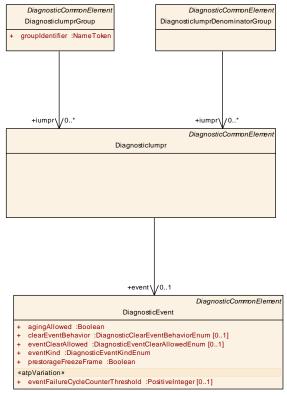


Figure 6.28: Modeling of IUMPR handling for diagnostic events

Class	Diagnosticlumpr						
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticEvent			
Note	This meta-class represents he ability to model the in-us monitor performance ratio.  The latter computes to the number of times a fault could have been found divided by the number of times the vehicle conditions have been properly fulfilled.  Tags: atp.recommendedPackage=Diagnosticlumprs						
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable						
Attribute	Туре	Type Mul. Kind Note					
event	DiagnosticEvent	01	ref	This reference represents the DiagnosticEvent that corresoponds to the IUMPR computation.			

Table 6.66: Diagnosticlumpr



Class	Diagnosticlumpr	Group				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticEvent		
Note	This meta-class re	present	ts the ab	oility to model a IUMPR groups.		
	Tags: atp.recomm	nendedF	Package:	=DiagnosticlumprGroups		
Base		ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note		
groupIdenti fier	NameToken	1	attr	This attribute shall be taken to define an identifier for the IUMPR group.		
				Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
iumpr	Diagnosticlumpr	*	ref	This reference collects Diagnosticlumpr to a DiagnosticlumprGroup.		

Table 6.67: DiagnosticlumprGroup

Class	DiagnosticlumprDenominatorGroup					
Package	M2::AUTOSARTe	mplates	::Diagno	osticExtract::Dem::DiagnosticEvent		
Note	This meta-class re	epresent	ts the ab	oility to model a IUMPR denominator groups.		
Base	ARElement, ARO	Tags: atp.recommendedPackage=DiagnosticlumprDenominatorGroup  ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable,  MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре					
iumpr	Diagnosticlumpr	*	ref	This reference collects Diagnosticlumpr to a		
				DiagnosticlumprDenominatorGroup.		

Table 6.68: DiagnosticlumprDenominatorGroup

#### 6.13.1 Dem Configuration for OBD-II

The modeling of DTCs for the OBD-II use case is pretty similar to the modeling of DTCs for the UDS use case. In other words, <code>DiagnosticTroubleCodeObd</code> references the <code>DiagnosticTroubleCodeProps</code> in the same way that this meta-class is referenced from <code>DiagnosticTroubleCodeUds</code>.

Please note that the meta-class DiagnosticTroubleCodeObd is only applicable for the implementation of OBD-II.

[TPS\_DEXT\_01111] Legislative freeze frame for the OBD-II case [ For the implementation of OBD-II, the legislative freeze frame is obtained from running the OBD Mode 0x02 service, modeled by means of meta-class <code>DiagnosticPowertrain-FreezeFrame.</code> ]()



[constr\_1459] Existence of attributes of DiagnosticTroubleCodeProps [ The following list of attributes of meta-class DiagnosticTroubleCodeProps are not required and therefore shall be ignored if the DiagnosticTroubleCodeProps is referenced in the role dtcProps from a DiagnosticTroubleCodeObd:

- freezeFrame
- freezeFrameContent
- memoryDestination
- extendedDataRecord
- aging

]()



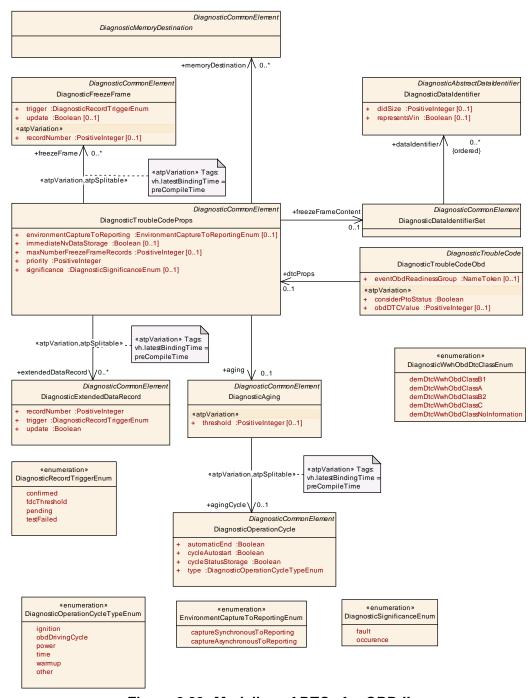


Figure 6.29: Modeling of DTCs for OBD-II

#### 6.13.2 Dem Configuration for WWH-OBD

[TPS\_DEXT\_01112] Definition of a diagnostic trouble code for the implementation of WWH-OBD [ The definition of a diagnostic trouble code for the implementation of WWH-OBD implies the existence of a DiagnosticTroubleCodeUds where attribute wwhObdDtcClass is set to any value other than demDtcWwhObdClassNoInformation. ]()



[TPS\_DEXT\_01093] Definition of legislative freeze frame for WWWH-OBD [ The legislative WWH-OBD freeze frame is identified by the reference <code>DiagnosticTroubleCodeProps.freezeFrame</code> where attribute <code>recordNumber</code> is set to the value 0.

Optionally, the existence of a reference in the role <code>DiagnosticTroubleCode-Props.extendedDataRecord</code> with attribute <code>recordNumber</code> set to the value 90 is supported. |()

## 7 Functional Inhibition

### 7.1 Introduction

Conceptually, the Fim [14] is closely related to the Dem since it handles the relation of functionality (expressed via the so-called *function identifier*, or in short-form: *Fid*) and linked <code>DiagnosticEvents</code>.

#### 7.2 Alias Events

The close relation of Fim and Dem may have consequences in a distributed configuration: it may not be possible to configure the Fim before the Dem is configured because model elements (especially <code>DiagnosticEvent</code>) from the Dem configuration are required to model the Fim configuration.

This leads to the definition of <code>DiagnosticFimAliasEvents</code> that can be taken to model the Fim configuration even of no Dem configuration exists or if configurations with different Dem event names shall be considered for the final projects.

Please note, however, that the definition of <code>DiagnosticFimAliasEvents</code> is not mandatory for the configuration of the Fim. It is possible to directly take the existence of <code>DiagnosticEvents</code> into account and thereby bypass the definition of <code>DiagnosticEvents</code>.

Class	DiagnosticFimAliasEvent						
Package	M2::AUTOSARTe	mplates	::Diagno	osticExtract::Fim			
Note	This meta-class is used to represent a given event semantics. However, the name of the actual events used in a specific project is sometimes not defined yet, not known or not in the responsibility of the author. Therefore, the DiagnosticFimAliasEvent has a reference to the actual DiagnosticEvent and by this the final connection is created.  Tags: atp.recommendedPackage=DiagnosticFimAliasEvents						
Base	ARElement, ARObject, CollectableElement, DiagnosticAbstractAliasEvent, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable						
Attribute	Туре	Type Mul. Kind Note					
_	_	_	_	_			

Table 7.1: DiagnosticFimAliasEvent



Class	DiagnosticAbstractAliasEvent (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent			
Note	This meta-class represents an abstract base class for all diagnostic alias events.			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Mul.	Kind	Note
_	_	_	_	_

Table 7.2: DiagnosticAbstractAliasEvent

### 7.3 Function Identifier

The support of the Fim as an extension of the Dem meta-model requires the modeling of additional meta-classes to describe the various ways of possible mappings between <code>DiagnosticEvents</code> and Fids (or, in terms of the meta-model, <code>DiagnosticFunc-tionIdentifier</code>).

[TPS\_DEXT\_01121] Semantics of DiagnosticFunctionIdentifier [ A DiagnosticFunctionIdentifier can be inhibited by different sources, i.e. in different ways:

**Event** This corresponds to the DiagnosticEvent, as defined in chapter 6.2.

**Fim Event Group** This represents a group of events that is defined in the scope of the Fim (within the Fim terminology, this is also known as a *summary event*). In the meta-model, a *Fim Event Group* is represented by means of meta-class <code>DiagnosticFimEventGroup</code>.

To emphasize the locality the corresponding meta-class has been named DiagnosticFimEventGroup. DiagnosticFimEventGroup is able to reference 0..\* DiagnosticEvents in the role event.

This way, the membership of <code>DiagnosticEvents</code> in the hypothetical group of events formed by the <code>DiagnosticFimEventGroup</code> is expressed.

(RS DEXT 00060)

Class	DiagnosticFunctionIdentifier					
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Fim		
Note	This meta-class represents a diagnostic function identifier (a.k.a. FID).					
	Tags: atp.recommendedPackage=DiagnosticFunctionIdentifiers					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Type Mul. Kind Note				
_	_	_	_	-		

**Table 7.3: DiagnosticFunctionIdentifier** 



Finally all sources will refer to Diagnostic Events.

## 7.4 Mapping between Inhibition Source and Diagnostic Event

The configuration of the Fim requires the clarification of the relation between a particular inhibition source (modeled as DiagnosticFunctionInhibitSource) and one or many diagnostic events (modeled as DiagnosticEvent).

The easiest way to provide this information is the usage of the <code>DiagnosticIn-hibitSourceEventMapping</code> that is able to create an association between a <code>DiagnosticInhibitSourceEventMapping</code> on the one hand and either a <code>DiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDiagnosticEventOralDia</code>

This is only possible if the DiagnosticEvents referenced by the DiagnosticIn-hibitSourceEventMapping already exist. This existence is subject to the development workflow and may or may not apply. For more details, please refer to Figure 7.1.

Class	DiagnosticInhibitSourceEventMapping				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Fim	
Note	This meta-class represents the ability to map a DiagnosticFunctionInhibitSource directly to alternatively one DiagnosticEvent or one DiagnosticFimSummaryEvent. This model element shall be used if the approach via the alias events is not applicable, i.e. when diagnostic events defined by the Dem are already available at the time the Fim configuration within the diagnostic extract is created.  Tags: atp.recommendedPackage=DiagnosticInhibitSourceEventMappings				
Base				eElement, DiagnosticCommonElement, Diagnostic geReferrable, PackageableElement, Referrable	
Attribute	Туре	Type Mul. Kind Note			
diagnostic Event	DiagnosticEvent	01	ref	This represents the reference to the diagnostic event.	
eventGrou p	DiagnosticFimE 01 ref This represents the reference to the event group ventGroup				
inhibitionS ource	DiagnosticFunct ionInhibitSource	01	ref	This represents the reference to the inhibition source.	

Table 7.4: DiagnosticInhibitSourceEventMapping

## 7.5 Alias Event Mapping

[TPS\_DEXT\_01095] Definition of "alias" diagnostic event for the creation of a Fim configuration in the diagnostic extract \[ \] A pre-configuration of the Fim function inhibition can be created on the basis of the following meta-classes:

**DiagnosticFimAliasEventMapping** in this case the definition of "alias" diagnostic event corresponds to a single DiagnosticEvent



**DiagnosticFimAliasEventGroupMapping** in this case the definition of a group of "alias" diagnostic events corresponds to a group of single <code>DiagnosticEvents</code>

(RS\_DEXT\_00061, RS\_DEXT\_00062)

Class	DiagnosticFimAl	DiagnosticFimAliasEventMapping				
Package	M2::AUTOSARTe	mplates	::Diagno	osticExtract::Dem::DiagnosticEvent		
Note	This meta-class represents the ability to model the mapping of a DiagnosticEvent to a DiagnosticAliasEvent. By this means the "preliminary" modeling by way of a DiagnosticAliasEvent is further substantiated.  Tags: atp.recommendedPackage=DiagnosticFimEventMappings					
Base				eElement, DiagnosticCommonElement, Diagnostic geReferrable, PackageableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note		
actualEven t	DiagnosticEvent	01	ref	This represents the reference to the actual diagnostic event.		
aliasEvent	DiagnosticFimAl iasEvent	01	ref	This represents the reference to the alias event.		

Table 7.5: DiagnosticFimAliasEventMapping

Class	DiagnosticFimAliasEventGroup				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Fim	
Note	This meta-class represents the ability to define an alias for a Fim summarized event.  This alias can be used in early phases of the configuration process until a further refinement is possible.  Tags: atp.recommendedPackage=DiagnosticFimAliasEventGroups				
Base	ARElement, ARObject, CollectableElement, DiagnosticAbstractAliasEvent, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable				
Attribute	Туре	Mul.	Kind	Note	
groupedAli asEvent	DiagnosticFimAl iasEvent	*	ref	By means of this reference the grouping of DiagnosticAliasEvents within the DiagnosticFimSummaryEvent can be specified.	

Table 7.6: DiagnosticFimAliasEventGroup

Class	DiagnosticFimAliasEventGroupMapping					
Package	M2::AUTOSARTemplates::DiagnosticExtract::Fim					
Note	This meta-class represents the ability to map a DiagnosticFimEventGroup to a DiagnosticFimAliasEventGroup. By this means the "preliminary" modeling by way of a DiagnosticFimAliasEventGroup is further substantiated.  Tags: atp.recommendedPackage=DiagnosticFimAliasEventGroupMappings					
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		



actualEven	DiagnosticFimE ventGroup	01	ref	This represents the reference to the actual summary event.
aliasEvent	DiagnosticFimAl iasEventGroup	01	ref	This represents the reference to the alias summary event.

Table 7.7: DiagnosticFimAliasEventGroupMapping

Ultimately, the modeling approach for the Fim starts at the definition of the concept of a function itself by means of the meta-class <code>DiagnosticFunctionIdentifier</code>.



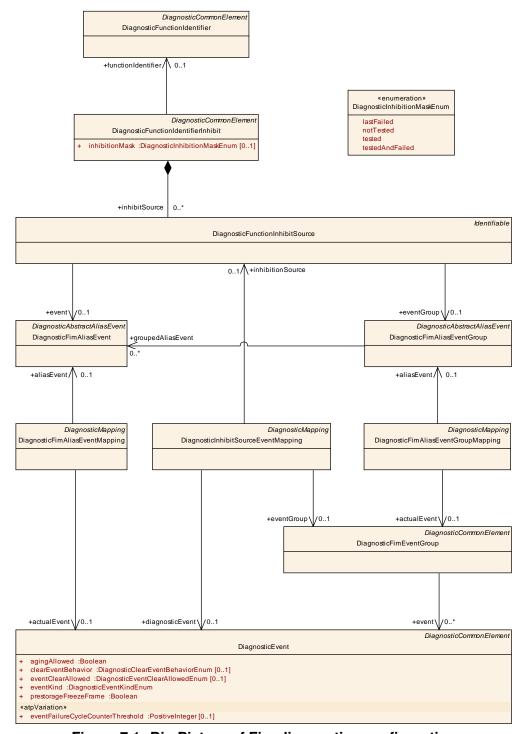


Figure 7.1: Big Picture of Fim diagnostics configuration



Class	DiagnosticFunct	ionlden	tifierInh	ibit
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Fim
Note	identifier within the	Fim co	onfigurat	
	Tags: atp.recomm	nendedF	ackage:	=DiagnosticFunctionIdentifierInhibits
Base				eElement, DiagnosticCommonElement, Identifiable, eableElement, Referrable
Attribute	Туре	Mul.	Kind	Note
functionIde ntifier	DiagnosticFunct ionIdentifier	01	ref	This represents the corresponding function identifier.
inhibitSour ce	DiagnosticFunct ionInhibitSource	*	aggr	This represents a collection of DiagnosticFunctionInhibitSource that contribute to the configuration of the enclosing DiagnosticFunctionIdentiferInhibit.
inhibitionM ask	DiagnosticInhibi tionMaskEnum	01	attr	This represents the value of the inhibition mask behavior.

**Table 7.8: DiagnosticFunctionIdentifierInhibit** 

Class	DiagnosticFunctionInhibitSource				
Package	M2::AUTOSARTe	mplates	::Diagno	osticExtract::Fim	
Note	This meta-class represents the ability to define an inhibition source in the context of the Fim configuration.				
Base	ARObject, Identific	able, Mu	ıltilangu	ageReferrable, Referrable	
Attribute	Туре	Type Mul. Kind Note			
event	DiagnosticFimAl iasEvent	01	ref	This represents the alias event appllicable for the referencing inhibition source.	
eventGrou p	DiagnosticFimAl iasEventGroup	01	ref	This represents the event group applicable for the referencing inhibition source.	

Table 7.9: DiagnosticFunctionInhibitSource

Enumeration	DiagnosticInhibitionMaskEnum						
Package	M2::AUTOSARTemplates::DiagnosticExtract::Fim						
Note	This meta-class represents the ability to define different kinds of inhibition mask behavior.						
Literal	Description						
lastFailed	This represents the inhibition mask behavior "last failed".						
	Tags: atp.EnumerationValue=0						
notTested	This represents the inhibition mask behavior "not tested".						
	Tags: atp.EnumerationValue=1						
tested	This represents the inhibition mask behavior "tested".						
	Tags: atp.EnumerationValue=3						
testedAnd Failed	This represents the inhibition mask behavior "tested and failed".						
	Tags: atp.EnumerationValue=2						



#### Table 7.10: DiagnosticInhibitionMaskEnum

[TPS\_DEXT\_01096] Semantics of DiagnosticFunctionInhibitSource [ The function inhibition itself is modeled by means of a different meta-class named DiagnosticFunctionIdentifierInhibit. This meta-class, in turn, references the DiagnosticFunctionIdentifier and it also aggregates 0..\* instances of a further meta-class named DiagnosticFunctionInhibitSource.

DiagnosticFunctionInhibitSource inherits from Identifiable in order to be able to utilize attributes like desc, adminData, and introduction for the purpose of textually explaining the reason for defining a certain inhibit source. 

[RS DEXT 00060]

[TPS\_DEXT\_01097] Standardized value of StructuredReq.category for the modeling of DiagnosticFunctionInhibitSource [ If DiagnosticFunctionInhibitSource.introduction.structuredReq is used to document the reason for a specific function inhibition then DiagnosticFunctionInhibitSource.introduction.structuredReq.category shall be set to the value InhibitReason. | (RS\_DEXT\_00060)

[constr\_1453] References from DiagnosticFunctionInhibitSource | Each DiagnosticFunctionInhibitSource may either reference one of the following meta-classes in their respective roles:

- DiagnosticFimAliasEventMapping in the role event
- DiagnosticFimAliasEventGroupMapping in the role eventGroup

]()

Class	DiagnosticFimEv	DiagnosticFimEventGroup				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Fim		
Note	This meta-class represents the ability to model a Fim event group, also known as a summary event in Fim terminology. This represents a group of single diagnostic events.  Tags: atp.recommendedPackage=DiagnosticFimEventGroups					
Base				eElement, DiagnosticCommonElement, Identifiable, eableElement, Referrable		
Attribute	Туре	Type Mul. Kind Note				
event	DiagnosticEvent	*	ref	This reference represents the way of grouping diagnostic events into a summary event in the context of the Fim.		

Table 7.11: DiagnosticFimEventGroup

[TPS\_DEXT\_01098] Semantics of attribute DiagnosticFunctionInhibit-Source.event [If the reference DiagnosticFunctionInhibitSource.event



exists this means the inhibition applies for a single <code>DiagnosticEvent</code> ] (RS DEXT 00060, RS DEXT 00061)

[TPS\_DEXT\_01099] Semantics of attribute DiagnosticFunctionInhibit—Source.eventGroup | If the reference DiagnosticFunctionInhibit—Source.eventGroup exists this means that the inhibition effectively applies for a group of DiagnosticEvents where the actual grouping is defined in the scope of the Fim. | (RS\_DEXT\_00060, RS\_DEXT\_00061)

[TPS\_DEXT\_01100] Consequence of the existence of DiagnosticFimAliasEventMapping [The references from meta-class DiagnosticFimAliasEventMapping in the roles actualEvent and aliasEvent do not necessarily have to exist at the same time. The following rules apply:

- Only actualEvent exists: In this case there is no DiagnosticFimAliasEvent available and the actual DiagnosticEvent can directly be taken for creating the Fim configuration.
- Only aliasEvent exists: In this case the configuration is considered incomplete and only defines the intended semantics from the point of view of a pre-configuration of the Fim.
- Both actualEvent and aliasEvent exist: In this case it is obvious that the configuration has undergone a pre-configuration step in which a DiagnosticFi-mAliasEvent has been used. However, since the DiagnosticEvent in the role actualEvent exists the Diagnostic Extract is considered complete with respect to this aspect of the Fim configuration.

](RS\_DEXT\_00060, RS\_DEXT\_00061)



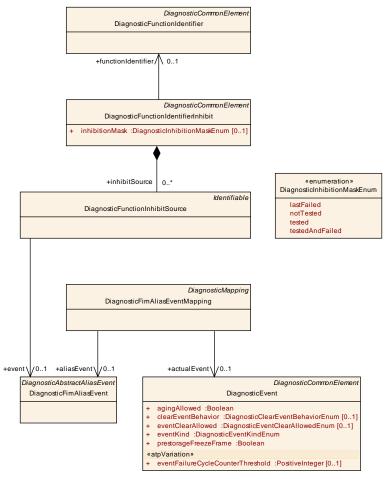


Figure 7.2: Inhibition of events in Fim for diagnostics configuration

[TPS\_DEXT\_01101] Consequence of the existence of DiagnosticFimAliasEventGroupMapping [ The references from meta-class DiagnosticFimAliasEventGroupMapping in the roles actualEvent and aliasEvent do not necessarily have to exist at the same time. The following rules apply:

- Only actualEvent exists: In this case there is no <code>DiagnosticFimAliasEvent-Group</code> available and the actual <code>DiagnosticFimEventGroup</code> can directly be taken for creating the Fim configuration.
- Only aliasEvent exists: In this case the configuration is considered incomplete and only defines the intended semantics from the point of view of a pre-configuration of the Fim.
- Both actualEvent and aliasEvent exist: In this case it is obvious that the configuration has undergone a pre-configuration step in which a Diagnostic-FimAliasEventGroup has been used. However, since the Diagnostic-FimEventGroup in the role actualEvent exists the Diagnostic Extract is considered complete with respect to this aspect of the Fim configuration.

(RS DEXT 00060, RS DEXT 00061)



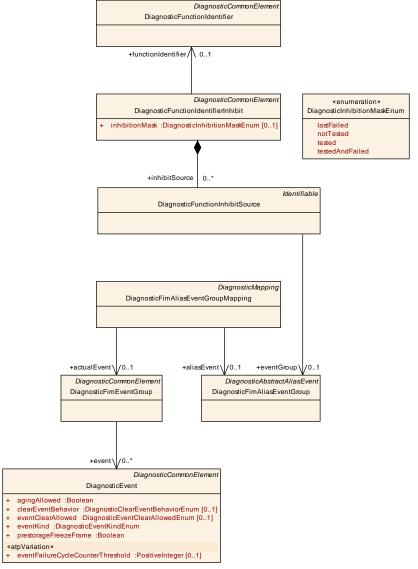


Figure 7.3: Inhibition of event groups in Fim for diagnostics configuration

# 7.6 Mapping of Function Identifiers to the corresponding Monitors

Beside the ability to model a function inhibition itself, it is equally important that this inhibition can be connected to the applicable monitors.

This relation can be expressed by means of the DiagnosticFimFunctionMapping. The details are sketched in Figure 7.4.

[TPS\_DEXT\_01102] Semantics of DiagnosticFimFunctionMapping [ The metaclass DiagnosticFimFunctionMapping represents the ability to map a DiagnosticFunctionIdentifier to a SwcServiceDependency that addresses function inhibition. ](RS\_DEXT\_00063)



[constr\_1454] DiagnosticFimFunctionMapping shall only reference a Swc-ServiceDependency that aggregates FunctionInhibitionNeeds [ A DiagnosticFimFunctionMapping shall only reference a SwcServiceDependency that aggregates FunctionInhibitionNeeds in the role serviceNeeds. | ()

The modeling of this mapping is closely related to the existing modeling of mappings that involve SwcServiceDependency in the context of the diagnostic extract.

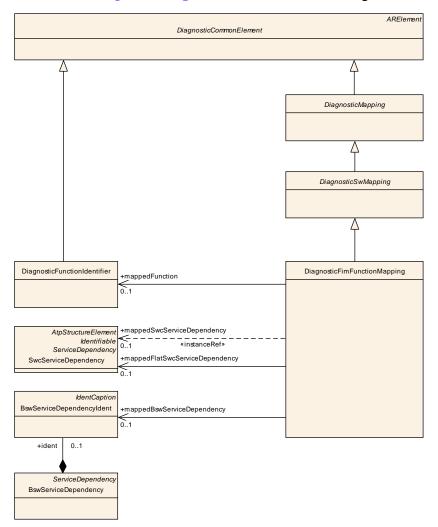


Figure 7.4: Mapping of function identifiers to the corresponding monitors

Class	DiagnosticFimFu	DiagnosticFimFunctionMapping					
Package	M2::AUTOSARTemplates::DiagnosticExtract::ServiceMapping						
Note	This meta-class represents the ability to define a mapping between a function identifier (FID) and the corresponding SwcServiceDependency in the application software resp. basic software.  Tags: atp.recommendedPackage=DiagnosticFimFunctionMappings						
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Diagnostic Mapping, DiagnosticSwMapping, Identifiable, MultilanguageReferrable, Packageable Element, Referrable						
Attribute	Туре	Mul.	Kind	Note			



mappedBs wServiceD ependency	BswServiceDep endencyldent	01	ref	This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.
mappedFla tSwcServic eDepende ncy	SwcServiceDep endency	01	ref	This represents the ability to refer to an AtomicSwComponentType that is available without the definition of how it will be embedded into the component hierarchy.
mappedFu nction	DiagnosticFunct ionIdentifier	01	ref	This represents the mapped FID.
mappedSw cServiceD ependency	SwcServiceDep endency	01	iref	This represents the ability to point into the component hierarchy (under possible consideration of the rootSoftwareComposition).

Table 7.12: DiagnosticFimFunctionMapping

Class	FunctionInhibition	FunctionInhibitionNeeds			
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::ServiceNeeds	
Note	Specifies the abstract needs on the configuration of the Function Inhibition Manager for one Function Identifier (FID). This class currently contains no attributes. Its name can be regarded as a symbol identifying the FID from the viewpoint of the component or module which owns this class.				
Base	ARObject, Identifiable, MultilanguageReferrable, Referrable, ServiceNeeds				
Attribute	Туре	Mul.	Kind	Note	
_	_	_	_	_	

Table 7.13: FunctionInhibitionNeeds

# 8 Diagnostics on J1939

#### 8.1 Introduction

Diagnostics on J1939 is to some extent similar to the "rest of the world". In other words, J1939 uses a Dcm and a Dem in a similar way as other communication networks do.

On the other hand, there are significant differences between J1939 and the "rest of the world" that justify the creation of a separate chapter that focuses entirely on how a diagnostic extract for J1939 shall look like.

That said, a support for Dcm-related model elements for J1939 is mainly happening in the domain of the AUTOSAR System Template [6] rather than in the scope of this document.

The actual configuration of services supported by the J1939Dcm is done by assigning DMx messages in the System Description.



The mapping of the J1939DcmIPdus to the diagnostic services of J1939 Dcm happens during derivation to EcuC.

In the following sections this document focuses on explaining the modeling with respect to the Dem.

## 8.2 Suspect Parameter Number

In the J1939 terminology, a *Suspect Parameter Number* represents a signal identifier. The numerical value of this signal identifier is stored in the attribute <code>Diagnos-ticJ1939Spn.spn</code>.

Conceptually, the *Suspect Parameter Number* binds to the SystemSignal, i.e. by attaching a *Suspect Parameter Number* to a SystemSignal a J1939 signal is created.

At the first sight, it may seem like a good idea to attach the spn attribute to the SystemSignal itself. However, this would place a very specific J1939-related model semantics in a very prominent place.

This just doesn't seem right and thanks to the existence of meta-class Diagnos-ticJ1939SpnMapping it is possible to "inject" the J1939 signal identifier into a SystemSignal without actually touching the SystemSignal.

[TPS\_DEXT\_01103] Semantics of meta-class DiagnosticJ1939SpnMapping [ The DiagnosticJ1939SpnMapping has the ability to associate a DiagnosticJ1939Spn with a SystemSignal. By this means it is possible to express that a given SystemSignal is taken to transport a J1939 Suspect Parameter Number. ] (RS DEXT 00064)

Please note that the modeling of the <code>DiagnosticJ1939SpnMapping</code> also implies that the same SPN can be sent by different <code>J1939NmNodes</code>. This ability is positively supported.

Class	DiagnosticJ1939Spn				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::J1939	
Note	This meta-class represents the ability to model a J1939 Suspect Parameter Number (SPN).  Tags: atp.recommendedPackage=DiagnosticJ1939Spns				
	<u> </u>				
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Type Mul. Kind Note				
spn	PositiveInteger	1	attr	This attribute represents the concrete numerical identification for the enclosing SPN.	

Table 8.1: DiagnosticJ1939Spn



## 8.3 J1939Dcm-related Modeling

The modeling of the J1939Dcm-related configuration within the Diagnostic Extract extends to the definition of a new attribute of meta-class J1939Cluster. The latter provides an attribute named networkId. For more information, please refer to [6].

The actual configuration of the services supported by J1939Dcm is done by assigning DMx messages in the System Description.

## 8.4 Dem-related Modeling

The modeling of Dem-related support for J1939 is centered around the Diagnos-ticJ1939Node. This meta-class literally acts as a sort of "inverted" hub for all the Dem-related model elements. The DiagnosticJ1939Node represents a specific function, or in terms of the J1939 terminology, a *Controller Application*.

This aspect is stressed in Figure 8.1.

Since, according to the J1939 concept, each *controller application* represents an independent entity in terms of network management, the following constraint applies:

[constr\_1455] Relation of DiagnosticJ1939Node to J1939NmNode [ Each J1939NmNode shall only be referenced in the role nmNode by a single DiagnosticJ1939Node. | ()

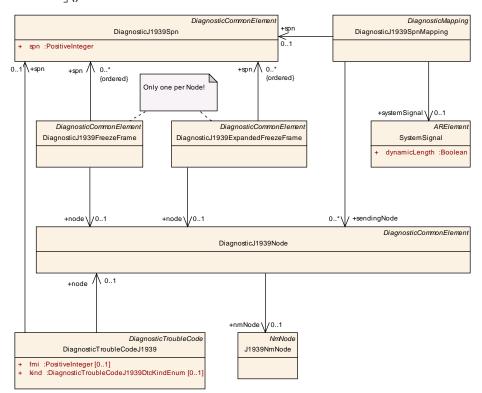


Figure 8.1: Big Picture of J1939 diagnostics configuration

<sup>&</sup>lt;sup>1</sup>Meaning: several meta-classes are referencing the DiagnosticJ1939Node.



J1939 supports the capturing of information similar to the definition of Diagnos-ticFreezeFrame, as explained in chapter 6.5. In the case of J1939, however, two different kinds of freeze frames can be defined:

[TPS\_DEXT\_01104] Difference between DiagnosticJ1939FreezeFrame and DiagnosticJ1939ExpandedFreezeFrame [ A DiagnosticJ1939FreezeFrame is transmitted via J1939 DM04 while a DiagnosticJ1939ExpandedFreezeFrame is transmitted via J1939 DM24/DM25. | (RS\_DEXT\_00065)

[TPS\_DEXT\_01105] Relation of DiagnosticJ1939Spn to DiagnosticJ1939FreezeFrame and DiagnosticJ1939ExpandedFreezeFrame [ It is possible that a given DiagnosticJ1939Spn is referenced by both a DiagnosticJ1939FreezeFrame and a DiagnosticJ1939ExpandedFreezeFrame.

In other words, the *Suspect Parameter Number* can be part of a normal freeze frame and, at the same time, an expanded freeze frame. | (RS DEXT 00065)

Class	DiagnosticJ1939FreezeFrame			
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::J1939
Note	This meta-class re	epresent	ts the ab	ility to model a J1939 Freeze Frame.
	Tags: atp.recommendedPackage=DiagnosticJ1939FreezeFrames			
Base				eElement, DiagnosticCommonElement, Identifiable,
	MultilanguageRef	errable,	Package	eableElement, Referrable
Attribute	Type	Mul.	Kind	Note
node	DiagnosticJ193	01	ref	This represents the DiagnosticJ1939Node to
	9Node			which the J1939 freeze frame is associated.
spn (or-	DiagnosticJ193	*	ref	This represents the collection of SPNs that make
dered)	9Spn			the J1939 Freeze Frame.

Table 8.2: DiagnosticJ1939FreezeFrame

Class	DiagnosticJ1939ExpandedFreezeFrame				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::J1939	
Note	This meta-class re	This meta-class represents the ability to model an expanded J1939 Freeze Frame.			
	Tags: atp.recomm	nendedF	ackage:	=DiagnosticJ1939ExpandedFreezeFrames	
Base	I	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Туре	Type Mul. Kind Note			
node	DiagnosticJ193 9Node	01	ref	This represents the DiagnosticJ1939Node to which the J1939 expanded freeze frame is associated.	
spn (or- dered)	DiagnosticJ193 9Spn	*	ref	This represents the collection of SPNs that make the expanded J1939 Freeze Frame.	

Table 8.3: DiagnosticJ1939ExpandedFreezeFrame

Enumeration DiagnosticTroubleCodeJ1939DtcKindEnum
---------------------------------------------------



Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode
Note	This meta-class represents the ability to further specify a J1939 DTC in terms of its semantics.
Literal	Description
serviceOnly	this represents a DTC that is only relevant for service in a garage, reported by e.g. DM53.
	Tags: atp.EnumerationValue=0
standard	This represents a non-specific DTC reported by e.g. DM1.
	Tags: atp.EnumerationValue=1

Table 8.4: DiagnosticTroubleCodeJ1939DtcKindEnum

**[TPS\_DEXT\_01106] Relation of Controller Application to SPN** [ It is technically possible that several *Controller Applications*, formally represented by the meta-class <code>DiagnosticJ1939Node</code>, can send the same *Suspect Parameter Number*.

In response to this specific characteristic of the J1939 approach, the multiplicity of the reference <code>DiagnosticJ1939SpnMapping.sendingNode</code> has been set to 0..\*. <code>(RS\_DEXT\_00064)</code>

Class	DiagnosticJ1939SpnMapping				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::Dem::J1939			
Note	This meta-class represents the ability to define a mapping between an SPN and a SystemSignal. The existence of a mapping means that neither the SPN nor the SystemSignal need to be updated if the relation between the two changes.  Tags: atp.recommendedPackage=DiagnosticJ1939SpnMappings				
Base				eElement, DiagnosticCommonElement, Diagnostic geReferrable, PackageableElement, Referrable	
Attribute	Туре	Type Mul. Kind Note			
sendingNo de	DiagnosticJ193 9Node	*	ref	This additional reference has a supporting role in that it identifies all sending nodes of a given SPN. It is positively possible thata given SPN is sent by more than one node. Even tough the reference targets the DiagnosticJ1939Node the semantics of the reference is bound to the J1939NmNode that is in turn referenced by the DiagnosticJ1939Node.	
spn	DiagnosticJ193 9Spn	01	ref	This reference goes to the SPN that shall be associated with a SystemSignal.	
systemSig nal	SystemSignal	01	ref	This reference goes to the SystemSignal that shall be associated with an SPN.	

Table 8.5: DiagnosticJ1939SpnMapping



Class	DiagnosticJ1939Node			
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::J1939
Note	This meta-class represents the diagnostic configuration of a J1939 Nm node, which in turn represents a "virtual Ecu" on the J1939 communication bus.			
	Tags: atp.recomn	Tags: atp.recommendedPackage=DiagnosticJ1939Nodes		
Base	· ·	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note
nmNode	J1939NmNode	01	ref	This represents the reference to the "virtual Ecu" to which the enclosing DiagnosticJ1939Node is associated.

Table 8.6: DiagnosticJ1939Node

[constr\_1456] Valid interval for attribute DiagnosticTroubleCodeJ1939.fmi | The value of the attribute DiagnosticTroubleCodeJ1939.fmi shall be in the interval 0..31. |()

Please note that the rationale for the existence of [constr\_1456] as well as the meaning of the individual values of the attribute fmi can be found in the respective SAE J1939 [20] specification.

Class	DiagnosticTroubleCodeJ1939					
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::Dem::DiagnosticTroubleCode		
Note		This meta-class represents the ability to model specific trouble-code related properties for J1939.				
	Tags: atp.recomm	nendedF	Package	=DiagnosticTroubleCodes		
Base				eElement, DiagnosticCommonElement, Diagnostic guageReferrable, PackageableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note		
dtcProps	DiagnosticTroub leCodeProps	01	ref	Defined properties associated with the J1939 DTC.		
fmi	PositiveInteger	01	attr	This attribute represents the behavior of the Failure Mode Indicator.		
kind	DiagnosticTroub leCodeJ1939Dt cKindEnum	01	attr	This attribute further specifies the DTC in terms of its semantics.		
node	DiagnosticJ193 9Node	01	ref	This represents the related DiagnosticJ1939Node.		
spn	DiagnosticJ193 9Spn	01	ref	This represents the releated SPN.		

Table 8.7: DiagnosticTroubleCodeJ1939

**[TPS\_DEXT\_01107] Definition of service-only DTC** ☐ It is possible to specify whether given DTCs on J1939 are only relevant for a service session in a garage or workshop. The common property of service-only DTCs is that they shall be located in a memory section that is exclusively used by service-only DTCs. ☐ (RS\_DEXT\_00067)



The statement made by [TPS\_DEXT\_01107] needs to be secured by two constraints:

[constr\_1457] Service-only DTCs shall refer to a common memory section [ All DiagnosticTroubleCodeJ1939 with attribute kind set to the value serviceOnly that reference the same DiagnosticJ1939Node shall also reference the same DiagnosticTroubleCodeProps.memoryDestination. ]()

[constr\_1458] Reference to DiagnosticMemoryDestination [ A DiagnosticMemoryDestination that is referenced by a DiagnosticTrouble-CodeJ1939.dtcProps.memoryDestination where the value of attribute DiagnosticTroubleCodeJ1939.kind is set to serviceOnly shall not be referenced by any other DiagnosticTroubleCodeJ1939 where attribute kind is set to any other value than serviceOnly. |()

# 8.5 Mapping between Software-Components and Controller Applications

Another aspect of the modeling of J1939 diagnostics is that a mapping between the <code>DiagnosticJ1939Node</code> (which formally represents a *Controller Application*) and the AUTOSAR way of specifying a "function" (by means of the meta-class <code>SwComponent-Prototype</code>) is required.

This leads to the definition of the DiagnosticJ1939SwMapping.

[TPS\_DEXT\_01108] Purpose of the DiagnosticJ1939SwMapping [ The purpose of the DiagnosticJ1939SwMapping is to associate a SwComponentPrototype with a DiagnosticJ1939Node. By this means a concrete functionality is mapped to the abstract J1939 Controller Application. ](RS\_DEXT\_00066)

Please note that the basis for this mapping is the existence of a CompositionSwComponentType rather than a System. The mapping can therefore (and this is the main motivation for this kind of modeling) be done independently of the deployment to a concrete project.



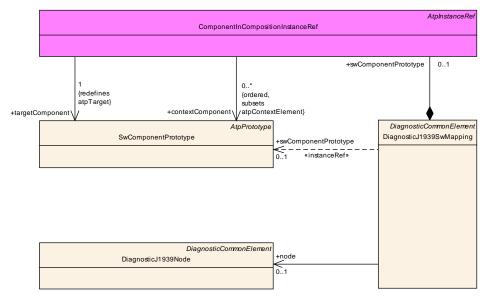


Figure 8.2: Mapping between Software-Components and Controller Applications

Class	DiagnosticJ1939SwMapping				
Package	M2::AUTOSARTe	mplates	::Diagno	sticExtract::SwMapping	
Note	This meta-class represents the ability to map a piece of application software to a J1939DiagnosticNode. By this means the diagnostic configuration can be associated with the application software.  Tags: atp.recommendedPackage=DiagnosticJ1939SwMappings				
Base				eElement, DiagnosticCommonElement, Identifiable, eableElement, Referrable	
Attribute	Туре	Mul.	Kind	Note	
node	DiagnosticJ193 9Node	01	ref	This represents the mapped DiagnosticJ1939Node.	
swCompon entPrototy pe	SwComponentP rototype	01	iref	This represents the mapped SwComponentPrototype.	

Table 8.8: DiagnosticJ1939SwMapping

### A Mentioned Class Tables

For the sake of completeness, this chapter contains a set of class tables representing meta-classes mentioned in the context of this document but which are not contained directly in the scope of describing specific meta-model semantics.



Class	AtomicSwCompo	onentTy	pe (abs	tract)	
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Components	
Note	An atomic softwar decomposed and			atomic in the sense that it cannot be further ss multiple ECUs.	
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, SwComponentType				
Attribute	Туре	Mul.	Kind	Note	
internalBe havior	SwcInternalBeh avior	01	aggr	The SwcInternalBehaviors owned by an AtomicSwComponentType can be located in a different physical file. Therefore the aggregation is "atpSplitable".  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=internalBehavior, variation Point.shortLabel vh.latestBindingTime=preCompileTime	
symbolPro ps	SymbolProps	01	aggr	This represents the SymbolProps for the AtomicSwComponentType.  Stereotypes: atpSplitable Tags: atp.Splitkey=shortName	

Table A.1: AtomicSwComponentType

Class	AtplnstanceRef (	AtpInstanceRef (abstract)				
Package	M2::AUTOSARTe	mplates	::Generi	cStructure::AbstractStructure		
Note	An M0 instance of a classifier may be represented as a tree rooted at that instance, where under each node come the sub-trees representing the instances which act as features under that node.  An instance ref specifies a navigation path from any M0 tree-instance of the base (which is a classifier) to a leaf (which is an instance of the target).					
Base	ARObject					
Attribute	Туре	Mul.	Kind	Note		
atpBase	AtpClassifier	1	ref	This is the base from which the navigaion path starts.		
		*		Stereotypes: atpAbstract; atpDerived		
atpConte xtElement (ordered)	AtpPrototype	*	ref	This is one particular step in the navigation path.  Stereotypes: atpAbstract		
atpTarget	AtpFeature	1	ref	This is the target of the instance ref. In other words it is the terminal of the navigation path.  Stereotypes: atpAbstract		

Table A.2: AtpInstanceRef



Class	BaseType (abstra	BaseType (abstract)			
Package	M2::MSR::AsamH	ldo::Bas	eTypes		
Note	This abstract meta type.	This abstract meta-class represents the ability to specify a platform dependant base type.			
Base	ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note	
baseType Definition	BaseTypeDefini tion	1	aggr	This is the actual definition of the base type.	
		Tags: xml.roleElement=false; xml.roleWrapper			
				Element=false; xml.sequenceOffset=20; xml.type	
				Element=false; xml.typeWrapperElement=false	

Table A.3: BaseType

Class	BaseTypeDirectDefinition						
Package	M2::MSR::AsamH	M2::MSR::AsamHdo::BaseTypes					
Note	This BaseType is	defined	directly	(as opposite to a derived BaseType)			
Base	ARObject, BaseTy	/peDefir	nition				
Attribute	Туре	Mul.	Kind	Note			
baseType Encoding	BaseTypeEnco dingString	1	attr	This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.			
	D			Tags: xml.sequenceOffset=90			
baseType Size	PositiveInteger	01	attr	Describes the length of the data type specified in the container in bits.			
				Tags: xml.sequenceOffset=70			
byteOrder	ByteOrderEnum	01	attr	This attribute specifies the byte order of the base type.  Tags: xml.sequenceOffset=110			
maxBaseT ypeSize	PositiveInteger	01	attr	Describes the maximum length of the BaseType in bits.  Tags: xml.sequenceOffset=80			
memAlign	PositiveInteger	01	attr	This attribute describes the alignment of the			
ment	1 ositivemicyel	V 1	atti	memory object in bits. E.g. "8" specifies, that the object in question is aligned to a byte while "32" specifies that it is aligned four byte. If the value is set to "0" the meaning shall be interpreted as "unspecified".			
				Tags: xml.sequenceOffset=100			



nativeDecl aration	NativeDeclarati onString	01	attr	This attribute describes the declaration of such a base type in the native programming language, primarily in the Programming language C. This can then be used by a code generator to include the necessary declarations into a header file. For example
				BaseType with shortName: "MyUnsignedInt" nativeDeclaration: "unsigned short"
				Results in typedef unsigned short MyUnsignedInt;
				If the attribute is not defined the referring ImplementationDataTypes will not be generated as a typedef by RTE.
				If a nativeDeclaration type is given it shall fulfill the characteristic given by basetypeEncoding and baseTypeSize.
				This is required to ensure the consistent handling and interpretation by software components, RTE, COM and MCM systems.
				Tags: xml.sequenceOffset=120

Table A.4: BaseTypeDirectDefinition

Class	BswModuleDesc	BswModuleDescription				
Package	M2::AUTOSARTe	mplates	::BswMc	oduleTemplate::BswOverview		
Note	Root element for the description of a single BSW module or BSW cluster. In case it describes a BSW module, the short name of this element equals the name of the BSW module.  Tags: atp.recommendedPackage=BswModuleDescriptions					
Base	StructureElement,	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpFeature, AtpStructureElement, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Mul.	Kind	Note		
bswModul eDepende ncy	BswModuleDep endency	*	aggr	Describes the dependency to another BSW module.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime		
				xml.sequenceOffset=20		



la a col Marako d	Coordinate	0.1		This adds a decrementation to the DOW made to
bswModul eDocumen	SwComponentD ocumentation	01	aggr	This adds a documentation to the BSW module.
tation				Stereotypes: atpSplitable; atpVariation
				Tags: atp.Splitkey=bswModuleDocumentation,
				variationPoint.shortLabel vh.latestBindingTime=preCompileTime
				xml.sequenceOffset=6
expectedE	BswModuleEntr	*	ref	Indicates an entry which is required by this
ntry	У			module. Replacement of outgoingCallback / requiredEntry.
				Stereotypes: atpSplitable; atpVariation
				Tags: atp.Splitkey=expectedEntry, variation
				Point.shortLabel
implement	BswModuleEntr	*	rof	vh.latestBindingTime=preCompileTime  Specifies an entry provided by this module which
implement edEntry	y		ref	can be called by other modules. This includes
	,			"main" functions, interrupt routines, and callbacks.
				Replacement of providedEntry /
				expectedCallback.
				Stereotypes: atpSplitable; atpVariation
				Tags: atp.Splitkey=implementedEntry, variation
				Point.shortLabel
internalBe	BswInternalBeh	*	aggr	vh.latestBindingTime=preCompileTime The various BswInternalBehaviors associated with
havior	avior		aggi	a BswModuleDescription can be distributed over
				several physical files. Therefore the aggregation is
				«atpSplitable».
				Stereotypes: atpSplitable
				Tags: atp.Splitkey=shortName
				xml.sequenceOffset=65
moduleld	PositiveInteger	01	attr	Refers to the BSW Module Identifier defined by the AUTOSAR standard. For non-standardized
				modules, a proprietary identifier can be optionally
				chosen.
				Tags: xml.sequenceOffset=5
providedCli	BswModuleClie	*	aggr	Specifies that this module provides a client server
entServerE	ntServerEntry			entry which can be called from another parition or
ntry				core. This entry is declared locally to this context and will be connected to the
				requiredClientServerEntry of another or the same
				module via the configuration of the BSW
				Scheduler.
				Stereotypes: atpSplitable; atpVariation
				Tags: atp.Splitkey=shortName, variation
				Point.shortLabel
				vh.latestBindingTime=preCompileTime
				xml.sequenceOffset=45



providedD ata	VariableDataPr ototype	*	aggr	Specifies a data prototype provided by this module in order to be read from another partition or core. The provided Data is declared locally to this context and will be connected to the required Data of another or the same module via the configuration of the BSW Scheduler.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=55
providedM odeGroup	ModeDeclaratio nGroupPrototyp e	•	aggr	A set of modes which is owned and provided by this module or cluster. It can be connected to the requiredModeGroups of other modules or clusters via the configuration of the BswScheduler. It can also be synchronized with modes provided via ports by an associated ServiceSwComponentType, EcuAbstractionSwComponentType or ComplexDeviceDriverSwComponentType.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=25
releasedTri gger	Trigger	*	aggr	A Trigger released by this module or cluster. It can be connected to the requiredTriggers of other modules or clusters via the configuration of the BswScheduler. It can also be synchronized with Triggers provided via ports by an associated ServiceSwComponentType, EcuAbstractionSwComponentType or ComplexDeviceDriverSwComponentType.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=35
requiredCli entServerE ntry	BswModuleClie ntServerEntry	*	aggr	Specifies that this module requires a client server entry which can be implemented on another parition or core. This entry is declared locally to this context and will be connected to the provided Client Server Entry of another or the same module via the configuration of the BSW Scheduler.  Stereotypes: atpSplitable; atpVariation Tags: atp. Splitkey=short Name, variation Point. short Label vh.latest Binding Time=preCompile Time xml. sequence Offset=50



requiredDa ta	VariableDataPr ototype	*	aggr	Specifies a data prototype required by this module in oder to be provided from another partition or core. The requiredData is declared locally to this context and will be connected to the providedData of another or the same module via the configuration of the BswScheduler.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=60
requiredM odeGroup	ModeDeclaratio nGroupPrototyp e	*	aggr	Specifies that this module or cluster depends on a certain mode group. The requiredModeGroup is local to this context and will be connected to the providedModeGroup of another module or cluster via the configuration of the BswScheduler.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=30
requiredTri gger	Trigger	*	aggr	Specifies that this module or cluster reacts upon an external trigger. This required Trigger is declared locally to this context and will be connected to the provided Trigger of another module or cluster via the configuration of the BswScheduler.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=40

**Table A.5: BswModuleDescription** 

Class	CompositionSwComponentType					
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::SWComponentTemplate::Composition				
Note	A CompositionSwComponentType aggregates SwComponentPrototypes (that in turn are typed by SwComponentTypes) as well as SwConnectors for primarily connecting SwComponentPrototypes among each others and towards the surface of the CompositionSwComponentType. By this means hierarchical structures of software-components can be created.					
	Tags: atp.recommendedPackage=SwComponentTypes					
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, SwComponentType					
Attribute	Туре	Mul.	Kind	Note		



	0.0			
component	SwComponentP rototype	*	aggr	The instantiated components that are part of this composition. The aggregation of SwComponentPrototype is subject to variability with the purpose to support the conditional existence of a SwComponentPrototype. Please be aware: if the conditional existence of SwComponentPrototypes is resolved post-build the deselected SwComponentPrototypes are still contained in the ECUs build but the instances are inactive in in that they are not scheduled by the RTE.
				The aggregation is marked as atpSplitable in order to allow the addition of service components to the ECU extract during the ECU integration.
				The use case for having 0 components owned by the CompositionSwComponentType could be to deliver an empty CompositionSwComponentType to e.g. a supplier for filling the internal structure.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=postBuild
connector	SwConnector	*	aggr	SwConnectors have the principal ability to establish a connection among PortPrototypes. They can have many roles in the context of a CompositionSwComponentType. Details are refined by subclasses.
				The aggregation of SwConnectors is subject to variability with the purpose to support variant data flow.
				The aggregation is marked as atpSplitable in order to allow the extension of the ECU extract with AssemblySwConnectors between ApplicationSwComponentTypes and ServiceSwComponentTypes during the ECU integration.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=postBuild
constantVa lueMappin g	ConstantSpecifi cationMappingS et	*	ref	Reference to the ConstantSpecificationMapping to be applied for initValues of PPortComSpecs and RPortComSpec.
				Stereotypes: atpSplitable Tags: atp.Splitkey=constantValueMapping



dataTypeM apping	DataTypeMappi ngSet	*	ref	Reference to the DataTypeMapping to be applied for the used ApplicationDataTypes in PortInterfaces.  Background: when developing subsystems it may happen that ApplicationDataTypes are used on the surface of CompositionSwComponentTypes. In this case it would be reasonable to be able to also provide the intended mapping to the ImplementationDataTypes. However, this mapping shall be informal and not technically binding for the implementers mainly because the RTE generator is not concerned about the CompositionSwComponentTypes.  Rationale: if the mapping of ApplicationDataTypes on the delegated and inner PortPrototype matches then the mapping to ImplementationDataTypes is not impacting compatibility.  Stereotypes: atpSplitable Tags: atp.Splitkey=dataTypeMapping
instantiatio nRTEEven tProps	InstantiationRT EEventProps	*	aggr	This allows to define instantiation specific properties for RTE Events, in particular for instance specific scheduling.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortLabel, variation Point.shortLabel vh.latestBindingTime=codeGenerationTime

Table A.6: CompositionSwComponentType

Class	CompuMethod					
Package	M2::MSR::AsamHdo::ComputationMethod					
Note	This meta-class represents the ability to express the relationship between a physical value and the mathematical representation.					
	Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.  Tags: atp.recommendedPackage=CompuMethods					
Base	<u> </u>			int, AtpBlueprintable, CollectableElement, ble, PackageableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note		
compulnter nalToPhys	Compu	01	aggr	This specifies the computation from internal values to physical values.  Tags: xml.sequenceOffset=80		
compuPhy sToInternal	Compu	01	aggr	This represents the computation from physical values to the internal values.		
				Tags: xml.sequenceOffset=90		



displayFor mat	DisplayFormatS tring	01	attr	This property specifies, how the physical value shall be displayed e.g. in documents or measurement and calibration tools.  Tags: xml.sequenceOffset=20
unit	Unit	01	ref	This is the physical unit of the Physical values for which the CompuMethod applies.  Tags: xml.sequenceOffset=30

**Table A.7: CompuMethod** 

Class	DataConstr					
Package	M2::MSR::AsamH	ldo::Cor	straints:	::GlobalConstraints		
Note	This meta-class re	epresen	ts the ab	oility to specify constraints on data.		
	Tags: atp.recomm	nendedF	ackage:	=DataConstrs		
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		
dataConstr Rule	DataConstrRule	*	aggr	This is one particular rule within the data constraints.		
				<b>Tags:</b> xml.roleElement=true; xml.roleWrapper Element=true; xml.sequenceOffset=30; xml.type Element=false; xml.typeWrapperElement=false		

**Table A.8: DataConstr** 

Class	DiagEventDebour	DiagEventDebounceMonitorInternal						
Package	M2::AUTOSARTen	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds						
Note	This meta-class represents the ability to indicate that the pre-debounce algorithm shall be used by the Dem for this diagnostic monitor.							
	This is related to setting the EcuC choice container DemDebounceAlgorithmClass to DemDebounceMonitorInternal.							
	If the FaultDetectionAlogrithm is already known to be implemented by a specific BswModuleEntry the reference bswModuleEntry points to the function specification.							
	If the FaultDetectionCounter value is accessible at a PortPrototype this PortPrototype shall be referenced by an assignedPort.							
Base	ARObject, DiagEventDebounceAlgorithm, Identifiable, MultilanguageReferrable, Referrable							
Attribute	Туре	Mul.	Kind	Note				
_	_	_	_	_				

Table A.9: DiagEventDebounceMonitorInternal



Enumeration	DiagnosticCompareTypeEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService:: EnvironmentalCondition
Note	Enumeration for the type of a comparison of values usually expressed by the following operators: ==, !=, <, <=, >, >=
Literal	Description
isEqual	equal
	Tags: atp.EnumerationValue=0
isGreaterOr Equal	greater than or equal
	Tags: atp.EnumerationValue=5
isGreater Than	greater than
	Tags: atp.EnumerationValue=4
isLessOr Equal	less than or equal
·	Tags: atp.EnumerationValue=3
isLessThan	less than
	Tags: atp.EnumerationValue=2
isNotEqual	not equal
	Tags: atp.EnumerationValue=1

Table A.10: DiagnosticCompareTypeEnum

Enumeration	DiagnosticLogicalOperatorEnum						
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::						
	EnvironmentalCondition						
Note	Logical AND and OR operation (&&,   )						
Literal	Description						
logicalAnd	Logical AND						
	Tags: atp.EnumerationValue=0						
logicalOr	Logical OR						
	Tags: atp.EnumerationValue=1						

Table A.11: DiagnosticLogicalOperatorEnum



Class	Eculnstance					
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology					
Note	ECUInstances are used to define the ECUs used in the topology. The type of the ECU is defined by a reference to an ECU specified with the ECU resource description.					
Paga	Tags: atp.recommendedPackage=EcuInstances  ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable,					
Base	PackageableElem	ent, Re	ferrable			
Attribute	Туре	Mul.	Kind	Note		
associated ComIPduG roup	ISignalIPduGro up	*	ref	With this reference it is possible to identify which ISignalIPduGroups are applicable for which CommunicationConnector/ ECU.		
				Only top level ISignallPduGroups shall be referenced by an Eculnstance. If an ISignallPduGroup contains other ISignallPduGroups than these contained ISignallPduGroups shall not be referenced by the Eculnstance. Contained ISignallPduGroups are associated to an Eculnstance via the top level ISignallPduGroup.		
associated PdurlPduG roup	PdurlPduGroup	*	ref	With this reference it is possible to identify which PduR IPdu Groups are applicable for which CommunicationConnector/ ECU.		
clientIdRan ge	ClientIdRange	01	aggr	Restriction of the Client Identifier for this Ecu to an allowed range of numerical values. The Client Identifier of the transaction handle is generated by the client RTE for inter-Ecu Client/Server communication.		
comConfig urationGw TimeBase	TimeValue	01	attr	The period between successive calls to Com_MainFunctionRouteSignals of the AUTOSAR COM module in seconds.		
comConfig urationRxT imeBase	TimeValue	01	attr	The period between successive calls to Com_MainFunctionRx of the AUTOSAR COM module in seconds.		
comConfig urationTxTi meBase	TimeValue	01	attr	The period between successive calls to Com_MainFunctionTx of the AUTOSAR COM module in seconds.		
comEnable MDTForCy clicTransm ission	Boolean	01	attr	Enables for the Com module of this EcuInstance the minimum delay time monitoring for cyclic and repeated transmissions (TransmissionModeTiming has cyclicTiming assigned or eventControlledTiming with numberOfRepetitions > 0).		
commCont roller	Communication Controller	1*	aggr	CommunicationControllers of the ECU.		
connector	Communication Connector	*	aggr	All channels controlled by a single controller.		
diagnostic Address	Integer	01	attr	An ECU specific ID for responses of diagnostic routines.		
diagnostic Props	DiagnosticEcuP rops	01	aggr	This represents the diagnostic-related properties of an entire ECU.		



ethSwitchP ortGroupD erivation	Boolean	01	attr	Defines whether the derivation of SwitchPortGroups based on VLAN and/or CouplingPort.pncMapping shall be performed for this EcuInstance. If not defined the derivation shall not be done.
partition	EcuPartition	*	aggr	Optional definition of Partitions within an Ecu.
pnResetTi me	TimeValue	01	attr	Specifies the runtime of the reset timer in seconds. This reset time is valid for the reset of PN requests in the EIRA and in the ERA.
pncPrepar eSleepTim er	TimeValue	01	attr	Time in seconds the PNC state machine shall wait in PNC_PREPARE_SLEEP.
sleepMode Supported	Boolean	1	attr	Specifies whether the ECU instance may be put to a "low power mode"
				true: sleep mode is supported
				false: sleep mode is not supported
				Note: This flag may only be set to "true" if the feature is supported by both hardware and basic software.
v2xSuppor ted	V2xSupportEnu m	01	attr	This attribute is used to control the existence of the V2X stack on the given Eculnstance.
wakeUpOv erBusSupp orted	Boolean	1	attr	Driver support for wakeup over Bus.

**Table A.12: Eculnstance** 

Class	ISignal								
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication								
Note	Signal of the Interaction Layer. The RTE supports a "signal fan-out" where the same System Signal is sent in different SignallPdus to multiple receivers.								
	To support the RTE "signal fan-out" each SignalIPdu contains ISignals. If the same System Signal is to be mapped into several SignalIPdus there is one ISignal needed for each ISignalToIPduMapping.								
	ISignals describe the Interface between the Precompile configured RTE and the potentially Postbuild configured Com Stack (see ECUC Parameter Mapping).								
	In case of the SystemSignalGroup an ISignal must be created for each SystemSignal contained in the SystemSignalGroup.								
	Tags: atp.recommendedPackage=ISignals								
Base	ARObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable								
Attribute	Type Mul. Kind Note								



dataTransf ormation	DataTransforma tion	01	ref	Optional reference to a DataTransformation which represents the transformer chain that is used to transform the data that shall be placed inside this ISignal.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=dataTransformation, variation Point.shortLabel
dataTypeP olicy	DataTypePolicy Enum	1	attr	vh.latestBindingTime=codeGenerationTime  With the aggregation of SwDataDefProps an ISignal specifies how it is represented on the network. This representation follows a particular policy. Note that this causes some redundancy which is intended and can be used to support flexible development methodology as well as subsequent integrity checks.
				If the policy "networkRepresentationFromComSpec" is chosen the network representation from the ComSpec that is aggregated by the PortPrototype shall be used. If the "override" policy is chosen the requirements specified in the PortInterface and in the ComSpec are not fulfilled by the networkRepresentationProps. In case the System Description doesn't use a complete Software Component Description (VFB View) the "legacy" policy can be chosen.
iSignalPro ps	ISignalProps	01	aggr	Additional optional ISignal properties that may be stored in different files.  Stereotypes: atpSplitable Tags: atp.Splitkey=iSignalProps
iSignalTyp e	ISignalTypeEnu m	01	attr	This attribute defines whether this iSignal is an array that results in an UINT8_N / UINT8_DYN ComSignalType in the COM configuration or a primitive type.
initValue	ValueSpecificati on	01	aggr	Optional definition of a ISignal's initValue in case the System Description doesn't use a complete Software Component Description (VFB View). This supports the inclusion of legacy system signals.
				This value can be used to configure the Signal's "InitValue".
				If a full DataMapping exist for the SystemSignal this information may be available from a configured SenderComSpec and ReceiverComSpec. In this case the initvalues in SenderComSpec and/or ReceiverComSpec override this optional value specification. Further restrictions apply from the RTE specification.



length	Integer	1	attr	Size of the signal in bits. The size needs to be derived from the mapped VariableDataPrototype according to the mapping of primitive DataTypes to BaseTypes as used in the RTE. Indicates maximum size for dynamic length signals.  The ISignal length of zero bits is allowed.
networkRe presentatio nProps	SwDataDefProps	01	aggr	Specification of the actual network representation. The usage of SwDataDefProps for this purpose is restricted to the attributes compuMethod and baseType. The optional baseType attributes "memAllignment" and "byteOrder" shall not be used.  The attribute "dataTypePolicy" in the SystemTemplate element defines whether this network representation shall be ignored and the information shall be taken over from the network representation of the ComSpec.  If "override" is chosen by the system integrator the network representation can violate against the requirements defined in the PortInterface and in the network representation of the ComSpec.  In case that the System Description doesn't use a complete Software Component Description (VFB View) this element is used to configure "ComSignalDataInvalidValue" and the Data Semantics.
systemSig nal	SystemSignal	1	ref	Reference to the System Signal that is supposed to be transmitted in the ISignal.
timeoutSu bstitutionV alue	ValueSpecificati on	01	aggr	Defines and enables the ComTimeoutSubstituition for this ISignal.
transforma tionISignal Props	TransformationI SignalProps	*	aggr	A transformer chain consists of an ordered list of transformers. The ISignal specific configuration properties for each transformer are defined in the TransformationISignalProps class. The transformer configuration properties that are common for all ISignals are described in the TransformationTechnology class.

Table A.13: ISignal



Class	ISignallPduGrou	р					
Package	M2::AUTOSARTe	mplates	::Systen	nTemplate::Fibex::FibexCore::CoreCommunication			
Note	configurable grou ISignalIPdus or IS	The AUTOSAR COM Layer is able to start and to stop sending and receiving configurable groups of I-Pdus during runtime. An ISignallPduGroup contains either ISignallPdus or ISignallPduGroups.  Tags: atp.recommendedPackage=ISignaliPduGroup					
Base	ARObject, Collect PackageableElem			bexElement, Identifiable, MultilanguageReferrable,			
Attribute	Туре	Mul.	Kind	Note			
communic ationDirecti on	Communication DirectionType	1	attr	This attribute determines in which direction IPdus that are contained in this IPduGroup will be transmitted (communication direction can be either In or Out).			
communic ationMode	String	1	attr	This attribute defines the use-case for this ISignallPduGroup (e.g. diagnostic, debugging etc.). For example, in a diagnostic mode all IPdus - which are not involved in diagnostic - are disabled. The use cases are not limited to a fixed enumeration and can be specified as a string.			
containedI SignalIPdu Group	ISignallPduGro up	*	ref	An I-Pdu group can be included in other I-Pdu groups. Contained I-Pdu groups shall not be referenced by the EcuInstance.			
iSignalIPd u	ISignalIPdu	*	ref	Reference to a set of Signal I-Pdus, which are contained in the ISignal I-Pdu Group.  atpVariation: The content of a ISignal I-Pdu group can vary (->vehicle modes).  Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild			
nmPdu	NmPdu	*	ref	Reference to a set of NmPdus with NmUserData, which are contained in the ISignallPduGroup.  Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild			

Table A.14: ISignallPduGroup

Class	IdentCaption (abstract)				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::SWComponentTemplate::RPTScenario			
Note	This meta-class represents the caption. This allows having some meta classes optionally identifiable.				
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable				
Attribute	Type Mul. Kind Note				
_	_	_	_	_	

**Table A.15: IdentCaption** 





Class	Identifiable (abstract)						
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::Identifiable						
Note	borders). In additi	on to thi re of an	s, Identi	erred to by their identifier (within the namespace fiables are objects which contribute significantly to AR description. In particular, Identifiables might			
Base	ARObject, Multilar	nguageF	Referrab	le, Referrable			
Attribute	Туре	Mul.	Kind	Note			
desc	MultiLanguage OverviewParagr aph	01	aggr	This represents a general but brief (one paragraph) description what the object in question is about. It is only one paragraph! Desc is intended to be collected into overview tables. This property helps a human reader to identify the object in question.  More elaborate documentation, (in particular how the object is built or used) should go to "introduction".  Tags: xml.sequenceOffset=-60			
category	CategoryString	01	attr	The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.  Tags: xml.sequenceOffset=-50			
adminData	AdminData	01	aggr	This represents the administrative data for the identifiable object.  Tags: xml.sequenceOffset=-40			
annotation	Annotation	*	aggr	Possibility to provide additional notes while defining a model element (e.g. the ECU Configuration Parameter Values). These are not intended as documentation but are mere design notes.  Tags: xml.sequenceOffset=-25			
introductio n	Documentation Block	01	aggr	This represents more information about how the object in question is built or is used. Therefore it is a DocumentationBlock.  Tags: xml.sequenceOffset=-30			



uuid	String	01	attr	The purpose of this attribute is to provide a globally unique identifier for an instance of a meta-class. The values of this attribute should be globally unique strings prefixed by the type of identifier. For example, to include a DCE UUID as defined by The Open Group, the UUID would be preceded by "DCE:". The values of this attribute may be used to support merging of different AUTOSAR models. The form of the UUID (Universally Unique Identifier) is taken from a standard defined by the Open Group (was Open Software Foundation). This standard is widely used, including by Microsoft for COM (GUIDs) and by many companies for DCE, which is based on CORBA. The method for generating these 128-bit IDs is published in the standard and the effectiveness and uniqueness of the IDs is not in practice disputed. If the id namespace is omitted, DCE is assumed. An example is "DCE:2fac1234-31f8-11b4-a222-08002b34c003". The uuid attribute has no semantic meaning for an AUTOSAR model and there is no requirement for AUTOSAR tools to manage the timestamp.  Tags: xml.attribute=true
------	--------	----	------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Table A.16: Identifiable

Primitive	Identifier				
Package	M2::AUTOSARTe Types	mplates	::Generi	cStructure::GeneralTemplateClasses::Primitive	
Note	An Identifier is a string with a number of constraints on its appearance, satisfying the requirements typical programming languages define for their Identifiers.				
	This datatype rep	resents	a string,	that can be used as a c-Identifier.	
	It shall start with a letter, may consist of letters, digits and underscores.				
	Tags: xml.xsd.customType=IDENTIFIER; xml.xsd.maxLength=128; xml.xsd.pattern=[a-zA-Z][a-zA-Z0-9_]*; xml.xsd.type=string				
Attribute	Datatype	Mul.	Kind	Note	
namePatte rn	String	01	attr	This attribute represents a pattern which shall be used to define the value of the identifier if the identifier in question is part of a blueprint.  For more details refer to TPS_StandardizationTemplate.	
				Tags: xml.attribute=true	

**Table A.17: Identifier** 



Class	InternalBehavior (abstract)						
Package	M2::AUTOSARTemplates::CommonStructure::InternalBehavior						
Note	Common base class (abstract) for the internal behavior of both software components and basic software modules/clusters.						
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable						
Attribute	Туре	Mul.	Kind	Note			
constantM emory	ParameterData Prototype	*	aggr	Describes a read only memory object containing characteristic value(s) implemented by this InternalBehavior.			
				The shortName of ParameterDataPrototype has to be equal to the "C' identifier of the described constant.			
				The characteristic value(s) might be shared between SwComponentPrototypes of the same SwComponentType.			
				The aggregation of constantMemory is subject to variability with the purpose to support variability in the software component or module implementations. Typically different algorithms in the implementation are requiring different number of memory objects.			
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime			
constantVa lueMappin g	ConstantSpecifi cationMappingS et	*	ref	Reference to the ConstanSpecificationMapping to be applied for the particular InternalBehavior			
				Stereotypes: atpSplitable			
				Tags: atp.Splitkey=constantValueMapping			
dataTypeM apping	DataTypeMappi ngSet	*	ref	Reference to the DataTypeMapping to be applied for the particular InternalBehavior			
				Stereotypes: atpSplitable Tags: atp.Splitkey=dataTypeMapping			
exclusiveA rea	ExclusiveArea	*	aggr	This specifies an ExclusiveArea for this InternalBehavior. The exclusiveArea is local to the component resp. module. The aggregation of ExclusiveAreas is subject to variability. Note: the number of ExclusiveAreas might vary due to the conditional existence of RunnableEntities or BswModuleEntities.			
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime			



exclusiveA reaNesting Order	ExclusiveAreaN estingOrder	*	aggr	This represents the set of ExclusiveAreaNestingOrder owned by the InternalBehavior.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime
staticMem ory	VariableDataPr ototype	*	aggr	Describes a read and writeable static memory object representing measurerment variables implemented by this software component. The term "static" is used in the meaning of "non-temporary" and does not necessarily specify a linker encapsulation. This kind of memory is only supported if supportsMultipleInstantiation is FALSE.  The shortName of the VariableDataPrototype has to be equal with the "C' identifier of the described variable.  The aggregation of staticMemory is subject to variability with the purpose to support variability in the software component's implementations.  Typically different algorithms in the implementation are requiring different number of memory objects.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime

**Table A.18: InternalBehavior** 

Class	≪atpVariation≫ J1939Cluster					
Package	M2::AUTOSARTe	mplates	::Systen	nTemplate::Fibex::Fibex4Can::CanTopology		
Note	J1939 specific clu	ster attr	ibutes.			
	Tags: atp.recomm	Tags: atp.recommendedPackage=CommunicationClusters				
Base		ARObject, AbstractCanCluster, CollectableElement, CommunicationCluster, Fibex Element, Identifiable, MultilanguageReferrable, PackageableElement, Referrable				
Attribute	Туре	Type Mul. Kind Note				
networkld	PositiveInteger	01	attr	This represents the network ID for the J1939 cluster.		
request2S upport	Boolean	01	attr	Enables support for the Request2 PGN (RQST2).		



usesAddre ssArbitratio n	Boolean	01	attr	Defines whether the nodes attached to this channel use an initial address claim, and whether they react to contending address claims of other nodes. True: The initial address claim is sent, and the node reacts to address claims of other nodes. False: The node only sends an address claim upon request, and does not care for contending
				address claims.

#### Table A.19: J1939Cluster

Class	J1939DcmlPdu				
Package	M2::AUTOSARTe	mplates	::Systen	nTemplate::Fibex::FibexCore::CoreCommunication	
Note	Represents the IP	dus har	idled by	J1939Dcm.	
	Tags: atp.recommendedPackage=Pdus				
Base	ARObject, CollectableElement, FibexElement, IPdu, Identifiable, Multilanguage				
	Referrable, PackageableElement, Pdu, Referrable				
Attribute	Type	Mul.	Kind	Note	
diagnostic MessageT ype	PositiveInteger	01	attr	This attribute is used to identify the actual DMx message, e.g 1 means DM01, etc.	

#### Table A.20: J1939DcmlPdu

Class	J1939NmNode					
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement				
Note	J1939 specific NM	J1939 specific NM Node attributes.				
Base	ARObject, Identifiable, MultilanguageReferrable, NmNode, Referrable					
Attribute	Туре	Mul.	Kind	Note		
nodeName	J1939NodeNam	J1939NodeNam 01 aggr NodeName configuration				
	е					

#### Table A.21: J1939NmNode

Class	ModeDeclaration	ModeDeclaration					
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::ModeDeclaration			
Note		Declaration of one Mode. The name and semantics of a specific mode is not defined in the meta-model.					
Base		ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, MultilanguageReferrable, Referrable					
Attribute	Туре	Mul.	Kind	Note			
value	PositiveInteger	01	attr	The RTE shall take the value of this attribute for generating the source code representation of this ModeDeclaration.			

**Table A.22: ModeDeclaration** 



Class	ModeDeclaration	Group					
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::CommonStructure::ModeDeclaration					
Note				. Also, the initial mode is explicitly identified.  =ModeDeclarationGroups			
Base				int, AtpBlueprintable, AtpClassifier, AtpType, MultilanguageReferrable, PackageableElement,			
Attribute	Туре	Mul.	Kind	Note			
initialMode	ModeDeclaratio n	1	ref	The initial mode of the ModeDeclarationGroup. This mode is active before any mode switches occurred.			
modeDecl aration	ModeDeclaratio n	1*	aggr	The ModeDeclarations collected in this ModeDeclarationGroup.  Stereotypes: atpVariation Tags: vh.latestBindingTime=blueprintDerivation			
modeMana gerErrorBe havior	ModeErrorBeha vior	01	aggr	Time  This represents the ability to define the error behavior expected by the mode manager in case of errors on the mode user side (e.g. terminated mode user).			
modeTran sition	ModeTransition	*	aggr	This represents the avaliable ModeTransitions of the ModeDeclarationGroup			
modeUser ErrorBeha vior	ModeErrorBeha vior	01	aggr	This represents the definition of the error behavior expected by the mode user in case of errors on the mode manager side (e.g. terminated mode manager).			
onTransitio nValue	PositiveInteger	01	attr	The value of this attribute shall be taken into account by the RTE generator for programmatically representing a value used for the transition between two statuses.			

**Table A.23: ModeDeclarationGroup** 

Class	ModeDeclarationGroupPrototype				
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::ModeDeclaration	
Note				type specifies a set of Modes provided or required in the given context.	
Base	ARObject, AtpFea	ture, At	pPrototy	pe, Identifiable, MultilanguageReferrable,	
Attribute	Type Mul. Kind Note				
swCalibrati onAccess	SwCalibrationA ccessEnum	01	attr	This allows for specifying whether or not the enclosing ModeDeclarationGroupPrototype can be measured at run-time.	
type	ModeDeclaratio nGroup	1	tref	The "collection of ModeDeclarations" ( = ModeDeclarationGroup) supported by a component	
				Stereotypes: isOfType	

Table A.24: ModeDeclarationGroupPrototype



Class	ModelnBswModuleDescriptionInstanceRef				
Package	M2::AUTOSARTe	mplates	::BswMc	oduleTemplate::BswOverview::InstanceRefs	
Note					
Base	ARObject, Atplnsta	anceRef			
Attribute	Туре	Type Mul. Kind Note			
base	BswModuleDes cription	1	ref	Stereotypes: atpDerivedTags: xml.sequence Offset=10	
contextMo deDeclarat ionGroup	ModeDeclaratio nGroupPrototyp e	1	ref	Tags: xml.sequenceOffset=20	
targetMod e	ModeDeclaratio n	1	ref	Tags: xml.sequenceOffset=30	

#### Table A.25: ModelnBswModuleDescriptionInstanceRef

Primitive	NameToken
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::Primitive Types
Note	This is an identifier as used in xml, e.g. xml-names. Basic difference to Identifier is the fact that it can contain "-".
	Tags: xml.xsd.customType=NMTOKEN-STRING; xml.xsd.type=NMTOKEN

#### Table A.26: NameToken

Class	PPortPrototype					
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Components		
Note	Component port p	roviding	a certa	in port interface.		
Base	ARObject, AbstractProvidedPortPrototype, AtpBlueprintable, AtpFeature, Atp Prototype, Identifiable, MultilanguageReferrable, PortPrototype, Referrable					
Attribute	Туре	Type Mul. Kind Note				
providedInt erface	PortInterface	1	tref	The interface that this port provides.		
				Stereotypes: isOfType		

#### **Table A.27: PPortPrototype**

Class	PortInterface (ab	PortInterface (abstract)				
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::PortInterface		
Note		Abstract base class for an interface that is either provided or required by a port of a software component.				
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Туре	Mul.	Kind	Note		



isService	Boolean	1	attr	This flag is set if the PortInterface is to be used for communication between an
				<ul> <li>ApplicationSwComponentType or</li> </ul>
				<ul> <li>ServiceProxySwComponentType or</li> </ul>
				<ul> <li>SensorActuatorSwComponentType or</li> </ul>
				<ul> <li>ComplexDeviceDriverSwComponentType</li> </ul>
				<ul> <li>ServiceSwComponentType</li> </ul>
				<ul> <li>EcuAbstractionSwComponentType</li> </ul>
				and a ServiceSwComponentType (namely an AUTOSAR Service) located on the same ECU. Otherwise the flag is not set.
serviceKin d	ServiceProvider Enum	01	attr	This attribute provides further details about the nature of the applied service.

**Table A.28: PortInterface** 

Class	PortPrototype (a	PortPrototype (abstract)						
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Components				
Note	Base class for the ports of an AUTOSAR software component.  The aggregation of PortPrototypes is subject to variability with the purpose to support the conditional existence of ports.							
Base	ARObject, AtpBlue Referrable, Referr		le, AtpF	eature, AtpPrototype, Identifiable, Multilanguage				
Attribute	Туре	Mul.	Kind	Note				
clientServe rAnnotatio n	ClientServerAnn otation	*	aggr	Annotation of this PortPrototype with respect to client/server communication.				
delegated PortAnnota tion	DelegatedPortA nnotation	01	aggr	Annotations on this delegated port.				
ioHwAbstr actionServ erAnnotati on	IoHwAbstraction ServerAnnotatio n	*	aggr	Annotations on this IO Hardware Abstraction port.				
modePortA nnotation	ModePortAnnot ation	*	aggr	Annotations on this mode port.				
nvDataPort Annotation	NvDataPortAnn otation	*	aggr	Annotations on this non voilatile data port.				
parameter PortAnnota tion	ParameterPortA nnotation	*	aggr	Annotations on this parameter port.				
senderRec eiverAnnot ation	SenderReceiver Annotation	*	aggr	Collection of annotations of this ports sender/receiver communication.				



triggerPort	TriggerPortAnn	*	aggr	Annotations on this trigger port.
Annotation	otation			

#### **Table A.29: PortPrototype**

Class	Referrable (abstr	act)		
Package	M2::AUTOSARTe	mplates	::Generi	cStructure::GeneralTemplateClasses::Identifiable
Note	Instances of this on namespace borde		n be refe	erred to by their identifier (while adhering to
Base	ARObject			
Attribute	Туре	Mul.	Kind	Note
shortName	Identifier	1	attr	This specifies an identifying shortName for the object. It needs to be unique within its context and is intended for humans but even more for technical reference.  Tags: xml.enforceMinMultiplicity=true; xml.sequenceOffset=-100
shortName Fragment	ShortNameFrag ment	*	aggr	This specifies how the Referrable.shortName is composed of several shortNameFragments.  Tags: xml.sequenceOffset=-90

#### Table A.30: Referrable

Class	SenderReceiverl	SenderReceiverInterface				
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::PortInterface		
Note	A sender/receiver interface declares a number of data elements to be sent and received.					
	Tags: atp.recomm	nendedF	ackage:	=PortInterfaces		
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, DataInterface, Identifiable, MultilanguageReferrable, PackageableElement, PortInterface, Referrable					
Attribute	Type Mul. Kind Note					
dataEleme nt	VariableDataPr ototype	1*	aggr	The data elements of this SenderReceiverInterface.		
invalidation Policy	InvalidationPolic y	*	aggr	InvalidationPolicy for a particular dataElement		

Table A.31: SenderReceiverInterface



Class	ServiceNeeds (a	ServiceNeeds (abstract)				
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::ServiceNeeds		
Note	This expresses the abstract needs that a Software Component or Basic Software Module has on the configuration of an AUTOSAR Service to which it will be connected. "Abstract needs" means that the model abstracts from the Configuration Parameters of the underlying Basic Software.					
Base	ARObject, Identifiable, MultilanguageReferrable, Referrable					
Attribute	Туре	Type Mul. Kind Note				
_	_	_	_	-		

#### **Table A.32: ServiceNeeds**

Class	SwBaseType			
Package	M2::MSR::AsamH	do::Bas	eTypes	
Note	This meta-class re	epresent	s a base	e type used within ECU software.
	Tags: atp.recomm	nendedF	ackage	=BaseTypes
Base				int, AtpBlueprintable, BaseType, Collectable
	Element, Identifial	ole, Mult	ilangua	geReferrable, PackageableElement, Referrable
Attribute	Туре	Mul.	Kind	Note
_	_	_	1	1

#### Table A.33: SwBaseType

Class	SwComponentPr	ototype	<del>)</del>	
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Composition
Note	Role of a software	compo	nent witl	nin a composition.
Base	ARObject, AtpFea	ture, At	pPrototy	pe, Identifiable, MultilanguageReferrable,
Attribute	Туре	Mul.	Kind	Note
type	SwComponentT ype	1	tref	Type of the instance.
				Stereotypes: isOfType

#### Table A.34: SwComponentPrototype

Class	SwComponentTy	/pe (abs	stract)	
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Components
Note	Base class for AU	TOSAR	softwar	e components.
Base				int, AtpBlueprintable, AtpClassifier, AtpType,  MultilanguageReferrable, PackageableElement,
Attribute	Туре	Mul.	Kind	Note



consistenc yNeeds	ConsistencyNee ds	*	aggr	This represents the colelction of ConsistencyNeeds owned by the enclosing SwComponentType.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime
port	PortPrototype	*	aggr	The PortPrototypes through which this SwComponentType can communicate.  The aggregation of PortPrototype is subject to variability with the purpose to support the conditional existence of PortPrototypes.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime
portGroup	PortGroup	*	aggr	A port group being part of this component.  Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
swCompon entDocum entation	SwComponentD ocumentation	01	aggr	This adds a documentation to the SwComponentType.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=swComponentDocumentation, variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=-10
unitGroup	UnitGroup	*	ref	This allows for the specification of which UnitGroups are relevant in the context of referencing SwComponentType.

Table A.35: SwComponentType

Class	System
Package	M2::AUTOSARTemplates::SystemTemplate
Note	The top level element of the System Description. The System description defines five major elements: Topology, Software, Communication, Mapping and Mapping Constraints.  The System element directly aggregates the elements describing the Software, Mapping and Mapping Constraints; it contains a reference to an ASAM FIBEX
	description specifying Communication and Topology.  Tags: atp.recommendedPackage=Systems
Base	ARElement, ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Collectable Element, Identifiable, MultilanguageReferrable, PackageableElement, Referrable
Attribute	Type Mul. Kind Note



clientIdDefi nitionSet	ClientIdDefinitio nSet	*	ref	Set of Client Identifiers that are used for inter-ECU client-server communication in the System.
containerl PduHeade rByteOrder	ByteOrderEnum	01	attr	Defines the byteOrder of the header in ContainerIPdus.
ecuExtract Version	RevisionLabelSt ring	01	attr	Version number of the Ecu Extract.
fibexEleme nt	FibexElement	*	ref	Reference to ASAM FIBEX elements specifying Communication and Topology.
				All Fibex Elements used within a System Description shall be referenced from the System Element.
				atpVariation: In order to describe a product-line, all FibexElements can be optional.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild
j1939Shar edAddress Cluster	J1939SharedAd dressCluster	*	aggr	Collection of J1939Clusters that share a common address space for the routing of messages.
Olustei				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=postBuild
mapping	SystemMapping	*	aggr	Aggregation of all mapping aspects (mapping of SW components to ECUs, mapping of data elements to signals, and mapping constraints).
				In order to support OEM / Tier 1 interaction and shared development for one common System this aggregation is atpSplitable and atpVariation. The content of SystemMapping can be provided by several parties using different names for the SystemMapping.
				This element is not required when the System description is used for a network-only use-case.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=postBuild
pncVector Length	PositiveInteger	01	attr	Length of the partial networking request release information vector (in bytes).
pncVector Offset	PositiveInteger	01	attr	Absolute offset (with respect to the NM-PDU) of the partial networking request release information vector that is defined in bytes as an index starting with 0.



rootSoftwa reComposi tion	RootSwCompos itionPrototype	01	aggr	Aggregation of the root software composition, containing all software components in the System in a hierarchical structure. This element is not required when the System description is used for a network-only use-case.  atpVariation: The RootSwCompositionPrototype can vary.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=systemDesignTime
systemDoc umentation	Chapter	*	aggr	Possibility to provide additional documentation while defining the System. The System documentation can be composed of several chapters.  Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=systemDesignTime xml.sequenceOffset=-10
systemVer sion	RevisionLabelSt ring	1	attr	Version number of the System Description.

Table A.36: System

Class	SystemSignal			
Package	M2::AUTOSARTe	mplates	::Systen	nTemplate::Fibex::FibexCore::CoreCommunication
Note	between SW com to represent this c	ponents communi each da ces.	which r ication ir ta eleme	communication system's view of data exchanged eside on different ECUs. The system signals allow a flattened structure, with exactly one system ent prototype sent and received by connected SW =SystemSignals
Base	ARElement, AROl PackageableElem			eElement, Identifiable, MultilanguageReferrable,
Attribute	Туре	Mul.	Kind	Note
dynamicLe ngth	Boolean	1	attr	The length of dynamic length signals is variable in run-time. Only a maximum length of such a signal is specified in the configuration (attribute length in ISignal element).
physicalPr ops	SwDataDefProp s	01	aggr	Specification of the physical representation.

Table A.37: SystemSignal



Class	Unit			
Package	M2::MSR::AsamH	ldo::Unit	s	
Note				nit. All units that might be defined should stem from nit into another factor and offset are defined.
	offset (offsetSiToU	Jnit ) are	applied	the defined unit the factor (factorSiToUnit) and the das follows:    * factorSiToUnit [[unit]/{siUnit}] +
	and the negation	of the of (x*{uni	fset (offs	SI-unit the reciprocal of the factor (factorSiToUnit ) setSiToUnit ) are applied.  fsetSiToUnit [{unit}]) / (factorSiToUnit
	Tags: atp.recomn	nendedF	ackage	=Units
Base	ARElement, ARO PackageableElem			eElement, Identifiable, MultilanguageReferrable,
Attribute	Туре	Mul.	Kind	Note
displayNa me	SingleLanguage UnitNames	01	aggr	This specifies how the unit shall be displayed in documents or in user interfaces of tools. The displayName corresponds to the Unit. Display in an ASAM MCD-2MC file.
				Tags: xml.sequenceOffset=20
factorSiTo Unit	Float	01	attr	This is the factor for the conversion from SI Units to units.
				The inverse is used for conversion from units to SI Units.  Tags: xml.sequenceOffset=30
offsetSiTo Unit	Float	01	attr	This is the offset for the conversion from and to siUnits.
				Tags: xml.sequenceOffset=40
	PhysicalDimens	01	ref	This association represents the physical
physicalDi mension	ion			dimension to which the unit belongs to. Note that only values with units of the same physical dimensions might be converted.  Tags: xml.sequenceOffset=50

Table A.38: Unit



Class	ValueSpecificat	ion (abs	tract)	
Package	M2::AUTOSART	emplates	::Comm	onStructure::Constants
Note	Base class for exobject.	pression	s leadin	g to a value which can be used to initialize a data
Base	ARObject			
Attribute	Туре	Mul.	Kind	Note
shortLabel	Identifier	01	attr	This can be used to identify particular value specifications for human readers, for example elements of a record type.

Table A.39: ValueSpecification

## **B** History of Constraints and Specification Items

# B.1 Constraint History of this Document according to AUTOSAR R4.2.1

### **B.1.1 Added Specification Items in R4.2.1**

Number	Heading
[TPS_DEXT_01000]	AUTOSAR diagnostics supports two kinds of data identifiers
[TPS_DEXT_01001]	Definition of a fixed-sized array
[TPS_DEXT_01002]	Definition of a variable-sized array
[TPS_DEXT_01003]	DiagnosticContributionSet is the central part of the DiagnosticExtract
[TPS_DEXT_01004]	DiagnosticContributionSet defines the scope of the DiagnosticExtract
[TPS_DEXT_01005]	DiagnosticContributionSet can exist independently
[TPS_DEXT_01006]	The role of DiagnosticServiceTables in the context of a Diagnostic-ContributionSet
[TPS_DEXT_01007]	Common properties of a DiagnosticExtract
[TPS_DEXT_01008]	DiagnosticContributionSet defines the scope for the application of the common diagnostic properties
[TPS_DEXT_01009]	Limited support for the configuration of custom diagnostic services
[TPS_DEXT_01010]	Configuration of custom diagnostic services
[TPS_DEXT_01011]	Semantics of DiagnosticSession.id
[TPS_DEXT_01012]	Rationale for the modeling of the multiplicity of DiagnosticAccessPermission.securityLevel
[TPS_DEXT_01013]	Specification of sub-functions by means of attribute DiagnosticService-Instance.category
[TPS_DEXT_01014]	Possible values of the category attribute for diagnostic services
[TPS_DEXT_01015]	Meaning of attributes of DiagnosticIOControl
[TPS_DEXT_01016]	The capability returnControlToEcu
[TPS_DEXT_01017]	Meaning of DiagnosticIOControl.dataIdentifier





TPS_DEXT_01018  InputOutput Control does not define any sub-functions
ISO 14229-1   Manufacturer-specific values for sub-functions of service Ecureset   ITPS_DEXT_01021   Semantics of DiagnosticEcureset.customSubFunctionNumber   ITPS_DEXT_01022   ClearDiagnosticInformation does not define any sub-functions   ITPS_DEXT_01023   WriteMemoryByAddress does not define any sub-functions   ITPS_DEXT_01024   ReadMemoryByAddress does not define any sub-functions   ITPS_DEXT_01025   TransferExit does not define any sub-functions   ITPS_DEXT_01026   DataTransfer does not define any sub-functions   ITPS_DEXT_01027   RequestDownload does not define any sub-functions   ITPS_DEXT_01027   RequestDownload does not define any sub-functions   ITPS_DEXT_01028   RequestUpload does not define any sub-functions   ITPS_DEXT_01029   Correspondence of category values to numerical values mentioned in the ISO 14229-1   ITPS_DEXT_01030   Manufacturer-specific values for sub-functions of service Communication—Control   ITPS_DEXT_01031   Semantics of DiagnosticComControl.customSubFunctionNumber   ITPS_DEXT_01032   Impact of the DiagnosticComControlClass on the state management for CommunicationClusters   ITPS_DEXT_01033   Semantics of triggers in the context of a DiagnosticResponseOnEvent   ITPS_DEXT_01034   Sub-functions of the service ReadDTCInformation   ITPS_DEXT_01035   Existence of DiagnosticRoutine.stop and DiagnosticRoutine.requestResult   ITPS_DEXT_01038   Mork-flow within the execution of the diagnostic service SecurityAccess   ITPS_DEXT_01039   Identification of the sub-function of DiagnosticSecurityAccess.securityLevel≪atpSplitable≫   ITPS_DEXT_01040   Use case where the DiagnosticSecurityAccess.requestSeedId   ITPS_DEXT_01041   Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement   ITPS_DEXT_01044   Dem uses DiagnosticServiceDataMapping   ITPS_DEXT_01044   BswServiceDependency needs to act as the target of a reference   ITPS_DEXT_01044   BswServiceDependency needs to act as the target of a reference   ITPS_DEXT_01044   ITPS_DEXT_01044   ITPS_DEXT_01044   ITPS_DEXT_01044   IT
TPS_DEXT_01021   Semantics of DiagnosticEcuReset.customSubFunctionNumber   TPS_DEXT_01022   ClearDiagnosticInformation does not define any sub-functions   TPS_DEXT_01023   WriteMemoryByAddress does not define any sub-functions   TPS_DEXT_01024   ReadMemoryByAddress does not define any sub-functions   TPS_DEXT_01025   TransferExit does not define any sub-functions   TPS_DEXT_01026   DataTransfer does not define any sub-functions   TPS_DEXT_01027   RequestDownload does not define any sub-functions   TPS_DEXT_01028   RequestUpload does not define any sub-functions   TPS_DEXT_01029   Correspondence of category values to numerical values mentioned in the ISO 14229-1   TPS_DEXT_01030   Manufacturer-specific values for sub-functions of service Communication—Control   Semantics of DiagnosticComControl.customSubFunctionNumber   TPS_DEXT_01032   Impact of the DiagnosticComControlClass on the state management for CommunicationClusters   TPS_DEXT_01033   Semantics of triggers in the context of a DiagnosticResponseOnEvent   TPS_DEXT_01035   Sub-functions of the service ReadDTCInformation   Existence of DiagnosticRoutine.stop and DiagnosticRoutine.requestResult   TPS_DEXT_01036   Work-flow within the execution of the diagnostic service SecurityAccess   TPS_DEXT_01039   Identification of the sub-function of DiagnosticSecurityAccess.securityLevel≪atpSplitable≫   TPS_DEXT_01039   Identification of the sub-function of DiagnosticSecurityAccess.securityLevel≪atpSplitable   Semantics of attribute DiagnosticExtract refers to software-components   TPS_DEXT_01041   Dem uses DiagnosticServiceDataMapping   TPS_DEXT_01043   Purpose of DiagnosticServiceDataMapping   TPS_DEXT_01044   BswServiceDependency needs to act as the target of a reference   TPS_DEXT_01044   BswServiceDependency needs to act as the target of a reference   TPS_DEXT_01044   Test_01044   Test_01045   Test_01045   Test_01045   Test_01046
[TPS_DEXT_01022]         ClearDiagnosticInformation does not define any sub-functions           [TPS_DEXT_01023]         WriteMemoryByAddress does not define any sub-functions           [TPS_DEXT_01024]         ReadMemoryByAddress does not define any sub-functions           [TPS_DEXT_01025]         TransferExit does not define any sub-functions           [TPS_DEXT_01026]         DataTransfer does not define any sub-functions           [TPS_DEXT_01027]         RequestDownload does not define any sub-functions           [TPS_DEXT_01028]         RequestUpload does not define any sub-functions           [TPS_DEXT_01029]         Correspondence of category values to numerical values mentioned in the ISO 14229-1           [TPS_DEXT_01030]         Manufacturer-specific values for sub-functions of service Communication—Control           [TPS_DEXT_01031]         Semantics of DiagnosticComControl.customSubFunctionNumber           [TPS_DEXT_01032]         Impact of the DiagnosticComControlClass on the state management for CommunicationClusters           [TPS_DEXT_01033]         Semantics of triggers in the context of a DiagnosticResponseOnEvent           [TPS_DEXT_01034]         Sub-functions of the service ReadDTCInformation           [TPS_DEXT_01035]         Existence of DiagnosticRoutine.stop and DiagnosticRoutine.requestResult           [TPS_DEXT_01036]         Work-flow within the execution of the diagnostic Service SecurityAccess.securityLevel≪atpSplitable≫           [TPS_DEXT_0
TPS_DEXT_01023  WriteMemoryByAddress does not define any sub-functions
TPS_DEXT_01024  ReadMemoryByAddress does not define any sub-functions
TPS_DEXT_01025] TransferExit does not define any sub-functions  [TPS_DEXT_01026] DataTransfer does not define any sub-functions  [TPS_DEXT_01027] RequestDownload does not define any sub-functions  [TPS_DEXT_01028] RequestUpload does not define any sub-functions  [TPS_DEXT_01029] Correspondence of category values to numerical values mentioned in the ISO 14229-1  [TPS_DEXT_01030] Manufacturer-specific values for sub-functions of service Communication—Control  [TPS_DEXT_01031] Semantics of DiagnosticComControl.customSubFunctionNumber  [TPS_DEXT_01032] Impact of the DiagnosticComControlClass on the state management for CommunicationClusters  [TPS_DEXT_01033] Semantics of triggers in the context of a DiagnosticResponseOnEvent  [TPS_DEXT_01034] Sub-functions of the service ReadDTCInformation  [TPS_DEXT_01035] Existence of DiagnosticRoutine.stop and DiagnosticRoutine.requestResult  [TPS_DEXT_01036] Work-flow within the execution of the diagnostic service SecurityAccess  [TPS_DEXT_01037] Semantics of DiagnosticSecurityAccess.requestSeedId  [TPS_DEXT_01038] Motivation for making the reference DiagnosticSecurityAccess.securityLevel≪atpSplitable≫  [TPS_DEXT_01039] Identification of the sub-function of DiagnosticSecurityAccess.securityLevel≪atpSplitable DiagnosticSecurityAccess.orcontrol  [TPS_DEXT_01040] Use case where the DiagnosticExtract refers to software-components  [TPS_DEXT_01041] Semantics of attribute DiagnosticServiceDataMapping.diagnostic—DataElement  [TPS_DEXT_01042] Dem uses DiagnosticServiceDataMapping  [TPS_DEXT_01043] Purpose of DiagnosticServiceSwMapping  [TPS_DEXT_01044] BswServiceDependency needs to act as the target of a reference
TPS_DEXT_01026] DataTransfer does not define any sub-functions  TPS_DEXT_01027] RequestDownload does not define any sub-functions  TPS_DEXT_01028] RequestUpload does not define any sub-functions  TPS_DEXT_01029] Correspondence of category values to numerical values mentioned in the ISO 14229-1  TPS_DEXT_01030] Manufacturer-specific values for sub-functions of service Communication—Control  TPS_DEXT_01031] Semantics of DiagnosticComControl.customSubFunctionNumber  TPS_DEXT_01032] Impact of the DiagnosticComControlClass on the state management for CommunicationClusters  TPS_DEXT_01033] Semantics of triggers in the context of a DiagnosticResponseOnEvent  TPS_DEXT_01034] Sub-functions of the service ReadDTCInformation  TPS_DEXT_01035] Existence of DiagnosticRoutine.stop and DiagnosticRoutine.requestResult  TPS_DEXT_01036] Work-flow within the execution of the diagnostic service SecurityAccess  TPS_DEXT_01038] Motivation for making the reference DiagnosticSecurityAccess.securityLevel≪atpSplitable≫  TPS_DEXT_01039] Identification of the sub-function of DiagnosticSessionControl  TPS_DEXT_01040] Use case where the DiagnosticExtract refers to software-components  TPS_DEXT_01041] Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement  TPS_DEXT_01042] Dem uses DiagnosticServiceDataMapping  TPS_DEXT_01043] Purpose of DiagnosticServiceSwMapping  TPS_DEXT_01044] BswServiceDependency needs to act as the target of a reference
TPS_DEXT_01027   RequestDownload does not define any sub-functions
TPS_DEXT_01028  RequestUpload does not define any sub-functions
TPS_DEXT_01029] Correspondence of category values to numerical values mentioned in the ISO 14229-1  [TPS_DEXT_01030] Manufacturer-specific values for sub-functions of service Communication—Control  [TPS_DEXT_01031] Semantics of DiagnosticComControl.customSubFunctionNumber  [TPS_DEXT_01032] Impact of the DiagnosticComControlClass on the state management for CommunicationClusters  [TPS_DEXT_01033] Semantics of triggers in the context of a DiagnosticResponseOnEvent  [TPS_DEXT_01034] Sub-functions of the service ReadDTCInformation  [TPS_DEXT_01035] Existence of DiagnosticRoutine.stop and DiagnosticRoutine.requestResult  [TPS_DEXT_01036] Work-flow within the execution of the diagnostic service SecurityAccess  [TPS_DEXT_01037] Semantics of DiagnosticSecurityAccess.requestSeedId  [TPS_DEXT_01038] Motivation for making the reference DiagnosticSecurityAccess.securityLevel≪atpSplitable≫  [TPS_DEXT_01039] Identification of the sub-function of DiagnosticSessionControl  [TPS_DEXT_01040] Use case where the DiagnosticExtract refers to software-components  [TPS_DEXT_01041] Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement  [TPS_DEXT_01042] Dem uses DiagnosticServiceDataMapping  [TPS_DEXT_01044] BswServiceDependency needs to act as the target of a reference
ISO 14229-1     ITPS_DEXT_01030   Manufacturer-specific values for sub-functions of service Communication—Control     Control   Semantics of DiagnosticComControl.customSubFunctionNumber     ITPS_DEXT_01032   Impact of the DiagnosticComControlClass on the state management for CommunicationClusters     ITPS_DEXT_01033   Semantics of triggers in the context of a DiagnosticResponseOnEvent     ITPS_DEXT_01034   Sub-functions of the service ReadDTCInformation     ITPS_DEXT_01035   Existence of DiagnosticRoutine.stop and DiagnosticRoutine.requestResult     ITPS_DEXT_01036   Work-flow within the execution of the diagnostic service SecurityAccess     ITPS_DEXT_01037   Semantics of DiagnosticSecurityAccess.requestSeedId     ITPS_DEXT_01038   Motivation for making the reference DiagnosticSecurityAccess.securityLevel≪atpSplitable≫     ITPS_DEXT_01039   Identification of the sub-function of DiagnosticSessionControl     ITPS_DEXT_01040   Use case where the DiagnosticExtract refers to software-components     ITPS_DEXT_01041   Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement     ITPS_DEXT_01042   Dem uses DiagnosticServiceDataMapping     ITPS_DEXT_01044   BswServiceDependency needs to act as the target of a reference
TPS_DEXT_01031] Semantics of DiagnosticComControl.customSubFunctionNumber  [TPS_DEXT_01032] Impact of the DiagnosticComControlClass on the state management for CommunicationClusters  [TPS_DEXT_01033] Semantics of triggers in the context of a DiagnosticResponseOnEvent  [TPS_DEXT_01034] Sub-functions of the service ReadDTCInformation  [TPS_DEXT_01035] Existence of DiagnosticRoutine.stop and DiagnosticRoutine.requestResult  [TPS_DEXT_01036] Work-flow within the execution of the diagnostic service SecurityAccess  [TPS_DEXT_01037] Semantics of DiagnosticSecurityAccess.requestSeedId  [TPS_DEXT_01038] Motivation for making the reference DiagnosticSecurityAccess.securityLevel≪atpSplitable≫  [TPS_DEXT_01039] Identification of the sub-function of DiagnosticSessionControl  [TPS_DEXT_01040] Use case where the DiagnosticExtract refers to software-components  [TPS_DEXT_01041] Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement  [TPS_DEXT_01042] Dem uses DiagnosticServiceDataMapping  [TPS_DEXT_01043] Purpose of DiagnosticServiceSwMapping  [TPS_DEXT_01044] BswServiceDependency needs to act as the target of a reference
Impact of the DiagnosticComControlClass on the state management for CommunicationClusters
CommunicationClusters
[TPS_DEXT_01034]         Sub-functions of the service ReadDTCInformation           [TPS_DEXT_01035]         Existence of DiagnosticRoutine.stop and DiagnosticRoutine.requestResult           [TPS_DEXT_01036]         Work-flow within the execution of the diagnostic service SecurityAccess           [TPS_DEXT_01037]         Semantics of DiagnosticSecurityAccess.requestSeedId           [TPS_DEXT_01038]         Motivation for making the reference DiagnosticSecurityAccess.securityLevel≪atpSplitable≫           [TPS_DEXT_01039]         Identification of the sub-function of DiagnosticSessionControl           [TPS_DEXT_01040]         Use case where the DiagnosticExtract refers to software-components           [TPS_DEXT_01041]         Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement           [TPS_DEXT_01042]         Dem uses DiagnosticServiceDataMapping           [TPS_DEXT_01043]         Purpose of DiagnosticServiceSwMapping           [TPS_DEXT_01044]         BswServiceDependency needs to act as the target of a reference
[TPS_DEXT_01035] Existence of DiagnosticRoutine.stop and DiagnosticRoutine.requestResult  [TPS_DEXT_01036] Work-flow within the execution of the diagnostic service SecurityAccess  [TPS_DEXT_01037] Semantics of DiagnosticSecurityAccess.requestSeedId  [TPS_DEXT_01038] Motivation for making the reference DiagnosticSecurityAccess.securityLevel≪atpSplitable≫  [TPS_DEXT_01039] Identification of the sub-function of DiagnosticSessionControl  [TPS_DEXT_01040] Use case where the DiagnosticExtract refers to software-components  [TPS_DEXT_01041] Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement  [TPS_DEXT_01042] Dem uses DiagnosticServiceDataMapping  [TPS_DEXT_01043] Purpose of DiagnosticServiceSwMapping  [TPS_DEXT_01044] BswServiceDependency needs to act as the target of a reference
questResult     [TPS_DEXT_01036]   Work-flow within the execution of the diagnostic service SecurityAccess     [TPS_DEXT_01037]   Semantics of DiagnosticSecurityAccess.requestSeedId     [TPS_DEXT_01038]   Motivation for making the reference DiagnosticSecurityAccess.securityLevel≪atpSplitable≫     [TPS_DEXT_01039]   Identification of the sub-function of DiagnosticSessionControl     [TPS_DEXT_01040]   Use case where the DiagnosticExtract refers to software-components     [TPS_DEXT_01041]   Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement     [TPS_DEXT_01042]   Dem uses DiagnosticServiceDataMapping     [TPS_DEXT_01043]   Purpose of DiagnosticServiceSwMapping     [TPS_DEXT_01044]   BswServiceDependency needs to act as the target of a reference
[TPS_DEXT_01037]       Semantics of DiagnosticSecurityAccess.requestSeedId         [TPS_DEXT_01038]       Motivation for making the reference DiagnosticSecurityAccess.securityLevel≪atpSplitable≫         [TPS_DEXT_01039]       Identification of the sub-function of DiagnosticSessionControl         [TPS_DEXT_01040]       Use case where the DiagnosticExtract refers to software-components         [TPS_DEXT_01041]       Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement         [TPS_DEXT_01042]       Dem uses DiagnosticServiceDataMapping         [TPS_DEXT_01043]       Purpose of DiagnosticServiceSwMapping         [TPS_DEXT_01044]       BswServiceDependency needs to act as the target of a reference
[TPS_DEXT_01038]       Motivation for making the reference DiagnosticSecurityAccess.securityLevel≪atpSplitable≫         [TPS_DEXT_01039]       Identification of the sub-function of DiagnosticSessionControl         [TPS_DEXT_01040]       Use case where the DiagnosticExtract refers to software-components         [TPS_DEXT_01041]       Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement         [TPS_DEXT_01042]       Dem uses DiagnosticServiceDataMapping         [TPS_DEXT_01043]       Purpose of DiagnosticServiceSwMapping         [TPS_DEXT_01044]       BswServiceDependency needs to act as the target of a reference
rityLevel≪atpSplitable≫  [TPS_DEXT_01039] Identification of the sub-function of DiagnosticSessionControl  [TPS_DEXT_01040] Use case where the DiagnosticExtract refers to software-components  [TPS_DEXT_01041] Semantics of attribute DiagnosticServiceDataMapping.diagnostic-DataElement  [TPS_DEXT_01042] Dem uses DiagnosticServiceDataMapping  [TPS_DEXT_01043] Purpose of DiagnosticServiceSwMapping  [TPS_DEXT_01044] BswServiceDependency needs to act as the target of a reference
[TPS_DEXT_01040]       Use case where the DiagnosticExtract refers to software-components         [TPS_DEXT_01041]       Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement         [TPS_DEXT_01042]       Dem uses DiagnosticServiceDataMapping         [TPS_DEXT_01043]       Purpose of DiagnosticServiceSwMapping         [TPS_DEXT_01044]       BswServiceDependency needs to act as the target of a reference
[TPS_DEXT_01041] Semantics of attribute DiagnosticServiceDataMapping.diagnostic-DataElement  [TPS_DEXT_01042] Dem uses DiagnosticServiceDataMapping  [TPS_DEXT_01043] Purpose of DiagnosticServiceSwMapping  [TPS_DEXT_01044] BswServiceDependency needs to act as the target of a reference
DataElement  [TPS_DEXT_01042] Dem uses DiagnosticServiceDataMapping  [TPS_DEXT_01043] Purpose of DiagnosticServiceSwMapping  [TPS_DEXT_01044] BswServiceDependency needs to act as the target of a reference
[TPS_DEXT_01043] Purpose of DiagnosticServiceSwMapping [TPS_DEXT_01044] BswServiceDependency needs to act as the target of a reference
[TPS_DEXT_01044] BswServiceDependency needs to act as the target of a reference
ITPS DEXT 010451 Supported diagnostic services
[11 0_DEA1_01040]   Supported diagnostic services
[TPS_DEXT_01046] ECU configuration is not suitable to be exchanged between partners in an ECU development project
[TPS_DEXT_01047] Differences in the development processes for diagnostics at automotive OEMs and ECU suppliers
[TPS_DEXT_01048] Actual algorithm for the diagnostic event debouncing
[TPS_DEXT_01049] Consistency of DiagnosticServiceSwMapping with respect to routine IDs
[TPS_DEXT_01050] Consistency of DiagnosticServiceSwMapping with respect to data IDs
[TPS_DEXT_01051] Consistency of DiagnosticServiceSwMapping with respect to data IDs
[TPS_DEXT_01052] Existence of attribute DiagnosticServiceInstance.accessPermission





Number	Heading
[TPS_DEXT_01053]	Existence of DiagnosticSecurityAccess.securityLevel
[TPS_DEXT_01054]	Existence of DiagnosticDataByIdentifier.dataIdentifier
[TPS_DEXT_01055]	Standardized values of DiagnosticContributionSet.category
[TPS_DEXT_01056]	Applicable values for DiagnosticEcuReset.category
[TPS_DEXT_01057]	Allowed values of DiagnosticComControl.category
[TPS_DEXT_01058]	Standardized values for DiagnosticDynamicallyDefineDataIdenti-fier.category
[TPS_DEXT_01059]	Applicable values for DiagnosticPeriodicRate.category
[TPS_DEXT_01060]	Applicable values for DiagnosticReadDTCInformation.category
[TPS_DEXT_01061]	Supported scenarios for the definition of access permission
[TPS_DEXT_01062]	Existence of DiagnosticServiceClass.accessPermissionValidity in an incomplete model
[TPS_DEXT_01063]	Existence of DiagnosticServiceClass.accessPermissionValidity in a complete model
[TPS_DEXT_01064]	Textually formulated content attached to DiagnosticTroubleCode
[TPS_DEXT_01065]	Different approaches to provide semi-formal textual content attached to a DiagnosticTroubleCode
[TPS_DEXT_01066]	Standardized values of DiagnosticTroubleCode.introduction.trace
[TPS_DEXT_01067]	Textually formulated content attached to DiagnosticEvent
[TPS_DEXT_01068]	Textual description with respect to the DiagnosticEvent
[TPS_DEXT_01069]	Standardized values of DiagnosticEvent.introduction.structure-dReq
[TPS_DEXT_01070]	Description of textually semi-formal formulated pre- and post-conditions for the validity of DiagnosticAccessPermission
[TPS_DEXT_01071]	Standardized values of DiagnosticAccessPermission.introduction.structuredReq
[TPS_DEXT_01072]	Purpose of attribute DiagnosticDataIdentifier.representsVin
[TPS_DEXT_01073]	Diagnostic properties that are specific to an individual EcuInstance
[TPS_DEXT_01074]	Difference between the attributes DiagnosticComControl.specificChannel and DiagnosticComControl.subNodeChannel
[TPS_DEXT_01075]	standardized values for the attribute DiagnosticControlDTCSetting.category
[TPS_DEXT_01076]	Identification of sub-functions of diagnostic service ControlDTCSetting
[TPS_DEXT_01077]	Modeling of DiagnosticRoutine
[TPS_DEXT_01078]	Not possible to use the attribute category for the identification of the sub- function of diagnostic service RoutineControl
[TPS_DEXT_01079]	Modeling of the arguments to a DiagnosticRoutine
[TPS_DEXT_01080]	Diagnostic Routine needs to be started
[TPS_DEXT_01081]	Modeling of DiagnosticSessionControl
[TPS_DEXT_01082]	Existence of DiagnosticSessionControl.diagnosticSession
[TPS_DEXT_01083]	Semantics of a DiagnosticEvent
[TPS_DEXT_01084]	DiagnosticEvent can be connected to one or multiple indicators
[TPS_DEXT_01085]	Semantics of DiagnosticConditionGroups



Number	Heading
[TPS_DEXT_01086]	Reference to DiagnosticOperationCycle
[TPS_DEXT_01087]	Semantics of DiagnosticOperationCycle
[TPS_DEXT_01088]	Semantics of DiagnosticRoutine.id
[TPS_DEXT_01089]	Definition of an identifier of a DiagnosticIOControl
[TPS_DEXT_01090]	Diagnostic service RequestFileTransfer does not define any sub- functions
[TPS_DEXT_03000]	ISO 14229-1 reserves values of DiagnosticTroubleCodeGroup.group-Number
[TPS_DEXT_03001]	Different types of conditions
[TPS_DEXT_03002]	Two kind of mappings
[TPS_DEXT_03003]	Semantics of DiagnosticEventToTroubleCodeUdsMapping
[TPS_DEXT_03004]	DiagnosticEvent <b>and</b> DiagnosticDebounceAlgorithmProps
[TPS_DEXT_03005]	Existence of DiagnosticEventToDebounceAlgorithmMapping
[TPS_DEXT_03006]	Values of the individual DiagnosticStorageConditionS
[TPS_DEXT_03007]	Semantics of DiagnosticEventPortMapping
[TPS_DEXT_03008]	Semantics of DiagnosticExtendedDataRecord
[TPS_DEXT_03009]	Semantics of DiagnosticFreezeFrame
[TPS_DEXT_03010]	Combination of DiagnosticConditions to DiagnosticCondition-Groups
[TPS_DEXT_03011]	Clearing request for a DiagnosticEvent
[TPS_DEXT_03012]	Three kinds of DTCs
[TPS_DEXT_03013]	Common properties of a DTC
[TPS_DEXT_03014]	Semantics of DiagnosticTroubleCodeGroup
[TPS_DEXT_03015]	EnableConditions have to be put into a DiagnosticEnableCondition-Group
[TPS_DEXT_03016]	StorageConditions have to be put into a DiagnosticStorageConditionGroup
[TPS_DEXT_03017]	Semantics of DiagnosticOperationCyclePortMapping
[TPS_DEXT_03018]	Semantics of DiagnosticEnableConditionPortMapping
[TPS_DEXT_03019]	Semantics of DiagnosticStorageConditionPortMapping
[TPS_DEXT_03020]	Semantics of DiagnosticDemProvidedDataMapping
[TPS_DEXT_03021]	Aging
[TPS_DEXT_03022]	Different kinds of DiagnosticIndicatorS

Table B.1: Added Specification Items in 4.2.1

#### **B.1.2** Added Constraints in R4.2.1

Number	Heading	
[constr_1324]	Existence of attribute DiagnosticDataIdentifier.representsVin	
[constr_1325]	Allowed attributes of SwDataDefProps for DiagnosticDataElement.sw-DataDefProps	
[constr_1326]	Existence of a variable-sized array	
[constr_1327]	Multiplicity of DiagnosticContributionSet.ecuInstance	





Number	Heading
[constr_1328]	Consistency of DiagnosticContributionSet.ecuInstance and Diagnostic-ServiceTable.ecuInstance
[constr_1329]	Existence of concrete sub-classes of DiagnosticServiceClass in the context created by a DiagnosticContributionSet
[constr_1330]	Custom service identifier shall not overlap with standardized service identifiers
[constr_1331]	Existence of DiagnosticEcuReset.customSubFunctionNumber
[constr_1332]	Value range for DiagnosticEcuReset.customSubfunctionNumber
[constr_1333]	<b>Existence of</b> DiagnosticMemoryIdentifier.memoryLowAddress <b>and</b> DiagnosticMemoryIdentifier.memoryHighAddress
[constr_1334]	Existence of DiagnosticComControl.customSubFunctionNumber
[constr_1335]	Possible values for DiagnosticComControl.customSubFunctionNumber
[constr_1336]	Applicable value range for DiagnosticComControlSpecificChannel.subnet-Number
[constr_1337]	Allowed value range for attribute DiagnosticComControlSubNodeChannel.subNodeNumber
[constr_1338]	<b>Maximum number of aggregated DiagnosticReadDataByPeriodicIDClass.periodicRate</b>
[constr_1339]	Existence of DiagnosticRoutine.start
[constr_1340]	Consistency of DiagnosticServiceSwMapping with respect to synchronously called DiagnosticRoutines
[constr_1341]	Consistency of DiagnosticServiceSwMapping with respect to asynchronously called DiagnosticRoutines
[constr_1342]	Possible values for DiagnosticSecurityAccess.requestSeedId
[constr_1343]	Simultaneous existence of the attributes DiagnosticServiceDataMapping.diagnosticDataElement and DiagnosticDataByIdentifier.dataIdentifier
[constr_1344]	Condition for the identification of data types of attributes DiagnosticServiceDataMapping.mappedDataElement and DiagnosticServiceDataMapping.diagnosticDataElement
[constr_1345]	DiagnosticDataElement shall not (finally) be aggregated by a DiagnosticRoutine
[constr_1346]	Allowed values of DiagnosticServiceSwMapping.serviceInstance
[constr_1347]	Existence of attributes of DiagnosticServiceSwMapping
[constr_1349]	Value of udsDtcValue shall be unique
[constr_1350]	Value of DiagnosticTroubleCodeGroup.groupNumber shall be unique
[constr_1351]	Value of DiagnosticTroubleCodeGroup.groupNumber
[constr_1352]	Existence of maxNumberFreezeFrameRecords vs. freezeFrame
[constr_1353]	Applicability of [constr_1352]
[constr_1354]	Existence of attribute DiagnosticTroubleCodeProps.freezeFrameContent
[constr_1355]	Value of recordNumber
[constr_1356]	Value of recordNumber shall be unique
[constr_1357]	Value of recordNumber
[constr_1358]	Value of recordNumber shall be unique
[constr_1359]	Existence of attribute DiagnosticDebounceAlgorithmProps.debounceCounterStorage



Number	Heading
[constr_1360]	Usage of DiagEventDebounceMonitorInternal is not supported in the context of DiagnosticDebounceAlgorithmProps
[constr_1361]	Number of DiagnosticEventToEnableConditionGroupMapping elements per DiagnosticEvent
[constr_1362]	Number of DiagnosticEventToStorageConditionGroupMapping elements per DiagnosticEvent
[constr_1365]	Multiplicity of DiagnosticResponseOnEvent.event
[constr_1366]	Event ID in the context of diagnostic service ResponseOnEvent shall be unique
[constr_1376]	Multiplicity of reference DiagnosticTroubleCodeProps.memoryDestination
[constr_1377]	Existence of reference DiagnosticTroubleCodeProps.memoryDestination
[constr_1378]	Value of DiagnosticMemoryDestinationUserDefined.memoryId
[constr_1379]	Existence of DiagnosticMemoryDestinationPrimary
[constr_1380]	Existence of DiagnosticMemoryDestinationMirror

**Table B.2: Added Constraints in R4.2.1** 

# B.2 Constraint History of this Document according to AUTOSAR R4.2.2

### B.2.1 Added Traceables in 4.2.2

none

### **B.2.2 Changed Traceables in 4.2.2**

none

### **B.2.3** Deleted Traceables in 4.2.2

none

### **B.2.4** Added Constraints in 4.2.2

ld	Heading
[constr_1394]	Value of DiagnosticDataElement.maxNumberOfElements depending on its
	existence

Table B.3: Added Constraints in 4.2.2



### **B.2.5 Changed Constraints in 4.2.2**

none

### **B.2.6 Deleted Constraints in 4.2.2**

none

# B.3 Constraint History of this Document according to AUTOSAR R4.3.0

### B.3.1 Added Traceables in 4.3.0

Id	Heading
[TPS_DEXT_01091]	Relation between a DiagnosticServiceTable and one or more Diag-
	nosticConnection <b>S</b>
[TPS_DEXT_01092]	Semantics of DiagnosticParameterIdentifier
[TPS_DEXT_01093]	Definition of legislative freeze frame for WWWH-OBD
[TPS_DEXT_01094]	Semantics of meta-class DiagnosticTroubleCodeUdsToTrouble-
	CodeObdMapping CodeObdMapping
[TPS_DEXT_01095]	Definition of "alias" diagnostic event for the creation of a Fim configuration in
	the diagnostic extract
[TPS_DEXT_01096]	Semantics of DiagnosticFunctionInhibitSource
[TPS_DEXT_01097]	Standardized value of StructuredReq.category for the modeling of Di-
	agnosticFunctionInhibitSource
[TPS_DEXT_01098]	Semantics of attribute DiagnosticFunctionInhibitSource.event
[TPS_DEXT_01099]	Semantics of attribute DiagnosticFunctionInhibitSource.event-
	Group
[TPS_DEXT_01100]	Consequence of the existence of DiagnosticFimAliasEventMapping
[TPS_DEXT_01101]	Consequence of the existence of DiagnosticFimAliasEventGroupMap-
TTDO DEVIT OU LOCA	ping
[TPS_DEXT_01102]	Semantics of DiagnosticFimFunctionMapping
[TPS_DEXT_01103]	Semantics of meta-class DiagnosticJ1939SpnMapping
[TPS_DEXT_01104]	Difference between DiagnosticJ1939FreezeFrame and Diagnos-
TTDO DEVT 044051	ticJ1939ExpandedFreezeFrame
[TPS_DEXT_01105]	Relation of DiagnosticJ1939Spn to DiagnosticJ1939FreezeFrame
ITDO DEVT 044001	and DiagnosticJ1939ExpandedFreezeFrame
[TPS_DEXT_01106]	Relation of Controller Application to SPN
[TPS_DEXT_01107]	Definition of service-only DTC
[TPS_DEXT_01108]	Purpose of the DiagnosticJ1939SwMapping
[TPS_DEXT_01110]	Standardized values of Diagnostic Tumpr Group.category
[TPS_DEXT_01111]	Legislative freeze frame for the OBD-II case
[TPS_DEXT_01112]	Definition of a diagnostic trouble code for the implementation of WWH-OBD
[TPS_DEXT_01113]	Evaluation of a DiagnosticEnvConditionFormula
[TPS_DEXT_01114]	DiagnosticEnvConditionFormula that has no parts
[TPS_DEXT_01115]	DiagnosticEnvConditionFormula that has one part
[TPS_DEXT_01116]	DiagnosticEnvConditionFormula that has more than one part
[TPS_DEXT_01117]	Semantics of DiagnosticEnvConditionFormula.nrcValue



[TPS_DEXT_01118]	Semantics of DiagnosticEnvDataCondition
[TPS_DEXT_01119]	Semantics of DiagnosticEnvModeCondition
[TPS_DEXT_01120]	Comparison of the value of a ModeDeclarationGroupPrototype with a
	ModeDeclaration
[TPS_DEXT_01121]	Semantics of DiagnosticFunctionIdentifier
[TPS_DEXT_01122]	Indication whether a EcuInstance supports OBD
[TPS_DEXT_01124]	Semantics of meta-class DiagnosticProtocol
[TPS_DEXT_01125]	Support for diagnostic service RequestCurrentPowertrainDiagnos-
	ticData
[TPS_DEXT_01126]	Support of OBD service RequestPowertrainFreezeFrameData
[TPS_DEXT_01127]	Semantics of meta-class DiagnosticRequestEmissionRelatedDTC
[TPS_DEXT_01128]	Semantics of meta-class DiagnosticClearResetEmissionRelated-
	Info
[TPS_DEXT_01129]	Support for OBD diagnostic service RequestOnBoardMonitor-
	ingTestResults
[TPS_DEXT_01130]	Support of OBD diagnostic service RequestControlOfOnBoardDevice
[TPS_DEXT_01131]	Support for OBD diagnostic service RequestVehicleInformation
[TPS_DEXT_01132]	Support for OBD diagnostic service RequestEmissionRelatedDiagnos-
	ticTroubleCodesPermanentStatus
[TPS_DEXT_01133]	Support for WWH-OBD within the diagnostic extract
[TPS_DEXT_01134]	Definition of a DiagnosticDataElement used in the context of a DID ob-
	tained by sender-receiver communication
[TPS_DEXT_01135]	Definition of a DiagnosticDataElement used in the context of a DID ob-
	tained by client/server communication
[TPS_DEXT_01136]	Definition of a DiagnosticDataElement used in the context of a diagnostic
	routine
[TPS_DEXT_01137]	Applicability of DiagnosticDataIdentifier.didSize
[TPS_DEXT_01138]	Applicability of DiagnosticDataIdentifier.supportInfoByte
[TPS_DEXT_01139]	Semantics of the references from DiagnosticAccessPermission

Table B.4: Added Traceables in 4.3.0

### **B.3.2** Changed Traceables in 4.3.0

ld	Heading
[TPS_DEXT_01006]	The role of DiagnosticServiceTableS
[TPS_DEXT_01052]	Existence of attribute DiagnosticServiceInstance.accessPermis-
	sion
[TPS_DEXT_01060]	Applicable values for DiagnosticReadDTCInformation.category
[TPS_DEXT_01074]	Difference between the attributes DiagnosticComControlClass.speci-
	ficChannel and DiagnosticComControlClass.subNodeChannel
[TPS_DEXT_03003]	Semantics of DiagnosticEventToTroubleCodeUdsMapping

Table B.5: Changed Traceables in 4.3.0

### **B.3.3** Deleted Traceables in 4.3.0

ld	Heading		
[TPS_DEXT_01058]	Standardized values for DiagnosticDynamicallyDefineDataIdenti-		
	fier.category		
[TPS_DEXT_01059]	Applicable values for DiagnosticPeriodicRate.category		

Table B.6: Deleted Traceables in 4.3.0



### **B.3.4** Added Constraints in 4.3.0

ld	Heading
[constr_1405]	Value of DiagnosticProtocol.serviceTable vs. DiagnosticServic-
	eTable.protocolKind
[constr_1406]	DiagnosticServiceTable.diagnosticConnection VS. DiagnosticProto-
	col.diagnosticConnection
[constr_1411]	<b>Existence of</b> DiagnosticMemoryIdentifier.memoryHighAddressLabel <b>vs</b> .
	DiagnosticMemoryIdentifier.memoryHighAddress
[constr_1412]	<b>Existence of</b> DiagnosticMemoryIdentifier.memoryLowAddressLabel <b>vs</b> .
	DiagnosticMemoryIdentifier.memoryLowAddress
[constr_1419]	Value of DiagnosticSecurityLevel.accessDataRecordSize
[constr_1421]	Consistency of DiagnosticDynamicallyDefineDataIdentifierClass.sub-
	function
[constr_1435]	Debouncing in the presence of a DiagnosticEventPortMapping
[constr_1447]	Restrictions for the value of DiagnosticParameterIdentifier.id
[constr_1448]	Interval of DiagnosticParameterIdentifier.id
[constr_1449]	PID shall only carry a fixed-length collection of data
[constr_1450]	Service mapping for ODB mode 0x01 for DiagnosticParameterIdentifier
[constr_1451]	Service mapping for OBD mode 0x09 for DiagnosticInfoType
[constr_1452]	Service mapping for OBD mode 0x08 for DiagnosticInfoType
[constr_1453]	References from DiagnosticFunctionInhibitSource
[constr_1454]	DiagnosticFimFunctionMapping shall only reference a SwcServiceDepen-
	dency that aggregates FunctionInhibitionNeeds
[constr_1455]	Relation of DiagnosticJ1939Node to J1939NmNode
[constr_1456]	Valid interval for attribute DiagnosticTroubleCodeJ1939.fmi
[constr_1457]	Service-only DTCs shall refer to a common memory section
[constr_1458]	Reference to DiagnosticMemoryDestination
[constr_1459]	Existence of attributes of DiagnosticTroubleCodeProps
[constr_1460]	Restrictions for the value of DiagnosticInfoType.id
[constr_1461]	Restrictions for the value of DiagnosticTestRoutineIdentifier.id
[constr_1462]	Restrictions for the value of DiagnosticTestResult.testIdentifier.id
[constr_1464]	Allowed value range of DiagnosticEnvConditionFormula.nrcValue
[constr_1465]	Allowed values of compareType in the context of a DiagnosticEnvDataCondi-
r	tion
[constr_1466]	Allowed values of compareType in the context of a DiagnosticEnvModeCondi-
[agents 4.407]	tion Private in Discourse in Di
[constr_1467]	References in DiagnosticEnvModeCondition
[constr_1470]	Value of DiagnosticParameter.bitOffset
[constr_1471]	Existence of DiagnosticDataIdentifier.didSize
[constr_1472]	Existence of DiagnosticDataIdentifier.supportInfoByte

Table B.7: Added Constraints in 4.3.0

### **B.3.5 Changed Constraints in 4.3.0**

ld	Heading				
[constr_1325]	Allowed attributes of SwDataDefProps for DiagnosticDataElement.sw-				
	DataDefProps				
[constr_1327]	Multiplicity of DiagnosticEcuInstanceProps.ecuInstance				
[constr_1328]	Consistency of DiagnosticEcuInstanceProps.ecuInstance and Diagnos-				
	ticServiceTable.ecuInstance				

Table B.8: Changed Constraints in 4.3.0



### **B.3.6** Deleted Constraints in 4.3.0

none

## **C** Glossary

- Artifact This is a Work Product Definition that provides a description and definition for tangible work product types. Artifacts may be composed of other artifacts ([21]).At a high level, an artifact is represented as a single conceptual file.
- **AUTOSAR Tool** This is a software tool which supports one or more tasks defined as AUTOSAR tasks in the methodology. Depending on the supported tasks, an AUTOSAR tool can act as an authoring tool, a converter tool, a processor tool or as a combination of those (see separate definitions).
- **AUTOSAR Authoring Tool** An AUTOSAR Tool used to create and modify AUTOSAR XML Descriptions. Example: System Description Editor.
- **AUTOSAR Converter Tool** An AUTOSAR Tool used to create AUTOSAR XML files by converting information from other AUTOSAR XML files. Example: ECU Flattener
- **AUTOSAR Definition** This is the definition of parameters which can have values. One could say that the parameter values are Instances of the definitions. But in the meta model hierarchy of AUTOSAR, definitions are also instances of the meta model and therefore considered as a description. Examples for AUTOSAR definitions are: EcucParameterDef, PostBuildVariantCriterion, SwSystemconst.
- **AUTOSAR XML Description** In AUTOSAR this means "filled Template". In fact an AUTOSAR XML description is the XML representation of an AUTOSAR model.
  - The AUTOSAR XML description can consist of several files. Each individual file represents an AUTOSAR partial model and shall validate successfully against the AUTOSAR XML schema.
- **AUTOSAR Meta-Model** This is an UML2.0 model that defines the language for describing AUTOSAR systems. The AUTOSAR meta-model is an UML representation of the AUTOSAR templates. UML2.0 class diagrams are used to describe the attributes and their interrelationships. Stereotypes, UML tags and OCL expressions (object constraint language) are used for defining specific semantics and constraints.
- **AUTOSAR Meta-Model Tool** The AUTOSAR Meta-Model Tool is the tool that generates different views (class tables, list of constraints, diagrams, XML Schema etc.) on the AUTOSAR meta-model.



- **AUTOSAR Model** This is a representation of an AUTOSAR product. The AUTOSAR model represents aspects suitable to the intended use according to the AUTOSAR methodology.
  - Strictly speaking, this is an instance of the AUTOSAR meta-model. The information contained in the AUTOSAR model can be anything that is representable according to the AUTOSAR meta-model.
- AUTOSAR Partial Model In AUTOSAR, the possible partitioning of models is marked in the meta-model by atpSplitable>. One partial model is represented in an AUTOSAR XML description by one file. The partial model does not need to fulfill all semantic constraints applicable to an AUTOSAR model.
- **AUTOSAR Processor Tool** An AUTOSAR Tool used to create non-AUTOSAR files by processing information from AUTOSAR XML files. Example: RTE Generator
- **AUTOSAR Specification Element** An AUTOSAR Specification Element is a named element that is part of an AUTOSAR specification. Examples: requirement, constraint, specification item, class or attribute in the meta model, methodology, deliverable, methodology activity, model element, bsw module etc.
- **AUTOSAR Template** The term "Template" is used in AUTOSAR to describe the format different kinds of descriptions. The term template comes from the idea, that AUTOSAR defines a kind of form which shall be filled out in order to describe a model. The filled form is then called the description.
  - In fact the AUTOSAR templates are now defined as a meta-model.
- **AUTOSAR Validation Tool** A specialized AUTOSAR Tool which is able to check an AUTOSAR model against the rules defined by a profile.
- **AUTOSAR XML Schema** This is a W3C XML schema that defines the language for exchanging AUTOSAR models. This Schema is derived from the AUTOSAR meta-model. The AUTOSAR XML Schema defines the AUTOSAR data exchange format.
- **Blueprint** This is a model from which other models can be derived by copy and refinement. Note that in contrast to meta model resp. types, this process is *not* an instantiation.
- **Instance** Generally this is a particular exemplar of a model or of a type.
- **Life Cycle** Life Cycle is the course of development/evolutionary stages of a model element during its life time.
- **Meta-Model** This defines the building blocks of a model. In that sense, a Meta-Model represents the language for building models.
- **Meta-Data** This includes pertinent information about data, including information about the authorship, versioning, access-rights, timestamps etc.



- **Model** A Model is an simplified representation of reality. The model represents the aspects suitable for an intended purpose.
- **Partial Model** This is a part of a model which is intended to be persisted in one particular artifact.
- **Pattern in GST**: This is an approach to simplify the definition of the meta model by applying a model transformation. This transformation creates an enhanced model out of an annotated model.
- **Profile Authoring Support Data** Data that is used for efficient authoring of a profile. E.g. list of referable constraints, meta-classes, meta-attributes or other reusable model assets (blueprints)
- **Profile Authoring Tool** A specialized AUTOSAR Tool which focuses on the authoring of profiles for data exchange points. It e.g. provides support for the creation of profiles from scratch, modification of existing profiles or composition of existing profiles.
- **Profile Compatibility Checker Tool** A specialized AUTOSAR Tool which focuses on checking the compatibility of profiles for data exchange. Note that this compatibility check includes manual compatibility checks by engineers and automated assistance using more formal algorithms.
- **Profile Consistency Checker Tool** A specialized AUTOSAR Tool which focuses on checking the consistency of profiles.
- **Property** A property is a structural feature of an object. As an example a "connector" has the properties "receive port" and "send port"
  - **Properties are made variant by the** ≪atpVariation≫.
- **Prototype** This is the implementation of a role of a type within the definition of another type. In other words a type may contain Prototypes that in turn are typed by "Types". Each one of these prototypes becomes an instance when this type is instantiated.
- **Type** A type provides features that can appear in various roles of this type.
- **Value** This is a particular value assigned to a "Definition".
- **Variability** Variability of a system is its quality to describe a set of variants. These variants are characterized by variant specific property settings and / or selections. As an example, such a system property selection manifests itself in a particular "receive port" for a connection.
  - This is implemented using the ≪atpVariation≫.
- **Variant** A system variant is a concrete realization of a system, so that all its properties have been set respectively selected. The software system has no variability anymore with respect to the binding time.
  - This is implemented using EvaluatedVariantSet.



**Variation Binding** A variant is the result of a variation binding process that resolves the variability of the system by assigning particular values/selections to all the system's properties.

This is implemented by VariationPoint.

**Variation Binding Time** The variation binding time determines the step in the methodology at which the variability given by a set of variable properties is resolved.

This is implemented by vh. Latest Bindingtime at the related properties.

**Variation Definition Time** The variation definition time determines the step in the methodology at which the variation points are defined.

**Variation Point** A variation point indicates that a property is subject to variation. Furthermore, it is associated with a condition and a binding time which define the system context for the selection / setting of a concrete variant.

This is implemented by VariationPoint.

## D Modeling of InstanceRef

### **D.1** Introduction

The existence of so-called InstanceRefs is a direct consequence to the usage of the type-prototype pattern for modeling within AUTOSAR. When referencing a prototype it is also necessary to include a reference to the prototypes typed by their corresponding types that in turn aggregate further prototypes to set up the context.

In other words, InstanceRefs are representing **structured references** that, on the one hand, consist of references to context prototypes (indicated by a subsetting or redefinition of atpContextElement) and finally a reference to the applicable target prototype (indicated by a redefinition of atpTarget).

Note that it is not uncommon to have more than a single context in the modeling of particular InstanceRefs.

For the reader of specifications, the modeling of InstanceRefs manifests as a UML dependency stereotyped  $\ll$ instanceRef $\gg$  drawn from one meta-class to another.

This is a simplified indication that the source of the dependency implements an InstanceRef to the meta-class at the target of the dependency. Again, in most cases this is everything a reader needs to understand in order to figure out the modeling.

The formal modeling of InstanceRefs is done by creating subclasses of the abstract meta-class AtpInstanceRef.

Wherever a more detailed understanding of the modeling is advised in the context of the specific chapter of this document, the modeling of a specific subclasses of AtpIn-stanceRef is explained directly in the context of the corresponding chapter.



In all other cases, a deeper understanding of the modeling of particular subclasses of AtpInstanceRefs can be obtained from reading this chapter.

Class tables included in this chapter are not fully filled out in the sense that most of the notes inside the class tables are missing.

The primary purpose of these class tables is to provide information about the intended order in which InstanceRefs are serialized in M1 AUTOSAR models.

In particular, the information about the order in serialized M1 models can be obtained from the value of the tag xml.sequenceOffset of each attribute of an InstanceRef meta-class.

For more information about the general concept of modeling AtpInstanceRef (e.g. the conceptual background of redefining or subsetting an association from a subclass of AtpInstanceRef to other meta-classes) please refer to [22].

### D.2 Modeling

Class	DataPrototypeInSystemInstanceRef			
Package	M2::AUTOSARTemplates::DiagnosticExtract::InstanceRefs			
Note				
Base	ARObject, Atplnsta	anceRef		
Attribute	Туре	Mul.	Kind	Note
base	System	1	ref	This represents the base of the InstanceRef
				Stereotypes: atpDerived Tags: xml.sequenceOffset=10
contextCo mponent	SwComponentP rototype	*	ref	Tags: xml.sequenceOffset=30
contextDat aPrototype (ordered)	ApplicationCom positeElementD ataPrototype	*	ref	Tags: xml.sequenceOffset=50
contextPor t	PortPrototype	1	ref	This represents the PortPrototype that is contained in the InstanceRef.
				Tags: xml.sequenceOffset=40
contextRo otComposi tion	RootSwCompos itionPrototype	01	ref	Tags: xml.sequenceOffset=20
targetData Prototype	DataPrototype	1	ref	This represents the target of the InstanceRef
				Tags: xml.sequenceOffset=60

Table D.1: DataPrototypeInSystemInstanceRef



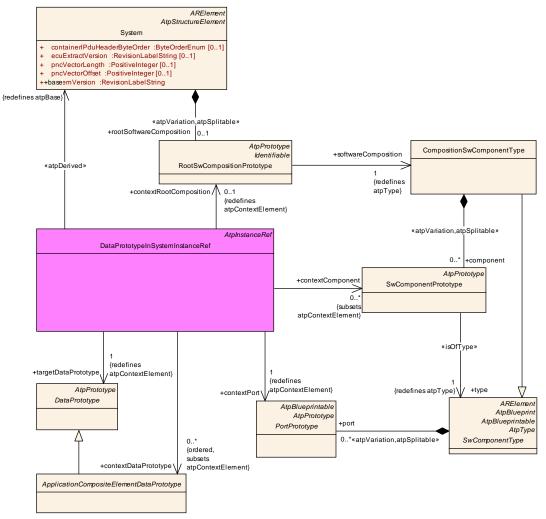


Figure D.1: Modeling of DataPrototypeInSystemInstanceRef

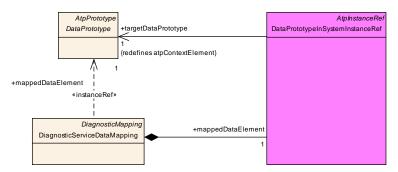


Figure D.2: Modeling of DiagnosticServiceDataMapping

Class	SwcServiceDependencyInSystemInstanceRef				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::DiagnosticExtract::InstanceRefs			
Note					
Base	ARObject,AtpInstanceRef				
Attribute	Туре	Mul.	Kind	Note	
base	System	1	ref		



Attribute	Туре	Mul.	Kind	Note
contextRo otSwComp osition	RootSwCompos itionPrototype	1	ref	
contextSw Componen tPrototype	SwComponentP rototype	*	ref	
targetSwc ServiceDe pendency	SwcServiceDep endency	1	ref	

Table D.2: SwcServiceDependencyInSystemInstanceRef

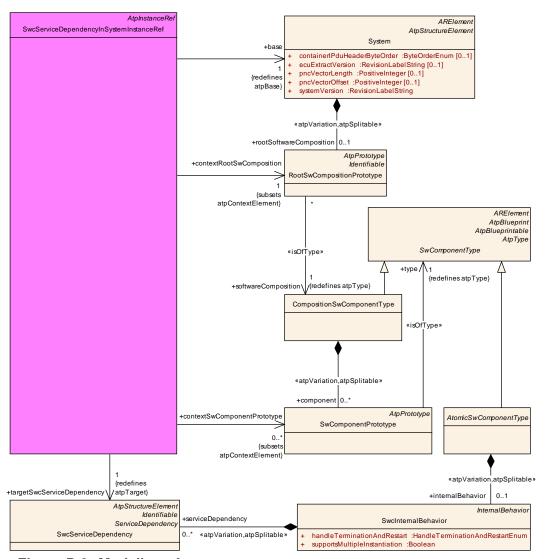


Figure D.3: Modeling of SwcServiceDependencyInSystemInstanceRef



Class	PModelnSystemInstanceRef					
Package	M2::AUTOSARTemplates::DiagnosticExtract::InstanceRefs					
Note						
Base	ARObject, Atplnsta	anceRef				
Attribute	Туре	Mul.	Kind	Note		
base	System	1	ref	Stereotypes: atpDerivedTags: xml.sequence Offset=10		
contextCo mponent	SwComponentP rototype	1*	ref	Tags: xml.sequenceOffset=30		
contextCo mposition	RootSwCompos itionPrototype	1	ref	Tags: xml.sequenceOffset=20		
contextMo deDeclarat ionGroup	ModeDeclaratio nGroupPrototyp e	1	ref	Tags: xml.sequenceOffset=50		
contextPP ort	AbstractProvide dPortPrototype	1	ref	Tags: xml.sequenceOffset=40		
targetMod e	ModeDeclaratio n	1	ref	Tags: xml.sequenceOffset=60		

Table D.3: PModeInSystemInstanceRef



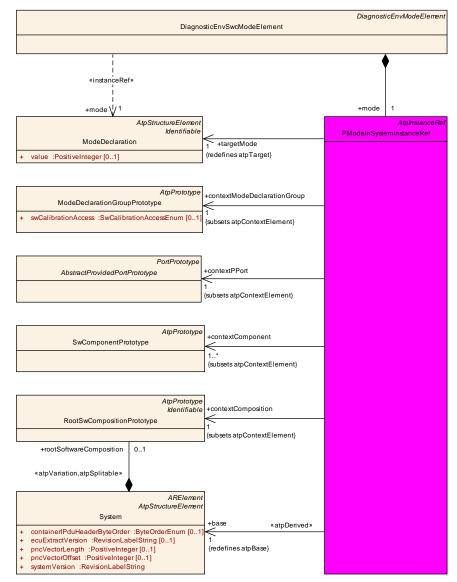


Figure D.4: Formal modeling of the comparison of a ModeDeclarationGroupPrototype With a ModeDeclaration



## **E** Upstream Mapping

### E.1 Introduction

This chapter describes the mapping of the ECU Configuration parameters (M1 model) onto the meta-classes and attributes of the AUTOSAR upstream templates (System Template, SW Component Template and ECU Resource Template).

The relationships between upstream templates and ECU Configuration are described in order to answer typical questions like:

- How shall a supplier use the information in a System Description in order to fulfill the needs defined by the systems engineer?
- How is a tool vendor supposed to generate an ECU Configuration Description out of ECU Extract of System Description?

Please note that the tables contain the following columns:

bsw module: Name of BSW module

**bsw context:** Reference to parameter container

**bsw type:** Type of parameter

**bsw param:** Name of the BSW parameter

**bsw desc:** Description from the configuration document

m2 template: System Template, SW Component Template, ECU Resource Template

**m2 param:** Name of the upstream template parameter

**m2 description:** Description from the upstream template definition

mapping rule: Textual description on how to transform between M2 and BSW do-

mains

### mapping type:

local: no mapping needed since parameter local to BSW

partial: some data can be automatically mapped but not all

full: all data can be automatically mapped

### E.2 Dcm

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsd	
BSW Parameter		BSW Type
DcmDsdServiceTal	ble	EcucParamConfContainerDef

Mapping ID up\_Dcm\_00040



Mapping Status

valid

BSW Description			
This container contains the configuration (DSD parameters) for a Service Identifi	er Table.		
Note: It is allowed to add OBD services to a DcmDsdServiceTable related to But it is not allowed to add UDS services to a DcmDsdServiceTable related to an			
Template Description			
This meta-class represents a model of a diagnostic service table, i.e. the UDS	services applicable		
for a given ECU.			
M2 Parameter			
DiagnosticExtract::DiagnosticContribution::DiagnosticServiceTable			
Mapping Rule	Mapping Type		
1:1 mapping	full		

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService		
BSW Parameter		BSW Type	
DcmDsdSidTabSed	curityLevelRef	EcucReferenceDef	
BSW Description			
Reference to a Se	curity Level in which the service is allo	wed to be executed.	Multiple references
are allowed for a se	ervice.		
Please refer to ISO 14229-1, ISO 15031-5 and chapter "Verification of the Service Security Access levels."  If there is no reference configured, no service security verification shall be performed.			
Template Description			
This represents the associated DiagnosticSecurityLevels			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel			
Mapping Rule Mapping Type			
1:1 mapping			full
Mapping Status Mapping ID			Mapping ID
valid			up_Dcm_00041

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDs	dServiceTable/DcmDsc	dService
BSW Parameter		BSW Type	
DcmDsdSidTabSer	viceld	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Identifier of the ser	vice.		
The possible service identifiers are defined in ISO 14229-1 and ISO 15031-5.			
Template Description			
This meta-class provides the ability to define common properties that are shared among all instances			
of sub-classes of DiagnosticServiceInstance.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::CommonService::DiagnosticServiceClass			
Mapping Rule Mapping Type			Mapping Type
Service identifiers of the used DiagnosticServiceClass full			full
Mapping Status Mapping ID			Mapping ID



valid up.	up_Dcm_00042
-----------	--------------

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDs	dServiceTable/DcmDsc	dService
BSW Parameter		BSW Type	
DcmDsdSidTabSes	ssionLevelRef	EcucReferenceDef	
<b>BSW Description</b>			
Reference to a Se	ssion Level in which the service is allo	wed to be executed. I	Multiple references
are allowed for a se	ervice.		
Please refer to ISO 14229-1, ISO 15031-5 and chapter "Verification of the Diagnostic Session".  If there is no reference configured, no diagnostic session verification shall be performed.			
Template Description			
This represents the associated DiagnosticSessions			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticAccessPermission.diagnosticSession			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full			full
Mapping Status Mapping ID			Mapping ID
valid			up_Dcm_00043

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService	
BSW Parameter BSW Type		
DcmDsdSidTabSubfuncAvail EcucBooleanParamDef		EcucBooleanParamDef
RSW Description		

### BSW Description

Information about whether the service has subfunctions or not. This parameter is used for the handling of the "suppressPosRspMsgIndicationBit" as defined in ISO 14229-1, which can be used as a reference for the configuration.

true - service has subfunctions, suppressPosRspMsgIndicationBit is available

false - service has no subfunctions, suppressPosRspMsgIndicationBit is not available

### **Template Description**

The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.

### **M2 Parameter**

Mapping Rule
Stanadardized sub-functions of diagnostic services are mainly identified by the category. There are further specific attributes in the meta-model that allow for handling custom subfunctions,

Mapping Status

Valid

Mapping ID

Up Dcm 00044

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDs SubService	dServiceTable/DcmDsdService/DcmDsd
BSW Parameter		BSW Type



BSW Module BSW Context

DcmDsdSubServiceId	EcucIntegerParamDe	f
BSW Description		
Identifier of the subservice.		
The possible subservice identifiers are defined in ISO 142	29-1 and ISO 15031-5.	
Template Description		
The category is a keyword that specializes the semantics	of the Identifiable. It a	ffects the expected
existence of attributes and the applicability of constraints.		
M2 Parameter		
GenericStructure::GeneralTemplateClasses::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Identifiable::Id	dentifiable.category	
Mapping Rule		Mapping Type
Numerical values of diagnostic service according to ISO	14229 correspond to	partial
values of Diagnostic Service instance, category.		
Mapping Status		Mapping ID
valid		up_Dcm_00045

SubService   BSW Parameter   BSW Type				
DcmDsdSubServiceSecurityLevelRef  BSW Description  Reference to a Security Level in which the subservice is allowed to be executed. Multiple reference are allowed for a subservice.  Please refer to ISO 14229-1, ISO 15031-5 and chapter "Verification of the Service Sec Access levels."  If there is no reference configured, no subservice security verification shall be performed.  Template Description  This represents the associated DiagnosticSecurityLevels  M2 Parameter  DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel  Mapping Rule  1:1 mapping  full	Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService		
BSW Description  Reference to a Security Level in which the subservice is allowed to be executed. Multiple referer are allowed for a subservice.  Please refer to ISO 14229-1, ISO 15031-5 and chapter "Verification of the Service Sec Access levels."  If there is no reference configured, no subservice security verification shall be performed.  Template Description  This represents the associated DiagnosticSecurityLevels  M2 Parameter  DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel  Mapping Rule  1:1 mapping  Multiple referer are allowed to be executed.	BSW Parameter		BSW Type	
Reference to a Security Level in which the subservice is allowed to be executed. Multiple reference are allowed for a subservice.  Please refer to ISO 14229-1, ISO 15031-5 and chapter "Verification of the Service Sec Access levels."  If there is no reference configured, no subservice security verification shall be performed.  Template Description  This represents the associated DiagnosticSecurityLevels  M2 Parameter  DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel  Mapping Rule  1:1 mapping  Multiple reference are allowed to be executed.	DcmDsdSubServic	eSecurityLevelRef	EcucReferenceDef	
are allowed for a subservice.  Please refer to ISO 14229-1, ISO 15031-5 and chapter "Verification of the Service Sec Access levels."  If there is no reference configured, no subservice security verification shall be performed.  Template Description  This represents the associated DiagnosticSecurityLevels  M2 Parameter  DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel  Mapping Rule  1:1 mapping  full	BSW Description			
Please refer to ISO 14229-1, ISO 15031-5 and chapter "Verification of the Service Sec Access levels."  If there is no reference configured, no subservice security verification shall be performed.  Template Description  This represents the associated DiagnosticSecurityLevels  M2 Parameter  DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel  Mapping Rule  1:1 mapping  full	Reference to a Sec	curity Level in which the subservice is al	lowed to be executed.	Multiple references
Access levels."  If there is no reference configured, no subservice security verification shall be performed.  Template Description  This represents the associated DiagnosticSecurityLevels  M2 Parameter  DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel  Mapping Rule  1:1 mapping  full	are allowed for a su	ubservice.		
Template Description This represents the associated DiagnosticSecurityLevels  M2 Parameter DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel  Mapping Rule  1:1 mapping  full	Access levels."			
M2 Parameter  DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel  Mapping Rule  1:1 mapping  full	, , , , , , , , , , , , , , , , , , , ,			
DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel  Mapping Rule  1:1 mapping  full	This represents the associated DiagnosticSecurityLevels			
Mapping RuleMapping Type1:1 mappingfull	M2 Parameter			
1:1 mapping full	DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel			
· · · ·	Mapping Rule			Mapping Type
	1:1 mapping full			
Mapping Status Mapping ID	Mapping ID			
valid up_Dcm_000	valid			up_Dcm_00046

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsd		
Dom	SubService		
BSW Parameter BSW Type			
DcmDsdSubServiceSessionLevelRef EcucReferenceDef			
BSW Description			

Reference to a Session Level in which the subservice is allowed to be executed. Multiple references are allowed for a subservice.

Please refer to ISO 14229-1, ISO 15031-5 and chapter "Verification of the Diagnostic Session".

If there is no reference configured, no diagnostic session verification shall be performed.

### **Template Description**

up Dcm 00048



This represents the associated DiagnosticSessions	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticAccessPermission.diagnosticSession	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00047

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslDiagResp		
BSW Parameter BSW Type		BSW Type	
DcmDslDiagRespN	MaxNumRespPend	EcucIntegerParamDe	ef
<b>BSW Description</b>			
1	of negative responses with respons	` •	•
	g) allowed for a request. If Dcm reacl		
, , ,	onse will be trasmitted and the service	processing will be can	celled.
Template Descrip	tion		
Maximum number of negative responses with response code 0x78 (requestCorrectlyReceived-			
ResponsePending) allowed per request. DCM will send a negative response with response code			
0x10 (generalReject), in case the limit value gets reached.			
Value 0xFF means that no limit number of NRC 0x78 response apply.			
M2 Parameter			
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.maxNumberOfRequest			
CorrectlyReceivedResponsePending			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDsll	DiagResp
BSW Parameter BSW Type		
DcmDslDiagRespOnSecondDeclinedRequest EcucBooleanParamDef		
BSW Description		

Defines the reaction upon a second request (ClientB) that can not be processed (e.g. due to priority assessment).

TRUE: when the second request (Client B) can not be processed, it shall be answered with NRC21 BusyRepeatRequest.

FALSE: when the second request (Client B) can not be processed, it shall not be responded.

### **Template Description**

Defines the reaction upon a second request (ClientB) that can not be processed (e.g. due to priority assessment).

TRUE: when the second request (Client B) can not be processed, it shall be answered with NRC21 BusyRepeatRequest.

FALSE: when the second request (Client B) can not be processed, it shall not be responded.

### M2 Parameter

 $\label{limited} Diagnostic Extract:: Diagnostic Common Props:: Diagnostic Common Props. response On Second Declined Request$ 

valid



Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00049

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol		
BSW Parameter		BSW Type	
DcmDslProtocolRc	DW .	EcucParamConfCont	ainerDef
BSW Description			
This container conf	tains the configuration of one particular	diagnostic protocol us	ed in Dcm.
Template Descrip	Template Description		
This meta-class represents the ability to define a diagnostic protocol.			
M2 Parameter			
DiagnosticExtract::DiagnosticContribution::DiagnosticProtocol			
Mapping Rule		Mapping Type	
1:1 mapping		full	
Mapping Status		Mapping ID	
valid			up_Dcm_00050

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl	
DCIII	Connection/DcmDslMainConnection	
BSW Parameter BSW Type		BSW Type
DcmDslProtocolComMChannelRef EcucSymbolicNameReferenceDef		EcucSymbolicNameReferenceDef
BSW Description		

Reference to the ComMChannel on which the DcmDslProtocolRxPdu is received and the DcmDsl-ProtocolTxPdu is transmitted.

### **Template Description**

The CommunicationCluster is the main element to describe the topological connection of communicating ECUs.

A cluster describes the ensemble of ECUs, which are linked by a communication medium of arbitrary topology (bus, star, ring, ...). The nodes within the cluster share the same communication protocol, which may be event-triggered, time-triggered or a combination of both.

A CommunicationCluster aggregates one or more physical channels.

,	
M2 Parameter	
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationCluster	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00051

BSW Module	BSW Context		
	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl Connection/DcmDslMainConnection/DcmDslProtocolRx/DcmDslProtocolRx		
Dcm			
	AddrType		
BSW Parameter		BSW Type	
DCM_FUNCTIONAL_TYPE		EcucEnumerationLiteralDef	
BSW Description			



FUNCTIONAL = 1 to n communication		
Template Description		
Reference to functional request messages.		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DiagnosticConnection.functionalRequest		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00052	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl Connection/DcmDslMainConnection/DcmDslProtocolRx/DcmDslProtocolRx AddrType		
BSW Parameter	BSW Type		
DCM_PHYSICAL_	TYPE	EcucEnumerationLite	eralDef
BSW Description			
PHYSICAL = 1 to 1 communications using physical addressing			
Template Description			
Reference to a physical request message.			
M2 Parameter			
SystemTemplate::DiagnosticConnection::DiagnosticConnection.physicalRequest			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mappin		Mapping ID	
valid			up_Dcm_00053

BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl			
Dom	Connection/DcmDsIMainConnection/I	DcmDslProtocolRx		
BSW Parameter		BSW Type		
DcmDslProtocolRx	PduRef	EcucReferenceDef		
<b>BSW Description</b>				
Reference to a Pdu	Reference to a Pdu in EcuC that is used for this reception channel.			
Template Descrip	Template Description			
The IPdu (Interaction Layer Protocol Data Unit) element is used to sum up all Pdus that are routed				
by the PduR.				
M2 Parameter				
SystemTemplate::Fibex::FibexCore::CoreCommunication::IPdu				
Mapping Rule		Mapping Type		
Reference to IPdu of xxxTpConnection for DiagnosticConnection.physicalRe-		full		
quest / DiagnosticConnection.functionalRequest		i iuii		
Mapping Status		Mapping ID		
valid		up_Dcm_00054		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl Connection/DcmDslMainConnection	
BSW Parameter		BSW Type
DcmDslProtocolRxConnectionId		EcucIntegerParamDef



BSW Description		
Unique identifier of the tester which uses this connection for diagnostic communication.		
Template Description		
An ECU specific ID for responses of diagnostic routines.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::EcuInstance.diagnosticAddress		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00055	

BSW Module	BSW Context		
Dom	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl		
Dcm	Connection/DcmDslMainConnection		
BSW Parameter		BSW Type	
DcmDslProtocolTx		EcucParamConfCont	ainerDef
<b>BSW Description</b>			
This container cor	ntains the configuration parameters of	a transmission chan	nel in a diagnostic
connection.			
GET_ADDRESS_1	The PDU referenced by this transmission channel can produce meta data items of type TAR-GET_ADDRESS_16.		
Template Description			
In the vast majority of cases a response is required. However, there are also cases where providing the response is not possible and/or not allowed.			
M2 Parameter			
SystemTemplate::DiagnosticConnection::DiagnosticConnection.response			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping IE		Mapping ID	
valid			up_Dcm_00056

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl		
Dom	Connection/DcmDslMainConnection/l		
BSW Parameter		BSW Type	
DcmDslProtocolTx	PduRef	EcucReferenceDef	
<b>BSW Description</b>			
Reference to a Pdi	u in EcuC that is used for this transmiss	ion channel.	
Template Description			
The IPdu (Interaction Layer Protocol Data Unit) element is used to sum up all Pdus that are routed			
by the PduR.			
M2 Parameter			
SystemTemplate::Fibex::FibexCore::CoreCommunication::IPdu			
Mapping Rule Mapping Type			
Reference to IPdu	Reference to IPdu of xxxTpConnection for DiagnosticConnection.response full		full
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid up_Dcm_000		up_Dcm_00057	

BSW Module	BSW Context



Dcm	Dcm/DcmConfigSet/DcmDsI/DcmDsIProtocol/DcmDsIProtocolRow/DcmDsI Connection/DcmDsIPeriodicTransmission/DcmDsIPeriodicConnection		
BSW Parameter	BSW Parameter BSW Type		
DcmDslPeriodicTx	DcmDslPeriodicTxPduRef EcucReferenceDef		
<b>BSW Description</b>			
Reference to a Pdi	u in EcuC that is used for this periodic t	ransmission channel.	
Template Descrip	Template Description		
The IPdu (Interaction Layer Protocol Data Unit) element is used to sum up all Pdus that are routed			dus that are routed
by the PduR.			
M2 Parameter			
SystemTemplate::Fibex::FibexCore::CoreCommunication::IPdu			
11 0 11			Mapping Type
Reference to IPdu of xxxTpConnection in case of DiagnosticConnec-			
tion.periodicResponseTp or IPdu of PduTriggering in case of DiagnosticCon-		full	
nection.periodicResponseUudt			
Mapping Status		Mapping ID	
valid			up_Dcm_00058

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl		
DCIII	Connection/DcmDslResponseOnEvent		
BSW Parameter	arameter BSW Type		
DcmDslRoeTxPdu	Ref EcucReference	ceDef	
<b>BSW Description</b>			
Reference to a Pdi	u in EcuC that is used for this ResponseOnEvent trans	mission	connection.
Template Descrip	Template Description		
The IPdu (Interaction Layer Protocol Data Unit) element is used to sum up all Pdus that are routed			
by the PduR.			
M2 Parameter			
SystemTemplate::Fibex::FibexCore::CoreCommunication::IPdu			
Mapping Rule Mapping Type			Mapping Type
Reference to IPdu of xxxTpConnection for DiagnosticConnection.responseOn		nseOn	full
Event			
Mapping Status Mapping		Mapping ID	
valid up_Dcm		up_Dcm_00059	

BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl ProtocolID			
BSW Parameter		BSW Type		
DCM_PERIODICT	RANS_ON_CAN	EcucEnumerationLiteralDef		
<b>BSW Description</b>				
Template Descrip	Template Description			
AbstractCanPhysicalChannel:				
Abstract class that is used to collect the common TtCAN and CAN PhysicalChannel attributes.				
DiagnosticConnection.periodicResponseUudt: Reference to UUDT responses.				
M2 Parameter				
SystemTemplate::Fibex::Fibex4Can::CanTopology::AbstractCanPhysicalChannel,				
SystemTemplate::DiagnosticConnection::DiagnosticConnection.periodicResponseUudt,				



Mapping Rule	Mapping Type
If DiagnosticConnection.periodicResponseUudt exists and PhysicalChannel given as AbstractCanPhysicalChannel.	full
Mapping Status	Mapping ID
valid	up_Dcm_00060

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl ProtocolID		
<b>BSW Parameter</b>		BSW Type	
DCM_PERIODICT	RANS_ON_IP	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Template Descrip			
SocketConnectio			
The SoAd serves	as a (De)Multiplexer between different P	DU sources and the T	CP/IP stack.
	·		regated VLAN.
SystemTemplate::	Fibex::Fibex4Ethernet::EthernetCommu	nication::SocketConne	ction,
SystemTemplate::DiagnosticConnection::DiagnosticConnection.periodicResponseUudt,			
	Fibex::Fibex4Ethernet::EthernetTopolog	y::EthernetPhysicalCh	
Mapping Rule			Mapping Type
If DiagnosticConnection.periodicResponseUudt exists and PhysicalChannel given as EthernetPhysicalChannel.		full	
Mapping Status			Mapping ID
valid			up Dcm 00061

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl ProtocolID	
BSW Parameter	BSW Type	
DCM_ROE_ON_C	_CAN	
<b>BSW Description</b>	BSW Description	

### **Template Description**

### DiagnosticConnection.responseOnEvent:

Reference to a ROE message.

### CanTpConnection:

A connection identifies the sender and the receiver of this particular communication. The CanTp module routes a Pdu through this connection.

atpVariation: Derived, because TpNode can vary.

#### M2 Parameter

SystemTemplate::DiagnosticConnection::DiagnosticConnection.responseOnEvent,

SystemTemplate::TransportProtocols::CanTpConnection

up\_Dcm\_00063



RSW Module RSW Context

Mapping Rule	Mapping Type
In case DiagnosticConnection.responseOnEvent exists and TpConnection Ident.ident belongs to a CanTpConnection.	full
Mapping Status	Mapping ID
valid	up_Dcm_00062

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl ProtocolID		
<b>BSW Parameter</b>		BSW Type	
DCM_ROE_ON_F	LEXRAY	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Template Descrip			
	ction.responseOnEvent:		
Reference to a RO	E message.		
FlexrayTpConnec			
	ifies the sender and the receiver of this	particular communicati	on. The FlexRayTp
module routes a Po	du through this connection.		
In a System Description the references to the PduPools are mandatory. In an ECU Extract these references can be optional: On unicast connections these references are always mandatory. On multicast the txPduPool is mandatory on the sender side. The rxPduPool is mandatory on the receiver side. On Gateway ECUs both references are mandatory.			
M2 Parameter			
SystemTemplate::DiagnosticConnection::DiagnosticConnection.responseOnEvent,			
SystemTemplate::TransportProtocols::FlexrayTpConnection			
Mapping Rule			Mapping Type
	icConnection.responseOnEvent exists	and TpConnection	full
	to FlexRayTpConnection		Tuli
Mapping Status	pping Status Mapping ID		Mapping ID

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl ProtocolID	
BSW Parameter		BSW Type
DCM_ROE_ON_IP		EcucEnumerationLiteralDef
<b>BSW Description</b>		

### Template Description

### DiagnosticConnection.responseOnEvent:

Reference to a ROE message.

#### SocketConnection:

The SoAd serves as a (De)Multiplexer between different PDU sources and the TCP/IP stack.

#### M2 Parameter

SystemTemplate::DiagnosticConnection::DiagnosticConnection.responseOnEvent, SystemTemplate::Fibex::Fibex4Ethernet::EthernetCommunication::SocketConnection

Mapping Rule Mapping Type

valid



In case DiagnosticConnection.responseOnEvent exists and TpConnection Ident.ident belongs to SocketConnection	full
Mapping Status	Mapping ID
valid	up_Dcm_00064

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl ProtocolID		
BSW Parameter		BSW Type	
DCM_UDS_ON_C	AN	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
UDS on CAN (ISO	15765-3; ISO14229-1)		
Template Descrip	tion		
DiagnosticConne	ction.physicalRequest:		
Reference to a phy	sical request message.		
CanTpConnection: A connection identifies the sender and the receiver of this particular communication. The CanTp			
module routes a Pdu through this connection.			
atpVariation: Derived, because TpNode can vary.			
M2 Parameter	No. of the Control of	antina albania al Danasa ant	
SystemTemplate::DiagnosticConnection::DiagnosticConnection.physicalRequest,			
SystemTemplate::TransportProtocols::CanTpConnection			
Mapping Rule			Mapping Type
_	ticConnection.physicalRequest exists	and TpConnection	full
Ident.ident belongs to Can i pConnection			
Mapping Status			Mapping ID
valid			up Dcm 00065

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl ProtocolID	
BSW Parameter		BSW Type
DCM_UDS_ON_F	LEXRAY EcucEnumerationLiteralDef	
BSW Description		
UDS on FlexRay (Manufacturer specific; ISO14229-1)		
Template Description		
DiagnosticConnection.physicalRequest:		

FlexrayTpConnection:

Reference to a physical request message.

A connection identifies the sender and the receiver of this particular communication. The FlexRayTp module routes a Pdu through this connection.

In a System Description the references to the PduPools are mandatory. In an ECU Extract these references can be optional:

On unicast connections these references are always mandatory.

On multicast the txPduPool is mandatory on the sender side. The rxPduPool is mandatory on the receiver side. On Gateway ECUs both references are mandatory.

### M2 Parameter



SystemTemplate::DiagnosticConnection::DiagnosticConnection.physicalRequest,		
SystemTemplate::TransportProtocols::FlexrayTpConnection		
Mapping Rule	Mapping Type	
In case DiagnosticConnection.physicalRequest exists and TpConnection Ident.ident belongs to FlexRayTpConnection	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00066	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl ProtocolID		
BSW Parameter		BSW Type	
DCM_UDS_ON_IP		EcucEnumerationLite	eralDef
BSW Description			
Template Descrip	tion		
DiagnosticConne	ction.physicalRequest:		
Reference to a phy	sical request message.		
SocketConnection: The SoAd serves as a (De)Multiplexer between different PDU sources and the TCP/IP stack.  M2 Parameter			
	DiagnosticConnection: DiagnosticConne	ection physicalRequest	
SystemTemplate::DiagnosticConnection::DiagnosticConnection.physicalRequest, SystemTemplate::Fibex::Fibex4Ethernet::EthernetCommunication::SocketConnection			
Mapping Rule			Mapping Type
	ticConnection.physicalRequest exists	and TpConnection	full
Ident.ident belongs to a SocketConnection			
Mapping Status			Mapping ID
valid			up_Dcm_00067

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow	
BSW Parameter	BSW Type	
DcmDslProtocolPri	nDslProtocolPriority EcucIntegerParamDef	
BSW Description		
Protocol priority used during protocol preemption. A higher priority protocol may preempt a lower		

priority protocol may preempt a lower priority protocol may preempt a lower priority protocol.

Lower numeric values represent higher protocol priority:

0 - Highest protocol priority

255 - Lowest protocol priority

### **Template Description**

This represents the priority of the diagnostic protocol in comparison to other diagnostic protocols.

Lower numeric values represent higher protocol priority:

- 0 Highest protocol priority
- 255 Lowest protocol priority

### **M2 Parameter**

DiagnosticExtract::DiagnosticContribution::DiagnosticProtocol.priority

Mapping Rule	Mapping Type
1:1 mapping	full



Mapping Status	Mapping ID
valid	up_Dcm_00068

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl		
Dom	ProtocolTransType		
BSW Parameter		BSW Type	
TYPE1		EcucEnumerationLite	eralDef
BSW Description			
Messages on the I	DcmTxPduId already used for normal c	diagnostic responses.	The outgoing mes-
sages must be synchronized with 'normal outgoing messages', which have a higher priority.			
Template Description			
Reference to a ROE message.			
M2 Parameter			
SystemTemplate::DiagnosticConnection::DiagnosticConnection.responseOnEvent			
Mapping Rule Mapping Type		Mapping Type	
TYPE1: periodicResponseTp / responseOnEvent using same reference as the		full	
normal response		luli	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00069

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDsl		colRow/DcmDsl
DCIII	ProtocolTransType		
BSW Parameter		BSW Type	
TYPE2		EcucEnumerationLite	eralDef
BSW Description			
Messages on a se	parate DcmTxPduld.		
Template Descrip	Template Description		
Reference to a ROE message.			
M2 Parameter			
SystemTemplate::DiagnosticConnection::DiagnosticConnection.responseOnEvent			
Mapping Rule Mapping Type			
TYPE2: periodicResponseTp / responseOnEvent using other reference as the		full	
normal response		luli	
Mapping Status			Mapping ID
valid			up_Dcm_00070

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow	
BSW Parameter	BSW Type	
DcmSendRespPer	RespPendOnTransToBoot EcucBooleanParamDef	
BSW Description		
Parameter specifying if the ECU should send a NRC 0x78 (response pending) before transitioning		

Parameter specifying if the ECU should send a NRC 0x78 (response pending) before transitioning to the bootloader (parameter set to TRUE) or if the transition shall be initiated without sending NRC 0x78 (parameter set to FALSE).

### **Template Description**

The purpose of this attribute is to define whether or not the ECU should send a NRC 0x78 (response pending) before transitioning to the bootloader (in this case the attribute shall be set to "true") or if the transition shall be initiated without sending NRC 0x78 (in this case the attribute shall be set to "false").



M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticEcuProps.sendRespPendOnTransToBoot		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00071	

BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspComControl/DcmDspComControlAll Channel			
BSW Parameter		BSW Type		
DcmDspAllComMC	ChannelRef	EcucSymbolicNameF	ReferenceDef	
<b>BSW Description</b>				
Reference to Coml	M channel.			
Template Descrip	tion			
This reference represents the semantics that all available channels shall be affected. It is still necessary to refer to individual CommunicatuionClusters because there could be private CommunicationClusters in the System Extract that are not subject to the service "communication control".  By referring to the applicable CommunicationClusters it can be made sure that only the affected CommunicationClusters are accessed.				
	M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl::DiagnosticComControl Class.allChannels				
Mapping Rule Mapping Type			Mapping Type	
1:1 mapping full		full		
Mapping Status Mapping ID			Mapping ID	
valid			up_Dcm_00072	

BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspComControl/DcmDspComControlSpe- cificChannel			
BSW Parameter		BSW Type		
DcmDspSpecificCo	omMChannelRef	EcucSymbolicNameF	ReferenceDef	
<b>BSW Description</b>				
Reference to Coml	M channel.			
Template Descrip	tion			
	This represents the ability to add additional attributes to the case that only specific channels are			
supposed to be co	supposed to be considered,			
M2 Parameter				
	Dcm::DiagnosticService::Communication	onControl::DiagnosticC	ComControl	
Class.specificChannel				
Mapping Rule			Mapping Type	
1:1 mapping full		full		
Mapping Status Mapping II		Mapping ID		
valid			up_Dcm_00073	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs cificChannel	pComControl/DcmDspComControlSpe-
BSW Parameter		BSW Type



DcmDspSubnetNumber	EcucIntegerParamDet	f
BSW Description		
Subnet Number which controls the specific ComMChanne	)l.	
Template Description		
This represents the applicable subnet number (which is ar	n arbitrary number rangi	ing from 114)
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::Communication	onControl::DiagnosticCo	omControlSpecific
Channel.subnetNumber		
Mapping Rule		Mapping Type
1:1 mapping full		
Mapping Status Mapping ID		
valid		up_Dcm_00074

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspComControl		
BSW Parameter		BSW Type	
DcmDspComContr	rolSubNode	EcucParamConfCont	ainerDef
<b>BSW Description</b>			
This container give	s information about the node identification	tion number and the C	omM channel used
to address a sub-n	etwork.		
Template Description			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl::DiagnosticComControl			
Class.subNodeChannel			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping ID			Mapping ID
valid			up_Dcm_00075

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspComControl/DcmDspComControlSub		
DCIII	Node		
BSW Parameter		BSW Type	
DcmDspComContr	rolSubNodeComMChannelRef	EcucSymbolicNameF	ReferenceDef
<b>BSW Description</b>			
This parameter ref	erences a ComM channel where this r	ode is connected to.	
Template Description			
This represents the affected CommunicationClusters in the role subNodeChannel			el
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl::DiagnosticComControlSub			
NodeChannel.subNodeChannel			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping ID			Mapping ID
valid		up Dcm 00076	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspComControl/DcmDspComControlSub Node



BSW Parameter	BSW Type			
DcmDspComControlSubNodeId EcucIntegerParamDe		f		
BSW Description				
The node identification number DcmDspComControlSubl	Nodeld is addressed by	y the Communica-		
tionControl (0x28) request.				
Template Description				
	This represents the applicable subNode number. The value corresponds to the request message			
parameter nodeldentificationNumber of diagnostic service	parameter nodeldentificationNumber of diagnostic service CommunicationControl (0x28).			
M2 Parameter				
DiagnosticExtract::Dcm::DiagnosticService::Communication	onControl::DiagnosticCo	omControlSub		
NodeChannel.subNodeNumber	NodeChannel.subNodeNumber			
Mapping Rule M		Mapping Type		
1:1 mapping		full		
Mapping Status		Mapping ID		
valid		up_Dcm_00077		

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp		
BSW Parameter	BSW Parameter BSW Type		
DcmDspCommon/	Authorization	EcucParamConfCont	ainerDef
<b>BSW Description</b>			
This container cont	ains the configuration (parameters) for	the common Authoriza	tion being equal for
several services / s	sub-services.		
Template Descrip	tion		
This represents an	instance of the "Routine Control" diagr	ostic service.	
M2 Parameter			
DiagnosticExtract::	Dcm::DiagnosticService::RoutineContro	ol::DiagnosticRoutineC	ontrol
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full			full
Mapping Status Mapping ID		Mapping ID	
valid up_Dcm_00254			up_Dcm_00254

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter	BSW Parameter BSW Type	
DcmDspDDDIDcheckPerSourceDID EcucBooleanParamDef		EcucBooleanParamDef
BSW Description		

Defines the check for session, security and mode dependencies per source DIDs with a Read-DataByldentifier (0x22).

true: Dcm module shall check the session, security and mode dependencies per source DIDs with a ReadDataByldentifier (0x22) with DID in the range 0xF200 to 0xF3FF

false: Dcm module shall not check the session, security and mode dependencies per source DIDs with a ReadDataByldentifier (0x22) with DID in the range 0xF200 to 0xF3FF

### **Template Description**

If set to TRUE, the Dcm module shall check the session, security and mode dependencies per source DIDs with a ReadDataByldentifier (0x22) with DID in the range 0xF200 to 0xF3FF.

If set to FALSE, the Dcm module shall not check the session, security and mode dependencies per source DIDs with a ReadDataByldentifier (0x22) with DID in the range 0xF200 to 0xF3FF.

### M2 Parameter



DiagnosticExtract::Dcm::DiagnosticService::DynamicallyDefineDataIdentifier::DiagnosticDynamicallyDefineDataIdentifierClass.checkPerSourceId		
Mapping Rule Mapping Type		
1:1 mapping full		
Mapping Status Mapping ID		
valid	up_Dcm_00079	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData		
BSW Parameter		BSW Type	
DcmDspDataByteS	Size	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Defines the array le	ength in bytes or the the maximum array	/ length for variable da	talengths.
Template Descrip	tion		
DiagnosticDataEl	ement.maxNumberOfElements:		
The existence of the	is attribute turns the data instance into	an array of data. The a	ttribute determines
the size of the arra	y in terms of how many elements the ar	ray can take.	
	efinition.baseTypeSize:		
	th of the data type specified in the cont	ainer in bits.	
M2 Parameter			
	CommonDiagnostics::DiagnosticDataE		Elements,
•	pes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule			Mapping Type
S/R via array:		<b>-</b>	
DcmDspDataByteS	Size= maxNumberOfElements * (baseTy	/peSize / 8)	
full			full
C/S of FNC callback:			
DcmDspDataByteSize= maxNumberOfElements			
Note: 8 is the baseTypeSize of UINT8			
Mapping Status Mapping ID			
valid up Dcm 000			up Dcm 00085

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter BSW Type		
DcmDspDataConditionCheckReadFnc EcucFunctionNameDef		
DCW Deceriation		

### **BSW Description**

Function name to demand application if the conditions (e.g. System state) to read the DID are correct. (ConditionCheckRead-function).

Multiplicity shall be equal to parameter DcmDspDataReadFnc.

### Only relevant if

- \* DcmDspDataConditionCheckReadFncUsed is set to 'TRUE' and
- \* DcmDspDataUsePort=="USE\_DATA\_SYNCH\_FNC or
- \* DcmDspDataUsePort==USE\_DATA\_ASYNCH\_FNC" or
- \* DcmDspDataUsePort==USE\_DATA\_ASYNCH\_FNC\_ERROR".

This parameter is related to the interface Xxx\_ConditionCheckRead.

### **Template Description**



This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.

#### M2 Parameter

 $\label{linear_problem} Diagnostic Extract:: Service Mapping:: Diagnostic Service SwMapping. mapped BswService Dependency$ 

dentoy	
Mapping Rule	Mapping Type
It could be possible to get the FNC name via BswServiceDependency	full
Mapping Status	Mapping ID
valid	up Dcm 00080

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData		
BSW Parameter	BSW Parameter BSW Type		
DcmDspDataEndia	ınness	EcucEnumerationPar	amDef
<b>BSW Description</b>			
Defines the endian	ness of the data belonging to a DID in a	diagnostic request or r	esponse message.
If no DcmDspDataEndiness is defined the value of DcmDspDataDefaultEndianness is applicable.  Template Description			
This attribute specifies the byte order of the base type.			
M2 Parameter			
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder			
Mapping Rule Mapping Type		Mapping Type	
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticDataIdentifier.dataElement		full	
9		Mapping ID	
valid		up_Dcm_00081	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter	SW Parameter BSW Type	
DcmDspDataFreez	eezeCurrentStateFnc EcucFunctionNameDef	
BSW Description		
Function makes to require to confication to functo the convent state of an IOC entrol		

Function name to request to application to freeze the current state of an IOControl. (FreezeCurrentState-function).

### Only relevant if

- \* DcmDspDataUsePort=="USE\_DATA\_SYNCH\_FNC or
- \* DcmDspDataUsePort==USE\_DATA\_ASYNCH\_FNC" or
- \* DcmDspDataUsePort==USE\_DATA\_ASYNCH\_FNC\_ERROR".

This parameter is related to the interface Xxx\_FreezeCurrentState.

#### **Template Description**

### DiagnosticServiceSwMapping.mappedBswServiceDependency:

This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.

#### DiagnosticloControlNeeds.freezeCurrentStateSupported:

This attribute determines, if the referenced port supports temporary freezing of I/O value.



M2 Parameter	
DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDepen-	
dency,	
CommonStructure::ServiceNeeds::DiagnosticloControlNeeds.freezeCurrentStateSupported	
Mapping Rule Mapping Type	
It could be possible to get the FNC name via BswServiceDependency full	
Mapping Status Mapping ID	
valid	up_Dcm_00004

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter BSW Type		
DcmDspDataReadDataLengthFnc EcucFunctionNameDef		EcucFunctionNameDef
BSW Description		

#### BSW Description

Function name to request from application the data length of a DID. (ReadDataLength-function).

### Only relevant if

- \* DcmDspDataUsePort=="USE\_DATA\_SYNCH\_FNC or
- \* DcmDspDataUsePort==USE\_DATA\_ASYNCH\_FNC" or
- \* DcmDspDataUsePort==USE DATA ASYNCH FNC ERROR".

This parameter is related to the interface Xxx ReadDataLength.

### **Template Description**

This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.

#### M2 Parameter

DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDependency

Mapping Rule	Mapping Type
It could be possible to get the FNC name via BswServiceDependency	full
Mapping Status	Mapping ID
valid	up_Dcm_00082

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter BSW Type		
DcmDspDataReadFnc EcucFunctionNameDef		
BSW Description		

Function name to request from application the data value of a DID. (ReadData-function).

### Only relevant if

- \* DcmDspDataUsePort=="USE\_DATA\_SYNCH\_FNC" or
- \* DcmDspDataUsePort=="USE\_DATA\_ASYNCH\_FNC" or
- \* DcmDspDataUsePort=="USE\_DATA\_ASYNCH\_FNC\_ERROR".

This parameter is related to the interface Xxx ReadData.

### **Template Description**

This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.



M2 Parameter		
DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDepen-		
dency		
Mapping Rule Mapping Type		
It could be possible to get the FNC name via BswServiceDependency	full	
Mapping Status Mapping I		
valid	up_Dcm_00083	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter	V Parameter BSW Type	
DcmDspDataResetToDefaultFnc EcucFunctionNameDef		EcucFunctionNameDef
BSW Description		

Function name to request to application to reset an IOControl to default value. (ResetToDefault-function).

### Only relevant if

- \* DcmDspDataUsePort=="USE\_DATA\_SYNCH\_FNC or
- \* DcmDspDataUsePort==USE\_DATA\_ASYNCH\_FNC" or
- \* DcmDspDataUsePort==USE DATA ASYNCH FNC ERROR".

This parameter is related to the interface Xxx ResetToDefault.

### **Template Description**

### DiagnosticServiceSwMapping.mappedBswServiceDependency:

This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.

### DiagnosticloControlNeeds.resetToDefaultSupported:

This represents a flag for the existence of the ResetToDefault operation in the service interface.

### **M2 Parameter**

DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDependency,

CommonStructure::ServiceNeeds::DiagnosticIoControlNeeds.resetToDefaultSupported

	• •
Mapping Rule	Mapping Type
It could be possible to get the FNC name via BswServiceDependency	full
Mapping Status	Mapping ID
valid	up_Dcm_00005

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter	SSW Parameter BSW Type	
DcmDspDataRetur	mDspDataReturnControlToEcuFnc EcucFunctionNameDef	
BSW Description		



Function name to request to application to return control to ECU of an IOControl. (ReturnControlToECU-function).

#### Only relevant if

- \* DcmDspDataUsePort=="USE\_DATA\_SYNCH\_FNC or
- \* DcmDspDataUsePort==USE DATA ASYNCH FNC" or
- \* DcmDspDataUsePort==USE\_DATA\_ASYNCH\_FNC\_ERROR".

This parameter is related to the interface Xxx ReturnControlToECU.

### **Template Description**

This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.

### **M2** Parameter

DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDependency

Mapping Rule	Mapping Type
It could be possible to get the FNC name via BswServiceDependency	full
Mapping Status	Mapping ID
valid	up_Dcm_00084

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataShort	TermAdjustmentFnc	EcucFunctionNameDef
RSW Description		

Function name to request to application to adjust the IO signal. (ShortTermAdjustment-function).

### Only relevant if

- \* DcmDspDataUsePort=="USE\_DATA\_SYNCH\_FNC or
- \* DcmDspDataUsePort==USE DATA ASYNCH FNC" or
- \* DcmDspDataUsePort==USE DATA ASYNCH FNC ERROR".

This parameter is related to the interface Xxx\_ShortTermAdjustment.

### **Template Description**

### DiagnosticServiceSwMapping.mappedBswServiceDependency:

This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.

### DiagnosticloControlNeeds.shortTermAdjustmentSupported:

This attribute determines, if the referenced port supports temporarily setting of I/O value to a specific value provided by the diagnostic tester.

#### **M2 Parameter**

DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDependency,

Common Structure :: Service Needs :: Diagnostic Io Control Needs. short Term Adjust ment Supported to the control Needs of the Contro

Mapping Rule	Mapping Type
It could be possible to get the FNC name via BswServiceDependency	full
Mapping Status	Mapping ID
valid	up_Dcm_00006



BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
BOOLEAN		EcucEnumerationLiteralDef
<b>BSW Description</b>		

Type of the data is boolean.

### **Template Description**

### BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

### DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

#### M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength

Mapping Rule	Mapping Type
baseTypeEncoding = BOOLEAN	
baseTypeSize = 1	
maxNumberOfElements shall not exist	full
arraySizeSemantics shall not exist	luli
Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	
Mapping Status	Mapping ID
valid	up Dcm 00008

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
SINT16		EcucEnumerationLiteralDef
BSW Description		

Type of the data is sint16.

### **Template Description**

### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

### BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

### DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

### M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize. AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength

Mapping Rule	Mapping Type



baseTypeEncoding = 2C	
baseTypeSize = 16	
maxNumberOfElements shall not exist	full
arraySizeSemantics shall not exist	luli
Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	
Mapping Status	Mapping ID
valid	up_Dcm_00012

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter	BSW Type	
SINT16_N		EcucEnumerationLiteralDef
BSW Description		
Type of the data is sint16 array.		
Template Description		

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

## **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,

CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength

Mapping Rule	Mapping Type
baseTypeEncoding = 2C	
baseTypeSize = 16	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT	
_01001)	full
arraySizeSemantics either does not exist or exists and is set to ArraySize	luli
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	
Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	
Mapping Status	Mapping ID
valid	up_Dcm_00018

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType



BSW Parameter	BSW Type
SINT32	EcucEnumerationLiteralDef
BSW Description	
Type of the data is sint32.	

#### **Template Description**

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

#### **M2** Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength

Mapping Rule	Mapping Type
baseTypeEncoding = 2C	
baseTypeSize = 32	
maxNumberOfElements shall not exist	full
arraySizeSemantics shall not exist	luli
Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	
Mapping Status	Mapping ID
valid	up_Dcm_00014

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter	BSW Type	
SINT32_N	EcucEnumerationLiteralDef	
BSW Description		

## Type of the data is sint32 array.

## **Template Description**

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

# DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

up Dcm 00020



AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements, CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength **Mapping Rule Mapping Type** baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS\_DEXT \_01001) full arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS\_DEXT\_01001) Derivation from DiagnosticValueNeeds.fixedLength=1 possible. **Mapping Status** Mapping ID

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
SINT8	EcucEnumerationLiteralDef	
BSW Description		
Type of the data is sint8.		
Template Description		
RacoTypoDirectDefinition hasoTypoSize:		

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

## **M2 Parameter**

valid

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,
CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength

Mapping Rule	Mapping Type
baseTypeEncoding = 2C	
baseTypeSize = 8	
maxNumberOfElements shall not exist	f11
arraySizeSemantics shall not exist	full
Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	
Mapping Status	Mapping ID
valid	up_Dcm_00010

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
SINT8_N		EcucEnumerationLiteralDef
<b>BSW Description</b>		



Type of the data is sint8 array.

### **Template Description**

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

### BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

#### M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,

CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength

Mapping Rule	Mapping Type
baseTypeEncoding = 2C	
baseTypeSize = 8	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT	
_01001)	full
arraySizeSemantics either does not exist or exists and is set to ArraySize	iuii
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	
Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	
Mapping Status	Mapping ID
valid	up_Dcm_00016

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter	BSW Type	
UINT16	EcucEnumerationLiteralDef	
BSW Description		
Type of the data is uint16.		
Template Description		

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.



AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE baseTypeSize = 16 maxNumberOfElements shall not exist arraySizeSemantics shall not exist  Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	Mapping ID
valid	up_Dcm_00011

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter	BSW Type	
UINT16_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the data is uint16 array.		
Template Description		

#### remplate Description

## BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

#### M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,

CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength

Mapping Rule

baseTypeEncoding = NONE
baseTypeSize = 16
maxNumberOfElements exists and value is greater than 0 (cf. TPS\_DEXT\_01001)
arraySizeSemantics either does not exist or exists and is set to ArraySize
SemanticsEnum.fixedSize (cf. TPS\_DEXT\_01001)

Derivation from DiagnosticValueNeeds.fixedLength=1 possible.

Mapping Status

valid

Mapping Type

Mapping Type

full

full

full

Mapping ID

up Dcm 00017



BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
UINT32		EcucEnumerationLiteralDef
BSW Description		

Type of the data is uint32.

## **Template Description**

## BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

#### M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength

Mapping Rule	Mapping Type
baseTypeEncoding = NONE	
baseTypeSize = 32	
maxNumberOfElements shall not exist	£11
arraySizeSemantics shall not exist	full
Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	
Mapping Status	Mapping ID
valid	up Dcm 00013

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter	/ Parameter BSW Type	
UINT32_N EcucEnumerationLiteralDef		
BSW Description		

## Type of the data is uint32 array.

**Template Description** 

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

up\_Dcm\_00019



M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSema	ntics	
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfl	Elements,	
CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength		
Mapping Rule Mapping Type		
baseTypeEncoding = NONE		
baseTypeSize = 32		
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT		
_01001)	full	
arraySizeSemantics either does not exist or exists and is set to ArraySize	luli	
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		
· – – ,		
Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		
Mapping Status	Mapping ID	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter	BSW Type	
UINT8	EcucEnumerationLiteralDef	
BSW Description		
Type of the data is uint8.		
Template Description		

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

### **M2 Parameter**

valid

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength

Mapping Rule	Mapping Type
baseTypeEncoding = NONE	
baseTypeSize = 8	
maxNumberOfElements shall not exist	full
arraySizeSemantics shall not exist	luli
Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	
Mapping Status	Mapping ID
valid	up_Dcm_00009

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
UINT8_DYN		EcucEnumerationLiteralDef



## **BSW Description**

Type of the data is uint8 array with dynamic length.

#### **Template Description**

## BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

### DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

#### M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,

CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength

Mapping Rule	Mapping Type
baseTypeEncoding = NONE baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)	full
Derivation from DiagnosticValueNeeds.fixedLength=0 possible.  Mapping Status	Mapping ID
valid	up_Dcm_00007

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter	BSW Type	
UINT8_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the data is uint8 array.		
Template Description		



# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### DiagnosticValueNeeds.fixedLength:

This attribute controls whether the data length of the data is fixed.

## **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,

CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength

Mapping Rule	Mapping Type
baseTypeEncoding = NONE	
baseTypeSize = 8	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT	
_01001)	full
arraySizeSemantics either does not exist or exists and is set to ArraySize	luli
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	
Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	
Mapping Status	Mapping ID
valid	up_Dcm_00015

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData		
BSW Parameter		BSW Type	
DcmDspDataUseP	ort	EcucEnumerationPar	amDef
BSW Description			
Defines which inter	face shall be used to access the data.		
Template Descrip	tion		
	ols whether interaction requires the so		
on a request or whether it processes the request in background but still the DCM has to issue the			
call again to eventually obtain the result of the request.			
M2 Parameter			
CommonStructure	CommonStructure::ServiceNeeds::DiagnosticValueNeeds.processingStyle		
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping			full
Mapping Status Mapping II		Mapping ID	
valid			up_Dcm_00001

BSW Module	BSW Context
DOW Module	DOW COMEX



Dcm	Dcm Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort		
BSW Parameter		BSW Type	
USE_DATA_ASYN	ICH_CLIENT_SERVER	EcucEnumerationLite	eralDef
BSW Description			
	ess the Data using an R-Port requirin		
	ta}. The R-Port is named DataServices	s_{Data} where {Data}	is the name of the
container DcmDsp			
Template Descrip	tion		
	The software-component processes the request in background but still the Dcm has to issue the call		
again to eventually obtain the result of the request.			
M2 Parameter			
CommonStructure::ServiceNeeds::DiagnosticProcessingStyleEnum.processingStyleAsynchronous			
Mapping Rule			Mapping Type
	SwMapping is having a SwcServiceDe		
viceNeeds::DiagnosticProcessingStyleEnum is equal to processingStyleAsyn-		full	
chronous			
Mapping Status			Mapping ID
valid			up_Dcm_00022

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort		
BSW Parameter	BSW Parameter BSW Type		
USE_DATA_ASYN	ICH_CLIENT_SERVER_ERROR	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
The Dcm will acce	ess the Data using an R-Port requiring	g a asynchronous Clie	entServertInterface
DataServices_{Dat	ta}. The parameter ErrorCode can be	returned to allow the	application to trig-
ger a negative res	ponse during the operation. The R-Po	ort is named DataServ	rices_{Data} where
` '	of the container DcmDspData.		
Template Descrip			
	The software-component processes the request in background but still the Dcm has to issue the call		
again to eventually	again to eventually obtain the result of the request or handle error code.		
M2 Parameter			
CommonStructure	CommonStructure::ServiceNeeds::DiagnosticProcessingStyleEnum.processingStyleAsynchronous		
WithError			
Mapping Rule			Mapping Type
DiagnosticServiceSwMapping is having a SwcServiceDependency and Ser-			
viceNeeds::DiagnosticProcessingStyleEnum is equal to processingStyleAsyn-		full	
chronousWithError			
Mapping Status			Mapping ID
valid		<u>-</u>	up_Dcm_00023

<b>BSW Module</b>	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort		
BSW Parameter		BSW Type	
USE_DATA_ASYN	ICH_FNC	EcucEnumerationLiteralDef	
<b>BSW Description</b>	BSW Description		
The DCM will access the Data using the functions that are defined in parameters of type Ecuc-			
FunctionNameDef (but without DcmDspDataReadDataLengthFnc) in the DcmDspData container.			
DCM_E_PENDING return is allowed. OpStatus is existing as IN parameter.			
Template Description			
The software-component processes the request in background but still the Dcm has to issue the call			
again to eventually obtain the result of the request.			



M2 Parameter	
CommonStructure::ServiceNeeds::DiagnosticProcessingStyleEnum.processingS	StyleAsynchronous
Mapping Rule	Mapping Type
DiagnosticServiceSwMapping is having a BswServiceDependency and ServiceNeeds::DiagnosticProcessingStyleEnum is equal to processingStyleAsynchronous	full
Mapping Status	Mapping ID
valid	up_Dcm_00250

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort		
BSW Parameter		BSW Type	
USE_DATA_SEND	DER_RECEIVER	EcucEnumerationLite	eralDef
BSW Description			
The DCM will acc	cess the Data using an Port requiring	a SenderReceiverIn	teface (with isSer-
vice=false) DataSe	ervices_{Data}.		
The Port is named	The Port is namedDataServices_{Data} where {Data} is the name of the container DcmDspData.		
Template Descrip	Template Description		
This represents the ability to define a mapping of a diagnostic service to a software-component. This			
kind of service mapping is applicable for the usage of SenderReceiverInterfaces.			
M2 Parameter			
DiagnosticExtract::ServiceMapping::DiagnosticServiceDataMapping			
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid up_Dcm_0008		up_Dcm_00087	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort		
BSW Parameter	BSW Parameter BSW Type		
USE_DATA_SEND	DER_RECEIVER_AS_SERVICE	EcucEnumerationLite	eralDef
BSW Description			
The DCM will acce	ss the Data using an service Port requir	ing a SenderReceiverl	nteface (with isSer-
vice=true) DataSer	vices_{Data}.		
The Port is named	DataServices_{Data} where {Data} is th	e name of the containe	er DcmDspData.
Template Description			
This represents the ability to define a mapping of a diagnostic service to a software-component. This			
kind of service mapping is applicable for the usage of SenderReceiverInterfaces.			
M2 Parameter			
DiagnosticExtract::ServiceMapping::DiagnosticServiceDataMapping			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping IE		Mapping ID	
valid			up_Dcm_00088

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter	BSW Type	
DcmDspDataWriteFnc EcucFunctionNameDef		
BSW Description		



Function name to request application to write the data value of a DID. (WriteData-function).

#### Only relevant if

- \* DcmDspDataUsePort=="USE\_DATA\_SYNCH\_FNC or
- \* DcmDspDataUsePort==USE\_DATA\_ASYNCH\_FNC" or
- \* DcmDspDataUsePort==USE DATA ASYNCH FNC ERROR".

This parameter is related to the interface Xxx WriteData.

## **Template Description**

This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.

#### **M2 Parameter**

DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDependency

Mapping Rule	Mapping Type
It could be possible to get the FNC name via BswServiceDependency	full
Mapping Status	Mapping ID
valid	up Dcm 00090

BSW Module	BSW Context	
Dom	Dcm/DcmConfigSet/DcmDsp/DcmDs	oData/DcmDspDiagnosisScaling/Dcm
Dcm	DspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTable!	Mapping	EcucParamConfContainerDef
RSW Description		

#### BSW Description

The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists).

In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.

#### **Template Description**

This meta-class represents the ability to express the relationship between a physical value and the mathematical representation.

Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.

# M2 Parameter

AsamHdo::ComputationMethod::CompuMethod

Mapping Rule	Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABL E or SCALE_LINEAR_AND_TEXTTABLE.	full
Mapping Status	Mapping ID
valid	up_Dcm_00097

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDiagnosisScaling/Dcm
DCIII	DspAlternativeDataType/DcmDspTextTableMapping



BSW Parameter	BSW Type		
DcmDspDiagnosisRepresentationDataValue	EcucIntegerParamDef		
BSW Description			
The data value in the diagnosis representation.			
Template Description			
This represents a textual constant in the computation met	This represents a textual constant in the computation method.		
M2 Parameter			
AsamHdo::ComputationMethod::CompuConstTextContent.vt			
Mapping Rule	N	Mapping Type	
1:1 mapping full		ull	
Mapping Status Mapping ID		Mapping ID	
valid up_Dc		up_Dcm_00098	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDiagnosisScaling/Dcm		
	DspAlternativeDataType/DcmDspText	11 0	
BSW Parameter		BSW Type	
DcmDspInternalDa	ataValue	EcucIntegerParamDe	ef
<b>BSW Description</b>			
The ECU internal of	data value.		
Template Descrip	tion		
CompuScale.lowe	erLimit:		
This specifies the le	ower limit of the scale.		
CompuScale.upp	CompuScale.upperLimit:		
This specifies the u	This specifies the upper limit of a of the scale.		
M2 Parameter			
AsamHdo::Comput	AsamHdo::ComputationMethod::CompuScale.lowerLimit,		
AsamHdo::ComputationMethod::CompuScale.upperLimit			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00099

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData		
BSW Parameter		BSW Type	
DcmDspDidDataSt	upportInfo	EcucParamConfCont	ainerDef
<b>BSW Description</b>			
This container defin	nes the supported information.		
Template Descrip	tion		
This attribute repre	This attribute represents the supported information associated with the DiagnosticDataIdentifier.		icDataIdentifier.
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.supportInfo,		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataIdentifier.supportInfoByte			e
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid up_Dcm_00		up_Dcm_00282	



BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspExternalSRDataElement		
DCIII	Class/DcmDataElementInstance		
BSW Parameter		BSW Type	
DcmDataElementli	nstanceRef	EcucInstanceReferer	nceDef
<b>BSW Description</b>			
Instance Reference	e to the primitive data which shall be rea	ad or written.	
Supported are Var	iableDataPrototypes in SenderReceiver	Interfaces and NvData	Interfaces and Pa-
rameterDataProtot	ypes in ParameterInterfaces (read only)	).	
	oplicable if the AutosarDataPrototype is		
	of category VALUE or BOOLEAN or if the AutosarDataPrototype is typed with a Implementation-		
DataType of category VALUE or TYPE_REFERENCE that in turn boils down to VALUE			
Template Description			
This represents the dataElement in the application software that is accessed for diagnostic purpose.			
M2 Parameter	M2 Parameter		
DiagnosticExtract::ServiceMapping::DiagnosticServiceDataMapping.mappedDataElement			
Mapping Rule Mapping Type		Mapping Type	
DiagnosticServiceDataMapping maps to a primitive data. fu		full	
Mapping Status Ma		Mapping ID	
valid			up_Dcm_00100

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspExternalSRDataElement		
DCIII	Class/DcmSubElementInDataElemen	tInstance	
BSW Parameter		BSW Type	
DcmSubElementIn	DataElementInstanceRef	EcucInstanceReferer	nceDef
<b>BSW Description</b>			
Instance Reference	e to the primitve sub-element (at any lev	rel) of composite data i	n a port which shall
be read.			
• •	iableDataPrototypes in SenderReceiver		Interfaces and Pa-
	ypes in ParameterInterfaces (read only)		
	applicable if the AutosarDataPrototype	e is typed with a App	olicationComposite-
	DataType.		
	Template Description		
•	e dataElement in the application softwar	e that is accessed for o	diagnostic purpose.
M2 Parameter			
	ServiceMapping::DiagnosticServiceDat	aMapping.mappedDat	aElement
Mapping Rule Mapping Type		Mapping Type	
DiagnosticServiceDataMapping maps to a primitive element within a compos-			
ite data, where the AutosarDataPrototype is typed with a ApplicationComposite		full	
DataType.			
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid up_Dcm_		up_Dcm_00101	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pData/DcmDspExternalSRDataElement
DCIII	Class/DcmSubElementInImplDataElementInstance	
BSW Parameter BSW Type		
DcmSubElementInImplDataElementInstanceRef EcucInstanceReferenceDef		EcucInstanceReferenceDef
BSW Description		



Instance Reference to the primitve sub-element (at any level) of composite data in a port which shall

Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in ParameterInterfaces (read only).

This reference is applicable if the AutosarDataPrototype is typed with a ImplementationDataType of category STRUCTURE or ARRAY.

Please note that in case of ARRAY the index attribute in the target reference has to be set to select a single array element.

## **Template Description**

This represents the dataElement in the application software that is accessed for diagnostic purpose.

DiagnosticExtract::ServiceMapping::DiagnosticServiceDataMapping.mappedDataElement	
Mapping Rule	Mapping Type
DiagnosticServiceDataMapping maps to a primitive element within a compos-	
ite data, where the AutosarDataPrototype is typed with a ApplicationComposite	full
DataType ImplementationDataType of category STRUCTURE or ARRAY.	
Mapping Status	Mapping ID
valid	up_Dcm_00102

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData		
BSW Parameter		BSW Type	
DcmDspOdxDataD	escription	EcucAddInfoParamD	ef
<b>BSW Description</b>			
Defines additional	description for ODX documentation		
Template Descrip	tion		
This specifies the l	This specifies the long name of the object. Long name is targeted to human readers and acts like a		
headline.	headline.		
M2 Parameter			
GenericStructure::0	GenericStructure::GeneralTemplateClasses::Identifiable::MultilanguageReferrable.longName		
Mapping Rule Mapping Type		Mapping Type	
Textual description that characterizes the DID element with respect to the ODX		full	
long name can be	long name can be provided by means of the attribute long-Name.		luli
Mapping Status Mapping I		Mapping ID	
valid		up_Dcm_00103	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp		
BSW Parameter		BSW Type	
DcmDspDataDefau	ıltEndianness	EcucEnumerationPar	amDef
<b>BSW Description</b>			
	endianness belonging to a DID, RID of	or PID if the correspon	ding data does not
define an endianne	ess.		
Template Descript	tion		
	t endianness of the data belonging to		
DiagnosticDataElement does not define the endianness via the swDataDefProps.baseType attribute.			
M2 Parameter			
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.defaultEndianness			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping	1:1 mapping full		full
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid			up_Dcm_00104



BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp		
BSW Parameter	BSW Type		
DcmDspDid		EcucParamConfCont	ainerDef
BSW Description			
This container cont	ains the configuration (parameters) of t	he DID.	
Template Descript	tion		
DiagnosticDatalde	entifier:		
	presents the ability to model a diagnostic	c data identifier (DID) tl	hat is fully specified
regarding the paylo	ad at configuration-time.		
	DiagnosticDynamicDataldentifier:		
This meta-class rep	This meta-class represents the ability to define a diagnostic data identifier (DID) at run-time.		at run-time.
M2 Parameter			
	DiagnosticExtract::CommonDiagnostics::DiagnosticDataIdentifier		
DiagnosticExtract::CommonDiagnostics::DiagnosticDynamicDataIdentifier			
Mapping Rule	Mapping Rule Mapping Type		Mapping Type
1:1 mapping	full		full
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid	up_Dcm_00178		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid	
BSW Parameter	ameter BSW Type	
DcmDspDidIdentifier EcucIntegerParamDef		EcucIntegerParamDef
BSW Description		
O but a Identifier of the DID		

2 byte Identifier of the DID

Within each DcmConfigSet all DcmDspDidIdentifier values shall be unique.

## **Template Description**

## DiagnosticAbstractDataIdentifier.id:

This is the numerical identifier used to identify the DiagnosticAbstractDataIdentifier in the scope of diagnostic workflow

## DiagnosticValueNeeds.didNumber:

This represents a Data identifier for the diagnostic value.

This allows to predefine the DID number if the responsible function developer has received a particular requirement from the OEM or from a standardization body.

### M2 Parameter

DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractDataIdentifier.id,

Common Structure :: Service Needs :: Diagnostic Value Needs. did Number

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00002

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidSignal	
BSW Parameter	BSW Type	
DcmDspDidByteOf	DidByteOffset EcucIntegerParamDef	
BSW Description		



Defines the absolute byte offset of the data defined by DcmDspDidDataRef reference to DcmDsp-		
Data container in the DID.		
Template Description		
This represents the bitOffset of the DiagnosticParameter		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.bitOffset		
Mapping Rule Mapping Type		
bitOffset / 8 full		
Mapping Status Mapping ID		
valid	up_Dcm_00283	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid		
BSW Parameter		BSW Type	
DcmDspDidSize		EcucIntegerParamDe	ef
<b>BSW Description</b>			
Length of a DID in	byte(s).		
Template Descrip	tion		
This attribute indicates the size of the DiagnosticDataIdentifier.			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticDataIdentifier.didSize			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping		Mapping ID	
valid			up_Dcm_00280

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid		
BSW Parameter		BSW Type	
DcmDspDidSuppo	rtInfo	EcucParamConfCont	ainerDef
<b>BSW Description</b>			
This container defi	nes the support information to declare	the usability of the da	ata bytes within the
DIDs			
	Template Description		
This attribute repre	This attribute represents the supported information associated with the DiagnosticDataIdentifier.		
M2 Parameter	M2 Parameter		
DiagnosticExtract::	DiagnosticExtract::CommonDiagnostics::DiagnosticDataIdentifier.supportInfoByte		
Mapping Rule Mapping Type		Mapping Type	
full			full
Mapping Status Mappin		Mapping ID	
valid			up_Dcm_00281

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo		
BSW Parameter	BSW Type		
DcmDspDDDIDMa	axElements EcucIntegerParamDef		
BSW Description			
Maximum number of source elements of a DDDID.			
Template Description			
This represents the maximum number of source elements of the dynamically created DID.			



M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::DynamicallyDefineDataIdentifier::DiagnosticExtract::Dcm::DiagnosticService::DynamicallyDefineDataIdentifier::DiagnosticService::DynamicallyDefineDataIdentifier::DiagnosticService	agnosticDynami-	
callyDefineDataIdentifier.maxSourceElement		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status Mapping ID		
valid	up_Dcm_00107	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidControl		
BSW Parameter		BSW Type	
DcmDspDidContro	SecurityLevelRef	EcucReferenceDef	
BSW Description			
Reference to Dcml			
Security levels allo	wed to control this DID. If there is no ref	erence, no check of se	curity level shall be
done.			
Template Description			
This represents the	This represents the associated DiagnosticSecurityLevels		
M2 Parameter			
DiagnosticExtract::	Dcm::DiagnosticAccessPermission.sec	urityLevel	
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00108

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidControl		
BSW Parameter		BSW Type	
DcmDspDidContro	ISessionRef	EcucReferenceDef	
<b>BSW Description</b>			
Reference to Dcml			
Sessions allowed to	o control this DID. If there is no referenc	e, no check of session	level shall be done.
Template Descrip	Template Description		
This represents the	This represents the associated DiagnosticSessions		
M2 Parameter			
DiagnosticExtract::	Dcm::DiagnosticAccessPermission.diag	gnosticSession	
Mapping Rule	Mapping Rule Mapping Type		
1:1 mapping full			full
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00109

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidControl	
BSW Parameter	BSW Type	
DcmDspDidFreeze	eCurrentState EcucBooleanParamDef	
BSW Description		
This indicates the presence of "FreezeCurrentState".		
Template Description		



## DiagnosticIOControl.freezeCurrentState:

Setting this attribute to true represents the ability of the Dcm to execute a freezeCurrentState.

## DiagnosticloControlNeeds.freezeCurrentStateSupported:

This attribute determines, if the referenced port supports temporary freezing of I/O value.

## **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::IOControl::DiagnosticIOControl.freezeCurrentState, CommonStructure::ServiceNeeds::DiagnosticIoControlNeeds.freezeCurrentStateSupported

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00035

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidControl		
BSW Parameter	er BSW Type		
DcmDspDidReset1	To Default	EcucBooleanParamD	)ef
<b>BSW Description</b>			
This indicates the	presence of "ResetToDefault".		
Template Descrip	tion		
	rol.resetToDefault:		
Setting this attribut	e to true represents the ability of the Do	cm to execute a resetTo	Default.
	rolNeeds.resetToDefaultSupported:		
This represents a f	This represents a flag for the existence of the ResetToDefault operation in the service interface.		
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::IOControl::DiagnosticIOControl.resetToDefault,			
CommonStructure::ServiceNeeds::DiagnosticloControlNeeds.resetToDefaultSupported			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping	1:1 mapping full		
Mapping Status Mapping ID			Mapping ID
valid			up Dcm 00036

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidControl		
BSW Parameter	arameter BSW Type		
DcmDspDidShortT	ermAdjustment	EcucBooleanParamD	)ef
<b>BSW Description</b>			
	oresence of "ShortTermAdjustment".		
Template Descrip			
	trol.shortTermAdjustment:		
Setting this attribut	Setting this attribute to true represents the ability of the Dcm to execute a shortTermAdjustment.		
DiagnosticloControlNeeds.shortTermAdjustmentSupported: This attribute determines, if the referenced port supports temporarily setting of I/O value to a specific value provided by the diagnostic tester.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::IOControl::DiagnosticIOControl.shortTermAdjustment,			
CommonStructure::ServiceNeeds::DiagnosticloControlNeeds.shortTermAdjustmentSupported			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID



valid	up_Dcm_00037
-------	--------------

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo		
BSW Parameter		BSW Type	
DcmDspDidDynan	nicallyDefined	EcucBooleanParamD	)ef
BSW Description			
Indicates if this DID	Can be dynamically defined		
	dynamically defined		
	t be dynamically defined		
Template Descrip			
DiagnosticDatald	DiagnosticDataIdentifier:		
	presents the ability to model a diagnosti	c data identifier (DID) tl	hat is fully specified
regarding the paylo	oad at configuration-time.		
DiagnosticDynam			
This meta-class represents the ability to define a diagnostic data identifier (DID) at run-time.			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticDataIdentifier,			
DiagnosticExtract::CommonDiagnostics::DiagnosticDynamicDataIdentifier			
Mapping Rule Mapping Type			Mapping Type
true: in case the DiagnosticAbstractDataIdentifier for the DID value is aggre-			
gated by DiagnosticDynamicDataIdentifier false: in case the DiagnosticAbstract   full			full
DataIdentifier for the DID value is aggregated by DiagnosticDataIdentifier			
Mapping Status			Mapping ID
valid			up_Dcm_00110

BSW Module	BSW Context		
BSW Wodule			
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pDidInfo/DcmDspDidR	ead
BSW Parameter BSW Type			
DcmDspDidReadSecurityLevelRef EcucReferenceDef			
BSW Description			
Reference to Dcml	DspSecurityRow Referenced security le	vels are allowed to rea	d this DID.
If there is no refere	If there is no reference, no check of security level shall be done.		
Template Description			
This represents the associated DiagnosticSecurityLevels			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel			
Mapping Rule Mapping Type			
1:1 mapping	1 mapping full		full
Mapping Status Mapping		Mapping ID	
valid			up_Dcm_00111

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidRead	
BSW Parameter BSW Type		BSW Type
DcmDspDidReadSessionRef		EcucReferenceDef
BSW Description		



Reference to DcmDspSessionRow Referenced sessions are allowed to read this DID.		
If there is no reference, no check of session level shall be done.		
Template Description		
This represents the associated DiagnosticSessions		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission.diagnosticSession		
Mapping Rule Mapping Type		
1:1 mapping full		
Mapping Status Mapping ID		
valid	up_Dcm_00112	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidWrite		
BSW Parameter BSW Type			
DcmDspDidWriteSecurityLevelRef EcucReferenceDef			
<b>BSW Description</b>			
Reference to Dcml	DspSecurityRow Referenced security le	vels are allowed to wir	te this DID.
If there is no reference, no check of security level shall be done.  Template Description  This represents the associated DiagnosticSecurityLevels			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping		Mapping ID	
valid			up_Dcm_00113

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidWrite		
BSW Parameter	SSW Parameter BSW Type		
DcmDspDidWriteS	essionRef	EcucReferenceDef	
BSW Description			
Reference to Dcml	OspSessionRow Referenced sessions a	are allowed to write this	s DID.
If there is no refere	If there is no reference, no check of session level shall be done.		
Template Description			
This represents the associated DiagnosticSessions			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticAccessPermission.diagnosticSession			
Mapping Rule	Mapping Rule Mapping Type		Mapping Type
1:1 mapping	full		full
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00114

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type
DcmDspMaxDidToRead		EcucIntegerParamDef



BSW Description		
Indicates the maximum allowed DIDs in a single "ReadDataByldentifier" request.		
Template Description		
This attribute represents the maximum number of allowed DIDs in a single inst	tance of Diagnosti-	
cReadDataByldentifier.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::DataByldentifier::DiagnosticReadDataByldentifier		
Class.maxDidToRead		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00115	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp		
BSW Parameter	BSW Parameter BSW Type		
DcmDspMaxPeriod	dicDidToRead	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Indicates the maxir	mum allowed periodicDIDs which can b	e read in a single "Rea	adDataByPeriodicI-
dentifier" request.			
Template Description			
This represents the maximum number of data identifiers that can be included in one request.			
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticReadDataByPeri-		
odicIDClass.maxPeriodicDidToRead			
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status			Mapping ID
valid			up_Dcm_00116

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo	
BSW Parameter BSW Ty		BSW Type
DcmDspMemoryIdValue		EcucIntegerParamDef
BSW Description		

Value of the memory device identifier used.

If this parameter is not configured, the DCM will not use Memoryldentifier parameter. The Dcm\_WriteMemory and Dcm\_ReadMemory callouts shall be called without the Memoryldentifier parameter.

If this parameter is configured, the DCM will use Memoryldentifier parameter to select the memory device to use. The Dcm\_WriteMemory and Dcm\_ReadMemory callouts shall be called with the Memoryldentifier parameter.

Every values configured in the configuration parameter DcmDspMemoryIdValue shall be unique.

The MemoryIdValue is retrieved from the request messages (RMBA,WMBA,RD,RU,DDDI) according to ISO-14229-1.

### **Template Description**

This represents the identification of the memory segment.



DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdentifier.id		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00117	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm		noryldInfo/Dcm
DCIII	DspReadMemoryRangeByLabelInfo		
BSW Parameter		BSW Type	
DcmDspReadMem	noryRangeByLabelHigh	EcucStringParamDef	
<b>BSW Description</b>			
High memory addr	ess as label (string) of a range allowed	for reading.	
Template Descrip	Template Description		
This represents a s	This represents a symbolic label for the upper bound for addresses of the memory segment.		
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdenti-			oryldenti-
fier.memoryHighAd	fier.memoryHighAddressLabel		
Mapping Rule Mapping Type			Mapping Type
1:1 mapping	apping full		full
Mapping Status			Mapping ID
valid			up_Dcm_00118

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm		moryldInfo/Dcm
DCIII	DspReadMemoryRangeByLabelInfo		
BSW Parameter		BSW Type	
DcmDspReadMem	noryRangeByLabelLow	EcucStringParamDef	
BSW Description			
Low memory addre	Low memory address as label (string) of a range allowed for reading.		
Template Descrip	emplate Description		
This represents a s	represents a symbolic label for the lower bound for addresses of the memory segment.		
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdenti-		oryldenti-
fier.memoryLowAd	fier.memoryLowAddressLabel		
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dcm_00119

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm	
	DspReadMemoryRangeByLabelInfo	
BSW Parameter	BSW Type	
DcmDspReadMem	noryRangeSecurityLevelRef EcucReferenceDef	
BSW Description		
Link to the Security Access Levels needed for read access on this memory address. If there is no		
reference, no check of security level shall be done.		
Template Description		
This represents the associated DiagnosticSecurityLevels		



M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel	
Mapping Rule	Mapping Type
DiagnosticMemoryIdentifier referenced in the role memoryRange is referenced by a DiagnosticReadMemoryByAddress The accessPermission holds the security level information.	full
Mapping Status	Mapping ID
valid	up_Dcm_00120

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm DspReadMemoryRangeByLabelInfo		
BSW Parameter		BSW Type	
DcmDspReadMem	oryRangeSessionLevelRef	EcucReferenceDef	
<b>BSW Description</b>			
Link to the session	level needed for access to this memor	y address range.	
If there is no reference, no check of session level shall be done.  Template Description			
This represents the associated DiagnosticSessions			
M2 Parameter			
DiagnosticExtract::	Dcm::DiagnosticAccessPermission.dia	gnosticSession	
Mapping Rule Mapping Type			
1:1 mapping			full
Mapping Status			Mapping ID
valid			up Dcm 00278

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm		
DCIII	DspReadMemoryRangeInfo		
BSW Parameter		BSW Type	
DcmDspReadMem	noryRangeHigh	EcucIntegerParamDe	ef
<b>BSW Description</b>			
High memory addr	High memory address of a range allowed for reading		
Template Descrip	Template Description		
This represents the	nis represents the upper bound for addresses of the memory segment.		
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdenti-			
fier.memoryHighAddress			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping	g full		
Mapping Status			Mapping ID
valid			up_Dcm_00121

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pMemory/DcmDspMemoryIdInfo/Dcm
DOM	DspReadMemoryRangeInfo	
BSW Parameter		BSW Type
DcmDspReadMem	noryRangeLow	EcucIntegerParamDef
<b>BSW Description</b>		



Low memory address of a range allowed for reading	
Template Description	
This represents the lower bound for addresses of the memory segment.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryByAddress::DiagnosticMemoryByAddress::DiagnosticMemoryByAddress::DiagnosticMemoryByAddress::DiagnosticMemoryByAddress::DiagnosticMemoryByAddress	oryldenti-
fier.memoryLowAddress	
Mapping Rule	Mapping Type
1:1 mapping full	
Mapping Status	Mapping ID
valid	up_Dcm_00122

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm		
_	DspReadMemoryRangeInfo		
BSW Parameter		BSW Type	
DcmDspReadMem	oryRangeSecurityLevelRef	EcucReferenceDef	
BSW Description			
	y Access Levels needed for read acces	ss on this memory add	lress. If there is no
reference, no check	k of security level shall be done.		
Template Description			
This represents the associated DiagnosticSecurityLevels			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel			
Mapping Rule Mapping Type			Mapping Type
DiagnosticMemoryIdentifier referenced in the role memoryRange is referenced			
by a DiagnosticReadMemoryByAddress The accessPermission holds the secu-		full	
rity level information.			
Mapping Status			Mapping ID
valid			up_Dcm_00179

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm		
Dom	DspReadMemoryRangeInfo		
BSW Parameter		BSW Type	
DcmDspReadMem	noryRangeSessionLevelRef	EcucReferenceDef	
BSW Description			
Link to the session	level needed for access to this memory	y address range.	
If there is no reference, no check of session level shall be done.			
Template Description			
This represents the associated DiagnosticSessions			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticAccessPermission.diagnosticSession			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping	full		
Mapping Status			Mapping ID
valid			up_Dcm_00276

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm DspWriteMemoryRangeByLabelInfo



BSW Parameter	BSW Type	
DcmDspWriteMemoryRangeByLabelHigh	EcucStringParamDef	
BSW Description		
High memory address as label (string) of a range allowed	for writing.	
Template Description		
This represents a symbolic label for the upper bound for a	ddresses of the memory seg	gment.
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAd	dress::DiagnosticMemoryIde	enti-
fier.memoryHighAddressLabel		
Mapping Rule	Map	ping Type
1:1 mapping	full	
Mapping Status	Мар	ping ID
valid	up_	Dcm_00123

BSW Module	BSW Context		
B3W Wodule			
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pMemory/DcmDspMer	noryldInfo/Dcm
DOM	DspWriteMemoryRangeByLabelInfo		
BSW Parameter		BSW Type	
DcmDspWriteMem	oryRangeByLabelLow	EcucStringParamDef	
BSW Description			
Low memory addre	ess as label (string) of a range allowed t	for writing.	
Template Descrip	tion		
This represents a s	symbolic label for the lower bound for a	ddresses of the memor	y segment.
M2 Parameter	M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdenti-			
fier.memoryLowAd	fier.memoryLowAddressLabel		
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid		up_Dcm_00124	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm		
	DspWriteMemoryRangeByLabelInfo		
BSW Parameter		BSW Type	
DcmDspWriteMem	oryRangeSecurityLevelRef	EcucReferenceDef	
<b>BSW Description</b>			
Link to the Security	Access Levels needed for write acces	ss on this memory add	lress. If there is no
reference, no chec	k of security level shall be done.		
Template Descrip	tion		
This represents the	ts the associated DiagnosticSecurityLevels		
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel			
Mapping Rule Mapping Type		Mapping Type	
DiagnosticMemoryIdentifier referenced in the role memoryRange is referenced			
by a DiagnosticWriteMemoryByAddress The accessPermission holds the secu-		full	
rity level information.			
Mapping Status Mapping ID		Mapping ID	
valid		up_Dcm_00125	



BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm		
DCIII	DspWriteMemoryRangeByLabelInfo		
BSW Parameter		BSW Type	
DcmDspWriteMem	oryRangeSessionLevelRef	EcucReferenceDef	
<b>BSW Description</b>			
Link to the session	level needed for access to this memory	y address range.	
If there is no refere	nce, no check of session level shall be	done.	
Template Descrip	Template Description		
This represents the	This represents the associated DiagnosticSessions		
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::Dcm::DiagnosticAccessPermission.diagnosticSession		
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping	full		
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid			up_Dcm_00279

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm		
DCIII	DspWriteMemoryRangeInfo		
BSW Parameter		BSW Type	
DcmDspWriteMem	oryRangeHigh	EcucIntegerParamDe	ef
BSW Description			
High memory addr	ess of a range allowed for writing.		
Template Descrip	tion		
This represents the	e upper bound for addresses of the mer	nory segment.	
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdenti-			
fier.memoryHighAd	fier.memoryHighAddress		
Mapping Rule	Mapping Rule Mapping Type		Mapping Type
1:1 mapping			full
Mapping Status	pping Status Mapping ID		Mapping ID
valid			up_Dcm_00126

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm DspWriteMemoryRangeInfo		
BSW Parameter		BSW Type	
DcmDspWriteMem	oryRangeLow	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Low memory addre	ess of a range allowed for writing		
Template Descrip	Template Description		
This represents the	e lower bound for addresses of the memory segment.		
M2 Parameter	M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdenti-			
fier.memoryLowAd	dress		
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid			up_Dcm_00127



BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm		
	DspWriteMemoryRangeInfo		
BSW Parameter		BSW Type	
DcmDspWriteMem	oryRangeSecurityLevelRef	EcucReferenceDef	
<b>BSW Description</b>			
Link to the Security	y Access Levels needed for write acces	ss on this memory add	Iress. If there is no
reference, no check	k of security level shall be done.		
Template Descrip	tion		
This represents the	associated DiagnosticSecurityLevels		
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel			
Mapping Rule Mapping Type		Mapping Type	
DiagnosticMemoryIdentifier referenced in the role memoryRange is referenced			
by a DiagnosticWriteMemoryByAddress The accessPermission holds the secu-		full	
rity level informatio	rity level information.		
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00180

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/Dcm		
Dom	DspWriteMemoryRangeInfo		
BSW Parameter		BSW Type	
DcmDspWriteMem	oryRangeSessionLevelRef	EcucReferenceDef	
<b>BSW Description</b>			
Link to the session	level needed for access to this memory	y address range.	
If there is no refere	nce, no check of session level shall be	done.	
Template Descrip	emplate Description		
This represents the	This represents the associated DiagnosticSessions		
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::Dcm::DiagnosticAccessPermission.diagnosticSession		
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping	1:1 mapping full		full
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid	up_Dcm_00277		up_Dcm_00277

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPeriodicTransmission		
BSW Parameter		BSW Type	
DcmDspMaxPeriod	dicDidScheduler	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Defines the maxim	um number of periodicDataldentifiers th	at can be scheduled c	oncurrently.
Template Descrip	tion		
This represents the	This represents the maximum number of periodic data identifiers that can be scheduled in parallel.		eduled in parallel.
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticReadDataByPeri-			
odicIDClass.schedulerMaxNumber			
Mapping Rule			Mapping Type
1:1 mapping	1 mapping full		full
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid			up_Dcm_00128



BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPeriodicTransmission	
BSW Parameter		BSW Type
DcmDspPeriodicTr	ansmissionFastRate	EcucFloatParamDef
BCW Description		

#### **BSW Description**

This parameter give the transmission rate of the requested periodicDataIdentifiers to be used if the parameter transmissionMode given in the ReadDataByPeriodicID request is equal to 0x03 ("sendAtFastRate"). This parameter value in seconds have to be configured as a multiple of DcmTaskTime.

#### min:

A negative value and zero is not allowed.

## **Template Description**

#### DiagnosticPeriodicRate.period:

This represents the period of the DiagnosticPeriodicRate in seconds.

### DiagnosticPeriodicRate.periodicRateCategory:

This attribute represents the category of the periodic rate.

#### **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticPeriodicRate.periodicID::DiagnosticPeriodicRate.periodicID::DiagnosticPeriodicRate.periodicRateCategory

Mapping Rule	Mapping Type
The parameter shall exist if DiagnosticPeriodicRate.periodicRateCategory is set	full
to DiagnosticPeriodicRateCategoryEnum.periodicRateFast.	Iuii
Mapping Status	Mapping ID
valid	up_Dcm_00129

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPeriodicTransmission	
BSW Parameter		BSW Type
DcmDspPeriodicTi	ransmissionMediumRate	EcucFloatParamDef
RSW Description		

This parameter give the transmission rate of the requested periodicDataIdentifiers to be used if the parameter transmissionMode given in the ReadDataByPeriodicID request is equal to 0x02 ("sendAtMediumRate"). This parameter value in seconds have to be configured as a multiple of DcmTaskTime.

## min:

A negative value and zero is not allowed.

## **Template Description**

## DiagnosticPeriodicRate.period:

This represents the period of the DiagnosticPeriodicRate in seconds.

### DiagnosticPeriodicRate.periodicRateCategory:

This attribute represents the category of the periodic rate.

#### M2 Parameter

DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticPeriodicRate.periodicID::DiagnosticPeriodicRate.periodicRate.periodicRate.periodicRateCategory

Mapping Rule	Mapping Type
The parameter shall exist if DiagnosticPeriodicRate.periodicRateCategory is set	full
to DiagnosticPeriodicRateCategoryEnum.periodicRateMedium.	iuii



Mapping Status	Mapping ID
valid	up_Dcm_00130

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pPeriodicTransmission
BSW Parameter		BSW Type
DcmDspPeriodicTr	ansmissionSlowRate	EcucFloatParamDef
RSW Description		

This parameter give the transmission rate of the requested periodicDataIdentifiers to be used if the parameter transmissionMode given in the ReadDataByPeriodicID request is equal to 0x01 ("sendAtSlowRate"). This parameter value in seconds have to be configured as a multiple of DcmTaskTime.

#### min:

A negative value and zero is not allowed.

## **Template Description**

## DiagnosticPeriodicRate.period:

This represents the period of the DiagnosticPeriodicRate in seconds.

### DiagnosticPeriodicRate.periodicRateCategory:

This attribute represents the category of the periodic rate.

### **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticPeriodicRate.period DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticPeriodic Rate.periodicRateCategory

Mapping Rule	Mapping Type
The parameter shall exist if DiagnosticPeriodicRate.periodicRateCategory is set to DiagnosticPeriodicRateCategoryEnum.periodicRateSlow.	full
Mapping Status	Mapping ID
valid	up_Dcm_00131

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp		
BSW Parameter	BSW Type		
DcmDspPid		EcucParamConfCont	ainerDef
BSW Description			
This container defir	nes the availability of a PID to the DCM		
Template Descript	Template Description		
This meta-class represents the ability to model a diagnostic parameter identifier (PID) for the purpose			
of executing on-board diagnostics (OBD).			
M2 Parameter	M2 Parameter		
DiagnosticExtract::	CommonDiagnostics::DiagnosticParam	eterldentifier	
Mapping Rule	Mapping Rule Mapping Type		
1:1 mapping	pping full		full
Mapping Status Mapping ID		Mapping ID	
valid			

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pPid
BSW Parameter		BSW Type
DcmDspPidData		EcucParamConfContainerDef



BSW Description		
This container defines the parameter for a Signal in the PID.		
Template Description		
This represents the data carried by the DiagnosticParameterIdentifier.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier.dataElem	ent	
Mapping Rule Mapping Type		
1:1 mapping	full	
Mapping Status	Mapping ID	
valid		

BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData			
BSW Parameter		BSW Type		
DcmDspPidByteOf	fset	EcucIntegerParamDe	ef	
BSW Description				
This is the position	n in bytes of the PID structure and will	not start at position 0	in case a support	
information is avail	information is available (for packeted PIDs).			
Template Description				
This represents the	This represents the bitOffset of the DiagnosticParameter			
M2 Parameter				
DiagnosticExtract::	DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.bitOffset			
Mapping Rule Mapping Type				
bitOffset / 8			full	
Mapping Status			Mapping ID	
valid			up_Dcm_00284	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData		
BSW Parameter		BSW Type	
DcmDspPidDataBy	yteSize	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Defines the array le	ength in bytes or the the maximum array	y length for variable da	talengths.
Template Descrip	tion		
	efinition.baseTypeSize:		
Describes the leng	th of the data type specified in the conta	ainer in bits.	
	ement.maxNumberOfElements:		
	is attribute turns the data instance into	•	attribute determines
the size of the array in terms of how many elements the array can take.			
M2 Parameter			
	pes::BaseTypeDirectDefinition.baseTyp		<b>-</b> 1
_	CommonDiagnostics::DiagnosticDataE	lement.maxNumberOf	
	Mapping Rule Mapping Type		
S/R via array:		T 0: (0)	
DcmDspPidDataBy	/teSize= maxNumberOfElements * (bas	se TypeSize / 8)	
full			full
C/S of FNC callback:			
DcmDspPidDataByteSize= maxNumberOfElements			
Note: 8 is the baseTypeSize of UINT8			
Mapping Status			Mapping ID
valid			up_Dcm_00285



BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData		
BSW Parameter		BSW Type	
DcmDspPidDataSu	upportInfo	EcucParamConfCont	ainerDef
BSW Description			
This container defin	nes the supported information.		
Template Descrip	tion		
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.supportInfo			
Mapping Rule			Mapping Type
Applicable if the DiagnosticParameter is owned by a DiagnosticParameterIden-		full	
tifier			iuii
Mapping Status			Mapping ID
valid	·	·	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidData SupportInfo		
BSW Parameter		BSW Type	
DcmDspPidDataSt	upportInfoBit	EcucIntegerParamDe	ef
BSW Description			
Referenced Bit of t	he SupportInfo		
Template Descrip	Template Description		
defines the bit in the SupportInfo byte, which represents the PID DataElement			
pidSize / position / size. Unit: byte.			
M2 Parameter			
DiagnosticExtract::	CommonDiagnostics::DiagnosticParam	eterSupportInfo.suppo	rtInfoBit
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status		Mapping ID	
valid			

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidData SupportInfo		
BSW Parameter		BSW Type	
DcmDspPidDataSt	upportInfoRef	EcucReferenceDef	
<b>BSW Description</b>			
Reference to Dcml	DspPidSupportInfo		
Template Descrip	Template Description		
This represents the supported information associated with the DiagnosticParameterIdentifier.			eterldentifier.
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier.supportInfoByte			
Mapping Rule			Mapping Type
Shall refer to the DiagnosticParameterIdentifier.supportInfoByte of the enclosing		full	
DiagnosticParameterIdentifier		luli	
Mapping Status		Mapping ID	
valid			



BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pPid/DcmDspPidData/DcmDspPidSer-	
DCIII	vice01/DcmDspDiagnosisScaling/DcmDspAlternativeDataType		
BSW Parameter		BSW Type	
DcmDspTextTableMapping		EcucParamConfContainerDef	
<b>BSW Description</b>			

The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists).

In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.

### **Template Description**

This meta-class represents the ability to express the relationship between a physical value and the mathematical representation.

Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.

nee the ferminal flow the internal value corresponds to he prijeted perioditi.			
M2 Parameter			
AsamHdo::ComputationMethod::CompuMethod			
Mapping Rule	Mapping Type		
This mapping applies if the CompuMethod.category is set to values TEXTTABL	full		
E or SCALE_LINEAR_AND_TEXTTABLE.	Iuii		
Mapping Status	Mapping ID		
valid	up_Dcm_00097		

BSW Module	BSW Context			
	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-			
Dcm	, , ,	vice01/DcmDspDiagnosisScaling/DcmDspAlternativeDataType/DcmDspText		
	TableMapping			
BSW Parameter	neter BSW Type			
DcmDspDiagnosis	mDspDiagnosisRepresentationDataValue EcucIntegerParamDe		ef	
BSW Description				
The data value in the diagnosis representation.				
Template Description				
This represents a textual constant in the computation method.				
M2 Parameter				
AsamHdo::Compu	tationMethod::CompuConstTextContent	t.vt		
Mapping Rule		Mapping Type		
1:1 mapping		full		
Mapping Status		Mapping ID		
valid		up Dcm 00098		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer- vice01/DcmDspDiagnosisScaling/DcmDspAlternativeDataType/DcmDspText TableMapping	
BSW Parameter		BSW Type
DcmDspInternalDa	ntaValue	EcucIntegerParamDef



BSW Description	
The ECU internal data value.	
Template Description	
CompuScale.lowerLimit:	
This specifies the lower limit of the scale.	
CompuScale.upperLimit:	
This specifies the upper limit of a of the scale.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuScale.lowerLimit,	
AsamHdo::ComputationMethod::CompuScale.upperLimit	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00099

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataEndianness		
BSW Parameter		BSW Type	
BIG_ENDIAN		EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Most significant by	te shall be stored at the lowest address.	•	
Template Description			
This attribute specifies the byte order of the base type.			
M2 Parameter			
AsamHdo::BaseTy	pes::BaseTypeDirectDefinition.byteOrde	er	
Mapping Rule			Mapping Type
BaseTypeDirectDefinition.byteOrder == ByteOrderEnum.mostSignificantByte		full	
First		luli	
Mapping Status		Mapping ID	
valid			

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-		
DCIII	vice01/DcmDspPidDataEndianness		
BSW Parameter		BSW Type	
LITTLE_ENDIAN		EcucEnumerationLite	ralDef
<b>BSW Description</b>			
Most significant by	te shall be stored at the highest address	<u> </u>	
Template Descrip	Template Description		
This attribute specifies the byte order of the base type.			
M2 Parameter			
AsamHdo::BaseTy	AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder		
Mapping Rule		Mapping Type	
BaseTypeDirectDefinition.byteOrder ==ByteOrderEnum.mostSignificantByte		full	
Last		iuii	
Mapping Status		Mapping ID	
valid			

BSW Module	BSW Context



Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-vice01/DcmDspPidDataEndianness		
BSW Parameter		BSW Type	
OPAQUE		EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Opaque data endia	anness		
Template Descrip	Template Description		
This attribute specifies the byte order of the base type.			
M2 Parameter			
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder			
Mapping Rule		Mapping Type	
BaseTypeDirectDefinition.byteOrder == ByteOrderEnum.opaque		full	
Mapping Status		Mapping ID	
valid			

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-		
	vice01		
BSW Parameter		BSW Type	
DcmDspPidDataRe	eadFnc	EcucFunctionNameD	ef
BSW Description			
	reading PID data value.		
This is only relevar	nt if DcmDspPidDataUsePort==USE_DA	ATA_SYNCH_FNC.	
•	elated to the interface Xxx_ReadData.		
•	Template Description		
	This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from		
	erefore this detour needs to be implem	ented to still let BswS	ServiceDependency
become the target	of a reference.		
M2 Parameter			
	:ServiceMapping::DiagnosticServiceSw	Mapping.mappedBswS	ServiceDepen-
dency			
Mapping Rule		Mapping Type	
The BswServiceDependency should have aRoleBasedBswModuleEntryAssign-			
	ment that in turn has attribute role set to xxx_ReadData and points to a Bsw		full
ModuleEntry.			
Mapping Status		Mapping ID	
valid			

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType		
BSW Parameter		BSW Type	
BOOLEAN		EcucEnumerationLiteralDef	
BSW Description			
Type of the data is boolean.			
Template Description			



# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

М	2	Pa	ra	m	e۱	ei	ľ

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,

Asami idobase typesbase typebli ecibelli lilion.base typesize		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticParameterIdentifier.dataElement		
	full	
baseTypeEncoding = BOOLEAN		
baseTypeSize = 1		
Mapping Status	Mapping ID	
valid		

BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-vice01/DcmDspPidDataType			
BSW Parameter		BSW Type		
SINT16	EcucEnumerationLiteralDef			
BSW Description				
Type of the data is sint16.				
Template Description				
BaseTypeDirectDefinition.baseTypeEncoding:				
This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message				
sequence.				
BaseTypeDirectDefinition.baseTypeSize:				
Describes the length of the data type specified in the container in bits.				
M2 Parameter				
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,				
	pes::BaseTypeDirectDefinition.baseTyp	eSize	8.8	
Mapping Rule			Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter				
with the role Diagn	with the role DiagnosticParameterIdentifier.dataElement			
			full	
baseTypeEncoding				
baseTypeSize = 16	5			
Mapping Status			Mapping ID	
valid			up_Dcm_00154	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-	
vice01/DcmDspPidDataType		
BSW Parameter	BSW Type	
SINT16_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the data is sint16 array.		
Template Description		



## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

**BSW Context** 

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2** Parameter

**BSW Module** 

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,

Mapping Rule	Mapping Type
baseTypeEncoding = 2C	
baseTypeSize = 16	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT	full
_01001)	luli
arraySizeSemantics either does not exist or exists and is set to ArraySizeSe-	
manticsEnum.fixedSize (cf. TPS_DEXT_01001)	
Mapping Status	Mapping ID
valid	up_Dcm_00160

Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-		
DOM	vice01/DcmDspPidDataType		
BSW Parameter		BSW Type	
SINT32		EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Type of the data is	sint32.		
Template Descrip	tion		
BaseTypeDirectD	efinition.baseTypeEncoding:		
This specifies, how	v an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
	efinition.baseTypeSize:		
Describes the leng	yth of the data type specified in the conta	ainer in bits.	
M2 Parameter			
	pes::BaseTypeDirectDefinition.baseTyp		
AsamHdo::BaseTy	pes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule			Mapping Type
referenced by swD	ataDefProps of the DiagnosticParamete	er	
with the role Diagn	nosticParameterIdentifier.dataElement		
			full
baseTypeEncoding	g = 2C		
baseTypeSize = 32	2		
Mapping Status			Mapping ID
valid			



BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-vice01/DcmDspPidDataType	
BSW Parameter	7	BSW Type
SINT32_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the data is sint32 array.		
Template Description		

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding.

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics. DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements.

	,
Mapping Rule	Mapping Type
baseTypeEncoding = 2C	
baseTypeSize = 32	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT	full
_01001)	luli
arraySizeSemantics either does not exist or exists and is set to ArraySizeSe-	
manticsEnum.fixedSize (cf. TPS_DEXT_01001)	
Mapping Status	Mapping ID
valid	up_Dcm_00166

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-vice01/DcmDspPidDataType	
BSW Parameter	BSW Type	
SINT8	EcucEnumerationLiteralDef	
BSW Description		
Type of the data is sint8.		
Template Description		

#### BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize



Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticParameterIdentifier.dataElement	
	full
baseTypeEncoding = 2C	
baseTypeSize = 8	
Mapping Status	Mapping ID
valid	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidS		
Dom	vice01/DcmDspPidDataType		
BSW Parameter	BSW Type		
SINT8_N	EcucEnumerationLiteralDef		
<b>BSW Description</b>	Description		
Type of the data is sint8 array.			
Template Description			
RaseTyneDirectD	BaseTypeDirectDefinition baseTypeSize:		

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,

Mapping Rule	Mapping Type
baseTypeEncoding = 2C	
baseTypeSize = 8	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT	full
_01001)	iuii
arraySizeSemantics either does not exist or exists and is set to ArraySizeSe-	
manticsEnum.fixedSize (cf. TPS_DEXT_01001)	
Mapping Status	Mapping ID
valid	up_Dcm_00153

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-vice01/DcmDspPidDataType	
BSW Parameter		BSW Type
UINT16	EcucEnumerationLiteralDef	
BSW Description		
Type of the data is uint16.		

Mapping Type

full



Temp	late [	Descri	ption
------	--------	--------	-------

M2 Parameter

## BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,	
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize	
Mapping Rule	
referenced by swDataDefProps of the DiagnosticParameter	Ī
with the role DiagnosticParameterIdentifier dataFlement	

baseTypeEncoding	
baseTypeSize = 16	
Mapping Status	Mapping ID
valid	up Dcm 00205

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-vice01/DcmDspPidDataType	
BSW Parameter		BSW Type
UINT16_N		EcucEnumerationLiteralDef
<b>BSW Description</b>		

Type of the data is uint16 array.

#### Template Description

## BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

DiagnosticExtractoominorDiagnosticsDiagnosticDataElement.maxivumberorElements,		
Mapping Rule	Mapping Type	
baseTypeEncoding = NONE		
baseTypeSize = 16		
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT 01001)	full	
arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		
Mapping Status	Mapping ID	



valid up_Dcm_00132	2
--------------------	---

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-		
DGIII	vice01/DcmDspPidDataType		
BSW Parameter		BSW Type	
UINT32		EcucEnumerationLite	eralDef
BSW Description			
Type of the data is			
Template Descrip			
	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
	efinition.baseTypeSize:		
	th of the data type specified in the cont	ainer in bits.	
M2 Parameter			
	pes::BaseTypeDirectDefinition.baseTyp		
•	pes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule Mapping Type		Mapping Type	
_	referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticParameterIdentifier.dataElement			
			full
baseTypeEncoding = NONE			
baseTypeSize = 32			
Mapping Status			Mapping ID
valid			

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-vice01/DcmDspPidDataType	
BSW Parameter	BSW Parameter BSW Type	
UINT32_N EcucEnumerationLiteralDef		EcucEnumerationLiteralDef
BSW Description		
Type of the data is uint32 array.		
Template Description		

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## M2 Parameter



AsamHdo::BaseTypeS::BaseTypeDirectDefinition.baseTypeEncoding,		
AsamHdo::BaseTypeS::BaseTypeDirectDefinition.baseTypeSize,		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSema		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOf	Elements,	
Mapping Rule	Mapping Type	
baseTypeEncoding = NONE		
baseTypeSize = 32		
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01001)	full	
arraySizeSemantics either does not exist or exists and is set to ArraySizeSe-		
manticsEnum.fixedSize (cf. TPS_DEXT_01001)		
Mapping Status Ma		
valid	up_Dcm_00133	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-vice01/DcmDspPidDataType		
BSW Parameter		BSW Type	
UINT8		EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Type of the data is	uint8.		
Template Descrip	tion		
	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an EC	U within a message
sequence.			
	efinition.baseTypeSize:		
_	th of the data type specified in the cont	ainer in bits.	
M2 Parameter			
	pes::BaseTypeDirectDefinition.baseTyp		
•	pes::BaseTypeDirectDefinition.baseTyp	eSize	
11 0		Mapping Type	
	referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticParameterIdentifier.dataElement			
full			full
baseTypeEncoding = NONE			
baseTypeSize = 8			
Mapping Status Mapping ID		Mapping ID	
valid			

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-	
vice01/DcmDspPidDataType		
BSW Parameter	BSW Parameter BSW Type	
UINT8_DYN	UINT8_DYN EcucEnumerationLiteralDef	
BSW Description		
Type of the data is uint8 array with dynamic length.		
Template Description		



This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2** Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements.

BlaghottoExtractCommonDlaghottoCDlaghottoDataElomontmaxivamborClEiomonte,		
Mapping Rule	Mapping Type	
baseTypeEncoding = NONE		
baseTypeSize = 8		
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT	full	
_01002)		
arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize		
(cf. TPS_DEXT_01002)		
Mapping Status	Mapping ID	
valid	up_Dcm_00134	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-vice01/DcmDspPidDataType	
BSW Parameter BSW Type		BSW Type
UINT8_N		EcucEnumerationLiteralDef
BSW Description		
Type of the data is uint8 array.		
Template Description		

# Template Description

## BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## **M2** Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics. DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,



Mapping Rule	Mapping Type
baseTypeEncoding = NONE	
baseTypeSize = 8	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT	full
_01001)	luli
arraySizeSemantics either does not exist or exists and is set to ArraySizeSe-	
manticsEnum.fixedSize (cf. TPS_DEXT_01001)	
Mapping Status	Mapping ID
valid	up_Dcm_00172

DCW Modulo	DCW Contoxt		
BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-		
D 0111	vice01/DcmDspPidDataUsePort		
BSW Parameter		BSW Type	
USE_DATA_SEND	DER_RECEIVER	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Template Descrip			
	e ability to define a mapping of a diagnos		
kind of service map	oping is applicable for the usage of Sen	derReceiverInterfaces.	
M2 Parameter			
DiagnosticExtract::	ServiceMapping::DiagnosticServiceDat	taMapping	
Mapping Rule Mapping Type			Mapping Type
DiagnosticServiceDataMapping.diagnosticDataElement refers to a Diagnostic			
DataElement that in turn is aggregated in the PID definition where the PortPro-			£II
totype referenced in the role mappedDataElement.contextPort refers to a Data			l Iuli
Interface where attribute isService is set to false.			
Mapping Status Mapping		Mapping ID	
valid			up Dcm 00256

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-vice01/DcmDspPidDataUsePort		
BSW Parameter		BSW Type	
USE_DATA_SEND	DER_RECEIVER_AS_SERVICE	EcucEnumerationLite	eralDef
BSW Description			
Template Descrip	tion		
This represents the	This represents the ability to define a mapping of a diagnostic service to a software-component. This		
kind of service mapping is applicable for the usage of SenderReceiverInterfaces.			
M2 Parameter			
DiagnosticExtract::ServiceMapping::DiagnosticServiceDataMapping			
Mapping Rule		Mapping Type	
DiagnosticServiceDataMapping.diagnosticDataElement refers to a Diagnostic			
DataElement that in turn is aggregated in the PID definition where the PortPro-		full	
totype referenced in the role mappedDataElement.contextPort refers to a Data			iuii
Interface where attribute isService is set to true.			
Mapping Status		Mapping ID	
valid		up_Dcm_00257	

BSW Module BSW Context
------------------------



Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-vice01/DcmDspPidDataUsePort			
BSW Parameter		BSW Type		
USE_DATA_SYNCH_CLIENT_SERVER		EcucEnumerationLite	eralDef	
<b>BSW Description</b>				
Template Descrip				
This represents the	e ability to define a mapping of a diagno	stic service to a softwa	are-component or a	
	basic-software module. If the former is used then this kind of service mapping is applicable for the			
usage of ClientServerInterfaces.				
M2 Parameter				
DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping				
Mapping Rule Mappi		Mapping Type		
DiagnosticServiceSwMapping.diagnosticDataElement refers to a Diagnostic				
DataElement that in turn is aggregated in the PID definition. DiagnosticService   full		full		
SwMapping.mappedSwcServiceDependency shall exist.				
Mapping Status		Mapping ID		
valid		up_Dcm_00255		

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidSer-vice01/DcmDspPidDataUsePort		
BSW Parameter		BSW Type	
USE_DATA_SYNC	CH_FNC	EcucEnumerationLite	eralDef
BSW Description			
Template Descrip			
	This represents the ability to define a mapping of a diagnostic service to a software-component or a		
basic-software module. If the former is used then this kind of service mapping is applicable for the			
usage of ClientServerInterfaces.			
M2 Parameter			
DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping			
Mapping Rule		Mapping Type	
DiagnosticServiceSwMapping.diagnosticDataElement refers to a Diagnostic			
DataElement that in turn is aggregated in the PID definition and that also de-		full	
fines the role mappedBswServiceDependency.			
Mapping Status		Mapping ID	
valid		up_Dcm_00258	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidService01ExternalSRDataElementClass/DcmDataElement Instance	
BSW Parameter	neter BSW Type	
DcmDataElementIr	nentInstanceRef EcucInstanceReferenceDef	
BSW Description		
Instance Reference to the primitive data which shall be read or written.		
Cumparted are Variable Date Protestumes in Condar Descriver Interference and Ny Date Interference and De		

Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in ParameterInterfaces (read only).

This reference is applicable if the AutosarDataPrototype is typed with a ApplicationPrimitiveDataType of category VALUE or BOOLEAN or if the AutosarDataPrototype is typed with a Implementation-DataType of category VALUE or TYPE\_REFERENCE that in turn boils down to VALUE



Template Description		
This represents the dataElement in the application software that is accessed for diagnostic purpose.		
M2 Parameter		
DiagnosticExtract::ServiceMapping::DiagnosticServiceDataMapping.mappedDataElement		
Mapping Rule	Mapping Type	
DiagnosticServiceDataMapping maps to a primitive data.	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00100	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidService01/ExternalSRDataElementClass/DcmSubElementInDataElementInstance		
BSW Parameter	BSW Parameter BSW Type		
DcmSubElementIn	DataElementInstanceRef	EcucInstanceReferer	nceDef
<b>BSW Description</b>			
Instance Reference be read.	e to the primitve sub-element (at any lev	vel) of composite data in	n a port which shall
Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in ParameterInterfaces (read only).  This reference is applicable if the AutosarDataPrototype is typed with a ApplicationComposite-DataType.			
Template Description			
This represents the dataElement in the application software that is accessed for diagnostic purpose.			
M2 Parameter			
DiagnosticExtract::ServiceMapping::DiagnosticServiceDataMapping.mappedDataElement			
Mapping Rule Mapping Type			
DiagnosticServiceDataMapping maps to a primitive element within a composite data, where the AutosarDataPrototype is typed with a ApplicationComposite full DataType.			full
Mapping Status			Mapping ID
valid up_Dcm_0010		up_Dcm_00101	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidService01ExternalSRDataElementClass/DcmSubElementIn ImplDataElementInstance	
BSW Parameter	r BSW Type	
DcmSubElementIn	DcmSubElementInImplDataElementInstanceRef EcucInstanceReferenceDef	
BSW Description		
Instance Reference to the primitve sub-element (at any level) of composite data in a port which shall		
be read.		

Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in ParameterInterfaces (read only).

This reference is applicable if the AutosarDataPrototype is typed with a ImplementationDataType of category STRUCTURE or ARRAY.

Please note that in case of ARRAY the index attribute in the target reference has to be set to select a single array element.

## **Template Description**

This represents the dataElement in the application software that is accessed for diagnostic purpose.

## M2 Parameter

DiagnosticExtract::ServiceMapping::DiagnosticServiceDataMapping.mappedDataElement



Mapping Rule	Mapping Type
DiagnosticServiceDataMapping maps to a primitive element within a compos-	
ite data, where the AutosarDataPrototype is typed with a ApplicationComposite	full
DataType ImplementationDataType of category STRUCTURE or ARRAY.	
Mapping Status	Mapping ID
valid	up_Dcm_00102

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService02		
BSW Parameter		BSW Type	
DcmDspPidDataDe	emRef	EcucReferenceDef	
<b>BSW Description</b>			
Reference to Deml	PidDataElement in DEM configuration.	Allows to link the DCM	PID and DEM PID
configuration for Mode \$02.			
Template Description			
This represents the PID associated with this instance of the OBD mode 0x02 service.			
M2 Parameter			
DiagnosticExtract::Dcm::ObdService::Mode_0x02_RequestPowertrainFreezeFrameData::Diagnos-			
ticPowertrainFreezeFrame.pid			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping	,		full
Mapping Status		Mapping ID	
valid			

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid	
<b>BSW Parameter</b>	BSW Parameter BSW Type	
DcmDspPidIdentific	cmDspPidIdentifier EcucIntegerParamDef	
BSW Description		

1 byte Identifier of the PID

Within each DcmConfigSet all DcmDspPidIdentifier values shall be unique.

## **Template Description**

# ObdPidServiceNeeds.parameterId:

Standardized parameter identifier (PID) according to the OBD standard specified in attribute "standard".

## DiagnosticParameterIdentifier.id:

This is the numerical identifier used to identify the DiagnosticParameterIdentifier in the scope of diagnostic workflow (see SAE J1979-DA).

#### M2 Parameter

CommonStructure::ServiceNeeds::ObdPidServiceNeeds.parameterId, DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier.id

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up Dcm 00028

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidService



BSW Parameter	BSW Type	
DCM_SERVICE_01	EcucEnumerationLite	eralDef
BSW Description		
A PID is used with service \$01 only.		
Template Description		
This represents the PID associated with this instance of the	e OBD mode 0x01 ser	vice.
M2 Parameter		
DiagnosticExtract::Dcm::ObdService::Mode_0x01_RequestCurrentPowertrainDiagnosticData::		
DiagnosticRequestCurrentPowertrainData.pid		
Mapping Rule		Mapping Type
Applicable if the DiagnosticParameterIdentifier is only referenced by a Diagnos-		full
ticRequestCurrentPowertrainData		iuii
Mapping Status		Mapping ID
valid		

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidService		
BSW Parameter		BSW Type	
DCM_SERVICE_0	1_02	EcucEnumerationLiteralDef	
<b>BSW Description</b>			
A PID is used with	service \$01 and \$02. Allowed with a PI	D configuration contai	ning data elements
on byte basis.			
Template Descrip			
	stCurrentPowertrainData.pid:		
This represents the	e PID associated with this instance of th	e OBD mode 0x01 ser	vice.
•	DiagnosticPowertrainFreezeFrame.pid:		
This represents the PID associated with this instance of the OBD mode 0x02 service.			vice.
M2 Parameter			
· ·	DiagnosticExtract::Dcm::ObdService::Mode_0x01_RequestCurrentPowertrainDiagnosticData::Di-		
	agnosticRequestCurrentPowertrainData.pid,		
•	Dcm::ObdService::Mode_0x02_Reques	stPowertrainFreezeFra	meData::Diagnos-
ticPowertrainFreezeFrame.pid			
11 0 11		Mapping Type	
Applicable if the DiagnosticParameterIdentifier is referenced by both a Diagnos-		full	
ticRequestCurrentPowertrainData and a DiagnosticPowertrainFreezeFrame		Tull	
Mapping Status		Mapping ID	
valid			

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidService		се
BSW Parameter		BSW Type	
DCM_SERVICE_0	2	EcucEnumerationLite	eralDef
BSW Description			
A PID is used with	service \$02 only. Allowed with a PID of	configuration containing	g data elements on
byte basis.			
Template Description			
This represents the PID associated with this instance of the OBD mode 0x02 service.			
M2 Parameter			
DiagnosticExtract::Dcm::ObdService::Mode_0x02_RequestPowertrainFreezeFrameData::Diagnos-			
ticPowertrainFreezeFrame.pid			
Mapping Rule	Mapping Type		



Applicable if the DiagnosticParameterIdentifier is only referenced by a DiagnosticPowertrainFreezeFrame	full
Mapping Status	Mapping ID
valid	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pPid	
BSW Parameter		BSW Type	
DcmDspPidSize		EcucIntegerParamDe	ef
BSW Description			
Length of a PID in	• • •		
Template Descrip	tion		
The size of the entire PID can be greater than the sum of the data elements because padding might			
be applied. Unit: byte.			
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier.pidSize		
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping	1:1 mapping full		full
Mapping Status Mapping ID		Mapping ID	
valid			

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid		
BSW Parameter		BSW Type	
DcmDspPidSuppor	tlnfo	EcucParamConfCont	ainerDef
BSW Description			
	nes the support information (typically b	yte A) to declare the $\iota$	sability of the data
	called packeted PIDs (e.g. PID\$68).		
Template Description			
This represents the supported information associated with the DiagnosticParameterIdentifier.			
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier.supportInfoByte		
Mapping Rule	Mapping Type		
1:1 mapping	1:1 mapping full		full
Mapping Status Mapping ID		Mapping ID	
valid			

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidSupportInfo		
BSW Parameter		BSW Type	
DcmDspPidSuppor	rtInfoLen	EcucIntegerParamDe	f
<b>BSW Description</b>			
Length of the supp	ort information in bytes.		
Template Description			
This represents the size of the supportInfo within the PID. Unit: byte.			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticSupportInfoByte.size			
Mapping Rule Mapping Typ		Mapping Type	
			full
Mapping Status			Mapping ID



valid	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidSupportInfo		ortInfo
BSW Parameter		BSW Type	
DcmDspPidSuppor	rtInfoPos	EcucIntegerParamDe	f
<b>BSW Description</b>			
Position of the supp	oort information in bytes.		
Template Descrip	tion		
This represents the	This represents the position of the supportInfo in the PID. Unit: byte.		
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::CommonDiagnostics::DiagnosticSupportInfoByte.position		
Mapping Rule Mapping Typ		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapp		Mapping ID	
valid			

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp		
BSW Parameter		BSW Type	
DcmDspRequestCo	ontrol	EcucParamConfCont	ainerDef
BSW Description			
This container cont	ains the configuration (parameters) of	the "Request control o	f on-board system,
test or component"	service (Service \$08).		
The DCM will requ	uest the control using an R-Port requ	iiring a PortInteface F	RequestControlSer-
vices_{Tid}.			
1	ed RequestControlServices_{Tid}		
where {Tid} is the r	ame of the container DcmDspRequest	Control.	
Template Description			
This meta-class rep	This meta-class represents the ability to model an instance of the OBD mode 0x08 service.		
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::Dcm::ObdService::Mode_0x08_RequestControlOfOnBoardDevice::Diagnostic		
RequestControlOfOnBoardDevice			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping	full		
Mapping Status Mapping ID		Mapping ID	
valid			

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRequestControl		
BSW Parameter		BSW Type	
DcmDspRequestC	ontrolInBufferSize	EcucIntegerParamDef	
<b>BSW Description</b>			
Number of bytes to	Number of bytes to be provided in the input buffer of the interface RequestControlServices {Tid} for		
OBD Service \$08			
Template Description			
This represents the	This represents the specified data size for the request message. Unit: byte.		
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::Dcm::ObdService::Mode_0x08_RequestControlOfOnBoardDevice::Diagnostic		
TestRoutineIdentifier.requestDataSize			



Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRequestControl		
BSW Parameter		BSW Type	
DcmDspRequestC	ontrolOutBufferSize	EcucIntegerParamDe	ef
BSW Description			
	be provided in the output buffer of the	e interface RequestCo	ntrolServices_{Tid}
for OBD Service \$6	08		
Template Descrip	tion		
This represents the	This represents the specified data size for the response message. Unit:byte.		
M2 Parameter			
DiagnosticExtract::Dcm::ObdService::Mode_0x08_RequestControlOfOnBoardDevice::Diagnostic			
TestRoutineIdentifi	TestRoutineIdentifier.responseDataSize		
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping		Mapping ID	
valid			

BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRequestControl			
BSW Parameter	BSW Parameter BSW Type			
DcmDspRequestC	ontrolTestId	EcucIntegerParamDe	ef	
BSW Description				
Test Id for Service	\$08			
Template Descrip	tion			
ObdControlService	ceNeeds.testId:			
Test Identifier (TID)	according to ISO 15031-5.			
_	DiagnosticTestRoutineIdentifier.id:			
This represents the numerical id of the DiagnosticTestIdentifier (see SAE J1979-DA).				
M2 Parameter				
CommonStructure::ServiceNeeds::ObdControlServiceNeeds.testId,				
	DiagnosticExtract::Dcm::ObdService::Mode_0x08_RequestControlOfOnBoardDevice::Diagnostic			
TestRoutineIdentifier.id				
Mapping Rule Mapping Type			Mapping Type	
The value shall be taken from DiagnosticRequestControlOfOnBoardDevice.test		full		
Id.id if available.			Tull	
Mapping Status Mapping ID			Mapping ID	
valid			up_Dcm_00030	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter	BSW Type	
DcmDspRequestFi	ileTransfer EcucParamConfContainerDef	
BSW Description		
This container contains the configuration for RequestFileTransfer.		
This container only exists if RequestFileTransfer is configured.		



Template Description		
This diagnostic service instance implements the UDS service 0x38.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::RequestFileTransfer::DiagnosticRequestFileTransfer		
Mapping Rule	Mapping Type	
1:1 mapping full		
Mapping Status	Mapping ID	
valid	up_Dcm_00135	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe/DcmDspRoeEvent/DcmDspRoe		nt/DcmDspRoe
	EventProperties/DcmDspRoeOnChar	•	
BSW Parameter		BSW Type	
DcmDspRoeDidRe	ef	EcucReferenceDef	
<b>BSW Description</b>			
Reference to a Did	which is watched.		
Template Descrip	Template Description		
This represents the	This represents the corresponding DiagnosticDataIdentifier.		
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticDataChangeTrig-			
ger.dataldentifier	ger.dataldentifier		
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid		up_Dcm_00136	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe/DcmDspRoeEvent		
BSW Parameter	ameter BSW Type		
DcmDspRoeInitialE	EventStatus	EcucEnumerationPar	amDef
BSW Description			
Initial Roe status of	f this RoeEvent		
Template Descrip	tion		
This represents the initial status of the enclosing DiagnosticResponseOnEventTrigger.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticResponseOnEvent			
Trigger.initialEventStatus			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping		Mapping ID	
valid		up Dcm 00137	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe/DcmDspRoeEvent/DcmDspRoe InitialEventStatus		
BSW Parameter	BSW Type		
DCM_ROE_CLEAR	RED EcucEnumerationLiteralDef		
BSW Description			
Template Description			



This means that the ResponseOnEvent is initially cleared.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticInitial	EventStatus
Enum.returnOnEventCleared	
Mapping Rule	Mapping Type
1:1 mapping full	
Mapping Status	Mapping ID
valid	up_Dcm_00138

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe/DcmDspRoeEvent/DcmDspRoe InitialEventStatus		
BSW Parameter		BSW Type	
DCM_ROE_STOP	PED	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Template Descrip	Template Description		
This means that the	This means that the ResponseOnEvent is initially stopped.		
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticInitialEventStatus			
Enum.returnOnEve	Enum.returnOnEventStopped		
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00139

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe		
BSW Parameter		BSW Type	
DcmDspRoeEvent\	WindowTime	EcucParamConfCont	ainerDef
<b>BSW Description</b>			
This container conf	igures the available EventWindowTime	in this Ecu.	
This container cor	ntains a sub-set of EventWindowTim	es supported by the	Dcm, to limit the
Ecu resources.			
Template Description			
This attribute clarifies the validity of the eventWindow			
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticEventWindow.event		
WindowTime			
Mapping Rule	Mapping Rule Mapping Type		
1:1 mapping	1:1 mapping full		full
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00140

BSW Module	BSW Context	
Dcm/DcmConfigSet/DcmDsp/DcmDspRoe/DcmDspRoeEventWindowTir		pRoe/DcmDspRoeEventWindowTime/
Dcm	DcmDspRoeEventWindowTime	
BSW Parameter		BSW Type
DCM_ROE_EVENT_WINDOW_CURRENT_AND_FOL LOWING_CYCLE		EcucEnumerationLiteralDef



BSW Description		
Template Description		
This means that the window extends to this and the following cycle.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticEventWindowTime		
Enum.eventWindowCurrentAndFollowingCycle		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00141	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe/DcmDspRoeEventWindowTime/ DcmDspRoeEventWindowTime		
BSW Parameter		BSW Type	
DCM_ROE_EVEN	T_WINDOW_CURRENT_CYCLE	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Template Descrip	Template Description		
This means that the window is limited to the current cycle.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticEventWindowTime			
Enum.eventWindowCurrentCycle			
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00142

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe/DcmDspRoeEventWindowTime/ DcmDspRoeEventWindowTime		
BSW Parameter		BSW Type	
DCM_ROE_EVEN	T_WINDOW_INFINITE	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Template Descrip	Template Description		
This means that the window extents without a border.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticEventWindowTime			
Enum.eventWindowInfinite			
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00143

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe/DcmDspRoeEventWindowTime	
BSW Parameter		BSW Type
DcmDspRoeStorag	geState	EcucBooleanParamDef



BSW Description		
If this parameter is set to TRUE the StorageStateBit will be evaluated if this EventWindowTime is		
requested.		
Template Description		
If this attribute is set to TRUE the StorageStateBit will be evaluated if this Ev	entWindowTime is	
requested.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticEventWindow.storage		
StateEvaluation		
Mapping Rule	Mapping Type	
1:1 mapping full		
Mapping Status	Mapping ID	
valid	up_Dcm_00144	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs		
BSW Parameter		BSW Type	
DcmDspRoeInterM	lessageTime	EcucFloatParamDef	
<b>BSW Description</b>			
Provide the minimu	um time in seconds between two trans	missions of ROE even	t. It is used for the
delay between two different consecutive Roe transmissions.			
Template Description			
Provide the minimum time in seconds between two consecutive transmissions of an ROE event.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticResponseOnEvent			
Class.interMessageTime			
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status			Mapping ID
valid			up_Dcm_00145

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp		
BSW Parameter		BSW Type	
DcmDspRoutine		EcucParamConfCont	ainerDef
<b>BSW Description</b>			
This container conf	tains the configuration (parameters) for	Routines	
Template Description			
This meta-class represents the ability to define a diagnostic routine.			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticRoutine			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status			Mapping ID
valid			up_Dcm_00181

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine	
BSW Parameter BSW Type		BSW Type
DcmDspRequestR	outineResults	EcucParamConfContainerDef



## **BSW Description**

Provides the configuration of RequestResult subservice for RoutineControl service.

Existence indicates that the RequestRoutineResults in the RoutineControl is supported.

# **Template Description**

## DiagnosticRoutine.requestResult:

This represents the ability to request the result of a running routine.

## DiagnosticRoutineNeeds.diagRoutineType:

This denotes the type of diagnostic routine which is implemented by the referenced server port.

#### **M2 Parameter**

DiagnosticExtract::CommonDiagnostics::DiagnosticRoutine.requestResult,

CommonStructure::ServiceNeeds::DiagnosticRoutineNeeds.diagRoutineType

Mapping Rule	Mapping Type
1:1 mapping for DiagnosticRoutine.requestResult	
OR	full
DiagnosticRoutineNeeds.diagRoutineTyoe == asynchronous	
Mapping Status	Mapping ID
valid	up_Dcm_00026

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-		
DCIII	sults		
BSW Parameter		BSW Type	
DcmDspRequestR	outineResultsFnc	EcucFunctionNameD	ef
<b>BSW Description</b>			
Function name for	request to application the results of a ro	utine. (Routine_Reque	stResults-function)
	elated to the interface Xxx_RequestRes	sults.	
Template Description			
Specialization of ServiceDependency in the context of an BswInternalBehavior. It allows to associate			
BswModuleEntries and data defined for a BSW module or cluster to a given ServiceNeeds element.			
M2 Parameter			
BswModuleTemplate::BswBehavior::BswServiceDependency			
Mapping Rule Mapping Type			
It could be possible	It could be possible to get the FNC name via BswServiceDependency full		full
Mapping Status			Mapping ID
valid			up_Dcm_00147

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-		
DCIII	sults		
BSW Parameter	BSW Type		
DcmDspRequestR	outineResultsOut	EcucParamConfCont	ainerDef
BSW Description			
Provide description	Provide description of output parameter of RequestResult subservice for RoutineControl service.		
Template Description			
This represents the response parameters.			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticRequestRoutineResults.response			
Mapping Rule	Mapping Type		



1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00148

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-		
DCIII	sults/DcmDspRequestRoutineResults	Out	
<b>BSW Parameter</b>		BSW Type	
DcmDspRequestR	outineResultsOutSignal	EcucParamConfCont	ainerDef
<b>BSW Description</b>			
Provides description	n of a routine signal used in RoutineCo	ontrol service.	
The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataOutN elements in the XXX_RequestResult function call.  Template Description			
This represents the related dataElement of the DiagnosticParameter			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.dataElement			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping		full	
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid			up_Dcm_00149

BSW Module	BSW Context		
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe- Dcm sults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut		
Dcm			
	Signal/DcmDspArgumentScaling/DcmDspAlternativeDataType		
BSW Parameter BSW Type		BSW Type	
DcmDspTextTable!	DcmDspTextTableMapping EcucParamConfContainerDef		
BSW Description			

The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists).

In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.

## **Template Description**

This meta-class represents the ability to express the relationship between a physical value and the mathematical representation.

Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.

M2	Parameter

AsamHdo::ComputationMethod::CompuMethod		
Mapping Rule	Mapping Type	
This mapping applies if the CompuMethod.category is set to values TEXTTABL E or SCALE_LINEAR_AND_TEXTTABLE.	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00097	



BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut Signal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspText TableMapping		
BSW Parameter		BSW Type	
	sRepresentationDataValue EcucIntegerParamDef		
<b>BSW Description</b>			
The data value in t	The data value in the diagnosis representation.		
Template Description			
This represents a t	This represents a textual constant in the computation method.		
M2 Parameter			
AsamHdo::ComputationMethod::CompuConstTextContent.vt			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping	1:1 mapping full		
Mapping Status Mapping ID			Mapping ID
valid up_Dcm_00098			up_Dcm_00098

BSW Module	BSW Context			
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-			
Dcm	sults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut			
DCIII	Signal/DcmDspArgumentScaling/Dcm	nDspAlternativeDataTy	pe/DcmDspText	
	TableMapping			
BSW Parameter		BSW Type		
DcmDspInternalDa	ntaValue	EcucIntegerParamDe	ef	
BSW Description				
The ECU internal of	data value.			
Template Descrip				
CompuScale.lowe	erLimit:			
This specifies the le	ower limit of the scale.			
CompuScale.upp	erLimit:			
This specifies the u	This specifies the upper limit of a of the scale.			
M2 Parameter	M2 Parameter			
AsamHdo::ComputationMethod::CompuScale.lowerLimit,				
AsamHdo::ComputationMethod::CompuScale.upperLimit				
Mapping Rule			Mapping Type	
1:1 mapping			full	
Mapping Status			Mapping ID	
valid			up_Dcm_00099	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut Signal		
BSW Parameter	BSW Type		
DcmDspRoutinePa	ParameterSize EcucIntegerParamDef		
BSW Description			
Provide the size of a RoutineControl parameter in bytes			
Template Description			
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.			



M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberO	fElements
Mapping Rule	Mapping Type
Only in case of variable length required (according to constr_6008).  Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8	full
Mapping Status	Mapping ID
valid	up_Dcm_00189

BSW Module	BSW Context		
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-		
Dcm	sults/DcmDspRequestRoutineResults	Out/DcmDspRequestF	RoutineResultsOut
	Signal		
BSW Parameter		BSW Type	
DcmDspRoutineSi	gnalEndianness	EcucEnumerationPar	amDef
<b>BSW Description</b>			
Defines the endian	ness of the data belonging to a Routine	Out Signal for Request	Result subfunction.
If no DcmDspRout	tineSignalEndianness is defined the va	lue of DcmDspDataDe	efaultEndianness is
applicable.			
Template Description			
This attribute specifies the byte order of the base type.			
M2 Parameter			
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder			
Mapping Rule Mapping Type			Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the		full	
DiagnosticParameter with the role DiagnostictRequestRoutineResult.response			luli
Mapping Status		Mapping ID	
valid			up_Dcm_00185

BSW Module	BSW Context		
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-		
Dcm	sults/DcmDspRequestRoutineResults	Out/DcmDspRequestF	RoutineResultsOut
	Signal		
BSW Parameter		BSW Type	
DcmDspRoutineSi	gnalPos	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Provide the positio	n of the signal in the RoutineControl red	quest/response.	
The position is defi	The position is defined in bits.		
Template Description			
This represents the	This represents the bitOffset of the DiagnosticParameter		
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.bitOffset			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping	1:1 mapping full		full
Mapping Status Mapping ID			Mapping ID
valid			up_Dcm_00193

BSW Module	BSW Context
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-
Dcm	sults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut
	Signal/DcmDspRoutineSignalType



BSW Parameter	BSW Type	
BOOLEAN EcucEnumerationLite		ralDef
BSW Description		
Type of the signal is boolean.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding:		
This specifies, how an object of the current BaseType is e	ncoded, e.g. in an ECU	within a message
sequence.		
BaseTypeDirectDefinition.baseTypeSize:		
Describes the length of the data type specified in the cont	ainer in bits.	
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTyp	•	
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	er	
with the role DiagnosticRequestRoutineResults.response		
		full
baseTypeEncoding = BOOLEAN		
baseTypeSize = 1		
Mapping Status		Mapping ID
valid		up_Dcm_00199

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-sults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut		
DCIII	Signal/DcmDspRequestRoutineResults   Signal/DcmDspRoutineSignalType	SOut/Demosphequestr	noutinenesuitsOut
BSW Parameter		BSW Type	
SINT16		EcucEnumerationLite	eralDef
BSW Description			
Type of the signal i			
Template Descrip			
	efinition.baseTypeEncoding:		
	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
D T D: .D	I T O		
	efinition.baseTypeSize:		
M2 Parameter	Describes the length of the data type specified in the container in bits.		
	non-PoorTime Discot Definition hone Tim	a Francisco	
	pes::BaseTypeDirectDefinition.baseTyp		
Mapping Rule	AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		
	ata Dof Propa of the Diagnostic Paramete	٧٠	Mapping Type
	referenced by swDataDefProps of the DiagnosticParameter		
with the role Diagn	with the role DiagnosticRequestRoutineResults.response		full
baseTypeEncoding = 2C			luli
baseTypeSize = 16			
Mapping Status Mapping ID			
valid			
valiu			up_Dcm_00156

BSW Module	BSW Context



Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut Signal/DcmDspRoutineSignalType	
BSW Parameter BSW Type		BSW Type
SINT16_N		EcucEnumerationLiteralDef
BSW Description		
Type of the signal is sint16 array.		
Template Description		
D T Di (D. () . () L T E ()		

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,

AsamHdo::BaseTypeS::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics

DiagnosticExtractCommonDiagnosticsDiagnosticDataLiement.arraySizeSemantics		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticRequestRoutineResults.response		
baseTypeEncoding = 2C baseTypeSize = 16	full	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01001)		
arraySizeSemantics either does not exist or exists and is set to ArraySize		
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		
Mapping Status	Mapping ID	
valid	up_Dcm_00156	

BSW Module	BSW Context	
Dom	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-	
Dcm	sults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut Signal/DcmDspRoutineSignalType	
BSW Parameter BSW Type		BSW Type
SINT32	2 EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding:		

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.



M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,	
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticRequestRoutineResults.response	
	full
baseTypeEncoding = 2C	
baseTypeSize = 32	
Mapping Status	Mapping ID
valid	up_Dcm_00163

BSW Module	BSW Context	
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-	
Dcm	sults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut Signal/DcmDspRoutineSignalType	
BSW Parameter BSW Type		BSW Type
SINT32_N		EcucEnumerationLiteralDef
BSW Description		
Type of the signal is sint32 array.		
Template Description		

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics



PSW Module RSW Context

BSW Module	BSW Context		
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-		
Dcm	sults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut		
	Signal/DcmDspRoutineSignalType		
BSW Parameter		BSW Type	
SINT8		EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Type of the signal is	s sint8.		
Template Descript	tion		
	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
	efinition.baseTypeSize:		
Describes the length of the data type specified in the container in bits.			
M2 Parameter			
	AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,		
* 1	AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		
Mapping Rule			Mapping Type
referenced by swDataDefProps of the DiagnosticParameter			
with the role DiagnosticRequestRoutineResults.response			
full		full	
baseTypeEncoding = 2C			
baseTypeSize = 8			
Mapping Status			Mapping ID
valid			up_Dcm_00201

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut Signal/DcmDspRoutineSignalType	
BSW Parameter BSW Type		BSW Type
SINT8_N		EcucEnumerationLiteralDef
BSW Description		
Type of the signal is sint8 array.		
Template Description		

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### **M2 Parameter**



AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response  baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01001) arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00201	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-sults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut		
DCIII	Signal/DcmDspRequestRoutineResults   Signal/DcmDspRoutineSignalType	:Out/DemDspRequestr	RoutineriesuitsOut
<b>BSW Parameter</b>		BSW Type	
UINT16		EcucEnumerationLite	eralDef
BSW Description			
Type of the signal i			
Template Descrip			
	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECI	J within a message
sequence.			
D T D: .D	<del>.</del>		
	efinition.baseTypeSize:	almay in hita	
M2 Parameter	Describes the length of the data type specified in the container in bits.		
	near Daga Tima Direct Definition has a Tim	o Chooding	
	AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize  Mapping Rule  Mapping Type			Mapping Type
referenced by swDataDefProps of the DiagnosticParameter		wapping Type	
with the role DiagnosticRequestRoutineResults.response			
With the fole blagh			full
baseTypeEncoding = NONE		i uni	
baseTypeSize = 16			
		Mapping ID	
valid			up_Dcm_00207

BSW Module	BSW Context	
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-	
Dcm	sults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut	
	Signal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16_N		EcucEnumerationLiteralDef
BSW Description		
Type of the signal is uint16 array.		



## **Template Description**

## BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Blaghothothamillaghothoth.BlaghothobataLiomonthinaxivamboron	Lionnonto
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticRequestRoutineResults.response	
baseTypeEncoding = NONE baseTypeSize = 16	full
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01001)	
arraySizeSemantics either does not exist or exists and is set to ArraySize	
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	
Mapping Status	Mapping ID
valid	up Dcm 00207

BSW Module	BSW Context		
	Dcm/DcmConfigSet/DcmDsp/DcmDs		
Dcm	sults/DcmDspRequestRoutineResults	Out/DcmDspRequestRoutine	eResultsOut
	Signal/DcmDspRoutineSignalType		
BSW Parameter		BSW Type	
UINT32		EcucEnumerationLiteralDef	f
BSW Description			
Type of the signal i	s uint32.		
Template Descrip	tion		
BaseTypeDirectD	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECU withi	n a message
sequence.			
	efinition.baseTypeSize:		
Describes the leng	th of the data type specified in the conta	ainer in bits.	
M2 Parameter			
AsamHdo::BaseTy	pes::BaseTypeDirectDefinition.baseTyp	eEncoding,	
AsamHdo::BaseTy	pes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule		Map	ping Type



referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response	full
baseTypeEncoding = NONE baseTypeSize = 32	
Mapping Status	Mapping ID
valid	up_Dcm_00210

BSW Module	BSW Context	
Dcm	sults/DcmDspRequestRoutineResults	pRoutine/DcmDspRequestRoutineRe- Out/DcmDspRequestRoutineResultsOut
	Signal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32_N		EcucEnumerationLiteralDef
<b>BSW Description</b>		
Type of the signal i	•	
Template Descrip	tion	
BaseTypeDirectD	efinition.baseTypeEncoding:	

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

# DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

DiagnosticExtractCommonDiagnosticsDiagnosticDataElement.maxNumberOr	LICITICITIS
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticRequestRoutineResults.response	
hasa Tura Francisco MONE	
baseTypeEncoding = NONE	
baseTypeSize = 32	full
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT	
_01001)	
arraySizeSemantics either does not exist or exists and is set to ArraySize	
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	
Mapping Status	Mapping ID
valid	up Dcm 00210

BSW Module	BSW Context
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineRe-
Dcm	sults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOut
	Signal/DcmDspRoutineSignalType



BSW Parameter	BSW Type
UINT8	EcucEnumerationLiteralDef
BSW Description	
Type of the signal is uint8.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding:	
This specifies, how an object of the current BaseTy	pe is encoded, e.g. in an ECU within a message
sequence.	
BaseTypeDirectDefinition.baseTypeSize:	
Describes the length of the data type specified in the	ne container in bits.
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition.b	
AsamHdo::BaseTypes::BaseTypeDirectDefinition.b	aseTypeSize
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticP	
with the role DiagnosticRequestRoutineResults.res	sponse
	full
baseTypeEncoding = NONE	
baseTypeSize = 8	
Mapping Status	Mapping ID
valid	up_Dcm_00167

BSW Module	BSW Context	
Dcm		oRoutine/DcmDspRequestRoutineRe- Out/DcmDspRequestRoutineResultsOut
BSW Parameter		BSW Type
UINT8_N		EcucEnumerationLiteralDef
<b>BSW Description</b>		
Type of the signal i	•	
Template Descrip	tion	
Dece Time Dive etD	eficialism become Free elimina	

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

# DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

# ${\bf Diagnostic Data Element. max Number Of Elements:}$

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypeS::BaseTypeDirectDefinition.baseTypeEncoding,

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Mapping Rule Mapping Type



referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response  baseTypeEncoding = NONE baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01001) arraySizeSemanticseither does not exist or exists and is set to ArraySize	full
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	
Mapping Status	Mapping ID
valid	up_Dcm_00167

BSW Module	BSW Context	
		pRoutine/DcmDspRequestRoutineRe-
Dcm	sults/DcmDspRequestRoutineResults	Out/DcmDspRequestRoutineResultsOut
	Signal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
VARIABLE_LENG	TH	EcucEnumerationLiteralDef
<b>BSW Description</b>		
T (1) 1 11	·	

Type of the signal is uint8[DcmDspRoutineParameterSize].

This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARI-ABLE LENGTH.

#### **Template Description**

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

Diagnostic Extract:: Common Diagnostics:: Diagnostic Data Element. max Number Of Elements,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics

Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response	
baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)	full
Mapping Status	Mapping ID



valid up_Dcm_00217
--------------------

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine	
BSW Parameter		BSW Type
DcmDspRoutineIdentifier		EcucIntegerParamDef
BSW Description		

2 bytes Identifier of the RID

Within each DcmConfigSet all DcmDspRoutineIdentifier values shall be unique.

# **Template Description**

#### DiagnosticRoutine.id:

This is the numerical identifier used to identify the DiagnosticRoutine in the scope of diagnostic workflow

#### DiagnosticRoutineNeeds.ridNumber:

This represents a routine identifier for the diagnostic routine.

This allows to predefine the RID number if the a function developer has received a particular requirement from the OEM or from a standardization body.

#### **M2** Parameter

DiagnosticExtract::CommonDiagnostics::DiagnosticRoutine.id,

CommonStructure::ServiceNeeds::DiagnosticRoutineNeeds.ridNumber

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00003

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine	
BSW Parameter		BSW Type
DcmDspRoutineUsePort		EcucBooleanParamDef
BSW Description		

If this parameter is set to true, the DCM uses a port requiring a PortInterface RoutineServices\_{RoutineName}.

The R-Port is named RoutineServices {RoutineName}

where {RoutineName} is the name of the container DcmDspRoutine

In that case, the configuration must not provide function names in DcmDspStartRoutineFnc, DcmDspStopRoutineFnc or DcmDspRequestResultsRoutineFnc.

If this is false, the DCM expects to find the names of the functions to be used in DcmDspStartRoutineFnc, DcmDspStopRoutineFnc or DcmDspReguestResultsRoutineFnc.

## **Template Description**

This represents the ability to define a mapping of a diagnostic service to a software-component or a basic-software module. If the former is used then this kind of service mapping is applicable for the usage of ClientServerInterfaces.

#### M2 Parameter

BlaghottoExtractcol vicelviappingBlaghottocol vicecwinapping	DiagnosticExtract::Serviceiviap	oping::DiagnosticServ	riceSwiviapping
--------------------------------------------------------------	---------------------------------	-----------------------	-----------------

11 0 0 11 0	
Mapping Rule	Mapping Type
TRUE: DiagnosticServiceSwMapping is having a SwcServiceDependency FALSE: DiagnosticServiceSwMapping is having a BswServiceDependency	full
Mapping Status	Mapping ID
valid	up_Dcm_00174



BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine		
BSW Parameter	BSW Parameter BSW Type		
DcmDspStartRouti	cmDspStartRoutine		
<b>BSW Description</b>			
Provides the config	juration of Start subservice for Routine(	Control service.	
Template Descrip	tion		
DiagnosticRoutin			
This represents the	e ability to start a routine		
which are not relate	eneeds: ral needs on the configuration of the Di ed to a particular item (e.g. a PID). The rhich are not related to a particular item.	main use case is the	• , ,
M2 Parameter			
	CommonDiagnostics::DiagnosticRoutin		
CommonStructure::ServiceNeeds::DiagnosticRoutineNeeds			
Mapping Rule			Mapping Type
	omes with a start routine, independently chronously or asynchronously.	y of whether the exe-	full
Mapping Status			Mapping ID
valid			up_Dcm_00024

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDsp	oRoutine/DcmDspStar	tRoutine
BSW Parameter		BSW Type	
DcmDspStartRouti	DcmDspStartRoutineFnc EcucFunctionNameDef		ef
<b>BSW Description</b>			
Function name for	request to application to start a routine.	(Routine_Start-function	on)
	elated to the interface Xxx_Start.		
Template Descript			
	represent a reference to a BswService		
Referrable and therefore this detour needs to be implemented to still let BswServiceDependency			
become the target	of a reference.		
M2 Parameter			
DiagnosticExtract::	ServiceMapping::DiagnosticServiceSwl	Mapping.mappedBswS	ServiceDepen-
dency			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dcm_00175

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine	
BSW Parameter BSW Type		
DcmDspStartRoutineIn EcucParamConfContainerDef		
BSW Description		
Provide description of input parameter of Start subservice for RoutineControl service		
Template Description		
This represents the request parameters.		
M2 Parameter		



DiagnosticExtract::CommonDiagnostics::DiagnosticStartRoutine.request	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00176

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn		
BSW Parameter		BSW Type	
DcmDspStartRouti	neInSignal	EcucParamConfCont	ainerDef
<b>BSW Description</b>			
Provide description	n of a routine signal used in RoutineCor	itrol service.	
The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataInN elements in the XXX_Start function call.  Template Description  This represents the related dataElement of the DiagnosticParameter			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.dataElement			
Mapping Rule Mapping Type			
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dcm_00177

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTable!	Mapping	EcucParamConfContainerDef
<b>BSW Description</b>		

The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists).

In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.

#### **Template Description**

This meta-class represents the ability to express the relationship between a physical value and the mathematical representation.

Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.

M2 Paramet	er
------------	----

AsamHdo::ComputationMethod::CompuMethod

7.cam idocompatationwothodcompawicthod		
Mapping Rule	Mapping Type	
This mapping applies if the CompuMethod.category is set to values TEXTTABL E or SCALE_LINEAR_AND_TEXTTABLE.	full	



Mapping Status	Mapping ID
valid	up_Dcm_00097

BSW Module	BSW Context		
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp		
Dcm	StartRoutineIn/DcmDspStartRoutineInSignal/DcmDspArgumentScaling/Dcm		
	DspAlternativeDataType/DcmDspTextTableMapping		
BSW Parameter		BSW Type	
DcmDspDiagnosis	nosisRepresentationDataValue EcucIntegerParamDef		ef
BSW Description			
The data value in the diagnosis representation.			
Template Description			
This represents a textual constant in the computation method.			
M2 Parameter			
AsamHdo::ComputationMethod::CompuConstTextContent.vt			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dcm_00098

BSW Module	BSW Context			
_	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp			
Dcm	StartRoutineIn/DcmDspStartRoutineInSignal/DcmDspArgumentScaling/Dcm			
	DspAlternativeDataType/DcmDspTextTableMapping			
	BSW Parameter BSW Type			
DcmDspInternalDa	mDspInternalDataValue EcucIntegerParamDef		ef	
BSW Description				
The ECU internal of	The ECU internal data value.			
Template Descrip	Template Description			
CompuScale.lowerLimit:				
This specifies the le	This specifies the lower limit of the scale.			
CompuScale.upperLimit:				
This specifies the upper limit of a of the scale.				
M2 Parameter				
AsamHdo::ComputationMethod::CompuScale.lowerLimit,				
AsamHdo::ComputationMethod::CompuScale.upperLimit				
Mapping Rule			Mapping Type	
1:1 mapping			full	
Mapping Status		_	Mapping ID	
valid			up_Dcm_00099	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
DCIII	StartRoutineIn/DcmDspStartRoutineInSignal	
BSW Parameter	BSW Type	
DcmDspRoutinePa	DcmDspRoutineParameterSize	
BSW Description		
Provide the size of a RoutineControl parameter in bytes		
Template Description		



The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule Mapping Typ		
"Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8.		
Mapping Status Mapping ID		
valid up_Dcm_00		

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal		
BSW Parameter		BSW Type	
DcmDspRoutineSig	gnalEndianness	EcucEnumerationPar	amDef
<b>BSW Description</b>			
Defines the endian	ness of the data belonging to a Routine	In Signal for Start sub	function.
If no DcmDspRoutineSignalEndianness is defined the value of DcmDspDataDefaultEndianness is applicable.  Template Description  This attribute specifies the byte order of the base type.			
M2 Parameter			
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder			
Mapping Rule Mapping Type			
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request.		full	
Mapping Status Mapping ID		Mapping ID	
valid		up Dcm 00182	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal		
BSW Parameter		BSW Type	
DcmDspRoutineSi	gnalPos	EcucIntegerParamDe	ef
BSW Description			
Provide the positio	n of the signal in the RoutineControl red	quest/response.	
The position is defi	The position is defined in bits.		
Template Descrip	Template Description		
This represents the	This represents the bitOffset of the DiagnosticParameter		
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.bitOffset			
Mapping Rule	Mapping Rule Mapping Type		
1:1 mapping	full		
Mapping Status	ng Status Mapping ID		Mapping ID
valid up_Dcm_001		up_Dcm_00190	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	



BOOLEAN	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is boolean.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding:		
This specifies, how an object of the current BaseType is e	encoded, e.g. in an ECU within a message	
sequence.		
D T D: 10 (1) 1 T O:		
BaseTypeDirectDefinition.baseTypeSize:		
Describes the length of the data type specified in the cont	ainer in bits.	
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseTypeDirectDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDefinition.baseDe	AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,	
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTyp	peSize	
Mapping Rule Mapping Type		
referenced by swDataDefProps of the DiagnosticParamet	er	
with the role DiagnosticStartRoutine.request		
	full	
baseTypeEncoding = BOOLEAN		
baseTypeSize = 1		
Mapping Status	Mapping ID	
valid	up_Dcm_00196	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutineSignalType		
BSW Parameter		BSW Type	
SINT16		EcucEnumerationLite	eralDef
BSW Description			
Type of the signal is			
Template Descrip			
	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
	efinition.baseTypeSize:		
	th of the data type specified in the cont	ainer in bits.	
M2 Parameter	B T D: .D (: !! . T		
,	pes::BaseTypeDirectDefinition.baseTyp	•	
	pes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule Mapping Type		Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter			
with the role DiagnosticStartRoutine.request		<b>.</b>	
full		tull	
baseTypeEncoding = 2C			
baseTypeSize = 16			
Mapping Status			Mapping ID
valid			up_Dcm_00155

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutineSignalType	
BSW Parameter	BSW Type	



SINT16_N	EcucEnumerationLiteralDef	
BSW Description		

Type of the signal is sint16 array.

#### **Template Description**

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticStartRoutine.request		
baseTypeEncoding = 2C		
baseTypeSize = 16	full	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01001)		
arraySizeSemantics either does not exist or exists and is set to ArraySize		
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		
Mapping Status	Mapping ID	
valid	up_Dcm_00155	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
Dom	StartRoutineIn/DcmDspStartRoutineI	nSignal/DcmDspRoutineSignalType
BSW Parameter		BSW Type
SINT32		EcucEnumerationLiteralDef
<b>BSW Description</b>		
Type of the signal is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding:		
This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message		
sequence.		
BaseTypeDirectDefinition.baseTypeSize:		
Describes the length of the data type specified in the container in bits		

Describes the length of the data type specified in the container in bits.

#### M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize

Mapping Rule Mapping Type



referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request  baseTypeEncoding = 2C baseTypeSize = 32	full
Mapping Status	Mapping ID
valid	up_Dcm_00164

BSW Module	BSW Context	
Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRouti		pRoutine/DcmDspStartRoutine/DcmDsp
Dcm	StartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
SINT32_N	EcucEnumerationLiteralDef	
<b>BSW Description</b>	on	
Type of the signal i	Type of the signal is sint32 array.	
Template Description		
Page Type Direct Definition has a Type Encoding:		

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request		
baseTypeEncoding = 2C		
baseTypeSize = 32	full	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01001)		
arraySizeSemantics either does not exist or exists and is set to ArraySize		
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		
Mapping Status	Mapping ID	
valid	up Dcm 00164	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs StartRoutineIn/DcmDspStartRoutineI	pRoutine/DcmDspStartRoutine/DcmDspnSignal/DcmDspRoutineSignalType
BSW Parameter		BSW Type
SINT8		EcucEnumerationLiteralDef



#### **BSW Description**

Type of the signal is sint8.

#### **Template Description**

#### BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize

, , , , , , , , , , , , , , , , , , ,	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticStartRoutine.request	
	full
baseTypeEncoding = 2C	
baseTypeSize = 8	
Mapping Status	Mapping ID
valid	up_Dcm_00200

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
DCIII	StartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		EcucEnumerationLiteralDef
BSW Description		
Type of the signal is sint8 array.		

#### **Template Description**

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics

Mapping Rule Mapping Type



referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request  baseTypeEncoding = 2C	
baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS DEXT	full
_01001)	
arraySizeSemantics either doesnot exist or exists and is set to ArraySize	
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	
Mapping Status	Mapping ID
valid	up_Dcm_00200

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp		
	StartRoutineIn/DcmDspStartRoutineI	<u> </u>	neSignalType
BSW Parameter		BSW Type	
UINT16		EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Type of the signal i	s uint16.		
Template Descrip	tion		
	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
BaseTypeDirectDefinition.baseTypeSize:			
	Describes the length of the data type specified in the container in bits.		
	M2 Parameter		
	pes::BaseTypeDirectDefinition.baseTyp	<b>O</b> .	
	pes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule			Mapping Type
	ataDefProps of the DiagnosticParameter	er	
with the role Diagn	osticStartRoutine.request		
			full
baseTypeEncoding			
baseTypeSize = 16			
Mapping Status			Mapping ID
valid			up Dcm 00204

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
DCIII	StartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
UINT16_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is uint16 array.		
Template Description		



This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement maxNumberOfElements

DiagnosticextractCommonDiagnosticsDiagnosticDataElement.maxivumberOrElements		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request  baseTypeEncoding = NONE baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT01001) arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00204	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp		
DCIII	StartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType		neSignalType
BSW Parameter		BSW Type	
UINT32		EcucEnumerationLite	eralDef
BSW Description			
Type of the signal i	s uint32.		
Template Descrip	tion		
	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
	efinition.baseTypeSize:		
Describes the leng	Describes the length of the data type specified in the container in bits.		
M2 Parameter			
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,			
AsamHdo::BaseTy	AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		
Mapping Rule			Mapping Type
referenced by swD	ataDefProps of the DiagnosticParamete	er	
with the role DiagnosticStartRoutine.request			
			full
baseTypeEncoding	j = NONE		
baseTypeSize = 32	2		



Mapping Status	Mapping ID
valid	up_Dcm_00213

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
Dom	StartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
UINT32_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is uint32 array.		
Template Description		

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticStartRoutine.request	
baseTypeEncoding = NONE baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT01001) arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	Mapping ID
valid	up_Dcm_00213

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
DCIII	StartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
UINT8	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is uint8.		
Template Description		



This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

<b>M2</b>	Pai	ram	iei	ter
1412	ı u	ull		

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticStartRoutine.request		
	full	
baseTypeEncoding = NONE		
baseTypeSize = 8		
Mapping Status	Mapping ID	
valid	up_Dcm_00169	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
Dom	StartRoutineIn/DcmDspStartRoutineI	nSignal/DcmDspRoutineSignalType
BSW Parameter	W Parameter BSW Type	
UINT8_N		EcucEnumerationLiteralDef
BSW Description		
Type of the signal is uint8 array.		
Template Description		

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## **M2** Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request	
baseTypeEncoding = NONE baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT01001) arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full



Mapping Status	Mapping ID
valid	up_Dcm_00169

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
DCIII	StartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter BSW Type		BSW Type
VARIABLE_LENGTH		EcucEnumerationLiteralDef
BSW Description		

Type of the signal is uint8[DcmDspRoutineParameterSize].

This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARI-ABLE\_LENGTH.

#### **Template Description**

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

DiagnosticExtractoominorDiagnosticSDiagnosticDataElement.maxivamberorElements		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticStartRoutine.request		
baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00219	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine	
BSW Parameter	er BSW Type	
DcmDspStartRoutineOut EcucParamConfContainerDef		EcucParamConfContainerDef
BSW Description		
Provide description of output parameter of Start subservice for RoutineControl service.		



Template Description		
This represents the response parameters.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticStartRoutine.response		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00243	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRoutine/DcmDspStartRo		
DCIII			
BSW Parameter BSW Type			
DcmDspStartRout	ineOutSignal	EcucParamConfCont	tainerDef
<b>BSW Description</b>			
Provide description	n of a routine signal used in RoutineCor	ntrol service.	
The ordering defined via the index attribute of the subcontainers in this list represents the			
order of the dataO	utN elements in the XXX_Start function	call.	
Template Description			
This represents the related dataElement of the DiagnosticParameter			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.dataElement			
Mapping Rule Mapping Type			
1:1 mapping			full
Mapping Status Mapping ID			Mapping ID
valid			up Dcm 00242

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		EcucParamConfContainerDef
BSW Description		

The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists).

In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.

#### **Template Description**

This meta-class represents the ability to express the relationship between a physical value and the mathematical representation.

Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.

## **M2 Parameter**

AsamHdo::ComputationMethod::CompuMethod



Mapping Rule	Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABL E or SCALE_LINEAR_AND_TEXTTABLE.	full
Mapping Status	Mapping ID
valid	up_Dcm_00097

BSW Module	BSW Context		
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp		
Dcm	StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspArgumentScaling/		
	DcmDspAlternativeDataType/DcmDspTextTableMapping		
BSW Parameter	BSW Type		
DcmDspDiagnosis	RepresentationDataValue	EcucIntegerParamDe	ef
BSW Description			
The data value in the diagnosis representation.			
Template Description			
This represents a textual constant in the computation method.			
M2 Parameter			
AsamHdo::ComputationMethod::CompuConstTextContent.vt			
Mapping Rule Mapping Type			
1:1 mapping full			full
Mapping Status	Mapping Status Mapping ID		
valid			up_Dcm_00098

BSW Module	BSW Context		
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp		
Dcm	StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspArgumentScaling/		
	DcmDspAlternativeDataType/DcmDsp	11 0	
BSW Parameter		BSW Type	
DcmDspInternalDa	ataValue	EcucIntegerParamDe	ef
<b>BSW Description</b>			
The ECU internal data value.			
Template Description			
CompuScale.lowerLimit:			
This specifies the lower limit of the scale.			
CompuScale.upp			
This specifies the upper limit of a of the scale.			
M2 Parameter			
AsamHdo::Comput	tationMethod::CompuScale.lowerLimit,		
AsamHdo::ComputationMethod::CompuScale.upperLimit			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid		<u> </u>	up_Dcm_00099

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
DCIII	StartRoutineOut/DcmDspStartRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutinePa	ırameterSize	EcucIntegerParamDef
<b>BSW Description</b>		



Provide the size of a RoutineControl parameter in bytes		
Template Description		
The existence of this attribute turns the data instance into an array of data. The a	ttribute determines	
the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule Mapping Type		
Only in case of variable length required (according to constr_6008).	full	
Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8.		
Mapping Status	Mapping ID	
valid	up_Dcm_00151	

BSW Module	BSW Context		
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp		
Dcm	StartRoutineOut/DcmDspStartRoutineOutSignal		
BSW Parameter BSW Type			
DcmDspRoutineSignalEndianness		amDef	
BSW Description	<u> </u>		
Defines the endian	ness of the data belonging to a Routine	Out Signal for Start su	ubfunction.
If no DcmDspRoutineSignalEndianness is defined the value of DcmDspDataDefaultEndianness is			
applicable.			
Template Description			
This attribute specifies the byte order of the base type.			
M2 Parameter			
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder			
Mapping Rule Mapping Type			Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the		full	
DiagnosticParameter with the role DiagnosticStartRoutine.response			luli
Mapping Status			Mapping ID
valid			up_Dcm_00150

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp		
DCIII	StartRoutineOut/DcmDspStartRoutine	eOutSignal	
BSW Parameter	BSW Type		
DcmDspRoutineSignation	ignalPos EcucIntegerParamDef		
<b>BSW Description</b>	BSW Description		
Provide the position of the signal in the RoutineControl request/response.			
The position is defined in bits.			
Template Description			
This represents the bitOffset of the DiagnosticParameter			
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.bitOffset		
Mapping Rule Mapping Type			
1:1 mapping	full		
Mapping Status			Mapping ID
valid			up_Dcm_00152

BSW Module BSW Context
------------------------



Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/Dcm		•	
Dom	StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType		
BSW Parameter		BSW Type	
BOOLEAN		EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Type of the signal is	s boolean.		
Template Descript			
•	efinition.baseTypeEncoding:		
	an object of the current BaseType is e	ncoded e.g. in an ECI	I within a message
sequence.	an object of the darront baco type to o	1100000, 0.g. 111 all 200	o within a moodage
Sequence.			
BaseTypeDirectDefinition.baseTypeSize:			
Describes the length of the data type specified in the container in bits.			
M2 Parameter			
		- Cara dia a	
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,			
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize			
Mapping Rule			Mapping Type
referenced by swDa	ataDefProps of the DiagnosticParamete	er	
with the role DiagnosticStartRoutine.response			
full		full	
baseTypeEncoding = BOOLEAN			
baseTypeSize = 1			
Mapping Status			Mapping ID
valid			up Dcm 00198

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType		
BSW Parameter	BSW Type		
SINT16	EcucEnumerationLiteralDef		
<b>BSW Description</b>			
Type of the signal i	s sint16.		
Template Descrip	tion		
	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
Describes the leng M2 Parameter AsamHdo::BaseTy AsamHdo::BaseTy	efinition.baseTypeSize: th of the data type specified in the cont pes::BaseTypeDirectDefinition.baseTyp pes::BaseTypeDirectDefinition.baseTyp	eEncoding,	
Mapping Rule			Mapping Type
-	ataDefProps of the DiagnosticParameter	er	
with the role DiagnosticStartRoutine.response			
full			full
baseTypeEncoding			
baseTypeSize = 16	5		
Mapping Status			Mapping ID
valid			up_Dcm_00157

BSW Module   BSW Context
--------------------------



Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType		
BSW Parameter		BSW Type	
SINT16_N		EcucEnumerationLiteralDef	
<b>BSW Description</b>	SSW Description		
Type of the signal is sint16 array.			
Template Description			

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

# DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticStartRoutine.response		
baseTypeEncoding = 2C		
baseTypeSize = 16	full	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT		
_01001)		
arraySizeSemantics either does not exist or exists and is set to ArraySize		
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		
Mapping Status	Mapping ID	
valid	up_Dcm_00157	

BSW Module	BSW Context	
Dcm Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRout		pRoutine/DcmDspStartRoutine/DcmDsp
DCIII	StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32		EcucEnumerationLiteralDef
BSW Description		
Type of the signal i	s sint32.	
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message		
sequence.		
Soquerioe.		
BaseTypeDirectDefinition.baseTypeSize:		
Describes the length of the data type specified in the container in bits.		
M2 Parameter		



AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response  baseTypeEncoding = 2C baseTypeSize = 32	full
Mapping Status	Mapping ID
valid	up_Dcm_00161

BSW Context		
Dcm/DcmConfigSet/DcmDsp/DcmDs	pRoutine/DcmDspStartRoutine/DcmDsp	
StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType		
BSW Type		
EcucEnumerationLiteralDef		
BSW Description		
Type of the signal is sint32 array.		
Template Description		
	Dcm/DcmConfigSet/DcmDsp/DcmDs StartRoutineOut/DcmDspStartRoutine	

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics

Blaghotho Extraothor Blaghotho Blagh		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response		
baseTypeEncoding = 2C		
baseTypeSize = 32	full	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01001)		
arraySizeSemantics either does not exist or exists and is set to ArraySize		
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		
Mapping Status	Mapping ID	
valid	up_Dcm_00161	

BSW Module	BSW Context



Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp		
	StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType		
BSW Parameter		BSW Type	
SINT8		EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Type of the signal i			
Template Descrip	tion		
BaseTypeDirectD	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
	efinition.baseTypeSize:		
Describes the leng	th of the data type specified in the conta	ainer in bits.	
M2 Parameter			
1	pes::BaseTypeDirectDefinition.baseTyp	•	
AsamHdo::BaseTy	pes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule			Mapping Type
referenced by swD	ataDefProps of the DiagnosticParamete	er	
with the role Diagn	osticStartRoutine.response		
			full
baseTypeEncoding = 2C			
baseTypeSize = 8			
Mapping Status			Mapping ID
valid			up Dcm 00202

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
Dom	StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		EcucEnumerationLiteralDef
BSW Description		
Type of the signal is sint8 array.		

# Template Description

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,

A sam Hdo:: Base Types:: Base Type Direct Definition. base Type Size,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics

Mapping Rule Mapping Type



referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response  baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01001) arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT 01001)	full
Mapping Status	Mapping ID
valid	up_Dcm_00202

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp		
	StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType		outineSignalType
BSW Parameter		BSW Type	
UINT16		EcucEnumerationLite	eralDef
BSW Description			
Type of the signal			
Template Descrip	otion		
BaseTypeDirectD	efinition.baseTypeEncoding:		
This specifies, hov	v an object of the current BaseType is e	ncoded, e.g. in an ECI	J within a message
sequence.			
	efinition.baseTypeSize:		
	Describes the length of the data type specified in the container in bits.		
M2 Parameter			
,	rpes::BaseTypeDirectDefinition.baseTyp	•	
	rpes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule			Mapping Type
	DataDefProps of the DiagnosticParamete	er	
with the role Diagr	nosticStartRoutine.response		
			full
baseTypeEncoding			
baseTypeSize = 16	6		
Mapping Status			Mapping ID
valid			up_Dcm_00206

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
Dom	StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
UINT16_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is uint16 array.		
Template Description		



This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Blag 100 tio Extra de tino de la combina de		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticStartRoutine.response		
baseTypeEncoding = NONE		
baseTypeSize = 16	full	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT		
_01001)		
arraySizeSemantics either does not exist or exists and is set to ArraySize		
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		
Mapping Status	Mapping ID	
valid	up_Dcm_00206	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType		
BSW Parameter		BSW Type	outiliouighan ypo
UINT32		EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Type of the signal i	s uint32.		
Template Descrip	tion		
BaseTypeDirectD	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an EC <mark>l</mark>	J within a message
sequence.			
	BaseTypeDirectDefinition.baseTypeSize:		
Describes the length of the data type specified in the container in bits.			
	M2 Parameter		
	AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize			
Mapping Rule			Mapping Type
referenced by swD	ataDefProps of the DiagnosticParamete	er	
with the role Diagn	osticStartRoutine.response		
			full
baseTypeEncoding	j = NONE		
baseTypeSize = 32	2		



Mapping Status	Mapping ID
valid	up_Dcm_00215

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp		
DCIII	StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType		
<b>BSW Parameter</b>	BSW Type		
UINT32_N	EcucEnumerationLiteralDef		
BSW Description	SW Description		
Type of the signal is uint32 array.			
Template Description			
Page Type Direct Definition has et une Encoding:			

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticStartRoutine.response	
baseTypeEncoding = NONE baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT01001) arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	Mapping ID
valid	up_Dcm_00215

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
Dom	StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
UINT8	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is uint8.		
Template Description		



This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

<b>M2</b>	Pai	ram	iei	ter
1412	ı u	ull		

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticStartRoutine.response	
	full
baseTypeEncoding = NONE	
baseTypeSize = 8	
Mapping Status	Mapping ID
valid	up_Dcm_00168

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDsp	
Boili	StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter	ter BSW Type	
UINT8_N	UINT8_N EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is uint8 array.		
Template Description		

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

## **M2** Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response	
baseTypeEncoding = NONE baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT01001) arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full



Mapping Status	Mapping ID	
valid	up_Dcm_00168	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pRoutine/DcmDspStartRoutine/DcmDsp
DCIII	StartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter BSW Type		BSW Type
VARIABLE_LENGTH EcucEnumerationLiteralDef		EcucEnumerationLiteralDef
BSW Description		

Type of the signal is uint8[DcmDspRoutineParameterSize].

This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARI-ABLE\_LENGTH.

#### **Template Description**

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

DiagnosticExtractOominorDiagnosticsDiagnosticDataElement.maxivumberOrElements		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response		
baseTypeEncoding = NONE		
baseTypeSize = 8	   full	
arraySizeSemantics = variableSize	luli	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01002)		
arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize		
(cf. TPS_DEXT_01002)		
Mapping Status	Mapping ID	
valid	up_Dcm_00216	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine	
BSW Parameter BSW Type		BSW Type
DcmDspStopRoutine EcucParamConfContainerDef		EcucParamConfContainerDef
BSW Description		



Provides the configuration of Stop subservice for RoutineControl service.

Existence indicates that the StopRoutine in the RoutineControl is supported.

#### **Template Description**

## DiagnosticRoutine.stop:

This represents the ability to stop a running routine.

## DiagnosticRoutineNeeds.diagRoutineType:

This denotes the type of diagnostic routine which is implemented by the referenced server port.

## M2 Parameter

DiagnosticExtract::CommonDiagnostics::DiagnosticRoutine.stop,

CommonStructure::ServiceNeeds::DiagnosticRoutineNeeds.diagRoutineType		
Mapping Rule	Mapping Type	
1:1 mapping for DiagnosticRoutine.stop		
OR	full	
DiagnosticRoutineNeeds.diagRoutineType == asynchronous		
Mapping Status	Mapping ID	
valid	up_Dcm_00025	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine		
BSW Parameter		BSW Type	
DcmDspStopRoutir	neFnc	EcucFunctionNameD	ef
BSW Description			
Function name for	request to application to stop a routine.	(Routine_Stop-functio	n)
This parameter is re	elated to the interface Xxx_Stop.		
Template Descript	tion		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from			
Referrable and therefore this detour needs to be implemented to still let BswServiceDependency			
become the target of a reference.			
M2 Parameter			
DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDepen-			
dency			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID

BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine			
BSW Parameter	SSW Parameter BSW Type			
DcmDspStopRouti	neln	EcucParamConfCont	ainerDef	
<b>BSW Description</b>				
Provide description	Provide description of input parameter of Stop subservice for RoutineControl service.			
Template Description				
This represents the request parameters.				
M2 Parameter				
DiagnosticExtract::CommonDiagnostics::DiagnosticStopRoutine.request				
Mapping Rule Mapping Type			Mapping Type	
1:1 mapping full			full	

up\_Dcm\_00221

valid



Mapping Status	Mapping ID
valid	up_Dcm_00220

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn		
BSW Parameter		BSW Type	
DcmDspStopRouti	neInSignal	EcucParamConfCont	ainerDef
BSW Description			
Provide description	n of a routine signal used in RoutineCor	itrol service.	
The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataInN elements in the XXX_Stop function call.  Template Description  This represents the related dataElement of the DiagnosticParameter			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.dataElement			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping ful		full	
Mapping Status Map		Mapping ID	
valid		up_Dcm_00222	

BSW Module	BSW Context		
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
Dcm	StopRoutineIn/DcmDspStopRoutineInSignal/DcmDspArgumentScaling/Dcm		
	DspAlternativeDataType		
BSW Parameter		BSW Type	
DcmDspTextTable!	cmDspTextTableMapping EcucParamConfContainerDef		
<b>BSW Description</b>			

The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists).

In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.

#### **Template Description**

This meta-class represents the ability to express the relationship between a physical value and the mathematical representation.

Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.

<b>M2</b>	Param	eter
-----------	-------	------

AsamHdo::ComputationMethod::CompuMethod

Mapping Rule	Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABL E or SCALE_LINEAR_AND_TEXTTABLE.	full
Mapping Status	Mapping ID
valid	up_Dcm_00097



BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
DCIII	StopRoutineIn/DcmDspStopRoutineInSignal/DcmDspArgumentScaling/Dcm DspAlternativeDataType/DcmDspTextTableMapping		
BSW Parameter		BSW Type	
DcmDspDiagnosis	RepresentationDataValue	EcucIntegerParamDe	ef
<b>BSW Description</b>			
The data value in t	he diagnosis representation.		
Template Description			
This represents a textual constant in the computation method.			
M2 Parameter			
AsamHdo::ComputationMethod::CompuConstTextContent.vt			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping	1:1 mapping full		full
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00098

BSW Module	BSW Context			
Dem	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping			
BSW Parameter		BSW Type		
DcmDspInternalDa	ntaValue	EcucIntegerParamDe	ef	
BSW Description				
The ECU internal of	data value.			
Template Descrip	tion			
CompuScale.lowe	CompuScale.lowerLimit:			
This specifies the I	This specifies the lower limit of the scale.			
CompuScale.upperLimit: This specifies the upper limit of a of the scale.				
M2 Parameter				
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit				
<u> </u>			Mapping Type	
1:1 mapping			full	
Mapping Status Mapping ID		Mapping ID		
valid			up_Dcm_00099	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
DCIII	StopRoutineIn/DcmDspStopRoutineIr	nSignal	
BSW Parameter		BSW Type	
DcmDspRoutinePa	rameterSize	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Provide the size of a RoutineControl parameter in bytes			
Template Description			
The existence of this attribute turns the data instance into an array of data. The attribute determines			
the size of the arra	the size of the array in terms of how many elements the array can take.		
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements			
Mapping Rule Mapping Type			Mapping Type



Only in case of variable length required (according to constr_6008).  Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8	full
Mapping Status	Mapping ID
valid	up_Dcm_00188

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal		
BSW Parameter	Ctopi todinicii // Beri Bapetopi todinicii	BSW Type	
DcmDspRoutineSig	gnalEndianness	EcucEnumerationPar	amDef
<b>BSW Description</b>			
Defines the endian	ness of the data belonging to a Routine	In Signal for Stop sub	function.
If no DcmDspRoutineSignalEndianness is defined the value of DcmDspDataDefaultEndianness is applicable.  Template Description  This attribute specifies the byte order of the base type.			
M2 Parameter			
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder			
Mapping Rule Mapping Type		Mapping Type	
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request		full	
Mapping Status Mapping ID		Mapping ID	
valid			up Dcm 00183

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmI		Routine/DcmDsp
DCIII	StopRoutineIn/DcmDspStopRoutineIr	nSignal	
BSW Parameter		BSW Type	
DcmDspRoutineSignation	gnalPos	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Provide the positio	n of the signal in the RoutineControl red	quest/response.	
The position is defi	The position is defined in bits.		
Template Description			
This represents the bitOffset of the DiagnosticParameter			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.bitOffset			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status			Mapping ID
valid			up_Dcm_00192

BSW Module	BSW Context	
Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutin		
DCIII	StopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
BOOLEAN	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is boolean.		
Template Description		



This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticStopRoutine.request	
	full
baseTypeEncoding = BOOLEAN	
baseTypeSize = 1	
Mapping Status	Mapping ID
valid	up Dcm 00194

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs		
	StopRoutineIn/DcmDspStopRoutineIr	· .	ieSignal Type
BSW Parameter		BSW Type	
SINT16		EcucEnumerationLite	eralDef
BSW Description			
Type of the signal i			
Template Descrip			
	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
	efinition.baseTypeSize:		
Describes the leng	Describes the length of the data type specified in the container in bits.		
M2 Parameter			
	pes::BaseTypeDirectDefinition.baseTyp		
AsamHdo::BaseTy	pes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule			Mapping Type
	ataDefProps of the DiagnosticParameter	er	
with the role Diagn	osticStopRoutine.request		
full		full	
baseTypeEncoding = 2C			
baseTypeSize = 16			
Mapping Status			Mapping ID
valid			up_Dcm_00158

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp	
DCIII	StopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
SINT16_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is sint16 array.		
Template Description		



This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Blag notion Alactico minoriblag notion Blag notion at all and a training notion		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticStopRoutine.request		
baseTypeEncoding = 2C		
baseTypeSize = 16	full	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT		
_01001)		
arraySizeSemantics either doesnot exist or exists and is set to ArraySize		
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		
Mapping Status	Mapping ID	
valid	up_Dcm_00158	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		Routine/DcmDsp
DCIII	StopRoutineIn/DcmDspStopRoutineIr	Signal/DcmDspRoutin	ieSignalType
BSW Parameter		BSW Type	
SINT32		EcucEnumerationLite	eralDef
BSW Description			
Type of the signal i	s sint32.		
Template Descrip	tion		
BaseTypeDirectD	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
	efinition.baseTypeSize:		
	Describes the length of the data type specified in the container in bits.		
M2 Parameter	M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,			
AsamHdo::BaseTy	pes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule			Mapping Type
referenced by swD	ataDefProps of the DiagnosticParamete	er	
with the role DiagnosticStopRoutine.request			
			full
baseTypeEncoding	j = 2C		
baseTypeSize = 32	2		



Mapping Status	Mapping ID
valid	up_Dcm_00165

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp	
DCIII	StopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
SINT32_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is sint32 array.		
Template Description		

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticStopRoutine.request	
baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01001) arraySizeSemantics either doesnot exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	Mapping ID
valid	up_Dcm_00165

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
DCIII	StopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType		
BSW Parameter	BSW Type		
SINT8	EcucEnumerationLiteralDef		
<b>BSW Description</b>	Description		
Type of the signal i	ype of the signal is sint8.		
Template Description			



BaseTv	peDirectD	efinition.	.baseTv	peEncoding:
<b>D</b> 4001,	PODITORE	O		po-mooding.

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

<b>M2</b>	Pai	ram	iei	ter
1412	ı u	ull		

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticStopRoutine.request		
	full	
baseTypeEncoding = 2C		
baseTypeSize = 8		
Mapping Status	Mapping ID	
valid	up_Dcm_00247	

BSW Module	BSW Context		
Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDspStop			
Bom	StopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType		
BSW Parameter	BSW Type		
SINT8_N EcucEnumerationLiteralDef		EcucEnumerationLiteralDef	
<b>BSW Description</b>	3SW Description		
Type of the signal i	l is sint8 array.		
Template Descrip	Template Description		

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

#### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2** Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

DiagnosticExtractoominorDiagnosticsDiagnosticDataElement.maxivumberOrElements			
Mapping Rule	Mapping Type		
referenced by swDataDefProps of the DiagnosticParameter			
with the role DiagnosticStopRoutine.request			
baseTypeEncoding = 2C			
baseTypeSize = 8	full		
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT			
_01001)			
arraySizeSemantics either does not exist or exists and is set to ArraySize			
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)			



Mapping Status	Mapping ID
valid	up_Dcm_00247

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
	StopRoutineIn/DcmDspStopRoutineIn		eSignalType
BSW Parameter		BSW Type	
UINT16		EcucEnumerationLite	eralDef
BSW Description			
Type of the signal i			
Template Descrip			
	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
	efinition.baseTypeSize:		
	Describes the length of the data type specified in the container in bits.		
M2 Parameter			
	pes::BaseTypeDirectDefinition.baseTyp		
	pes::BaseTypeDirectDefinition.baseTyp	eSize	
	Mapping Rule Mapping Type		
	referenced by swDataDefProps of the DiagnosticParameter		
with the role Diagn	the role DiagnosticStopRoutine.request		
full full			full
baseTypeEncoding = NONE			
baseTypeSize = 16			
Mapping Status			Mapping ID
valid			up_Dcm_00208

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
DCIII	StopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType		
BSW Parameter	r BSW Type		
UINT16_N	EcucEnumerationLiteralDef		
BSW Description			
Type of the signal i	Type of the signal is uint16 array.		
Template Description			

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**



AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request  baseTypeEncoding = NONE baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		
Mapping Status Mapping ID		
valid	up_Dcm_00208	

BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp			
_	StopRoutineIn/DcmDspStopRoutineIr	nSignal/DcmDspRoutin	eSignalType	
BSW Parameter		BSW Type		
UINT32		EcucEnumerationLite	eralDef	
BSW Description				
Type of the signal is				
Template Descrip	tion			
BaseTypeDirectDe	efinition.baseTypeEncoding:			
This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message				
sequence.	sequence.			
BaseTypeDirectDefinition.baseTypeSize:				
Describes the leng	Describes the length of the data type specified in the container in bits.			
M2 Parameter				
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,				
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize				
Mapping Rule Mapping Type				
baseTypeEncoding = NONE		full		
• •	baseTypeSize = 32			
Mapping Status Mapping ID			Mapping ID	
valid up_Dcm_		up_Dcm_00214		

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
DCIII	StopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType		
BSW Parameter	BSW Type		
UINT32_N	EcucEnumerationLiteralDef		
BSW Description			
Type of the signal is uint32 array.			
Template Description			



This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

BSW Module BSW Context

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Mapping Rule	Mapping Type
baseTypeEncoding = NONE	
baseTypeSize = 32	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT	full
_01001)	luli
arraySizeSemantics either does not exist or exists and is set to ArraySizeSe-	
manticsEnum.fixedSize (cf. TPS_DEXT_01001)	
Mapping Status	Mapping ID
valid	up_Dcm_00214

Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
	StopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType		
BSW Parameter		BSW Type	
UINT8		EcucEnumerationLite	eralDef
BSW Description			
Type of the signal is			
Template Descrip	tion		
BaseTypeDirectDe	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
BaseTypeDirectDe	efinition.baseTypeSize:		
Describes the leng	th of the data type specified in the conta	ainer in bits.	
M2 Parameter			
AsamHdo::BaseTy	pes::BaseTypeDirectDefinition.baseTyp	eEncoding,	
AsamHdo::BaseTy	AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		
		Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter			
with the role DiagnosticStopRoutine.request			
full		full	
baseTypeEncoding = NONE			
baseTypeSize = 8			
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00171



BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp	
DCIII	StopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
UINT8_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is uint8 array.		
Template Description		

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

## DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

## DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

#### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticStopRoutine.request	
baseTypeEncoding = NONE baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT _01001) arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	Mapping ID
valid	up_Dcm_00171

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp	
Dom	StopRoutineIn/DcmDspStopRoutineIr	Signal/DcmDspRoutineSignalType
BSW Parameter	BSW Type	
VARIABLE_LENG	TH EcucEnumerationLiteralDef	
BSW Description	BSW Description	
Type of the signal is uint8[DcmDspRoutineParameterSize].		
This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARI-		
ABLE_LENGTH.	<del>-</del>	
Template Description		



This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

## BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

#### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

#### M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics

DiagnosticExtractOominorDiagnosticsDiagnosticDataElement.arraySizeGemantics		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticStopRoutine.request		
baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize	full	
(cf. TPS_DEXT_01002)		
Mapping Status	Mapping ID	
valid	up_Dcm_00218	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine		
BSW Parameter		BSW Type	
DcmDspStopRouti	RoutineOut EcucParamConfContainerDef		ainerDef
<b>BSW Description</b>			
Provide description	of output parameter of Stop subservic	e for RoutineControl se	ervice.
Template Description			
This represents the response parameters.			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticStopRoutine.response			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid			up_Dcm_00224

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutine/DcmDsp	
BSW Parameter		BSW Type
DcmDspStopRoutineOutSignal EcucParamConfContainerDef		EcucParamConfContainerDef
<b>BSW Description</b>		



Provide description of a routine signal used in RoutineControl service.		
The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataOutN elements in the XXX_Stop function call.		
Template Description		
This represents the related dataElement of the DiagnosticParameter		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.dataElement		
Mapping Rule Mapping Type		
1:1 mapping full		
Mapping Status Mapping ID		
valid	up_Dcm_00223	

BSW Module	BSW Context	
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp	
Dcm	StopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspArgumentScaling/	
	DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableI	nDspTextTableMapping EcucParamConfContainerDef	
BSW Description	SW Description	

The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists).

In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.

#### **Template Description**

This meta-class represents the ability to express the relationship between a physical value and the mathematical representation.

Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.

# M2 Parameter AsamHdo::ComputationMethod::CompuMethod Mapping Rule This mapping applies if the CompuMethod.category is set to values TEXTTABL E or SCALE\_LINEAR\_AND\_TEXTTABLE. Mapping Status valid Mapping ID up Dcm 00097

BSW Module	BSW Context		
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
Dcm	StopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspArgumentScaling/		
	DcmDspAlternativeDataType/DcmDspTextTableMapping		
BSW Parameter	BSW Type		
DcmDspDiagnosis	sisRepresentationDataValue EcucIntegerParamDef		
BSW Description			
The data value in the diagnosis representation.			
Template Description			



This represents a textual constant in the computation method.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuConstTextContent.vt	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00098

BSW Module	BSW Context			
	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp			
Dcm	StopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspArgumentScaling/			
	DcmDspAlternativeDataType/DcmDsp			
BSW Parameter	,	BSW Type		
DcmDspInternalDa	taValue	EcucIntegerParamDe	ef	
<b>BSW Description</b>				
The ECU internal of	data value.			
Template Descrip	tion			
CompuScale.lowe	CompuScale.lowerLimit:			
This specifies the lower limit of the scale.				
CompuScale.upperLimit:				
This specifies the upper limit of a of the scale.				
M2 Parameter				
AsamHdo::Comput	AsamHdo::ComputationMethod::CompuScale.lowerLimit,			
AsamHdo::ComputationMethod::CompuScale.upperLimit				
Mapping Rule Mapping Type			Mapping Type	
1:1 mapping full		full		
Mapping Status Mapping ID		Mapping ID		
valid			up_Dcm_00099	

BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp			
	StopRoutineOut/DcmDspStopRoutine			
BSW Parameter		BSW Type		
DcmDspRoutinePa	arameterSize	EcucIntegerParamDe	ef	
<b>BSW Description</b>				
Provide the size of	a RoutineControl parameter in bytes			
Template Descrip	Template Description			
The existence of this attribute turns the data instance into an array of data. The attribute determines				
the size of the array in terms of how many elements the array can take.				
M2 Parameter				
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements				
Mapping Rule Mapping Type			Mapping Type	
"Only in case of variable length required (according to constr_6008).			full	
Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8			luli	
Mapping Status		Mapping ID		
valid			up_Dcm_00187	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal



BSW Parameter	BSW Type		
DcmDspRoutineSignalEndianness	EcucEnumerationPara	amDef	
BSW Description			
Defines the endianness of the data belonging to a Routine	Out Signal for Stop sul	bfunction.	
If no DcmDspRoutineSignalEndianness is defined the value of DcmDspDataDefaultEndianness is applicable.			
Template Description	Template Description		
This attribute specifies the byte order of the base type.			
M2 Parameter			
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder			
Mapping Rule		Mapping Type	
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the full			
DiagnosticParameter with the role DiagnosticStopRoutine.response			
Mapping Status Mappin			
valid		up_Dcm_00184	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal		
BSW Parameter		BSW Type	
DcmDspRoutineSign	gnalPos	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Provide the position	n of the signal in the RoutineControl red	quest/response.	
The position is defi	The position is defined in bits.		
Template Description			
This represents the bitOffset of the DiagnosticParameter			
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.bitOffset		
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid up_Dcm_001		up_Dcm_00191	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
DCIII	StopRoutineOut/DcmDspStopRoutine	eOutSignal/DcmDspRc	outineSignalType
BSW Parameter		BSW Type	
BOOLEAN		EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Type of the signal is	s boolean.		
Template Descrip	tion		
BaseTypeDirectDefinition.baseTypeEncoding:			
This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message			
sequence.			
BaseTypeDirectDefinition.baseTypeSize:			
Describes the length of the data type specified in the container in bits.			
M2 Parameter			
AsamHdo::BaseTy	AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,		
AsamHdo::BaseTy	AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		
Mapping Rule Mapping Type			Mapping Type



referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.response	full
baseTypeEncoding = BOOLEAN	
baseTypeSize = 1	
Mapping Status	Mapping ID
valid	up_Dcm_00195

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
DCIII	StopRoutineOut/DcmDspStopRoutine	•	outineSignalType
BSW Parameter		BSW Type	
SINT16		EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Type of the signal i			
Template Descrip			
	efinition.baseTypeEncoding:		
This specifies, how	v an object of the current BaseType is e	ncoded, e.g. in an ECI	J within a message
sequence.			
BaseTypeDirectDefinition.baseTypeSize:			
	Describes the length of the data type specified in the container in bits.		
M2 Parameter			
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,			
	pes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule			Mapping Type
	OataDefProps of the DiagnosticParameter	er	
with the role DiagnosticStopRoutine.response			
	_		full
baseTypeEncoding			
baseTypeSize = 16	6		
Mapping Status			Mapping ID
valid			up_Dcm_00159

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp	
Dom	StopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
SINT16_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is sint16 array.		
Template Description		



This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics

 Mapping Rule
 Mapping Type

 referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.response
 baseTypeEncoding = 2C

 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS\_DEXT\_01001)
 full

 arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS\_DEXT\_01001)
 Mapping ID

 valid
 up Dcm\_00159

BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp			
DCIII	StopRoutineOut/DcmDspStopRoutine	eOutSignal/DcmDspRo	utineSignalType	
BSW Parameter		BSW Type		
SINT32		EcucEnumerationLite	eralDef	
BSW Description				
Type of the signal i	s sint32.			
Template Descrip	tion			
BaseTypeDirectD	efinition.baseTypeEncoding:			
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message	
sequence.	sequence.			
BaseTypeDirectDefinition.baseTypeSize:				
Describes the length of the data type specified in the container in bits.				
M2 Parameter				
1	AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,			
AsamHdo::BaseTy	pes::BaseTypeDirectDefinition.baseTyp	eSize		
Mapping Rule			Mapping Type	
referenced by swD	ataDefProps of the DiagnosticParameter	er		
with the role DiagnosticStopRoutine.response				
			full	
baseTypeEncoding				
baseTypeSize = 32	2			



Mapping Status	Mapping ID
valid	up_Dcm_00162

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
DCIII	StopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType		
BSW Parameter	BSW Type		
SINT32_N	32_N EcucEnumerationLiteralDef		
BSW Description			
Type of the signal is sint32 array.			
Template Description			

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

# DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics

Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticStopRoutine.response	
baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT01001) arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	Mapping ID
valid	up_Dcm_00162

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
StopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmDspRoutineSignal/DcmD		OutSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type		
SINT8	SINT8 EcucEnumerationLiteralDef		
BSW Description			
Type of the signal is sint8.			
Template Description			



This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

M2	Pa	ra	m	Δŧ	ΔI

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticStopRoutine.response		
	full	
baseTypeEncoding = 2C		
baseTypeSize = 8		
Mapping Status	Mapping ID	
valid	up_Dcm_00203	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
Dom	StopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType		
BSW Parameter	ter BSW Type		
SINT8_N EcucEnumerationLiteralDef		EcucEnumerationLiteralDef	
BSW Description			
Type of the signal is sint8 array.			
Template Description			

BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics

Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticStopRoutine.response	
with the role Blaghostiophloatine.response	
baseTypeEncoding = 2C	
baseTypeSize = 8	full
maxNumberOfElements exists and value is greater than 0 (cf. TPS DEXT	
01001)	
arraySizeSemantics either doesnot exist or exists and is set to ArraySize	
SemanticsEnum.fixedSize (cf. TPS DEXT 01001)	



Mapping Status	Mapping ID
valid	up_Dcm_00203

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp		
	StopRoutineOut/DcmDspStopRoutine		utineSignalType
BSW Parameter		BSW Type	
UINT16		EcucEnumerationLite	eralDef
BSW Description			
Type of the signal i	s uint16.		
Template Descrip	tion		
BaseTypeDirectD	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
BaseTypeDirectD	efinition.baseTypeSize:		
Describes the leng	Describes the length of the data type specified in the container in bits.		
M2 Parameter			
AsamHdo::BaseTy	pes::BaseTypeDirectDefinition.baseTyp	eEncoding,	
AsamHdo::BaseTy	pes::BaseTypeDirectDefinition.baseTyp	eSize	
Mapping Rule			Mapping Type
referenced by swD	ataDefProps of the DiagnosticParamete	er	
with the role Diagn	with the role DiagnosticStopRoutine.response		
full			full
baseTypeEncoding = NONE			
baseTypeSize = 16			
Mapping Status			Mapping ID
valid			up_Dcm_00209

BSW Module	BSW Context		
Dcm		pRoutine/DcmDspStopRoutine/DcmDsp	
DCIII	StopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType		
BSW Parameter	r BSW Type		
UINT16_N		EcucEnumerationLiteralDef	
BSW Description			
Type of the signal is uint16 array.			

# Template Description BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

# DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

# DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

### **M2 Parameter**



AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.response  baseTypeEncoding = NONE baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		
Mapping Status Mapping ID		
valid	up_Dcm_00209	

BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp			
	StopRoutineOut/DcmDspStopRoutine		utineSignalType	
BSW Parameter		BSW Type		
UINT32		EcucEnumerationLite	eralDef	
BSW Description				
Type of the signal i				
Template Descrip				
	efinition.baseTypeEncoding:			
1	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message	
sequence.				
	BaseTypeDirectDefinition.baseTypeSize:			
	Describes the length of the data type specified in the container in bits.			
M2 Parameter				
	pes::BaseTypeDirectDefinition.baseTyp			
	pes::BaseTypeDirectDefinition.baseTyp	eSize		
Mapping Rule			Mapping Type	
1	ataDefProps of the DiagnosticParamete	er		
with the role Diagn	with the role DiagnosticStopRoutine.response			
full			full	
baseTypeEncoding = NONE				
baseTypeSize = 32				
Mapping Status			Mapping ID	
valid			up_Dcm_00212	

BSW Module	BSW Context	
Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/ StopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSign		
		OutSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type	
UINT32_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is uint32 array.		
Template Description		



This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

# BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Blaghootio Extraorino in Blaghootio Blaghootio Bata Elomonto		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticStopRoutine.response		
baseTypeEncoding = NONE		
baseTypeSize = 32	full	
maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT		
_01001)		
arraySizeSemantics either does not exist or exists and is set to ArraySize		
SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		
Mapping Status	Mapping ID	
valid	up_Dcm_00212	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType		
	StopRoutineOut/DcmDspStopRoutine		utineSignal Type
BSW Parameter		BSW Type	
UINT8		EcucEnumerationLite	eralDef
BSW Description			
Type of the signal i	s uint8.		
Template Descrip	tion		
	efinition.baseTypeEncoding:		
This specifies, how	an object of the current BaseType is e	ncoded, e.g. in an ECl	J within a message
sequence.			
BaseTypeDirectD	BaseTypeDirectDefinition.baseTypeSize:		
Describes the length of the data type specified in the container in bits.			
M2 Parameter			
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding,			
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize			
Mapping Rule Mapping Type		Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter			
with the role DiagnosticStopRoutine.response			
full			full
baseTypeEncoding = NONE			
baseTypeSize = 8			



Mapping Status	Mapping ID
valid	up_Dcm_00170

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDsp	
DCIII	StopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
UINT8_N	EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is uint8 array.		
Template Description		

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

# DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

### **M2 Parameter**

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements

Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter	
with the role DiagnosticStopRoutine.response	
baseTypeEncoding = NONE baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT01001) arraySizeSemantics either does not exist or exists and is set to ArraySize SemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	Mapping ID
valid	up_Dcm_00170

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter	BSW Type	
VARIABLE_LENG	GTH EcucEnumerationLiteralDef	
BSW Description		
Type of the signal is uint8[DcmDspRoutineParameterSize].		
This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARI-ABLE_LENGTH.		



# **Template Description**

# BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

### BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

### DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

### DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

### **M2 Parameter**

A sam Hdo:: Base Types:: Base Type Direct Definition. base Type Encoding,

AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize,

DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics

Blaghotho Extracting of the first agricultural agricultural and the first agricultural agricultu		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter		
with the role DiagnosticStopRoutine.response		
baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00173	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow		
BSW Parameter		BSW Type	
DcmDspSecurityAl	DRSize	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Size in bytes of the	AccessDataRecord used in GetSeed		
Template Descrip	Template Description		
This represents the size of the AccessDataRecord used in GetSeed. Unit:byte.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticSecurityLevel.accessDataRecordSize			
Mapping Rule Mapping T		Mapping Type	
1:1 mapping		full	
Mapping Status		Mapping ID	
valid		up_Dcm_00241	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter		BSW Type
DcmDspSecurityCompareKeyFnc		EcucFunctionNameDef



# **BSW Description**

Function name to request the result of a key comparison.

Parameter is only relevant if

DcmDspSecurityUsePort=="USE ASYNCH FNC".

This parameter is related to the interface Xxx CompareKey.

### **Template Description**

This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.

### M2 Parameter

DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDependency

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00240

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter BSW Type		BSW Type
DcmDspSecurityDelayTime		EcucFloatParamDef
BSW Description		
Delay time after failed security access in seconds		

Delay time after failed security access in seconds.

This is started after DcmDspSecurityNumAttDelay number of failed security accesses.

min: A negative value is not allowed.

# **Template Description**

This represents the delay time after a failed security access. Unit: second.

### **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticSecurityLevel.securityDelayTime

DiagnosticExtractDomDiagnosticOccurry Ecver.securry Delay Time	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00238

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pSecurity/DcmDspSecurityRow
BSW Parameter		BSW Type
DcmDspSecurityDelayTimeOnBoot EcucFloatParamDef		
RSW Description		

### BSW Description

Value of the delay timer in case of 'power on' in seconds.

This delay indicates the time at ECU boot power-on time during which the Dcm does not accept a security access.

min: A negative value is not allowed.

### **Template Description**

Start delay timer on power on in seconds.

This delay indicates the time at ECU boot power-on time where the Dcm remains in the default session and does not accept a security access.



M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.securityDelayTimeOnBoot		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00237	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pSecurity/DcmDspSec	urityRow
BSW Parameter		BSW Type	
DcmDspSecurityG	etSeedFnc	EcucFunctionNameD	ef
BSW Description			
Callout function na	me used to request a seed.		
Parameter is only i	relevant if DcmDspSecurityUsePort=="	USE_ASYNCH_FNC".	This parameter is
related to the interface Xxx_GetSeed.			
Template Description			
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from			
Referrable and therefore this detour needs to be implemented to still let BswServiceDependency			
become the target of a reference.			
M2 Parameter			
DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDepen-			
dency			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dcm_00239

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pSecurity/DcmDspSec	urityRow
BSW Parameter		BSW Type	
DcmDspSecurityKeySize EcucIntegerParamDef		rf	
BSW Description			
size of the security	key (in Bytes).		
Template Description			
This represents the size of the security key. Unit: byte.			
M2 Parameter			
DiagnosticExtract::	Dcm::DiagnosticSecurityLevel.keySize		
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dcm_00236

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter BSW Type		
DcmDspSecurityLevel EcucIntegerParamDef		
BSW Description		



Value of Security level.

The locked state cannot be configured explicitly.

1,2,3...63:

configuration dependent - Conversion formula to calculate SecurityLevel out of tester requested

SecurityAccessType parameter:

SecurityLevel = (SecurityAccessType (requestSeed) + 1) / 2

Type: Dcm\_SecLevelType

# **Template Description**

This would be 0x01, 0x03, 0x05, ...

The sendKey id can be computed by adding 1 to the requestSeedId

### M2 Parameter

DiagnosticExtract::Dcm::DiagnosticService::SecurityAccess::DiagnosticSecurityAccess.request SeedId

Mapping Rule	Mapping Type
DcmDspSecurityLevel=(requestSeedId+1)/2	full
Mapping Status	Mapping ID
valid	up Dcm 00235

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow		
BSW Parameter BSW Type			
DcmDspSecurityNumAttDelay EcucIntegerParamDef		ef	
BSW Description			
Number of failed security accesses after which the delay time is activated			
Template Description			
This represents the number of failed security accesses after which the delay time is activated.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticSecurityLevel.numFailedSecurityAccess			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping		full	
Mapping Status			Mapping ID
valid			up_Dcm_00234

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow		
BSW Parameter		BSW Type	
DcmDspSecuritySe	DcmDspSecuritySeedSize EcucIntegerParamDef		ef
BSW Description			
size of the security seed (in Bytes).			
Template Description			
This represents the size of the security seed. Unit: byte.			
M2 Parameter			
DiagnosticExtract::	Dcm::DiagnosticSecurityLevel.seedSize	Э	
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dcm_00233



BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow/DcmDspSecurityUsePort		
BSW Parameter	Security Oser Ort	BSW Type	
USE ASYNCH CL	IENT CEDVED	EcucEnumerationLite	vralDof
	ILIVI_SERVER	EcucEnumerationLite	raidei
BSW Description			
	ess the data using an R-Port requirin	g a asynchronous Cli	entServertInterface
SecurityAccess_{S	securityLevel}.		
The R-Port is described in DcmDspSecurityRow description.			
Template Description			
This represents the ability to point into the component hiearchy (under possible consideration of the			
rootSoftwareComposition)			
M2 Parameter			
DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedSwcServiceDepen-			
dencyInSystem			
Mapping Rule Mapping Type			
1:1 mapping			full
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid			up_Dcm_00226

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs SecurityUsePort	pSecurity/DcmDspSecurityRow/DcmDsp
BSW Parameter		BSW Type
USE_ASYNCH_FN	IC .	EcucEnumerationLiteralDef
BSW Description		

The DCM will access the data using the functions that are defined in the parameters DcmD-spSecurityGetSeedFnc and DcmDspSecurityCompareKeyFnc as well as the functions defined in DcmDspSecurityGetAttemptCounterFnc and DcmDspSecuritySetAttemptCounterFnc, if enabled by the parameter DcmDspSecurityAttemptCounterEnabled.

DCM\_E\_PENDING return is allowed and OpStatus is existing as IN parameter.

# **Template Description**

This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.

### M2 Parameter

DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDependency

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00225

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/DcmDsp	
DCIII	SessionForBoot	
BSW Parameter	BSW Type	
DCM_NO_BOOT	EcucEnumerationLiteralDef	
BSW Description		
This diagnostic session doesn't allow to jump to Bootloader.		



Template Description	
This diagnostic session doesn't allow to jump to Bootloader.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticJumpToBootLoaderEnum.noBoot	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00231

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/DcmDspSessionForBoot		
BSW Parameter		BSW Type	
DCM_OEM_BOOT		EcucEnumerationLite	eralDef
<b>BSW Description</b>			
This diagnostic ses	ssion allows to jump to OEM Bootloade	and bootloader sends	final response.
Template Description			
This diagnostic session allows to jump to OEM Bootloader. In this case the bootloader send the final			
response.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticJumpToBootLoaderEnum.oemBoot			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping	1:1 mapping full		full
Mapping Status Mapping ID		Mapping ID	
valid			up_Dcm_00227

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/DcmDsp		
DCIII	SessionForBoot		
BSW Parameter		BSW Type	
DCM_OEM_BOOT	_RESPAPP	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
This diagnostic ses	ssion allows to jump to OEM Bootloade	and application sends	final response.
Template Descrip	ption		
This diagnostic ses	ssion allows to jump to OEM Bootloader and application sends final response.		
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticJumpToBootLoaderEnum.oemBootRespApp			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping	ng full		full
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid			up_Dcm_00228

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/DcmDspSessionForBoot	
BSW Parameter	BSW Type	
DCM_SYS_BOOT	EcucEnumerationLiteralDef	
BSW Description		
This diagnostic session allows to jump to System Supplier Bootloader and bootloader sends final		
response.		



Template Description		
This diagnostic session allows to jump to System Supplier Bootloader. In this c	ase the bootloader	
send the final response.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticJumpToBootLoaderEnum.systemSupplierBoot		
Mapping Rule	Mapping Type	
1:1 mapping full		
Mapping Status	Mapping ID	
valid	up_Dcm_00229	

DCW Madula	DCW Contout		
BSW Module	BSW Context		
Dom/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/		sionRow/DcmDsp	
Dcm	SessionForBoot		
BSW Parameter		BSW Type	
DCM_SYS_BOOT	_RESPAPP	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
This diagnostic se	ssion allows to jump to System Suppli-	er Bootloader and app	lication sends final
response.			
Template Description			
This diagnostic session allows to jump to System Supplier Bootloader and application sends final			
response.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticJumpToBootLoaderEnum.systemSupplierBootRespApp			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up Dcm 00230

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow		
BSW Parameter		BSW Type	
DcmDspSessionLe	evel	EcucIntegerParamDe	ef
<b>BSW Description</b>			
subFunction value	of the DiagnosticSession.		
0.407 and all ad an also a 407 are made all b. 100			
	es above 127 are reserved by ISO		
Template Description			
This is the numerical identifier used to identify the DiagnosticSession in the scope of diagnostic			
workflow			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticSession.id			
Mapping Rule	apping Rule Mapping Type		
1:1 mapping	napping full		full
Mapping Status Mapping ID		Mapping ID	
valid			up Dcm 00232

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pSession/DcmDspSessionRow
BSW Parameter		BSW Type
DcmDspSessionP2ServerMax		EcucFloatParamDef

up Dcm 00251



# **BSW Description**

This is the session value for P2ServerMax in seconds (per Session).

The AUTOSAR configuration standard is to use SI units, so this parameter is defined as a float value in seconds. DCM configuration tools must convert this float value to the appropriate value format for the use in the software implementation of DCM.

This value is reported to the tester within the response to the 'Session Control' service.

### **Template Description**

This is the session value for P2ServerMax in seconds (per Session Control).

The AUTOSAR configuration standard is to use SI units, so this parameter is defined as a float value in seconds.

### **M2 Parameter** DiagnosticExtract::Dcm::DiagnosticSession.p2ServerMax Mapping Rule Mapping Type 1:1 mapping full **Mapping Status Mapping ID**

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow	
BSW Parameter		BSW Type
DcmDspSessionP2StarServerMax		EcucFloatParamDef
BSW Description		

valid

This is the session value for P2\*ServerMax in seconds (per Session).

The AUTOSAR configuration standard is to use SI units, so this parameter is defined as a float value in seconds. DCM configuration tools must convert this float value to the appropriate value format for the use in the software implementation of DCM.

This value is reported to the tester within the response to the 'Session Control' service.

# **Template Description**

This is the session value for P2\*ServerMax in seconds (per Session Control).

The AUTOSAR configuration standard is to use SI units, so this parameter is defined as a float value in seconds.

### M2 Parameter

DiagnosticExtract::Dcm::DiagnosticSession.p2StarServerMax

= ag. out = x. au = ag. out out out out out out a		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00252	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp		
BSW Parameter		BSW Type	
DcmDspVehInfo		EcucParamConfContainerDef	
<b>BSW Description</b>			
This container con	This container contains the configuration (parameters) for one single VehicleInfoType of service \$09		
Template Description			
This meta-class represents the ability to model an instance of the OBD mode 0x09 service.			
M2 Parameter			
DiagnosticExtract::Dcm::ObdService::Mode_0x09_RequestVehicleInformation::DiagnosticRequest			
VehicleInfo			
Mapping Rule		Mapping Type	



1:1 mapping	full
Mapping Status	Mapping ID
valid	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pVehInfo	
BSW Parameter		BSW Type	
DcmDspVehInfoDa	ıta	EcucParamConfCont	ainerDef
<b>BSW Description</b>			
Data Item of an Info	oType; ShortName is post-fix of the por	t interface name.	
Template Descrip			
This meta-class represents the ability to describe a concrete piece of data to be taken into account			
for diagnostic purposes.			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement			
Mapping Rule			Mapping Type
The value shall be taken from DiagnosticRequestVehicleInfo.infoType.dataEle-		full	
ment.dataElement.			iuii
Mapping Status		Mapping ID	
valid	·	·	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDsp	oVehInfo/DcmDspVehI	nfoData
BSW Parameter		BSW Type	
DcmDspVehInfoDa	taOrder	EcucIntegerParamDe	ef
BSW Description			
Defines the order of	of the data item in the InfoType; values	s: 0255; first data iter	m having the order
number 0; the next			
The configuration of order needs to be unique per InfoType.			
Template Description			
This represents the	This represents the bitOffset of the DiagnosticParameter		
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.bitOffset			
11 0			Mapping Type
Value shall be taken from DiagnosticRequestVehicleInfo.infoType.dataEle-		full	
ment.bitOffset.			Tuli
Mapping Status		Mapping ID	
valid			

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pVehInfo/DcmDspVehInfoData	
BSW Parameter	Parameter BSW Type		
DcmDspVehInfoDa	mDspVehInfoDataReadFnc EcucFunctionNameDef		
BSW Description			
Callout function name for reading InfoType data item. Only required in case parameter 'DcmDspVe-			
hInfoDataUsePort' is set to 'false'			
Template Description			
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from			
Referrable and therefore this detour needs to be implemented to still let BswServiceDependency			
become the target of a reference.			



M2 Parameter	
DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswS	ServiceDepen-
dency	
Mapping Rule	Mapping Type
The BswServiceDependency should have aRoleBasedBswModuleEntryAssignment that in turn has attribute role set to Xxx_GetInfotypeValueData and points to a BswModuleEntry.	full
Mapping Status Mapping	
valid	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDsp	VehInfo/DcmDspVehI	nfoData
BSW Parameter BSW Type			
DcmDspVehInfoDa	taSize	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Size in bytes of the	InfoType data item.		
Template Descrip	Template Description		
The existence of this attribute turns the data instance into an array of data. The attribute determine			ttribute determines
the size of the array in terms of how many elements the array can take.			
M2 Parameter			
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements			Elements
Mapping Rule			Mapping Type
Value shall be taken from DiagnosticRequestVehicleInfo.infoType.dataEle-		full	
ment.dataElement.maxNumberOfElements.		iuii	
Mapping Status		Mapping ID	
valid			

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspVehInfo/DcmDspVehInfoData	
BSW Parameter BSW Type		
DcmDspVehInfoDataUsePort EcucBooleanParamDef		
<b>BSW Description</b>		

When this parameter is set to true the DCM will access the Data using an R-Port requiring a PortInterface IInfotypeServices {VehInfoData}.

The R-Port is named InfotypeServices\_{VehInfoData} where {VEHINFODATA} is the name of the container DcmDspVehInfoData. In that case, the DcmDspVehInfoDataReadFnc is ignored and the RTE APIs are used.

When this parameter is set to false, the DCM calls the function defined in DcmDspVehInfo-DataReadFnc.

### **Template Description**

# DiagnosticServiceSwMapping.mappedBswServiceDependency:

This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.

# ${\bf Diagnostic Service SwMapping.} mapped {\bf Swc Service Dependency In System:}$

This represents the ability to point into the component hiearchy (under possible consideration of the rootSoftwareComposition)

### M2 Parameter



DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedBswSdency,	ServiceDepen-	
DiagnosticExtract::ServiceMapping::DiagnosticServiceSwMapping.mappedSwcServiceDepen-		
dencyInSystem		
Mapping Rule Mapping Type		
Shall be set to TRUE if the reference DiagnosticServiceSwMapping.mapped		
SwcServiceDependency exists.	full	
Shall be set to FALSE if the reference DiagnosticServiceSwMapping.mapped	luli	
BswServiceDependency exists.		
Mapping Status Mapping ID		
valid		

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDs	pVehInfo	
BSW Parameter		BSW Type	
DcmDspVehInfoInf	оТуре	EcucIntegerParamDe	ef
BSW Description			
value of InfoType.			
Within each DcmC	onfigSet all DcmDspVehInfoInfoType va	alues shall be unique.	
Template Descrip	tion		
ObdInfoServiceNeeds.infoType:			
The InfoType according to ISO 15031-5			
DiagnosticInfoType.id:			
This attribute represents the value of InfoType (see SAE J1979-DA).			
M2 Parameter			
CommonStructure::ServiceNeeds::ObdInfoServiceNeeds.infoType,			
DiagnosticExtract::CommonDiagnostics::DiagnosticInfoType.id			
11 0 11			Mapping Type
If DiagnosticRequestVehicleInfo, us DiagnosticRequestVehicleInfo.infoType.id. full			full
Mapping Status Mapping ID			Mapping ID
valid			up_Dcm_00029

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp		
BSW Parameter BSW Type			
DcmResponseToE	cuReset	EcucEnumerationPar	amDef
<b>BSW Description</b>			
Defines the answe	r to EcuReset service should come: Be	fore or after the reset.	
Template Description			
This attribute defines whether the response to the EcuReset service shall be transmitted before or			
after the actual reset.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::EcuReset::DiagnosticEcuResetClass.respondToReset			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full			full
Mapping Status Mapping IE		Mapping ID	
valid			up_Dcm_00244

|--|



Dcm	Dcm/DcmConfigSet/DcmDsp/DcmResponseToEcuReset		
BSW Parameter		BSW Type	
AFTER_RESET	AFTER_RESET EcucEnumerationLiteralDef		eralDef
BSW Description			
Answer to EcuRes	et service should come after the reset.		
Template Descrip	Template Description		
Answer to EcuReset service should come after the reset.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::EcuReset::DiagnosticResponseToEcuReset			
Enum.respondAfterReset			
Mapping Rule Mapping Ty			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping I		Mapping ID	
valid up_Dcm_00			up_Dcm_00245

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmResponseToEcuReset		
BSW Parameter	neter BSW Type		
BEFORE_RESET		EcucEnumerationLite	ralDef
<b>BSW Description</b>			
Answer to EcuRes	et service should come before the reset		
Template Descrip	tion		
Answer to EcuReset service should come before the reset.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::EcuReset::DiagnosticResponseToEcuReset			
Enum.respondBeforeReset			
Mapping Rule Mapping Type			
1:1 mapping full			
Mapping Status Mapping ID			Mapping ID
valid up_Dcm_00246			up_Dcm_00246

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions	
BSW Parameter	SW Parameter BSW Type	
DcmModeCondition EcucParamConfContainerDef		
BSW Description		

This container contains the configuration of a mode condition or an environmental conditions which can be used as argument in DcmModeRules.

One DcmModeCondition shall contain either one DcmSwcModeRef or one DcmBswModeRef or one DcmSwcSRDataElementRef.

Please note that the Dcm acts as well as mode manager. Therefore the references Dcm-SwcModeRef or one DcmBswModeRef.

might point to provided ModeDeclarationGroupPrototypes of the Dcm itself as well as to provided ModeDeclarationGroupPrototypes of other Bsw Modules or software components.

In case of a configured DcmSwcModeRef or DcmBswModeRef only the DcmConditionType DCM\_EQUALS or DCM\_EQUALS\_NOT are applicable.

In case of DcmSwcSRDataElementRef all literals of DcmConditionType are possible.

# **Template Description**



DiagnosticCompareConditions are atomic conditions. They are based on the idea of a comparison at runtime of some variable data with something constant. The type of the comparison (==, !=, <, <=, ...) is specified in DiagnosticCompareCondition.compareType.

### M2 Parameter

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvCompareCondition

Mapping Rule	Mapping Type
Depending on the reference a DcmModeCondition is mapped to a Diagnostic EnvModeCondition if only one reference is present and reference is a DcmSwc ModeRef or a DcmBswModeRef. If two references are present, a DcmSwc	full
SRDataElementRef and a DcmSwcSRDataElementValueRef, then DcmMode Condition is mapped to a DiagnosticEnvDataCondition.	
Mapping Status	Mapping ID
valid	up_Dcm_00271

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition	
BSW Parameter		BSW Type
DcmBswModeRef		EcucInstanceReferenceDef
BSW Description		

This parameter references a mode of a ModeDeclarationGroupPrototype provided by a Basic Software Module used for the condition.

Please note that such ModeDeclarationGroupPrototype are owned by a Basic Software Module Description in the role providedModeGroup.

### **Template Description**

This reference represents both the ModeDeclarationGroupPrototype and the ModeDeclaration relevant for the mode comparison.

### **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvModeCondition.modeElement

Mapping Rule	Mapping Type
For DcmModeRef a new DiagnosticEnvBswModeElement is used, pointing to the ModeDeclaration via ModeInModuleDescriptionInstanceRef. This new DiagnosticEnvModeElement shall be aggregated by the same DiagnosticEnvironmentalConfition as the DiagnosticEnvModeCondition, in which the target of the reference DiagnosticEnvModeCondition.modeElement points to the this DiagnosticEnvModeElement.	full
Mapping Status	Mapping ID
valid	up_Dcm_00273

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmConditionType	
BSW Parameter	BSW Type	
DCM_EQUALS	EcucEnumerationLiteralDef	
BSW Description		
Template Description		



### DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

# DiagnosticCompareTypeEnum.isEqual:

equal

### **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFormula.op.

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticCompareType Enum.isEqual

Mapping RuleMapping Type1:1 mappingfullMapping StatusMapping IDvalidup Dcm 00265

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/Dcm	
Dom	ConditionType	
BSW Parameter BSW Type		
DCM_EQUALS_NOT EcucEnumerationLiteralDef		EcucEnumerationLiteralDef
BSW Description		

### **Template Description**

### DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

# DiagnosticCompareTypeEnum.isNotEqual:

not equal

### **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFormula.op.

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticCompareType Enum.isNotEqual

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00266

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmConditionType	
BSW Parameter	1	
DCM_GREATER_	OR_EQUAL EcucEnumerationLiteralDef	
BSW Description		
Template Description		



# DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

# DiagnosticCompareTypeEnum.isGreaterOrEqual:

greater than or equal

### M2 Parameter

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFormula.op,

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticCompareType Enum.isGreaterOrEqual

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up Dcm 00269

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmConditionType	
BSW Parameter		
DCM_GREATER_THAN EcucEnumerationLiteralDef		EcucEnumerationLiteralDef
BSW Description		

### **Template Description**

### DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

# DiagnosticCompareTypeEnum.isGreaterThan:

greater than

### **M2** Parameter

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFormula.op,

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticCompareType Enum.isGreaterThan

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00267

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmConditionType		
BSW Parameter	BSW Type		
DCM_LESS_OR_E	EQUAL EcucEnumerationLiteralDef		
BSW Description			
Template Description			



# DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

# DiagnosticCompareTypeEnum.isLessOrEqual:

less than or equal

### **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFormula.op,

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticCompareType

Enum.isLessOrEqual

Mapping Rule	Mapping Type
	full
Mapping Status	Mapping ID
valid	up_Dcm_00270

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/Dcm	
DCIII	ConditionType	
BSW Parameter BSW Type		BSW Type
DCM_LESS_THAN EcucEnumerationL		EcucEnumerationLiteralDef
BSW Description		

### **Template Description**

### DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

# DiagnosticCompareTypeEnum.isLessThan:

less than

# **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFormula.op,

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticCompareType Enum.isLessThan

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00268

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition	
BSW Parameter		BSW Type
DcmSwcModeRef		EcucInstanceReferenceDef
BSW Description		
This parameter references a mode in a particular mode request port of a software component that		
is used for the condition.		
Template Description		
This reference represents both the ModeDeclarationGroupPrototype and the ModeDeclaration rele-		
vant for the mode comparison.		
M2 Parameter		



DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvModeCondi-		
tion.modeElement		
Mapping Rule	Mapping Type	
For DcmModeRef a new DiagnosticEnvSwcModeElement is used, pointing to the ModeDeclaration via PModeInSystemInstanceRef. This new Diagnostic EnvModeElement shall be aggregated by the same DiagnosticEnvironmental Confition as the DiagnosticEnvModeCondition, in which the target of the reference DiagnosticEnvModeCondition.modeElement points to the this Diagnostic EnvModeElement.	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00272	

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition		
BSW Parameter		BSW Type	
DcmSwcSRDataEl	ementRef	EcucChoiceReferenc	eDef
BSW Description			
Reference to enviro	onmental conditions.		
It is possible to refe	erence a S/R Receiver-Port to read phy	sical values and comp	are (equal, greater,
less,)			
them with a configu	ured value that is defined by DcmSwcSl	RDataElementValueRe	ef.
Template Descrip	tion		
This reference represents the related diagnostic data element.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvDataCondi-			
tion.dataElement			
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status Mapping		Mapping ID	
valid			up_Dcm_00274

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition		
BSW Parameter		BSW Type	
DcmSwcSRDataEl	ementValueRef	EcucForeignReference	ceDef
BSW Description			
Reference to a con	stant specification defining the compar	e value for environmen	tal condition.
Template Descrip	tion		
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvDataCondi-			
tion.compareValue			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status		Mapping ID	
valid			up_Dcm_00275

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingC	Conditions
BSW Parameter BSW Type		
DcmModeRule		EcucParamConfContainerDef



# **BSW Description**

This container contains the configuration of a mode rule which represents a logical expression with DcmModeConditions or other DcmModeRules as arguments.

All arguments are processed with the operator defined by DcmLogicalOperator, for instance: Argument\_A AND Argument\_B AND Argument\_C

### **Template Description**

A DiagnosticEnvConditionFormula embodies the computation instruction that is to be evaluated at runtime to determine if the DiagnosticEnvironmentalCondition is currently present (i.e. the formula is evaluated to true) or not (otherwise). The formula itself consists of parts which are combined by the logical operations specified by DiagnosticEnvConditionFormula.op.

If a diagnostic functionality cannot be executed because an environmental condition fails then the diagnostic stack shall send a negative response code (NRC) back to the client. The value of the NRC is directly related to the specific formula and is therefore formalized in the attribute DiagnosticEnvConditionFormula.nrcValue.

### **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvCondition Formula

Mapping Rule	Mapping Type
A DcmModeRule is mapped to a DiagnosticEnvConditionFormula, if this Dcm ModeRule is a subrule, i.e. it is referenced by a DcmArgumentRef. In addition, a new DiagnosticEnvironmentalCondition shall be created with Diagnostic EnvironmentalCondition.formula containing a DiagnosticEnvConditionFormula. In both cases, if no DcmLogicalOperator is present in this DcmModeRule, then DiagnosticEnvConditionFormula shall be set to DiagnosticLogicalOperatorEnum.logicalAnd.	full
Mapping Status	Mapping ID
valid	up_Dcm_00259

BSW Module	BSW Context		
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeRule		
BSW Parameter		BSW Type	
DcmArgumentRef		EcucChoiceReference	eDef
BSW Description			
This is a choice re	eference either to a mode condition o	r a an other mode ru	le serving as sub-
expression.			
Template Descrip	tion		
A DiagnosticEnvCo	onditionFormulaPart can either be a atc	mic condition, e.g. a D	DiagnosticEnvCom-
pareCondition, or a	a DiagnosticEnvConditionFormula, agai	n, which allows arbitrar	y nesting.
M2 Parameter	M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvCondition			EnvCondition
FormulaPart			
Mapping Rule			Mapping Type
	destination, one DcmArgumentRef is ma		
EnvConditionFormula if "destination" is a DcmModeRule, and to a Diagnostic			
EnvCompareCondition, if "destination" is a DcmModeCondition. The order of			full
the aggregation of the DiagnosticEnvConditionFormulaParts shall correspond			
to the ordering of the index of the DcmArgumentRefs.			
Mapping Status M			Mapping ID
valid			up_Dcm_00264



BSW Module	BSW Context			
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeRule/DcmLogical			
DCIII	Operator			
BSW Parameter	V Parameter BSW Type			
DCM_AND		EcucEnumerationLite	eralDef	
<b>BSW Description</b>				
Template Descrip	tion			
DiagnosticEnvCo	nditionFormula.op:			
This attribute repre	esents the concrete operator (support	ted operators: and, o	r) of the condition	
formula.				
	DiagnosticLogicalOperatorEnum.logicalAnd:			
Logical AND				
M2 Parameter				
	DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFor-			
mula.op,				
DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticLogicalOperator				
Enum.logicalAnd				
Mapping Rule			Mapping Type	
1:1 mapping			full	
Mapping Status			Mapping ID	
valid			up_Dcm_00261	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeRule/DcmLogical	
Dom	Operator	
BSW Parameter	er BSW Type	
DCM_OR	DCM_OR EcucEnumerationLiteralDef	
BSW Description		

# **Template Description**

# DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

# DiagnosticLogicalOperatorEnum.logicalOr:

Logical OR

### M2 Parameter

 $\label{lem:decomposition} Diagnostic Extract:: Dcm:: Diagnostic Service:: Environmental Condition:: Diagnostic Env Condition Formula.op,$ 

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticLogicalOperator Enum.logicalOr

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00262

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeRule	
BSW Parameter		BSW Type
DcmModeRuleNrcValue		EcucIntegerParamDef



BSW Description		
Optional parameter which defines the NRC to be sent in case the mode rule con-	dition is not valid.	
Template Description		
This attribute represents the concrete NRC value that shall be returned if the con-	dition fails.	
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvCondition		
Formula.nrcValue		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00263	

DOW Mardada	DOW O		
BSW Module	BSW Context		
Dcm	Dcm/DcmGeneral		
BSW Parameter		BSW Type	
DcmDDDIDStorage	9	EcucBooleanParamD	)ef
<b>BSW Description</b>			
This configuration s	switch defines, whether DDDID definitio	n is stored non-volatile	or not.
true: DDDID are st	ored non-volatile		
false: DDDID are o	only maintained volatile		
Template Description			
This configuration s	This configuration switch defines whether DDDID definition is handled as non-volatile information or		
not.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::DynamicallyDefineDataIdentifier::DiagnosticDynami-			
callyDefineDataIdentifierClass.configurationHandling			
Mapping Rule Mapping Type			Mapping Type
volatile -> false, nonVolatile -> true full		full	
Mapping Status Mapping ID			Mapping ID
valid			up_Dcm_00253

BSW Module	BSW Context		
Dcm	Dcm/DcmGeneral		
BSW Parameter		BSW Type	
DcmRespondAllRe	quest	EcucBooleanParamD	)ef
<b>BSW Description</b>			
	Dcm will not respond to diagnostic req		rvice ID which is in
the range from 0x4	0 to 0x7F or in the range from 0xC0 to	0xFF (Response IDs).	
Template Descrip	tion		
	If set to FALSE the DCM will not respond to diagnostic request that contains a service ID which is in		
the range from 0x40 to 0x7F or in the range from 0xC0 to 0xFF (Response IDs).			
M2 Parameter			
0	DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.responseOnAllRequest		
Sids			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping ID			Mapping ID
valid			up_Dcm_00249

BSW Module	BSW Context



Dcm	Dcm/DcmGeneral			
BSW Parameter BSW Type				
DcmVinRef		EcucReferenceDef		
BSW Description				
Reference to the D	id containing the VIN Information.			
	needed for function Dcm_GetVin			
_	Template Description			
This meta-class represents the ability to model a diagnostic data identifier (DID) that is fully specified				
regarding the payload at configuration-time.				
M2 Parameter				
DiagnosticExtract::CommonDiagnostics::DiagnosticDataIdentifier				
Mapping Rule		Mapping Type		
This reference shall only apply to a DiagnosticDataIdentifier where the attribute		full		
representsVin is set to true.		luli		
Mapping Status N			Mapping ID	
valid		up_Dcm_00248		

# E.3 Dem

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDTC		
BSW Parameter		BSW Type	
DemDTCFunctiona	ılUnit	EcucIntegerParamDe	ef
<b>BSW Description</b>			
DTCFuncitonalUnit	is a 1-byte value which identifies th	e corresponding basic	c vehicle / system
function which repo	orts the DTC. This parameter is necessa	ary for the report of sev	verity information.
•	s configured for no DTC, the Dem p	rovides no DTC funct	ional unit informa-
tion.			
Template Description			
	ifies a 1-byte value which identifies th	ne corresponding basi	c vehicle / system
	function which reports the DTC. This parameter		
is necessary for the report of severity information.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeUds.functionalUnit			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping ID			Mapping ID
valid			up_Dem_00081

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC	
BSW Parameter		BSW Type
DemDTCSeverity		EcucEnumerationParamDef
BSW Description		
DTC severity according to ISO 14229-1. This parameter depends on the automotive manufacturer.		
If it is not configured, the value is counted as 'no severity'.		
If this parameter is configured for no DTC, the Dem provides no DTC severity information.		
Template Description		



DTC severity according to ISO 14229-1.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeUds.severity		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dem_00082	

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDTC		
BSW Parameter		BSW Type	
DemWWHOBDDT	CClass	EcucEnumerationPar	amDef
<b>BSW Description</b>			
DTC Class accord	ing to ISO 14229-1 [2013 version]. Th	is parameter depends	on the automotive
manufacturer.			
If it is not configure	ed, the value is marked as 'unclassifie	d'. If this parameter is	s configured for no
DTC, the Dem provides no DTC WWHOBD class information.			
Template Description			
DTC severity according to ISO 14229-1.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeUds.severity			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mappi		Mapping ID	
valid			up_Dem_00083

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDTCAttributes		
BSW Parameter		BSW Type	
DemAgingAllowed		EcucBooleanParamD	)ef
BSW Description			
Switch to allow agii	ng/unlearning of the event or not.		
true: aging allowed			
0 0	false: aging not allowed		
	Template Description		
•	e decision whether aging is allowed for t	this DiagnosticEvent.	
M2 Parameter	M2 Parameter		
DiagnosticExtract::	DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent.agingAllowed		
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping II		Mapping ID	
valid			up_Dem_00069

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDTCAttributes		
BSW Parameter	BSW Type		
DemAgingCycleCo	CounterThreshold EcucIntegerParamDef		
BSW Description			
Number of aging cycles needed to unlearn/delete the event.			



Template Description	
Number of aging cycles needed to unlearn/delete the event.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticAging::DiagnosticAging.threshold	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dem_00072

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDTCAttributes		
BSW Parameter		BSW Type	
DemAgingCycleRe	f	EcucReferenceDef	
<b>BSW Description</b>			
Reference to the cy	ycle which is triggering the aging of the	event.	
Template Description			
This represents the applicable aging cycle.			
M2 Parameter	M2 Parameter		
DiagnosticExtract::	Dem::DiagnosticAging::DiagnosticAging	g.agingCycle	
Mapping Rule Mappin		Mapping Type	
1:1 mapping		full	
Mapping Status		Mapping ID	
valid		up_Dem_00073	

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDTCAttributes		
BSW Parameter		BSW Type	
DemDTCPriority		EcucIntegerParamDe	ef
<b>BSW Description</b>			
Priority of the even	t/dtc, in view of full event memory. A lov	ver value means highe	r priority.
Template Descrip	Template Description		
Priority of the even	Priority of the event, in view of full event buffer. A lower value means higher priority.		
M2 Parameter			
DiagnosticExtract::	:Dem::DiagnosticTroubleCode::Diagnos	ticTroubleCodeProps.p	riority
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping II		Mapping ID	
valid			up_Dem_00099

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTCAttributes	
BSW Parameter		BSW Type
DemDTCSignificar	nce	EcucEnumerationParamDef
<b>BSW Description</b>		
Significance of the event, which indicates additional information concerning fault classification and resolution.		
It can be mapped as Dem-internal data element. It shall be configured, if it is a part of event related data.		
Template Description		



Significance of the event, which indicates additional information concerning fau resolution.	It classification and
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeProps.s	ignificance
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dem_00091

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDTCAttributes/DemDTCSignificance		се
BSW Parameter		BSW Type	
DEM_EVENT_SIG	NIFICANCE_OCCURRENCE	EcucEnumerationLite	eralDef
BSW Description			
issue, which indica	tes additional information concerning ir	sufficient system beha	vior
Template Descrip	Template Description		
Issue, which indicates additional information concerning insufficient system behavior.			vior.
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticTroubleCode::Diagnos	ticSignificanceEnum.od	ccurence
Mapping Rule Mapping Ty			Mapping Type
1:1 mapping		full	
Mapping Status		Mapping ID	
valid		up_Dem_00042	

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDTCAttributes		
BSW Parameter		BSW Type	
DemMaxNumberFr	eezeFrameRecords	EcucIntegerParamDe	ef
<b>BSW Description</b>			
This parameter def	ines the number of according freeze fra	me records, which can	maximal be stored
for this event. Ther	efore all these freeze frame records have	ve the same freeze frai	me class.
	only required for calculated record i	numeration (refer to I	DemTypeOfFreeze-
FrameRecordNume	,		
Template Description			
	es the number of according freeze fran		
for this event. Ther	efore all these freeze frame records have	ve the same freeze frai	me class.
M2 Parameter	M2 Parameter		
DiagnosticExtract::	DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeProps.maxNumberFreeze		
FrameRecords			
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dem_00106

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTCAttributes	
BSW Parameter BSW Type		
DemMemoryDestinationRef EcucChoiceReferenceDef		
BSW Description		



The event destination assigns events to none, one or two origins. If no event destination is assigned to a specific event, the event is handled internally and is not visible externally to the Dcm. If more than one event destination is assigned to a specific event, the event can be present in the corresponding origins.

origins.	
Template Description	
The event destination assigns events to none, one or multiple origins.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeProps.n	nemoryDestination
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dem_00088

DOW Mandada	DOW O I I		
BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass		
BSW Parameter	BSW Parameter BSW Type		
DemCounterBased	dFdcThresholdStorageValue	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Threshold to alloca	ate an event memory entry and to captu	ire the Freeze Frame.	
Template Descrip	tion		
Threshold to allocate an event memory entry and to capture the Freeze Frame.			
M2 Parameter			
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterBasedFdcThreshold			
StorageValue			
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status Mapping		Mapping ID	
valid			up Dem 00097

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass		
BSW Parameter	BSW Parameter BSW Type		
DemDebounceBeh	DemDebounceBehavior EcucEnumerationParamDef		amDef
BSW Description	BSW Description		
	This parameter defines how the event debounce algorithm will behave, if a related enable condition		
is not fulfilled or Co	is not fulfilled or ControlDTCSetting of the related event is disabled.		
Template Descrip	Template Description		
This attribute defines how the event debounce algorithm will behave, if a related enable condition is			
not fulfilled or ControlDTCSetting of the related event is disabled.			
M2 Parameter	M2 Parameter		
DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm::DiagnosticDebounceAlgorithm			
Props.debounceBehavior			
Mapping Rule		Mapping Type	
1:1 mapping			full
Mapping Status		Mapping ID	
valid			up_Dem_00101

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass/DemDebounceBehavior



BSW Parameter	BSW Type	
DEM_DEBOUNCE_FREEZE	EcucEnumerationLiteralDef	
RSW Description		

The event debounce counter will be frozen with the current value and will not change while a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. After all related enable conditions are fulfilled and ControlDTCSetting of the related event is enabled again, the event qualification will continue with the next report of the event (i.e. SetEventStatus).

### **Template Description**

The event debounce counter will be frozen with the current value and will not change while a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. After all related enable conditions are fulfilled and ControlDTCSetting of the related event is enabled again, the event qualification will continue with the next report of the event (i.e. SetEventStatus).

### M2 Parameter

DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm::DiagnosticDebounceBehavior Enum.freeze

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dem_00066

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass/DemDebounceBehavior	
BSW Parameter	101	BSW Type
DEM_DEBOUNCE	E_RESET	EcucEnumerationLiteralDef
BSW Description		
The event debounce counter will be reset to initial value if a related enable condition is not fulfilled		
or ControlDTCSetting of the related event is disabled. The qualification of the event will be restarted		
with the next valid event report.		
Template Description		
The event debounce counter will be reset to initial value if a related enable condition is not fulfilled or		
ControlDTCSetting of the related event is disabled. The qualification of the event will be restarted		
with the next valid event report.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm::DiagnosticDebounceBehavior		
Fnum reset		

Lituiniteset	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dem_00068

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass		
BSW Parameter	arameter BSW Type		
DemDebounceCou	emDebounceCounterDecrementStepSize		
BSW Description			
Defines the step size for decrementation of the internal debounce counter (PREPASSED).			
Template Description			
This value shall be taken to decrement the internal debounce counter.			
M2 Parameter			
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterDecrementStepSize			
Mapping Rule Mapping Type			Mapping Type



1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dem_00028

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass		
BSW Parameter		BSW Type	
DemDebounceCou	ınterFailedThreshold	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Defines the value of	of the internal debounce counter, which	indicates the failed sta	tus.
Template Descrip	Template Description		
This value defines	This value defines the event-specific limit that indicates the "failed" counter status.		
M2 Parameter			
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterFailedThreshold			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping II		Mapping ID	
valid		up_Dem_00015	

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass		
BSW Parameter		BSW Type	
DemDebounceCou	ınterIncrementStepSize	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Defines the step si	ze for incrementation of the internal deb	oounce counter (PREFA	AILED).
Template Descrip	tion		
This value shall be	This value shall be taken to increment the internal debounce counter.		
M2 Parameter			
CommonStructure	CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterIncrementStepSize		
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dem_00016

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass		
BSW Parameter		BSW Type	
DemDebounceCou	ınterJumpDown	EcucBooleanParamD	)ef
<b>BSW Description</b>			
Switch for the activ	ation of Jump-Down.		
true: Jump-Down a			
false: Jump-Down deactivated			
Template Description			
This value activates or deactivates the counter jump-down behavior.			
M2 Parameter			
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterJumpDown			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping	I:1 mapping full		full
Mapping Status Mapping ID			Mapping ID



valid	up_Dem_00018
valid	up_Dem_00018

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass		
BSW Parameter		BSW Type	
DemDebounceCou	ınterJumpDownValue	EcucIntegerParamDe	ef
BSW Description			
Jump-Down value	of the internal debounce counter whi	ch is taken as initializ	ation value for the
counter when the r	espective step-down occurs.		
Template Descrip	tion		
This value represe	This value represents the initial value of the internal debounce counter if the counting direction		
changes from incrementing to decrementing.			
M2 Parameter			
CommonStructure:	CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterJumpDownValue		
Mapping Rule	Mapping Rule Mapping Type		Mapping Type
	full		
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid			up_Dem_00017

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass		
BSW Parameter		BSW Type	
DemDebounceCou	ınterJumpUp	EcucBooleanParamD	)ef
BSW Description			
Switch for the activ	ation of Jump-Up.		
true: Jump-Up acti			
false: Jump-Up dea			
•	Template Description		
This value activates	s or deactivates the counter jump-up be	havior.	
M2 Parameter			
CommonStructure:	CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterJumpUp		
Mapping Rule Mapping Type			
1:1 mapping	1:1 mapping full		full
Mapping Status Mapping ID			Mapping ID
valid up_Dem_00		up_Dem_00019	

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass		
BSW Parameter		BSW Type	
DemDebounceCou	ınterJumpUpValue	EcucIntegerParamDe	f
<b>BSW Description</b>			
Jump-Up value of t	he internal debounce counter which is t	aken as initialization va	alue for the counter
when the respectiv	when the respective step-up occurs.		
Template Description			
This value represents the initial value of the internal debounce counter if the counting direction			
changes from decrementing to incrementing.			
M2 Parameter			
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterJumpUpValue			
Mapping Rule	e Mapping Type		



1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dem_00020

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass		
BSW Parameter		BSW Type	
DemDebounceCou	interPassedThreshold	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Defines the value of	of the internal debounce counter, which	indicates the passed s	tatus.
Template Descrip	Template Description		
This value defines the event-specific limit that indicates the "passed" counter status.			tus.
M2 Parameter			
CommonStructure:	CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterPassedThreshold		
Mapping Rule Mapping T		Mapping Type	
1:1 mapping		full	
Mapping Status		Mapping ID	
valid		up_Dem_00021	

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass		
BSW Parameter		BSW Type	
DemDebounceCou	nterStorage	EcucBooleanParamD	)ef
<b>BSW Description</b>			
Switch to store the	debounce counter value non-volatile or	not.	
true: debounce cou	ınter value shall be stored non-volatile		
false: debounce co	unter value is volatile		
Template Description			
Switch to store the debounce counter value non-volatile or not.			
true: debounce counter value shall be stored non-volatile			
false: debounce co	unter value is volatile		
M2 Parameter	M2 Parameter		
DiagnosticExtract::	Dem::DiagnosticDebouncingAlgorithm::	:DiagnosticDebounceA	lgorithm
Props.debounceCounterStorage			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping			full
Mapping Status Mapping ID		Mapping ID	
valid			up_Dem_00108

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceT	imeBaseClass
BSW Parameter		BSW Type
DemDebounceBeh	avior	EcucEnumerationParamDef
BSW Description		
This parameter defines how the event debounce algorithm will behave, if a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled.		
Template Description		
This attribute defines how the event debounce algorithm will behave, if a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled.		

Mapping ID

up\_Dem\_00065



M2 Parameter	
DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm::DiagnosticDebounceA	Algorithm
Props.debounceBehavior	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dem_00100

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceT	imeBaseClass/DemDe	bounceBehavior
BSW Parameter		BSW Type	
DEM_DEBOUNCE	_FREEZE	EcucEnumerationLite	eralDef
BSW Description			
enable condition is enable conditions a	ce timer will be frozen with the current not fulfilled or ControlDTCSetting of the are fulfilled and ControlDTCSetting of the notinue with the next report of the event tion	e related event is disabl e related event is enabl	ed. After all related
enable condition is enable conditions a	ce counter will be frozen with the curren not fulfilled or ControIDTCSetting of the are fulfilled and ControIDTCSetting of the ntinue with the next report of the event	e related event is disabl e related event is enabl	ed. After all related
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticDebouncingAlgorithm:	:DiagnosticDebounceE	Behavior
Enum.freeze			
Mapping Rule			Mapping Type
1:1 mapping			full

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceTimeBaseClass/DemDebounceBehavior	
BSW Parameter		BSW Type
DEM DEBOUNCE RESET		EcucEnumerationLiteralDef

## **BSW Description**

**Mapping Status** 

valid

The event debounce timer will be reset to initial value if a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled.

The qualification of the event will be restarted with the next valid event report.

# **Template Description**

The event debounce counter will be reset to initial value if a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. The qualification of the event will be restarted with the next valid event report.

## **M2 Parameter**

DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm::DiagnosticDebounceBehavior Enum.reset

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dem_00067

BSW Module BSW Context
------------------------



Dem	m Dem/DemConfigSet/DemDebounceTimeBaseClass		
BSW Parameter BSW Type			
DemDebounceTim	neFailedThreshold	EcucFloatParamDef	
BSW Description			
Defines the time o	ut duration for "Event Failed" qualificatio	n.	
value in seconds. format for the use  Template Descrip  This value represe	onfiguration standard is to use SI unit Dem configuration tools must convert in the software implementation of Dem. otion ents the event-specific delay indicating the	this float value to the	
M2 Parameter			
CommonStructure	::ServiceNeeds::DiagEventDebounceTi	meBased.timeFailedTh	reshold
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dem_00118

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceTimeBaseClass		
BSW Parameter		BSW Type	
DemDebounceTim	ePassedThreshold	EcucFloatParamDef	
BSW Description			
Defines the time or	ut duration for "Event Passed" qualificat	ion.	
value in seconds.	onfiguration standard is to use SI unit Dem configuration tools must convert In the software implementation of Dem.	•	
•	nts the event-specific delay indicating the	ne "passed" status.	
M2 Parameter	<u> </u>		
CommonStructure:	:ServiceNeeds::DiagEventDebounceTi	meBased.timePassedT	hreshold
Mapping Rule Mapping Type			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dem_00119

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDebounceTimeBaseClass		
BSW Parameter		BSW Type	
DemTimeBasedFd	cThresholdStorageValue	EcucFloatParamDef	
<b>BSW Description</b>			
Threshold to alloca	te an event memory entry and to captu	re the Freeze Frame.	
Template Descript	tion		
Threshold to allocate an event memory entry and to capture the Freeze Frame.			
M2 Parameter			
CommonStructure:	:ServiceNeeds::DiagEventDebounceTi	meBased.timeBasedFo	dcThresholdStor-
ageValue			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dem_00098



BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDtrs/DemDtr		
BSW Parameter	SW Parameter BSW Type		
DemDtrEventRef		EcucReferenceDef	
BSW Description			
	DemEventParameter this DTR is related		t is not configured,
the Dem cannot en	the Dem cannot ensure consistency between the DTR and the event.		
Template Descrip	tion		
This attribute represents the diagnostic event that is related to the diagnostic test result.			
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticTestResult::Diagnostic	TestResult.event	
Mapping Rule			Mapping Type
1:1 mapping	1:1 mapping full		full
Mapping Status			Mapping ID
valid			

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDtrs/DemDtr		
BSW Parameter		BSW Type	
DemDtrld		EcucIntegerParamDe	ef
<b>BSW Description</b>			
The index identifier	value assigned to this DTR. The value	is generated during the	Dem configuration
process.			
Template Descrip			
This represents the numerical id associated with the diagnostic test identifier.			
M2 Parameter			
	Dem::DiagnosticTestResult::Diagnostic	TestIdentifier.id	
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDtrs/DemDtr		
BSW Parameter		BSW Type	
DemDtrMid		EcucIntegerParamDe	ef
BSW Description			
The OBDMID of the	e DTR.		
Template Descript This represents the	x20, 0x40, 0x60, 0x80, 0xA0, 0xC0, 0x tion numerical measurement Id	E0 are reserved.	
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticTestResult::Diagnostic	MeasurementIdentifier.	.obdMid
Mapping Rule	Mapping Rule Mapping Type		
1:1 mapping			full
Mapping Status			Mapping ID
valid			

BSW Module	BSW Context



Dem	Dem/DemConfigSet/DemDtrs/DemDtr		
BSW Parameter BSW Type			
DemDtrTid	DemDtrTid EcucIntegerParamDef		f
BSW Description			
The OBDTID of the	DTR.		
Template Descrip	Template Description		
This represents the numerical id associated with the diagnostic test identifier.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticTestResult::DiagnosticTestIdentifier.id			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDtrs/DemDtr		
BSW Parameter		BSW Type	
DemDtrUasid		EcucIntegerParamDe	ef
BSW Description			
The UaSId the DTF	R data shall be scaled to, and reported	together with the resca	led DTR data.
Template Description			
This represents the unit and scaling ld of the diagnostic test result.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticTestResult::DiagnosticTestIdentifier.uasId			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status			Mapping ID
valid			

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDtrs/DemDtr		
BSW Parameter BSW Type			
DemDtrUpdateKind	d	EcucEnumerationPar	amDef
BSW Description			
	applied by the Dem to reports of DTR va		
configured. If no re	configured. If no related Event is configured, the Dem behaves as if DemDtrUpdateKind is configured		
to "DEM_DTR_UP	to "DEM_DTR_UPDATE_ALWAYS".		
Template Description			
This attribute controls the update behavior of the enclosing DiagnosticTestResult.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticTestResult::DiagnosticTestResult.updateKind			
Mapping Rule Mapping Type			
1:1 mapping			full
Mapping Status			Mapping ID
valid			

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDtrs/DemDtr/DemDtrUpdateKind	
BSW Parameter		BSW Type
DEM_DTR_UPDATE_ALWAYS		EcucEnumerationLiteralDef



BSW Description	
Any DTR result reported by the monitor is used by the Dem.	
Template Description	
Any DTR result reported by the monitor is used by the Dem.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticTestResult::DiagnosticTestResultUpdateEnur	n.always
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemDtrs/DemDtr/DemDtrUpdateKind		
BSW Parameter	BSW Parameter BSW Type		
DEM_DTR_UPDA	TE_STEADY	EcucEnumerationLite	eralDef
BSW Description			
The Dem accepts	reported DTRs only when the configure	d debouncing mechan	ism is stable at the
FAIL or PASS limit.			
Template Description			
The Dem accepts reported DTRs only when the configured debouncing mechanism is stable at the			
FAIL or PASS limit.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticTestResult::DiagnosticTestResultUpdateEnum.steady			
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemEventParameter/DemCallbackClearEventAllowed		
BSW Parameter		BSW Type	
DemCallbackClear	EventAllowedFnc	EcucFunctionNameD	ef
<b>BSW Description</b>			
Function name of p	prototype "ClearEventAllowed".		
Template Description			
This attribute defines whether the Dem has access to a "ClearEventAllowed" callback.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent.eventClearAllowed			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dem_00074

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemCallbackClearEventAllowed	
BSW Parameter BSW Type		BSW Type
DemClearEventAllowedBehavior EcucEnumerationParamDef		EcucEnumerationParamDef
BSW Description		
Defines the resulting UDS status byte for the related event, which must not be cleared according to		
the ClearEventAllowed callback.		



Template Description	
This attribute defines the resulting UDS status byte for the related event, which s	shall not be cleared
according to the ClearEventAllowed callback.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent.clearEventBehavior	
Mapping Rule	Mapping Type
1:1 mapping full	
Mapping Status Mapping ID	
valid	up_Dem_00094

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemEventParameter/DemCallbackClearEventAllowed/ DemClearEventAllowedBehavior		
BSW Parameter		BSW Type	
DEM_ONLY_THIS	_CYCLE_AND_READINESS	EcucEnumerationLite	eralDef
BSW Description			
The <>ThisOpera	The <>ThisOperationCycle and readiness bits of the UDS status byte are reset.		
Template Description			
The OperationCycle and readiness bits of the event status byte are reset.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticClearEventBehaviorEnum.onlyThisCycleAnd			
Readiness			
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status Mapping		Mapping ID	
valid			up_Dem_00050

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemEventParameter		
BSW Parameter BSW Type			
DemDebounceAlgo	DemDebounceAlgorithmClass		rDef
<b>BSW Description</b>			
Debounce algorithm	m class: counter based, time based, or	monitor internal.	
Template Descrip	tion		
This class represents the ability to specify the pre-debounce algorithm which is selected and/or required by the particular monitor.  This class inherits from Identifiable in order to allow further documentation of the expected or implemented debouncing and to use the category for the identification of the expected / implemented debouncing.  M2 Parameter			
CommonStructure::ServiceNeeds::DiagEventDebounceAlgorithm			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dem_00022

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemEventParameter/DemDebounceAlgorithmClass
BSW Parameter	BSW Type

EcucParamConfContainerDef



DemDebounceCounterBased

BSW Description		
This container contains the configuration (parameters) for counter based debour	ncing.	
Template Description		
This meta-class represents the ability to indicate that the counter-based debou	nce algorithm shall	
be used by the DEM for this diagnostic monitor.		
This is related to set the ECUC choice container DemDebounceAlgorithm bounceCounterBased.  M2 Parameter  CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased	Class to DemDe-	
Mapping Rule	Mapping Type	
There are two ways to derive the existence of DemDebounceCounterBased:		
<ol> <li>DiagEventNeeds,diagEventDebounceAlgoritm exists and is modeled as a DiagEventDebounceCounterBased.</li> <li>DiagnosticContributionSet.commonProperties.debounceAlgorithm Props.debounceAlgorithm exists and is modeled as a DiagEventDebounce CounterBased</li> </ol>	full	
If both alternatives exist at the same time then the definition of DiagnosticContributionSet.commonProperties.debounceAlgorithmProps.debounce Algorithm shall be handled with priority.		
Mapping Status	Mapping ID	
valid	up Dem 00014	

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemDebounceAlgorithmClass	
BSW Parameter BSW Type		
DemDebounceMonitorInternal EcucParamConfContainerDef		
BSW Description		
This container contains the configuration (nerometers) for monitor internal debouncing		

This container contains the configuration (parameters) for monitor internal debouncing.

## **Template Description**

This meta-class represents the ability to indicate that the pre-debounce algorithm shall be used by the Dem for this diagnostic monitor.

This is related to setting the EcuC choice container DemDebounceAlgorithmClass to DemDebounceMonitorInternal.

If the FaultDetectionAlogrithm is already known to be implemented by a specific BswModuleEntry the reference bswModuleEntry points to the function specification.

If the FaultDetectionCounter value is accessible at a PortPrototype this PortPrototype shall be referenced by an assignedPort.

referenced by an assigned ort.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagEventDebounceMonitorInternal		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dem_00023	



BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemEventParameter/DemDebounceAlgorithmClass		
BSW Parameter		BSW Type	
DemDebounceTim	eBase	EcucParamConfCont	ainerDef
BSW Description			
This container cont	tains the configuration (parameters) for	time based debouncin	g.
Template Descrip	tion		
be used by the Der This is related to bounceTimeBase.	This meta-class represents the ability to indicate that the time-based pre-debounce algorithm shall be used by the Dem for this diagnostic monitor.  This is related to set the EcuC choice container DemDebounceAlgorithmClass to DemDebounceTimeBase.		
M2 Parameter			
	::ServiceNeeds::DiagEventDebounceTi	meBased	
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping ID			
valid up_Dem_0002			up_Dem_00024

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemEventParameter		
BSW Parameter		BSW Type	
DemEventConfirma	ationThreshold	EcucIntegerParamDe	ef
BSW Description			
	tion cycle threshold of the DTC con-	irmation status accord	ding "Confirmation
Threshold" of ISO	14229-1.		
Template Descrip			
This attribute define	es the number of failure cycles for the e	vent based fault confir	mation.
M2 Parameter	M2 Parameter		
DiagnosticExtract::	Dem::DiagnosticEvent::DiagnosticEven	t.eventFailureCycleCool	unterThreshold
Mapping Rule	Mapping Rule Mapping Type		
1:1 mapping	1:1 mapping full		full
Mapping Status Mapping ID		Mapping ID	
valid			up_Dem_00096

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemEventParam	eter	
BSW Parameter		BSW Type	
DemEventKind		EcucEnumerationPar	amDef
BSW Description			
This parameter is u	used to distinguish between SW-C and	BSW events.	
Template Descrip	tion		
This attribute is use	ed to distinguish between SWC and BS	W events.	
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticEvent::DiagnosticEven	t.eventKind	
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dem_00095



BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemEventParameter/DemEventKind		
BSW Parameter		BSW Type	
DEM_EVENT_KIN	D_BSW	EcucEnumerationLite	ralDef
<b>BSW Description</b>			
The event is a assi	gned to a BSW module		
Template Descrip	tion		
The event is assign	ned to a BSW module.		
M2 Parameter	M2 Parameter		
DiagnosticExtract::	Dem::DiagnosticEvent::DiagnosticEven	tKindEnum.bsw	
Mapping Rule	Mapping Rule Mapping Type		
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid up_Dem_0004		up_Dem_00047	

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemEventParam	eter/DemEventKind	
BSW Parameter		BSW Type	
DEM_EVENT_KIN	D_SWC	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
The event is a assi	gned to a SW-C		
Template Descrip	tion		
The event is assign	The event is assigned to a SWC.		
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticEvent::DiagnosticEven	tKindEnum.swc	
Mapping Rule	Mapping Rule Mapping Type		
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid up_Dem_000-		up_Dem_00049	

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemEventParameter		
BSW Parameter		BSW Type	
DemFFPrestorage	Supported	EcucBooleanParamD	)ef
BSW Description			
If this parameter is	set to true, then the Prestorage of Fre	ezeFrames is support	ed by the assigned
event. This parame	eter is useful to calculate the buffer size		
Template Descrip	tion		
This attribute desc	cribes whether the Prestorage of Free	zeFrames is supporte	ed by the assigned
event or not.			
1	f FreezeFrames is supported		
	of FreezeFrames is not supported		
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent.prestorageFreezeFrame			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping ID			Mapping ID
valid			up_Dem_00103



BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute		bute
BSW Parameter		BSW Type	
DemIndicatorBeha	viour	EcucEnumerationPar	amDef
<b>BSW Description</b>			
Behaviour of the lin	nked indicator		
Template Descrip	tion		
Behavior of the link	ed indicator.		
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticEvent::DiagnosticConr	nectedIndicator.behavio	or
Mapping Rule	Mapping Rule Mapping Type		
full			full
Mapping Status Mapping ID			Mapping ID
valid up_Dem_0012		up_Dem_00124	

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute/DemIndicator		
Dem	Behaviour		
BSW Parameter		BSW Type	
DEM_INDICATOR	_BLINKING	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
The indicator blinks	when the event has status FAILED		
Not relevant with J	1939.		
Template Descrip	emplate Description		
The indicator blinks	The indicator blinks when the event has status FAILED.		
M2 Parameter	M2 Parameter		
DiagnosticExtract::	Dem::DiagnosticEvent::DiagnosticConr	nectedIndicatorBehavio	rEnum.blinkMode
Mapping Rule Mapping Ty		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dem_00051

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute/DemIndicator		
Dem	Behaviour		
BSW Parameter		BSW Type	
DEM_INDICATOR	_BLINK_CONT	EcucEnumerationLite	eralDef
BSW Description			
The indicator is act	ive and blinks when the event has statu	is FAILED	
Not relevant with J	1939.		
Template Descrip	Template Description		
The indicator is act	ive and blinks when the event has statu	is FAILED.	
M2 Parameter	M2 Parameter		
DiagnosticExtract::	Dem::DiagnosticEvent::DiagnosticConr	nectedIndicatorBehavio	rEnum.blinkOr
ContinuousOnMod	e		
Mapping Rule	Mapping Rule Mapping Type		
full		full	
Mapping Status Mapping ID			Mapping ID
valid			up_Dem_00054



BSW Module	BSW Context			
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute/DemIndicator		bute/DemIndicator	
_	Behaviour			
BSW Parameter		BSW Type		
DEM_INDICATOR	_CONTINUOUS	EcucEnumerationLite	eralDef	
<b>BSW Description</b>				
The indicator is act	ive when the even has status FAILED			
Template Descrip	Template Description			
The indicator is act	The indicator is active when the event has status FAILED.			
M2 Parameter				
DiagnosticExtract::	DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticConnectedIndicatorBehaviorEnum.continuous			
OnMode				
Mapping Rule			Mapping Type	
			full	
Mapping Status			Mapping ID	
valid			up_Dem_00055	

BSW Module	BSW Context			
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute/DemIndicator Behaviour			
Dem				
BSW Parameter		BSW Type		
DEM_INDICATOR	_FAST_FLASH	EcucEnumerationLite	eralDef	
BSW Description				
Flash Indicator Lar	np should be set to 'Fast Flash'			
Template Descrip	mplate Description			
Flash Indicator Lar	Lamp should be set to "Fast Flash".			
M2 Parameter	M2 Parameter			
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticConnectedIndicatorBehaviorEnum.fastFlash-				
ingMode				
Mapping Rule			Mapping Type	
			full	
Mapping Status Mapp		Mapping ID		
valid			up_Dem_00052	

BSW Module	BSW Context			
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute/DemIndicator Behaviour			
BSW Parameter		BSW Type		
DEM_INDICATOR	_SLOW_FLASH	EcucEnumerationLite	eralDef	
<b>BSW Description</b>				
Flash Indicator Lar	np should be set to 'Slow Flash'			
Template Descrip	tion			
Flash Indicator Lar	ash Indicator Lamp should be set to "Slow Flash".			
M2 Parameter	M2 Parameter			
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticConnectedIndicatorBehaviorEnum.slowFlash-				
ingMode				
Mapping Rule			Mapping Type	
	<u> </u>	·	full	
Mapping Status Mapping ID		Mapping ID		
valid	·	·	up_Dem_00053	



BSW Module	BSW Context			
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute			
BSW Parameter		BSW Type		
DemIndicatorHeali	ngCycleCounterThreshold	EcucIntegerParamDe	rf	
BSW Description				
Defines the number	r of healing cycles for the WarningIndic	atorOffCriteria.		
Template Descrip	tion			
This attribute defines the number of healing cycles for the WarningIndicatorOffCriteria				
M2 Parameter				
DiagnosticExtract::	DiagnosticExtract::Dem::DiagnosticIndicator::DiagnosticIndicator.healingCycleCounterThreshold			
Mapping Rule			Mapping Type	
1:1 mapping			full	
Mapping Status			Mapping ID	
valid			up_Dem_00087	

BSW Module	BSW Context			
Dem	Dem/DemConfigSet			
BSW Parameter		BSW Type		
DemObdDTC		EcucParamConfCont	ainerDef	
BSW Description				
This container cont	tains the configuration (parameters) for	DemObdDTC.		
Template Descrip				
Unique Diagnostic Trouble Code value for OBD.				
M2 Parameter	M2 Parameter			
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeObd.obdDTCValue				
Mapping Rule			Mapping Type	
1:1 mapping			full	
Mapping Status			Mapping ID	
valid			up_Dem_00080	

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemObdDTC		
BSW Parameter		BSW Type	
DemConsiderPtoS	tatus	EcucBooleanParamD	)ef
BSW Description			
This parameter is 1	TRUE, when the event is affected by the	Dem PTO handling.	
Template Descrip	tion		
This attribute describes the affection of the event by the Dem PTO handling.  True: the event is affected by the Dem PTO handling.			
False: the event is not affected by the Dem PTO handling.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeObd.considerPtoStatus			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dem_00078

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemObdDTC



BSW Parameter	BSW Type
DemEventOBDReadinessGroup	EcucEnumerationParamDef
BSW Description	

This parameter specifies the Event OBD Readiness group for PID \$01 and PID \$41 computation.

This parameter is only applicable for emission-related ECUs.

## **Template Description**

## DiagnosticTroubleCodeObd.eventObdReadinessGroup:

This attribute specifies the Event OBD Readiness group for PID \$01 and PID \$41 computation. This attribute is only applicable for emission-related ECUs.

#### DiagnosticTroubleCodeUds.eventObdReadinessGroup:

This attribute specifies the Event OBD Readiness group for PID \$01 and PID \$41 computation. This attribute is only applicable for emission-related ECUs.

## **M2 Parameter**

DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeObd.eventObdReadiness Group,

 $\label{local:decode:continuous} Diagnostic Trouble Code :: Diagnostic Trouble Code Uds. event Obd Readiness Group$ 

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dem_00090

BSW Module	BSW Context		
Dem	Dem/DemConfigSet/DemObdDTC		
BSW Parameter		BSW Type	
DemJ1939DTCVal	ue	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Unique Diagnostic	Trouble Code value for J1939 (consisting	ng of SPN and FMI)	
Template Descrip	tion		
DiagnosticTrouble	eCodeJ1939.spn:		
This represents the	e releated SPN.		
DiagnosticTrouble	eCodeJ1939.fmi:		
, •	eCodeJ1939.fmi: esents the behavior of the Failure Mode	Indicator.	
, •		Indicator.	
This attribute repre  M2 Parameter			spn,
This attribute repre  M2 Parameter  DiagnosticExtract::	sents the behavior of the Failure Mode	ticTroubleCodeJ1939.s	•
This attribute repre  M2 Parameter  DiagnosticExtract::	sents the behavior of the Failure Mode  Dem::DiagnosticTroubleCode::Diagnos	ticTroubleCodeJ1939.s	•
This attribute repre  M2 Parameter  DiagnosticExtract:: DiagnosticExtract::  Mapping Rule	sents the behavior of the Failure Mode  Dem::DiagnosticTroubleCode::Diagnos	ticTroubleCodeJ1939.s ticTroubleCodeJ1939.f	mi Mapping Type
This attribute repre  M2 Parameter  DiagnosticExtract:: DiagnosticExtract:: Mapping Rule  The value is create	Dem::DiagnosticTroubleCode::Diagnos	ticTroubleCodeJ1939.s ticTroubleCodeJ1939.f	mi
This attribute repre  M2 Parameter  DiagnosticExtract:: DiagnosticExtract:: Mapping Rule  The value is create	Dem::DiagnosticTroubleCode::DiagnosticTroubleCode::DiagnosticTroubleCode::DiagnosticTroubleCode::DiagnosticTroubleCode::DiagnosticTroubleCode::DiagnosticTroubleCode::DiagnosticTroubleCode::DiagnosticTroubleCode::Diagnos	ticTroubleCodeJ1939.s ticTroubleCodeJ1939.f	mi Mapping Type

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemAgingRequires	sTestedCycle	EcucBooleanParamDef
<b>BSW Description</b>		



Defines if the aging cycle counter is processed every aging cycles or if only tested aging cycle are considered.

true: only tested aging cycle are considered for aging cycle counter

false: aging cycle counter is processed every aging cycle

#### **Template Description**

Defines whether the aging cycle counter is processed every aging cycles or else only tested aging cycle are considered.

If the attribute is set to TRUE: only tested aging cycle are considered for aging cycle counter.

If the attribute is set to FALSE: aging cycle counter is processed every aging cycle.

#### **M2 Parameter**

DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.agingRequiresTestedCycle

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dem_00070

BSW Module	BSW Context			
Dem	Dem/DemGeneral			
BSW Parameter		BSW Type		
DemClearDTCBeh	avior	EcucEnumerationPar	ramDef	
<b>BSW Description</b>				
Defines the clearin	g process of diagnostic information for	volatile and non-volati	le memory and the	
positive response h	nandling for the Dcm module.			
Template Descrip	Template Description			
	This attribute defines the resulting UDS status byte for the related event, which shall not be cleared			
according to the CI	earEventAllowed callback.			
M2 Parameter	M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent.clearEventBehavior			
Mapping Rule Mapping Type				
1:1 mapping	1:1 mapping full			
Mapping Status Mapping ID			Mapping ID	
valid			up_Dem_00071	

BSW Module	BSW Context		
Dem	Dem/DemGeneral		
BSW Parameter		BSW Type	
DemClearDTCLimi	tation	EcucEnumerationPar	amDef
<b>BSW Description</b>			
Defines the suppor	ted Dem_<>ClearDTC API scope.		
Template Descrip	tion		
Defines the scope	Defines the scope of the DEM_ClearDTC Api.		
M2 Parameter	M2 Parameter		
DiagnosticExtract::	DiagnosticCommonProps::DiagnosticC	ommonProps.clearDtc	Limitation
Mapping Rule	Mapping Rule Mapping Type		
full			full
Mapping Status			Mapping ID
valid			up_Dem_00105



BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemClearDTCLimitation		
BSW Parameter	BSW Parameter BSW Type		
DEM_ALL_SUPPO	DRTED_DTCS	EcucEnumerationLite	eralDef
BSW Description			
	C accepts all supported DTC values, as		S
which are configure	ed in DemGroupDTCs and DEM_DTC_	GROUP_ALL_DTCS.	
Template Descript	Template Description		
DEM_ClearDtc API accepts all supported DTC values.			
M2 Parameter	M2 Parameter		
DiagnosticExtract::	DiagnosticExtract::DiagnosticCommonProps::DiagnosticClearDtcLimitationEnum.allSupportedDtcs		
Mapping Rule	Mapping Rule Mapping Type		
1:1 mapping full			full
Mapping Status Mapping ID		Mapping ID	
valid			up_Dem_00063

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemClearDTCLimitation		
BSW Parameter		BSW Type	
DEM_ONLY_CLEA	AR_ALL_DTCS	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Dem_<>ClearDT	C accepts ClearAllDTCs only.		
Template Descrip	tion		
DEM_ClearDtc AP	DEM_ClearDtc API accepts ClearAllDTCs only.		
M2 Parameter	M2 Parameter		
DiagnosticExtract::	DiagnosticCommonProps::DiagnosticC	learDtcLimitationEnum	n.clearAllDtcs
Mapping Rule Mapping Type			Mapping Type
1:1 mapping		full	
Mapping Status		Mapping ID	
valid		up_Dem_00064	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemDataElementClass/DemInternalDataElementClass		
BSW Parameter		BSW Type	
DemInternalDataE	lement	EcucEnumerationPar	amDef
<b>BSW Description</b>			
This parameter def	fines the Dem-internal data value, which	n is mapped to the data	a element.
Template Descrip	tion		
This represents the	This represents the ability to further specify the access within the Dem.		
M2 Parameter			
DiagnosticExtract::	ServiceMapping::DiagnosticDemProvid	edDataMapping.dataP	rovider
Mapping Rule Mapping Type			Mapping Type
1:1 mapping ful		full	
Mapping Status		Mapping ID	
valid		up_Dem_00107	

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemEnvironmentDataCapture		EcucEnumerationParamDef



BSW Description		
DemEnvironmentDataCapture defines the point in time, when the data actually is	captured.	
Template Description		
This attribute determines the point in time, when the data actually is captured.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeProps.environmentCap-		
tureToReporting		
Mapping Rule Mapping Type		
1:1 mapping full		
Mapping Status Mapping ID		
valid	up_Dem_00034	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEnvironmentDataCapture		
BSW Parameter	BSW Parameter BSW Type		
DEM_CAPTURE_ASYNCHRONOUS_TO_REPORTIN		eralDef	
BSW Description			
The data capturing	is postponed to the next cycle of the D	em_Mainfunction. (Thi	s means that there
is a minimum delay	between report of the failure and capt	uring the data).	
Template Description			
The data capturing is postponed to the next cycle of the Dem_Mainfunction. (This means that there			
is a minimum delay between report of the failure and capturing the data.			
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticTroubleCode::Environr	nentCaptureToReportir	ngEnum.capture
AsynchronousToReporting			
Mapping Rule Mapping Type			
1:1 mapping		full	
Mapping Status Mapping ID		Mapping ID	
valid			up Dem 00032

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEnvironmentDataCapture		
BSW Parameter		BSW Type	
DEM_CAPTURE_S	SYNCHRONOUS_TO_REPORTING	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
The data is capture	ed immediately within the context of De	m_SetEventStatus.	
Template Descrip	tion		
The data is captured immediately within the reporting function (i.e. in the context of the setEventSta-			
tus/reportErrorStatus function).			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticTroubleCode::EnvironmentCaptureToReportingEnum.capture			
SynchronousToRe	porting		
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status Mapping ID			Mapping ID
valid			up_Dem_00033

BSW Module	BSW Context
Dem	Dem/DemGeneral



BSW Parameter	BSW Type		
DemEventDisplacementStrategy	EcucEnumerationParamDef		
BSW Description			
This configuration switch defines, whether support for ev	vent displacement is enabled or not, and		
which displacement strategy is followed.			
Template Description			
	This attribute defines, whether support for event displacement is enabled or not, and which displace-		
ment strategy is followed.			
	M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticC	CommonProps.eventDisplacementStrat-		
egy	egy		
Mapping Rule Mapping Typ			
1:1 mapping full			
Mapping Status Mapping II			
valid	up_Dem_00117		

DOW Marakala	DOW O I I		
BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventDisplacementStrategy		
BSW Parameter		BSW Type	
DEM_DISPLACEM	MENT_FULL	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Event memory entr	y displacement is enabled, by consider	ation of priority active/	passive status, and
occurrence.			
Template Descrip	tion		
Event memory entr	Event memory entry displacement is enabled, by consideration of priority active/passive status, and		
occurrence.	occurrence.		
M2 Parameter			
DiagnosticExtract::	DiagnosticCommonProps::DiagnosticE	ventDisplacementStrat	egyEnum.full
Mapping Rule Mapping Type			
1:1 mapping	1:1 mapping full		
Mapping Status Mapping ID			Mapping ID
valid up_Dem		up_Dem_00126	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventDisplacementStrategy		
BSW Parameter	BSW Parameter BSW Type		
DEM_DISPLACEM	MENT_NONE	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Event memory enti	ry displacement is disabled.		
Template Descrip	Template Description		
Event memory enti	Event memory entry displacement is disabled.		
M2 Parameter			
DiagnosticExtract::	DiagnosticCommonProps::DiagnosticE	ventDisplacementStrat	egyEnum.none
Mapping Rule Mapping Type			Mapping Type
1:1 mapping		full	
Mapping Status		Mapping ID	
valid		up_Dem_00125	

BSW Module	BSW Context
Dem	Dem/DemGeneral/DemEventDisplacementStrategy



BSW Parameter	BSW Type		
DEM_DISPLACEMENT_PRIO_OCC	EcucEnumerationLiteralDef		
BSW Description			
Event memory entry displacement is enabled, by consider	ration of priority and occurrence (but with	h-	
out active/passive status).			
Template Description			
Event memory entry displacement is enabled, by consideration of priority and occurrence (but with-			
out active/passive status).			
M2 Parameter			
DiagnosticExtract::DiagnosticCommonProps::DiagnosticEventDisplacementStrategyEnum.prioOcc			
Mapping Rule	Mapping Type		
1:1 mapping	full		
Mapping Status	Mapping ID		
valid	up_Dem_00060	)	

BSW Module	BSW Context		
Dem	Dem/DemGeneral		
BSW Parameter	BSW Parameter BSW Type		
DemEventMemory	EntryStorageTrigger	EcucEnumerationPar	amDef
BSW Description			
Configures the prin	nary trigger to allocate an event memor	y entry.	
Template Descrip	Template Description		
Describes the primary trigger to allocate an event memory entry.			
M2 Parameter			
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.memoryEntryStorage			
Trigger			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up Dem 00089

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventMemorySet		
BSW Parameter BSW Type			
DemDtcStatusAvai	labilityMask	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Mask for the suppo	orted DTC status bits by the Dem. This	mask is used by UDS	service 0x19.
Template Description			
Mask for the supported DTC status bits by the Dem.			
M2 Parameter			
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.dtcStatusAvailabilityMask			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping		full	
Mapping Status		Mapping ID	
valid			up_Dem_00084

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet	
BSW Parameter B		BSW Type
DemMILIndicatorRef		EcucReferenceDef



BSW Description		
This parameter defines the indicator representing the MIL.		
This parameter is mandatory for ECUs supporting OBD (refer to DemOBDSupporting OBD)	ort).	
Template Description		
Defines the type of the indicator.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticIndicator::DiagnosticIndicator.type		
Mapping Rule	Mapping Type	
DignosticIndicator.type == DiagnosticIndicatorTypeEnum.malfunction	full	
Mapping Status	Mapping ID	
valid	up_Dem_00006	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventMemorySet		
BSW Parameter BSW Type			
DemMirrorMemory		EcucParamConfCont	ainerDef
<b>BSW Description</b>			
This container cont	This container contains the mirror event memory specific parameters of the Dem module.		
Template Description			
This represents a mirror memory for a diagnostic event.			
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticTroubleCode::Diagnos	ticMemoryDestinationN	Mirror
Mapping Rule Mapping Type			Mapping Type
1:1 mapping		full	
Mapping Status		Mapping ID	
valid		up_Dem_00075	

BSW Module	BSW Context			
Dem	Dem/DemGeneral/DemEventMemorySet/DemMirrorMemory			
BSW Parameter	BSW Parameter BSW Type			
DemMaxNumberE	ventEntryMirror	EcucIntegerParamDe	ef	
<b>BSW Description</b>				
Maximum number	of events which can be stored in the mi	rror memory		
Template Descrip	Template Description			
This attribute fixes the maximum number of event entries in the fault memory.				
M2 Parameter				
DiagnosticExtract::	DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.maxNumberOfEventEn-			
tries				
Mapping Rule Mapping Type			Mapping Type	
1:1 mapping full		full		
Mapping Status		Mapping ID		
valid			up_Dem_00109	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventMemorySet		
BSW Parameter	BSW Type		
DemPrimaryMemory EcucParamConfContainerDef			
BSW Description			
This container contains the primary event memory specific parameters of the Dem module.			



Template Description		
This represents a primary memory for a diagnostic event.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticMemoryDestinationPrimary		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status Mapping ID		
valid	up_Dem_00076	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory		
BSW Parameter BSW Type			
DemMaxNumberE	ventEntryPrimary	EcucIntegerParamDe	ef
<b>BSW Description</b>			
Maximum number	of events which can be stored in the pri	mary memory	
Template Descrip	tion		
This attribute fixes	This attribute fixes the maximum number of event entries in the fault memory.		
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.maxNumberOfEventEn-		
tries			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status		Mapping ID	
valid		up_Dem_00110	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventMemorySet		
BSW Parameter	BSW Parameter BSW Type		
DemTypeOfDTCSu	pported	EcucEnumerationPar	amDef
BSW Description			
	fines the format returned by Dem_Get	Translation Type and do	oes not relate to/in-
	ted Dem functionality.		
Template Descrip	tion		
	es the format returned by Dem_DcmGe	tTranslationType and d	oes not relate to/in-
fluence the support	ted Dem functionality.		
M2 Parameter			
DiagnosticExtract::	${\sf DiagnosticCommonProps::DiagnosticC}$	ommonProps.typeOfD	tcSupported
Mapping Rule	Mapping Rule Mapping Type		
1:1 mapping full			full
Mapping Status Mapping ID			Mapping ID
valid			up_Dem_00123

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventMemorySet/DemTypeOfDTCSupported		
BSW Parameter	BSW Type		
DEM_DTC_TRANS	SLATION_ISO11992_4 EcucEnumerationLiteralDef		
BSW Description			
ISO11992-4 DTC f	ISO11992-4 DTC format		
Template Description			
ISO11992-4 DTC format			



M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticTypeOfDtcSupportedEnum.iso11992_4		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dem_00056	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventMemorySet/DemTypeOfDTCSupported		
BSW Parameter		BSW Type	
DEM_DTC_TRAN	SLATION_ISO14229_1	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
ISO14229-1 DTC f	ormat (3 byte format)		
Template Descrip	tion		
ISO14229-1 DTC f	ormat (3 byte format)		
M2 Parameter			
DiagnosticExtract::	DiagnosticCommonProps::DiagnosticTy	/peOfDtcSupportedEn	um.iso14229_1
Mapping Rule Mapping Type			Mapping Type
1:1 mapping f		full	
Mapping Status Mapping		Mapping ID	
valid up_Den		up_Dem_00059	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventMemorySet/DemTypeOfDTCSupported		
BSW Parameter		BSW Type	
DEM_DTC_TRANS	SLATION_SAEJ1939_73	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
SAEJ1939-73 DTC	format		
Template Descrip	Template Description		
SAEJ1939-73 DTC	format		
M2 Parameter			
DiagnosticExtract::	DiagnosticCommonProps::DiagnosticTy	/peOfDtcSupportedEn	um.saeJ1939_73
Mapping Rule Mapping Type			Mapping Type
1:1 mapping		full	
Mapping Status		Mapping ID	
valid		up_Dem_00057	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventMemorySet/DemTypeOfDTCSupported		
BSW Parameter		BSW Type	
DEM_DTC_TRANS	SLATION_SAE_J2012_DA_DTCFOR	EcucEnumerationLite	aralDof
MAT_04		Loucenamerationizate	siaiDei
BSW Description	BSW Description		
SAE_J2012-DA_D	TCFormat_00 (3 byte format)		
Template Description			
SAE_J2012-DA_D	TCFormat_00 (3 byte format)		
M2 Parameter	M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticTypeOfDtcSupportedEnum.saeJ2012_da			
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping		full	



Mapping Status	Mapping ID
valid	up_Dem_00058

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventMemorySet		
BSW Parameter		BSW Type	
DemUserDefinedM	lemory	EcucParamConfCont	ainerDef
<b>BSW Description</b>			
This container cont	tains the user defined event memory sp	ecific parameters of th	e Dem module.
Template Descrip	Template Description		
This represents a u	user-defined memory for a diagnostic ev	vent.	
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticTroubleCode::Diagnos	ticMemoryDestination	JserDefined
Mapping Rule Mapp		Mapping Type	
1:1 mapping		full	
Mapping Status		Mapping ID	
valid		up_Dem_00077	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory		
BSW Parameter		BSW Type	
DemMaxNumberEv	ventEntryUserDefined	EcucIntegerParamDe	ef
BSW Description			
Maximum number	of events which can be stored in the us	er defined memory.	
Template Descript	tion		
This attribute fixes	This attribute fixes the maximum number of event entries in the fault memory.		
M2 Parameter			
DiagnosticExtract::	DiagnosticCommonProps::DiagnosticC	ommonProps.maxNum	nberOfEventEn-
tries			
Mapping Rule	Mapping Rule Mapping Type		
1:1 mapping full		full	
Mapping Status Mapping		Mapping ID	
valid			up_Dem_00111

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory		
BSW Parameter		BSW Type	
DemUserDefinedM	lemoryldentifier	EcucIntegerParamDe	ef
BSW Description			
Identifier used by e	xternal tester to identify the User define	ed event memory.	
Template Descrip	Template Description		
This represents the	This represents the identifier of the user-defined memory.		
M2 Parameter			
	Dem::DiagnosticTroubleCode::Diagnos	${\sf ticMemoryDestinationl}$	JserDe-
fined.memoryld			
Mapping Rule Mapping Typ		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping		Mapping ID	
valid			up_Dem_00112



BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemExtendedDataRecordClass		
BSW Parameter	BSW Parameter BSW Type		
DemExtendedData	RecordNumber	EcucIntegerParamDe	ef
BSW Description			
This configuration p	parameter specifies an unique identifier	for an extended data	record.
One or more extend	ded data records can be assigned to or	ne diagnostic event/DT	C.
0x00 is reserved by	ISO (therefore the minimal value equa	als 1)	
0xF0 to 0xFF are re	eserved by ISO (therefore the maximal	value equals 239)	
Template Descript	tion		
This attribute speci	fies an unique identifier for an extended	d data record.	
M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::Dem::DiagnosticExtendedDataRecord::DiagnosticExtendedDataRecord.record		
Number			
Mapping Rule Mapping Type			
1:1 mapping full			full
Mapping Status Mapping ID			Mapping ID
valid up_Dem_00102			un Dem 00102

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemExtendedDataRecordClass		
BSW Parameter	W Parameter BSW Type		
DemExtendedData	RecordTrigger	EcucEnumerationPar	amDef
<b>BSW Description</b>			
Defines the trigger	to store the ExtendedDataRecord.		
Template Descrip	tion		
This attribute speci	fies the primary trigger to allocate an e	vent memory entry.	
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticExtendedDataRecord:	:DiagnosticExtendedDa	ataRecord.trigger
Mapping Rule Mapping Typ			Mapping Type
1:1 mapping		full	
Mapping Status		Mapping ID	
valid		up_Dem_00092	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemExtendedDataRecordClass/DemExtendedDataRecord		
Dom	Trigger		
BSW Parameter		BSW Type	
DEM_TRIGGER_C	ON_CONFIRMED	EcucEnumerationLite	ralDef
<b>BSW Description</b>			
ExtendedDataReco	ord will be stored when the UDS status	confirmed bit changes	from 0 to 1.
Template Descrip	tion		
capture on "Confire	nfirmed"		
M2 Parameter	M2 Parameter		
DiagnosticExtract::	Dem::DiagnosticFreezeFrame::Diagnos	sticRecordTriggerEnum	.confirmed
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dem_00044



BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemExtendedData	RecordClass/DemExt	endedDataRecord
Dem	Trigger		
BSW Parameter		BSW Type	
DEM_TRIGGER_C	N_FDC_THRESHOLD	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
ExtendedDataReco	ord will be stored when the FDC reache	s its threshold.	
Template Descrip	tion		
capture on "FDC T	hreshold"		
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticFreezeFrame::Diagnos	sticRecordTriggerEnum	n.fdcThreshold
Mapping Rule	Mapping Rule Mapping Type		Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dem_00046

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemExtendedDataRecordClass/DemExtendedDataRecord Trigger		
BSW Parameter		BSW Type	
DEM_TRIGGER_C	DN_PENDING	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
ExtendedDataRec	ord will be stored when the UDS status	pending bit changes fr	om 0 to 1.
Template Descrip	tion		
capture on "Pendir	ng"		
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticFreezeFrame::Diagnos	sticRecordTriggerEnum	n.pending
Mapping Rule Mapping Typ		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dem_00045

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemExtendedDataRecordClass/DemExtendedDataRecord		endedDataRecord
DOW Devices Levi	Trigger	DOW Town	
BSW Parameter		BSW Type	
DEM_TRIGGER_C	ON_TEST_FAILED	EcucEnumerationLite	eralDef
BSW Description			
ExtendedDataRec	ord will be stored when the UDS status	test failed bit changes	from 0 to 1.
Template Descrip	Template Description		
capture on "Test Fa	ailed"		
M2 Parameter			
DiagnosticExtract::	:Dem::DiagnosticFreezeFrame::Diagnos	sticRecordTriggerEnum	ı.testFailed
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dem_00043

BSW Module	BSW Context
Dem	Dem/DemGeneral/DemExtendedDataRecordClass



BSW Parameter	BSW Type	
DemExtendedDataRecordUpdate	EcucEnumerationParamDef	
BSW Description		
This extended data record is captured if the configuration	red trigger condition in "DemExtended	d-
DataRecordTrigger" is fulfilled.		
Template Description		
This attribute defines when an extended data record is ca	ptured.	
True: This extended data record is captured every time.		
False: This extended data record is only captured for new	event memory entries.	
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticExtendedDataRecord:	::DiagnosticExtendedDataRecord.update	÷
Mapping Rule Mapping		
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dem_00104	1

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemFreezeFrameRecordClass		
BSW Parameter		BSW Type	
DemFreezeFrameF	RecordNumber	EcucIntegerParamDe	ef
<b>BSW Description</b>			
This parameter def	ines a record number for a freeze frame	record. This record nu	ımber is unique per
freeze frame record	d number class.		
Template Descrip	tion		
This attribute define	This attribute defines a record number for a freeze frame record.		
M2 Parameter			
, ,	Dem::DiagnosticFreezeFrame::Diagnos	sticFreezeFrame.record	dNumber
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up_Dem_00039

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemFreezeFrameRecordClass		
BSW Parameter		BSW Type	
DemFreezeFrameF	RecordTrigger	EcucEnumerationPar	amDef
<b>BSW Description</b>			
Defines the trigger	to store the FreezeFrameRecord.		
Template Descrip	tion		
This attribute defin	es the primary trigger to allocate an eve	ent memory entry.	
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticFreezeFrame::Diagnos	sticFreezeFrame.trigge	r
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			up Dem 00093

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemFreezeFramel	RecordClass
BSW Parameter		BSW Type



DemFreezeFrameRecordUpdate	EcucEnumerationPar	amDef
BSW Description		
This parameter defines the case, when the freeze frame re	ecord is stored/updated	J.
Template Description		
This attribute defines the approach when the freeze frame	record is stored/updat	ed.
True: FreezeFrame record is captured every time.		
False: FreezeFrame record is only captured for new event	memory entries.	
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticFreezeFrame::Diagnos	sticFreezeFrame.update	е
Mapping Rule Mapping Type		
1:1 mapping full		full
Mapping Status Mapping ID		Mapping ID
valid up_Dem_0008		up_Dem_00085

BSW Module	BSW Context		
Dem	Dem/DemGeneral		
BSW Parameter		BSW Type	
DemOBDSupport		EcucEnumerationPar	amDef
BSW Description			
This configuration s	switch defines OBD support and kind of	OBD ECU.	
Template Descrip	tion		
This attribute is use	This attribute is used to specify the role (if applicable) in which the DiagnosticEcuInstance supports		ulnstance supports
OBD.	OBD.		
M2 Parameter			
DiagnosticExtract::	DiagnosticContribution::DiagnosticEcul	nstanceProps.obdSup	port
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping			full
Mapping Status Mapping ID		Mapping ID	
valid			

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemOBDSupport		
BSW Parameter		BSW Type	
DEM_OBD_DEP_S	SEC_ECU	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Kind of OBD ECU:	OBD Dependend / Secondary ECU		
Template Descrip			
This represents the	e role "secondary ECU".		
M2 Parameter			
•	DiagnosticContribution::DiagnosticObd	SupportEnum.seconda	aryEcu
Mapping Rule Mapping Type		Mapping Type	
1:1 mapping full		full	
Mapping Status Mappin		Mapping ID	
valid			up_Dem_00129

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemOBDSupport	
BSW Parameter		BSW Type
DEM_OBD_MASTER_ECU EcucEnumerationLiteralDef		EcucEnumerationLiteralDef
<b>BSW Description</b>		



Kind of OBD ECU: Master ECU		
Template Description		
This represent the role "master ECU".		
M2 Parameter		
DiagnosticExtract::DiagnosticContribution::DiagnosticObdSupportEnum.masterEcu		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	Mapping ID	
valid	up_Dem_00131	

BSW Module	BSW Context			
Dem	Dem/DemGeneral/DemOBDSupport			
BSW Parameter		BSW Type		
DEM_OBD_NO_O	BD_SUPPORT	EcucEnumerationLite	eralDef	
BSW Description				
OBD is not support	ted within this ECU			
Template Descrip	tion			
This represents the	This represents the ability to explicitly specify that no participation in OBD is foreseen.			
M2 Parameter	M2 Parameter			
DiagnosticExtract::	DiagnosticContribution::DiagnosticObd	SupportEnum.noObdS	upport	
Mapping Rule Mapping Type			Mapping Type	
1:1 mapping		full		
Mapping Status		Mapping ID		
valid			up_Dem_00128	

BSW Module	BSW Context			
Dem	Dem/DemGeneral/DemOBDSupport			
BSW Parameter		BSW Type		
DEM_OBD_PRIM/	ARY_ECU	EcucEnumerationLite	eralDef	
BSW Description				
Kind of OBD ECU:	Pimary ECU			
Template Descrip	tion			
This represents the	This represents the role "primary ECU".			
M2 Parameter				
DiagnosticExtract::	DiagnosticExtract::DiagnosticContribution::DiagnosticObdSupportEnum.primaryEcu			
Mapping Rule Mapping Type			Mapping Type	
1:1 mapping full		full		
Mapping Status		Mapping ID		
valid			up Dem 00130	

BSW Module	BSW Context		
Dem	Dem/DemGeneral		
BSW Parameter	Parameter BSW Type		
DemOccurrenceCo	DemOccurrenceCounterProcessing EcucEnumerationParamDef		
BSW Description			
This configuration switch defines the consideration of the fault confirmation process for the occurrence counter. For OBD and mixed systems (OBD/non OBD, refer to DemOBDSupport) configuration switch shall always set to DEM_PROCESS_OCCCTR_TF.			
Template Description			
This attribute defines the consideration of the fault confirmation process for the occurrence counter.			



M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.occurrenceCounterPro-		
cessing		
Mapping Rule Mapping Type		
1:1 mapping	full	
Mapping Status Mapping ID		
valid	up_Dem_00040	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemOccurrenceCounterProcessing		
	Dem/DemGeneral/DemOccurrenceCo		
BSW Parameter		BSW Type	
DEM_PROCESS_	OCCCTR_CDTC	EcucEnumerationLite	eralDef
BSW Description			
the occurrence co	unter is triggered by the TestFailed bit	if the fault confirmati	on was successful
(ConfirmedDTC bit	is set)		
Template Descrip	tion		
The occurrence counter is triggered by the TestFailed bit if the fault confirmation was successful			
(ConfirmedDTC bit is set).			
M2 Parameter			
DiagnosticExtract::DiagnosticCommonProps::DiagnosticOccurrenceCounterProcessing			
Enum.confirmedDtcBit			
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid		up_Dem_00037	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemOccurrenceCounterProcessing		
BSW Parameter	BSW Parameter BSW Type		
DEM_PROCESS_	OCCCTR_TF	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
the occurrence cou sidered)	unter is only triggered by the TestFailed	bit (and the fault confi	rmation is not con-
This parameter is r	mandatory in case of J1939.		
Template Descrip	tion		
The occurrence counter is only triggered by the TestFailed bit (and the fault confirmation is not considered).			
M2 Parameter			
DiagnosticExtract::DiagnosticCommonProps::DiagnosticOccurrenceCounterProcessingEnum.test FailedBit			
Mapping Rule Mapping Type			
1:1 mapping full		full	
Mapping Status Mapping ID			Mapping ID
valid			up_Dem_00038

BSW Module	BSW Context		
Dem	Dem/DemGeneral		
BSW Parameter	BSW Parameter BSW Type		
DemOperationCycle EcucParamConfContainerDef			
BSW Description			
This container holds all parameters that are relevant to configure an operation cycle.			



Template Description		
Definition of an operation cycle that is the base of the event qualifying and for De	m scheduling.	
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticOperationCycle::DiagnosticOperationCycle		
Mapping Rule Mapping Type		
1:1 mapping full		
Mapping Status Mapping ID		
valid	up_Dem_00113	

BSW Module	BSW Context			
Dem	Dem/DemGeneral/DemOperationCycle			
BSW Parameter		BSW Type		
DemOperationCyc	leAutostart	EcucBooleanParamDef		
<b>BSW Description</b>				
The autostart pro	pperty defines if the operation cycl	es is automatically (re-)started dur	ing	
Dem_PreInit.				
Template Descrip	Template Description			
This attribute define	This attribute defines if the operation cycles is automatically re-started during Dem_PreInit.			
M2 Parameter	M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::Dem::DiagnosticOperationCycle::DiagnosticOperationCycle.cycleAutostart			
Mapping Rule Mapping Typ		Э		
1:1 mapping full		full		
Mapping Status		Mapping ID		
valid		up_Dem_001	14	

BSW Module	BSW Context		
Dem	Dem/DemGeneral		
BSW Parameter	rameter BSW Type		
DemOperationCycl	erationCycleStatusStorage		
BSW Description			
Defines if the opera	ation cycle state is available over the po	wer cycle (stored non-	volatile) or not.
	cycle state is stored non-volatile		
false: the operation	n cycle state is only stored volatile		
Template Descrip			
Defines if the operation cycle state is available over the power cycle (stored non-volatile) or not.			
true: the operation cycle state is stored non-volatile			
false: the operation cycle state is only stored volatile			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticOperationCycle::DiagnosticOperationCycle.cycleStatusStorage			
Mapping Rule Mapping Type			Mapping Type
1:1 mapping			full
Mapping Status			Mapping ID
valid			up_Dem_00115

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemRatio	EcucParamConfContainerDef	
<b>BSW Description</b>		



This container contains the OBD-specific in-use-monitor performance ratio configuration. It is related to a specific event, a FID, and an IUMPR group.

#### **Template Description**

#### ObdRatioServiceNeeds:

Specifies the abstract needs of a component or module on the configuration of OBD Services in relation to a particular "ratio monitoring" which is supported by this component or module.

## DiagnosticlumprGroup:

This meta-class represents the ability to model a IUMPR groups.

M2	Da	ram	ωt	Δr

CommonStructure::ServiceNeeds::ObdRatioServiceNeeds,

DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticiumprGroup		
Mapping Rule	Mapping Type	
In case the owner of the ObdRatioServiceNeeds is a BSW module then the DemRatio.shortName = {capitalizedMip}_{ServiceDependency.symbolicName Props.symbol}.	full	
For the DiagnosticlumprGroup the mapping rule is 1:1		
Mapping Status	Mapping ID	
valid	up_Dem_00001	

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemRatio		
BSW Parameter		BSW Type	
DemDiagnosticEve	entRef	EcucReferenceDef	
<b>BSW Description</b>			
This reference con	tains the link to a diagnostic event.		
Template Descript	tion		
Diagnosticlumpro	Group.iumpr:		
This reference colle	This reference collects Diagnosticlumpr to a DiagnosticlumprGroup.		
Diagnosticlumpr.event:			
This reference represents the DiagnosticEvent that corresoponds to the IUMPR computation.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticlumprGroup.iumpr,			
DiagnosticExtract::Dem::DiagnosticEvent::Diagnosticlumpr.event			
Mapping Rule Mapping Type			
foreach DiagnosticlumprGroup, follow the iumpr reference and then pick the		full	
target of the event reference			luli
Mapping Status Mapping ID			Mapping ID
valid			

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemRatio		
BSW Parameter		BSW Type	
DemIUMPRDenGr	oup	EcucEnumerationParamDef	
<b>BSW Description</b>	BSW Description		
This parameter specifies the assigned denominator type which is applied in addition to the DEM_IUMPR_GENERAL_INDIVIDUAL_DENOMINATOR conditions.			
Template Description			
This reference collects Diagnosticlumpr to a DiagnosticlumprDenominatorGroup.			
M2 Parameter			



DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup.iumpr,		
Mapping Rule Mapping Type		
1:1 mapping	full	
Mapping Status	Mapping ID	
valid		

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemRatio/DemIUMPRDenGroup		
BSW Parameter		BSW Type	
DEM_IUMPR_DEN	I_500MILL	EcucEnumerationLite	eralDef
BSW Description			
Additional condition	n based on definition of 500miles condit	ions as defined for OB	D2.
Template Descript	tion		
	enominatorGroup.iumpr:		
This reference colle	ects Diagnosticlumpr to a Diagnosticlur	nprDenominatorGroup	
Identifiable.category: The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticlumprDenominatorGroup.iumpr, GenericStructure::GeneralTemplateClasses::Identifiable::Identifiable.category			
Mapping Rule Mapping Type			Mapping Type
DiagnosticlumprDenominatorGroup.category ==IUMPR_DENOMINATOR_500 _MILES		full	
Mapping Status Mapping ID			Mapping ID
valid			

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemRatio/DemIUMPRDenGroup		
BSW Parameter		BSW Type	
DEM_IUMPR_DEN	N_COLDSTART	EcucEnumerationLite	eralDef
BSW Description			
Additional condition	n based on definition of "cold start" as c	lefined for EU5+	
Template Descrip	tion		
DiagnosticlumprD	DenominatorGroup.iumpr:		
This reference colle	ects Diagnosticlumpr to a Diagnosticlur	nprDenominatorGroup	
Identifiable.category:			
The category is a keyword that specializes the semantics of the Identifiable. It affects the expected			
existence of attributes and the applicability of constraints.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup.iumpr,			
GenericStructure::GeneralTemplateClasses::Identifiable::Identifiable.category			
Mapping Rule Mapping Type			Mapping Type
DiagnosticlumprDenominatorGroup == IUMPR_DENOMINATOR_COLDSTAR		full	
T   'u''			luli
Mapping Status			Mapping ID
valid			

BSW Module	BSW Context



BSW Module BSW Context

Dem	Dem/DemGeneral/DemRatio/DemIUMPRDenGroup			
BSW Parameter BSW Type				
DEM_IUMPR_DEN	N_EVAP	EcucEnumerationLite	eralDef	
BSW Description				
Additional condition	n based on definition of "EVAP" condition	ons as defined for OBD	2.	
Template Descrip	tion			
	DenominatorGroup.iumpr:			
This reference colle	ects Diagnosticlumpr to a Diagnosticlur	nprDenominatorGroup		
Identifiable.catego	-			
	The category is a keyword that specializes the semantics of the Identifiable. It affects the expected			
existence of attributes and the applicability of constraints.				
M2 Parameter				
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup.iumpr,				
	GenericStructure::GeneralTemplateClasses::Identifiable::Identifiable.category			
Mapping Rule Mapping Type			Mapping Type	
DiagnosticlumprDenominatorGroup.category == IUMPR_DENOMINATOR_EV		full		
AP	AP I'III			
Mapping Status Mappin		Mapping ID		
valid				

DOW Module	DOW CONCEAL			
Dem	Dem/DemGeneral/DemRatio/DemIUMPRDenGroup			
BSW Parameter BSW Type				
DEM_IUMPR_DEN	N_NONE	EcucEnumerationLite	eralDef	
<b>BSW Description</b>				
No further conditio	n. Denominator increments based on G	SENERAL_INDIVIDUA	L_DENOMINATOR	
only.				
Template Descrip	tion			
Diagnosticlumpr	DenominatorGroup.iumpr:			
This reference colle	ects Diagnosticlumpr to a Diagnosticlur	nprDenominatorGroup		
Identifiable.catego	ory:			
The category is a l	The category is a keyword that specializes the semantics of the Identifiable. It affects the expected			
existence of attributes and the applicability of constraints.				
M2 Parameter				
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup.iumpr,				
GenericStructure::GeneralTemplateClasses::Identifiable::Identifiable.category				
Mapping Rule Mapping Type				
DiagnosticlumprDenominatorGroup.category == IUMPR_DENOMINATOR_NO		full		
NE I'uli				
Mapping Status Mapping I		Mapping ID		
valid				
·				

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemRatio/DemIUN	MPRDenGroup	
BSW Parameter	BSW Type		
DEM_IUMPR_DEN	N_PHYS_API EcucEnumerationLiteralDef		
BSW Description			
Additional physical condition (component activity) computed wihtin the SW-C and reported via			
Dem_RepIUMPRDenLock / Dem_RepIUMPRDenRelease.			
Template Description			



DiagnosticlumprDenominatorGroup.iumpr: This reference collects Diagnosticlumpr to a DiagnosticlumprDenominatorGroup.		
Identifiable.category:		
The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup.iumpr,		
GenericStructure::GeneralTemplateClasses::Identifiable::Identifiable.category		
Mapping Rule	Mapping Type	
DiagnosticlumprDenominatorGroup.category == IUMPR_DENOMINATOR_PH YSICAL_API	full	
Mapping Status	Mapping ID	

BSW Module	BSW Context			
Dem	Dem/DemGeneral/DemRatio			
BSW Parameter		BSW Type		
DemIUMPRGroup	EcucEnumerationParamDef		ramDef	
BSW Description				
This parameter specifies the assigned IUMPR group of the ratio ld.				
Template Description				
This reference collects Diagnosticlumpr to a DiagnosticlumprGroup.				
M2 Parameter				
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroup.iumpr				
Mapping Rule			Mapping Type	
1:1 mapping			full	
Mapping Status			Mapping ID	
valid				

BSW Module	BSW Context			
Dem	Dem/DemGeneral			
BSW Parameter	Parameter BSW Type			
DemResetConfirm	nedBitOnOverflow EcucBooleanParamDef			
BSW Description				
This configuration switch defines, whether the confirmed bit is reset or not while an event memory				
entry will be displaced.				
Template Description				
This attribute defines, whether the confirmed bit is reset or not while an event memory entry will be				
displaced.				
M2 Parameter				
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.resetConfirmedBitOn				
Overflow				
Mapping Rule			Mapping Type	
1:1 mapping			full	
Mapping Status			Mapping ID	
valid			up_Dem_00121	

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type

valid



DemStatusBitHandlingTestFailedSinceLastClear	EcucEnumerationParamDef		
BSW Description			
This configuration switch defines, whether the aging and	displacement mechanism shall be applied		
to the "TestFailedSinceLastClear" status bits.			
Template Description			
This attribute defines, whether the aging and displacemen	t mechanism shall be applied to the "Test-		
FailedSinceLastClear" status bits.			
M2 Parameter			
DiagnosticExtract::DiagnosticCommonProps::DiagnosticC	DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.statusBitHandlingTest		
FailedSinceLastClear			
Mapping Rule Mapping Type			
1:1 mapping full			
Mapping Status Mapping ID			
valid	up_Dem_00122		

BSW Module	BSW Context		
Dem	Dem/DemGeneral		
BSW Parameter		BSW Type	
DemStatusBitStora	ageTestFailed	EcucBooleanParamD	)ef
<b>BSW Description</b>			
Activate/Deactivate	the permanent storage of the "TestFail	ed" status bits.	
true: storage activa			
false: storage dead			
Template Descrip	tion		
This parameter is u	This parameter is used to activate/deactivate the permanent storage of the "TestFailed" status bits.		
	true: storage activated		
false: storage deactivated			
M2 Parameter			
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.statusBitStorageTestFailed			
Mapping Rule	Mapping Rule Mapping Type		
1:1 mapping	1:1 mapping full		full
Mapping Status	Mapping Status Mapping ID		
valid			up_Dem_00116

BSW Module	BSW Context		
Dem	Dem/DemGeneral		
<b>BSW Parameter</b>		BSW Type	
DemTypeOfFreeze	FrameRecordNumeration	EcucEnumerationPar	amDef
<b>BSW Description</b>			
This parameter def	ines the type of assigning freeze frame	record numbers for ev	vent-specific freeze
frame records.			
Template Descrip	tion		
This attribute defin	This attribute defines the type of assigning freeze frame record numbers for event-specific freeze		
frame records.			
M2 Parameter			
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.typeOfFreezeFrameRecord			
Numeration			
Mapping Rule Mapping Type			
1:1 mapping	1:1 mapping full		full
Mapping Status	Mapping Status Mapping ID		
valid	valid up_Dem_00041		



BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemTypeOfFreezeFrameRecordNumeration		
BSW Parameter		BSW Type	
DEM_FF_RECNUM	M_CALCULATED	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
freeze frame record	ds will be numbered consecutive startin	g by 1 in their chronolo	gical order
Template Descript	tion		
Freeze frame recor	ds will be numbered consecutive startir	ng by 1 in their chronol	ogical order.
M2 Parameter	M2 Parameter		
DiagnosticExtract::	DiagnosticExtract::DiagnosticCommonProps::DiagnosticTypeOfFreezeFrameRecordNumeration		
Enum.calculated	Enum.calculated		
Mapping Rule Mapping Type			Mapping Type
1:1 mapping	1:1 mapping full		full
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid			up_Dem_00035

BSW Module	BSW Context		
Dem	Dem/DemGeneral/DemTypeOfFreezeFrameRecordNumeration		
BSW Parameter		BSW Type	
DEM_FF_RECNU	M_CONFIGURED	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
freeze frame recor	ds will be numbered based on the given	configuration in their of	chronological order
Template Descrip			
Freeze frame recor	ds will be numbered based on the giver	configuration in their o	chronological order.
M2 Parameter			
	DiagnosticExtract::DiagnosticCommonProps::DiagnosticTypeOfFreezeFrameRecordNumeration		
Enum.configured	Enum.configured		
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Maj		Mapping ID	
valid u		up_Dem_00036	

# E.4 Fim

BSW Module BSW Context

2011 1110 1110			
FiM	FiM/FiMConfigSet		
BSW Parameter		BSW Type	
FiMFID		EcucParamConfContainerDef	
BSW Description			
This container inclu	ides symbolic names of all FIDs.		
Template Descript	tion		
FunctionInhibition	nNeeds:		
Specifies the abst	ract needs on the configuration of the	ne Function Inhibition Manager for one	
Function Identifier (FID). This class currently contains no attributes. Its name can be regarded			
as a symbol identify	as a symbol identifying the FID from the viewpoint of the component or module which owns this class.		
DiagnosticFunction	DiagnosticFunctionIdentifier:		
This meta-class represents a diagnostic function identifier (a.k.a. FID).			
M2 Parameter			
CommonStructure::ServiceNeeds::FunctionInhibitionNeeds			
DiagnosticExtract::Fim::DiagnosticFunctionIdentifier			



Mapping Rule	Mapping Type
In case the owner of the FunctionInhibitionNeeds is a BSW module then	
the FiMFID.shortName= {capitalizedMip}_{ServiceDependency.symbolicName	full
Props.symbol}.	
Mapping Status	Mapping ID
valid	up_FiM_00001

BSW Module	BSW Context			
FiM	FiM/FiMConfigSet			
BSW Parameter		BSW Type		
FiMInhibitionConfig	guration	EcucParamConfCont	ainerDef	
BSW Description				
This container inclu	udes all configuration parameters conce	erning the relationship	between event and	
FID.				
Template Descript	tion			
This meta-class rep	presents the ability to define the inhibition	n of a specific function	identifier within the	
Fim configuration.	Fim configuration.			
	M2 Parameter			
DiagnosticExtract::	Fim::DiagnosticFunctionIdentifierInhibit			
Mapping Rule	Mapping Rule Mapping Type			
	full			
Mapping Status			Mapping ID	
valid				

BSW Module	BSW Context			
FiM	FiM/FiMConfigSet/FiMInhibitionConfiguration			
BSW Parameter		BSW Type		
FiMInhEventRef		EcucSymbolicNameF	ReferenceDef	
<b>BSW Description</b>				
Selection of an sing	gle DEM Event.			
At least one FiMInhSumRef or FiMInhEventRef or FiMInhComponentRef needs to be configured.  Template Description				
This represents the alias event appllicable for the referencing inhibition source.				
	M2 Parameter			
	DiagnosticExtract::Fim::DiagnosticFunctionInhibitSource.event			
Mapping Rule Mapping Type			Mapping Type	
1:1 mapping	1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID		
valid				

BSW Module	BSW Context	
FiM	FiM/FiMConfigSet/FiMInhibitionConfig	guration
BSW Parameter	BSW Type	
FiMInhInhibitionMa	ask EcucEnumerationParamDef	
BSW Description		
The configuration parameter is used to specify the inhibition mask for an event - FID relation.		
Template Description		
This represents the value of the inhibition mask behavior.		



M2 Parameter		
DiagnosticExtract::Fim::DiagnosticFunctionIdentifierInhibit.inhibitionMask		
Mapping Rule Mapping Type		
	full	
Mapping Status Mapping ID		
valid		

BSW Module	BSW Context		
FiM	FiM/FiMConfigSet/FiMInhibitionConfiguration/FiMInhInhibitionMask		
BSW Parameter		BSW Type	
FIM_LAST_FAILE	)	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
	UDS_STATUS_TF flag of Dem Eventst	atus is set	
Use case: Re-conf	iguration, avoiding follow-up errors		
	Template Description		
This represents the	This represents the inhibition mask behavior "last failed".		
M2 Parameter	M2 Parameter		
	Fim::DiagnosticInhibitionMaskEnum.las	stFailed	
Mapping Rule Mapping Type			Mapping Type
1:1 mapping full		full	
Mapping Status Mapping ID		Mapping ID	
valid			

BSW Module	BSW Context		
FiM	FiM/FiMConfigSet/FiMInhibitionConfiguration/FiMInhInhibitionMask		
BSW Parameter	BSW Parameter BSW Type		
FIM_NOT_TESTE	D	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
	cle - DEM_UDS_STATUS_TNCTOC flag	of Dem Eventstatus is	s set.
Use case: Schedu	ling of monitors.		
Template Description			
This represents the	e inhibition mask behavior "not tested".		
M2 Parameter	M2 Parameter		
DiagnosticExtract::	:Fim::DiagnosticInhibitionMaskEnum.no	tTested	
Mapping Rule Mapping Ty		Mapping Type	
1:1 mapping fu		full	
Mapping Status		Mapping ID	
valid			

BSW Module	BSW Context		
FiM	FiM/FiMConfigSet/FiMInhibitionConfiguration/FiMInhInhibitionMask		
BSW Parameter		BSW Type	
FIM_TESTED		EcucEnumerationLiteralDef	
<b>BSW Description</b>			
Tested - DEM_UDS_STATUS_TNCTOC flag of Dem Eventstatus is not set.			
Use case: Self deactivation, check during driving cycle.			
Template Description			
This represents the inhibition mask behavior "tested".			
M2 Parameter			
DiagnosticExtract::Fim::DiagnosticInhibitionMaskEnum.tested			



Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	

BSW Module	BSW Context			
FiM	FiM/FiMConfigSet/FiMInhibitionConfiguration/FiMInhInhibitionMask			
BSW Parameter		BSW Type		
FIM_TESTED_ANI	D_FAILED	EcucEnume	erationLiteralDef	
BSW Description				
	ed - DEM_UDS_STATUS_TF flag IS_TNCTOC flag is not set	of Dem	Eventstatus is set and	
	deadlocks, repeated monitoring.			
Template Descrip	tion			
This represents the	This represents the inhibition mask behavior "tested and failed".			
M2 Parameter				
DiagnosticExtract::	Fim::DiagnosticInhibitionMaskEnum.tes	stedAndFaile	d	
Mapping Rule			Mapping Type	
1:1 mapping			full	
Mapping Status			Mapping ID	
valid				

BSW Module	BSW Context	
FiM	FiM/FiMConfigSet	
BSW Parameter		BSW Type
FiMSummaryEven	t	EcucParamConfContainerDef
BSW Description		

The summarized EventId definition record consists of a summarized event ID and specific Dem Events.

This record means that a particular FID that has to be disabled in case of summarized event (defined above) is to be disabled in any of the specific events. A possible solution could be assigning events as summarized events along with a list of specific events. During the configuration process the summarized event substitutes the referenced single events.

However, it is not outlined how this requirement is solved - whether by configuration process or by implementation within the FiM. The FiM configuration tool could also build up a suitable data structure for summarized events and deal with it in the FiM implementation.

### **Template Description**

This meta-class represents the ability to model a Fim event group, also known as a summary event in Fim terminology. This represents a group of single diagnostic events.

#### M2 Parameter

DiagnosticExtract::Fim::DiagnosticFimEventGroup

DiagnosticExtract imDiagnostici imEventaroup	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	

# E.5 J1939 Dcm



BSW Module	BSW Context		
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmChannel		
BSW Parameter		BSW Type	
J1939DcmBusType	9	EcucEnumerationPar	amDef
BSW Description			
Identifies the comm	nunication port		
Template Descrip	tion		
This represents the	e network ID for the J1939 cluster.		
M2 Parameter			
SystemTemplate::Fibex::Fibex4Can::CanTopology::J1939Cluster.networkId			
Mapping Rule			Mapping Type
	value 1 maps to J1939DCM_J1939_NETWORK_1		
	value 2 maps to J1939DCM_J1939_NETWORK_2		
value 3 maps to J1939DCM_J1939_NETWORK_3			full
value 4 maps to J1939DCM_J1939_NETWORK_4			
Mapping Status		Mapping ID	
valid			

BSW Module	BSW Context			
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmDspExternalSRDataElementClass/ J1939DcmDataElementInstance			
31939DCIII				
BSW Parameter		BSW Type		
J1939DcmDataEle	mentInstanceRef	EcucInstanceReferen	ceDef	
<b>BSW Description</b>				
Instance Reference	e to the primitive data which shall be rea	ad or written.		
	iableDataPrototypes in SenderReceiver		Interfaces and Pa-	
	ypes in ParameterInterfaces (read only)			
	oplicable if the AutosarDataPrototype is			
	E or BOOLEAN or if the AutosarDataP			
DataType of categor	DataType of category VALUE or TYPE_REFERENCE that in turn boils down to VALUE			
Template Description				
This represents the	This represents the dataElement in the application software that is accessed for diagnostic purpose.			
M2 Parameter	M2 Parameter			
DiagnosticExtract::	DiagnosticExtract::ServiceMapping::DiagnosticServiceDataMapping.mappedDataElement			
Mapping Rule Mapping Type			Mapping Type	
DiagnosticService	DiagnosticServiceDataMapping maps to a primitive data. full			
Mapping Status Mapping ID		Mapping ID		
valid	valid up_Dcm_00100			

BSW Module	BSW Context		
J1939Dcm		9DcmDspExternalSRDataElementClass/	
0.00020	J1939DcmSubElementInDataElemen	tInstance	
BSW Parameter		BSW Type	
J1939DcmSubEler	mentInDataElementInstanceRef	EcucInstanceReferenceDef	
BSW Description			
Instance Reference	Instance Reference to the primitve sub-element (at any level) of composite data in a port which shall		
be read.			
Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and Pa-			
rameterDataPrototypes in ParameterInterfaces (read only).			
This reference is applicable if the AutosarDataPrototype is typed with a ApplicationComposite-			
DataType.			
Template Description			



This represents the dataElement in the application software that is accessed for diagnostic purpose.		
M2 Parameter		
DiagnosticExtract::ServiceMapping::DiagnosticServiceDataMapping.mappedDat	aElement	
Mapping Rule Mapping Type		
DiagnosticServiceDataMapping maps to a primitive element within a composite data, where the AutosarDataPrototype is typed with a ApplicationComposite	full	
DataType.		
Mapping Status Mapping ID		
valid	up_Dcm_00101	

DOW Madeda	DOW On whent		
BSW Module	BSW Context		
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmDspExternalSRDataElementClass/		
01000D0III	J1939DcmSubElementInImplDataEle	mentInstance	
BSW Parameter		BSW Type	
J1939DcmSubEler	mentInImplDataElementInstanceRef	EcucInstanceReferer	nceDef
<b>BSW Description</b>			
Instance Reference	e to the primitve sub-element (at any lev	el) of composite data in	n a port which shall
be read.			
Supported are Var	iableDataPrototypes in SenderReceiver	Interfaces and NvData	Interfaces and Pa-
rameterDataProtot	ypes in ParameterInterfaces (read only)		
This reference is a	pplicable if the AutosarDataPrototype is	typed with a Impleme	ntationDataType of
category STRUCT	URE or ARRAY.		
Please note that in case of ARRAY the index attribute in the target reference has to be set to select			
a single array element.			
Template Description			
This represents the dataElement in the application software that is accessed for diagnostic purpose.			
M2 Parameter			
DiagnosticExtract::ServiceMapping::DiagnosticServiceDataMapping.mappedDataElement			
Mapping Rule Mapping Type			
DiagnosticServiceDataMapping maps to a primitive element within a compos-			
ite data, where the AutosarDataPrototype is typed with a ApplicationComposite			full
DataType ImplementationDataType of category STRUCTURE or ARRAY.			
Mapping Status			Mapping ID
valid			up Dcm 00102

BSW Module	BSW Context		
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmNode		
BSW Parameter		BSW Type	
J1939DcmService	OnlyDTCsMemoryDestinationRef	EcucSymbolicNameF	ReferenceDef
BSW Description			
Reference to the u	ser defined memory used for the Serv	ice Only DTCs handle	d by DM53, DM54,
and DM55.			
Template Descrip	tion		
The event destinati	The event destination assigns events to none, one or multiple origins.		
M2 Parameter			
DiagnosticExtract::	Dem::DiagnosticTroubleCode::Diagnos	ticTroubleCodeProps.n	nemoryDestination
Mapping Rule			Mapping Type
This upstream mapping shall only exist for a DiagnosticTroubleCodeJ1939 with			
attribute kind set to serviceOnly that references the DiagnosticTroubleCode		full	
Props that owns the memoryDestination.			
Mapping Status		Mapping ID	
valid		up_J1939Dcm_00005	



BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions	
BSW Parameter	BSW Type	
J1939DcmModeCo	ondition EcucParamConfContainerDef	
BSW Description		

This container contains the configuration of a mode condition or an environmental conditions which can be used as argument in J1939DcmModeRules.

One J1939DcmModeCondition shall contain either one J1939DcmSwcModeRef or one J1939DcmBswModeRef or one J1939DcmSwcSRDataElementRef.

Please note that the J1939Dcm acts as well as mode manager. Therefore the references J1939DcmSwcModeRef or one J1939DcmBswModeRef might point to provided ModeDeclarationGroupPrototypes of the J1939Dcm itself as well as to provided ModeDeclarationGroupPrototypes of other Bsw Modules or software components.

In case of a configured J1939DcmSwcModeRef or J1939DcmBswModeRef only the J1939DcmConditionType J1939DCM\_EQUALS or J1939DCM\_EQUALS\_NOT are applicable.

In case of J1939DcmSwcSRDataElementRef all literals of J1939DcmConditionType are possible.

#### **Template Description**

DiagnosticCompareConditions are atomic conditions. They are based on the idea of a comparison at runtime of some variable data with something constant. The type of the comparison (==, !=, <, <=, ...) is specified in DiagnosticCompareCondition.compareType.

#### **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvCompareCondition

Mapping Rule	Mapping Type
Depending on the reference a DcmModeCondition is mapped to a Diagnostic	
EnvModeCondition if only one reference is present and reference is a DcmSwc	
ModeRef or a DcmBswModeRef. If two references are present, a DcmSwc	full
SRDataElementRef and a DcmSwcSRDataElementValueRef, then DcmMode	
Condition is mapped to a DiagnosticEnvDataCondition.	
Mapping Status	Mapping ID
valid	

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939Dcm ModeCondition	
BSW Parameter	BSW Type	
J1939DcmBswMod	odeRef EcucInstanceReferenceDef	
BSW Description		

This parameter references a mode of a ModeDeclarationGroupPrototype provided by a Basic Software Module used for the condition.

Please note that such ModeDeclarationGroupPrototype are owned by a Basic Software Module Description in the role providedModeGroup.

## **Template Description**

This reference represents both the ModeDeclarationGroupPrototype and the ModeDeclaration relevant for the mode comparison.

#### **M2 Parameter**



DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvModeCondition.modeElement		
Mapping Rule	Mapping Type	
For DcmModeRef a new DiagnosticEnvBswModeElement is used, pointing to the ModeDeclaration via ModeInModuleDescriptionInstanceRef. This new DiagnosticEnvModeElement shall be aggregated by the same DiagnosticEnvironmentalConfition as the DiagnosticEnvModeCondition, in which the target of the reference DiagnosticEnvModeCondition.modeElement points to the this DiagnosticEnvModeElement.	full	
Mapping Status	Mapping ID	
valid	up_Dcm_00273	

BSW Module	BSW Context		
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939Dcm		
	ModeCondition/J1939DcmConditionType		
BSW Parameter		BSW Type	
J1939DCM_EQUA	LS	EcucEnumerationLite	eralDef
<b>BSW Description</b>			
Template Descript			
	nditionFormula.op:		
This attribute repre	esents the concrete operator (suppor	ted operators: and, o	or) of the condition
formula.			
DiagnosticCompa	reTypeEnum.isEqual:		
equal	reTypeEnum.isEqual:		
equal M2 Parameter	•		
equal M2 Parameter	reTypeEnum.isEqual:  Dcm::DiagnosticService::Environmenta	alCondition::Diagnosticl	EnvConditionFor-
equal M2 Parameter	•	alCondition::Diagnosticl	EnvConditionFor-
equal  M2 Parameter  DiagnosticExtract:: mula.op,	•	· ·	
equal  M2 Parameter  DiagnosticExtract:: mula.op,	Dcm::DiagnosticService::Environmenta	· ·	
equal  M2 Parameter  DiagnosticExtract:: mula.op, DiagnosticExtract::	Dcm::DiagnosticService::Environmenta	· ·	
equal  M2 Parameter  DiagnosticExtract:: mula.op, DiagnosticExtract:: Enum.isEqual  Mapping Rule  1:1 mapping	Dcm::DiagnosticService::Environmenta	· ·	CompareType
equal  M2 Parameter  DiagnosticExtract:: mula.op, DiagnosticExtract:: Enum.isEqual  Mapping Rule	Dcm::DiagnosticService::Environmenta	· ·	CompareType  Mapping Type

BSW Module	BSW Context		
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939Dcm		
01909DCIII	ModeCondition/J1939DcmConditionType		
BSW Parameter	BSW Type		
J1939DCM_EQUA	LS_NOT EcucEnumerationLiteralDef		
BSW Description			

# **Template Description**

# DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

# DiagnosticCompareTypeEnum.isNotEqual:

not equal

## **M2 Parameter**



DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFor-		
mula.op,		
DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticCompareType		
Enum.isNotEqual		
Mapping Rule Mapping Type		
1:1 mapping full		
Mapping Status Mapping ID		
valid	up_Dcm_00266	

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939Dcm ModeCondition/J1939DcmConditionType	
BSW Parameter	BSW Type	
J1939DCM_GREA	TER_OR_EQUAL EcucEnumerationLiteralDef	
BSW Description		
Tomplete Description		

#### **Template Description**

# DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

# DiagnosticCompareTypeEnum.isGreaterOrEqual:

greater than or equal

### **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFormula.op,

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticCompareType Enum.isGreaterOrEqual

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00269

BSW Module	BSW Context	
J1939Dcm J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingCondition		
01909DCIII	ModeCondition/J1939DcmConditionType	
BSW Parameter BSW Type		BSW Type
J1939DCM_GREATER_THAN EcucEnumerationLiteralDef		EcucEnumerationLiteralDef
BSW Description		

## **Template Description**

### DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

## DiagnosticCompareTypeEnum.isGreaterThan:

greater than

#### M2 Parameter

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFormula.op,

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticCompareType Enum.isGreaterThan



Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00267

BSW Module	BSW Context	
J1939Dcm J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/		9DcmProcessingConditions/J1939Dcm
01939DCIII	ModeCondition/J1939DcmConditionType	
BSW Parameter	BSW Type	
J1939DCM_LESS	OR_EQUAL EcucEnumerationLiteralDef	
<b>BSW Description</b>	BSW Description	
Template Description		

#### DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

## DiagnosticCompareTypeEnum.isLessOrEqual:

less than or equal

### M2 Parameter

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFormula.op,

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticCompareType Enum.isLessOrEqual

Mapping Rule	Mapping Type
	full
Mapping Status	Mapping ID

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939Dcm	
31939DCIII	ModeCondition/J1939DcmConditionType	
BSW Parameter	BSW Type	
J1939DCM_LESS	J1939DCM_LESS_THAN	
BSW Description		

## **Template Description**

## DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

## DiagnosticCompareTypeEnum.isLessThan:

less than

### **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFormula.op,

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticCompareType Enum.isLessThan

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up Dcm 00268



BSW Module	BSW Context		
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939Dcm		
	ModeCondition		
BSW Parameter		BSW Type	
J1939DcmSwcMod	deRef	EcucInstanceReferer	iceDef
<b>BSW Description</b>			
	erences a mode in a particular mode re	equest port of a softwa	are component that
is used for the cond	dition.		
Template Descrip	tion		
This reference repr	resents both the ModeDeclarationGroup	Prototype and the Mo	deDeclaration rele-
vant for the mode of	comparison.		
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvModeCondi-			
tion.modeElement	tion.modeElement		
Mapping Rule Mapping Type		Mapping Type	
For DcmModeRef	a new DiagnosticEnvSwcModeElemen	t is used, pointing to	
the ModeDeclaration via PModeInSystemInstanceRef. This new Diagnostic			
EnvModeElement shall be aggregated by the same DiagnosticEnvironmental			full
Confition as the DiagnosticEnvModeCondition, in which the target of the refer-			iuii
ence DiagnosticEnvModeCondition.modeElement points to the this Diagnostic			
EnvModeElement.			
Mapping Status			Mapping ID
valid			up_Dcm_00272

BSW Module	BSW Context		
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939Dcm		
010000011	ModeCondition		
BSW Parameter		BSW Type	
J1939DcmSwcSRI	DataElementRef	EcucReferenceDef	
<b>BSW Description</b>			
Reference to enviro	onmental conditions.		
It is possible to refe	erence a S/R Receiver-Port to read phy	sical values and comp	are (equal, greater,
less,)			
them with a configu	ured value that is defined by J1939Dcm	SwcSRDataElementVa	alueRef.
Template Descrip	Template Description		
This reference repr	resents the related diagnostic data elem	nent.	
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvDataCondi-			
tion.dataElement			
Mapping Rule Mapping Type			
1:1 mapping	full		
Mapping Status	Mapping Status Mapping ID		Mapping ID
valid	up_Dcm_00274		

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939Dcm ModeCondition	
01909DCIII		
BSW Parameter	BSW Type	
J1939DcmSwcSRI	DataElementValueRef EcucForeignReferenceDef	
BSW Description		
Reference to a constant specification defining the compare value for environmental condition.		
Template Description		



M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::Diagnostic	EnvDataCondi-
tion.compareValue	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00275

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions	
BSW Parameter		BSW Type
J1939DcmModeRule EcucParamConfContainerDef		
BSW Description		

This container contains the configuration of a mode rule which represents a logical expression with J1939DcmModeConditions or other J1939DcmModeRules as arguments.

All arguments are processed with the operator defined by DcmLogicalOperator, for instance: Argument\_A AND Argument\_B AND Argument\_C

## **Template Description**

A DiagnosticEnvConditionFormula embodies the computation instruction that is to be evaluated at runtime to determine if the DiagnosticEnvironmentalCondition is currently present (i.e. the formula is evaluated to true) or not (otherwise). The formula itself consists of parts which are combined by the logical operations specified by DiagnosticEnvConditionFormula.op.

If a diagnostic functionality cannot be executed because an environmental condition fails then the diagnostic stack shall send a negative response code (NRC) back to the client. The value of the NRC is directly related to the specific formula and is therefore formalized in the attribute DiagnosticEnvConditionFormula.nrcValue.

### **M2 Parameter**

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvCondition Formula

Mapping Rule	Mapping Type
A DcmModeRule is mapped to a DiagnosticEnvConditionFormula, if this Dcm ModeRule is a subrule, i.e. it is referenced by a DcmArgumentRef. In addition, a new DiagnosticEnvironmentalCondition shall be created with Diagnostic EnvironmentalCondition.formula containing a DiagnosticEnvConditionFormula. In both cases, if no DcmLogicalOperator is present in this DcmModeRule, then DiagnosticEnvConditionFormula shall be set to DiagnosticLogicalOperatorEnum.logicalAnd.	full
Mapping Status	Mapping ID
valid	

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939Dcm ModeRule	
BSW Parameter	r BSW Type	
J1939DcmArgume	mentRef EcucChoiceReferenceDef	
BSW Description		
This is a choice reference either to a mode condition or a an other mode rule serving as sub- expression.		



Template Description	
A DiagnosticEnvConditionFormulaPart can either be a atomic condition, e.g. a DiagnosticEnvCom-	
pareCondition, or a DiagnosticEnvConditionFormula, again, which allows arbitrar	ry nesting.
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::Diagnostic	EnvCondition
FormulaPart	
Mapping Rule	Mapping Type
Depending on the destination, one DcmArgumentRef is mapped to a Diagnostic	
EnvConditionFormula if "destination" is a DcmModeRule, and to a Diagnostic	
EnvCompareCondition, if "destination" is a DcmModeCondition. The order of	full
the aggregation of the DiagnosticEnvConditionFormulaParts shall correspond	
to the ordering of the index of the DcmArgumentRefs.	
Mapping Status	Mapping ID
valid	up_Dcm_00264

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939Dcn	
01909DCIII	ModeRule/J1939DcmLogicalOperato	r
BSW Parameter		BSW Type
J1939DCM_AND		EcucEnumerationLiteralDef
BSW Description		
Template Descrip	tion	
DiagnosticEnvConditionFormula.op:		
This attribute represents the concrete operator (supported operators: and, or) of the condition		
formula.		
DiagnosticLogicalOperatorEnum.logicalAnd:		
Logical AND		

### M2 Parameter

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFormula.op,

 $\label{lem:decomposition} Diagnostic Extract:: Dcm:: Diagnostic Service:: Environmental Condition:: Diagnostic Logical Operator Enum. logical And$ 

Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00261

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939Dcm ModeRule/J1939DcmLogicalOperator	
0.00020		
BSW Parameter	BSW Type	
J1939DCM_OR	EcucEnumerationLiteralDef	
BSW Description		
Template Description		



# DiagnosticEnvConditionFormula.op:

This attribute represents the concrete operator (supported operators: and, or) of the condition formula.

# DiagnosticLogicalOperatorEnum.logicalOr:

Logical OR

# M2 Parameter

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvConditionFormula.op,

DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticLogicalOperator Enum.logicalOr

Zilamiogicale:	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	Mapping ID
valid	up_Dcm_00262

BSW Module	BSW Context		
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939Dcm ModeRule		
BSW Parameter		BSW Type	
J1939DcmModeRu	9DcmModeRuleNrcValue EcucIntegerParamDef		ef
BSW Description			
Optional parameter which defines the NRC to be sent in case the mode rule condition is not valid.			
Template Description			
This attribute represents the concrete NRC value that shall be returned if the condition fails.			
M2 Parameter			
DiagnosticExtract::Dcm::DiagnosticService::EnvironmentalCondition::DiagnosticEnvCondition			
Formula.nrcValue			
Mapping Rule Mapping		Mapping Type	
1:1 mapping			full
Mapping Status			Mapping ID
valid			up Dcm 00263



# F Splitable Elements in the Scope of this Document

This chapter contains a table of all model elements stereotyped  $\ll$ atpSplitable $\gg$  in the scope of this document.

Each entry in Table F.1 consists of the identification of the specific model element itself and the applicable value of the tagged value atp.Splitkey.

For more information about the concept of splitable model elements and how these shall be treated please refer to [22].

Name of splitable element	Splitkey	
DiagnosticAging.agingCycle	agingCycle, variationPoint.ShortLabel	
DiagnosticContributionSet.commonProperties	commonProperties	
DiagnosticContributionSet.element	element, variationPoint.shortLabel	
DiagnosticContributionSet.serviceTable	serviceTable, variationPoint.shortLa- bel	
DiagnosticDataIdentifier.dataElement	dataElement, variationPoint.shortLabel	
DiagnosticEnableConditionGroup.enableCondition	enableCondition, variationPoint.short- Label	
DiagnosticEvent.connectedIndicator	shortName, variationPoint.shortLabel	
DiagnosticInfoType.dataElement	dataElement	
DiagnosticParameter.dataElement	shortName, variationPoint.shortLabel	
DiagnosticParameterIdentifier.dataElement	dataElement, variationPoint.shortLabel	
DiagnosticProtocol.diagnosticConnection	diagnosticConnection, variationPoint. shortLabel	
DiagnosticProtocol.serviceTable	serviceTable, variationPoint.shortLa-bel	
DiagnosticSecurityAccess.securityLevel	securityLevel	
DiagnosticServiceTable.diagnosticConnection	diagnosticConnection, variationPoint. shortLabel	
DiagnosticStorageConditionGroup.storageCondition	storageCondition, variationPoint. shortLabel	
DiagnosticTroubleCodeGroup.dtc	dtc, variationPoint.shortLabel	
DiagnosticTroubleCodeProps.extendedDataRecord	shortName, variationPoint.shortLabel	
DiagnosticTroubleCodeProps.freezeFrame	shortName, variationPoint.shortLabel	

Table F.1: Usage of splitable elements



# **G** Variation Points in the Scope of this Document

This chapter contains a table of all model elements stereotyped  $\ll$ atpVariation $\gg$  in the scope of this document.

Each entry in Table G.1 consists of the identification of the model element itself and the applicable value of the tagged value vh.latestBindingTime.

For more information about the concept of variation points and how model elements that contain variation points shall be treated please refer to [22].

Variation Point	Latest Binding Time
DiagnosticAging.agingCycle	preCompileTime
DiagnosticAging.threshold	preCompileTime
DiagnosticContributionSet.element	postBuild
DiagnosticContributionSet.serviceTable	postBuild
DiagnosticDataIdentifier.dataElement	postBuild
DiagnosticEnableConditionGroup.enableCondition	postBuild
DiagnosticEvent.connectedIndicator	postBuild
DiagnosticEvent.eventFailureCycleCounterThreshold	postBuild
DiagnosticFreezeFrame.recordNumber	preCompileTime
DiagnosticIndicator.healingCycleCounterThreshold	preCompileTime
DiagnosticParameter.dataElement	postBuild
DiagnosticParameterIdentifier.dataElement	postBuild
DiagnosticProtocol.diagnosticConnection	postBuild
DiagnosticProtocol.serviceTable	postBuild
DiagnosticRoutine.id	preCompileTime
DiagnosticServiceTable.diagnosticConnection	postBuild
DiagnosticStorageConditionGroup.storageCondition	postBuild
DiagnosticTroubleCodeGroup.dtc	postBuild
DiagnosticTroubleCodeGroup.groupNumber	preCompileTime
DiagnosticTroubleCodeObd.considerPtoStatus	preCompileTime
DiagnosticTroubleCodeObd.obdDTCValue	preCompileTime
DiagnosticTroubleCodeProps.extendedDataRecord	preCompileTime
DiagnosticTroubleCodeProps.freezeFrame	preCompileTime

**Table G.1: Usage of variation points**