
# HOW TO SOLDER THE QUIRKBOT KIT BACKPACKS


#### Solder headers first:

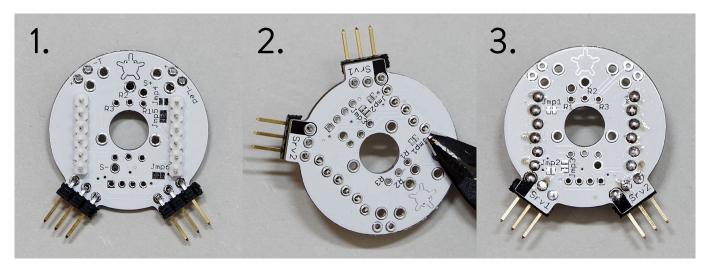

- 1. Insert the headers from the back (the headers for the servo connectors are optional).
- 2. Cut the leads flush with the board.
- 3. Solder from the front (the front of the board has the Srv1 and Srv2 markings).


Tips: At this point it's a good idea to clean off the solder flux residue.


### Create Speaker Backpack:

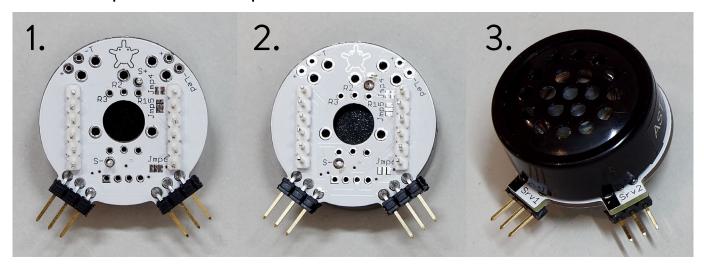

- 1. Insert the speaker in S+ and S- (make sure the + side of the speaker goes in S+).
- 2. Cut the leads flush and solder.
- 3. This is the result.


## Create IR-Proximity Backpack:

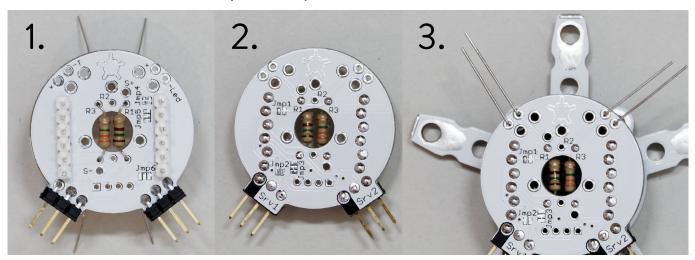


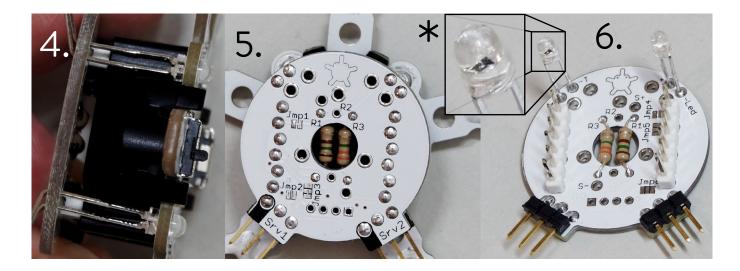

- 1. Insert the 150 Ohm resistor in R1 and the 3.3 MOhm resistor in R3.
- 2. Cut the leads flush and solder.
- 3. Put the backpack on the Quirkbot. Insert the IR-Transistor in T and the IR-LED in Led important: long lead in + and short lead in for both the IR-Transistor and the IR-LED.
- 4. Make sure the bulbs of IR-LED and IR-Transistor are sticking out of the Quirkbot eyes like shown.
- 5. Cut the leads flush and solder.
  - Tips: Cut and solder one lead at the time and take care to see the bulbs are still in the right position.
- 6. This is the result.
- \* The IR-Transistor has a visible black square inside the bulb, while the IR-LED doesn't.

## Create MIDI-output Backpack:

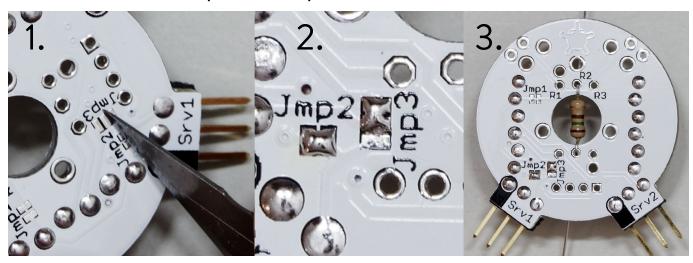

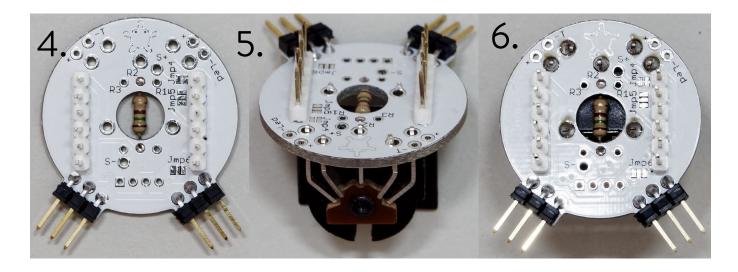

- 1. Cut the connection between the lower pads on Jmp3.
- 2. Connect the upper pads of Jmp3 and the pads of Jmp2 with solder bridges.
- 3. Insert the 150 Ohm resistor in R2.
- 4. Cut the leads flush and solder.
- 5. Insert the MIDI connector.
- 6. Solder the MIDI connector.
- 7. This is the result.

