

BSS: Soundweb London

This module controls an "Automixer" object in a Soundweb London program.



GENERAL INFORMATION

SIMPLWINDOWS

BSS Soundweb London Automixer v4.2 NAME:

CATEGORY:

Mixer

VERSION:

V4.2

SUMMARY:

This module controls an "Automixer" object in a Soundweb London program.

GENERAL NOTES:

Each object in a Soundweb London program is given an object number.

You have to specify the object id of the "Automixer" object that is to be controlled. (objectID

parameter)

The TX and RX of this module should be connected to a "BSS Soundweb London Node v4.2.usp" module.

This "Node" module needs to have its "Node" parameter set to the node of the

Soundweb London device to control.

All analog input and outputs range from 0d to 65535d (0% to 100%)

When you subscribe to a State-Variable, the Soundweb London will send an unsolicited updates automatically whenever that state-variable is changed in order to keep the Crestron system in sync with the London without requiring extra effort from the programmer to set up 'polling', or requiring the Crestron processor to constantly check for updates. The first time the subscribe message is sent the Soundweb London will respond with its current state much like a 'GET' statement. The Soundweb London will keep sending updates until a 'UNSUBSCRIBE' input is pulsed. Normal practice would be to tie the Subscribe input to the TCP/IP connection feedback so that if a socket is dropped it will automatically sync when the socket is re-established. If using RS232, putting a 1 on the subscribe input will ensure true-feedback.

NOTE: The subscribe and un-subscribe signals must be mutually exclusive as transitions from low-to-high while the other signal is already high is not allowed. If this error state is encountered, an error message will be sent to

the console.

First select an input to control by the analog input "input". Then set all the right values for that

CRESTRON HARDWARE

REQUIRED:

X-series or preferable 2-series

SETUP OF CRESTRON HARDWARE:

The demo program was created on a CP2E with TPS-4000

The Soundweb London is to be connected on a com port with a standard crossed cable and the

following settings:

115200, 8, 1, N

Or to use TCP/IP: Port 1023

VENDOR FIRMWARE:

3.06


VENDOR SETUP:

Soundweb London Blu-160





CABLE DIAGRAM:

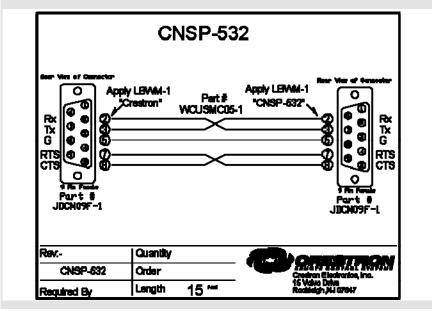

CONTROL:		
gain	Α	set the gain for the currently selected inputinf to +10
Mute	D	mute the currently selected input
Unmute	D	unmute the currently selected input
Pan	Α	set pan for currently selected input
polarityOn	D	switch the polarity of the currently selected input on







polarityOff	D	switch the polarity of the currently selected input off
auxX	Α	set the gain for aux X of the currently selected inputinf to +10
routeToGroupXOn	D	route the currently selected input to group X
routeToGroupXOff	D	stop the currently selected input being routed to group X
soloOn	D	put solo for the currently selected input on
soloOff	D	put solo for the currently selected input off
overrideOn	D	put override for the currently selected input on
overrideOff	D	put override for the currently selected input off
offGain	Α	set the off gain for the currently selected input40 to 0
autoOn	D	put auto for the currently selected input on
autoOff	D	put auto for the currently selected input off
input	Α	set which input is to be controlled. 1d to 48d







subscribe	D	Set high to subscribe to the functions (state variables) , of the currently selected input.
unsubscribe	D	Set high to unsubscribe to the functions (state variables), of the currently selected input.
rx	S	connected to the "modulesRx" of the correct "BSS Soundweb London Node v4.2.usp" module
	D S	connected to the "modulesRx" of the correct "BSS

FEEDBACK:		
gain_fb	А	Gain feedback
mute_fb	D	mute feedback. High when muted
pan_fb	Α	pan feedback
polarity_fb	D	Polarity feedback. High when polarity on
auxX_fb	Α	aux X feedback
routeToGroupX_fb	D	High when currently selected input is routed to group X
solo_fb	D	Solo feedback. High when solo is on
override_fb	D	override feedback. High when override is on
offGain_fb	Α	off gain feedback
auto_fb	D	Auto feedback. High when auto is on
tx	S	connected to the "modulesTx" of the correct "BSS Soundweb London Node v4.2.usp" module

PARAMETERS:		
objectiD	d	specifies which objectiD is to be controlled. (3 bytes, for example: "\xOO\xOO\xO1") (get this information from the BSS programmer)







TESTING:		
OPS USED FOR TESTING:	4.003.0015	
COMPILER USED FOR TESTING:	2.12.44	
SAMPLE PROGRAM:	BSS Soundweb London v4.2 Demo Program	
REVISION HISTORY:	V1.0 Creation V3 – BSS made changes to a number of modules. V4.0 – Changed the RX\$ input on the Simpl+ modules to from a STRING_iNPUT to a BUFFER_iNPUT. Changed the room combine module so it requests the current value when it is done making changes.	
	V4.1 – Changed subscribing to two input signals one for subscribing and one for unsubscribing. Changed the module from an .usp file and an .umc file to just an .usp file.	
	V4.2 – fixed rounding error, updated help file.	