

REEF3D :: User Guide



REEF3D 21.11

Contact

Hans Bihs

Professor
Marine Civil Engineering
NTNU Trondheim

hans.bihs@ntnu.no

Team

Arun Kamath
Csaba Pakozdi
Tobias Martin
Weizhi Wang

Contents

1	Introduction	1
2	Functions	3
2.1	A :: Hydrodynamic models	3
2.2	B :: Boundary Conditions	11
2.3	C :: Concentration	28
2.4	D :: Discretization	31
2.5	F :: Free Surface	33
2.6	G :: Grid Options	40
2.7	H :: Heat Transfer	41
2.8	I :: Initialization	44
2.9	M :: MPI	47
2.10	N :: Numerical Options	47
2.11	P :: Printer	50
2.12	S :: Sediment	60
2.13	T :: Turbulence	67
2.14	W :: Water and Material Properties	69
2.15	X :: 6DOF	73
2.16	Z :: FSI	83
3	Compiling the Code	85
3.1	Install Required Packages	85
3.1.1	Installing GCC GNU compiler on Mac OS X	85
3.1.2	Installing OpenMPI	85
3.1.3	Installing HYPRE	86
3.2	User Installation: Makefile	87
3.3	Developer Installation: CodeLite	87
3.4	Installing REEF3D on Windows 10	89
3.4.1	Getting Unix Terminal on Windows 10	90
3.4.2	Installing Compilers	90
3.4.3	Additional step for Windows for visualization using Paraview	91

4	Running the Code	93
4.1	DIVEMesh	93
4.2	REEF3D	93
5	Post-Processing	95
5.1	Paraview	95
5.2	Additional step for Windows users to use paraview	95
5.3	Visualising Two-Phase Flow Results in Paraview	95
6	Running the Code	99
7	Tutorial REEF3D::SFLOW	101
7.1	2nd-order Stokes waves	101
7.2	Cnoidal waves over constant water depth	102
7.3	Solitary wave over constant water depth	104
7.4	Wave propagation over a submerged bar	106
8	Tutorial REEF3D::FNPF	109
8.1	2nd-order Stokes wave in intermediate water depth	109
8.2	Wave propagation over a submerged bar	110
8.3	Wave breaking over a mild slope	113
8.4	Irregular wave sea state in 2D	114
8.5	wave propagation over natural bathymetry	116
8.6	3D short-crested multi-directional irregular wave	118
9	Tutorial REEF3D::CFD	121
9.1	2D Dam Break	121
9.2	3D Dam Break with Obstacle	123
9.3	2D Vortex Shedding	125
9.4	Flow through a Narrow Contraction	126
9.5	Flow around a Circular Pier	128
9.6	Rectangular Wave Tank	130
9.7	Rectangular Wave Tank with DWG and AWA	132
9.8	Rectangular Wave Tank with Wavemaker	134
9.9	Wave Propagation over a Submerged Bar	137
9.10	Plunging Breaking Waves over Slope	141
9.11	Plunging Breaking Waves over Slope with Non-uniform Grid	145
9.12	Shoaling over Irregular Topography	146
9.13	Non-Breaking Wave Forces	150
9.14	Breaking Wave Forces	152
9.15	Heave decay of a sphere with Non-uniform Grid	156

1. Introduction

Todays ever increasing computational resources make it possible to compute incredible large flow problems. Every company and research institution interested in performing serious CFD (computational fluid dynamics) simulations has now the real option to buy and maintain supercomputers at reasonable costs. The limiting factor of such simulations becomes less the problem size but rather the time it takes for the engineer to generate grids, start simulations and post-process the results. With the increasing speed of high-performance computer clusters, the amount of grid points is growing. As Peric ? writes, in the future the "computational points in a mesh will be counted in billions", the issue of grid quality will become less relevant because the mesh will be very fine in any case.

With these observations in mind, the numerical model REEF3D was designed under the following premises:

1. hydraulic, coastal, marine and environmental engineering
 - level set method for complex free surface flow
 - open channel flow boundary conditions
 - numerical wave tank boundary conditions
 - sediment transport
2. ease of use: grid generation as limiting factor of user productivity
 - immersed boundary
 - STL file input
 - easy natural bathymetry handling
3. increasing computer performance enables larger computations, but can only be exploited in parallel
 - full parallelization based on the domain decomposition strategy and MPI
4. ease of use: stable, accurate and fast numerical simulation
 - staggered grid: tight velocity-pressure coupling
 - very accurate and stable WENO discretization
 - adaptive time-stepping for maximum stability
5. numerical tool should be easy to maintain, changes should be possible
 - C++ Programming
 - object oriented code
 - MPI, an industry standard for high-performance computing

The source code of REEF3D is available at www.reef3d.com and is published under the GPL license, version 3. Open-source CFD software has several advantages. All code developments have the potential to benefit a large audience, including students, researchers and engineers working on academic or commercial problems. The usage of open-source CFD programs comes at no cost. It gives the people who work with the software the opportunity to gain insights into how the numerical model works and build up valuable competence and experience in this field. This makes contributions to open-source software a sustainable investment in a lot of ways. Open-source also means that REEF3D is more flexible and more open to innovation.

2. Functions

A file called “ctrl.txt” is used to give the necessary data to the program. The structure of this file is as follows: a capital letter and a number are used to enable different algorithms followed by the corresponding variables. The “ctrl.txt” file needs to be stored in the same location as the executable REEF3D. In front of the variables in the definition of the algorithms you find either an “int” or a “float”. For “int” an integer needs to be given, for “float” a floating-point number is expected by the program. It is possible to enter comments in the “ctrl.txt” by entering the `//` followed by the comment, but take care not to include capital letters as that will cause the program to look for a valid command option.

Most of the options in this section (A) will determine the discretization and other parameters for the first three models listed above. The validity of the functions for the particular models is denoted by the filled circle beside the function under the columns S (SFLOW), F (FNPF), N (NSEWAVE) and C (CFD) in all the sections for functions in this manual.

Commands with an asterix (*) can be issued multiple times to create multiple instances of the call.

2.1 A :: Hydrodynamic models

The commands in this section are used to select the hydrodynamic model that is to be activated for the simulation. This will determine the governing equations that will be used for the simulations. The different models available in REEF3D are:

- **S** : SFLOW: A depth-averaged shallow water equations model, that solves the non-hydrostatic pressure.
- **N** : NSEWAVE: This model solves the Navier-Stokes in three dimensions, and is suitable for large scale wave modeling with a single-value free surface.
- **F** : FNPF: This model solves the Laplace equation.
- **C** : CFD : This solved the RANS equations.

Valid for:

S F N C

● ● ● ●

A 10 [int](#) Hydrodynamic Model

2 SFLOW

3 FNPF

5 NSEWAVE

6 CFD

default: 6

● ○ ○ ○

A 210 [int](#) Time scheme for SFLOW momentum equations

2 2nd-order Runge-Kutta

3 3rd-order Runge-Kutta

default: 3

● ○ ○ ○

A 211 [int](#) Convection scheme for SFLOW momentum equations

1 FOU

2 CDS2

4 WENO FLUX

5 WENO HJ

6 High Resolution TVD scheme with Minmod limiter

7 High Resolution TVD scheme with van Leer limiter

8 High Resolution scheme with Smart limiter

default: 0

● ○ ○ ○

A 212 [int](#) Turn on diffusion for SFLOW velocities

0 OFF

1 explicit

2 implicit

default: 0

● ○ ○ ○

A 214 int Turn on convection for vertical SFLOW velocity w_s

This option should be turned off for open-channel flow.

0 OFF

1 ON

default: 1

● ○ ○ ○

A 217 int Boundary conditions at walls

1 slip

2 no-slip

default: 2

● ○ ○ ○

A 218 int Turn on roughness

0 OFF

1 ON

default: 0

● ○ ○ ○

A 220 int Pressure scheme for SFLOW dynamics pressure w_s

0 hydrostatic

1 linear non-hydrostatic pressure

2 quadratic non-hydrostatic pressure

default: 0

● ○ ○ ○

A 223 double Blending of previous and current pressure for gradient calculation

default: 0.5

● ○ ○ ○

A 240 int Free surface scheme for SFLOW

0 OFF

1 ON

default: 1

● ○ ○ ○

A 241 `int` Discretization scheme for SFLOW water levels

1 FOU

2 CDS2

4 WENO FLUX

default: 1

● ○ ○ ○

A 242 `int` Hydrostatic pressure for shallow areas

0 OFF

1 ON

default: 0

● ○ ○ ○

A 243 `int` Turn on wetting and drying algorithm

0 OFF

1 ON

default: 1

● ○ ○ ○

A 244 `double` Use absolute wetting-drying threshold value

default: 0.00005

● ○ ○ ○

A 245 `double` Use relative wetting-drying threshold value (dx multiplier)

default: 0.001

● ○ ○ ○

A 246 `int` Turn on breaking wave algorithm (turns off dynamics pressure for breaking waves)

0 OFF

1 ON

default: 1

● ○ ○ ○

A 247 `double` Breaking wave threshold parameter

default: 0.6

● ○ ○ ○

A 248 `int` Turn on breaking wave persistance algorithm (turns off dynamics pressure for breaking waves)

0 OFF

1 ON

default: 1

● ○ ○ ○

A 249 `double` Breaking wave persistence parameter

default: 0.3

● ○ ○ ○

A 260 `int` Turbulence model

0 OFF

3 Prandtl length scale model

4 Parabolic eddy-viscosity model

default: 0

● ○ ○ ○

A 261 `double` Length scale factor for length scale turbulence model

default: 0.267

● ○ ○ ○

A 262 `double` Factor for parabolic eddy-viscosity model

default: 0.0667

○ ● ○ ○

A 310 `int` Time scheme for FNPF algorithm

3 3rd-order TVD Runge-Kutta

4 4th-order Runge-Kutta

default: 3

○ ● ○ ○

A 311 `int` Spatial discretization for KFSFBC and DFSFBC

0 OFF

1 CDS2

2 CDS4

4 WENO5

5 WENO5 with wetting-and-drying

6 CDS6

7 WENO7

default: 5

○ ● ○ ○

A 312 `int` Spatial discretization for sigma coordinate system

2 CDS2

3 CDS4

default: 2

○ ● ○ ○

A 320 `int` Order of spatial discretization for Laplace equation

1 CDS2

2 CDS4

default: 1

○ ● ○ ○

A 321 `int` Order of KBEDBC for 4th-order Laplace equation

1 2nd-order

2 4th-order

default: 1

A 329 `int` Order of Dirichlet wave generation and active wave absorption velocity potential extrapolation

1 1st-order

2 2nd-order

default: 1

A 341 `double` coastline relaxation zone factor times dx

default: 0.0

A 342 `double` coastline relaxation zone absolute distance

default: 0.0

A 343 `int` Turn on wetting-and-drying

0 OFF

1 ON

default: 1

A 344 `double` Use absolute wetting-drying threshold value

default: 0.00005

A 345 `double` Use relative wetting-drying threshold value (dx multiplier)

default: 0.001

A 346 `double` Damping viscosity within the coastline, modulated by the coastline relaxation zone.

default: 0.0

A 350 [int](#) Breaking wave algorithm

0 OFF

1 viscosity based

2 filter based

default: 0

A 351 [int](#) Breaking wave detection

0 OFF

1 shallow water

2 deep water

3 shallow and deep water

default: 0

A 352 [int](#) Added filtering for breaking when viscosity breaking algorithm is used for additional robustness, for breaking in:

0 OFF

1 shallow water

2 deep water

3 shallow and deep water

default: 1

A 354 [double](#) Breaking wave threshold parameter shallow water

default: 0.6

A 355 [double](#) Breaking wave slope threshold deep water

default: 1.25

A 361 `int` Breaking wave filter algorithm: outer iterations

default: 5

A 362 `int` Breaking wave filter algorithm: inner iterations

default: 2

A 365 `double` Breaking wave viscosity

default: 1.86

A 368 `int` Breaking wave viscosity based algorithm inside numerical beach relaxation zone

0 OFF

1 ON

default: 0

A 369 `double` Breaking wave viscosity inside the numerical beach relaxation zone

default: 1.86

2.2 B :: Boundary Conditions

Valid for:

S F N C

B 10 `int` Wall functions for the velocities

0 OFF

1 ON

default: 0

○ ○ ● ●

B 20 `int` Slip or no-slip boundary conditions for velocities

- 1** slip
 - 2** no-slip
- default:** 2

○ ○ ○ ●

B 26 `int` Boundary condition implementation for level set method

- 1** Neumann
 - 2** Extend
 - 3** Extend at the bed only
- default:** 1

● ○ ● ●

B 50 `double` Global wall roughness

default: 0.001

○ ○ ○ ●

B 51 `double` Wall 1 roughness

default: nan

○ ○ ○ ●

B 52 `double` Wall 2 roughness

default: nan

○ ○ ○ ●

B 53 `double` Wall 3 roughness

default: nan

○ ○ ○ ●

B 54 `double` Wall 4 roughness

default: nan

B 55 `double` Wall 5 roughness

default: nan

B 56 `double` Wall 6 roughness

default: nan

B 60 `int` Enable ioFlow for open channel flow

This parameter is important for open channel flow calculations. The ioFlow module makes sure, that the inflow discharge as given in W10 is constant throughout the computation even though the inflow water level may change. This is the counterpart to B90 for open channel flow. When selecting the hydrograph inflow option, make sure that a file with the name "hydrograph.dat" is present in the simulation folder. When selecting the hydrograph outflow option, make sure that a file with the name "hydrograph_out.dat" is present in the simulation folder. The data format of the hydrograph file consists of two columns, the first one gives the time in seconds and the second column the discharge in m^3/s .

0 OFF

1 constant inflow

2 hydrograph inflow

3 hydrograph outflow

4 hydrograph inflow and outflow

default: 0

B 61 `int` Inflow profile for ioFlow

1 constant velocity

2 logarithmic profile bed

3 constant velocity only for phase 1

4 logarithmic profile only for phase 1, bed

5 logarithmic profile only for phase 1, sidewalls and bed

default: 2

B 70 * `double` value, `double` distance, `double` line angle, `double` line x-origin, `double` line y-origin; for use of relaxation method for fixed water level

default: na

○ ○ ○ ●

B 71 * `double` value, `double` distance, `double` line angle, `double` line x-origin, `double` line y-origin; for use of relaxation method for fixed water level for initialization only

default: na

○ ○ ○ ●

B 75 `int` Outflow boundary condition

1 zero gradient

2 convection condition

default: 1

● ○ ○ ●

B 77 `int` Pressure outflow boundary conditions

1 controlled outflow

2 free stream outflow

default: 1

○ ○ ○ ●

B 81 `double` x-location for focus, y-location for focus, time of wave focusing
(For a 2D simulation set y-location to 0.0)

default: 0.0 ;0.0; 0.0

● ● ● ●

B 82 `int` Type of focusing amplitudted calculation

1 NewWave

2 Spectrum

3 Constant wave steepness spectrum

4 Constant wave amplitude

default: 1

● ● ● ●

B 83 `double` Gain factor per wave component for constant wave steepness spectrum focused waves. The amplitudes of the wave components A_i are calculated using $A_i = \frac{B83}{k_i}$. The frequency distribution is calculated as defined in B 84.

default: 0.0025

● ● ● ●

B 84 `int` Frequency spectrum discretisation method

- 1** Peak enhance method
- 2** Equal energy method
- 3** Uniform distribution

default: 1

● ● ● ●

B 85 `int` Wave spectrum for irregular waves In case of the spectrum file, provide a "spectrum-file.dat", with the two columns " ω " and "S".

- 1** Pierson-Moskowitz
- 2** JONSWAP
- 3** Torsethaugen
- 4** Wavepackets
- 5** Wavepackets for steep waves
- 6** Gaussian Wavepackets
- 10** spectrum file
- 21** Goda JONSWAP
- 22** TMA

default: 1

● ● ● ●

B 86 `int` Number of regular waves for irregular wave generation

default: 10

● ● ● ●

B 87 `double` ω_s and ω_e for irregular wave generation When not given, the model will calculate the values automatically.

default: 0.0 ; 0.0

● ● ● ●

B 88 `double` γ for irregular wave generation with JONSWAP spectrum

default: 3.3

● ● ● ●

B 89 `int` Turn on wave generation optimization through space-time decomposition for relaxation method. Currently supported for the following wave theory options:

B 92 5, B 92 31, B 92 41, B 92 51

0 OFF

1 ON

default: 0

● ● ● ●

B 90 `int` Enable ioWave for numerical wave tank This parameter turns on the numerical wave tank. It is the counterpart to B60 for wave simulations. Different options for generating and dissipating waves exist.

0 OFF

1 ON

default: 0

● ● ● ●

B 91 `double` wave height, wave length

The main wave parameters are given here. For regular waves the first values is H , whereas for irregular waves, the first value is the significant wave height. Alternatively B93 can be used, when the wave period is known.

default: 0.0 ; 0.0

● ● ● ●

B 92 [int](#) Wave type Different wave theories can be used as input for the numerical wave tank. It is important, to check beforehand whether the selected theory fits the given wave conditions consisting of wave height, wave length/wave period and still water level.

For the piston wavemaker theory with η timeseries input, provide a "wavemaker_eta.dat" input file with two columns "t" and " η "

For the piston and flap wavemaker theories, provide a "wavemaker.dat" input file with two columns "t" and "X" or "t" and " β ", depending on input from B 116.

For the double-hinged flap wavemaker, two "X" or two " β " columns are expected. For giving two "X" columns, this will be the total exitation at the end of each flap. For giving two " β " columns, the second angle is the additional exitation of the second flap.

For the wave reconstruction, provide a "waverecon.dat" input file with three columns giving "A" and " ω " and phase " ϕ " for each of the harmonic wave components.

1 Shallow Water

2 Intermediate

3 Deep Water

4 2nd-order Stokes Waves

5 5th-order Stokes Waves (Fenton)

6 Shallow Water Cnoidal Waves

7 1st-order Cnoidal Waves

8 5th-order Cnoidal Waves

9 1st-order Solitary Wave

10 3rd-order Solitary Wave

11 5th-order Stokes Waves (Skjelbreia)

20 Piston Wavemaker based on η timeseries

21 Piston Wavemaker

22 Flap Wavemaker

23 Double-hinged Flap Wavemaker

31 1st-order Irregular Waves

32 2nd-order Irregular Waves (Longuet-Higgins)

33 2nd-order Irregular Waves (Schäffer)

41 1st-order Focused Waves

42 2nd-order Focused Waves (Longuet-Higgins)

43 2nd-order Focused Waves (Schäffer)

51 Wave Reconstruction with 1st-order Irregular Waves

52 Wave Reconstruction with 2nd-order Irregular Waves (Longuet-Higgins)

53 Wave Reconstruction with 2nd-order Irregular Waves (Schäffer)

61 Wave Coupling WCP, FNPF to CFD

70 Steady Surface Gravity Wave (currently FNPF only)

default: 0

● ● ● ●

B 93 `double` wave height, wave period

The main wave parameters are given here. For regular waves the first values is H , whereas for irregular waves, the first value is the significant wave height. Alternatively B91 can be used, when the wavelength is known.

default: 0.0 ; 0.0

● ● ● ●

B 94 `double` water depth d for wave theory

If not given, d will be set to F 60, which requires the bed to be located at $z = 0.0$ m.

default: na

● ● ● ●

B 96 `double` Wave Generation and Beach parameters, dist1, dist2

dist1 ist the distances from the beginning of the wave flume (default, can be changed, see B 106), dist3 is the distance measured from the end of the wave flume (default, can be changed, see B 107).

default: 0.0 ; 0.0

● ● ● ●

B 98 `int` Wave Generation Method Relaxation Method 2 ramps up the values for the input wave within one zone following the function by ?. Relaxation Method 1 uses two zones to generate the waves ?. For the Dirichlet type, waves are generated by assigning the values for the free surface and the velocity in the inflow boundary only.

0 OFF

2 Relaxation Method 2

3 Dirichlet

4 Dirichlet with Active Absorption, based on shallow water theory

default: 0

● ● ● ●

B 99 `int` Numerical Beach Method Both relaxation methods dissipate the wave energy by ramping the free surface down to the still water level, the velocity to the zero and the pressure to its hydrostatic distribution for still water conditions. Typically the length of the dissipating relaxation zone should be two wavelengths. The Active Wave Absorption avoids reflections by generating a wave opposite of the reflected wave, thus canceling it out. The method is more efficient in computational terms, as it does not require

additional space.

In order to use the Active Wave Absorption beach, keep in mind to use the active beach boundary condition in the C data set in DIVEMesh.

0 OFF

1 Relaxation Method 1

2 Relaxation Method 2

3 Active Wave Absorption, based on shallow water theory

4 Active Wave Absorption, based on intermediate water theory

5 Active Wave Absorption, using a flap wavemaker (see B 123)

default: 0

● ● ● ●

B 101 `int` Ramp function for wave generation

0 OFF

1 On, based on wave period

2 On, based on simulation time

default: 0

● ● ● ●

B 102 `double` Ramp function for duration in wave periods or simulation time (see B 101)

default: 1.0

● ● ● ●

B 105 `double` angle β , x and y coordinates for the distance origin for the generated wave

default: 0.0 ; 0.0 ; 0.0

● ● ● ●

B 106 * `double` angle β , x and y coordinates for the distance origin of wave generation relaxation zone

default: 0.0 ; 0.0 ; 0.0

● ● ● ●

B 107 * `double Xstart, Xend, Ystart, Yend` and acting distance d of numerical beach relaxation zones.

As default, without any user input for B 107, a relaxation zone for the numerical beach is created at the end of the domain, i.e. at the maximum x-coordinates of the domain, with an orientation perpendicular to the x-axis and with infinite length using the relaxation distance from B 96. If user input is provided for B 107, the default relaxation zone will not be created and the input from B 96 will not be used. Instead the start, end and acting distance of the relaxation zone of the numerical beach are provided through B 107. Multiple numerical beach generation zones are possible.

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

● ● ● ●

B 108 `double Xstart, Xend, Ystart, Yend` and acting distance d of wave generation relaxation zones.

As default, without any user input for B 108, a relaxation zone for the wave generation is created at the beginning of the domain, i.e. at the minimum x-coordinates of the domain, with an orientation perpendicular to the x-axis and with infinite length using the relaxation distance from B 96. If user input is provided for B 108, the default relaxation zone will not be created and the input from B 96 will not be used. Instead the start, end and acting distance of the relaxation zone of the wave generation are provided through B 108.

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

● ● ● ●
● ● ● ●

B 111 `double Zstart Zend` for the flap wavemaker

default: 0.0 ; 0.0

● ● ● ●

B 112 `double Zstart Zhinge2, Zend` for the double-hinged flap wavemaker

default: 0.0 ; 0.0 : 0.0

○ ○ ○ ●

B 115 `int` Vertical velocity component for flap wavemaker kinematics

0 OFF

1 ON

default: 0

● ● ● ●

B 116 int Flap wavemaker kinematics input as paddle motion or angle

1 $X(t)[m]$

2 $\beta(t)[rad]$

default: 1

● ● ● ●

B 117 double Starting time shift for wavemaker kinematics input

default: 0.0

● ● ● ●

B 120 double phase angle shift for periodic regular waves

default: -90°

● ● ● ●

B 121 int Enable air velocity in wave relaxation zone

0 OFF

1 ON

default: 1

○ ○ ○ ●

B 123 double Z-coordinate for active wave absorption hinge location

default: 0.0

● ● ● ●

B 130 int Enable directional spreading for irregular waves

0 OFF

1 Cosine squared

2 Mitsuyasu

default: 0

● ● ● ●

B 131 `double` Main direction for multidirectional irregular waves

default: 0.0°

● ● ● ●

B 132 `double` Start and end angle for directional spreading

default: -90.0° ; 90.0°

● ● ● ●

B 133 `int` Number of angle intervals for directional spreading

default: 1

● ● ● ●

B 136 `int` Type of multi-directional irregular wave calculation

- 1** DSM - double summation method
- 2** PSSM - Pascal's Single Summation Method
- 3** YSSM - Yu's Single Summation Method
- 4** EEM - equal energy method, to be used together with B 84 2

default: 1

● ● ● ●

B 139 `int` Seed number for the random phase generation of irregular waves

0 time based seed number

>0 input based seed number

default: 0

● ● ● ●

B 140 `double` Numerical Beach: start transition x1, start full damping x2, β damping factor

default: 0.0 ; 0.0 ; 0.0

● ○ ○ ○

B 160 `int` Number of vertical layers for obtaining depth-averaged velocities in the wave generation for REEF3D::SFLOW

default: 5

○ ● ○ ○

B 170 `int` Number of Fourier modes for calculating the steady surface gravity wave (B 92 70)

default: 1024

○ ○ ○ ●

B 180 `int` Enable ioGravity for gravity waves

0 OFF

1 ON

default: 0

○ ○ ○ ●

B 181 `double` x-Gravity Wave frequency, x-Gravity Wave amplitude, x-Gravity Wave Phase change

default: 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

B 182 `double` y-Gravity wave frequency, y-Gravity wave amplitude, y-Gravity wave phase change

default: 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

B 183 `double` z-Gravity wave frequency, z-Gravity wave amplitude, z-Gravity wave phase change

default: 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

B 191 `double` Angle for rotation around x-axis, rotation frequency, y-coordinate, z-coordinate

default: 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

B 192 `double` Angle for rotation around y-axis, rotation frequency, x-coordinate, z-coordinate

default: 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

B 194 `double` start time rotation, end time rotation

default: 0.0 ; 0.0

○ ○ ○ ●

B 210 `int` Patch boundary condition: inflow or outflow condition

1 inflow

2 outflow

default: 2

○ ○ ○ ●

B 240 * `double` Darcy porous media as rectangular box: $C, D, x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

B 241 `int` Porous media in x-direction for B240

0 OFF

1 ON

default: 1

○ ○ ○ ●

B 242 `int` Porous media in y-direction for B240

0 OFF

1 ON

default: 1

○ ○ ○ ●

B 243 `int` Porous media in z-direction for B240

0 OFF

1 ON

default: 1

○ ○ ○ ●

B 260 `double` c factor for VRANS porous media

default: 0.0

○ ○ ○ ●

B 264 `double` KC number VRANS porous media force source terms for the momentum equations

default: $1.0 \cdot 10^{20}$

○ ○ ○ ●

B 270 * `double` VRANS porous media as rectangular box $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}, n, d_{50}, \alpha, \beta$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ;

○ ○ ○ ●

B 274 * `double` VRANS porous media as vertical cylinder: $x_{center}, y_{center}, z_{start}, z_{end}, radius, n, d_{50}, \alpha, \beta$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ;

○ ○ ○ ●

B 281 * `double` VRANS porous media as wedge in x-direction: $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}, n, d_{50}, \alpha, \beta$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ;

○ ○ ○ ●

B 291 * `double` VRANS porous media as plate in x-direction: $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}, d_{thickness}, n, d_{50}, \alpha, \beta$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ;

○ ○ ○ ●

B 295 `int` VRANS source treatment fo turbulence model

- 0** OFF
 - 1** VRANS source terms
 - 2** turn off turbulence inside porous media
- default:** 1

○ ○ ○ ●

B 308 `int` consider vegetation porosity effects on fluid acceleration

- 0** OFF
 - 1** ON
- default:** 1

○ ○ ○ ●

B 309 `double` C_M for vegetation

default: 2.0

○ ○ ○ ●

B 310 * `double` VRANS vegetation as rectangular box. N is the number of cylinders per unit area, D the diameter of the cylinders and C_d the drag coefficient.

$x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}, N, D, C_d$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ;

● ○ ○ ●

B 411 * patchBC discharge `int` ID , `double` $discharge$

default: na

● ○ ○ ●

B 412 * patchBC pressure `int` ID , `double` $pressure$

default: na

● ○ ○ ●

B 413 * patchBC waterlevel `int ID, double waterlevel`

default: na

● ○ ○ ●

B 414 * patchBC velocity perpendicular to face `int ID, double velocity`

default: na

● ○ ○ ●

B 415 * patchBC velocity components `int ID, double U,V,W`

default: na ; na ; na

● ○ ○ ●

B 416 * patchBC horizontal inflow angle `int ID, double alpha`

default: na

● ○ ○ ●

B 418 `int ID, int` free stream outflow

0 OFF

1 ON

default: 0

● ○ ○ ●

B 421 `int ID, int` discharge hydrograph

Requires a file named e.g. 'hydrograph_Q_1.dat', where the number is the patchBC ID.

0 OFF

1 ON

default: 0

● ○ ○ ●

B 422 `int ID, int` waterlevel hydrograph

Requires a file named e.g. 'hydrograph_FSF_1.dat', where the number is the patchBC ID.

0 OFF

1 ON

default: 0



B 440 * patchBC as line:

```
int ID, face, double Xstart, Xend, Ystart, Yend
```

The patch boundary condition will convert solid boundaries to inflow or outflow conditions. Patches are addressed with the ID, with which it is possible to prescribe different flow conditions (see B 411 - B 418). When flow values are not prescribed, the default are zero-gradient boundary conditions.

default: 0 ; 0; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0



B 441 * patchBC as rectangular box:

```
int ID, face, double Xstart, Xend, Ystart, Yend, Zstart, Zend
```

The patch boundary condition will convert solid boundaries to inflow or outflow conditions. Patches are addressed with the ID, with which it is possible to prescribe different flow conditions (see B 411 - B 417).

default: 0 ; 0; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0



B 442 * patchBC as circle: `int ID, face, double xM, yM, zM, radius`

The patch boundary condition will convert solid boundaries to inflow or outflow conditions. Patches are addressed with the ID, with which it is possible to prescribe different flow conditions (see B 411 - B 417).

default: 0 ; 0; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

2.3 C :: Concentration

Valid for:

S F N C



C 1 `double` Additional density from concentration in phase 1

default: 10.0

○ ○ ○ ●

C 2 `double` Additional viscosity from concentration in phase 1

default: 0.0

○ ○ ○ ●

C 3 `double` Additional density from concentration in phase 2

default: 10.0

○ ○ ○ ●

C 4 `double` Additional viscosity from concentration in phase 2

default: 0.0

○ ○ ○ ●

C 5 `double` Additional viscosity from concentration in phase 2

default: 0.0

○ ○ ○ ●

C 10 `int` Time scheme concentration function

0 OFF

1 2nd-order Adams-Bashfort

2 2rd-order TVD Runge-Kutta

3 3rd-order TVD Runge-Kutta

default: 0

○ ○ ○ ●

C 15 `int` convection discretization for concentration function

1 FOU

2 CDS2

3 QUICK

4 WENO FLUX

5 WENO HJ

6 CDS4

10 High Resolution TVD scheme with Minmod limiter

11 High Resolution TVD scheme with van Leer limiter

12 High Resolution TVD scheme with Umist limiter

13 High Resolution TVD scheme with Sweby limiter

14 High Resolution TVD scheme with Superbee limiter

15 High Resolution scheme with Smart limiter

16 High Resolution TVD scheme with Limo3 limiter

42 High Resolution TVD scheme with Weller limiter

default: 0

○ ○ ○ ●

C 20 **int** Diffusion discretization

0 OFF

1 explicit

2 implicit (automatic for implicit convection discretization)

default: 0

○ ○ ○ ●

C 50 **double** Fill ratio concentration area 1 and 2

default: 1.0 ; 0.0

○ ○ ○ ●

C 51 **double** Area 1 start, x-direction

default: 0.0 *m*

○ ○ ○ ●

C 52 **double** Area 1 start, y-direction

default: 0.0 *m*

○ ○ ○ ●

C 53 **double** Area 1 start, z-direction

default: 0.0 m

○ ○ ○ ●

C 54 double Area 1 end, x-direction

default: $1.0 \cdot 10^7$ m

○ ○ ○ ●

C 55 double Area 1 end, y-direction

default: $1.0 \cdot 10^7$ m

○ ○ ○ ●

C 56 double Area 1 end, z-direction

default: $1.0 \cdot 10^7$ m

○ ○ ○ ●

C 57 double Area 1 as 3D-plane: $ax + by + cz + d = 0$

default: 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

C 58 double Area 1 as sphere, center-coordinates: x_0, y_0, z_0 , and radius r

default: 0.0 ; 0.0 ; 0.0 ; 0.0

2.4 D :: Discretization

Here the discretization of the convection terms in the momentum equations is chosen. All methods are implemented in terms of conservative finite differences. The exception is WENO HJ, which is the non-conservative form of the WENO scheme.

Valid for:

S F N C

○ ○ ● ●

D 10 int convection discretization

0 OFF

1 FOU
2 CDS2
3 QUICK
4 WENO5 FLUX
5 WENO5 HJ
6 CDS4
7 WENO3 FLUX
8 WENO3 HJ
10 High Resolution TVD scheme with Minmod limiter
11 High Resolution TVD scheme with van Leer limiter
12 High Resolution TVD scheme with Umist limiter
13 High Resolution TVD scheme with Sweby limiter
14 High Resolution TVD scheme with Superbee limiter
15 High Resolution scheme with Smart limiter
16 High Resolution TVD scheme with Limo3 limiter
42 High Resolution TVD scheme with Weller limiter
default: 4

○ ○ ● ●

D 11 [int](#) convection velocities for momentum equations

0 OFF
1 FOU
2 CDS2
default: 2

○ ○ ● ●

D 20 [int](#) diffusion discretization

Selecting the implicit treatment of the diffusion term in the momentum equations for explicit time stepping has the advantage of removing diffusion from the CFL criterion, which determines the time step size. As the diffusion term enters the CFL criterion in the order of $1/dx^2$, effectively larger times steps for D20 2 will be used on especially finer grids. When RANS turbulence models are used, the effective diffusion can be several magnitudes higher than the molecular diffusion. Then implicit diffusion treatment will increase the time step significantly.

0 OFF
1 explicit
2 implicit

default: 2

○ ○ ● ●

D 21 `int` print out diffusion solver time and iteration for implicit diffusion and explicit convection discretization

0 OFF

1 ON

default: 0

○ ○ ○ ●

D 30 `int` pressure algorithm The projection method (PJM) works only together with explicit time advancement schemes, while all SIMPLE type methods work with implicit timestepping.

0 off

1 PJM

2 PJM FSM

3 PJM CORR

default: 1

○ ○ ● ●

D 39 `int` activate 2nd-order pressure correction for PJM CORR

0 OFF

1 ON

default: 0

2.5 F :: Free Surface

Valid for:

S F N C

○ ○ ○ ●

F 10 `int` free surface mode for interface capturing

1 One-Phase

2 Two-Phase

default: 2

○ ○ ○ ●

F 30 `int` time scheme level set

- 1** 2nd-order Adams-Bashfort
- 2** 2rd-order TVD Runge-Kutta
- 3** 3rd-order TVD Runge-Kutta

default: 0

○ ○ ○ ●

F 31 `int` particle Level Set

- 0** off
- 1** PLS with tri-linear interpolation
- 2** PLS with tri-cubic interpolation

default: 0

○ ○ ○ ●

F 32 `int` number of particles per cell

default: 64

○ ○ ○ ●

F 33 `double` factor for particle array allocation

default: 0.4

○ ○ ○ ●

F 34 `int` Printout iteration of particles

default: 1000

○ ○ ○ ●

F 35 `int` convection discretization for level set

- 1** FOU
- 2** CDS2
- 3** QUICK
- 4** WENO5 FLUX
- 5** WENO5 HJ

- 6** CDS4
 - 7** WENO3 FLUX
 - 8** WENO3 HJ
 - 10** High Resolution TVD scheme with Minmod limiter
 - 11** High Resolution TVD scheme with van Leer limiter
 - 12** High Resolution TVD scheme with Umist limiter
 - 13** High Resolution TVD scheme with Sweby limiter
 - 14** High Resolution TVD scheme with Superbee limiter
 - 15** High Resolution scheme with Smart limiter
 - 16** High Resolution TVD scheme with Limo3 limiter
 - 42** High Resolution TVD scheme with Weller limiter
- default:** 5

○ ○ ○ ●

F 39 `double` Relaxation factor for reini volume constraint

default: 0.5

○ ○ ○ ●

F 40 `int` Reinitialization time scheme

- 3** 3rd-order TVD Runge-Kutta
 - 5** 3rd-order Runge-Kutta with local volume correction
 - 7** 3rd-order TVD Runge-Kutta with volume constraint
 - 11** Geometric reinitialization with 3rd-order TVD Runge-Kutta
 - 23** 3rd-order TVD Runge-Kutta, reinitialization through solid and topo
- default:** 0

○ ○ ○ ●

F 42 `double` length for level set initial reinitialization, overrides maximum domain length

default: -1.0

○ ○ ○ ●

F 43 `double` Factor for reinitialization time step size

default: 0.55

F 44 `int` Number of Reinitialization time steps

default: 3

F 45 `double` Factor for the calculation of the interface thickness ϵ

default: 2.1

F 46 `int` Type of Picard iterations after reinitialization

0 OFF

1 Volume correction for reinitialization step using volume from previous time step

2 Volume correction for level set and reinitialization step using volume from previous time step

3 Volume correction for level set and reinitialization step using total volume balance

default: 0

F 47 `int` Number of Picard iterations after reinitialization

default: 0

F 49 `int` Reinitialization for interface nodes

0 OFF

1 ON

default: 1

F 50 `int` Fix Level Set for inflow or outflow

1 Inflow fixed

2 Outflow fixed

3 Fix Both

4 Fix None

default: 2

○ ○ ○ ●

F 51 double Phase 1 start, x-direction

default: 0.0 m

○ ○ ○ ●

F 52 double Phase 1 start, y-direction

default: 0.0 m

○ ○ ○ ●

F 53 double Phase 1 start, z-direction

default: 0.0 m

○ ○ ○ ●

F 54 double Phase 1 end, x-direction

default: $1.0 \cdot 10^7$ m

○ ○ ○ ●

F 55 double Phase 1 end, y-direction

default: $1.0 \cdot 10^7$ m

○ ○ ○ ●

F 56 double Phase 1 end, z-direction

default: $1.0 \cdot 10^7$ m

○ ○ ○ ●

F 57 double Interface as 3D-plane: $ax + by + cy + d = 0$

default: 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

F 58 double Interface as sphere, center-coordinates: x_m, y_m, z_m , and radius r

default: 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

F 59 double Interface as vertical cylinder, center-coordinates: $x_m, y_m, z_{start}, z_{end}$ and radius r

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

● ● ● ●

F 60 double initial still water level for the whole domain

default: $-1.0 \cdot 10^{20} \text{ m}$

○ ○ ○ ●

F 61 double Phase 1 end, z-direction for inflow boundary

default: $-1.0 \cdot 10^{20} \text{ m}$

○ ○ ○ ●

F 62 double Phase 1 end, z-direction for outflow boundary

default: $-1.0 \cdot 10^{20} \text{ m}$

○ ○ ○ ●

F 63 double x_{start} for level set interpolation

default: $-1.0 \cdot 10^{20} \text{ m}$

○ ○ ○ ●

F 70 double* Phase 1 ini as rectangular box: $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

F 71 `double*` Phase 2 ini as rectangular box: $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

F 72 `double*` Regions for free surface elevation $x_{start}, x_{end}, y_{start}, y_{end}, h_{waterlevel}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

F 80 `int` time scheme VOF Currently, the VOF implementation is in beta and for testing purposes only. The algorithms for open channel flow and wave generation only work for the level set method.

1 2nd-order Adams-Bashfort

3 3rd-order TVD Runge-Kutta

default: 0

○ ○ ○ ●

F 84 `double` c_α factor for VOF compression

default: 1.0

○ ○ ○ ●

F 85 `int` convection discretization VOF Recommended scheme for VOF convection is HRIC modified.

1 FOU

2 CDS2

3 QUICK

4 WENO FLUX

5 WENO HJ

6 CDS4

10 High Resolution TVD scheme with Minmod limiter

11 High Resolution TVD scheme with van Leer limiter

12 High Resolution TVD scheme with Umist limiter

13 High Resolution TVD scheme with Sweby limiter

14 High Resolution TVD scheme with Superbee limiter

15 High Resolution scheme with Smart limiter
16 High Resolution TVD scheme with Limo3 limiter
42 High Resolution TVD scheme with Weller limiter
51 HRIC
52 HRIC modified
53 CICSAM
default: 0

○ ○ ○ ●

F 150 `int` Benchmarks This will initialize the level set function and the velocity field according to the benchmark cases

0 OFF
1 Vortex
2 Slotted disc
3 3D Deformation
4 3D Taylor-Green vortex
default: 0

2.6 G :: Grid Options

Valid for:
S F N C

○ ○ ○ ●

G 60 * `double` Topo ini as rectangular box: $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0 ; 0

○ ○ ○ ●

G 61 * `double` Topo ini as wedge in x-direction: $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

2.7 H :: Heat Transfer

Valid for:

S F N C
○ ○ ○ ●

H 1 `double` Thermal Diffusivity Phase 1

default: $1.4 \cdot 10^{-7} \text{ m}^2/\text{s}$ (water)

○ ○ ○ ●

H 2 `double` Thermal Diffusivity Phase 2

default: $2.216 \cdot 10^{-5} \text{ m}^2/\text{s}$ (air)

○ ○ ○ ●

H 3 `int` Fluid property calculation

1 interpolation for water and air (density and viscosity)

2 generic Boussinesq Approximation (density)

default: 1

○ ○ ○ ●

H 9 `int` Switch Temperature 1 and temperature 2 fluid for the two phases

1 1: water 2: air

2 1: air 2: water

default: 1

○ ○ ○ ●

H 10 `int` Time Scheme Heat Transfer

0 OFF

1 2nd-order Adams-Bashfort

2 2nd-order TVD Runge-Kutta

3 3rd-order TVD Runge-Kutta

default: 0

○ ○ ● ●

H 15 `int` convection discretization for heat transfer

- 0** OFF
- 1** FOU
- 2** CDS2
- 3** QUICK
- 4** WENO5 FLUX
- 5** WENO5 HJ
- 6** CDS4
- 7** WENO3 FLUX
- 8** WENO3 HJ
- 10** High Resolution TVD scheme with Minmod limiter
- 11** High Resolution TVD scheme with van Leer limiter
- 12** High Resolution TVD scheme with Umist limiter
- 13** High Resolution TVD scheme with Sweby limiter
- 14** High Resolution TVD scheme with Superbee limiter
- 15** High Resolution scheme with Smart limiter
- 16** High Resolution TVD scheme with Limo3 limiter
- 42** High Resolution TVD scheme with Weller limiter

default: 5

○ ○ ○ ●

H 50 `double` Temperature 1 and Temperature 2

default: 0.0 C° ; 0.0 C°

○ ○ ○ ●

H 51 `double` Temperature 1 start, x-direction

default: 0.0 m

○ ○ ○ ●

H 52 `double` Temperature 1 start, y-direction

default: 0.0 m

○ ○ ○ ●

H 53 `double` Temperature 1 start, z-direction

default: 0.0 m

○ ○ ○ ●

H 54 double Temperature 1 end, x-direction

default: $1.0 \cdot 10^7$ m

○ ○ ○ ●

H 55 double Temperature 1 end, y-direction

default: $1.0 \cdot 10^7$ m

○ ○ ○ ●

H 56 double Temperature 1 end, z-direction

default: $1.0 \cdot 10^7$ m

○ ○ ○ ●

H 57 double Interface as 3D-plane: $ax + by + cy + d = 0$

default: 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

H 58 double Interface as sphere, center-coordinates: x_0, y_0, z_0 , and radius r

default: 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

H 61 double Temperature boundary condition on surface 1

default: na C°

○ ○ ○ ●

H 62 double Temperature boundary condition on surface 2

default: na C°

○ ○ ○ ●

H 63 `double` Temperature boundary condition on surface 3

default: na C°

H 64 `double` Temperature boundary condition on surface 4

default: na C°

H 65 `double` Temperature boundary condition on surface 5

default: na C°

H 66 `double` Temperature boundary condition on surface 6

default: na C°

2.8 I :: Initialization

Valid for:

S F N C

I 10 `int` Initialize Everything Turning this parameter on will invoke I11, I12 and I13.

0 OFF

1 ON

2 ON (include free surface for potential flow ini)

default: 0

I 11 `int` Initialize Velocities with Potential Flow Solver

0 OFF

1 ON

2 ON (include free surface)

default: 0

○ ○ ○ ●

I 12 int Initialize Pressure

0 OFF

1 Hydrostatic based on vertical coordinate

2 Hydrostatic based on level set values

default: 0

○ ○ ○ ●

I 13 int Initialize Turbulence Model

0 OFF

1 ON

default: 0

○ ○ ○ ●

I 21 int Phase 2 velocities after potential flow initialization

0 use potential solver result

1 set to zero

default: 0

● ● ● ●

I 30 int Full initialization of Numerical Wave Tank

0 OFF

1 ON

default: 0

○ ○ ○ ●

I 40 int Full initialization from state file (hotstart) See option P 40 for state file print out.

0 OFF

1 ON

default: 0

○ ○ ○ ●

I 41 int Number of state file (hotstart)

default: 0

○ ● ○ ○

I 44 int Read FNPF state file with 3D velocity potential

0 OFF

1 ON

default: 0

○ ○ ○ ●

I 56 int pressure above F56 set to zero

default: 0

○ ○ ○ ●

I 58 double Initialize Vertical Velocity around Sphere from F 58, **double** radius for initialization

default: 0.0 ; 0.0

○ ○ ○ ●

I 230 int Read FlowFiles for inflow boundary condition. The number gives the ID of the FlowFile gage. For iowave activated, B 98 should be set to 0.

default: 0

○ ○ ○ ●

I 231 double Vertical offset of FlowFile inflow.

default: 0.0

○ ○ ○ ●

I 232 double Time offset of FlowFile inflow.

default: 0.0

○ ○ ○ ●

I 241 double Delta t for FlowFile inflow and hydrodynamic coupling.

default: 0.0

2.9 M :: MPI

Valid for:

S F N C



M 10 `int` Number of processors for parallel computations This value needs to be consistent with the grid generation and the console input for starting REEF3D through the `mpirun` command.

default: 0

2.10 N :: Numerical Options

Valid for:

S F N C



N 10 `int` Iterative solver for the Poisson equation The default BiCGStab solver uses Jacobi Scaling as the default preconditioner, which is implemented in the compressed diagonal storage format (CDS). Jacobi Scaling is currently the most effective preconditioner for the Poisson equation with a jump in the matrix coefficients, as is the case for multiphase flow. SIP is an optimized implementation of ILU.

The fastest combination of HYPRE solvers is the BiCGSTAB struct solver with PFMG preconditioning. From the HYPER AIJ solvers, the combination PCG + BoomerAMG is fastest. For more information on the HYPRE solvers and preconditioners, have a look at the HYPRE user manual ?.

3 BiCGStab with Jacobi Preconditioning (internal)

11 PCG (HYPRE Struct)

12 GMRES (HYPRE Struct)

13 LGMRES (HYPRE Struct)

14 BiCGStab (HYPRE Struct)

15 Hybrid-PCG (HYPRE Struct)

16 Hybrid-GMRES (HYPRE Struct)

17 Hybrid-BiCGStab (HYPRE Struct)

18 PFMG (HYPRE Struct, Geometric Multigrid)

19 SMG (HYPRE Struct, Geometric Multigrid)

21 PCG (HYPRE AIJ)

22 GMRES (HYPRE AIJ)

23 LGMRES (HYPRE AIJ)
24 BiCGStab (HYPRE AIJ)
25 AMG (HYPRE AIJ, BoomerAMG)

31 PCG (HYPRE SStruct)
32 GMRES (HYPRE SStruct)
33 LGMRES (HYPRE SStruct)
34 BiCGStab (HYPRE SStruct)
35 Hybrid-PCG (HYPRE SStruct)
36 Hybrid-GMRES (HYPRE SStruct)
37 Hybrid-BiCGStab (HYPRE SStruct)
38 PFMG (HYPRE SStruct, Geometric Multigrid)
39 SMG (HYPRE SStruct, Geometric Multigrid)
default: 14

○ ● ● ●

N 11 **int** Preconditioner for the Poisson Equations Keep in mind to use only options, that are compatible with N 10.

0 OFF
11 PFMG (for HYPRE Struct Krylov solvers)
12 SMG (for HYPRE Struct Krylov solvers)

21 AMG (for HYPRE AIJ Krylov solvers, BoomerAMG)

31 PFMG (for HYPRE SStruct Krylov solvers)
32 SMG (for HYPRE SStruct Krylov solvers)
default: 11

○ ● ● ●

N 21 **int** hypre PFMG relaxation skip

0 OFF
1 ON
default: 0

○ ○ ○ ●

N 22 **int** hypre PFMG skip relaxation

- 0** Jacobi
 - 1** Weighted Jacobi
 - 2** Red/Black Gauss-Seidel (symmetric)
 - 3** Red/Black Gauss-Seidel (non-symmetric)
- default:** 3

○ ○ ○ ●

N 23 `int` hypre PFMG RAP type

- 0** Galerkin
 - 1** non-Galerkin
- default:** 0

○ ○ ○ ●

N 40 `int` Time scheme for the momentum equations The explicit time schemes (option 1-9) require the projection method for the pressure (D 30).

- 1** 2nd-order Adams-Bashforth
 - 2** 2rd-order TVD Runge-Kutta
 - 3** 3rd-order TVD Runge-Kutta
 - 4** Implicit-explicit Runge-Kutta
 - 6** Fractional Step Method based on 3rd-order TVD Runge-Kutta
- default:** 3

● ● ● ●

N 41 `double` Maximum modeled time Out of N41 and N45, whichever criterion is fulfilled first will finalize the simulations.

default: $1.0 \cdot 10^{19}$

● ● ● ●

N 44 `double` Stopping criteria iterative solver

default: $1.0 \cdot 10^{-8}$

● ● ● ●

N 45 `int` Maximum number of outer iterations Out of N41 and N45, whichever criterion is fulfilled first will finalize the simulations

default: $1 \cdot 10^8$

● ● ● ●

N 46 [int](#) Maximum number of solver iterations

default: 250

● ● ● ●

N 47 [double](#) Relaxation factor for time step size This factor is used when determining the time step size based on the CFL criterion for adaptive timestepping.

default: 0.3

● ● ● ●

N 48 [int](#) Adaptive timestepping

0 OFF

1 ON

2 ON, using velocity around the interface

default: 1

● ● ● ●

N 49 [double](#) Timestep size for fixed timestepping

default: 1.0 sec

● ● ● ●

N 61 [double](#) Stopping criterion for critical velocities. The code will exit and write a final .vtu paraview file

default: 500.0

2.11 P :: Printer

Valid for:

S F N C

● ● ● ●

P 10 `int` Print ParaView binary format

0 OFF

1 ON

default: 1

○ ○ ○ ●

P 11 `int` Log print frequency

default: 10

● ● ● ●

P 12 `int` Terminal print frequency

default: 1

● ● ● ●

P 14 `int` Print files to folders

0 OFF

1 ON

default: 1

● ● ● ●

P 15 `int` Print out file numbering

1 print out based

2 iteration based

default: 1

○ ○ ○ ●

P 18 `int` Algorithm type for level set paraview print out

1 Standard

2 Node Fill

default: 2

● ● ● ●

P 20 `int` Print results every i^{th} iteration Choose between either P20, P30, P34 or P35.

default: -10

● ● ● ●

P 23 `int` Print test array vtu file

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 24 `int` Print density to vtu file

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 25 `int` Print solid to vtu file

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 26 `int` Print cbed and conc to vtu file

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 27 `int` Print topo to vtu file

0 OFF

1 ON

default: 0

P 28 `int` Print fb to vtu file

0 OFF

1 ON

default: 0

P 29 `int` Print walldist to vtu file

0 OFF

1 ON

default: 0

P 30 `double` Print Paraview results every i^{th} second Choose between either P20, P30, P34 or P35.

default: -1.0

P 34 `double` Print Paraview results every i^{th} second based on sediment transport time Choose between either P20, P30, P34 or P35.

default: -1.0

P 35 * `double` Start print t, `double` End t, `double` results every i^{th} second

Choose between either P20, P30, P34 or P35.

default: 0.0 ; 0.0 ; 0.0

P 40 `int` Print state file for hotstart functionality See I 40 for full initialization from state file. The state file contains the velocities, pressure, level set function, k , eddy viscosity, ϵ or ω , topo, cbcd and conc.

0 OFF

1 print into one file

2 print into continuous files

default: 0

○ ● ○ ●

P 41 `int` Print state file every i^{th} Iteration

default: na

○ ● ○ ●

P 42 `double` Print state file every i^{th} second

default: na

○ ● ○ ○

P 43 Define print out area for FNPF state files (optional); `double xstart, double xend, double ystart, double yend`

default: na ; na ; na ; na

○ ● ○ ○

P 44 `int` Print 3D velocity potential to state file

0 OFF

1 ON

default: 0

● ● ● ●

P 50 * `double` x-location and `double` y-location of height gauges for wave theory

default: na ; na

● ● ● ●

P 51 * `double` x-location and `double` y-location of height gauges

default: na ; na

● ● ● ●

P 52 * `double` y-location of water surface line in x-direction

default: na

● ● ● ●

P 53 `int` for NWT: add theoretical wave to wsflne file

0 OFF

1 ON

default: 0

● ● ● ●

P 54 `int` Print wsflne files every i^{th} iteration

default: 10

● ● ● ●

P 55 `double` Print wsflne files every i^{th} second

default: -1.0

● ● ● ●

P 56 * `double` x-location of water surface line in y-direction

default: na

○ ● ○ ○

P 59 `int` for FNPF: print out breaking wave Log

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 61 * `double` x-location, `double` y-location and `double` z-location of point probes

default: na

○ ○ ○ ●

P 62 * `double` $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}$ of line probes

default: na

● ○ ○ ○

P 63 * `double` x-location and `double` y-location of depth averaged point probes

default: na

○ ○ ○ ●

P 66 `int` print out discharge cross section to console

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 67 * `double` x-location of discharge in cross section

default: na

○ ○ ○ ●

P 71 `int` print out viscosity to vtu file

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 75 `int` print out vorticity to vtu file

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 77 `int` print out bedslope sediment parameters to vtu file: $\alpha, \beta, \theta, \gamma, \phi$

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 78 [int](#) print out sediment parameters to vtu file: dh, reduce, threshold, slideflag

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 79 [int](#) print out bed shear stress to vtu file

0 OFF

1 bed shear stress

2 shear velocity

3 shields paramters

default: 0

○ ○ ○ ●

P 81 [double](#) force calculation box: $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

P 85 [double](#) force calculation box for rectangular objects: $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

P 92 [int](#) Calculate force from water or water and air combined

0 force only from water

1 force from water and air combined

default: 0

○ ○ ○ ●

P 101 [int](#) Print sloshing force and moment file

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 121 `double` x-location and `double` y-location of bed level gauges

default: na

○ ○ ○ ●

P 122 `int` Maximum bedchange gauge

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 123 * `double` y-location of sediment profile in x-direction

default: na

○ ○ ○ ●

P 124 * `double` x-location of sediment profile in y-direction

default: na

○ ○ ○ ●

P 125 `double` x-location and `double` y-location of bed shear stress gauges

default: na

○ ○ ○ ●

P 126 `int` Maximum bedshear stress print out

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 150 [int](#) Print data from DIVEMesh interpolation

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 151 [int](#) Type of data

1 scalar

2 signed distance function

default: 1

○ ○ ○ ●

P 152 [int](#) Type of boundary condition for data array

1 x-velocity

2 y-velocity

3 z-velocity

4 scalar with Neuman boundary conditions

default: 1

○ ○ ○ ●

P 180 [int](#) Print free surface vtp file

0 OFF

1 ON

default: 0

○ ○ ○ ●

P 181 [double](#) i^{th} iteration for fsf print out

default: 10

○ ○ ○ ●

P 182 [double](#) Print out fsf every i^{th} second

default: -1.0

P 184 * `int` Start iteration, `int` End iteration, `int` fsf print results every i^{th} iteration

Choose between either P181, P182, P184 or P185.

default: 0 ; 0 ; 0

P 185 * `double` Start t, `double` End t, `double` fsf print results every i^{th} second

Choose between either P181, P182, P184 or P185.

default: 0.0 ; 0.0 ; 0.0

P 230 `double` * x-coordinate for FlowFile printing from 2D CFD simulations

default: 0

P 240 `double` * x-coordinate for PotentialFile printing from 2D FNPF simulations

default: 0

2.12 S :: Sediment

Valid for:

S F N C

S 10 `int` Sediment Transport Module

0 OFF

1 ON (impermeable sediments)

2 ON (porous sediment)

default: 0

S 11 `int` Bedload Transport Formula

0 OFF

- 1** van Rijn
 - 2** Meyer-Peter Müller
 - 3** Engelund and Fredsøe
- default:** 0

S 12 `int` Suspended transport formula

- 0** OFF
 - 1** van Rijn
- default:** 0

S 13 `double` Maximum time step size sediment transport

default: 10.0 sec

S 14 `double` Relaxation factor for time step size sediment transport The timestep for the morphodynamic calculations is by default decoupled from the hydrodynamics timestep (see S15), which typically is determined through adaptive timestepping (N48). The morphodynamic timestep is determined by the Courant criterion by analyzing the rate of bed elevation change.

default: 0.3

S 15 `int` Sediment timestep selection

- 0** adaptive from S13 and S14
 - 1** from flow solver
 - 2** fixed from S13
- default:** 0

S 16 `int` Bed shear stress formulation

- 1** wall function/velocity based
- 2** friction coefficient/velocity based

- 3** velocity based
 - 4** turbulent kinetic energy based
 - 7** depth-averaged velocities, based on Chezy-formula
- default:** 1

○ ○ ○ ●

S 19 **double** Maximum modeled time for sediment transport

default: $1.0 \cdot 10^{19}$

○ ○ ○ ●

S 20 **double** Sediment d_{50}

default: 0.001 m

○ ○ ○ ●

S 21 **double** Factor for d_{50} in calculation of k_s in bedshear routine

default: 3.0

○ ○ ○ ●

S 22 **double** Sediment density

default: 2650.0 kg

○ ○ ○ ●

S 23 **double** Sediment fall velocity

default: 0.000001 m/s

○ ○ ○ ●

S 24 **double** Porosity of the sediment layer

default: 0.5

○ ○ ○ ●

S 25 **double** Angle of repose ($^{\circ}$)

default: 30.0 °

○ ○ ○ ●

S 30 `double` Shields parameter

default: 0.047

○ ○ ● ●

S 32 `int` Exner equation discretization

- 1** FOU
- 2** CDS2
- 4** WENO5 FLUX
- 5** WENO5 HJ

default: 4

○ ○ ○ ●

S 37 `int` Number of topo reinitialization time steps The mobile sediment bed is represented by a level set method. After erosion or deposition has taken place, it needs to be reinitialized in order keep its signed distance properties.

default: 2

○ ○ ○ ●

S 41 `int` Type of sediment start criterion

- 1** iterations
- 2** flow simulation time
- 3** t/T

default: 1

○ ○ ○ ●

S 42 `int` Type of sediment interval criterion

- 1** iterations
- 2** flow simulation time
- 3** t/T

default: 1

○ ○ ○ ●

S 43 `int` Number of water iterations, before sediment transport starts

default: 1000

○ ○ ○ ●

S 44 `int` Number of water iterations, between bed calculations

default: 10

○ ○ ○ ●

S 45 `double` Flow simulation time, before sediment transport starts

default: 1.0

○ ○ ○ ●

S 46 `double` Flow simulation time between bed calculation

default: 1.0

○ ○ ○ ●

S 47 `double` t/T, before sediment transport starts

default: 1.0

○ ○ ○ ●

S 48 `double` t/T between bed calculation

default: 1.0

○ ○ ○ ●

S 50 `int` Fix topo level set for inflow or outflow

- 1** Inflow fixed
- 2** Outflow fixed
- 3** Fix Both
- 4** Fix None

default: 3

○ ○ ○ ●

S 57 `double` Sediment end, z-direction for whole domain

default: $-1.0 \cdot 10^{20} \text{ m}$

○ ○ ○ ●

S 60 `int` Time scheme suspended sediments

- 1** 2nd-order Adams-Bashfort
 - 2** 2nd-order TVD Runge-Kutta
 - 3** 3rd-order TVD Runge-Kutta
 - 11** 1st-order Euler Implicit
 - 12** 2nd-order Three Time Level Method
- default:** 0

○ ○ ○ ●

S 71 `double` Start of erosion in x-direction

default: -1.0e20

○ ○ ○ ●

S 72 `double` End of erosion in x-direction

default: 1.0e20

○ ○ ○ ●

S 73 * `double` value, `double` distance, `double` line angle, `double` line x-origin, `double` line y-origin; for use of relaxation method for fixed water level

This method is preferred over S 71 and S72 because of the smooth moderation of the sediment bed. It gives also more flexibility as multiple relaxation lines with variable orientation can be chosen.

default: na

○ ○ ○ ●

S 77 `double` Active sediment transport algorithm region in x-direction: x_{start} and x_{end}

default: -1.0e20 ; +1.0e20

○ ○ ○ ●

S 80 `int` Type of critical shear stress reduction for sloping bed

- 0** off
 - 1** Parker and Kovacs
 - 2** Dey empirical
 - 3** Dey analytical
 - 4** Fredsøe
- default:** 0

○ ○ ○ ●

S 81 `double` Midphi parameter

default: 35.0

○ ○ ○ ●

S 82 `double` Deltaphi parameter

default: 5.0

○ ○ ○ ●

S 83 `int` Type of bedslope calculation

- 2** CDS
 - 5** WENO
- default:** 2

○ ○ ○ ●

S 90 `int` Sandslide algorithm

- 0** off
 - 1** on
- default:** 0

○ ○ ○ ●

S 91 `int` Number of sandslide iterations

default: 1

○ ○ ○ ●

S 93 `double` Delta angle for sandslide correction

default: 0.0°

○ ○ ○ ●

S 100 `int` Number of outer spatial filter iterations for the sediment bed for the predictor step
(larger numbers increase the filter effect, recommended value: 1)

default: 0

○ ○ ○ ●

S 101 `int` Number of inner spatial filter iterations for the sediment bed for the corrector step
(larger numbers move the bed closer to the uncorrected values, recommended value:
between 1 and 5)

default: 0

2.13 T :: Turbulence

Valid for:

S F N C

○ ○ ○ ●

T 10 `int` Turbulence Model

0 OFF

1 $k-\epsilon$ model

2 $k-\omega$ model

21 URANS with $k-\epsilon$ model

22 URANS with $k-\omega$ model

31 LES with Smagorinsky SGS model

33 LES with WALE model

default: 0

○ ○ ○ ●

T 11 `int` Time Scheme for 2-equation turbulence models

11 1st-order Euler Implicit

12 2nd-order Three Time Level Method

default: 11

○ ○ ○ ●

T 12 `int` convection discretization for turbulence model

0 OFF

1 FOU

5 WENO HJ

default: 5

○ ○ ○ ●

T 31 `double` factor for eddy viscosity limiter in phase 1

default: 0.816

○ ○ ○ ●

T 32 `double` factor for eddy viscosity limiter in phase 2

default: 0.816

○ ○ ○ ●

T 35 `double` factor for eddy viscosity limiter near-wall

default: 0.816

○ ○ ○ ●

T 36 `int` FSF boundary condition for turbulent dissipation

0 OFF

1 ON

2 ON, including distance from the nearest wall

default: 0

○ ○ ○ ●

T 37 `double` Virtual origin for distance y' above the free surface

default: 0.07

○ ○ ○ ●

T 38 `double` ϵ_δ factor for width of free surface turbulence damping

default: 1.6

2.14 W :: Water and Material Properties

Valid for:

S F N C
● ● ● ●

W 1 `double` Density Phase 1

default: 998.2 kg/m^3

● ● ● ●

W 2 `double` Viscosity Phase 1

default: $1.004 \cdot 10^{-6} m^2/s$

○ ○ ○ ●

W 3 `double` Density Phase 2

default: 1.205 kg/m^3

○ ○ ○ ●

W 4 `double` Viscosity Phase 2

default: $1.41 \cdot 10^{-5} m^2/s$

○ ○ ○ ●

W 5 `double` Surface tension

default: 0.0 N/m

● ○ ● ●

W 10 `double` Discharge

default: 0.0 m^3/s

○ ○ ○ ●

W 11 `double` Inflow velocities U,V,W on surface 1 (requires inflow boundary condition on surface 1 in DIVEMesh)

Options W 11 - W 16 are made for benchmark and other simpler test and validation cases. For more complex and real word cases, either B 60 1 (ioflow) or the B 400s (patchBC) options are recommended.

default: 0.0 0.0 0.0 *m/s*

○ ○ ○ ●

W 12 `double` Inflow velocities U,V,W on surface 2 (requires inflow boundary condition on surface 2 in DIVEMesh)

default: 0.0 0.0 0.0 *m/s*

○ ○ ○ ●

W 13 `double` Inflow velocities U,V,W on surface 3 (requires inflow boundary condition on surface 3 in DIVEMesh)

default: 0.0 0.0 0.0 *m/s*

○ ○ ○ ●

W 14 `double` Inflow velocities U,V,W on surface 4 (requires inflow boundary condition on surface 4 in DIVEMesh)

default: 0.0 0.0 0.0 *m/s*

○ ○ ○ ●

W 15 `double` Inflow velocities U,V,W on surface 5 (requires inflow boundary condition on surface 5 in DIVEMesh)

default: 0.0 0.0 0.0 *m/s*

○ ○ ○ ●

W 16 `double` Inflow velocities U,V,W on surface 6 (requires inflow boundary condition on surface 6 in DIVEMesh)

default: 0.0 0.0 0.0 *m/s*

● ● ● ●

W 20 `double` Acceleration due to gravity, x-component

default: 0.0 m/s^2

● ● ● ●

W 21 `double` Acceleration due to gravity, y-component

default: 0.0 m/s^2

● ● ● ●

W 22 `double` Acceleration due to Gravity, z-component

default: 0.0 m/s^2

○ ○ ○ ●

W 30 `int` Compressibility for phase 2, using ideal gas theory for constant temperature

0 OFF

1 ON

default: 0

○ ○ ○ ●

W 31 `double` Constant gas temperature with compressibility

default: 20.0 C°

○ ○ ○ ●

W 41* `double` Velocity vertical line source phase 1: $x_{center}, y_{center}, z_{start}, z_{end}, velocity, \beta$

Here, β ist the direction of the flow.

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

● ○ ○ ●

W 90 `int` Non-Newtonian rheology

0 OFF

1 Herschel-Bulkley

● ○ ○ ●

W 95 double ν_0

default: 1.0

● ○ ○ ●

W 96 double τ_0

default: 1.0

● ○ ○ ●

W 97 double K Consistency index

default: 0.00001

○ ○ ○ ●

W 98 double n Power law index

default: 1.0

● ○ ○ ●

W 101 int Use Mohr-Coulomb

0 OFF

1 ON

default: 0

○ ○ ○ ●

W 102 double ϕ_0, c

default: 30.0 0.0

○ ○ ○ ●

W 103 double Transition factor for Mohr-Coulomb

default: 1.0

○ ○ ○ ●

W 110 int Numerical treatment of rheology

- 1 use viscosity for rheology and yield stress
 - 2 use viscosity for rheology and momentum source term for yield stress
 - 3 use momentum source term for rheology and for yield stress
- default:** 1

○ ○ ○ ●

W 111 int Pressure for Mohr-Coulomb yield stress

- 1 hydrostatic
 - 2 hydrostatic and dynamic pressure
 - 3 hydrostatic pressure away from the interface and dynamic pressure closer to the interface (see W 112)
- default:** 1

○ ○ ○ ●

W 112 double Threshold factor for W 111 3

default: 2.1

2.15 X :: 6DOF

Valid for:

S F N C
● ○ ○ ●

X 10 int Turn on 6DOF algorithm for floating bodies

- 0 OFF
 - 1 ON (CFD only)
 - 3 External pressure term (SFLOW only, requires X 400)
- default:** 0

○ ○ ○ ●

X 11 int Turn the individual degrees of freedom of the floating body, the linear and the angular velocities: u, v, w, p, q, r

When degrees of freedom are chosen to be prescribed, then they can be prescribed with either fixed external linear or angular velocities or different kinds of motion files.

0 OFF

1 solver 6DOF equation

2 prescribed

default: 1 ; 1 ; 1 ; 1 ; 1 ; 1

○ ○ ○ ●

X 12 [int](#) Turn on the force calculation for the floating body

0 OFF

1 ON

default: 1

○ ○ ○ ●

X 13 [int](#) Rigid body dynamics representation

0 GCIBM with Euler angles

1 GCIBM with Euler parameters

2 Continuous direct forcing

default: 2

○ ○ ○ ●

X 18 [int](#) Relaxation method for flow velocities in the vicinity of the floating body.

0 OFF

1 ON

default: 0

○ ○ ○ ●

X 19 [int](#) print out interval for 6DOF log files

default: 1

○ ○ ○ ●

X 21 [double](#) Floating body homogenous density ρ

Give either X 21 or X 22.

default: 900.0

○ ○ ○ ●

X 22 `double` Floating body mass m

Give either X 21 or X 22.

default: 0.0

○ ○ ○ ●

X 23 `double` Floating body center of gravity x_G, y_G, z_G

If not given, it will be calculated automatically. The center of gravity is also the origin of the non-inertial coordinate system.

default: 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 24 `double` Floating body moments of inertia I_x, I_y, I_z

If not given, it will be calculated automatically.

default: 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 25 `double` Damping coefficient for rotational motion around the three axes

default: 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 26 `double` Damping coefficient for translational motion along the three axes

default: 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 31 `int` Boundary conditions on floating solid for parallel velocities

- 1** slip
- 2** no-slip
- 3** floating body velocities
- 4** 2nd-order extrapolation

default: 4

○ ○ ○ ●

X 33 [int](#) Boundary conditions on floating solid for pressure

1 Neumann

2 Extend

default: 1

○ ○ ○ ●

X 34 [int](#) Boundary treatment for new floating solid velocity

0 OFF

1 ON

default: 0

○ ○ ○ ●

X 40 [int](#) Type of force calculation

1 level set surface integration based on a Heaviside function

2 Triangle based integration from the level set function

3 Triangle based integration from the geometrical representation

default: 0

○ ○ ○ ●

X 41 [double](#) Thickness of continuous direct forcing layer.

default: 2.1

○ ○ ○ ●

X 101 [double](#) Initial Euler angles in [deg]: ϕ_0, θ_0, ψ_0

Positive angles rotate the body clockwise.

default: 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 102 [double](#) Initial linear floating body velocity: u_0, v_0, w_0

default: 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 103 `double` Initial angular floating body velocity: p_0, q_0, r_0

default: 0.0 ; 0.0 ; 0.0

● ○ ○ ●

X 110 `double` Rectangular box floating body: $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 131 `double` Cylinder in x-direction floating body: $radius, height, x_{center}, y_{center}, z_{center}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ;

○ ○ ○ ●

X 132 `double` Cylinder in y-direction floating body: $radius, height, x_{center}, y_{center}, z_{center}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ;

● ○ ○ ●

X 133 `double` Cylinder in z-direction floating body: $radius, height, x_{center}, y_{center}, z_{center}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ;

○ ○ ○ ●

X 153 `double` Two-sided wedge in z-direction floating body: $x_{length}, y_{length}, z_{length}, x_{center}, y_{center}, z_{center}, x_{roll}, y_{pitch}, z_{yaw}$

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 163* `double` wedge floating body, each of the 6 points is given by the coordinates $x_1, y_1, z_1, x_2, y_2, z_2, x_3, y_3, z_3, x_4, y_4, z_4, x_5, y_5, z_5, x_6, y_6, z_6$

default: [6x] 0.0 ; 0.0 ; 0.0

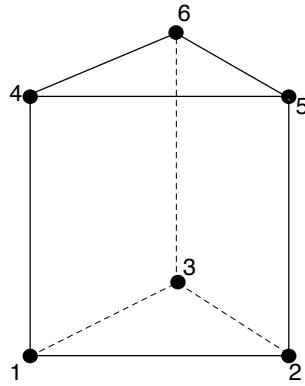


Figure 2.1: Definition of the wedge points for X 163

○ ○ ○ ●

X 164 * [double](#) hexahedron floating body, each of the 8 points is given by the coordinates

$x_1, y_1, z_1, x_2, y_2, z_2, x_3, y_3, z_3, x_4, y_4, z_4, x_5, y_5, z_5, x_6, y_6, z_6, x_7, y_7, z_7, x_8, y_8, z_8$

default: [8x] 0.0 ; 0.0 ; 0.0

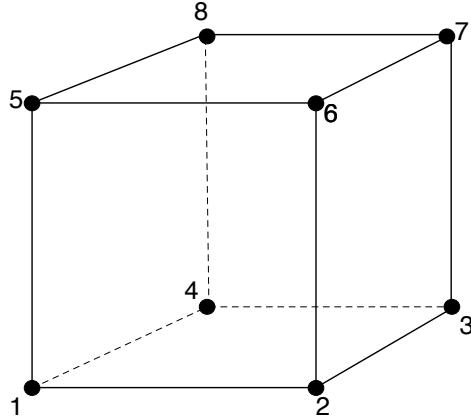


Figure 2.2: Definition of the hexahedron points for X 164

○ ○ ○ ●

X 180 [int](#) Read STL file “floating.stl” for floating body geometry

0 OFF

1 ON

default: 1

○ ○ ○ ●

X 181 `double` Scale STL geometry in x-, y-, and z-direction

default: 1.0 ; 1.0 ; 1.0

○ ○ ○ ●

X 182 `double` 3D linear translation of STL object; $\Delta x, \Delta y, \Delta z$

default: 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 183 `double` 3D rotation; $x_{origin}, y_{origin}, z_{origin}, \phi, \theta, \psi$

Positive angles rotate the body clockwise.

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 184 `int` Invert inside/outside for STL geometry

1 regular

2 invert

default: 1

○ ○ ○ ●

X 210 `double` Prescribing constant linear velocities of the floating body u, v, w

default: 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 211 `double` Prescribing constant angular velocities of the floating body p, q, r

default: 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 221 `double` Vector for vector based motion file $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}$.

This option requires the 'motionfile_vec.dat' file to be present in the simulation folder.
In the file, columns with t and S need to be given.

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

X 310 `int` Turn on mooring modelling for floating bodies

- 0** off
- 1** Static catenary
- 2** Quasi-Static FEM
- 3** Dynamic FDM
- 4** Spring (using X 312)

default: 0

X 311 * `double` Specify mooring line configuration $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}, w, \rho_c, EA, d, I, H, P, Q$.

Each mooring line of length $l[m]$ and diameter $d[m]$ has to be specified separately using this option. \vec{x}_{start} is the mounting point at the bottom, \vec{x}_{end} the mounting point at the body. The weight of the line is calculated from the specific weight in air $w[kg/m]$, its density $\rho_c[kg/m^3]$ and its elasticity times area EA . H represents the number of elements for the numerical approaches, P is the polynomial order for the dynamic approach. A relaxation technique can be included for this approach using the time factor Q .

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0 ; 0 ; 0

X 312 * `double` Specify spring configuration $x_{start}, x_{end}, y_{start}, y_{end}, z_{start}, z_{end}, k, T_0$.

Each spring with stiffness $k[N/m]$ has to be specified separately using this option. \vec{x}_{start} is the mounting point at the bottom, \vec{x}_{end} the mounting point at the body. T_0 is the pre-tension.

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

X 313 `int` Initial rotation of mooring end points with the floating body (specified with X 101).

- 0** off
- 1** on

default: 0

X 314 * `double` Maximum tension force at which each mooring line breaks. If specified, it needs a value for each line. Disable breaking for individual line by setting the tension force to zero.

default: na

X 314 * `double` Maximum tension force at which each mooring line breaks. If specified, it needs a value for each line. Disable breaking for individual line by setting the tension force to zero.

default: na

X 315 * `double` Maximum time at which each mooring line breaks. If specified, it needs a value for each line. Disable breaking for individual line by setting the time to zero.

default: na

X 320 `int` Turn on net modelling. Each net has to be specified separately using this option.

0 off

2 Static net cylinder

3 Static net wall

4 Static sheets following floating body

12 Dynamic net cylinder

13 Dynamic net wall

default: 0

X 321 * `double` Specify net material S_n , d_t , l_t , d_k , ρ , N_d , N_l .

Each net has to be specified separately using this option. S_n is the solidity, d_t is the diameter of each twine, l_t its length, d_k is the diameter of the knots (0.0 if knotless), ρ is the density of the net material. The net is discretised in N_d meshes along D and N_l meshes along L (to be specified in X 322).

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

X 322 * **double** Specify net dimensions $D, L, x_0, y_0, z_0, \phi, \theta, \psi$.

Each net has to be specified separately using this option. D is the diameter or width of the net, L is the height. The structure is first rotated around the origin with the given angles around the x-, y- and z-axis. Then, the centre point of the bottom of the structure is moved to the position (x_0, y_0, z_0) .

default: 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0 ; 0.0

○ ○ ○ ●

X 323 * **double** mass in air, **double** diameter and **double** length of sinker for dynamic net models.

default: 0.0; 0.0; 0.0

○ ○ ○ ●

X 324 * **double** x-location, **double** y-location and **double** z-location of knot probes.

The dynamic net model searches for the nearest knot to track.

default: na

○ ○ ○ ●

X 325 * **double** time step, **double** relaxation in x-direction **double** relaxation in y-direction **double** relaxation in z-direction for dynamic net models. Set time step to zero to use the fluid domain time stepping.

default: 0.0; 0.0; 0.0; 0.0

○ ○ ○ ●

X 400 **int** External moving pressure field for SFLOW (requires X 401)

0 off

1 Hemisphere (defined with X 23 and X 133)

2 Ship (defined with X 23 and X 110)

default: 0

○ ○ ○ ●

X 401 * **double** p_0 , **double** c_l , **double** c_b **double** a Coefficients for the definition of the external moving pressure field.

default: na na na na

2.16 Z :: FSI

Valid for:

S F N C
○ ○ ○ ●

Z 10 int Turn on FSI algorithm for flexible bodies

- 0** Off
 - 1** Strips
- default:** 0

○ ○ ○ ●

Z 11 * double x , double y , double z , double L , double W , double T double ρ , double E ,
double I_x , double I_y , double I_z , double ν , double N

Each object has to be specified separately using this option. (x,y,z) is the initial position of the central bottom point of the strip. L is the length of the object, W its width and T its thickness ($L \gg W \gg T$ has to be valid). Further, ρ is the density of the material, E is the Young modulus, (I_x, I_y, I_z) are the second moments of area, ν is the Poisson ratio. N defines the number of elements per object.

default: na na

○ ○ ○ ●

Z 12 * double $c_{d,X}$, double $c_{d,Y}$, double $c_{d,Z}$, double $c_{k,X}$, double $c_{k,Y}$, double $c_{k,Z}$

Adding velocity-related viscous damping in local X, Y, Z direction of the beam. \vec{c}_d for translational motions, \vec{c}_k for rotational motions.

default: 0.0; 0.0; 0.0; 0.0; 0.0; 0.0

3. Compiling the Code

REEF3D depends on gcc compilers, OpenMPI, HYPRE and Eigen. If the system has included all prerequisites, section 3.1 can be skipped. Users with Windows 10 systems can follow the instructions in section 3.4.

For a usage only compilation, see section 3.2; for developers see section 3.3.

3.1 Install Required Packages

Here, the exemplary installation of REEF3D on Mac OS X is shown. Installations on Linux systems can be done in a similar way.

3.1.1 Installing GCC GNU compiler on Mac OS X

This step is Mac only because Linux systems typically have the compilers included already.

- Open the terminal and install the command line tools, which include gcc and g++ using:
`xcode-select --install`
- Install Homebrew following the instruction on <https://brew.sh/>
- Install gfortran using the following command in the terminal:
`brew install gfortran`
- Confirm working C, C++ and fortran compilers (in a new terminal, using the commands individually):
`gcc -v`
`g++ -v`
`gfortran -v`

The output of each of these commands is a path. If you do not get any output or an error message, that particular compiler is not installed or has had problems. This needs to be fixed before you proceed to the next step.

3.1.2 Installing OpenMPI

REEF3D depends on the third-party library MPI for the parallelization of the code. MPI is very portable and the de-facto standard for the parallelization of high performance computations. Several interesting documents can be found on the official MPI homepage: <http://www.mpi-forum.org/>. Depending on the operation system, several MPI distributions exist. We recommend OpenMPI for Mac OS X and Linux.

- Download source code - <http://www.open-mpi.org/software/> and unzip the archive.

- Open ‘Terminal’ and navigate to the location of the archive and type:
 (To ensure all the compilers are given MPI support:)
`./configure CC=gcc CXX=g++ F77=gfortran FC=gfortran --prefix=/usr/local/openmpi`
- Next compile:
`make all -j N` (with N being the number of available cores on your computer)
- Finally, install by:
`sudo make install`
- Add the following openmpi locations to the PATH:
`/usr/local/openmpi/lib`
`/usr/local/openmpi/bin`
- this can be done for example using the following command:
`echo 'export PATH=/usr/local/openmpi/bin:/usr/local/openmpi/lib:$PATH' >>~/.bashrc`

Remember that the file `.bashrc` is a hidden file in your home folder. If you obtain an error message that tells you the file does not exist, you can use the file `.bash_profile`. One of these two files will be available on your system. You can find this by typing the command:

`ls -a`

when you are in your home folder.

- Close the terminal and open a new terminal to check if the addition to the path has been successful using:
`echo $PATH` (should return several paths, amongst which the ones you just added are the first to be listed). This should be in order before you proceed to the next step.

3.1.3 Installing HYPRE

HYPRE ?, ? is a library for high-performance linear solvers and preconditioners and can be downloaded here: http://computation.llnl.gov/project/linear_solvers/.

With its underlying rectilinear grid, REEF3D can take advantage of using HYPRE’s geometric multigrid options. The geometric multigrid preconditioner PFMG ? together with one of the conjugate gradient accelerators results in extremely small solution times for the Poisson equation for the pressure.

- Download source code and unzip the archive.
- Open ‘Terminal’ and navigate to the “src” folder inside the HYPRE archive and type:
`./configure --prefix=/usr/local/hypre`

Note: if HYPRE does not find the FORTRAN compiler, use the path returned by the command which gfortran or if you know it to be at a particular location provide this information as follows:

`./configure --prefix=/usr/local/hypre F77=/usr/bin/gfortran`

- Next compile:
`make all -j N` (with N at least the number of available cores)
- Finally, install by:
`sudo make install`
- Add the following HYPRE locations to the PATH:
`/usr/local/hypre/include`
`/usr/local/hypre/lib`
The command is the same as that given above for the MPI installation, but with the paths listed above:
`echo 'export PATH=/usr/local/hypre/include:/usr/local/hypre/lib:$PATH' >>~/.bashrc`

3.2 User Installation: Makefile

For users who are interested in running the code only, the easiest way is the compilation of REEF3D and DIVEMesh with the Makefiles given in the code repository. After installing MPI and HYPRE, open the terminal and go to the main directories of the code.

- For DIVEMesh, type:
`make -j N` (with N at least the number of available cores)
- For REEF3D, type:
`make -j N` (with N at least the number of available cores)

The code will compile in the /build directory and the executable is placed in the /bin directory. In case of errors during the compilation, check the Makefile for correct paths to the external libraries.

3.3 Developer Installation: CodeLite

REEF3D is written in highly modular C++ in order to provide efficient code development and maintenance. REEF3D is designed with cross-platform usage in mind. The source code can be compiled under Mac OS X, Windows and Linux. Since the user experience should be the same on all platforms when developing the code, CodeLite was chosen for the Integrated Development Environment (IDE). The reasons for this are:

- it is free under the GPL license
- it is cross-platform and works under Mac OS X, Windows and Linux
- it works with a variety of compilers
- it works with the MPI library
- support for parallel builds

CodeLite can be downloaded here. When the REEF3D source is downloaded, a CodeLite project file is included, so all header and source files are sorted in a tree structure. This should make the orientation and navigation in the source code easier.

The following path settings are to be set in Codelite to compile REEF3D. First, go to settings > build settings and add a new compiler named mpicxx. Rest of the settings are as shown in the following screenshots: (PS: check the location of your gcc, g++ and mpicxx using ‘which gcc’, ‘which g++’ and ‘which mpicxx’ to enter the appropriate paths for the compiler settings in Codelite)

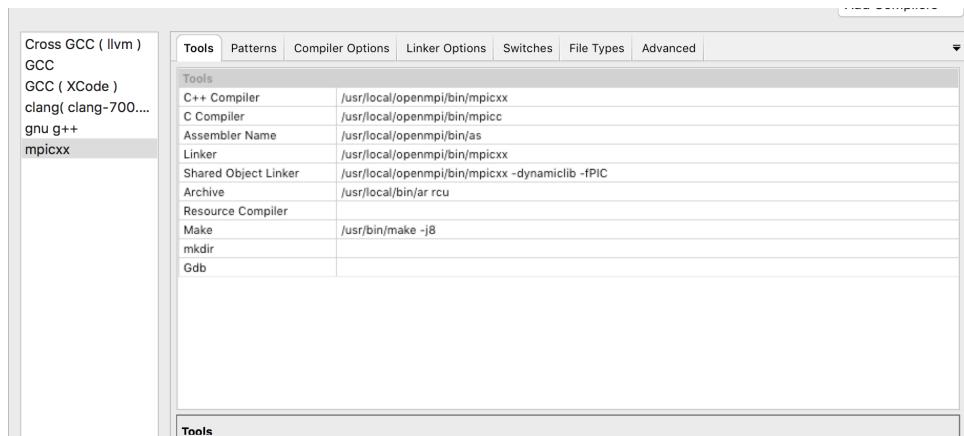


Figure 3.1: Setup of the mpicxx compiler in CodeLite.

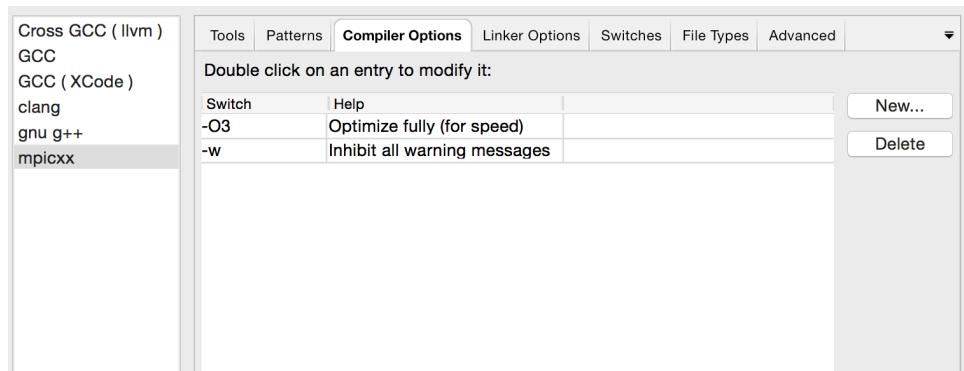


Figure 3.2: Compiler options for mpicxx.

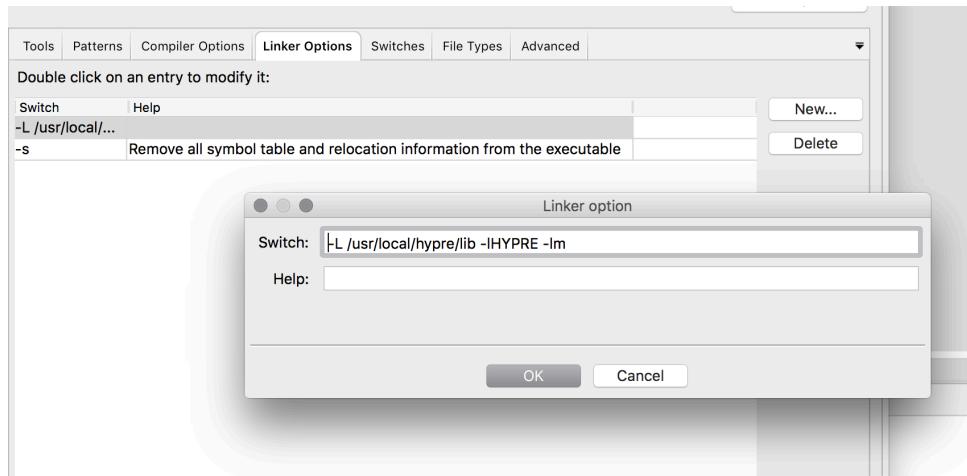


Figure 3.3: Linker options for mpicxx, link to HYPRE.

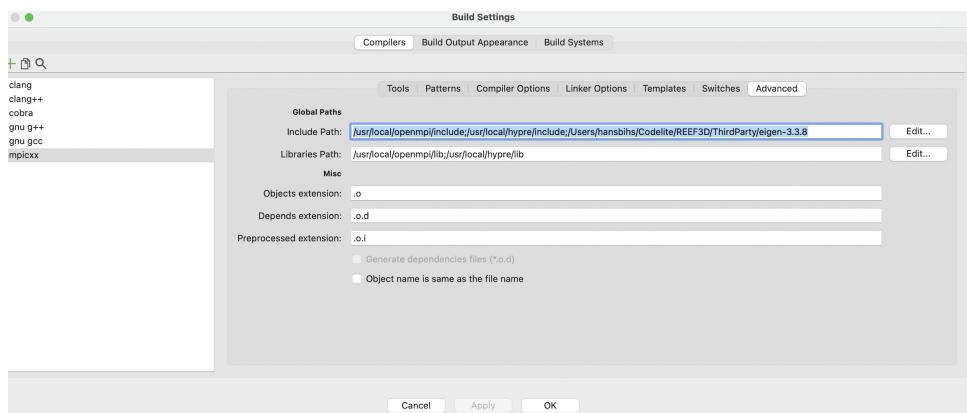


Figure 3.4: Add the Include and Libraries Paths in the advanced tab of the mpicxx compiler. Adapt the path to Eigen according to file structure of the computer.

Afterwards, the code can be compiled by clicking Build > Build Project or pressing F7.

3.4 Installing REEF3D on Windows 10

Windows 10 offers the feature to run a Unix bash terminal, given that you have kept your Windows up-to-date.

- Have administrator privileges on your 64-bit computer
- Check the version of the Windows 10 by navigating to Settings> System> About. You need to have a minimum of version 1809. If you have an earlier version, check for updates and install the update giving you version 1809 or above. Restart the computer when prompted. This can take several restarts. No support is provided for Windows update or for versions below 1809.

3.4.1 Getting Unix Terminal on Windows 10

- Look for Ubuntu App in the Microsoft App Store. Ensure that all prerequisites are fulfilled and update the system if necessary.
- Search for 'Ubuntu' in the Start menu and open the bash terminal. You will be prompted to enter a username and password. This can be different from your Windows credentials and has nothing to do with the Windows credentials.
- The Ubuntu terminal starts up at your Ubuntu home folder. To access your Windows C:\Users location, use the command:
`cd /mnt/c/Users/`
- Your Unix home directory is unfortunately a hidden folder. You will have to activate the option to View hidden and system files in order to access this using the Windows explorer. To do this:
 - Open your Windows explorer.
 - Click on the View tab at the top of the window
 - Click on the last icon on the toolbar that says Options
 - In the pop-up window, click on the View tab
 - Under the title Hidden Files and Folders, Click on the radio button for "Show hidden files, folders and drives"
- Your Ubuntu home folder can now be accessed at C:\Users\<Windows user name>\AppData\Local\Packages\CanonicalGroupLimitedUbuntuonWindows\LocalState\rootfs\home\<your ubuntu username> .

3.4.2 Installing Compilers

- Open the bash terminal and update the apt package (package manager) using:
`sudo apt update`
- To install the necessary GCC and fortran compilers, type:
`sudo apt install gcc g++ gfortran cmake libtool libglu1-mesa`
- Use the following commands to find the path to the compilers and note down for later use:
`which gcc`
`which g++`
`which gfortran`
- Get openmpi using:
`sudo apt install libopenmpi-dev`
- Continue to install Hypre using the steps listed in Sec 3.1.3.

3.4.3 Additional step for Windows for visualization using Paraview

Ubuntu on Windows does not support graphics and the Windows OS treats the Ubuntu system as hidden directory. In order to overcome this hurdle in Windows and visualise the results using Paraview, the following additional steps are necessary.

- Download the same version of Paraview for both Windows and Linux from paraview.org
- Move the Linux version, the .tar.gz archive, to the Ubuntu home folder by opening an Ubuntu terminal and using:
`cp /mnt/c/Users/<windows username>/Downloads/<ParaviewLinuxArchiveName> ./`
- Use the following command to unpack the archive:
`tar -xvf <ParaviewArchiveName>`
- Install Paraview on Windows as well, using the installer that you downloaded. Make sure that you are indeed installing the SAME version of Paraview on both Ubuntu and Windows.

4. Running the Code

4.1 DIVEMesh

After compilation, copy the DIVEMesh executable into the simulation folder. The simulation folder should be covered by the PATH variable. Make sure that the "control.txt" file is inside the simulation folder, which gives the input for DIVEMesh (see also DIVEMesh User's Guide for more information). Run DIVEMesh by double-clicking the executable or typing in the terminal while being in the path of the folder:

```
./DiveMESH
```

This will generate the grid files. If the program does not execute properly, please make sure that all input commands comply with the definitions in the User's Guide.

4.2 REEF3D

After compilation, copy the REEF3D executable into the simulation folder. The simulation folder should be covered by the PATH variable, otherwise the program will not find the MPI libraries. If the program does not execute properly, please make sure that all input commands comply with the definitions in the User's Guide. If a command does not have the required number of input variables, REEF3D will stop at "read ctrl" in the terminal print out.

All REEF3D cases are started with the following terminal command:

```
mpirun -n number of processes reef3d
```

For a computer with four processors, this command then becomes:

```
mpirun -n 4 reef3d
```

Alternatively this command can be used:

```
mpiexec -n 4 reef3d
```


5. Post-Processing

5.1 Paraview

Paraview is an open-source visualization tool. It is cross-platform and works on Mac OSX, Windows and Linux. Paraview supports parallel output files as well as parallel rendering through distributed computing. Because it is very flexible, efficient and free, it is the preferred program for visualizing REEF3D's computed results.

5.2 Additional step for Windows users to use paraview

In order to access the results files created in the Ubuntu system and open them in the Wondows system, the following additonal steps are essential.

- Open a Ubuntu terminal and navigate to the location of the Paraview installation. If you have followed the instructions exactly, then it is:
`cd <ParaviewFolderName>/bin`
- Start a paraview server using:
`./pvserver`
- You will get an output in the terminal that will show you a URL of the form:
`cs://ABCD789: 11111` (This is an example. The actual name will be different, use what you are shown on your screen)
The first part- ABCD789 is the host name, the second part after the colon (:) is the port number. Make a note of this.
- Open Paraview on your Windows system. Click on the “Connect to server” button (two white towers with a green dot, third icon from the left on the topmost toolbar).
- In the pop-up dialog box, click on Add server. In the dialog box that opens now, enter your host name in the box for Host, and the port number in the box for Port. Use any name you would like in the topmost box for Name.
- Click on configure. And then on save. Click on the saved configuration you are shown on the list and click on Connect.

5.3 Visualising Two-Phase Flow Results in Paraview

REEF3D can write out a range of different result files, depending on the hydrodynamics module used. In this section, the procedure is presented how to visualize the free surface obtained from two-phase flow simulations through the CFD module. For these type of calculations, the level set method is employed which defines the free surface implicitly. The free surface is the zero-contour of the level set function (the variable phi in the paraview

dropdown menu). In the following, the procedure is presented on how to extract the zero level set contour from the .vtu files printed out by the CFD module.

Open the .pvtu fileset in paraview through File> open and selecting the .pvtu file in the popup window. Click on outline in the paraview tool bar as shown in Fig.5.1 to obtain the outline of the wave tank. Click on the Slice filter on the toolbar (circled in Fig.5.1) and select “y-normal” in the properties sidebar to generate a 2D slice along the length of the numerical wave tank as shown in Fig.5.2. The slice can be colored according to the various variables available in the dropdown menu. To obtain the free surface, select the slice in the pipeline browser and click on the Contour filter on the tool bar and select Contour by: phi in the properties sidebar with value range 0 as shown in Fig.5.3. The geometry of the structure used in the wave tank is included by adding the .vtu file generated by DiveMesh to obtain the result shown in Fig.5.4.

To obtain a 3D visualization of the free surface, open the .pvtu file in Paraview and directly use the Contour filter on as shown in Fig.9.44.

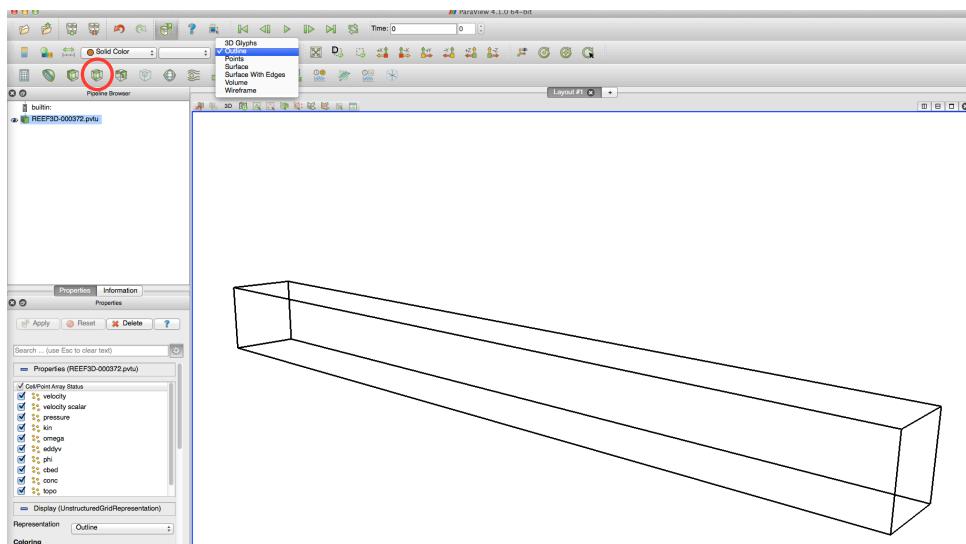


Figure 5.1: Outline of the numerical wave tank

Generating screenshots and animations from Paraview

Use File> Save Screenshot from the drop down menu, input the desired resolution, click OK and select the file type in the next window to save a screenshot from Paraview.

To generate an animation, use File>Save Animation from the dropdown menu. Enter the desired frame rate (recommended value: 1/P30) and the range of time steps to be included in the animation in Frame range. Select the desired file type in the next window.

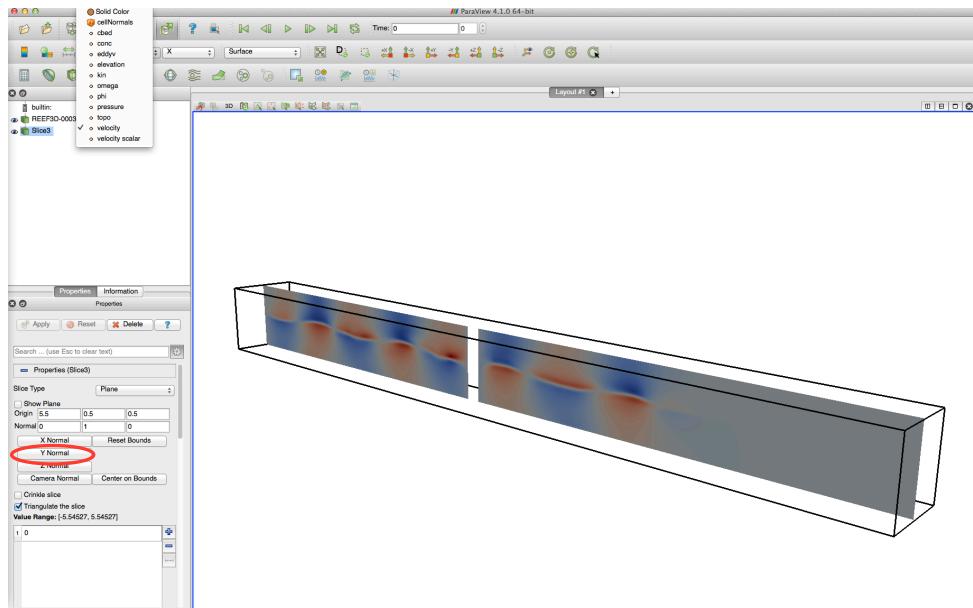


Figure 5.2: Creating a 2D slice

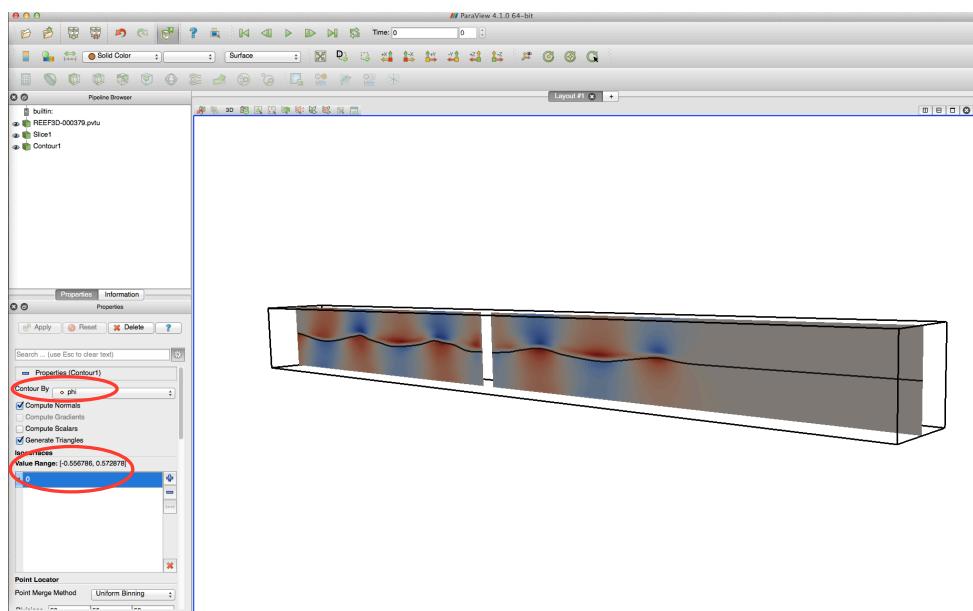


Figure 5.3: Generating the free surface

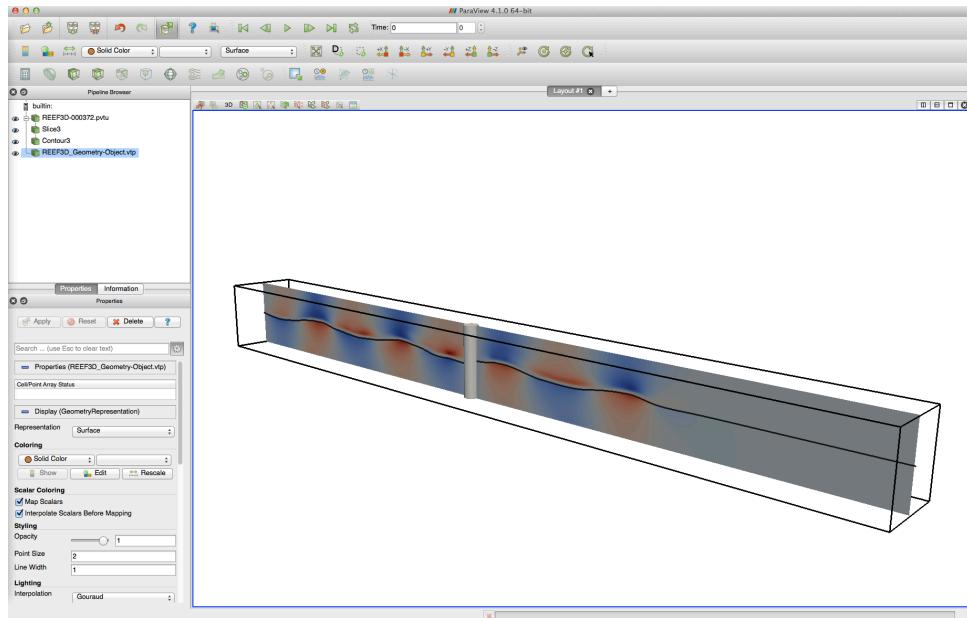


Figure 5.4: Including the geometry of the structure

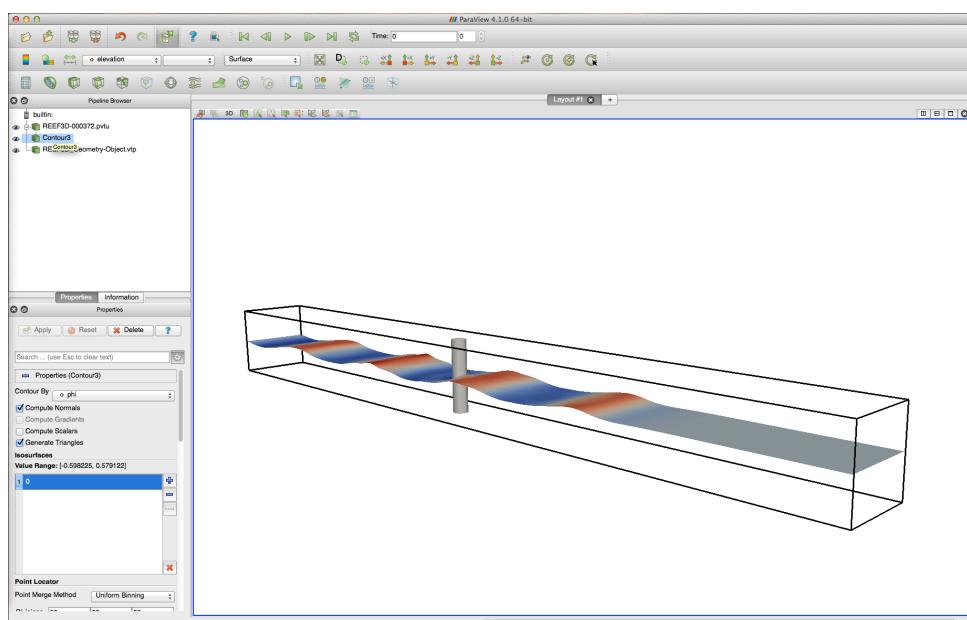


Figure 5.5: Visualizing the free surface in 3D

6. Running the Code

In this chapter some examples are given, the raw input files can be downloaded from the REEF3D website. The focus is on helping the user to understand the workflow of REEF3D. The control files are not necessarily optimized, when it comes to grid convergence and resolution. Rather, the mesh size are kept to reasonable sizes in order to be able to run the cases on laptop or desktop machines.

All REEF3D cases are started with the following terminal command:

```
mpirun -n number of processes reef3d
```

For a computer with four processors, this command then becomes:

```
mpirun -n 4 reef3d
```

Alternatively this command can be used:

```
mpiexec -n 4 reef3d
```

The 'ctrl.txt' file contains the input for REEF3D. The idea of the input structure is to use a capital letter for the type of functionality it describes, e.g. 'T' for turbulence. The letter is followed by a number for the individual option. All available options are listed in the previous sections of this document together with the required input, i.e. number of specified values, type of value (int or double) and the default value which will be used by REEF3D in case no input is given by the user.

The 'control.txt' files describe the mesh and are read by DIVEMesh, a separate open-source mesh editor. The structure is the same as in REEF3D and the overview over all available functions is available in the separate DIVEMesh User Guide. Upon executing DIVEMesh, grid files for each of the parallel subprocesses will be generated. The source code for DIVEMesh can also be downloaded from the REEF3D website.

7. Tutorial | REEF3D::SFLOW

For visualization, open the REEF3D_SFLOW_VTP and REEF3D_SFLOW_VTP_BED folders.

7.1 2nd-order Stokes waves

2nd-order Stokes waves over a flat bed.

7.1.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave generation zone  
C 12 3 // side: symmetry plane  
C 13 3 // side: symmetry plane  
C 14 7 // right side: numerical beach  
C 15 21 // bottom: wall boundary  
C 16 3 // top: wall boundary  
  
B 1 0.02 // mesh size dx  
B 10 0.0 28.0 0.0 0.02 0.0 1.0 // rectangular domain size  
  
M 10 8 // number of processors  
M 20 2 // decomposition method
```

7.1.2 REEF3D: ctrl.txt

```
A 10 2 // turn on sflow  
A 210 3 // 3rd-order runge-kutta time discretisation  
A 211 4 // conservative weno discretisation for velocities  
A 216 2 // convection velocity  
A 220 2 // non-hydrostatic pressure with quadratic assumption  
A 223 0.5 // blending factor pressure gradient  
A 240 1 // free surface allgorithm  
A 241 1 // discretisation of water level  
A 243 0 // turn off wetting and drying  
A 246 0 // turn off breaking  
  
B 90 1 // turn on iowave  
B 92 4 // 2nd-order stokes wave  
B 91 0.05 4.0 // wave amplitude and wavelength  
B 96 4.0 8.0 // wave generation and absorption relaxation zone lengths  
B 98 2 // use relaxation wave generation  
B 99 1 // use relaxation wave absorption
```

```

F 60 0.5 // water depth

N 41 60.0 // simulation time
N 47 0.2 // adaptive time stepping cfl number

M 10 8 // number of processors

P 10 1 // simulation time print out .vti files
P 30 0.1 // print out .vti files interval based on simulation time

P 50 4.0 0.01 // wave gauge location for theory
P 51 4.0 0.01 // wave gauge location

P 50 14.5 0.01 // wave gauge location for theory
P 51 14.5 0.01 // wave gauge location

P 50 19.0 0.01 // wave gauge location for theory
P 51 19.0 0.01 // wave gauge location

P 52 0.01 // y coordinate location of wave profile in x-direction
P 53 1 // print out theoretical wave profile in space
P 54 100 // print out wave profile in space every 100 iterations

W 22 -9.81 // gravity

```

7.1.3 Results

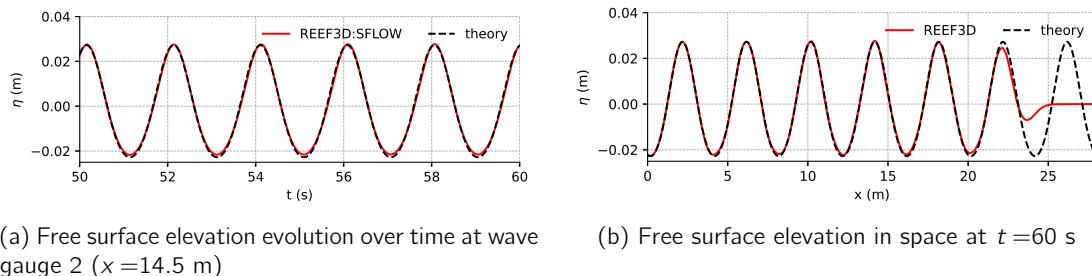


Figure 7.1: Free surface elevations in the simulation of 2nd-order Stokes wave in intermediate water depth.

7.2 Cnoidal waves over constant water depth

Cnoidal waves over a flat bed.

7.2.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave generation zone  
C 12 3 // side: symmetry plane  
C 13 3 // side: symmetry plane  
C 14 7 // right side: numerical beach  
C 15 21 // bottom: wall boundary  
C 16 3 // top: wall boundary  
  
B 1 0.02 // mesh size dx  
B 10 0.0 28.0 0.0 0.02 0.0 1.0 // rectangular domain size  
  
M 10 8 // number of processors  
M 20 2 // decomposition method
```

7.2.2 REEF3D: ctrl.txt

```
A 10 2 // turn on sflow  
A 210 3 // 3rd-order runge-kutta time discretisation  
A 211 4 // conservative weno discretisation for velocities  
A 216 2 // convection velocity  
A 220 2 // non-hydrostatic pressure with quadratic assumption  
A 223 0.5 // blending factor pressure gradient  
A 240 1 // free surface allgorithm  
A 241 1 // discretisation of water level  
A 243 0 // turn off wetting and drying  
A 246 0 // turn off breaking  
  
B 90 1 // turn on iowave  
B 92 8 // cnoidal wave  
B 91 0.21 4.0 // wave amplitude and wavelength  
B 96 4.0 8.0 // wave generation and absorption relaxation zone lengths  
B 98 2 // use relaxation wave generation  
B 99 1 // use relaxation wave absorption  
  
F 60 0.5 // water depth  
  
N 41 60.0 // simulation time  
N 47 0.2 // adaptive time stepping cfl number  
  
M 10 8 // number of processors  
  
P 10 1 // simulation time print out .vtp files  
P 30 0.1 // print out .vtp files interval based on simulation time  
  
P 50 4.0 0.01 // wave gauge location for theory  
P 51 4.0 0.01 // wave gauge location  
  
P 50 14.5 0.01 // wave gauge location for theory  
P 51 14.5 0.01 // wave gauge location
```

```

P 50 19.0 0.01 // wave gauge location for theory
P 51 19.0 0.01 // wave gauge location

P 52 0.01 // y coordinate location of wave profile in x-direction
P 53 1 // print out theoretical wave profile in space
P 54 100 // print out wave profile in space every 100 iterations

W 22 -9.81 // gravity

```

7.2.3 Results

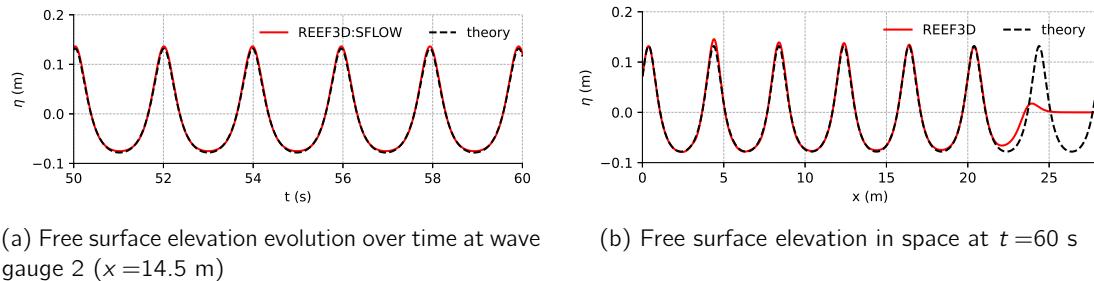


Figure 7.2: Free surface elevations in the simulation of cnoidal wave in intermediate water depth.

7.3 Solitary wave over constant water depth

Solitary waves over a flat bed.

7.3.1 DIVEMesh: control.txt

```

C 11 6 // left side: wave generation zone
C 12 3 // side: symmetry plane
C 13 3 // side: symmetry plane
C 14 7 // right side: numerical beach
C 15 21 // bottom: wall boundary
C 16 3 // top: wall boundary

B 1 0.02 // mesh size dx
B 10 0.0 28.0 0.0 0.02 0.0 1.0 // rectangular domain size

M 10 8 // number of processors
M 20 2 // decomposition method

```

7.3.2 REEF3D: ctrl.txt

```
A 10 2 // turn on sflow
A 210 3 // 3rd-order runge-kutta time discretisation
A 211 4 // conservative weno discretisation for velocities
A 216 2 // convection velocity
A 220 2 // non-hydrostatic pressure with quadratic assumption
A 223 0.5 // blending factor pressure gradient
A 240 1 // free surface allgorithm
A 241 1 // discretisation of water level
A 243 0 // turn off wetting and drying
A 246 0 // turn off breaking

B 90 1 // turn on iowave
B 92 9 // solitary wave
B 91 0.05 4.0 // wave amplitude and wavelength
B 96 4.0 0.0 // wave generation and absorption relaxation zone lengths
B 98 2 // use relaxation wave generation
B 99 1 // use relaxation wave absorption

F 60 0.5 // water depth

N 41 20.0 // simulation time
N 47 0.2 // adaptive time stepping cfl number

M 10 8 // number of processors


P 10 1 // simulation time print out .vtp files
P 30 0.1 // print out .vtp files interval based on simulation time

P 50 14.5 0.01 // wave gauge location for theory
P 51 14.5 0.01 // wave gauge location

P 52 0.01 // y coordinate location of wave profile in x-direction
P 53 1 // print out theoretical wave profile in space
P 54 100 // print out wave profile in space every 100 iterations

W 22 -9.81 // gravity
```

7.3.3 Results

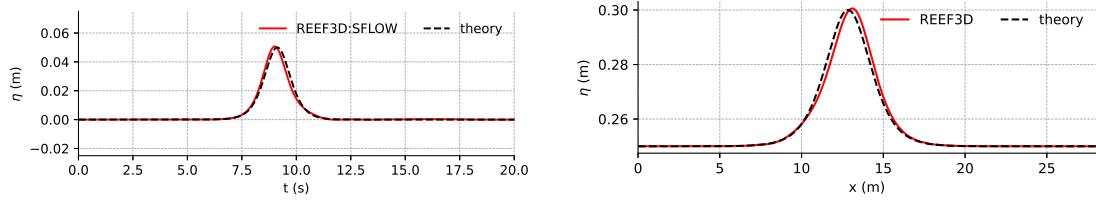

(a) Free surface elevation evolution over time at wave gauge 2 ($x = 14.5$ m) (b) Free surface elevation in space at $t = 8.4155$ s

Figure 7.3: Free surface elevations in the simulation of solitary wave in intermediate water depth.

7.4 Wave propagation over a submerged bar

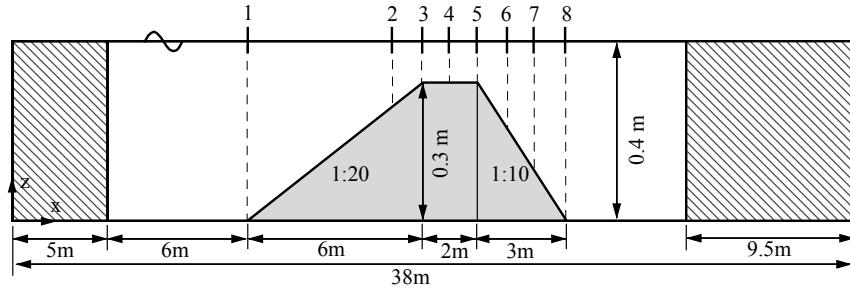


Figure 7.4: Experimental setup submerged bar

7.4.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave generation
C 12 3 // side: symmetry plane
C 13 3 // side: symmetry plane
C 14 7 // right side: numerical beach
C 15 21 // bottom: wall boundary
C 16 3 // top: symmetry plane

B 1 0.02 // horizontal mesh size dx
B 10 0.0 38.0 0.0 0.02 0.0 0.8 // rectangular domain size

S 61 11.0 17.0 0.0 0.04 0.0 0.3 // solid wedge object
S 10 17.0 19.0 0.0 0.04 0.0 0.3 // solid rectangular object
S 61 19.0 22.0 0.0 0.04 0.3 0.0 // solid wedge object

M 10 8 // number of processors
M 20 2 // decomposition method 2
```

7.4.2 REEF3D: ctrl.txt

```
A 10 2 // turn on sfow
A 209 0 // interpolation sweeps for bed
```

```

A 210 3 // 3rd-order runge-kutta time discretisation
A 211 4 // conservative weno discretisation for velocities
A 216 4 // convection velocity
A 220 2 // non-hydrostatic pressure with quadratic assumption
A 223 0.4 // blending factor pressure gradient
A 240 1 // free surface allgorithm
A 241 4 // discretisation of water level
A 243 2 // wetting-drying including depth
A 246 0 // turn off breaking

B 90 1 // wave input
B 92 4 // 2nd-order stokes wave
B 93 0.021 2.525 // wave height and wave period
B 96 5.0 10.0 // wave generation zone length and numerical beach length
B 98 2 // relaxation method 2 for wave generation
B 99 1 // relaxation method 1 for numerical beach

F 60 0.4 // still water depth

N 41 60.0 // simulation time
N 47 0.2 // cfl number

M 10 8 // number of processors

P 51 11.0 0.01 // x and y coordinate of wave gauge 1 for simulations
P 51 16.0 0.01 // x and y coordinate of wave gauge 2 for simulations
P 51 17.0 0.01 // x and y coordinate of wave gauge 3 for simulations
P 51 18.0 0.01 // x and y coordinate of wave gauge 4 for simulations
P 51 19.0 0.01 // x and y coordinate of wave gauge 5 for simulations
P 51 20.0 0.01 // x and y coordinate of wave gauge 6 for simulations
P 51 21.0 0.01 // x and y coordinate of wave gauge 7 for simulations
P 51 22.0 0.01 // x and y coordinate of wave gauge 8 for simulations

P 52 0.01 // y-coordinate and print out water surface line (wfsline) in x-direction
P 55 0.5 // print out wsflne files interval based on time interval

W 22 -9.81 // gravity

```

7.4.3 Results

Note that the high-frequency bounded waves emerging after the top of submerged bar are in deep water condition, thus the discrepancies with the experiment at wave gauges 6 and onwards. Be ware about the water depth condition when applying the depth-averaged models.

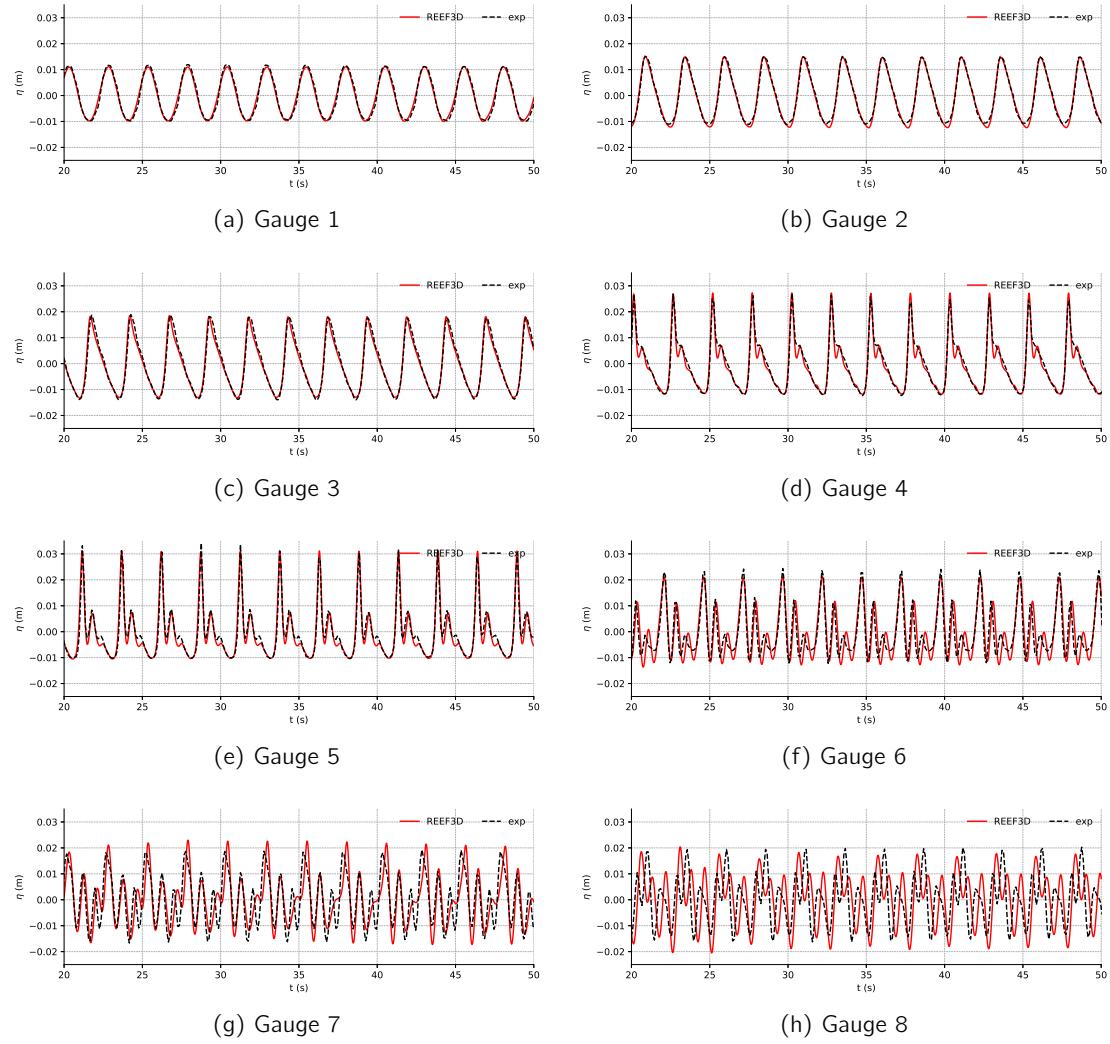


Figure 7.5: Free surface elevations in the simulation of wave propagation over a submerged bar.

8. Tutorial | REEF3D::FNPF

8.1 2nd-order Stokes wave in intermediate water depth

8.1.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave generation
C 12 3 // side: symmetry plane
C 13 3 // side: symmetry plane
C 14 7 // right side: numerical beach
C 15 21 // bottom: wall boundary
C 16 3 // top: symmetry plane

B 1 0.1 // horizontal mesh size dx
B 2 400 1 10 // number of cells in x, y and z directions
B 10 0.0 40.0 0.0 0.1 0.0 2.0 // rectangular domain size

B 103 5 // vertical grid clustering
B 113 2.5 // the stretching factor for the vertical grid clustering
B 116 2.0 // the focal point for the vertical grid clustering, which is water depth here

M 10 8 // number of processors
M 20 2 // decomposition method 2
```

8.1.2 REEF3D: ctrl.txt

```
A 10 3 // choose the model reef::fnpf
A 310 3 // 3rd-order runge-kutta for fsfbc time treatment
A 311 4 // 5th-order weno for fsfbc spatial treatment
A 320 1 // 2nd-order laplace
A 343 0 // turn off wetting-drying

B 90 1 // wave input
B 92 4 // 2nd-order stokes wave
B 91 0.04 4.0 // wave height and wave length
B 96 4.0 8.0 // wave generation zone length and numerical beach length
B 98 2 // relaxation method 2 for wave generation
B 99 1 // relaxation method 1 for numerical beach

F 60 2.0 // still water depth

N 41 40.0 // simulation time
N 47 1.0 // cfl number

M 10 8 // number of processors

P 10 1 // turn on .vtu printout
P 30 0.5 // print out .vtu files interval based on simulation time
```

```

P 50 15.0 0.005 // x and y coordinate of wave gauge 1 for theory
P 50 20.0 0.005 // x and y coordinate of wave gauge 2 for theory
P 50 25.0 0.005 // x and y coordinate of wave gauge 3 for theory

P 51 15.0 0.005 // x and y coordinate of wave gauge 1 for simulations
P 51 20.0 0.005 // x and y coordinate of wave gauge 2 for simulations
P 51 25.0 0.005 // x and y coordinate of wave gauge 3 for simulations

P 52 0.005 // y-coordinate and print out water surface line (wfsline) in x-direction
P 53 1 // print out theory in wsflne files
P 54 100 // print out wsflne files interval based on iteration

W 22 -9.81 // gravity

```

8.1.3 Results

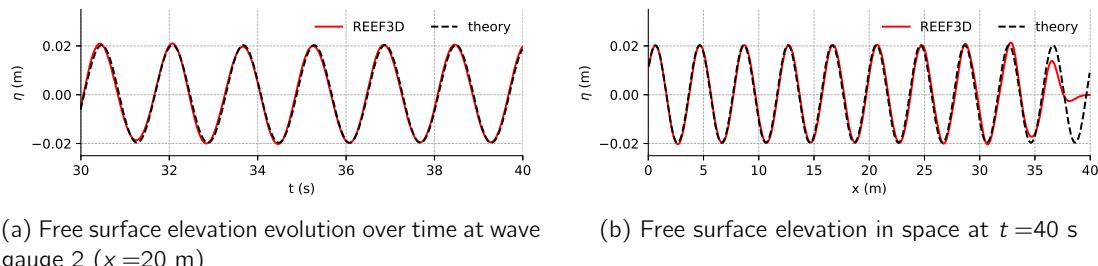


Figure 8.1: Free surface elevations in the simulation of 2nd-order Stokes wave in intermediate water depth.

8.2 Wave propagation over a submerged bar

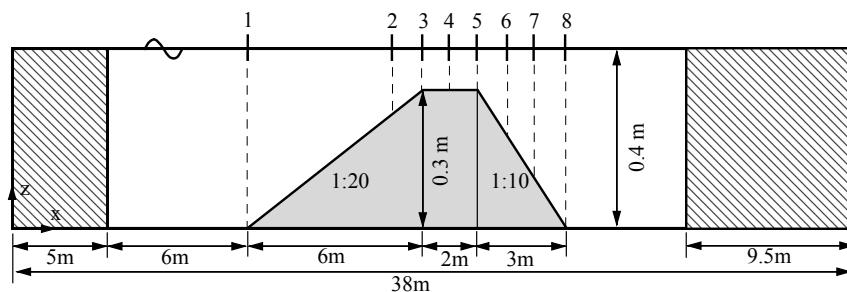


Figure 8.2: Experimtental setup submerged bar

8.2.1 DIVEMesh: control.txt

```

C 11 6 // left side: wave generation
C 12 3 // side: symmetry plane

```

```

C 13 3 // side: symmetry plane
C 14 7 // right side: numerical beach
C 15 21 // bottom: wall boundary
C 16 3 // top: symmetry plane

B 1 0.04 // horizontal mesh size dx
B 2 1000 1 10 // number of cells in x, y and z directions
B 10 0.0 40.0 0.0 0.04 0.0 1.0 // rectangular domain size

S 61 11.0 17.0 0.0 0.04 0.0 0.3 // solid wedge object
S 10 17.0 19.0 0.0 0.04 0.0 0.3 // solid rectangular object
S 61 19.0 22.0 0.0 0.04 0.3 0.0 // solid wedge object

B 103 5 // vertical grid clustering
B 113 3.0 // the stretching factor for the vertical grid clustering
B 116 1.0 // the focal point for the vertical grid clustering, which is water depth here

M 10 8 // number of processors
M 20 2 // decomposition method 2

```

8.2.2 REEF3D: ctrl.txt

```

A 10 3 // choose the model reef::fnfp
A 310 3 // 3rd-order runge-kutta for fsfbc time treatment
A 311 4 // 5th-order weno for fsfbc spatial treatment
A 320 1 // 2nd-order laplace
A 343 0 // turn off wetting-drying

B 90 1 // wave input
B 92 4 // 2nd-order stokes wave
B 93 0.021 2.525 // wave height and wave period
B 96 5.0 10.0 // wave generation zone length and numerical beach length
B 98 2 // relaxation method 2 for wave generation
B 99 1 // relaxation method 1 for numerical beach

F 60 0.4 // still water depth

N 41 100.0 // simulation time
N 47 1.0 // cfl number

M 10 8 // number of processors

P 10 1 // turn on .vtu printout
P 30 0.5 // print out .vtu files interval based on simulation time

P 51 11.0 0.005 // x and y coordinate of wave gauge 1 for simulations
P 51 16.0 0.005 // x and y coordinate of wave gauge 2 for simulations
P 51 17.0 0.005 // x and y coordinate of wave gauge 3 for simulations
P 51 18.0 0.005 // x and y coordinate of wave gauge 4 for simulations
P 51 19.0 0.005 // x and y coordinate of wave gauge 5 for simulations
P 51 20.0 0.005 // x and y coordinate of wave gauge 6 for simulations

```

P 51 21.0 0.005 // x and y coordinate of wave gauge 7 for simulations
P 51 22.0 0.005 // x and y coordinate of wave gauge 8 for simulations

P 52 0.005 // y-coordinate and print out water surface line (wfsline) in x-direction
P 55 0.05 // print out wsline files interval based on time interval

W 22 -9.81 // gravity

8.2.3 Results

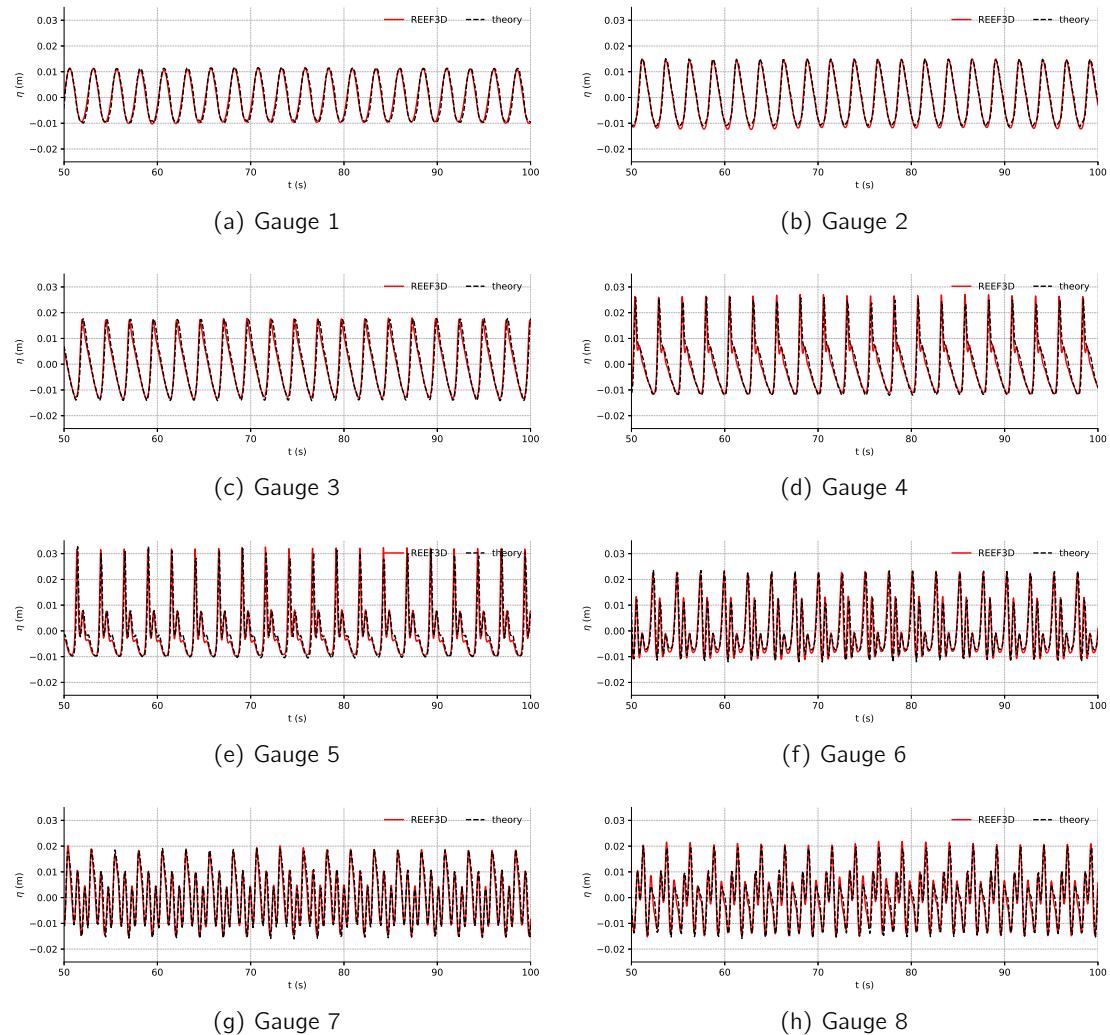


Figure 8.3: Free surface elevations in the simulation of wave propagation over a submerged bar.

8.3 Wave breaking over a mild slope

8.3.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave generation
C 12 3 // side: symmetry plane
C 13 3 // side: symmetry plane
C 14 7 // right side: numerical beach
C 15 21 // bottom: wall boundary
C 16 3 // top: symmetry plane

B 1 0.05 // horizontal mesh size dx
B 2 640 1 10 // number of cells in x, y and z directions
B 10 0.0 32.0 0.0 0.05 0.0 0.748 // rectangular domain size

B 103 5 // vertical grid clustering
B 113 1.0 // the stretching factor for the vertical grid clustering
B 116 0.4 // the focal point for the vertical grid clustering, which is water depth here

S 61 5.8 32.0 0.0 0.05 0.0 0.748 // solid wedge object

M 10 8 // number of processors
M 20 2 // decomposition method 2
```

8.3.2 REEF3D: ctrl.txt

```
A 10 3 // choose the model reef::fnpf
A 310 3 // 3rd-order runge-kutta for fsfbc time treatment
A 311 5 // 5th-order weno for fsfbc spatial treatment with wetting an drying
A 320 1 // 2nd-order laplace
A 341 2.0 // size of coastal relaxation zone by factor of cell size
A 343 1 // turn on wetting-drying
A 350 1 // viscous damping based breaking energy dissipation algorithm
A 351 1 // shallow water breaking detection
A 352 0 // no additional
A 365 0.0025 // artificial viscosity for the breaking dissipation algorithm

B 90 1 // wave input
B 92 8 // 2nd-order stokes wave
B 93 0.128 5.0 // wave height and wave length
B 96 9.5 9.0 // wave generation zone length and numerical beach length
B 98 3 // neumann boundary for wave generation
B 99 1 // relaxation method 1 for numerical beach

F 60 0.4 // still water depth

N 41 40.0 // simulation time
N 47 1.0 // cfl number
```

M 10 8 // number of processors

P 10 1 // turn on .vtu printout

P 30 0.05 // print out .vtu files interval based on simulation time

P 51 11.8 0.0025 // x and y coordinate of wave gauge 1 for simulations

P 51 12.8 0.0025 // x and y coordinate of wave gauge 2 for simulations

P 51 13.8 0.0025 // x and y coordinate of wave gauge 3 for simulations

P 51 14.1 0.0025 // x and y coordinate of wave gauge 4 for simulations

P 52 0.0025 // y-coordinate and print out water surface line (wfsline) in x-direction

P 53 1 // print out theory in wsflne files

P 55 0.05 // print out wsflne files interval based on time interval

W 22 -9.81 // gravity

8.3.3 Results

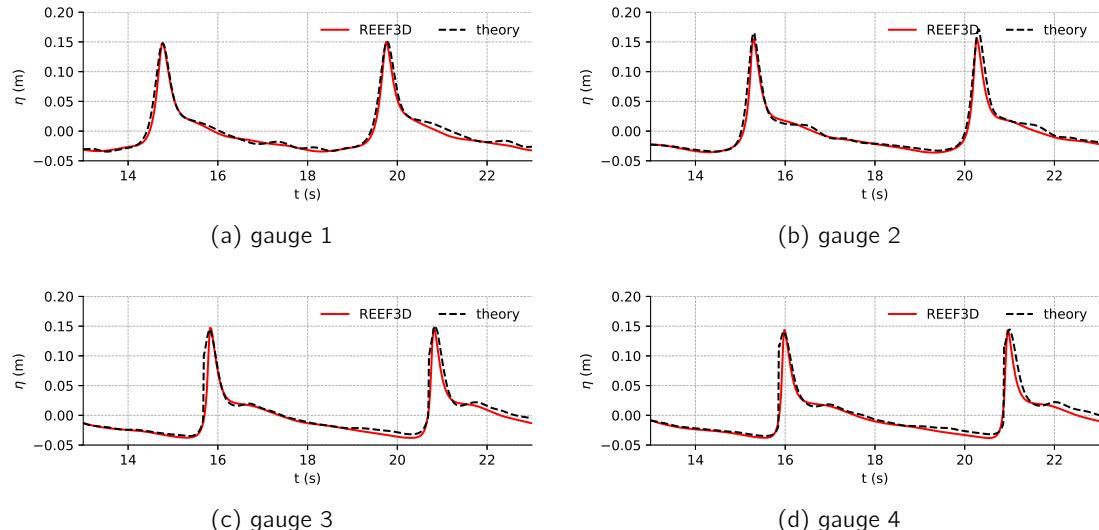


Figure 8.4: Free surface elevations in the simulation of breaking wave over a mild slope.

8.4 Irregular wave sea state in 2D

8.4.1 DIVEMesh: control.txt

C 11 6 // left side: wave generation

C 12 3 // side: symmetry plane

C 13 3 // side: symmetry plane

C 14 7 // right side: numerical beach

```

C 15 21 // bottom: wall boundary
C 16 3 // top: symmetry plane
B 1 1.0 // horizontal mesh size dx
B 2 6000 1 20 // number of cells in x, y and z directions
B 10 0.0 6000.0 0.0 1.0 0.0 1.0 // rectangular domain size
B 103 5 // vertical grid clustering
B 113 3.0 // the stretching factor for the vertical grid clustering
B 116 2.0 // the focal point for the vertical grid clustering, which is water depth here
M 10 8 // number of processors
M 20 2 // decomposition method 2

```

8.4.2 REEF3D: ctrl.txt

```

A 10 3 // choose the model reef::fnpf
A 310 3 // 3rd-order runge-kutta for fsfbc time treatment
A 311 4 // 5th-order weno for fsfbc spatial treatment
A 320 1 // 2nd-order laplace
A 343 0 // turn off wetting-drying
A 350 1 // viscous damping based breaking energy dissipation algorithm
A 351 2 // deep water wave breaking detection
A 352 0 // no additional filtering for viscous damping breaking model
B 84 1 // peak enhance spectrum discretisation
B 85 2 // jonswap wave spectrum
B 86 2048 // number of wave components
B 87 0.32 1.4 // low and high frequency limits for the frequency band
B 88 3.0 // peak factor of the jonswap spectrum
B 90 1 // wave input
B 92 31 // 1st-order irregular wave
B 93 5.0 12.0 // significant wave height and peak period
B 96 600.0 1200.0 // wave generation zone length and numerical beach length
B 98 2 // relaxation method 2 for wave generation
B 99 1 // relaxation method 1 for numerical beach
F 60 600.0 // still water depth
N 41 12800.0 // simulation time in seconds
N 48 0 // no adaptive time stepping
N 49 0.03 // fixed time step in second
M 10 8 // number of processors
P 10 1 // turn on .vtu printout
P 35 12750.0 12800.0 1.0 // print out .vtu files interval based on a simulation time window
P 51 300.0 0.5 // x and y coordinate of wave gauge 1 for simulations
P 51 1500.0 0.5 // x and y coordinate of wave gauge 2 for simulations
P 51 3500.0 0.5 // x and y coordinate of wave gauge 3 for simulations
P 52 0.5 // y-coordinate and print out water surface line (wfslne) in x-direction
P 55 10.0 // print out wsline files interval based on time interval
W 22 -9.81 // gravity

```

8.4.3 Results

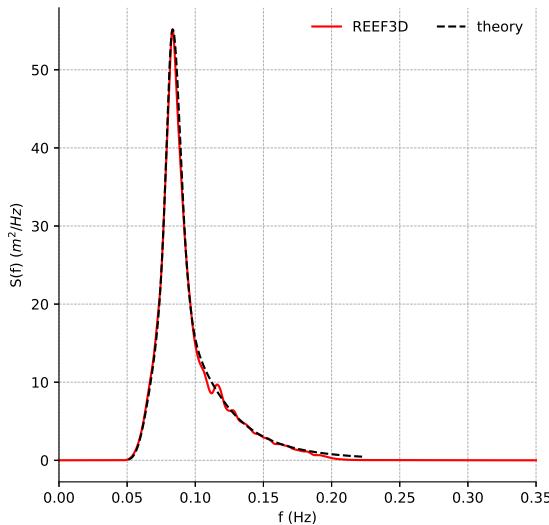


Figure 8.5: wave spectrum in the simulation of a 3-hour irregular sea state at wave gauge 2.

8.5 wave propagation over natural bathymetry

8.5.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave generation
C 12 3 // side: symmetry plane
C 13 3 // side: symmetry plane
C 14 7 // right side: numerical beach
C 15 21 // bottom: wall boundary
C 16 3 // top: symmetry plane

B 1 5.0 // horizontal mesh size dx
B 2 800 800 10 // number of cells in x, y and z directions
B 10 0.0 4000.0 0.0 4000.0 0.0 1.0 // rectangular domain size

B 103 5 // vertical grid clustering
B 113 2.5 // the stretching factor for the vertical grid clustering
B 116 1.0 // the focal point for the vertical grid clustering, which is water depth here

G 10 1 // turn geodat on/off
G 15 2 // local inverse distance interpolation
G 20 0 // use automatic grid size off
G 31 14 // number of smoothing iterations
G 41 1 // print bottom file from interpolated geo points for the spectrum model swan

M 10 12 // number of processors
M 20 2 // decomposition method 2
```

8.5.2 REEF3D: ctrl.txt

```
A 10 3 // choose the model reef::fnpf
A 310 3 // 3rd-order runge-kutta for fsfbc time treatment
A 311 5 // 5th-order weno for fsfbc spatial treatment including wetting-drying
A 320 1 // 2nd-order laplace
A 341 2.0 // size of coastal relaxation zone by a factor of the horizontal cell size
A 343 1 // turn on wetting-drying
A 344 0.1 // wetting-drying water depth threshold
A 346 2.1 // added viscosity within the coastal relaxation zone
A 350 1 // viscosity damping wave breaking algorithm
A 351 3 // breaking wave detection for both deep and shallow water
A 352 3 // additional filtering for viscosity based breaking for both deep and shallow water
A 361 5 // filtering outer iterations
A 362 2 // filtering inner iterations
A 365 1.86 // artificial viscosity for breaking wave energy dissipation

B 90 1 // wave input
B 92 4 // 2nd-order stokes wave
B 93 2.0 10.0 // wave height and wave period
B 96 200.0 400.0 // wave generation zone length and numerical beach length
B 107 0.0 4000.0 0.0 0.0 200.0 // wave generation zone length and numerical beach length
B 107 0.0 4000.0 4000.0 4000.0 200.0 // customised numerical beach at the side walls
B 107 4000.0 4000.0 0.0 4000.0 200.0 // customised numerical beach at the end of the tank
B 107 0.0 0.0 2900.0 3500.0 200.0 // customised numerical beach at the side walls
B 108 0.0 0.0 200.0 2900.0 200.0 // customised wave generation zone
B 98 2 // relaxation method 2 for wave generation
B 99 2 // relaxation method 2 for numerical beach

F 60 300.0 // still water depth

G 50 1 // read in geo bathymetry

I 30 0 // turn off full tank initialisation, one can turn it on for a quick check of the setup

N 41 600.0 // simulation time
N 47 1.0 // cfl number

M 10 12 // number of processors

P 10 1 // turn on .vtu printout
P 30 10.0 // print out .vtu files interval based on simulation time

P 51 2000.0 2000.0 // x and y coordinate of wave gauge 1 for simulations

P 180 1 // turn on .vtp free surface printout
P 185 0.0 120.0 0.1 // print out .vtp files interval based on simulation time window
P 185 480.0 600.0 0.1 // print out .vtp files interval based on simulation time window

W 22 -9.81 // gravity
```

8.5.3 Results

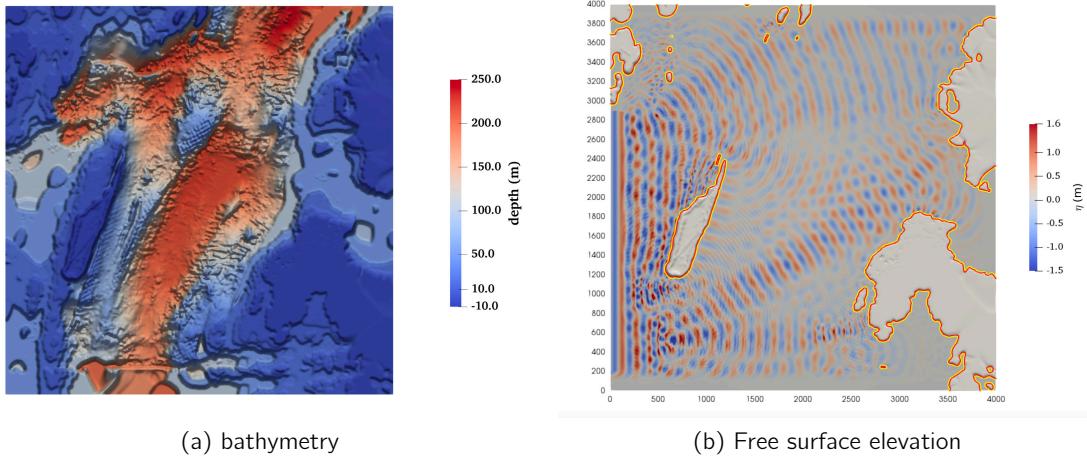


Figure 8.6: Free surface elevations in the simulation of wave propagation over natural bathymetry

8.6 3D short-crested multi-directional irregular wave

8.6.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave generation
C 12 3 // side: symmetry plane
C 13 3 // side: symmetry plane
C 14 7 // right side: numerical beach
C 15 21 // bottom: wall boundary
C 16 3 // top: symmetry plane

B 1 2.0 // horizontal mesh size dx
B 2 1000 1000 10 // number of cells in x, y and z directions
B 10 0.0 2000.0 0.0 2000.0 0.0 1.0 // rectangular domain size

B 103 5 // vertical grid clustering
B 113 2.875 // the stretching factor for the vertical grid clustering
B 116 1.0 // the focal point for the vertical grid clustering, which is water depth here

M 10 8 // number of processors
M 20 2 // decomposition method 2
```

8.6.2 REEF3D: ctrl.txt

```
A 10 3 // choose the model reef::fnpf
A 310 3 // 3rd-order runge-kutta for fsfbc time treatment
A 311 4 // 5th-order weno for fsfbc spatial treatment
A 320 1 // 2nd-order laplace
A 343 0 // turn off wetting-drying
A 350 1 // viscous damping based breaking energy dissipation algorithm
```

```

A 351 2 // deep water wave breaking detection
A 352 0 // no additional filtering for viscous damping breaking model
A 365 1.86 // artificial viscosity for wave breaking algorithm

B 84 2 // equal energy spectrum discretisation
B 85 2 // jonswap wave spectrum
B 86 1024 // number of wave components
B 87 0.39 1.01 // low and high frequency limits for the frequency band
B 88 3.3 // peak factor of the jonswap spectrum
B 90 1 // wave input
B 92 31 // 1st-order irregular wave
B 93 4.5 12.0 // significant wave height and peak period
B 96 400.0 800.0 // wave generation zone length and numerical beach length
B 98 2 // relaxation method 2 for wave generation
B 99 1 // relaxation method 1 for numerical beach
B 130 2 // mitsuyasu directional spreading function
B 131 0.0 // principal direction
B 132 -90.0 90.0 // directional spreading range in degree, measured from the principal
direction
B 133 16 // number of directions
B 134 10.0 // spreading parameter for the directional spreading functions
B 136 4 // equal energy method for directional spectrum

F 60 600.0 // still water depth

I 30 1 // full tank initialisation for quick check, turn it off for real simulations

N 41 12800.0 // simulation time in seconds
N 48 0 // no adaptive time stepping
N 49 0.08 // fixed time step in second

M 10 8 // number of processors

P 10 1 // turn on .vtu printout
P 35 12750.0 12800.0 1.0 // print out .vtu files interval based on a simulation time window


P 51 800.0 1000.0 // x and y coordinate of wave gauge for simulations
P 51 777.2464 983.4685 // x and y coordinate of wave gauge for simulations
P 51 808.6911 973.2515 // x and y coordinate of wave gauge for simulations
P 51 828.1250 1000.0000 // x and y coordinate of wave gauge for simulations
P 51 808.6911 1026.7485 // x and y coordinate of wave gauge for simulations
P 51 777.2464 1016.5315 // x and y coordinate of wave gauge for simulations

P 180 1 // turn on .vtp free surface printout
P 185 0.0 300.0 0.5 // print out .vtp files interval based on simulation time window
P 185 12500.0 12800.0 0.5 // print out .vtp files interval based on simulation time window


W 22 -9.81 // gravity

```

8.6.3 Results

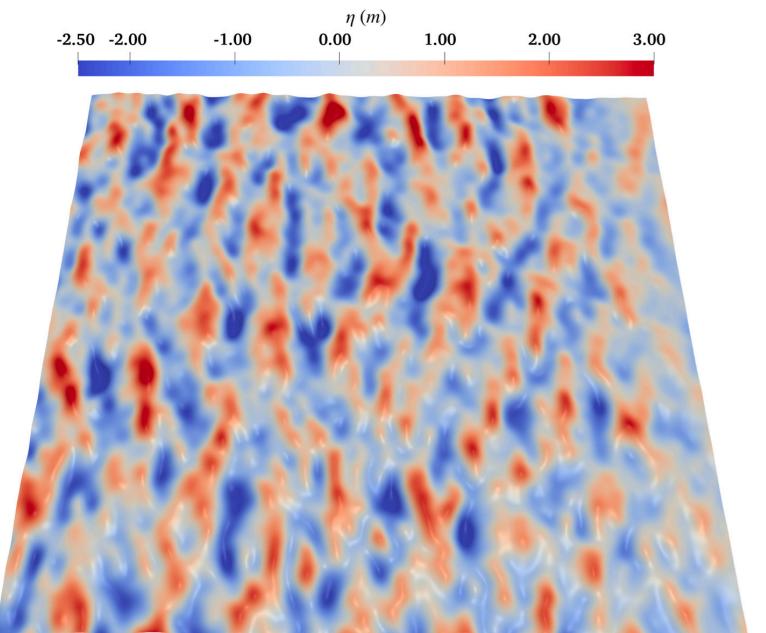

(a) Free surface elevation

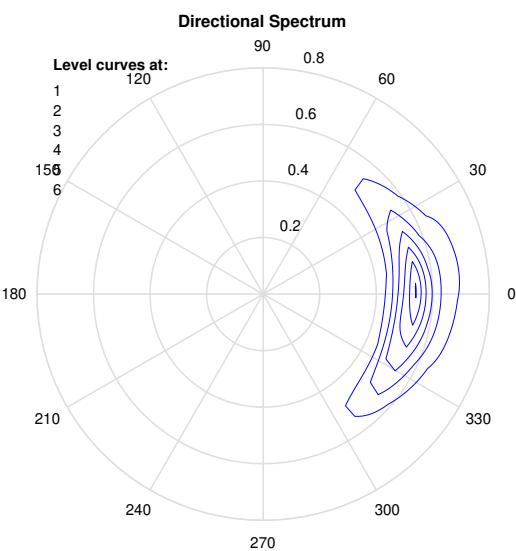

(b) directional spectrum

Figure 8.7: Free surface elevations and directional spectrum in the simulation of short-crested irregular sea.

9. Tutorial | REEF3D::CFD

9.1 2D Dam Break

This a 2D dam break case. Comments to the control files are marked by blue fonts.

9.1.1 DIVEMesh: control.txt

```
C 11 21 // left side: wall boundary
C 12 3 // side: symmetry plane
C 13 3 // side: symmetry plane
C 14 21 // right side: wall boundary
C 15 21 // bottom: wall boundary
C 16 21 // top: wall boundary
B 1 0.005 // mesh size dx
B 10 0.0 0.6 0.0 0.005 0.0 0.6 // rectangular domain size
M 10 4 // number of processors
```

9.1.2 REEF3D: ctrl.txt

```
D 10 4 // Conservative WENO discretization for velocities
D 20 2 // implicit diffusion treatment
D 30 1 // projection method for the pressure
F 30 3 // 3rd-order Runge-Kutta Scheme for Level Set Time Treatment
F 40 3 // 3rd-order Runge-Kutta Scheme for Reinitialization Time Treatment
F 50 4 // Level set function is not fixed at inlet or outlet
F 54 0.15 // x-coordinate for end fluid phase one
F 56 0.3 // z-coordinate for end fluid phase one
N 10 14 // HYPRE Struct BiCGStab pressure solver
N 11 11 // HYPRE Struct PFMG preconditioner
N 40 1 // 2nd-order Adams-Bashforth time treatment for velocities
N 45 25000 // maximum number of iterations
N 47 0.1 // factor for CFL criterion
M 10 4 // number of parallel processes
P 10 1 // turn on .vtu print out
P 30 0.01 // print out interval based on simulation time
W 22 -9.81 // gravity
```

9.1.3 Results

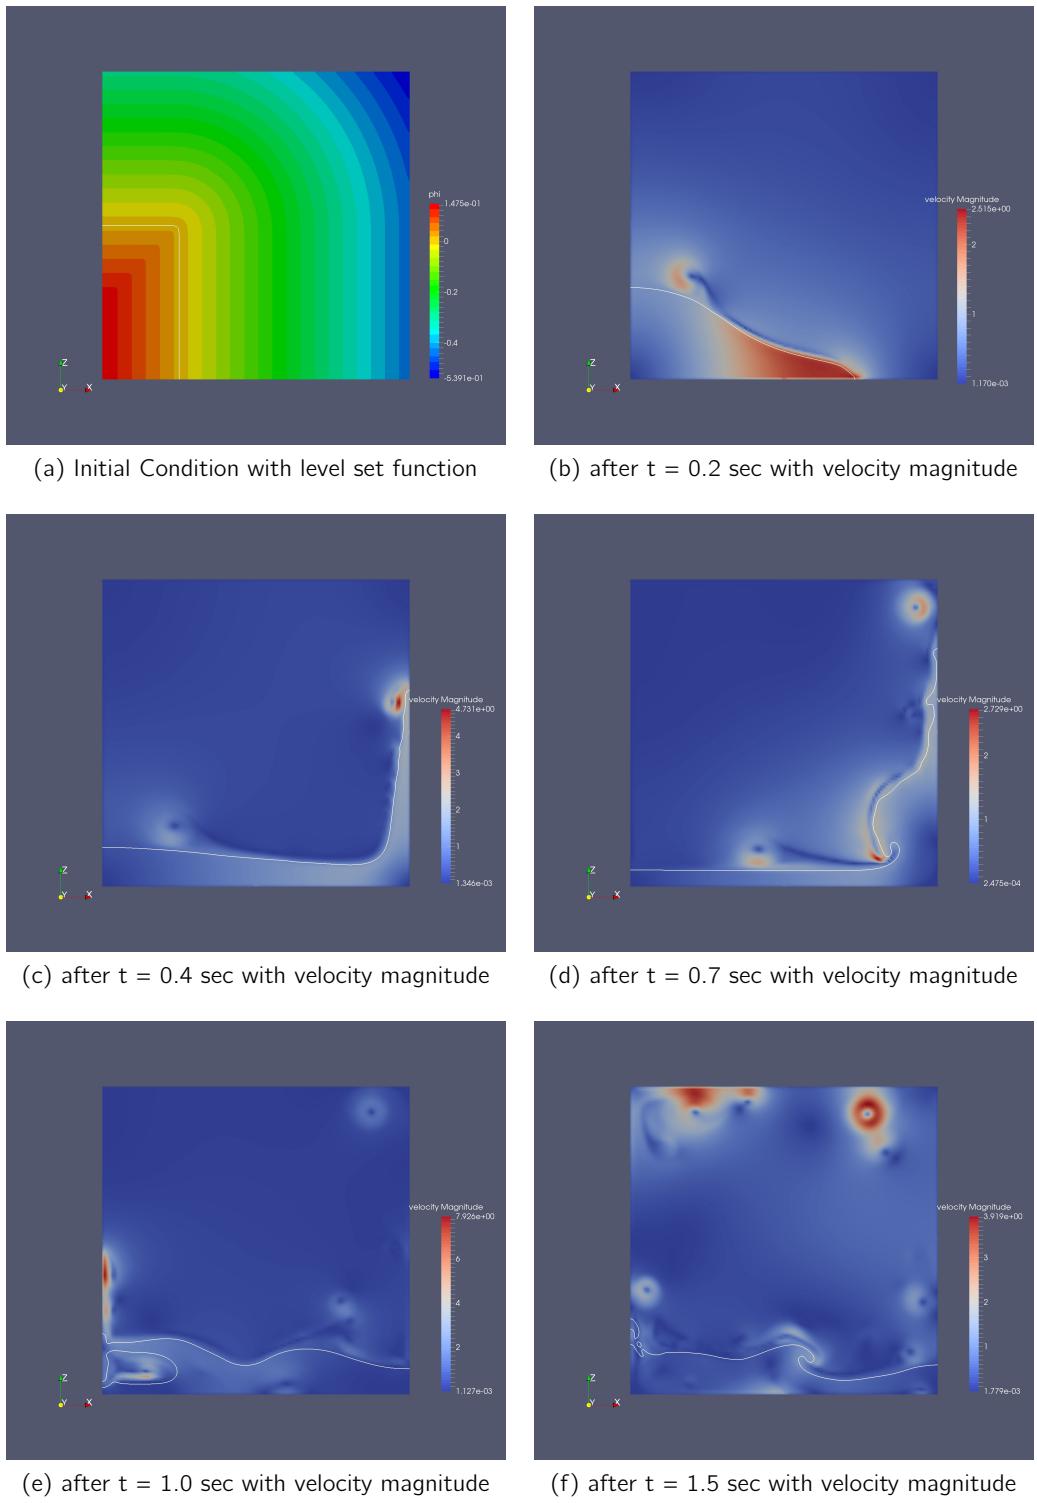


Figure 9.1: Dam Break

9.2 3D Dam Break with Obstacle

This case is optimized for fast processing. In order to get a more detailed free surface result, just change B 1 to e.g. 0.0125.

9.2.1 DIVEMesh: control.txt

```
C 11 21 // left side: wall boundary
C 12 21 // side: wall boundary
C 13 21 // side: wall boundary
C 14 21 // right side: wall boundary
C 15 21 // bottom: wall boundary
C 16 21 // top: wall boundary
B 1 0.025 // mesh size dx
B 10 0.0 2.0 0.0 1.0 0.0 1.0 // rectangular domain size
O 10 1.2 1.4 0.4 0.6 0.0 1.0 // rectangular obstacle size
M 10 4 // number of processors
```

9.2.2 REEF3D: ctrl.txt

```
D 10 4 // Conservative WENO discretization for velocities
D 20 2 // implicit diffusion treatment
D 30 1 // projection method for the pressure
F 30 3 // 3rd-order Runge-Kutta Scheme for Level Set Time Treatment
F 40 3 // 3rd-order Runge-Kutta Scheme for Reinitialization Time Treatment
F 50 4 // Level set function is not fixed at inlet or outlet
F 54 0.5 // x-coordinate for end fluid phase one
F 56 0.7 // z-coordinate for end fluid phase one
N 10 14 // HYPRE Struct BiCGStab pressure solver
N 11 11 // HYPRE Struct PFMG preconditioner
N 40 3 // 3rd-order Runge time treatment for velocities
N 41 25.0 // maximum simulation time
N 45 25000 // maximum number of iterations
N 47 0.1 // factor for CFL criterion
M 10 4 // number of parallel processes
P 10 1 // turn on .vtu print out
P 30 0.01 // print out interval based on simulation time
T 10 0 // no turbulence model
W 22 -9.81 // gravity
```

9.2.3 Results

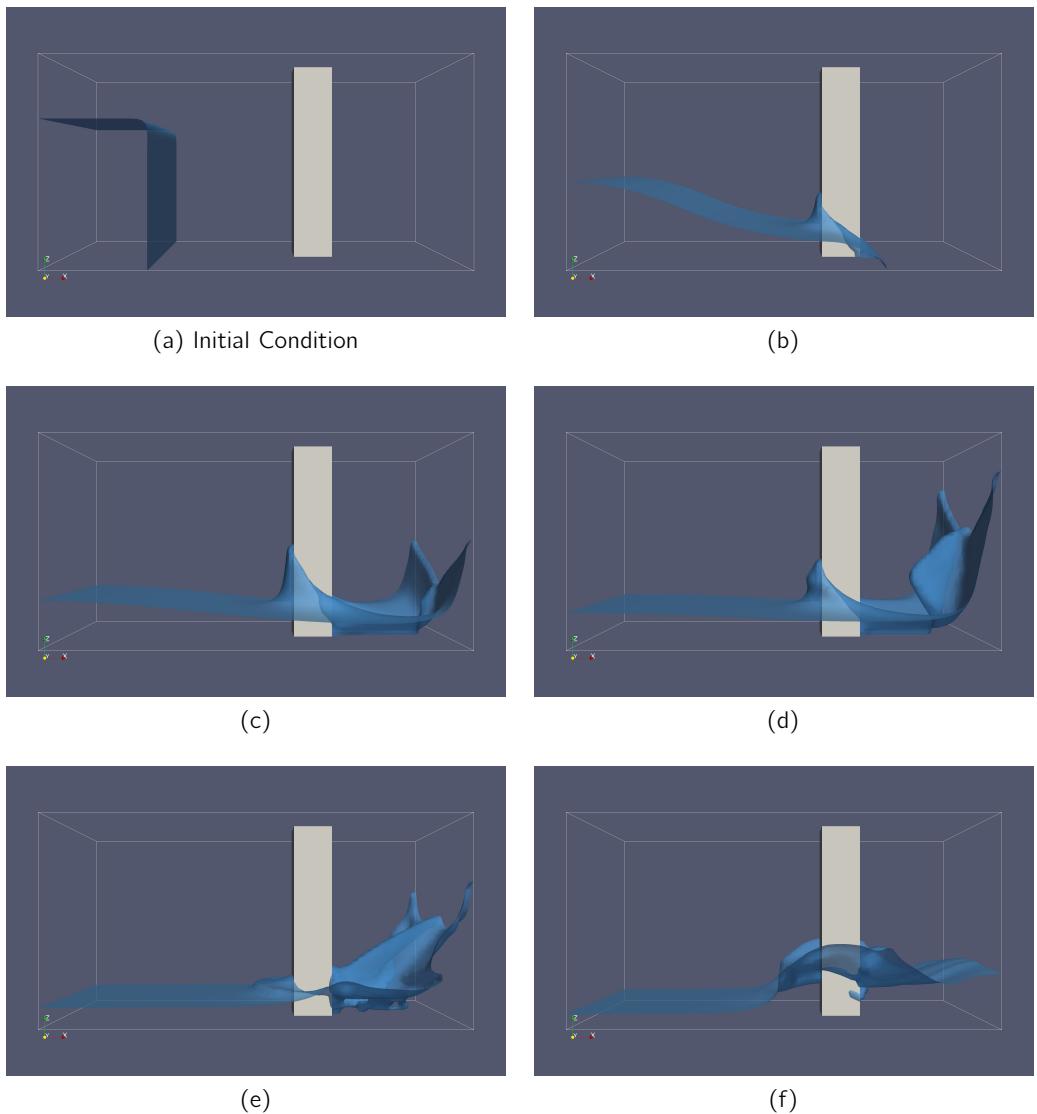


Figure 9.2: 3D Dam Break with Obstacle

9.3 2D Vortex Shedding

9.3.1 DIVEMesh: control.txt

```
C 11 1 // left side: wall boundary
C 12 3 // side: wall boundary
C 13 3 // side: wall boundary
C 14 2 // right side: wall boundary
C 15 21 // bottom: wall boundary
C 16 21 // top: wall boundary
B 1 0.01 // mesh size dx
B 10 0.0 4.0 0.0 0.01 0.0 1.0 // rectangular domain size
O 32 1.0 0.5 0.1 // cylinder
M 10 4 // number of processors
```

9.3.2 REEF3D: ctrl.txt

```
B 10 0 // turn off wall functions for the velocities
B 50 0.0001 // wall roughness  $k_s$ 
B 60 1 // turn on ioflow
D 10 4 // Conservative WENO discretization for velocities
D 20 1 // explicit diffusion treatment
D 30 1 // projection method for the pressure
F 30 0 // turn off level set transport
F 40 0 // turn off level set reinitialization
I 11 1 // Initialize Velocities with potential flow solver
N 40 3 // 3rd-order Runge Runge time treatment for velocities
N 45 10000 // maximum number of iterations
N 47 0.3 // factor for CFL criterion
M 10 4 // number of parallel processes
P 10 1 // turn on .vtu print out
P 20 10 // print out interval based on iterations
P 62 0.0 0.0 0.005 0.005 0.0 1.0 // line probe
T 10 0 // no turbulence model
W 10 0.000006 // discharge
```

9.3.3 Results

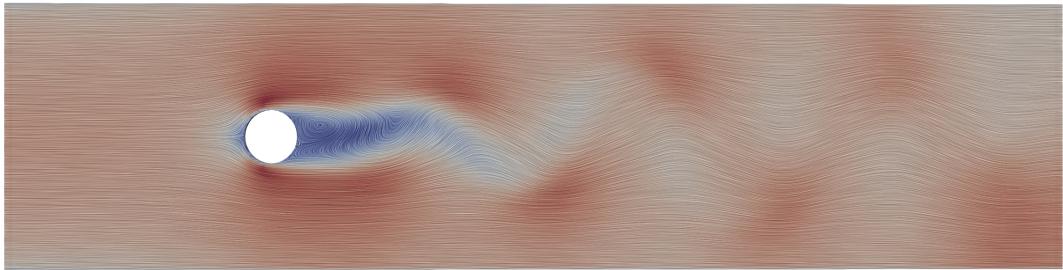


Figure 9.3: 2D vortex shedding with stream lines

9.4 Flow through a Narrow Contraction

For the flow through a narrow contraction the open channel flow capabilities in ioFlow are used. Just for information: the grid is rather coarse for this flow situation. The grid can be easily refined by changing the B1 parameter in the DIVEMesh 'control.txt' file, depending on the performance of your computer.

9.4.1 DIVEMesh: control.txt

```
C 11 1 // inflow boundary
C 12 21 // wall boundary
C 13 21 // wall boundary
C 14 2 // outflow boundary
C 15 21 // bottom: wall boundary
C 16 3 // top: symmetry plane
B 1 0.05 // mesh size dx
B 10 0.0 2.5 0.0 0.6 0.0 0.5
S 83 0.8 0.0 0.0 1.1 0.0 0.0 1.1 0.2 0.0 0.8 0.0 0.5 1.1 0.0 0.5 1.1 0.2 0.5 S 10 1.1 1.4 0.0
0.2 0.0 0.5
S 83 1.4 0.0 0.0 1.7 0.0 0.0 1.4 0.2 0.0 1.4 0.0 0.5 1.7 0.0 0.5 1.4 0.2 0.5
S 83 0.8 0.6 0.0 1.1 0.6 0.0 1.1 0.4 0.0 0.8 0.6 0.5 1.1 0.6 0.5 1.1 0.4 0.5
S 10 1.1 1.4 0.4 0.6 0.0 0.5
S 83 1.4 0.6 0.0 1.7 0.6 0.0 1.4 0.4 0.0 1.4 0.6 0.5 1.7 0.6 0.5 1.4 0.4 0.5
// Solid: contraction geometry based on wedges (S 83) and boxes (S 10)
M 10 4
```

9.4.2 REEF3D: ctrl.txt

```
B 10 1 // use wall functions for the velocities
B 50 0.0001 // wall roughness  $k_s$ 
B 60 1 // turn on ioFlow
D 10 4 // Conservative WENO for velocities
D 20 2 // implicit diffusion treatment
D 30 1 // projection method for the pressure
F 30 3 // 3rd-order Runge-Kutta scheme for the level set method
F 40 3 // 3rd-order Runge-Kutta scheme for reinitialization time treatment
F 42 0.5 // length for level set initialization, instead of maximum length in domain
F 50 2 // keep outflow water level fixed
F 60 0.15 // initial free surface location
I 10 1 // initialize everything, including velocities with potential flow solver
N 10 14 // HYPRE Struct BiCGStab pressure solver
N 11 11 // HYPRE Struct PFMG preconditioner
N 40 6 // 3rd-order fractional step method for the velocities
N 45 12000 // maximum number of iterations
N 47 0.3 // factor for CFL criterion
M 10 4 // number of parallel processes
P 10 1 // turn on .vtu printout
P 20 10 // print out interval based on iterations
T 10 2 //  $k-\omega$  turbulence model
W 10 0.05 // inflow discharge
W 22 -9.81 // gravity
```

9.4.3 Results

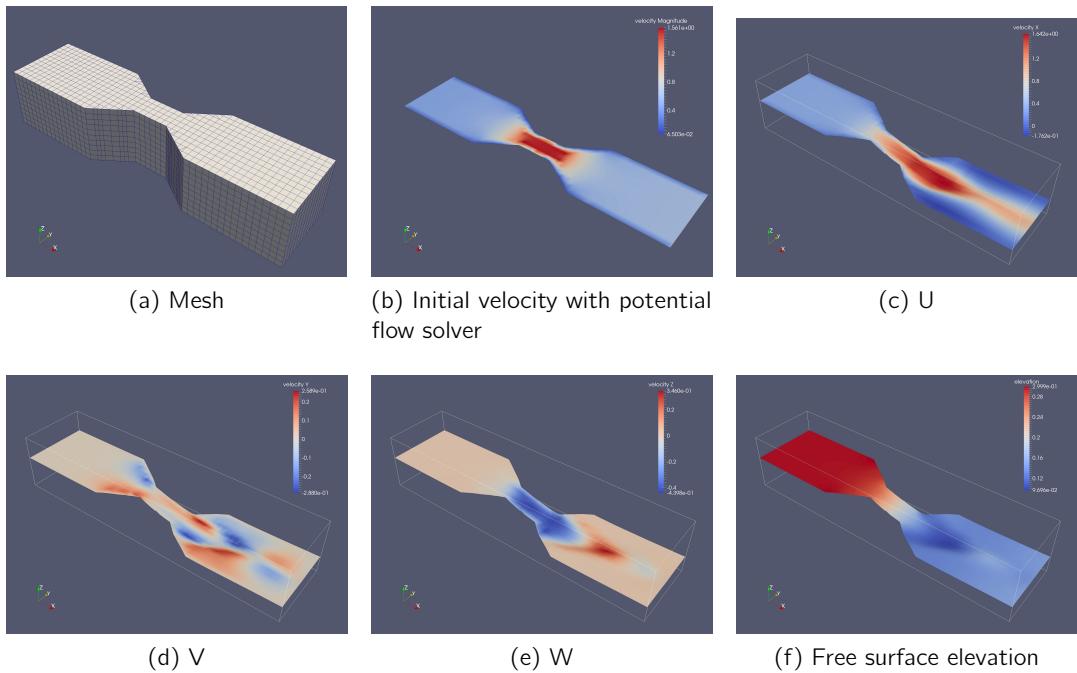


Figure 9.4: Narrow Contraction

9.5 Flow around a Circular Pier

9.5.1 DIVEMesh: control.txt

C 11 1 // inflow boundary

C 12 21 // wall boundary

C 13 21 // wall boundary

C 14 2 // outflow boundary

C 15 21 // bottom: wall boundary

C 16 3 // top: symmetry plane

B 1 0.025 // mesh size dx

B 10 0.0 1.5 0.0 1.0 0.0 0.4 // rectangular domain size

O 33 0.5 0.5 0.075 // vertical circular cylinder

M 10 4 // number of parallel processes

9.5.2 REEF3D: ctrl.txt

```
B 10 1 // use wall functions on the velocities
B 50 0.0001 // wall roughness  $k_s$ 
B 60 1 // turn on ioFlow
D 10 4 // Conservative WENO discretization for the velocities
D 30 1 // SIMPLE method for the pressure
F 30 3 // second-order implicit time treatment for the level seth method
F 40 3 // 3rd-order Runge-Kutta scheme for reinitialization time treatment
F 50 2 // keep outflow water level fixed
F 60 0.2 // initial free surface location
I 10 1 // initialize everything, including velocities with potential flow solver
N 10 14 // HYPRE Struct BiCGStab pressure solver
N 11 11 // HYPRE Struct PFMG preconditioner
N 40 6 // Fractional Step Method based on 3rd-order TVD Runge-Kutta
N 45 100000 // maximum number of iterations
N 47 0.3 // factor for CFL criterion
M 10 4 // number of parallel processes
P 10 1 // turn on .vtu print out
P 20 10 // print out interval based on iterations
T 10 2 //  $k - \omega$  turbulence model
W 10 0.1 // inflow discharge
W 22 -9.81 // gravity
```

9.5.3 Results

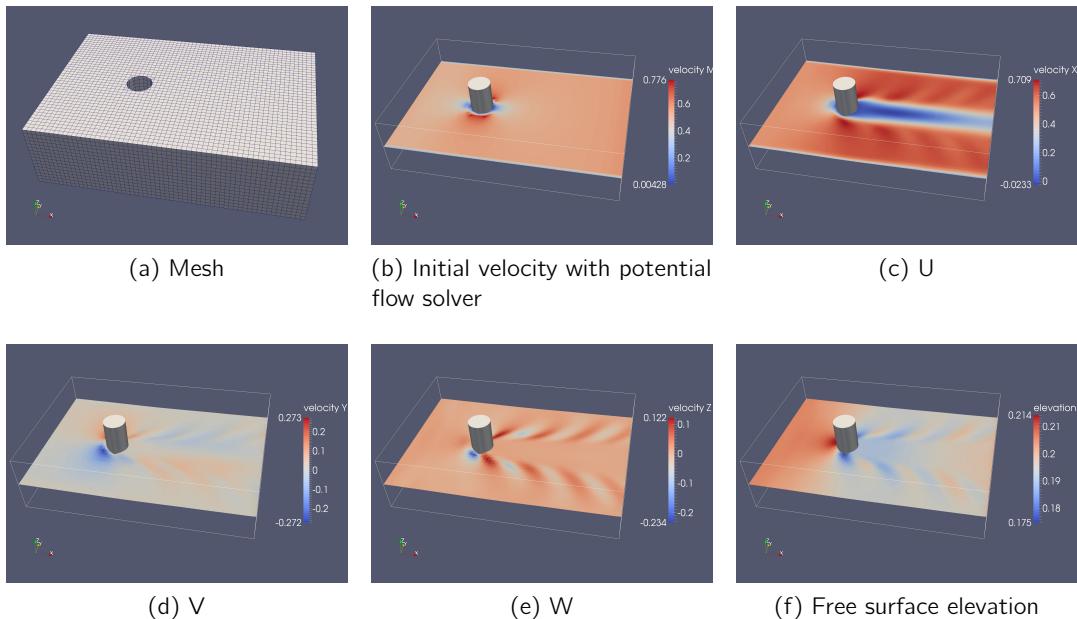


Figure 9.5: Flow around Circular Cylinder

9.6 Rectangular Wave Tank

For the case of a simple rectangular wave tank without obstacles, the simulation can be run in 2D. Linear waves are generated, and the propagating waves are compared with the theoretical solution throughout the wave tank. The idea is, that if the wave propagation is represented well by the numerical model, the numerical results will match the theoretical free surface profile in the tank. In this example, the wave has a relatively low steepness, and good convergence can be reached for $dx = 0.05m$ already, which improves further on finer grids. For steeper waves, finer grids may be required.

9.6.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave relaxation zone
C 12 3 // side: symmetry plane
C 13 3 // side: symmetry plane
C 14 7 // right side: numerical relaxation beach
C 15 21 // bottom: wall boundary
C 16 21 // top: symmetry plane
B 1 0.05 // mesh size dx
B 10 0.0 30.0 0.0 0.05 0.0 1.0 // rectangular domain size
M 10 4 // number of parallel processes
```

9.6.2 REEF3D: ctrl.txt

```
B 10 1 // use wall functions for the velocities
B 50 0.0001 // wall roughness  $k_s$ 
B 90 1 // turn on the numerical wave tank
B 92 2 // use linear waves
B 91 0.02 4.0 // wave height, wave length
B 96 4.0 8.0 // wavegen relaxation length, numerical beach length
B 98 2 // use relaxation method 2 for wave generation
B 99 2 // use relaxation method 2 for numerical beach
D 10 4 // Conservative WENO discretization for velocity convection
D 20 2 // Implicit diffusion for velocities
D 30 1 // Projection Method for the Pressure
F 30 3 // 3rd-order Runge-Kutta scheme for level set time treatment
F 40 3 // 3rd-order Runge-Kutta scheme for reinitialization time treatment
F 42 1.0 // length for level set initialization, instead of maximum length of domain
F 60 0.5 // still water level
I 12 1 // hydrostatic pressure initialization
N 10 14 // HYPRE Struct BiCGStab pressure solver
N 11 11 // HYPRE Struct PFMG preconditioner
N 40 3 // 3rd-order Runge-Kutta Scheme for velocity time treatment
N 41 90.0 // Maximum simulation time
N 47 0.25 // factor for CFL criterion
M 10 4 // number of parallel processes
P 10 1 // turn on .vtu printout
P 30 0.05 // print out .vtu files interval based on simulation time
W 22 -9.81 // gravity
P 52 0.025 // y-coordinate and print out water surface line (wfsline) in x-direction
P 53 1 // add theoretical wsflne to file
P 54 500 // print out interval based on iterations for wsflines
```

9.6.3 Results

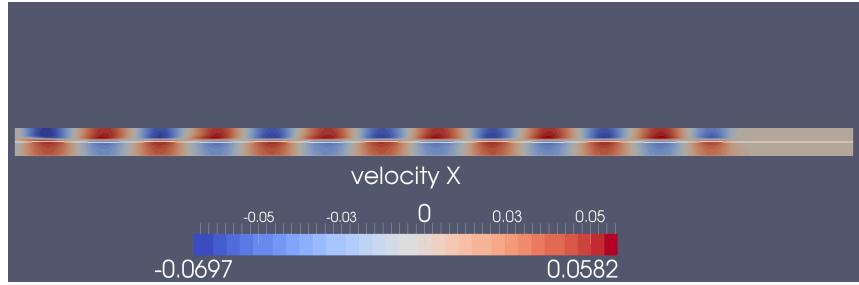


Figure 9.6: Wave tank with free surface and U

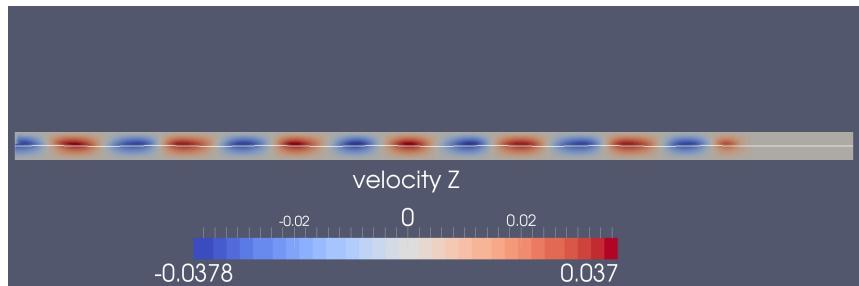


Figure 9.7: Wave tank with free surface and W

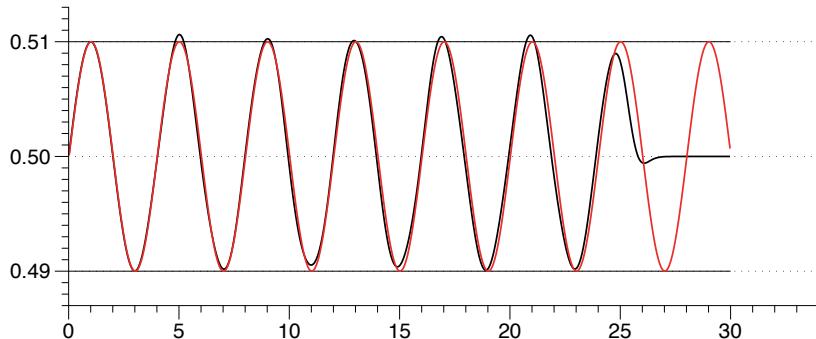


Figure 9.8: Free surface along the tank, numerical result (black line) vs theory (red line)

9.7 Rectangular Wave Tank with DWG and AWA

Similar to the previous chapter, a two-dimensional rectangular wave tank is used. Now, different wave generation and absorption methods are used, namely Dirichlet wave generation (DWG) and active wave absorption (AWA). With DWG, the values for the horizontal and vertical velocities are prescribed at the inlet boundary without further modulation. The level set function is allowed to move freely, but due to the correct flow momentum it will follow the prescribed wave theory. AWA generates a wave opposite to the reflected one at the outlet boundary, thus cancelling out the unwanted reflections. AWA is based on shallow water theory, which also has consequences for type of applications it should be used for, i.e. shallow to intermediate water with preferably longer waves. Overall, the AWA-DWG combination requires smaller tank or basin compared to the relaxation methods (RM). AWA, DWG and RM can be used for generation and absorption in any combination.

9.7.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave generation  
C 12 3 // side: symmetry plane  
C 13 3 // side: symmetry plane  
C 14 7 // right side: numerical beach AWA  
C 15 21 // bottom: wall boundary  
C 16 3 // top: symmetry plane  
B 1 0.025 // mesh size dx  
B 10 0.0 15.0 0.0 0.025 0.0 1.0 // rectangular domain size  
M 10 4 // number of parallel processes  
M 20 2 // advanced domain decomposition
```

9.7.2 REEF3D: ctrl.txt

```
B 10 1 // use wall functions for the velocities  
B 50 0.0001 // wall roughness  $k_s$   
B 90 1 // turn on the numerical wave tank  
B 92 5 // 5th-order stokes waves  
B 91 0.1 2.0 // wave height, wave length  
B 98 3 // Dirichlet Wave Generation (DWG)  
B 99 3 // Active Wave Absorption (AWA)  
D 10 4 // Conservative WENO discretization for velocity convection  
D 20 2 // Implicit diffusion for velocities  
D 30 1 // Projection Method for the Pressure  
F 30 3 // 3rd-order Runge-Kutta scheme for level set time treatment  
F 40 3 // 3rd-order Runge-Kutta scheme for reinitialization time treatment  
F 42 1.0 // length for level set initialization, instead of maximum length of domain  
F 60 0.5 // still water level  
I 12 1 // hydrostatic pressure initialization  
N 40 3 // 3rd-order Runge-Kutta Scheme for velocity time treatment  
N 41 60.0 // Maximum simulation time
```

```

N 47 0.25 // factor for CFL criterion
M 10 4 // number of parallel processes
P 10 1 // turn on .vtu printout
P 30 0.1 // print out .vtu files interval based on simulation time
P 40 1 // turn state file print out for hot-start
P 42 1.0 // state file print out interval
T 10 0 // no turbulence model
W 22 -9.81 // gravity
P 52 0.0125 // y-coordinate and print out water surface line (wsline) in x-direction
P 53 1 // add theoretical wsline to file
P 55 0.50 // print out wsline files interval based on simulation time
P 51 2.50 0.0125 // wave gage with x- and y-coordinates
P 51 5.00 0.0125 // wave gage with x- and y-coordinates
P 51 15.0 0.0125 // wave gage with x- and y-coordinates
P 51 20.0 0.0125 // wave gage with x- and y-coordinates

```

9.7.3 Results

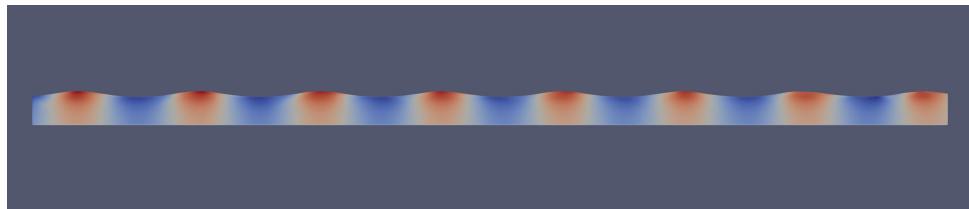


Figure 9.9: DWG-AWA Wave tank with free surface and U

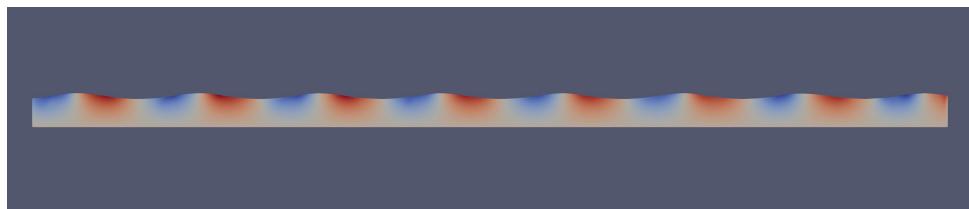


Figure 9.10: DWG-AWA Wave tank with free surface and W

9.8 Rectangular Wave Tank with Wavemaker

Following the NWT examples in the previous examples, now the waves are generated with wavemaker kinematics input, see e.g. ? for more information.

9.8.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave generation  
C 12 3 // side: symmetry plane  
C 13 3 // side: symmetry plane  
C 14 8 // right side: numerical beach AWA  
C 15 21 // bottom: wall boundary  
C 16 21 // top: symmetry plane  
B 1 0.025 // mesh size dx  
B 10 0.0 15.0 0.0 0.025 0.0 1.5 // rectangular domain size  
M 10 4 // number of parallel processes  
M 20 2 // advanced domain decomposition
```

9.8.2 REEF3D: ctrl.txt

```
B 10 1 // use wall functions for the velocities  
B 50 0.0001 // wall roughness  $k_s$   
B 90 1 // turn on the numerical wave tank  
B 92 22 // flap wavemaker  
B 98 3 // Dirichlet Wave Generation (DWG)  
B 99 3 // Active Wave Absorption (AWA)  
B 111 -0.25 1.46 //  $z_{start}$  and  $z_{end}$  for flap wavemaker  
B 116 2 // flap wavemaker input as angle  
B 117 4.0 // time shift for wavemaker input  
D 10 4 // Conservative WENO discretization for velocity convection  
D 20 2 // Implicit diffusion for velocities  
D 30 1 // Projection Method for the Pressure  
F 30 3 // 3rd-order Runge-Kutta scheme for level set time treatment  
F 40 3 // 3rd-order Runge-Kutta scheme for reinitialization time treatment  
F 42 1.5 // length for level set initialization, instead of maximum length of domain  
F 60 0.75 // still water level  
I 12 1 // hydrostatic pressure initialization
```

```

N 40 3 // 3rd-order Runge-Kutta Scheme for velocity time treatment
N 41 60.0 // Maximum simulation time
N 47 0.25 // factor for CFL criterion
M 10 4 // number of parallel processes
P 10 1 // turn on .vtu printout
P 30 0.1 // print out .vtu files interval based on simulation time
P 40 1 // turn state file print out for hot-start
P 42 1.0 // state file print out interval
T 10 0 // no turbulence model
W 22 -9.81 // gravity
P 52 0.0125 // y-coordinate and print out water surface line (wsline) in x-direction
P 55 0.50 // print out wsline files interval based on simulation time
P 51 5.00 0.0125 // wave gage with x- and y-coordinates
P 51 10.0 0.0125 // wave gage with x- and y-coordinates

```

9.8.3 REEF3D: wavemaker.dat

The 'wavemaker.dat' file contains the time dependent kinematics of the wavemaker.

9.8.4 Results



Figure 9.11: Wavemaker generated waves with free surface and U



Figure 9.12: Wavemaker generated waves with free surface and W

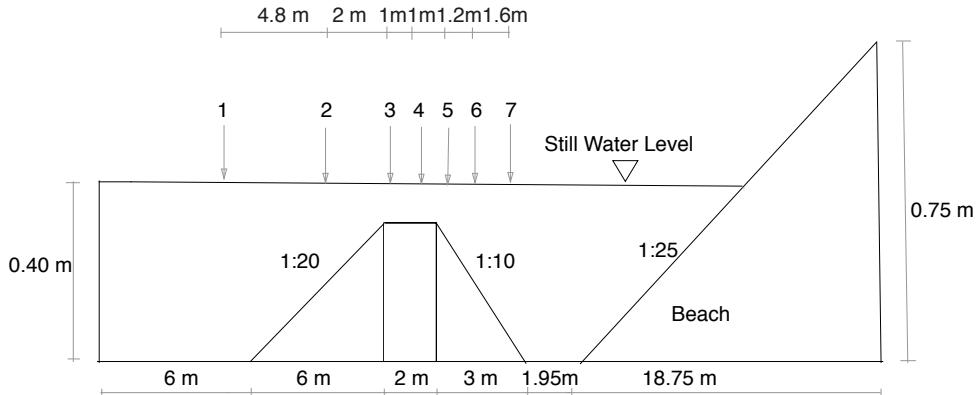


Figure 9.13: Experimental setup submerged bar

9.9 Wave Propagation over a Submerged Bar

The well-known benchmark case for wave propagation over a submerged bar is presented here. The description of the experimental setup can be found in the original paper by ?. The simulations are run in 2D with wave gages at several locations along the wave tank.

9.9.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave relaxation zone
C 12 3 // side: symmetry plane
C 13 3 // side: symmetry plane
C 14 7 // numerical relaxation beach
C 15 21 // bottom: wall boundary
C 16 3 // top symmetry plane
B 1 0.01 // mesh size dx
B 10 0.0 24.0 0.0 0.01 0.0 0.8 // rectangular domain size
O 61 6.0 12.0 0.0 0.01 0.0 0.3 // front wedge of the bar
O 10 12.0 14.0 0.0 0.01 0.0 0.3 // middle section of the bar
O 61 14.0 17.0 0.0 0.01 0.3 0.0 // back wedge of the bar
M 10 4 // number of parallel processes
```

9.9.2 REEF3D: ctrl.txt

```
B 10 1 // use wall functions for the velocities
B 50 0.0001 // wall roughness  $k_s$ 
B 90 1 // turn on the numerical wave tank
B 92 2 // use linear waves
B 91 0.02 3.73 // wave height, wave length
B 96 3.73 3.73 // wavegen relaxation length, numerical beach length
B 98 2 // use relaxation method 2 for wave generation
B 99 2 // use relaxation method 2 for numerical beach
D 10 4 // Conservative WENO for velocity convection
D 20 2 // Implicit diffusion for velocities
D 30 1 // Projection Method for the pressure
F 30 3 // 3rd-order Runge-Kutta scheme for Level Set time treatment
F 40 3 // 3rd-order Runge-Kutta scheme for Reinitialization time treatment
F 42 0.8 // length for level set initialization, instead of maximum length of domain
F 60 0.4 // still water level
I 12 1 // hydrostatic pressure initialization
N 10 14 // HYPRE Struct BiCGStab pressure solver
N 11 11 // HYPRE Struct PFMG preconditioner
N 40 3 // 3rd-order Runge-Kutta scheme for velocity time treatment
N 41 60.0 // Maximum simulation time
N 47 0.25 // factor for CFD criterion
M 10 4 // number of parallel processes
P 10 1 // turn on .vtu printout
P 30 0.5 // print out interval for .vtu files based on simulation time
W 22 -9.81 // gravity
P 52 0.005 // y-coordinate and print out water surface line wsline in x-direction
P 53 1 // add theoretical wsline to file
P 54 10 // print out interval for wsfiles based on iterations
P 51 2.0 0.005 // Wave gage 1 location, will printed in the order given here
P 51 4.0 0.005 // Wave gage 2
P 51 5.2 0.005 // Wave gage 3
P 51 10.5 0.005 // Wave gage 4
P 51 12.5 0.005 // Wave gage 5
P 51 13.5 0.005 // Wave gage 6
P 51 14.5 0.005 // Wave gage 7
```

9.9.3 Results

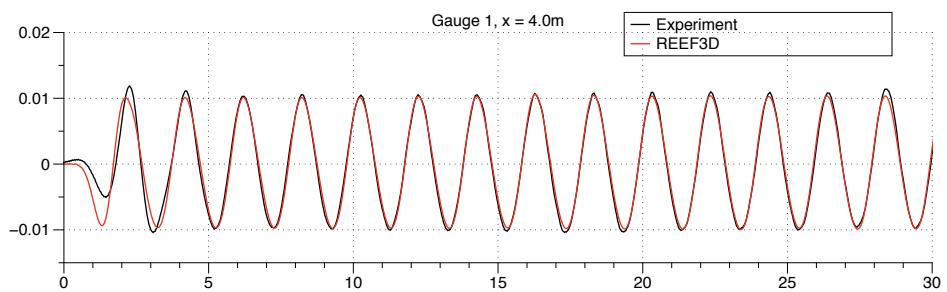


Figure 9.14: Wave gage 1

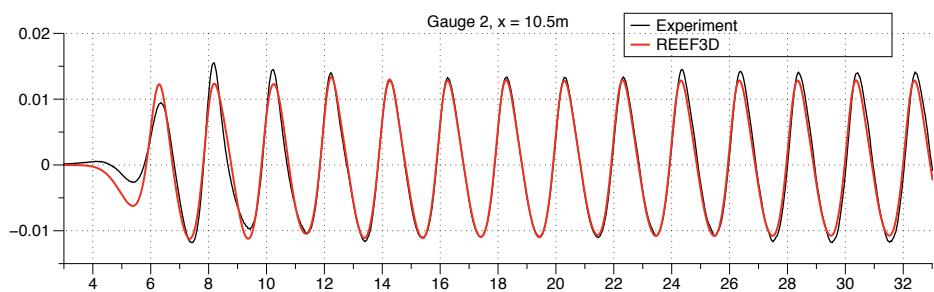


Figure 9.15: Wave gage 2

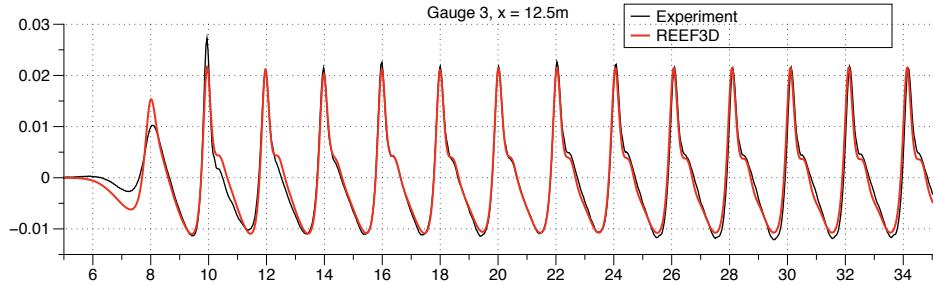


Figure 9.16: Wave gage 3

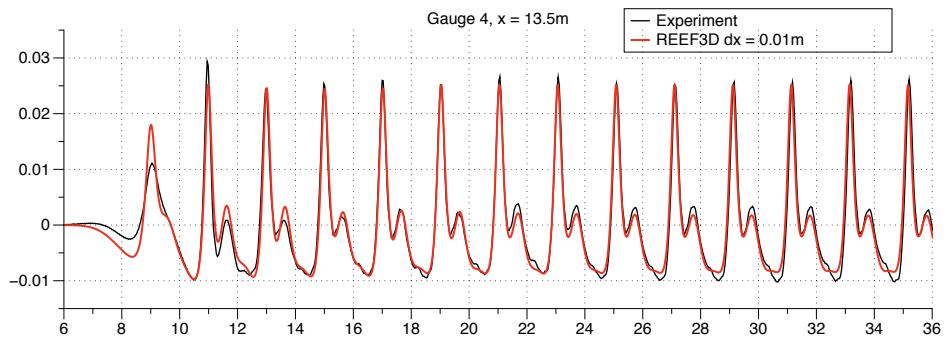


Figure 9.17: Wave gage 4

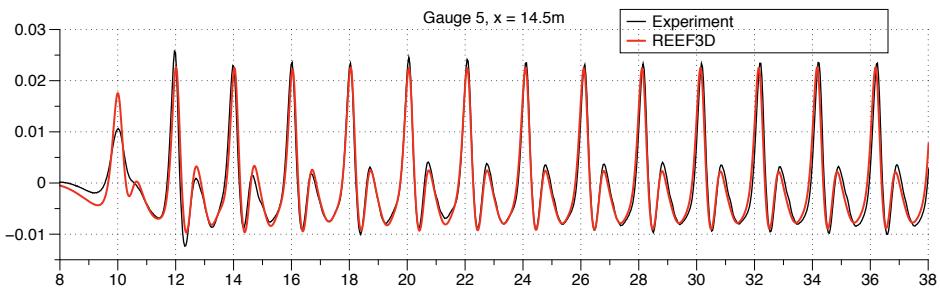


Figure 9.18: Wave gage 5


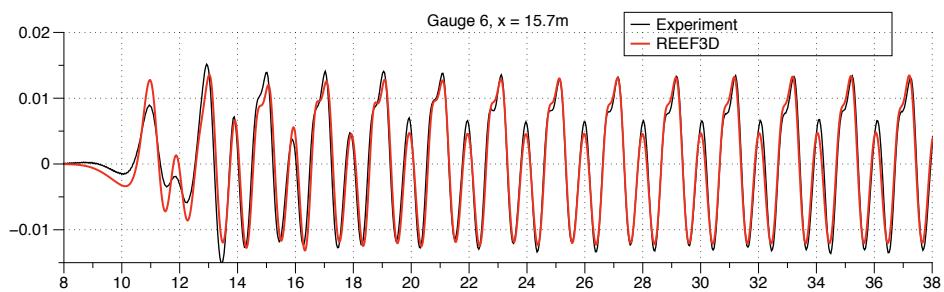


Figure 9.19: Wave gage 6

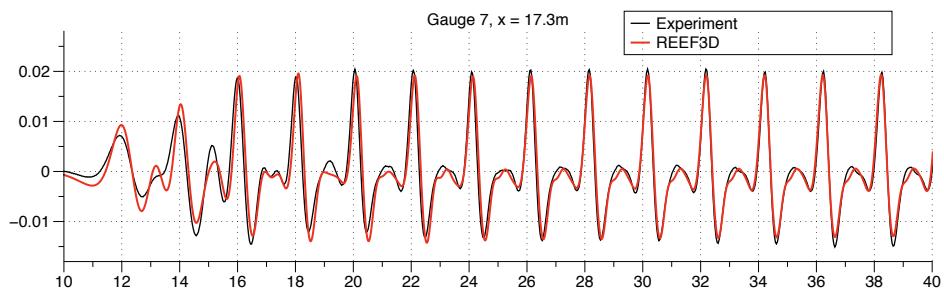

9.10 Plunging Breaking Waves over Slope

The well known benchmark case for plunging breaking waves over a submerged bar by ? is shown here. The breaking waves require a relatively finer grid, thus 128 cores on NOTUR's supercomputer facilities were used to simulate the case. For more information on this case and breaking waves over slopes in general, please have a look at these in-depth studies: ?, ?, and ?.

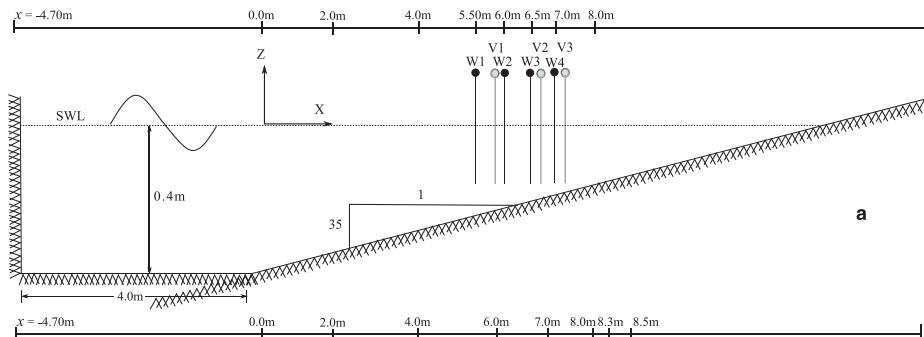


Figure 9.21: Experimental setup plunging breaking waves over slope

9.10.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave relaxation zone
C 12 3 // side: symmetry plane
C 13 3 // side: symmetry plane
C 14 7 // numerical relaxation beach
C 15 21 // bottom: wall boundary
C 16 3 // top symmetry plane
B 1 0.01 // mesh size dx
B 10 0.0 24.0 0.0 0.01 0.0 0.8 // rectangular domain size
O 61 6.0 12.0 0.0 0.01 0.0 0.3 // front wedge of the bar
O 10 12.0 14.0 0.0 0.01 0.0 0.3 // middle section of the bar
O 61 14.0 17.0 0.0 0.01 0.3 0.0 // back wedge of the bar
M 10 128 // number of parallel processes
M 20 2 // advanced domain decomposition
```

9.10.2 REEF3D: ctrl.txt

```
B 10 1 // use wall functions for the velocities
B 10 1 // use wall functions for the turbulence model
B 50 0.0001 // wall roughness  $k_s$ 
B 90 1 // turn on the numerical wave tank
B 92 8 // use 5th-order cnoidal waves
B 93 0.128 5.0 // wave height, wave period
B 96 9.8 0.0 0.0 // wavegen relaxation length, numerical beach length
B 98 2 // use relaxation method 2 for wave generation
B 99 2 // no beach
D 10 4 // Conservative WENO for velocity convection
D 20 2 // Implicit diffusion for velocities
D 30 1 // Projection Method for the pressure
F 30 3 // 3rd-order Runge-Kutta scheme for Level Set time treatment
F 40 3 // 3rd-order Runge-Kutta scheme for Reinitialization time treatment
F 42 1.0 // length for level set initialization, instead of maximum length of domain
F 60 0.4 // still water level
I 12 1 // hydrostatic pressure initialization
N 40 3 // 3rd-order Runge-Kutta Scheme for velocity time treatment
N 41 60.0 // Maximum simulation time
N 47 0.25 // factor for CFD criterion
M 10 128 // number of parallel processes
P 10 1 // turn on .vtu printout
P 30 0.5 // print out .vtu files based on simulation time
P 40 1 // turn state file print out for hot-start
P 42 0.5 // state file print out interval
T 10 2 // k- $\omega$  turbulence model
T 31 0.816 // factor for eddy viscosity limiter in phase 1
T 32 0.212 // factor for eddy viscosity limiter in phase 2
T 36 2 // FSF boundary condition for turbulent dissipation
```

W 22 -9.81 // gravity

P 51 19.8 0.0025 // wave gage

P 51 20.8 0.0025 // wave gage

P 51 21.8 0.0025 // wave gage

P 51 22.1 0.0025 // wave gage

P 52 0.0025 // wsline in x-direction

P 61 21.095 0.0025 0.35 // point probe

P 61 21.095 0.0025 0.25 // point probe

P 61 21.095 0.0025 0.4

P 61 22.025 0.0025 0.35 // point probe

P 61 22.025 0.0025 0.26 // point probe

P 61 22.025 0.0025 0.4 // point probe

P 61 21.595 0.0025 0.4 // point probe

P 61 22.145 0.0025 0.35 // point probe

P 61 22.145 0.0025 0.28 // point probe

P 61 22.145 0.0025 0.4 // point probe

9.10.3 Results

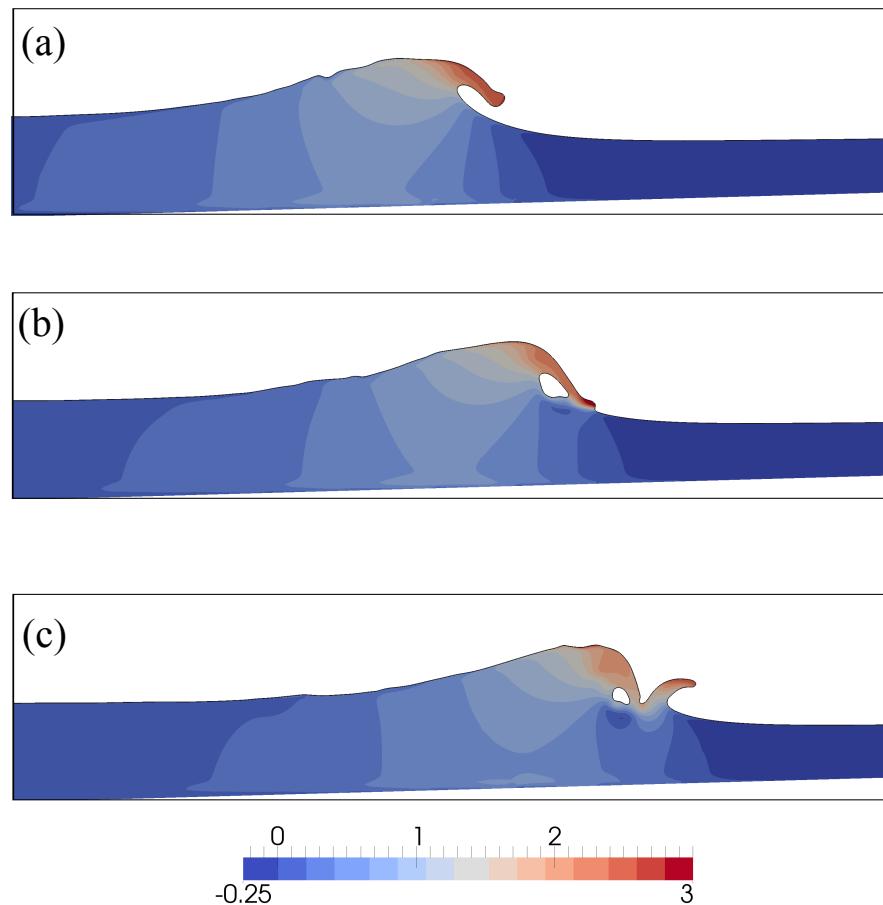


Figure 9.22: Variation of horizontal velocity, U (m/s) under the plunging breaker at $t = 10.85\text{s}$ (a), 10.95s (b) and 11.05s (c)

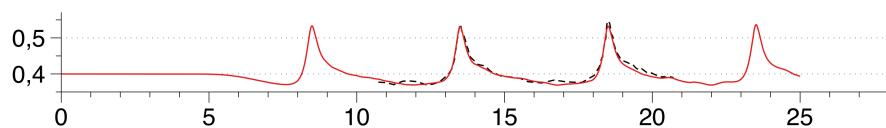


Figure 9.23: Wave gage 1, black experiment ?, red REEF3D

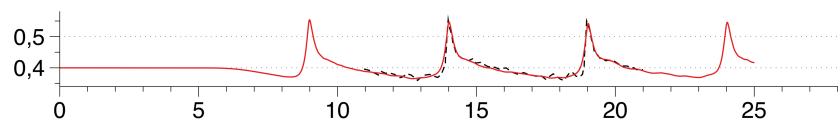


Figure 9.24: Wave gage 2, black experiment ?, red REEF3D

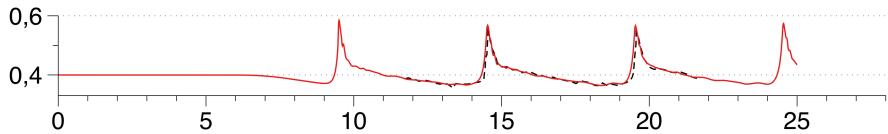


Figure 9.25: Wave gage 3, black experiment ?, red REEF3D

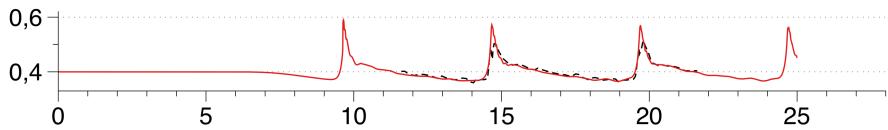


Figure 9.26: Wave gage 4, black experiment ?, red REEF3D

9.11 Plunging Breaking Waves over Slope with Non-uniform Grid

The simulation of plunging breaking waves over a slope from the previous section by ? is shown here with a non-uniform grid (NUG) setup. The ctrl.txt is identical to the one above, with the exception of the M10 parameter.

9.11.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave relaxation zone
C 12 3 // side: symmetry plane
C 13 3 // side: symmetry plane
C 14 7 // numerical relaxation beach
C 15 21 // bottom: wall boundary
C 16 3 // top symmetry plane
B 1 0.005
B 2 3000 1 80 // mesh size: Nx,Ny,Nz
B 10 0.0 30.0 0.0 0.005 0.0 1.0 // rectangular domain size
S 61 13.8 30.0 0.0 0.005 0.0 0.463 // solid slope
M 10 12 // number of parallel processes
M 20 2 // advanced domain decomposition
B 101 5 // point focus using sinh stretching function in x-direction
B 111 2.5 // stretching factor in x-direction
B 114 20.0 // focus point for stretching in x-direction
B 103 5 // point focus using sinh stretching function in x-direction
B 113 2.5 // stretching factor in z-direction
B 116 0.40 // focus point for stretching in z-direction
```

9.12 Shoaling over Irregular Topography

In this case, waves propagation irregular topography is calculated using phase accurate irregular waves based on Boers' experiment [?](#). Here, the bed topography is generated using a 'geo.dat' file with xyz-point data. These coordinates are interpolated using a local inverse distance algorithm in DIVEMesh. The waves are generated using wave reconstruction, are very convenient way to create phase accurate irregular waves based on a single wave gage [?](#).

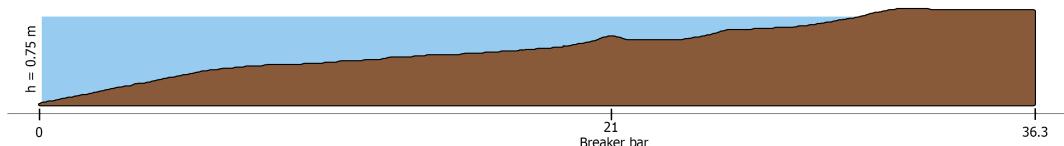


Figure 9.27: Experimental setup plunging breaking waves over slope [?](#)

9.12.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave relaxation zone  
C 12 3 // side: symmetry plane  
C 13 3 // side: symmetry plane  
C 14 7 // numerical relaxation beach  
C 15 21 // bottom: wall boundary  
C 16 3 // top symmetry plane  
B 1 0.01 // mesh size dx  
B 10 0.0 36.3 0.0 0.01 0.0 1.00 // rectangular domain size  
G 10 1 // turn on geodat interpolation  
G 15 2 // use local inverse distance interpolation  
G 31 14 // number of smoothing iterations  
M 10 128 // number of parallel processes  
M 20 2 // advanced domain decomposition
```

9.12.2 DIVEMesh: geo.dat

In the 'geo.dat' file all bathymetry coordinates are given in ASCII format and are then used to interpolate into the bed by DIVEMesh. The bed can be visualized with the zero contour of 'topo' in the vtu files read by ParaView.

9.12.3 REEF3D: ctrl.txt

```
B 10 1 // use wall functions for the velocities
B 10 1 // use wall functions for the turbulence model
B 50 0.0001 // wall roughness  $k_s$ 
B 90 1 // turn on the numerical wave tank
B 92 51 // wave reconstruction based on first-order irregular waves
B 98 3 // use Dirichlet wave generation
B 99 0 // no beach
D 10 4 // Conservative WENO for velocity convection
D 20 2 // Implicit diffusion for velocities
D 30 1 // Projection Method for the pressure
F 30 3 // 3rd-order Runge-Kutta scheme for Level Set time treatment
F 40 3 // 3rd-order Runge-Kutta scheme for Reinitialization time treatment
F 42 1.0 // length for level set initialization, instead of maximum length of domain
F 60 0.75 // still water level
I 12 1 // hydrostatic pressure initialization
N 40 3 // 3rd-order Runge-Kutta Scheme for velocity time treatment
N 41 200.0 // Maximum simulation time
N 47 0.25 // factor for CFD criterion
M 10 128 // number of parallel processes
P 10 1 // turn on .vtu printout
P 30 0.5 // print out .vtu files based on simulation time
P 40 1 // turn state file print out for hot-start
P 42 0.5 // state file print out interval
T 10 2 // k- $\omega$  turbulence model
T 31 0.816 // factor for eddy viscosity limiter in phase 1
T 32 0.212 // factor for eddy viscosity limiter in phase 2
T 36 2 // FSF boundary condition for turbulent dissipation
G 50 1 // look for geodata points in grid file
W 22 -9.81 // gravity
P 51 0.0 0.005 // wave gage
P 51 4.0 0.005 // wave gage
P 51 8.0 0.005 // wave gage
P 51 12.0 0.005 // wave gage
P 51 16.0 0.005 // wave gage
P 51 20.0 0.005 // wave gage
P 61 14.37 0.005 0.74 // point probe
```

9.12.4 REEF3D: waverecon.dat

The 'waverecon.dat' files contains the individual wave components including amplitude, frequency and phase shift in order to generate phase accurate irregular waves.

9.12.5 Results

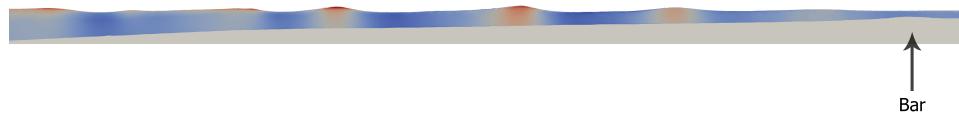


Figure 9.28: Shoaling of irregular waves for the Boers case ?

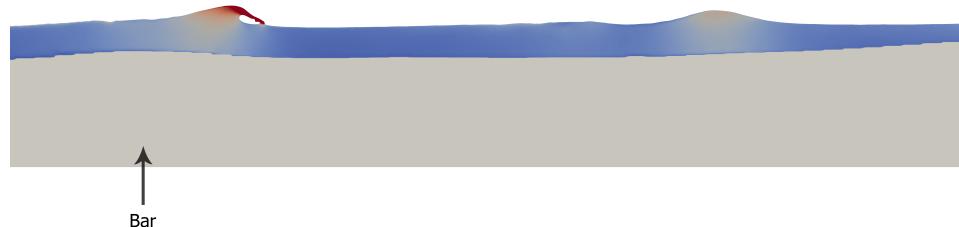


Figure 9.29: Breaking waves on the bar for the Boers case ?

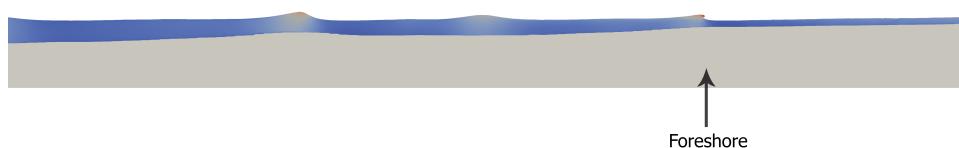


Figure 9.30: Breaking waves on the foreshore for the Boers case ?

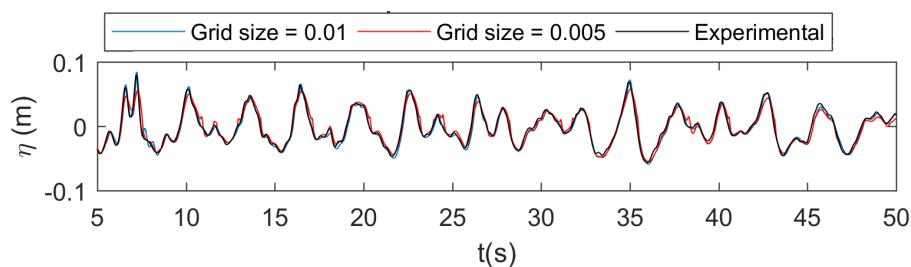


Figure 9.31: Wave gage 1

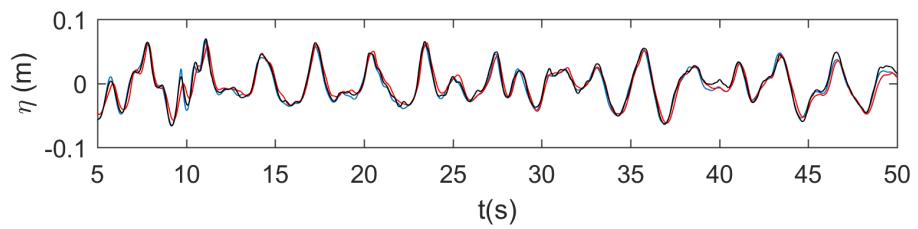


Figure 9.32: Wave gage 2

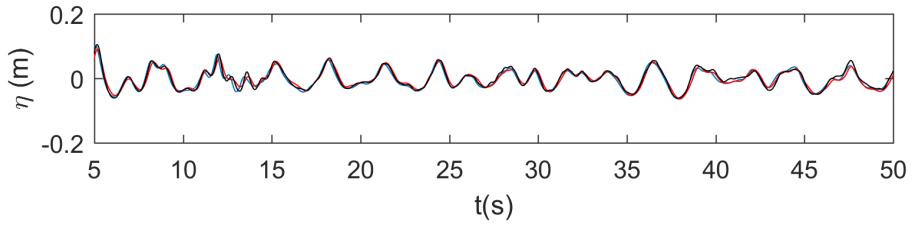


Figure 9.33: Wave gage 3

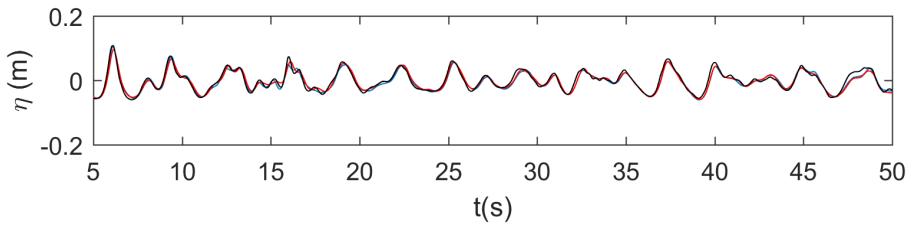


Figure 9.34: Wave gage 4

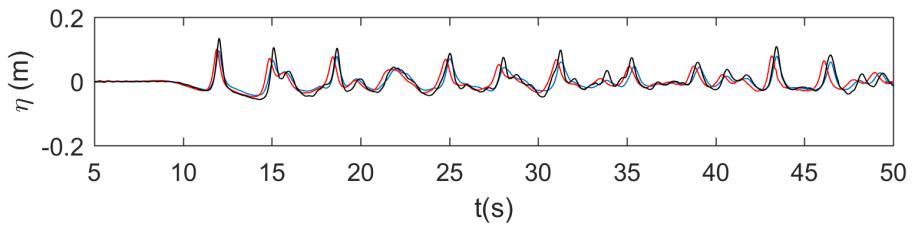


Figure 9.35: Wave gage 5

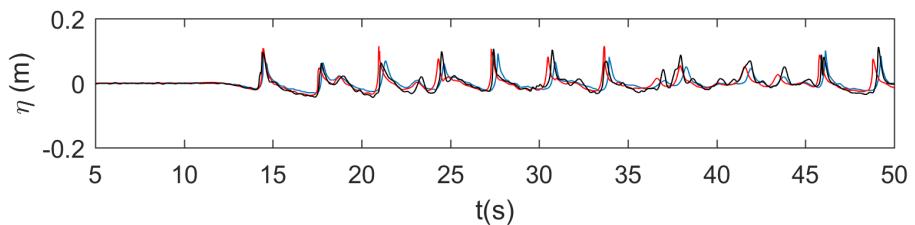


Figure 9.36: Wave gage 6

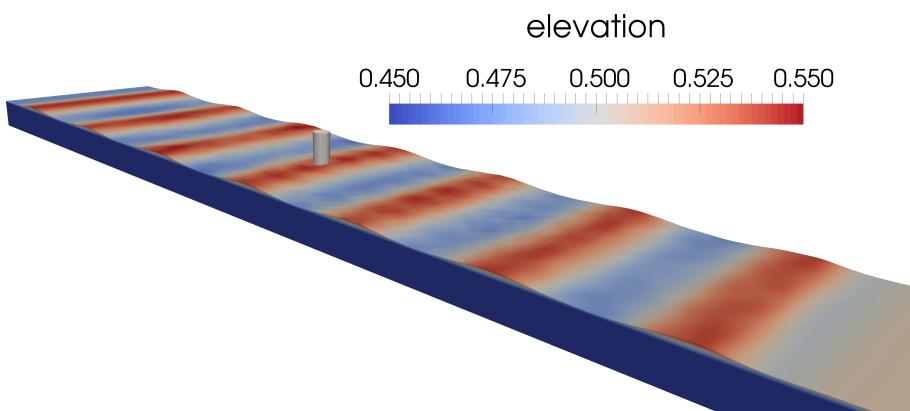


Figure 9.37: Non-breaking wave forces

9.13 Non-Breaking Wave Forces

In many scenarios, wave forces need to be computed. Based on the experiments by ?, numerical benchmark results were produced, see ? for more detail. In addition to previous NWT examples, the use of the force box is shown in this example. The forces on a solid within the force box is calculated and printed out. It is important to give some margin around the solid in order capture all surface facets in the pressure integration algorithm. More REEF3D related literature on non-breaking wave forces can be found here: ?, ? and ?.

9.13.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave relaxation zone
C 12 21 // side: wall boundary
C 13 21 // side: wall boundary
C 14 7 // numerical relaxation beach
C 15 21 // bottom: wall boundary
C 16 3 // top symmetry plane
B 1 0.025 // mesh size dx
B 10 0.0 18.0 0.0 3.0 0.0 1.0 // rectangular domain size
S 33 7.50 1.50 0.125 // solid vertical cylinder
M 10 12 // number of parallel processes
M 20 2 // advanced domain decomposition
```

9.13.2 REEF3D: ctrl.txt

```
B 10 1 // use wall functions for the velocities
B 10 1 // use wall functions for the turbulence model
B 50 0.0001 // wall roughness  $k_s$ 
B 90 1 // turn on the numerical wave tank
B 92 4 // use 2nd-order Stokes waves
B 93 0.07 1.22 // wave height, wave period
B 96 2.11 4.22 // wavegen relaxation length, numerical beach length
B 98 2 // use relaxation method 2 for wave generation
B 99 2 // relaxation beach
D 10 4 // Conservative WENO for velocity convection
D 20 2 // Implicit diffusion for velocities
D 30 1 // Projection Method for the pressure
F 30 3 // 3rd-order Runge-Kutta scheme for Level Set time treatment
F 40 3 // 3rd-order Runge-Kutta scheme for Reinitialization time treatment
F 42 1.0 // length for level set initialization, instead of maximum length of domain
F 60 0.505 // still water level
I 12 1 // hydrostatic pressure initialization
N 40 3 // 3rd-order Runge-Kutta Scheme for velocity time treatment
N 41 50.0 // Maximum simulation time
N 47 0.25 // factor for CFD criterion
M 10 12 // number of parallel processes
P 10 1 // turn on .vtu printout
P 35 15.0 30.0 0.05 // print out interval for .vtu files based on simulation time
P 40 1 // turn state file print out for hot-start
P 42 1.0 // state file print out interval
T 10 2 // k- $\omega$  turbulence model
T 36 2 // FSF boundary condition for turbulent dissipation
W 22 -9.81 // gravity
P 51 5.00 1.50 // wave gage
P 55 1.0 // print out wave gage based on simulation time
P 81 7.325 7.675 1.325 1.675 0.0 1.0 // force box coordinates
```

9.13.3 Results

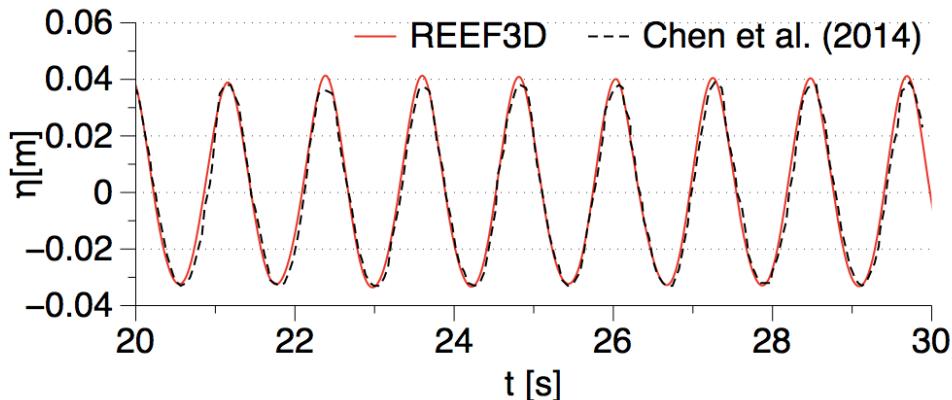


Figure 9.38: Free surface comparison between REEF3D and the experimental data ?

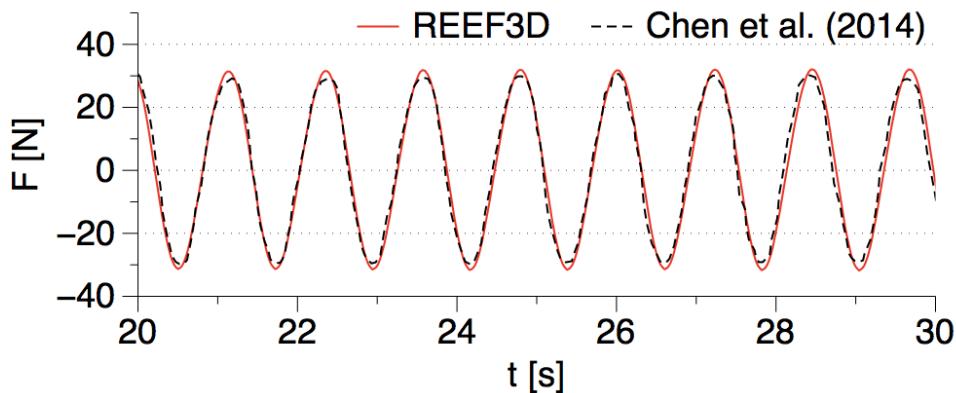


Figure 9.39: Wave Force comparison between REEF3D and the experimental data ?

9.14 Breaking Wave Forces

Extending the previous scenario, breaking wave forces are simulated by using the case from ? based on an experimental study in the GWK in Hannover ?. The waves are shoaling on a 1:10 slope and are breaking directly at the vertical cylinder. The slamming forces are calculated using the force box approach. REEF3D has been extensively validated and applied for breaking wave forces: ?, ?, ?, ?

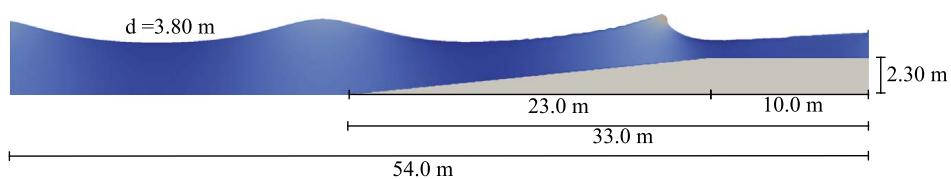


Figure 9.40: Breaking wave forces setup

9.14.1 DIVEMesh: control.txt

```
C 11 6 // left side: wave relaxation zone  
C 12 21 // side: wall boundary  
C 13 21 // side: wall boundary  
C 14 8 // numerical AWA beach  
C 15 21 // bottom: wall boundary  
C 16 3 // top symmetry plane  
B 1 0.05 // mesh size dx  
B 10 0.0 54.0 0.0 5.0 0.0 7.0 // rectangular domain size  
S 61 21.0 44.0 0.0 5.0 0.0 2.30 // solid slope  
S 10 44.0 54.0 0.0 5.0 0.0 2.30 // solid flat  
O 33 44.0 2.50 0.35 // vertical cylinder  
M 10 256 // number of parallel processes  
M 20 2 // advanced domain decomposition
```

9.14.2 REEF3D: ctrl.txt

```
B 10 1 // use wall functions for the velocities  
B 10 1 // use wall functions for the turbulence model  
B 50 0.0001 // wall roughness  $k_s$   
B 90 1 // turn on the numerical wave tank  
B 92 5 // use 5th-order Stokes waves  
B 93 1.3 4.0 // wave height, wave period  
B 96 21.0 0.0 // wavegen relaxation length, numerical beach length  
B 98 2 // use relaxation method 2 for wave generation  
B 99 3 // AWA beach  
D 10 4 // Conservative WENO for velocity convection  
D 20 2 // Implicit diffusion for velocities  
D 30 1 // Projection Method for the pressure  
F 30 3 // 3rd-order Runge-Kutta scheme for Level Set time treatment  
F 40 3 // 3rd-order Runge-Kutta scheme for Reinitialization time treatment
```

F 42 7.0 // length for level set initialization, instead of maximum length of domain
F 60 3.8 // still water level
I 12 1 // hydrostatic pressure initialization
N 40 3 // 3rd-order Runge-Kutta Scheme for velocity time treatment
N 41 50.0 // Maximum simulation time
N 47 0.25 // factor for CFD criterion
M 10 256 // number of parallel processes
P 10 1 // turn on .vtu printout
P 35 23.5 25.2 0.05 // print out interval for .vtu files based on simulation time
P 40 1 // turn state file print out for hot-start
P 42 1.0 // state file print out interval
T 10 2 // k- ω turbulence model
T 36 2 // FSF boundary condition for turbulent dissipation[“]
T 31 0.816 // factor for eddy viscosity limiter in phase 1
T 32 0.212 // factor for eddy viscosity limiter in phase 2
W 22 -9.81 // gravity
P 81 43.30 44.70 1.80 3.20 2.30 8.0 // force box coordinates
P 10 1 // print .vtu file
P 35 23.5 25.2 0.05 // print .vtu file in interval
P 180 1 // print fsf files
P 182 0.1 // print out fsf files based on simulation time
P 51 22.0 2.50 // wave gage
P 51 30.0 2.50 // wave gage
P 51 35.0 2.50 // wave gage
P 51 40.0 2.50 // wave gage
P 51 43.65 4.80 // wave gage
P 51 43.65 2.50 // wave gage
P 51 44.5 2.505 // wave gage
P 51 47.0 2.5 // wave gage
P 51 50.5 2.5 // wave gage
P 51 52.0 2.5 // wave gage
P 51 53.0 2.5 // wave gage

9.14.3 Results

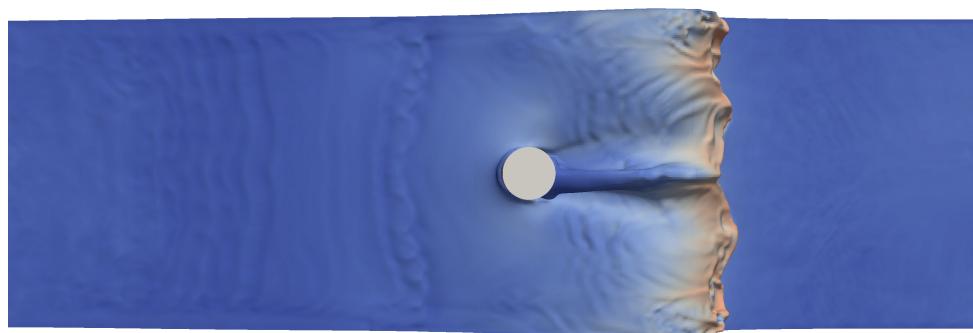


Figure 9.41: Breaking wave impact with REEF3D, plane view

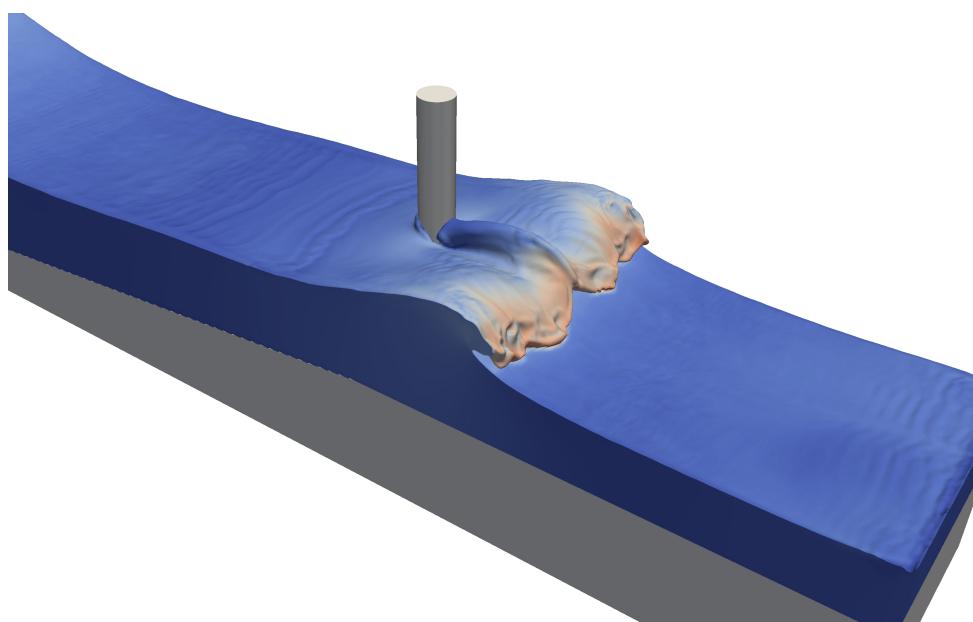


Figure 9.42: Breaking wave impact with REEF3D, side view

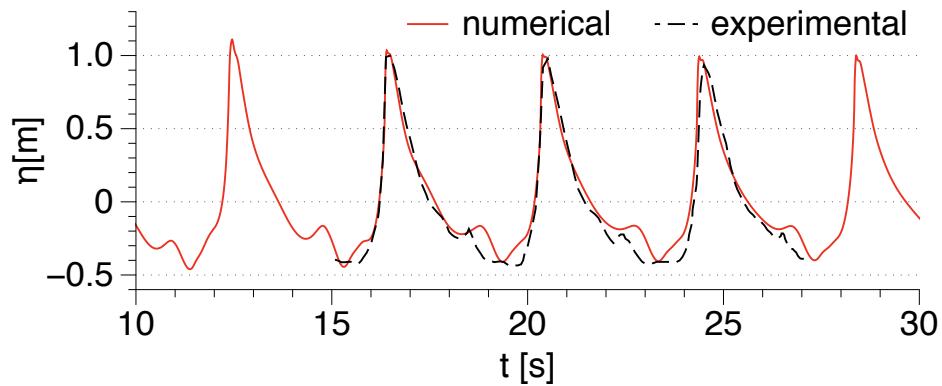


Figure 9.43: Wave Force comparison between REEF3D and the experimental data ?

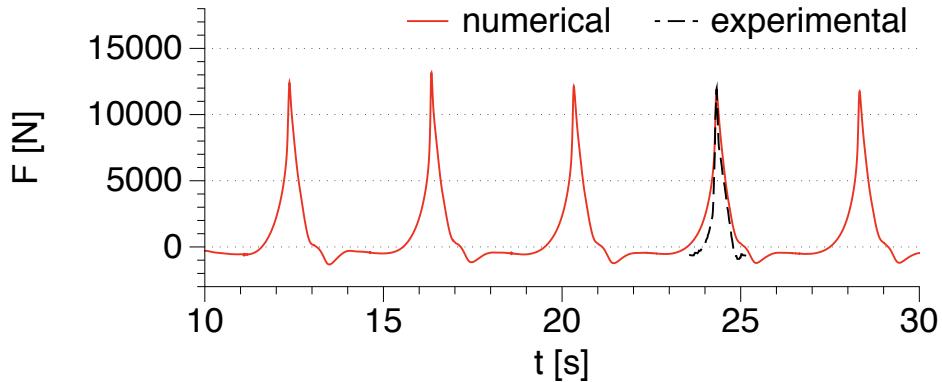


Figure 9.44: Free surface comparison between REEF3D and the experimental data ?

9.15 Heave decay of a sphere with Non-uniform Grid

Setup for simulations including floating bodies using the continuous direct forcing approach. As an example, the heave decay of a sphere can be simulated using the following input files together with the STL-file provided in the tutorial folder. It is recommended to use the cell-based stretching shown in this example to define a box with uniform cell sizes around the floating body.

9.15.1 DIVEMesh: control.txt

```
C 11 21 // left side: wall boundary
C 12 21 // side: wall boundary
C 13 21 // side: wall boundary
C 14 21 // right side: wall boundary
C 15 21 // bottom: wall boundary
```

```

C 16 3 // top: symmetry plane
B 1 0.05 // This value should be the first number in the cell-based stretching option
B 10 0.0 6.0 0.0 6.0 0.0 4.0 // rectangular domain size
B 101 11 // cell-based stretching function in x-direction
B 127 0.05 0.3 3.0 1.5 1.1 // options for cell-based stretching function in x-direction
B 102 11 // cell-based stretching function in y-direction
B 128 0.05 0.3 3.0 1.5 1.1 // options for cell-based stretching function in x-direction
B 103 11 // cell-based stretching function in z-direction
B 129 0.05 0.3 2.0 1.5 1.1 // options for cell-based stretching function in x-direction
M 10 4 // number of parallel processes
M 20 2 // advanced domain decomposition

```

9.15.2 REEF3D: ctrl.txt

```

B 10 1 // use wall functions for velocities (not floating body)
B 50 0.00001 // wall roughness
B 90 1 // turn on the numerical wave tank
B 99 2 // use relaxation method 2 for numerical beach
B 107 0.0 0.0 0.0 6.0 0.3 // define relaxation zone at domain boundaries
B 107 6.0 6.0 0.0 6.0 0.3 // define relaxation zone at domain boundaries
B 107 0.0 6.0 0.0 0.0 0.3 // define relaxation zone at domain boundaries
B 107 0.0 6.0 6.0 6.0 0.3 // define relaxation zone at domain boundaries
D 10 4 // conservative WENO discretization for velocity convection
D 20 2 // implicit diffusion for velocities
D 30 1 // projection method for pressure
F 30 3 // 3rd-order Runge-Kutta scheme for level set time treatment
F 35 5 // HJ-WENO discretization for level set convection
F 40 3 // 3rd-order Runge-Kutta scheme for reinitialization time treatment
F 60 2.0 // still water level
I 10 1 // initialize numerical wave tank
N 40 0 // floating algorithm uses 3rd-order Runge-Kutta scheme internally
N 41 10 // total simulation time

```

```
N 47 0.3 // factor for CFL criterion  
M 10 4 // number of parallel processes  
P 10 1 // turn on vtu printout  
P 30 0.1 // print out vtl files interval based on simulation time  
W 1 1000.0 // density of water  
W 22 -9.81 // gravitational acceleration  
X 10 1 // turn on 6DOF simulation  
X 11 1 1 1 0 0 0 // enable translational motions  
X 13 2 // turn on continuous direct forcing algorithm  
X 21 500.0 // density of floating body  
X 41 2.1 // thickness of forcing layer  
X 180 1 // use STL geometry  
X 182 3.0 3.0 2.2 // move geometry to initial position
```