LCD KeyPad Shield For Arduino SKU: DFR0009

Contents

- 1 Introduction
- 2 Specification
- 3 Pinout
- 4 Library Explanation
 - 4.1 Function Explanation
- 5 Tutorial
 - 5.1 Example 1
 - 5.2 Example 2
 - 5.2.1 Connction Diagram
 - 5.2.2 Sample code
 - 5.2.3 Result
- 6 Trouble shooting
- 7 More



(https://www.dfrobot.com/product-51.html) 1602 LCD Keypad Shield For Arduino (https://www.dfrobot.com/product-51.html)

Introduction


This is a very popular LCD Keypad shield for Arduino (https://www.dfrobot.com/product-51.html) or Freeduino board. It includes a 2x16 LCD display and 6 momentary push buttons. Pins 4, 5, 6, 7, 8, 9 and 10 are used to interface with the LCD. Analog Pin 0 is used to read the push buttons. The LCD shield supports contrast adjustment and backlit on/off functions. It also expands analog pins for easy analog sensor reading and display.

The LCD Keypad shield is developed for Arduino compatible boards (https://www.dfrobot.com/category-104.html), to provide a user-friendly interface that allows users to go through the menu, make selections etc. It consists of a 1602 white character blue backlight LCD. The keypad consists of 5 keys — select, up, right, down and left. To save the digital IO pins, the keypad interface uses only one ADC channel. The key value is read through a 5 stage voltage divider.

Specification

- Operating Voltage:5V
- 5 Push buttons to supply a custom menu control panel
- RST button for resetting arduino program
- Integrate a potentiometer for adjusting the backlight
- Expanded available I/O pins
- Expanded Analog Pinout with standard DFRobot configuration for fast sensor extension
- Dimension: 80 x 58 mm

Pinout

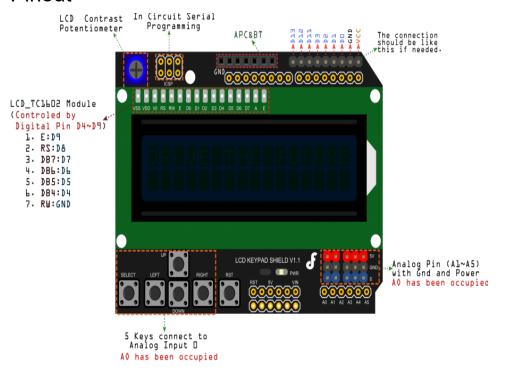

| Instruction for D4 To D10 and Analog Pin 0 | | |
|--|------------------------------|--|
| Pin | Function | Instruction |
| Digital 4(D4) | D4~D7 are used as DB4~DB7 | Four high order bidirectional tristate data bus pins. Used |
| Digital 5(D5) | | |
| Digital 6(D6) | | for data transfer and receive |
| Digital 7(D7) | | between the MPU and the LCD. |
| Digital 8(D8) | RS | Choose Data or Signal Display |
| Digital 9(D9) | Enable | Starts data read/write |
| Digital 10(D10) | LCD Backlight Control | |
| Analog 0(A0) | Button select | Select, up, right, down and left |

(/wiki/index.php/File:DFR0009-PIN2.png)

Library Explanation

Function Explanation

LiquidCrystal(rs, enable, d4, d5, d6, d7)

Creates a variable of type LiquidCrystal. The display can be controlled using 4 or 8 data lines. If the former, omit the pin numbers for d0 to d3 and leave those lines unconnected. The RW pin can be tied to ground instead of connected to a pin on the Arduino; if so, omit it from this function's parameters. for example:

```
LiquidCrystal lcd(8, 9, 4, 5, 6, 7);
```

Icd.begin(cols, rows)

Initializes the interface to the LCD screen, and specifies the dimensions (width and height) of the display. begin() needs to be called before any other LCD library commands.for example:

```
lcd.begin(16, 2);
```

Icd.setCursor(col,row)

Set the location at which subsequent text written to the LCD will be displayed. for example:

```
lcd.setCursor(0,0);
```

lcd.print(data)

Prints text to the LCD.for example:

```
lcd.print("hello, world!");
```

lcd.write(data)

Write a character to the LCD.

More function can see:

• LiquidCrystal library (https://github.com/CainZ/LiquidCrystal/raw/master/LiquidCrystal.zip)

Tutorial

Example 1

This example will test the LCD panel and the buttons. When you push the button on the shield, the screen will show the corresponding one.

Connection: Plug the LCD Keypad to the UNO(or other controllers)

```
Mark Bramwell, July 2010
 This program will test the LCD panel and the buttons. When you push the button on the s
hield.
 the screen will show the corresponding one.
 Connection: Plug the LCD Keypad to the UNO(or other controllers)
#include <LiquidCrystal.h>
LiquidCrystal lcd(8, 9, 4, 5, 6, 7); // select the pins used on the LCD panel
// define some values used by the panel and buttons
int lcd_key = 0;
int adc_key_in = 0;
#define btnRIGHT 0
#define btnUP 1
#define btnDOWN 2
#define btnLEFT
#define btnSELECT 4
#define btnNONE 5
                                     // read the buttons
int read_LCD_buttons(){
   adc_key_in = analogRead(0);
                                     // read the value from the sensor
   // my buttons when read are centered at these valies: 0, 144, 329, 504, 741
   // we add approx 50 to those values and check to see if we are close
   // We make this the 1st option for speed reasons since it will be the most likely re
sul t
   if (adc_key_in > 1000) return btnNONE;
    // For V1.1 us this threshold
   if (adc_key_in < 50) return btnRIGHT;</pre>
   if (adc_key_in < 250) return btnUP;</pre>
   if (adc_key_in < 450) return btnDOWN;</pre>
   if (adc_key_in < 650) return btnLEFT;</pre>
   if (adc_key_in < 850) return btnSELECT;</pre>
   // For V1.0 comment the other threshold and use the one below:
    if (adc_key_in < 50) return btnRIGHT;</pre>
    if (adc_key_in < 195) return btnUP;</pre>
    if (adc_key_in < 380) return btnDOWN;</pre>
    if (adc_key_in < 555) return btnLEFT;</pre>
    if (adc_key_in < 790) return btnSELECT;</pre>
    return btnNONE;
                              // when all others fail, return this.
}
void setup(){
                                 // start the library
  lcd.begin(16, 2);
                                  // set the LCD cursor position
  lcd.setCursor(0,0);
  lcd.print("Push the buttons"); // print a simple message on the LCD
void loop(){
  lcd.setCursor(9,1);  // move cursor to second line "1" and 9 spaces over
lcd.print(millis()/1000);  // display seconds elapsed since power-up
  lcd.setCursor(0,1);
                                  \ensuremath{//} move to the begining of the second line
  lcd_key = read_LCD_buttons(); // read the buttons
   switch (lcd_key){
                                // depending on which button was pushed, we perform a
n action
```

```
// push button "RIGHT" and show the word on the scre
                               case btnRIGHT:{
en
                                                    lcd.print("RIGHT ");
                               case btnLEFT:{
                                                        lcd.print("LEFT "); // push button "LEFT" and show the word on the scree
n
                                                        break;
                               case btnUP:{
                                                        lcd.print("UP "); // push button "UP" and show the word on the screen
                                                        break;
                              case btnDOWN:{
                                                        \cline{Constraint} (\cline{Constraint}); // \cline{Down} \cline{Constraint} and show the word on the screen that the screen is the screen constraint of the screen constr
n
                                                        break;
                              case btnSELECT:{
                                                        lcd.print("SELECT"); // push button "SELECT" and show the word on the scr
een
                                                         break;
                               case btnNONE:{
                                                        lcd.print("NONE "); // No action will show "None" on the screen
}
```

Example 2

This example shows that reads an analog input on pin 1, prints the result to the LCD. This program takes the temperture sensor LM35 for example.

What you need

DFRduino UNO R3 (https://www.dfrobot.com/product-838.html)
LCD Keypad Shield For Arduino (https://www.dfrobot.com/product-51.html)
Analog Linear Temperature Sensor (https://www.dfrobot.com/product-76.html)

Connection:

Plug the LCD Keypad to the UNO(or other controllers)

Temperture sensor: S(blue) -- A1()


Note: A0 has been occupied.

VCC(red) -- VCC

GND(black) -- GND

Tricks for changing sensor cable pin mapping (http://www.dfrobot.com/community/trick-for-changing-sensor-cable-pin-mapping.html)


Connction Diagram

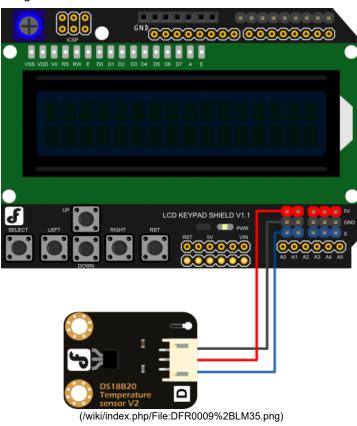

Sample code

```
/***************
  Description:
  Reads an analog input on pin 1, prints the result to the LCD.
  This program takes the temperture sensor LM35 for example.
  Connection:
  Plug the LCD Keypad to the UNO(or other controllers)
  Temperture sensor:
  S(blue) -- A1()
   Note: A0 has been occupied.
  VCC(red) -- VCC
  GND(black) -- GND
#include <LiquidCrystal.h>
LiquidCrystal lcd(8, 9, 4, 5, 6, 7); // select the pins used on the LCD panel
unsigned long tepTimer ;
void setup(){
   lcd.begin(16, 2);
                                      // start the library
void loop(){
                                      // set the LCD cursor position
   lcd.setCursor(0, 0);
                                      // variable to store the value coming from th
   int val;
e analog pin
   double data;
                                      // variable to store the temperature value co
ming from the conversion formula
   val=analogRead(1);
                                      // read the analog in value:
   data = (double) val * (5/10.24);
                                      // temperature conversion formula
   if(millis() - tepTimer > 500){
                                      // output a temperature value per 500ms
           tepTimer = millis();
           // print the results to the Lcd
           lcd.print("T: ");
           lcd.print(data);
           lcd.print("C");
    }
}
```

Result

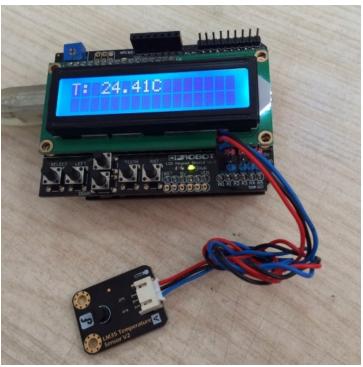

(/wiki/index.php/File:DFR0009%2BTEM.jpg)

Trouble shooting

Q1. Why my LCD keypad cannot display anything on the Intel Edison (http://www.dfrobot.com/index.php? route=product/product&product_id=1198&search=Intel%C2%AE+Edison+with+Arduino+Breakout+Kit&description=true#.Vdr1 while all right on Romeo (http://www.dfrobot.com/index.php? route=product/product&product_id=1198&search=Intel%C2%AE+Edison+with+Arduino+Breakout+Kit&description=true#.Vdr1


A1: It works well if uploaded by Arduino 1.5.3 version, however, the latest 1.6.* have discard pin Definition **for Edison**. So you have to add **pinMode()**; into the setup() like this:

```
void setup() {
  for(int i=4;i<10;i++){
  pinMode(i,OUTPUT);
  }
  lcd.begin(16, 2); // set up the LCD's number of columns and rows
}</pre>
```

Q2. I do not understand your schematic. There are too many connectors illustrated than are actually on the shield. Could you show me a mapping?

A2: The J1-J8 include the both the user interface, i.e. Analog pins, APC220(Serial) pins, Digital pins, and the pins connected with the lower Arduino card, e.g. Uno/ Leonardo. Here is a simple mapping picture.

For any questions and more cool ideas to share, please visit **DFRobot Forum** (http://www.dfrobot.com/forum/)

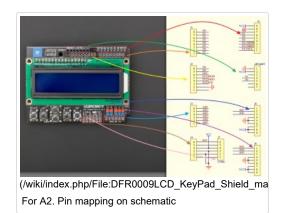

More

- LCDKeypad Shield v1.1 Schematics (http://www.dfrobot.com/image/data/DFR0009/LCDKeypad%20Shield%20V1.0%20SCH.pdf)
- Old version: LCD Keypad Shield Old Wiki Doc (http://www.dfrobot.com/wiki/index.php/Arduino LCD KeyPad Shield (SKU: DFR0009))
- LCDKeypad Shield Schematics V1.0 (http://www.dfrobot.com/image/data/DFR0009/LCDKeypad%20Shield%20V1.0%20SCH.pdf)
- → (/wiki/index.php/File:Nextredirectltr.png)Go Shopping 1602 LCD Keypad Shield For Arduino (https://www.dfrobot.com/product-51.html)

Category: <u>DFRobot</u> (https://www.dfrobot.com/) > <u>Sensors & Modules</u>
(https://www.dfrobot.com/category-156.html) > <u>LCDs, LEDs & Displays</u>
(https://www.dfrobot.com/category-53.html) > <u>LCD (https://www.dfrobot.com/category-131.html)</u>

Categories (/wiki/index.php/Special:Categories):

Product Manual (/wiki/index.php/Category:Product_Manual)

DFR Series (/wiki/index.php/Category:DFR_Series) | Shields (/wiki/index.php/Category:Shields)

LCDs (/wiki/index.php/Category:LCDs)

This page was last modified on 19 June 2017, at 10:01.

Content is available under GNU Free Documentation License 1.3 or later (https://www.gnu.org/copyleft/fdl.html) unless otherwise noted.

GNU FDL FREE DOD (https://www.gnu.org/copyleft/fdl.html) [image: https://www.mediawiki.org/)