Installation Instructions

I - Sheet Number I-B031001 Rev.A



For proper installation and best possible fit, please read all instructions BEFORE you begin. For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-241-7219.

Para una instalación adecuada y el mejor ajuste posible, lea todas las instrucciones ANTES de comenzar.

Para obtener asistencia técnica o para obtener piezas que faltan, por favor llame a Relaciones con el cliente en 1-800-241-7219.

Pour une installation correcte et le meilleur ajustement possible, s'il vous plaît lire toutes les instructions AVANT de commencer. Pour une assistance technique ou pour obtenir des pièces manquantes, s'il vous plaît communiquer avec les Relations à la clientèle au 1-800-241-7219.

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.
 Lavar con jabón suave y seque con un paño limpio.
 Laver avec un savon doux et séchez avec un chiffon propre.
- Every 3 months or 5000 miles check the cover tension and all components for tightness. Revise cada 3 meses o 5,000 millas la tensión de la cubierta y todos los componentes estén ajustados. Vérifiez tous les 3 mois ou 5000 miles la tension couvercle et le serrage des composants.

Congratulations!

You have purchased one of the many quality Lund® branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

Usted ha comprado uno de los muchos productos de calidad ofrecidos por Lund ® de marca productos ofrecidos por Lund Interna tional, Inc. Tomamos el orgullo extremo en nuestros productos y queremos que disfrute durante años de su inversión. Hemos hecho todos los lo posible para que su producto es de calidad superior en cuanto a ajuste, durabilidad, acabado y facilidad de la instalación.

Vous avez acheté un des nombreux produits de qualité offerts par Lund ® marque produits offerts par Lund International, Inc Nous sommes extrêmement fiers de nos produits et souhaitons que vous tiriez des années de satisfaction de votre investissement. Nous avons pris toutes les efforts pour s'assurer que votre produit est de qualité supérieure en termes de durabilité, de finition et la facilité de l'installation.


INSTALLATION INSTRUCTIONS

PART# 22683310/ 23083310

IMPORTANT ALERT: GM uses a very strong thread-locking compound on all body bolts. Use of an air assisted impact ratchet can cause damage to the threads on factory body mount bolts and the internal nut assembly because of this thread locking compound. We only recommend the use of hand tools to slowly remove and reinstall body mount bolts on all GM vehicles.

PROCEDURE:

CRITICAL INFORMATION: If during the removal process, it becomes increasingly difficult to unscrew the body mount bolt with hand tools, tighten the bolt several rotations to clear the thread locking compound from the threads, then reverse direction and continue to unscrew until the body mount bolt is out. Repeat this process as necessary on all GM body mount bolts. Use of an appropriate anti-seize compound is highly recommended for re-installation. Tighten body mount bolt to factory torque specifications for your particular model year.

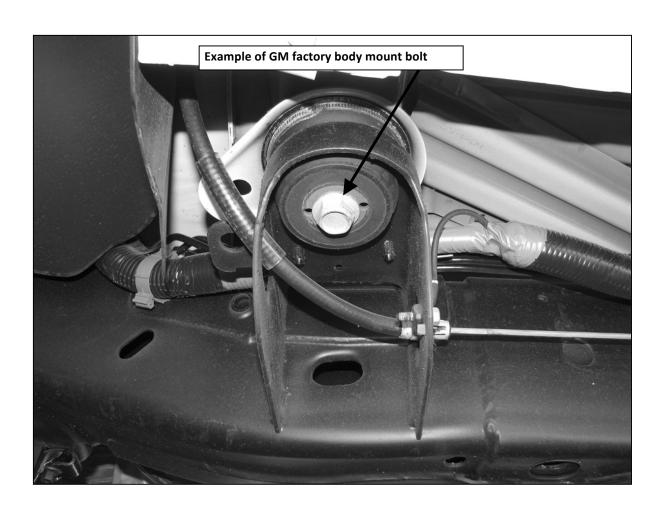

QTY	DESCRIPTION
1	Side Bar, left side
1	Side Bar, right side
1	hardware kit

NOTE: Please read this information before installing. Check components received with components listed above. **NO DRILLING REQUIRED** for installation of these side bars. To obtain correct installation, we recommend you to follow these step by step installation instructions carefully. Please take care when installing this product to protect the finish and your investment.

Step One: Check contents of the hardware.

DESCRIPTION
12mm x 1.75mm x 120mm hex bolts
1/2 flat washers
1/2 split lock washers
12mmx50mm hex bolts, GR.5
9/16 x 2 1/2 x 3/16 spacers, zinc plated
3" plastic rings
front support bracket, left side
front support bracket, right side
rear support bracket, left side
rear support bracket, right side

Step Two: Locate the side bar, one support bracket, one 3" plastic ring, two $\frac{1}{2}$ x 2" hex bolts, two $\frac{1}{2}$ " flat washers and two $\frac{1}{2}$ " split lock washers. Secure the bracket and ring to the side bar using the hardware listed in this step. (Fig #1) Do not fully tighten hardware at his time. Repeat this procedure on the other end of the side bar using the support bracket.

Step Three: Locate one spacer, one 12mm hex bolt, two ½" flat washers and one ½" split lock washer. Remove the front cab mount bolt located under the cab. Remove the rear spring hanger nut. "CAUTION" does not remove the rear spring hanger bolt; doing so could result in injury or damage to the vehicle. Place the spacer over the spring hanger bolt and position the rear support bracket over the rear spring hanger bolt. Secure the support bracket and spacer to the spring hanger with the factory nut as shown in fig #2. Do not fully tighten the nut at this time. Position the front support bracket under the front cab mount. Secure the support bracket to the bottom of the cab mount as shown in fig #3 using the remaining hardware listed in this step. Fully tighten all hardware at this time.

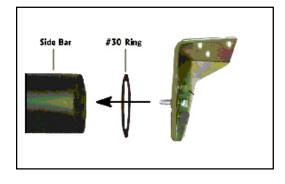






Fig #1 Fig #2 Fig #3

SIDE BARS 92-99 CHEVY SUBURBAN (Excl.3/4 ton 4WD) (Photos are for reference only, actual brackets may be different) Step Four: Repeat steps two and three on opposite side of vehicle. Be sure to use all hardware supplied and tighten all bolts. IMPORTANT: Side bars have a 300 lb. weight capacity. To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish.

Page 3 of 3