## Installation Instructions

I - Sheet Number I-PW00811601 Rev.A



For proper installation and best possible fit, please read all instructions BEFORE you begin. For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-241-7219.

Para una instalación adecuada y el mejor ajuste posible, lea todas las instrucciones ANTES de comenzar.

Para obtener asistencia técnica o para obtener piezas que faltan, por favor llame a Relaciones con el cliente en 1-800-241-7219.

Pour une installation correcte et le meilleur ajustement possible, s'il vous plaît lire toutes les instructions AVANT de commencer. Pour une assistance technique ou pour obtenir des pièces manquantes, s'il vous plaît communiquer avec les Relations à la clientèle au 1-800-241-7219.

# Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.
   Lavar con jabón suave y seque con un paño limpio.
   Laver avec un savon doux et séchez avec un chiffon propre.
- Every 3 months or 5000 miles check the cover tension and all components for tightness. Revise cada 3 meses o 5,000 millas la tensión de la cubierta y todos los componentes estén ajustados. Vérifiez tous les 3 mois ou 5000 miles la tension couvercle et le serrage des composants.

# **Congratulations!**

You have purchased one of the many quality Lund® branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

Usted ha comprado uno de los muchos productos de calidad ofrecidos por Lund ® de marca productos ofrecidos por Lund Interna tional, Inc. Tomamos el orgullo extremo en nuestros productos y queremos que disfrute durante años de su inversión. Hemos hecho todos los lo posible para que su producto es de calidad superior en cuanto a ajuste, durabilidad, acabado y facilidad de la instalación.


Vous avez acheté un des nombreux produits de qualité offerts par Lund ® marque produits offerts par Lund International, Inc Nous sommes extrêmement fiers de nos produits et souhaitons que vous tiriez des années de satisfaction de votre investissement. Nous avons pris toutes les efforts pour s'assurer que votre produit est de qualité supérieure en termes de durabilité, de finition et la facilité de l'installation.

## **INSTALLATION INSTRUCTIONS**

## PART# 244101116/ 260101116

#### **PARTS LIST:**

Qty	Description	Qty	Description
1	Driver/Left Side Bar	2	10-1.5mm x 30mm Hex Bolts
1	Passenger/Right Side Bar	4	10mm x 30mm x 2.5mm Flat Washers
1	Driver/Left Front Mounting Bracket	2	10mm Nylon Lock Nuts
1	Passenger/Right Front Mounting Bracket	10	8mm Clip Nuts
1	Driver/Left Front Center Mounting Bracket	10	8-1.25mm x 30mm Hex Bolts
1	Passenger/Right Front Center Mounting Bracket	28	8-1.25mm x 25mm Hex Bolts
1	Driver/Left Rear Center Mounting Bracket	38	8mm Lock Washers
1	Passenger/Right Rear Center Mounting Bracket	40	8mm x 24mm OD x 2mm Flat Washers
1	Driver/Left Rear Mounting Bracket	10	8mm x 28mm OD x 3mm Flat Washers
1	Passenger/Right Rear Mounting Bracket	12	8mm Hex Nuts

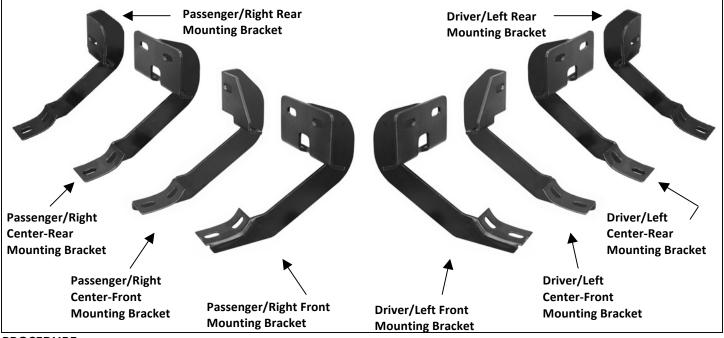

### **PROCEDURE:**

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
- 2. Starting on the driver side of the vehicle, locate the (2) holes in the pinch weld to find the factory mounting holes in the inner side panel, (Figure 1). NOTE: The inner holes may be covered with sealing tape or insulation. Slide the 8mm Clip Nuts into the rectangular opening with the nut towards the inside. Line up the threaded nut on the clip with the round holes on each side of the opening, (Figure 1).
- 3. Partially attach the driver side front Mounting Bracket to the Clip Nuts with the included (2) 8mm x 30mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm x 28mm Large Flat Washers, (Figure 2). Depending on model and year, the brake cable may be run on the inside or outside of the Bracket. Do not tighten hardware at this time. NOTE: The Cradle on the Front Mounting Bracket should face to the rear of the vehicle.
- **4.** Align the bottom holes in the front Mounting Bracket with the (2) holes in the pinch weld. Bolt the Bracket to the pinch weld using the included (2) 8mm x 25mm Hex Bolts, (2) 8mm Lock Washers, (4) 8mm x 24mm STD Flat Washers and (2) 8mm Hex Nuts, **(Figure 2)**. **NOTE:** Insert the bolts up from the bottom of the pinch weld and through the Bracket.

Page 1 of 4 6/18/12 (DP)


- 5. Select the driver side Front-Center Mounting Bracket, (Figure 4A). Locate the mounting location and insert (1) 8mm Clip Nut as per Step 2, (Figure 3). Secure the Front-Center Bracket to the Clip Nut with (1) 8mm x 30mm Hex Bolt, (1) 8mm Lock Washer and (1) 8mm x 28mm Large Flat Washer, (Figure 4B). Line up the (1) lower hole in the Bracket with the hole in the pinch weld. Bolt the Bracket to the pinch weld with (1) 8mm x 25mm Hex Bolt, (1) 8mm Lock Washer, (2) 8mm STD Flat Washers and (1) 8mm Hex Nut. Do not tighten hardware at this time. NOTE: The cradle on the Front-Center Mounting Bracket should face the front of the vehicle.
- 6. Repeat Steps 2 4 for the driver side Rear-Center Mounting Bracket installation. NOTE: The cradle on the Rear-Center Bracket should face the front of the vehicle, (Figure 5). The mounting holes will be the last pair in the pinch weld towards the rear of the cab. Do not tighten hardware at this time.
- 7. Next, move to the very end of the cab and locate the round hole in the bottom corner of the body panel, (Figure 6). Select the driver side Rear Bracket, (Figure 7A). Bolt the Rear Bracket to the mounting hole with (1) 10mm x 30mm Hex Bolt, (2) 10mm Flat Washers and (1) 10mm Nylon Lock Nut, (Figures 7B & 8). Do not tighten hardware at this time.
  - a. Optional Drilling: The Rear Bracket has an additional hole on the bottom of the plate where the Bracket rests on the pinch weld. Use the Bracket as a guide and drill a 3/8" hole through the Bracket and pinch weld, (Figure 9). Bolt the Bracket to the pinch weld with (1) 8mm x 25mm Hex Bolt, (1) 8mm Lock Washer, (2) 8mm STD Flat Washers and (1) 8mm Hex Nut. Do not tighten hardware at this time.
- 8. Carefully position the Sidebar onto the four Mounting Bracket cradles and attach it using the included (8) 8mm x 25mm Hex Bolts, (8) 8mm Lock Washers and (8) 8mm STD Flat Washers, (Figures 8 & 10). Do not tighten hardware at this time.
- 9. Level and adjust the Sidebar properly and tighten all hardware.
- 10. Repeat Steps 2 9 for passenger Sidebar installation.
- 11. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For stainless steel**: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.


### **Driver Side Installation Pictured**

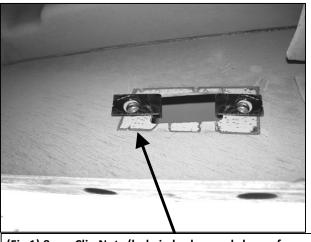

(Fig 1) 8mm Clip Nuts (hole in body panel shown for example only-location and shape may differ slightly)

- (2) 8mm x 25mm Hex Bolts
- (2) 8mm Lock Washer
- (4) 8mm STD Flat Washers
- (2) 8mm Hex Nuts

- (2) 8mm Clip Nuts
- (2) 8mm x 30mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 28mm Large Flat Washers

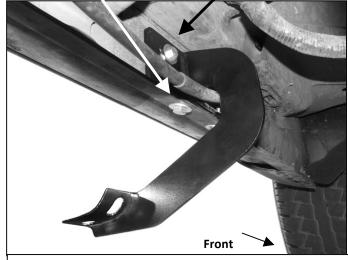


(Fig 2) Driver side-front Mounting Bracket location

Page 2 of 4

6/18/12 (DP)

### **Driver Side Installation Pictured**

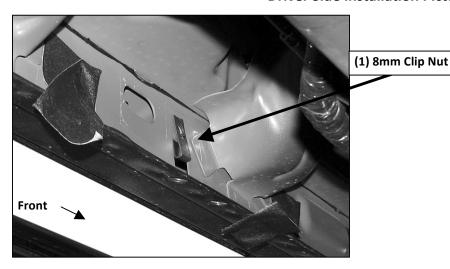

(Fig 3) Driver Side Center-Front Mounting Bracket




(Fig 4A) Driver Side Center-Front Mounting Bracket




8mm x 25mm Hex Bolt 8mm Lock Washer 8mm STD Flat Washers


- (2) 8mm Clip Nuts
- (2) 8mm x 30mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 28mm Large Flat Washers

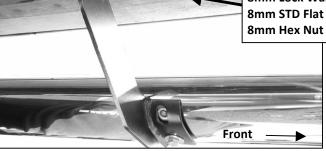

(Fig 4B) Driver Side Center-Front Mounting Bracket

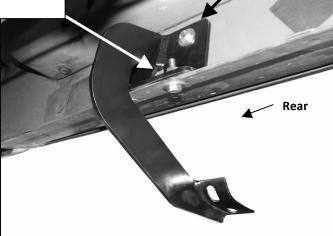


(Fig 5) Driver side Center-Rear Mounting Bracket

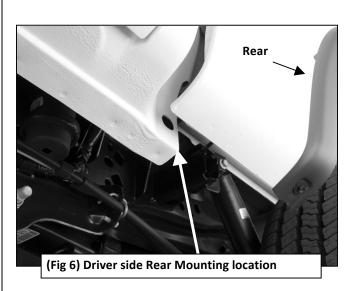

Page 3 of 4 6/18/12 (DP)

### **Driver Side Installation Pictured**

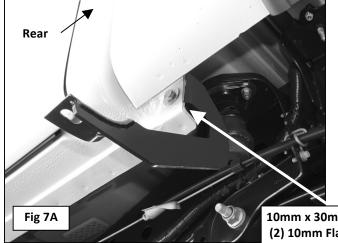


**Driver side Rear Mounting Bracket** 



10mm x 30mm Hex Bolt (2) 10mm Flat Washers 10mm Nylon Lock Nut

OPTIONAL: Carefully drill 3/8" hole from backside through Bracket and rocker panel

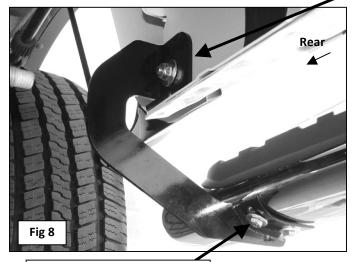

- (2) 8mm x 25mm Hex Bolts
- (2) 8mm Lock Washer
- (2) 8mm STD Flat Washers

