## Installation Instructions

I - Sheet Number I-B150502 Rev. A



For proper installation and best possible fit, please read all instructions BEFORE you begin. For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-241-7219.

Para una instalación adecuada y el mejor ajuste posible, lea todas las instrucciones ANTES de comenzar.

Para obtener asistencia técnica o para obtener piezas que faltan, por favor llame a Relaciones con el cliente en 1-800-241-7219.

Pour une installation correcte et le meilleur ajustement possible, s'il vous plaît lire toutes les instructions AVANT de commencer. Pour une assistance technique ou pour obtenir des pièces manquantes, s'il vous plaît communiquer avec les Relations à la clientèle au 1-800-241-7219.

# Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.
   Lavar con jabón suave y seque con un paño limpio.
   Laver avec un savon doux et séchez avec un chiffon propre.
- Every 3 months or 5000 miles check the cover tension and all components for tightness. Revise cada 3 meses o 5,000 millas la tensión de la cubierta y todos los componentes estén ajustados. Vérifiez tous les 3 mois ou 5000 miles la tension couvercle et le serrage des composants.

## **Congratulations!**

You have purchased one of the many quality Lund® branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

Usted ha comprado uno de los muchos productos de calidad ofrecidos por Lund ® de marca productos ofrecidos por Lund Interna tional, Inc. Tomamos el orgullo extremo en nuestros productos y queremos que disfrute durante años de su inversión. Hemos hecho todos los lo posible para que su producto es de calidad superior en cuanto a ajuste, durabilidad, acabado y facilidad de la instalación.

Vous avez acheté un des nombreux produits de qualité offerts par Lund ® marque produits offerts par Lund International, Inc Nous sommes extrêmement fiers de nos produits et souhaitons que vous tiriez des années de satisfaction de votre investissement. Nous avons pris toutes les efforts pour s'assurer que votre produit est de qualité supérieure en termes de durabilité, de finition et la facilité de l'installation.

# **Installation Instructions**

## Part # 23566505/ 23666505

#### **PARTS LIST:**


1	Driver Side Bar	20	8-1.25mm x 30mm Hex Head Bolts	
1	Passenger Side Bar	20	8mm Lock Washers	(B)
1	Rear Driver Side Mounting Bracket (A)	20	8mm x 28mm x 3mm Flat Washers	
1	Front Driver Side Mounting Bracket (B)			(C)
1	Front Passenger Side Mounting Bracket (C)			(0)
1	Rear Passenger Side Mounting Bracket (D)			
				(D)

#### PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
- 2. Determine driver and passenger Mounting Brackets.
- 3. Hang the inner side of the driver front Mounting Bracket into position by partially threading (1) 8mm x 30mm Hex Head Bolt, (1) 8mm Lock Washer, and (1) 8mm Flat Washer into factory threaded hole on the frame (Figure 1). NOTE: There are two threaded holes by the front mounting location on the frame, use the one towards the rear of vehicle.
- **4.** Attach the opposite side of the driver front Mounting Bracket to the threaded holes on the floor panel of the vehicle by partially threading (2) 8mm x 30mm Hex Head Bolts, (2) 8mm Lock Washers, and (2) 8mm Flat Washers (Figure 1).
- **5.** Locate and cut out the openings in the driver and passenger side trimming templates with a pair of scissors (Page 3 & 4)
- **6.** Fit the driver's side template onto its respective side plastic rock shields. Position them using two each of the 8mm bolts that will later be used to mount the side bar brackets. Transfer the openings in the templates onto the plastic cover using a magic marker.
- 7. Now remove the rock shield from the undercarriage of the car. The three front screws can be removed with a 10MM socket. The plastic retainer plugs can be removed with a flat blade screwdriver.
- 8. Using a sharp knife or pair of shares, cut out the shields as marked using the templates (Figure 2).
- 9. Insert the inner side of driver rear Mounting Bracket through previously cut out hole on the plastic cover. Hang Mounting Bracket by partially threading (1) 8mm x 30mm Hex Head Bolt, (1) 8mm Lock Washer, and (1) 8mm Flat Washer into factory threaded hole on the frame (Figure 3). NOTE: There are two threaded holes on the frame, use the one towards the rear of vehicle.
- **10.** Attach the opposite side on the driver rear Mounting Bracket by partially threading (2) 8mm x 30mm Hex Head Bolts, (2) 8mm Lock Washers, and (2) 8mm Flat Washers into factory threaded holes on the floor panel.
- 11. Position Driver Side Bar onto Mounting Brackets. Attach Side Bar to Mounting Brackets using the included (4) 8mm x 30mm Hex Head Bolts, (4) 8mm Lock Washers, and (4) 8mm Flat Washers (Figure 1). Do not tighten at this time.
- **12.** Level and adjust Side Bar; then tighten all hardware at this time.
- **13.** Re-install the rest of fastener on the rock shield.
- **14.** Repeat steps 2-13 for passenger Side Bar.
- 15. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Page 1 of 4 4/16/07 (AM)

### **Front Driver Side Mounting Bracket Shown**

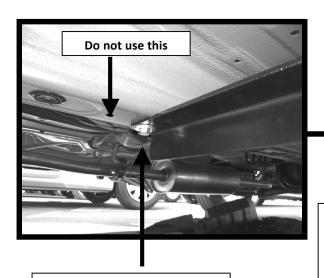

8mm x 30mm Hex Head Bolt, 8mm Lock Washer, & 8mm Flat Washer




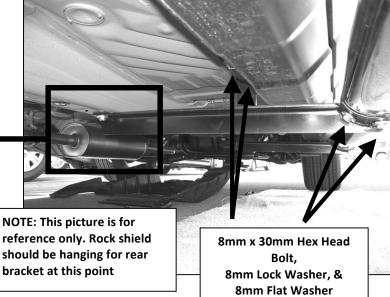


Figure 1

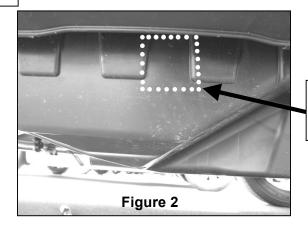


Cut out the marked location on the plastic cover. See Drawings below



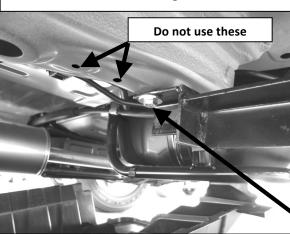

### **Installation Complete**

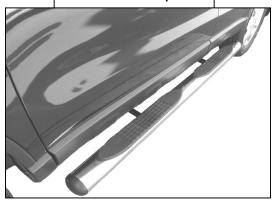

8mm x 30mm Hex Head Bolt, 8mm Lock Washer, & 8mm Flat Washer Figure 4

