Installation Instructions

I - Sheet Number I-B035701 Rev.A



For proper installation and best possible fit, please read all instructions BEFORE you begin. For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-241-7219.

Para una instalación adecuada y el mejor ajuste posible, lea todas las instrucciones ANTES de comenzar.

Para obtener asistencia técnica o para obtener piezas que faltan, por favor llame a Relaciones con el cliente en 1-800-241-7219.

Pour une installation correcte et le meilleur ajustement possible, s'il vous plaît lire toutes les instructions AVANT de commencer. Pour une assistance technique ou pour obtenir des pièces manquantes, s'il vous plaît communiquer avec les Relations à la clientèle au 1-800-241-7219.

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.
 Lavar con jabón suave y seque con un paño limpio.
 Laver avec un savon doux et séchez avec un chiffon propre.
- Every 3 months or 5000 miles check the cover tension and all components for tightness. Revise cada 3 meses o 5,000 millas la tensión de la cubierta y todos los componentes estén ajustados. Vérifiez tous les 3 mois ou 5000 miles la tension couvercle et le serrage des composants.

Congratulations!

You have purchased one of the many quality Lund® branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

Usted ha comprado uno de los muchos productos de calidad ofrecidos por Lund ® de marca productos ofrecidos por Lund Interna tional, Inc. Tomamos el orgullo extremo en nuestros productos y queremos que disfrute durante años de su inversión. Hemos hecho todos los lo posible para que su producto es de calidad superior en cuanto a ajuste, durabilidad, acabado y facilidad de la instalación.

Vous avez acheté un des nombreux produits de qualité offerts par Lund ® marque produits offerts par Lund International, Inc Nous sommes extrêmement fiers de nos produits et souhaitons que vous tiriez des années de satisfaction de votre investissement. Nous avons pris toutes les efforts pour s'assurer que votre produit est de qualité supérieure en termes de durabilité, de finition et la facilité de l'installation.


INSTALLATION INSTRUCTIONS

PART# 22686357/ 23086357

IMPORTANT ALERT: GM uses a very strong thread-locking compound on all body bolts. Use of an air assisted impact ratchet can cause damage to the threads on factory body mount bolts and the internal nut assembly because of this thread locking compound. We only recommend the use of hand tools to slowly remove and reinstall body mount bolts on all GM vehicles.


PROCEDURE:

CRITICAL INFORMATION: If during the removal process, it becomes increasingly difficult to unscrew the body mount bolt with hand tools, tighten the bolt several rotations to clear the thread locking compound from the threads, then reverse direction and continue to unscrew until the body mount bolt is out. Repeat this process as necessary on all GM body mount bolts. Use of an appropriate anti-seize compound is highly recommended for re-installation. Tighten body mount bolt to factory torque specifications for your particular model year.

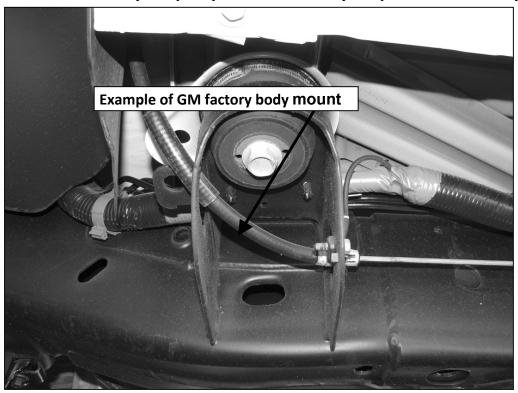

PARTS LIST:

1	Driver/Left Side Bar	4	1/2" ID x 1-1/2" OD x 1/8" Large Flat Washers
1	Passenger/Right Side Bar	4	1/2" Lock Washers
1	Driver Side/Left Front Mounting Bracket	6	12-1.75mm x120mm x 35mm Hex Bolts Gr. 10.9
1	Passenger Side/Right Front Mounting Bracket	6	12mm ID x 32mm OD x 3mm Flat Washers
2	Center Mounting Brackets	6	12mm Lock Washers
1	Driver Side/Left Rear Mounting Bracket	2	10-1.50mm x 25mm Hex Bolts
1	Passenger Side/Right Rear Mounting Bracket	2	10mm Lock Washers
4	1/2" x 2" Hex Bolts	2	10mm ID x 27mm OD x 3mm Flat Washers

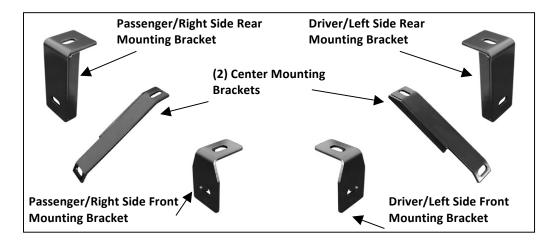

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.
- 2. From underside of vehicle, remove the driver side front body mount bolt, steel washer (if equipped), and rubber bushing, (Figure 1).
- 3. Select the driver side front Mounting Bracket. Insert the factory body mount bolt through the Mounting Bracket and into the steel washer, (if equipped), and rubber bushing. Hang the Mounting Bracket in position by partially threading the factory body mount bolt up into place, (Figure 2). Repeat this step for the Center Mounting Bracket, (Figure 3), and the Rear Mounting Bracket, (Figure 4). NOTE: Longer 12mm x 120mm Hex Bolts, 12mm Lock Washers and 12mm x 32mm OD Flat Washers have been provided to replace the factory body bolts. Use only if necessary. Snug but do not tighten hardware at this time.

VERY IMPORTANT! There are several different designs, (depending on model year), for the factory steel body mount bracket, (Figure 1). If necessary, the Front and Rear Mounting Brackets can be switched, driver side to passenger side, to provide additional clearance between the gusset on the Mounting Bracket and the factory steel body mount bracket welded to the frame. **To prevent unnecessary noise**, adjust the position of all Mounting Brackets so that once tightened, the Mounting Brackets do not come in contact with the factory steel body mount bracket.

- **4.** With help position the Side Bar onto the Mounting Brackets. Attach front and rear Mounting Brackets to Side Bar using the included (2) 1/2" x 2" Hex Bolts, (2) 1/2" Flat Washers and (2) 1/2" Lock Washers, (Figure 4). Do not tighten at this time.
- 5. Attach center Mounting Bracket to Side Bar using the included (1) 10-1.50mm x 25mm Hex Bolt, (1) 10mm Flat Washer and (1) 10mm Lock Washer, (Figure 3). IMPORTANT: If threaded insert in Sidebar does not line up correctly with Center Mounting Bracket, switch Sidebars, driver side to passenger side. Do not tighten hardware at this time.

3" SIDE BARS WITH BENT ENDS 2002-2013 SILVERADO/SIERRA 1500HD CREW CAB 2004-2005 SILVERADO/SIERRA 1500LD CREW CAB 2001-2013 SILVERADO/SIERRA 2500HD-3500 CREW CAB

- **6.** Level and adjust the Side Bar, tighten all hardware and check all mounting locations for clearance between factory steel body mount brackets and Mounting Brackets. Once satisfied with fit, tighten all hardware.
- **7.** Repeat steps 2-6 for passenger Side Bar installation.
- 8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

Driver side installation pictured

