

### **■ COOLING SYSTEM**

#### 1. General

- The cooling system is a pressurized, forced-circulation type.
- A pressurized reservoir tank is used to prevent the engine coolant from deteriorating upon contact with external air.
- A coupling fan is used to effect linear control.
- A thermostat with a bypass valve is located on the water inlet housing to maintain suitable temperature distribution in the cooling system.
- EGR cooler to cool down intake air temperature during EGR operation is used.
- The TOYOTA genuine Super Long Life Coolant (SLLC) is used.

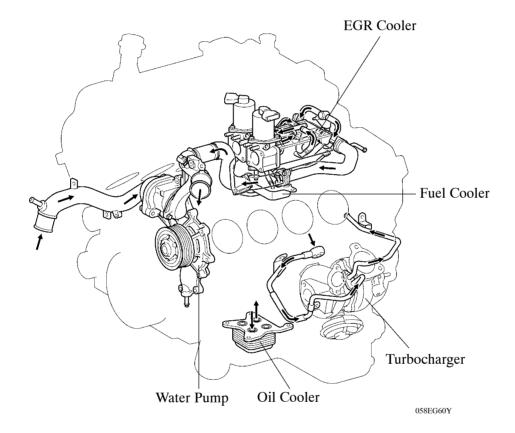

## **▶** System Diagram **◄**

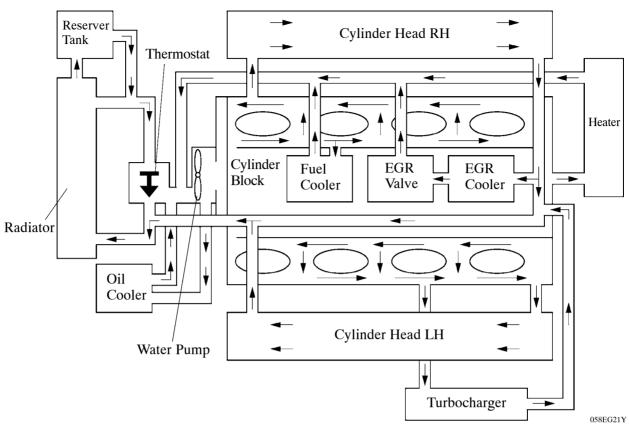

### **▶** Specifications **◄**

Engine Coolant	Туре		TOYOTA Genuine Super Long Life Coolant (SLLC) or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids.) Do not use plain water alone.
	Color		Pink
	Capacity		14.8 Liters (15.6 US qts, 13.0 Imp. qts)
	Maintenance Intervals	First time	160,000 km (100,000 miles)
		Subsequent	Every 80,000 km (50,000 miles)
Thermostat	Opening Temperature	°C (°F)	74 – 78 (165 – 172)

• SLLC is pre-mixed (50% coolant and 50% deionized water). Therefore, no dilution is needed when SLLC in the vehicle is added or replaced.

# 2. Coupling Fan

A linear temperature-controlled coupling fan is used. This coupling fan utilizes the characteristics of a bimetal to switch the fluid passages and appropriately control the silicon oil.

## **▶** Characteristic of Coupling Fan **◄**

