## Welcome!

Firmware Training Week 3



# ROBOJACKETS COMPETITIVE ROBOTICS AT GEORGIA TECH

www.robojackets.org



### Last Week!

- C++ Continued
- Interrupts
- State Machines

### This Week!

- Registers and Timers
- PWM
- Binary and Hexadecimal
- Bitwise Operations
- Masking
- Lab



#### **Dues**

- Please pay dues by Saturday, October 10th
- Can do so at my.robojackets.org/dues




## **Registers and Timers**




### What is a register?

- Hardware used to read and write multiple bits at once
- Used to form memory to store information
- Microcontrollers often use registers to control the functions of various parts of the device
- Methods like Arduino's digitalWrite modify the value of a register that controls whether a pin is high or low

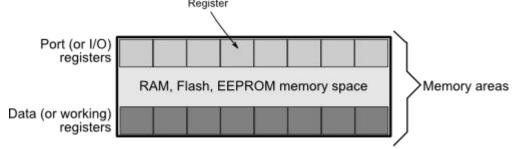

### **Timers and Timer Registers**

- Timers are a peripheral device used to count up to a certain value before resetting
- Timer registers are registers that act as a timer
- Timer registers can be used to trigger different actions at set intervals by checking the value of the timer register against a different register

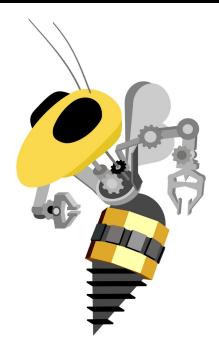


### **PWM**

Pulses go brrrrr


#### What is PWM?

- Pulse-width modulation
- By alternating between a low and high voltage the effect of a middle voltage can be achieved
- By varying the duty cycle of this alternation the spectrum of voltage between the low and high can be utilized. (The average value of the voltage)

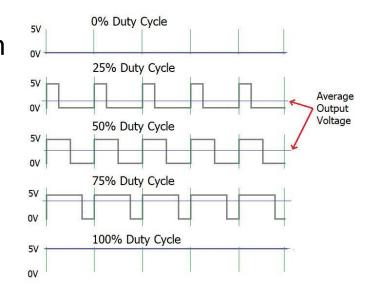

#### **Relation to Timers**

- Switching frequency is controlled by a timer register
- The time voltage is high compared to the total time tells us the % duty cycle which directly relates to the output voltage

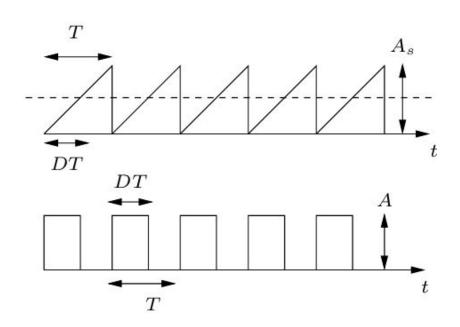



## **Binary and Hexadecimal**

52 6f 62 6f 4a 61 63 6b 65 74 73

### What are Binary and Hexadecimal?

- Binary and Hexadecimal are alternate number systems
- The number system that everyone is taught is called decimal and it is base 10
- Binary is base 2:0,1
- Hexadecimal is base 16:
   0,1,2,3,4,5,6,7,8,9,A,B,C,D,E,F

decimal	hexadecimal	binary
0	0	0000
1	1	0001
2	2	0010
3	3	0011
4	4	0100
5	5	0101
6	6	0110
7	7	0111
8	8	1000
9	9	1001
10	A	1010
11	В	1011
12	С	1100
13	D	1101
14	E	1110
1.5	F	1111

### **Example Conversion Binary-Decimal**

Decimal to Binary: 158 to 10011110

Binary to Decimal: 10011110 to 158

2 <sup>7</sup> 128	2 <sup>6</sup> 64	2 <sup>5</sup> 32	2⁴ 16	2 <sup>3</sup>	2 <sup>2</sup> 4	2¹ 2	2° 1
1	0	0	1	1	1	1	0

### **Example Conversion Hexa-Decimal**

Decimal to Hexadecimal:

158 to 9E

14 is E in Hexadecimal so the result is 9E!


Hexadecimal to Decimal: 9E to 158

16¹	16°
16	1
9	Е



### **Example Conversion Hexa-Binary**


Hexa to Binary: 9E to 10011110

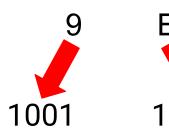

decimal	hexadecimal	binary	
0	0	0000	
1	1	0001	
2	2	0010	
3	3	0011	
4	4	0100	
5	5	0101	
6	6	0110	
7	7	0111	
8	8	1000	
9	9	1001	
10	A	1010	
11	В	1011	
12	С	1100	
13	D	1101	
14	E	1110	
15	F	1111	

Binary to Hexa: 10011110 to 9E



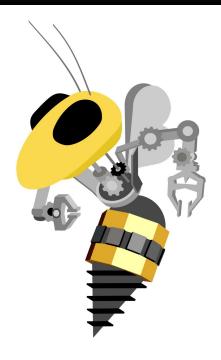

## **Bitwise Operations**

Yes or no



### What are Bitwise Operations?

- Bitwise operators:
  - AND → &
  - OR → I
  - XOR → ^

BITA	BIT B	AND	OR	XOR
0	0	0	0	0
0	1	0	1	1
1	0	0	1	1
1	1	1	1	0

Bitwise operations are Logical Operations but instead of comparing conditions, bits are compared



#### How does it work?

Example: 01000011(67); 00101010(42)

### **Logical Shift**

Left Shift Right Shift <-> >>>

- Left Shift
  - A single left shift multiplies a number by 2:
    - (2)  $0010 << 1 \rightarrow 0100 (4)$
- Right Shift
  - A single right shift divides a number by 2 (discards the remainder)
    - (5) 0101 >>> 1  $\rightarrow$  0010 (2)



### Why are they useful?

- Very efficient
- Small memory usage
- They are used in embedded devices, socket programming (network), cryptography etc...



### Masking

Mask on (or off)

### What is it?

- Using bitwise operations to access/set particular bits
- Read a value from a binary number
  - Masking with 0 to ignore subset of bits
  - Use a bitwise AND (&)
- Write certain bits of a binary number
  - Masking bits to 1 to change subset of bits
  - Use a bitwise OR (I)



#### How to mask?

#### Masking with &:

- Any number & 0 leaves a 0
- Any number & 1 leaves that number

#### Ex:

```
1001010
&<u>0101001</u>
0001000
```

#### Masking with |:

- Any number | 0 leaves that number
- Any number | 1 leaves a 1

#### Ex:

```
1001010
| <u>0101001</u>
1101011
```



You have a color: #34EB98 (hexadecimal),

1101001110101110011000 (binary)

How do you get only the amount of blue of this color?



```
You have a color: #34EB98 (hexadecimal),
```

001101001110101110011000 (binary)

How do you get only the amount of blue of this color?

```
Mask (&): 0011 0100 1110 1011 1001 1000
```


- & 0000 0000 0000 0000 1111 1111
- => 0000 0000 0000 0000 **1001 1000**



Now we have: #000098 (hexadecimal),

00000000000000010011000 (binary)

How do you add red to this color?

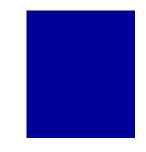



Now we have: #000098 (hexadecimal),


000000000000000010011000 (binary)

How do you add red to this color?

Mask (|): 0000 0000 0000 0000 1001 1000

1111 1111 0000 0000 0000 0000

=> 1111 1111 0000 0000 1001 1000

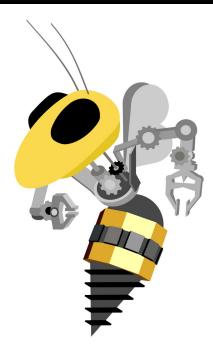

### Lab Time

### Lab Info

- Read about ATmega microcontroller
- Read about the timer registers
  - Setup fast PWM mode using the register
- Write interrupt handler for button
- Display brightness using LED