

GridSim simulator manual

 ${\rm TM/ROBOLABO/2014\text{-}003}$

 $Developed\ by\ \mathbf{ROBOLABO}$

www.robolabo.etsit.upm.es

Authors: Manuel Castillo Cagigal

Eduardo Matallanas de Avila Dr. Alvaro Gutiérrez Martín

Contents

1	Simulator description				
	Installation2.1 Parallel launcher compilation				
_	Execution 3.1 Experiment configuration	9			
	Examples 4.1 MuFCO demo	11 11			

4 CONTENTS

Simulator description

GridSim¹ is an open source simulator developed to analyze the power balances on a virtual electrical grid. Figure 1.1 shows a scheme of its modular architecture. The grid is composed by lines. A line represents a set of nodes with the same features. The nodes are complex elements connected to the lines which can be equipped with different types of consumption, Distributed Energy Resources (DER) technologies and control systems. These nodes can represent from a single device which only consumes as a single device to a complex microgrid. In addition, a base consumption function can be added to the grid. It represents an uncontrollable consumption which is added to the aggregated consumption of the simulated grid.

The structure of a grid is defined by an XML file. In this file, the number of lines and the number of nodes per line can be defined. Each line has a concrete type of node; it means that all the nodes of each line have the same features. *GridSim* can run multiple executions in parallel. This feature of the simulator has been implemented by making use of the MPI² protocol.

GridSim calculates the power balances of every node and they are aggregated in their common line. The aggregated consumption of the virtual electrical grid is calculated as the sum of the power balances of every line plus the base consumption function. The nodes can be equipped with different controllers to control the possible elements which a node is composed of. For example, the charge power of the storage system can be controlled by a battery controller. The controllers can obtain information from every element of the GridSim simulator.

Algorithm 1 describes the operation of *GridSim*. In the first place, the simulator is initialized—see from line 1 to 3. The virtual electrical grid is created by using a configuration file which indicates structure of the grid. In addition, the counter of *time steps* is set to zero. A time step is one execution of the main loop of the simulator. It is the virtual clock of a simulation which marks the events that happen. A time step is related to an amount of time in the real world. For example, if a time step represents one minute, in each execution of the

¹ GridSim is released under GPLv3.0. It can be downloaded from: https://github.com/Robolabo/gridSim.git

² Message Passing Interface (MPI) is a standardized and portable message-passing system designed by a group of researchers from academia and industry to function on a wide variety of parallel computers. The standard defines the syntax and semantics of a core of library routines useful to a wide range of users writing portable message-passing programs in different computer programming languages.

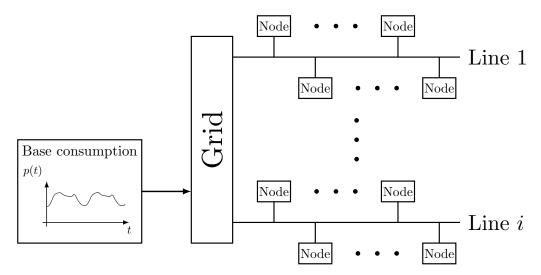


Figure 1.1: Scheme of the modular architecture of *GridSim* simulator.

Algorithm 1 High-level description of the main loop of GridSim simulator.

```
1: /* Initialization */
 2: createGrid(< configurationFile >)
3: TimeStep \leftarrow 0
4: /* Main Loop */
   while TimeStep < TimeStepLimit do
       /* Execute main control function */
       mainControlFunction()
 7:
       /* Execute virtual user functions on all nodes */
 8:
       for i < numNodes do
9:
          node[i]→userFunction()
10:
       end for
11:
       /* Execute control functions on all nodes */
12:
       for i < numNodes do
13:
14:
          node[i]→controlFunction()
       end for
15:
       /* Execute grid energy balance - physics engine */
16:
       gridExecutionFunction()
17:
       TimeStep + +
18:
19: end while
```

main loop, the power balances are calculated for one minute in the real world. The lower the amount of time in the real world is, the higher the accuracy of the simulator is, but also the greater the computing power. After GridSim is initialized, the main loop begins. The main loop simulates the virtual electrical grid, the virtual users and controllers in each time step. The counter of time steps is increased at the end of this loop. When the main loop finishes, the simulation finishes. This condition is satisfied when the counter of time steps reaches a certain value indicated in the configuration file—see the condition of line 5.

Installation

GridSim is open source simulator of electrical grids released under GPLv3.0. It can be downloaded from: https://github.com/Robolabo/gridSim.git. The repository can also be directly downloaded from github in your computer:

```
$ git clone https://github.com/Robolabo/gridSim.git
```

Once the simulator has been downloaded, you can attempt to install it.

GridSim must be compile in your computer. It is preapared to be compile and executed in Linux, this manual does not indicate how to install GridSim in other operating systems. In addition, this manual describes the instllation process for an Ubuntu distribution. GridSim is programmed in C++, thus, the C++ compiler is required. The simulator's compilation has been teste for g++ compiler version 4.4 or higher. The installation of this compiler is recommended:

```
$ sudo apt-get install g++
```

The compilation of *GridSim* is performed by *autotools* with *libtool*. Therefore, these tools should be installed in your computer:

```
$ sudo apt-get install automake autotools-dev libtool
```

There is a compilation script which prepare the compilation folder and compile the simulator. To execute this script:

```
$ ./build_simulator.sh
```

It creates the **build** folder. All compilation files are in this folder. After the compilation, the executable file is copied in the main folder of *GridSim*. This file is called **gridSim**.

8 2. Installation

2.1 Parallel launcher compilation

Different instances of *GridSim* can be launched in parallel. It allows to use the possibilities of a multicore machine or a cluster. This parallel execution is based on MPI. Thus, MPI should be installed in your computer:

```
$ sudo apt-get install openmpi-common
```

There is a compilation script for the compilation of the parallel launcher:

```
$ ./build_simulator_parallel.sh
```

After the compilation, the executable file is copied in the main folder of *GridSim*. It is called **gridSim_parallel**.

2.2 Documentation generation

This manual can be compile from the LATEX sources. The LATEX packages should be installed in your computer:

```
$ sudo apt-get install texlive-latex-extra texlive-latex-recommended texlive-bibtex-extra texlive-math-extra
```

There is compilation script for the documentation compilation:

```
$ ./build_doc.sh
```

After the compilation, the documentation file is copied in the main folder of *GridSim*. It is called **gridsim_manual.pdf**.

Execution

GridSim is executed by using its executable file gridSim. The execution requires a configuration file to configure the experiment that you want to simulate. It is launch through:

The simulator is launched during the stipulated time.

3.1 Experiment configuration

3. Execution

Examples

4.1 MuFCO demo

The configuration file for the MuFCO demo experiment can be executed with:

The MuFCO demo has the following configuration parameters:

Name	Description	Data type	Range
ctr_act_time	Simulation step after which the controllers start running	int	[0, int length]
wt_beg	Simulation step after which data starts being written	int	[0, int length]
wt_end	Simulation step when data stops to be written	int	[0, int length]

Table 4.1: MuFCO demo configuration parameters.