PATH-FLYER:

A BENCHMARK OF QUADROTOR PATH FOLLOWING ALGORITHMS

USER GUIDE

Authors:

Bartomeu Rubí, Adrián Ruiz, Bernardo Morcego, Ramon Pérez

Specific Center of Research CS2AC at Universitat Politècnica de Catalunya (UPC). Rbla Sant Nebridi 22, Terrassa (Spain). (email: tomeu.rubi, adrian.ruiz, bernardo.morcego, ramon.perez at upc.edu)

November 2018

Contents

1	Introduction	1	
2	Installing the Benchmark	2	
3	User Interface	3	
4	Modifying Parameters 4.1 Model Parameters	5	
	4.1 Model Parameters	5 7	
	4.3 Wind Disturbance	10	
	4.4 Measurement Noise	12	
5	Implement Your Own Algorithm		
6	Program a New Reference Path	19	

Introduction

This document is the user guide of the *Path-Flyer* simulator: a benchmark platform for testing path following algorithms on a quadrotor vehicle.

The benchmark has been build upon the Quad-Sim¹ platform, a quadrotor simulation tool developed on the Drexdel University for simulation and control of quadrotors. That is, it has been improved and modified to have a realistic mathematical and dynamic model of the quadrotor and its environment, to implement a proper structure to solve the path following problem and include various PF algorithms, and to incorporate new functionalities suited for the present benchmark.

Some key features of *Path-Flyer* are:

- It has a complete and experimentally validated model of the Asctec Hummingbird Quadrotor.
- Wind disturbance and noise on the measured states are modeled and can be customized.
- Two path following algorithms, Non-linear Guidance Law (NLGL) and Carrot-Chasing, and its adaptive versions have been implemented.
- Path following algorithms can be tested in diverse simulation scenarios.
- A user interface helps the user to modify test conditions and to explore simulation results.
- It is modular and programmable, meaning that new path following algorithms and/or reference paths can be incorporated with ease.

In this user guide it is found how to install the benchmark, how to use the user interface, how to modify parameters such as wind disturbance or noise, how to program a new algorithm and how to incorporate new path references.

Hope you find it useful. If you have any doubts do not hesitate to contact us.

Note: More information about the mathematical model of the quadrotor and its environment, the implemented path following algorithms and control structure, and the validation process of the *Path-Flyer* platform in the following publication:

Rubí, B., Ruiz, A., Morcego, B., and Pérez, R. (2019). Path-Flyer: A Benchmark of Quadrotor Path Following Algorithms. In 2019 15th IEEE International Conference on Control and Automation (ICCA).

 $^{^{1} \}rm https://github.com/dch33/Quad-Sim$

Installing the Benchmark

Installing the Benchmark is very simple: just copy the *Path-Flyer* folder provided within the benchmark files into the MATLAB work path. Make sure to add all folders and subfolders as shown in Fig. 1. Then open the Path_Flyer.slx Simulink model, and simulate!

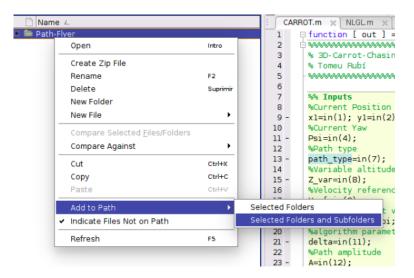


Figure 1: Add Folders and Subfolders.

Note: This benchmark has been developed with MATLAB R2017b version.

User Interface

In addition to the functionalities of the original Quad-Sim platform (grey blocks) this benchmark also presents a user interface to help the user to modify the path following simulation scenarios and explore simulation results. This user interface can be opened by double-clicking the *Path Following Controller* block in the Simulink model (Fig. 2).

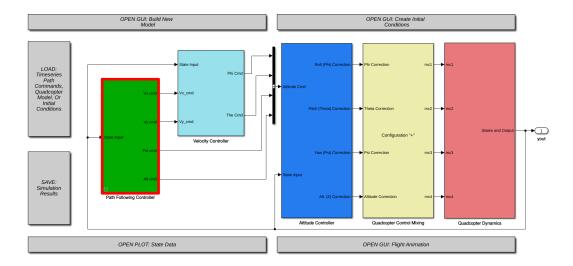


Figure 2: Double-click Path Following Controller to open the user interface.

The user interface (Fig. 3) is divided in two parts: the Path Following Control (red) and the Path Following Evaluation (blue).

In the Path Following Control part the user can:

- 1. Choose the path following algorithm from a drop-down list. In this version the available algorithms are *NLGL* and *Carrot-Chasing*, and its adaptive versions.
- 2. Specify the value of the control parameter of the algorithm (L for the NLGL and δ for the Carrot-Chasing). Some path following algorithms only have one parameter to tune (i.e. NLGL and Carrot-Chasing), however, if the algorithm has more than one control parameter, the other parameters will have to be declared inside the algorithm code.
- 3. Select the adaptive version of the chosen algorithm. That is, the control parameter or parameters of the algorithm are selected automatically. Note that if this option is active, the value of the control parameter specified previously is ignored. However, if there is not implemented an adaptive version of the algorithm, the simulator will run the standard version of it.

- 4. Choose the reference path from a drop-down list. In this version, four paths are available: a circle, a lemniscata (eight-shaped), a spiral and a line plus a circle path.
- 5. Specify the velocity reference of the Quadrotor.
- 6. Select amplitude of the path. That is, the radius of the circle (in the circular and line+circular paths), the radius of the small circle of the lemniscata and the growth rate of the spiral.
- 7. Select the number of turns on the path to be performed by the vehicle.
- 8. Select if the altitude of the path is variable or not. If this selector is not active the path reference is defined on the xy plane at 3 m of altitude. If it is active, the path's altitude will be increasing constantly upon the evolution of the γ parameter, starting at 3 m.

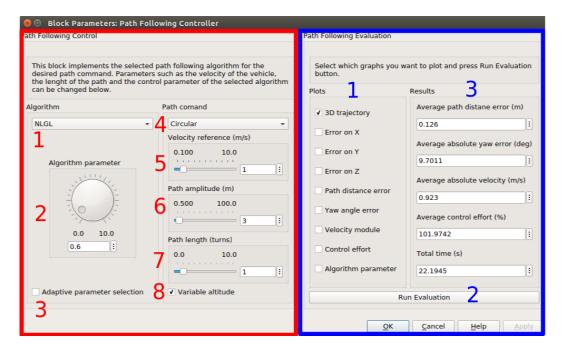


Figure 3: User interface.

In the Path Following Evaluation part the user can:

- 1. Choose which graphs want to plot.
- 2. Run an Evaluation that will plot the selected graphs and display relevant results of the previous performed simulation.
- 3. View relevant values of the last performed simulation, once the evaluation has been run.

Modifying Parameters

In this platform, diverse parameters can be modified: this section explains how to do it.

Model Parameters

The parameters of the quadrotor vehicle are stored in a .mat MATLAB structure, which is loaded at the time the Simulink model (Path_Flyer.slx) is opened. The structures are located in the /Quadcopter Structure Files/ folder. The fields of the model parameters structure are described in detail in the Quad-Sim documentation.

The user can modify the value of the parameters stored in the Hummingbird_+.mat structure, which contains the parameters of the Asctec Hummingbird Quadrotor (Fig. 4).

Field △	Value
⊞ g	9.8100
⊞ d	0.1710
⊞ mass	0.6980
ct	7.1103e-08
⊞ cq	1.0088e-09
⊞ Jx	0.0034
⊞ Jy	0.0034
⊞ Jz	0.0060
⊞ Jm	1.3020e-06
⊞ Jb	[0.0034 0 0;0 0.0034 0;0 0 0.0060]
⊞ Jbin∨	[291.4347 0 0;0 291.4347 0;0 0 166.6611]
	3x4 double
⊞ motor_m	0.0360
⊞ motor_dm	0.1710
⊞ motor_h	0.0160
ightharpoonup motor_r ightharpoonup motor	0.0139
ESC_m	0.0100
ESC_a	0.0130
ESC_b	0.0620
ESC_ds	0.0960
HUB_m	0.4140
HUB_r	0.0470
HUB_H	0.1100
drms_m	0.0250
drms_r arms_r	0.0075
arms_L	0.1340
🗮 arms_da	0.0580
T	0.0056
inThr minThr	5
cr	37.6250
b b	1075
H plusConfig	1

Figure 4: Parameter structure of the Asctec Hummingbird vehicle (Hummingbird_+.mat).

Alternatively, the user can create a new structure file and complete it with the parameters of other quadrotor vehicle. It is important to note this structure must contain the same fields as the original structure. Then, the structure file that is pre-load on the Path_Flyer.slx must be modified. To do so, follow in the Simulink model:

 $ext{File} o ext{Model Properties} o ext{Model Properties} o ext{Callbacks} o ext{PreLoad}$

and replace the line load(Hummingbird_+.mat) by load(YOUR_STRUCTURE.mat) where "YOUR_STRUCTURE" is the name of the structure you have created (Fig. 5).

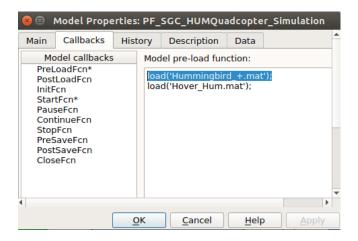


Figure 5: Modify load(Hummingbird_+.mat) to add your model structure name on the preload callback.

Initial Conditions

The initial conditions (IC) vector is stored in a .mat MATLAB structure, which, as the model parameter structure, is loaded at the time the Simulink model (Path_Flyer.slx) is opened. The IC structures are located in the /Initial Conditions/ folder. This structure is formed by the angular velocities (3, in deg/s), the Euler angles (3, in deg), the linear body velocities (3, in m/s), the position (3, in m) and the angular velocity of the motors (4, in rpm), as shown in Fig. 6.

Field ∠	Value
⊞ P	0
⊞ Q	0
⊞ R	0
H Phi	0
The	0
H Psi	0
⊞ ∪	0
₩V	0
₩	0
⊞ X	0
₩ Y	0
⊞ Z	3
₩1	4740
₩2	4740
₩3	4740
₩4	4740

Figure 6: Initial Conditions vector.

The original IC structure, Hover_Hum.mat, defines an initial altitude of 3 meters, and the initial angular velocity of the motors at the hover state of Hummingbird vehicle. It is important to mention that an initial position of (x = 0, y = 0, z = 0) implies that the vehicle will start on the initial point of the reference path. Meaning that it will not necessarily start at the origin point on the space. Similarly, a value of 0 on the Psi angle means that the vehicle starts with the correct orientation to follow the path. Changing the value of the IC vector will represent an increment over this point and orientation.

As with the Model Parameters structure, the user can either modify the original IC vector file, or create a new structure following the same fields. We recommend to keep the original file, as creating a new one implies modifying more than one thing on the Simulink model.

If a new IC vector file is created, it will be necessary to change the preloaded IC structure on the Path_Flyer.slx Simulink model. To this end, follow this:

File \rightarrow Model Properties \rightarrow Model Properties \rightarrow Callbacks \rightarrow PreLoad and replace the line load(Hover_Hum.mat) by load(YOUR_IC_STRUCTURE.mat) where "YOUR_IC_STRUCTURE" is the name of the structure you have created (Fig. 7).

Also, the user will need to modify a callback code on the Path Following Controller block user interface. To do this, right-click on *Path Following Controller* block on the Path_Flyer.slx Simulink model, and follow:

 $Mask \rightarrow Edit Mask \rightarrow Parameters & Dialog$ and then, open the callback of the " $Path_type$ " mask item as denoted in Fig. 9.

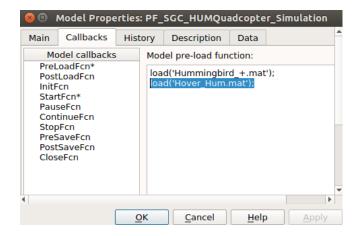


Figure 7: Modify load(Hover_Hum.mat) to add your IC structure name on the pre-load callback.

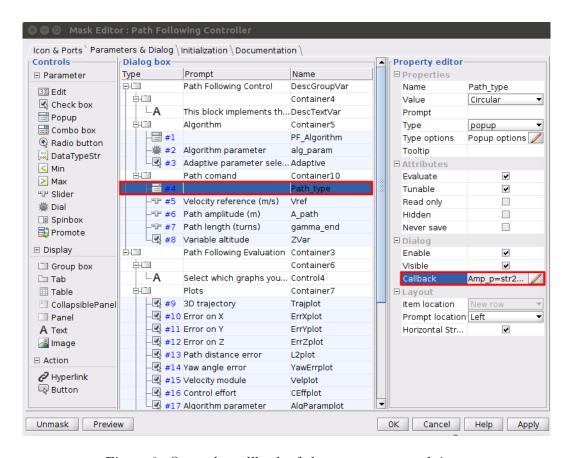


Figure 8: Open the callback of the Path_type mask item.

Finally, replace the line load(Hover_Hum.mat) by load(YOUR_IC_STRUCTURE.mat), where "YOUR_IC_STRUCTURE" is the name of the structure you have created.

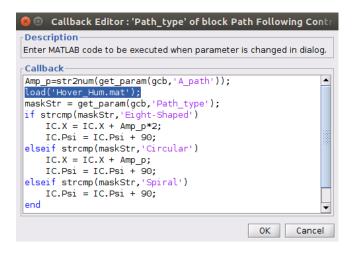


Figure 9: Modify load(Hover_Hum.mat) to add your IC structure name on the mask callbak.

Wind Disturbance

The wind disturbance section is found inside the *Quadcopter Dynamics* block on a block named *External Disturbances*, as shown in Fig. 10. In this block the user can generate any desired wind disturbance profile on each of the 3 axis. Wind disturbance signals are interpreted as wind velocities.

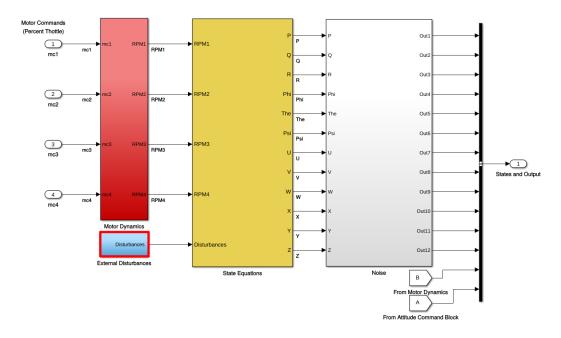


Figure 10: External Disturbance block is found inside the Quadcopter Dynamics block.

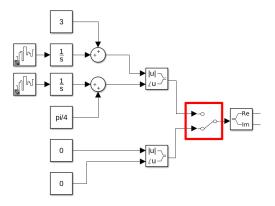


Figure 11: Wind disturbance velocities defined on the benchmark.

By default, there is not any active wind disturbance. Nevertheless, we defined a wind disturbance profile that can be activated anytime before or during a simulation by clicking on a selector, as shown in Fig. 11. The defined wind disturbance is a random walk signal on the x and y axis. This random walk is generated by integrating the signal of the Band-limited white noise simulink block to a constant value. This process is performed with the velocity module and direction of the wind, being 3 m/s and $\pi/2$ rad the constant values, respectively. The resultant wind disturbance signal is shown in Fig. 12.

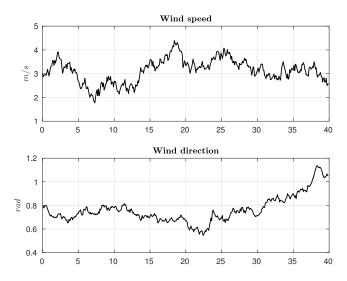


Figure 12: Wind disturbance generated with a random walk.

The user can modify the constant values of this random walk as well as the parameters of the *Band-limited white noise* block which are the seed of the random value generator, and other two values related to the frequency and amplitude of the signal. Alternatively, the user can create its own wind disturbance profile.

Measurement Noise

The Noise block is found inside the Quadcopter Dynamics block, as shown in Fig. 13.

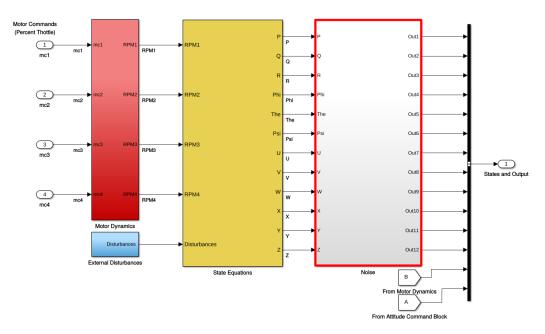


Figure 13: Noise block is found inside the Quadcopter Dynamics block.

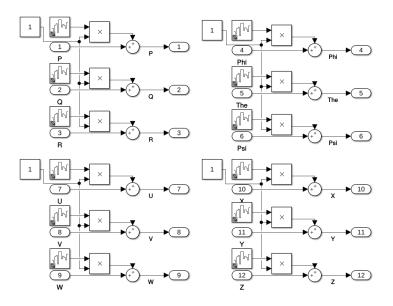


Figure 14: User can choose which states present noise and customize it.

In this block (Fig. 14) the user can choose which of the twelve measured states (position, velocity, orientation or angular velocity) must present noise. That is, if the value of the *Constant* simulink block related to each set of states is set to 1 noise will be introduced, and if constant is 0 it is disabled. Noise is generated by adding the signal of a *Band-limited white noise* block to the corresponding state. The user can customize the amplitude and frequency of the noise inside each of these blocks. In this benchmark noise signals have been set as those that resemble more the behavior of sensors of the real Asctec Hummingbird platform.

Implement Your Own Algorithm

In the /Functions/Path following/ folder (within the benchmark files) there exist a template function named NEW_ALGORITHM_FILE.m that the user can use to program a new path following algorithm in the benchmark. In this template, the inputs and outputs of the function and the initialization of the path are already defined. Note that those fields can not be modified. Additionally, there is an empty "TO DO" space where the user must implement its own algorithm.

Here are some considerations to care about when implementing a new algorithm:

- The inputs and outputs of the path following algorithm function are shown in Table 1. The user is free to use any of the stated inputs, but must fill all the outputs, with special attention to the velocities, altitude and orientation command references. The errors (ErrX, ErrY and ErrZ) must contain the distance between the vehicle and the closer point to the path on each axis. Remember to put a simulation ending condition (when vehicle completes the path) that set the variable End_Path to 1.
- The reference path is discrete and is stored in three vectors, one for each component $(P_x, P_y \text{ and } P_z)$. The path is created with a parametric function that depends on parameter γ $(P_x(\gamma), P_y(\gamma) \text{ and } P_z(\gamma))$. The γ parameter is defined from 0 to g_{end} . The value of g_{end} is obtained by multiplying the number of path "turns" (defined in the user interface) by 2π . Thus, it can be considered that γ is given in radians. Nevertheless, paths are defined with a precision of 1/1000 rads, meaning that $P_x(1000)$ corresponds to the value of the component x of the path at $\gamma = 1$ rad.
- When performing a simulation, the algorithm function is called continuously in the Path_Flyer simulink model. Thus, we recommend to use persistent variables to initialize constants in such a way that they are only defined on the first execution of the function.

Table 1: Parameters of algorithm template.

Name	Description			
INPUTS				
x, y, z	Position of the vehicle in the three coordinates (in meters).			
psi	ψ - yaw orientation (in radians).			
u, v	Body velocities (in m/s) on the x and y direction, respectively.			
Path_type	Variable the indicates which path must be created (circle, line, lemniscata,).			
z_var	Variable that indicates if the created path must vary the altitude or not.			
Vref	Desired velocity (in m/s).			
g_end	Last value of γ of the path (needed to create the path).			
ALG_PARAMTER	Parameter of the programmed algorithm that can be tunned in the user interface (Change the name to the corresponding parameter, if desired).			
A	Variable that indicates the amplitude of the path.			
	OUTPUTS			
u_cmd, v_cmd	Command for the body velocities on the x and y direction, respectively, sent to the velocity controller.			
psi_cmd	ψ_{cmd} - yaw orientation command sent to the attitude controller.			
z_cmd	Altitude command sent to the altitude controller.			
ErrX, ErrY, ErrZ	Instant distance error between the vehicle and the path on the x , y and z axis, respectively.			
End_Path	Boolean variable. If this variable is set to 1, simulation is stopped.			
out(9)	Output that can be used for debugging (currently linked to the algorithm parameter value).			

Once the algorithm is programed in the provided template and the name of the template file is changed with the algorithm's name, the following steps must be followed to include the algorithm in the benchmark:

First, open the PF.m file, found in the /Functions/Path following/ path, and add a call to the algorithm's function as shown in Fig. 15. That is, include the line

```
out = NEW_ALGORITHM_FILE(in(1:12));
```

inside an "elseif" statement of variable Algorithm, which indicates which algorithm must be executed. Again, "NEW_ALGORITHM_FILE" represents the name of your algorithm file. In this example, the incorporated algorithm is the third one, thus, the algorithm is called inside the a "Algorithm == 3" if statement.

```
□ function [ out ] = PF( in )
 %Inputs
 Algorithm = in(13);
 Adaptive = in(14);
 %PATH FOLLOWING ALGORITHM
     if Adaptive == 0
         %Not adaptive
         if Algorithm == 1
              %NLGL
             out = NLGL(in(1:12));
          elseif Algorithm == 2
              %Carrot Chasing
             out = CARROT(in(1:12));
          elseif Algorithm == 3
              %NEW ALGORITHM
              out = NEW ALGORITHM FILE(in(1:12));
                                  Non-Adaptive
     elseif Adaptive == 1
         %Adaptive
         if Algorithm == 1
             %NLGL
             out = NLGL_ad_2(in(1:12));
          elseif Algorithm == 2
              %Carrot Chasing
              out = CARROT_ad_2(in(1:12));
          elseif Algorithm == 3
              %NEW ALGORITHM
             out = NEW_ALGORITHM_FILE(in(1:12))
     end
                                      Adaptive
```

Figure 15: Add a call to the algorithm's function inside the Algorithm - if statement.

Note that there is another variable named Adaptive, which indicates if the executed algorithm is adaptive of not. If both adaptive and non-adaptive versions of the algorithm have been implemented, add a call to the non-adaptive version inside the "Adaptive == 0"

statement as shown:

```
if Adaptive == 0
  if Algorithm == 1
   ...
  elseif Algorithm == 3
    out = NEW_ALGORITHM_FILE(in(1:12));
  end
  ...
```

And add a call to the Adaptive version of it, inside the "Adaptive == 1" statement, as follows:

```
elseif Adaptive == 1
   if Algorithm == 1
   ...
   elseif Algorithm == 3
      out = NEW_ADAPTIVE_ALGORITHM_FILE(in(1:12));
   ...
   end
```

where "NEW_ADAPTIVE_ALGORITHM_FILE" is the name of the file wherein the adaptive version of the algorithm is implemented.

If only the non-adaptive version of the algorithm has been implemented, add a call to this function on both sides (when Adaptive == 0 and when Adaptive == 1), in such a way that the algorithm will be executed without taking into account the value of the "adaptive parameter selection" button on the user interface (Fig. 3).

After adding a call of the algorithm on the PF.m file, the user must add a new field on the user interface algorithm list, in order to include it in the set of algorithms that can be simulated in the benchmark. To do so, right-click on *Path Following Controller* block on the Path_Flyer.slx Simulink model, and open the list of parameters of the mask:

```
 \begin{tabular}{ll} Mask \to Edit Mask \to Parameters \& Dialog \\ and then, open the "popup options" of the "PF\_Algorithm" mask item as denoted in Fig. 16. \\ \end{tabular}
```

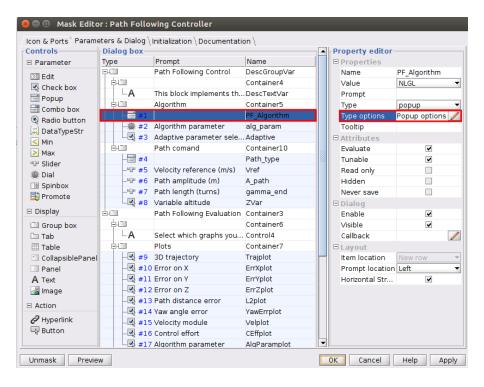


Figure 16: Open the *popup options* of the PF_Algorithm mask item.

Then, add the name of the implemented algorithm in the pop-up list (as it is desired that it appears in the user interface algorithm's list) as denoted in Fig. 17. It is important that the order of the algorithm names is preserved, since it is related to the value of the Algorithm parameter found in the PF.m file.

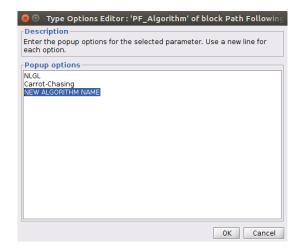


Figure 17: Add the name of the algorithm in list of the PF_Algorithm mask item.

Program a New Reference Path

In the /Functions/Path following/ folder (within the benchmark files) there is a function, named CreatePath.m, in which the reference paths are defined. To create a new reference path the user must program it inside a swith-case statement, as denoted by a "TO DO" inside the file (Fig. 18). The variable of the swith-case statement is named type and it is used to defined which path must be performed on each simulation (for instance, type = 1 means that an eight-shaped path will be simulated).

Figure 18: Create the path inside the swith-case statement on the CreatePath.m function.

The reference path is discrete and is stored in three vectors, one for each component (x, y and z). The path is programmed with a parametric function that depends on parameter gamma (x(gamma), y(gamma)) and z(gamma). Note that gamma is different from the γ parameter stated in the previous section. That is, γ is the arc length parameter used to define the path mathematically (given in radians), while gamma is a parameter used to discretize and program the path. A value of $\gamma = 1 \, rad$ corresponds to a value of 1000 of the parameter gamma, meaning that paths are defined with a precision of 1/1000 rad.

In the CreatePath.m function, parameter gamma is defined from 0 to g_final. g_final parameter is different from the g_end stated in the previous section. That is, g_end defines the last point of the path that is being simulated (in rad), while g_final is the total length of the defined path (in 1/1000 rad) and is usually longer than the simulated path (note that in a simulation, the traveled path length is not necessary the total length of the path). g_final is pre-defined to 100000, but its value can be modified to change the total path length if desired. Note that paths are created in such a way that a value of gamma of 6283 ($2 \cdot \pi \cdot 1000$) represents a full lap on the path. This condition must be taken into account when creating a new path.

Summarizing, to create a new path the user must fill all the three vectors components of the path (x, y and z) for each value of gamma, from 0 to g_final, assuring that a gamma = 6283 is when a lap is completed (if path is circular). This must be included inside an swith-case statement of the type variable on the CreatePath.m function.

After defining the path on the CreatePath.m file, the user must add a new field on the user interface path list, in order to include it in the set of paths that can be simulated in the benchmark. To do so, right-click on *Path Following Controller* block on the Path_Flyer.slx Simulink model, and open the list of parameters of the mask:

Mask \rightarrow Edit Mask \rightarrow Parameters & Dialog and then, open the "popup options" of the "Path_type" mask item as denoted in Fig. 19.

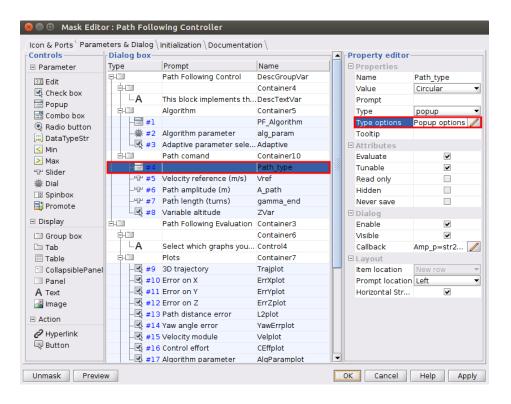


Figure 19: Open the *popup options* of the Path_type mask item.

Then, add the name of the created path in the pop-up list (as it is desired that it appears in the user interface path's list) as denoted in Fig. 20. It is important that the order of the paths names is preserved, since it is related to the value of the type parameter found in the CreatePath.m file.

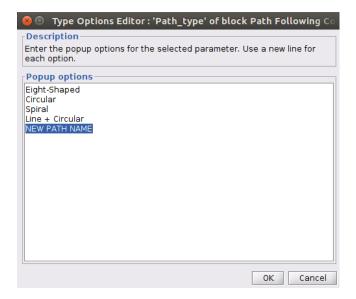


Figure 20: Add the name of the implemented algorithm in list of the Path_type mask item.