MAESTRO: MAchine and Environment Software Translation to ROs

Christopher T. Cannon and Jeffrey Segall
January 4, 2012

1 Introduction

This document describes the MAchine and Environment Software Translation to ROs (MAESTRO) software. This includes background information on the project, system architecture, and installation/running. The purpose of MAESTRO is to provide an environment to operate the HUBO++ robot both on the HUBO++ hardware and in a simulation environment.

2 Background

The project is funded by the National Science Foundation to work with the HUBO++ robot. The software is based on Conductor, a software framework designed to work with the previous HUBO model Jaemi. The MAESTRO software currently relies upon three other software components: (1) Orocos, (2) ROS and (3) OpenRAVE.

Orocos is a real-time toolkit to provide hard real-time communication. The previous Conductor software also relied upon this toolkit as well and we feel that it is the best open source tool which operates in a Linux environment.

The Robot Operating System (ROS) is an open source set of libraries and tools to help software developers create robot applications. ROS provides hardware abstraction, device drivers, libraries, visualizers, message-passing, package management, and other functionality. We incorporated ROS into the MAESTRO software so that other components could easily communicate over its message passing interface.

OpenRAVE is an open source simulation environment for testing, developing, and deploying motion planning algorithms in real-world robotics applications. OpenRAVE focuses on simulation and analysis of kinematic and geometric information related to motion planning. MAESTRO currently only supports OpenRAVE as a simulation environment. However, we do plan to incorporate other simulation environments (e.g., SimLab).

3 MAESTRO Architecture

This section described the MAESTRO architecture and how some of the source files included in the distribution tie into the operation of the software.

The MAESTRO architecture, shown in Figure 3, depicts the main components of the system. First is the MAESTRO component, its main class located in maestro/src/HuboCtrl.cpp, is written in C++ to interact with Oroccos and is the interface for all live hardware or simulation interactions. It utilizes the Oroccos real-time toolkit to ensure hard real-time communication. When communicating to the live HUBO++ hardware the MAESTRO software communicates through Oroccos and outputs CAN packets on the CAN bus. These CAN packets signal the physical motors to fire on the HUBO++ robot.

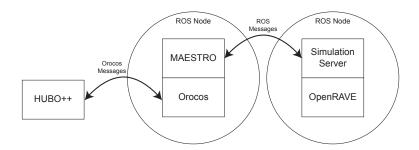


Figure 1: MAESTRO architecture.

When communicating with a simulation environment (at this moment that can only be OpenRAVE) the MAESTRO software utilizes the ROS communication bus to pass ROS messages to another ROS node which contains the OpenRAVE simulation server. The OpenRAVE simulation server, written in Python and located in maestro/src/maestro.py, initializes and controls the OpenRAVE simulation environment with the Jaemi HUBO model. Essentially the simulation server listens on a ROS topic for control messages and moves the specified joint to the specified angle in the simulator. The OpenRAVE component is merely the GUI which displays the simulator to the user.

4 Using MAESTRO

This section describes how to install and run MAESTRO.

4.1 Installation

To install MAESTRO execute the following steps:

- 1. Clone the git repository: git clone git@github.com:chriscannon/maestro.git
- 2. Change into the MAESTRO directory: cd maestro
- 3. Run the install script as root: sudo ./install.sh
- 4. Edit /opt/ros/diamondback/setup.sh to include the current location of the MAESTRO code under the ROS_PACKAGE_PATH variable

Depending on the system, the install can take between 20-to-30 minutes as the entire ROS and Orocos framework have to be installed and the OpenRAVE plugin compiled from source.

4.2 Running

To run MAESTRO execute the run script ./run.sh. This will launch Orocos and the OpenRAVE GUI to display the simulated HUBO robot.