streamout 0.1.0

Generated by Doxygen 1.9.5

1	Hierarchical Index	1
	1.1 Class Hierarchy	1
2	Class Index	1
	2.1 Class List	1
2	File Index	2
J	3.1 File List	2
		_
4	Class Documentation	4
	4.1 Buffer Class Reference	4
	4.1.1 Detailed Description	5
	4.1.2 Constructor & Destructor Documentation	5
	4.1.3 Member Function Documentation	6
	4.2 BufferLooper< SOURCE, DESTINATION > Class Template Reference	7
	4.2.1 Detailed Description	8
	4.2.2 Constructor & Destructor Documentation	8
	4.2.3 Member Function Documentation	8
	4.3 BufferLooperCounter Struct Reference	12
	4.3.1 Detailed Description	12
	4.3.2 Member Function Documentation	12
	4.3.3 Member Data Documentation	13
	4.4 DIF Class Reference	14
	4.4.1 Detailed Description	15
	4.4.2 Member Function Documentation	15
	4.5 DIFPtr Class Reference	17
	4.5.1 Detailed Description	17
	4.6 DIFSlowControl Class Reference	19
	4.6.1 Detailed Description	20
	4.6.2 Constructor & Destructor Documentation	20
	4.6.3 Member Function Documentation	20
	4.7 Event Class Reference	22
	4.7.1 Detailed Description	22
	4.7.2 Member Function Documentation	22
	4.8 Exception Class Reference	23
	4.8.1 Detailed Description	24
	4.8.2 Constructor & Destructor Documentation	24
	4.8.3 Member Function Documentation	24
	4.9 Hit Class Reference	25
	4.9.1 Detailed Description	25
	4.9.2 Member Function Documentation	25
	4.10 Interface Class Reference	29
	4.10.1 Detailed Description	29

	4.10.2 Constructor & Destructor Documentation	29
	4.10.3 Member Function Documentation	30
	4.10.4 Member Data Documentation	32
4.11	InterfaceReader Class Reference	33
	4.11.1 Detailed Description	33
	4.11.2 Constructor & Destructor Documentation	33
	4.11.3 Member Data Documentation	34
4.12	InterfaceWriter Class Reference	34
	4.12.1 Detailed Description	34
	4.12.2 Constructor & Destructor Documentation	34
	4.12.3 Member Function Documentation	35
4.13	LCIOWriter Class Reference	36
	4.13.1 Detailed Description	36
	4.13.2 Constructor & Destructor Documentation	36
	4.13.3 Member Function Documentation	37
4.14	Payload Class Reference	40
	4.14.1 Detailed Description	41
	4.14.2 Constructor & Destructor Documentation	41
	4.14.3 Member Function Documentation	41
	4.14.4 Member Data Documentation	43
4.15	Payload100 Class Reference	43
	4.15.1 Detailed Description	44
	4.15.2 Constructor & Destructor Documentation	44
	4.15.3 Member Function Documentation	44
4.16	Payload150 Class Reference	47
	4.16.1 Detailed Description	47
	4.16.2 Constructor & Destructor Documentation	48
	4.16.3 Member Function Documentation	48
4.17	PayloadLoader Class Reference	50
	4.17.1 Detailed Description	50
	4.17.2 Constructor & Destructor Documentation	50
	4.17.3 Member Function Documentation	50
4.18	RawBufferNavigator Class Reference	51
	4.18.1 Detailed Description	51
	4.18.2 Constructor & Destructor Documentation	52
	4.18.3 Member Function Documentation	52
4.19	RawdataReader Class Reference	53
	4.19.1 Detailed Description	54
	4.19.2 Constructor & Destructor Documentation	54
	4.19.3 Member Function Documentation	54
4.20	ROOTWriter Class Reference	56
	4.20.1 Detailed Description	57

	4.20.2 Constructor & Destructor Documentation	57
	4.20.3 Member Function Documentation	57
	4.21 textDump Class Reference	60
	4.21.1 Detailed Description	61
	4.21.2 Constructor & Destructor Documentation	61
	4.21.3 Member Function Documentation	61
	4.22 Timer Class Reference	63
	4.22.1 Detailed Description	63
	4.22.2 Member Function Documentation	63
	4.23 Version Class Reference	63
	4.23.1 Detailed Description	64
	4.23.2 Constructor & Destructor Documentation	64
	4.23.3 Member Function Documentation	64
	Tile Desumentation	CE
ו כ	File Documentation	65
	5.1 libs/core/include/Bits.h File Reference	65 66
	5.1.2 Typedef Documentation	66
	5.1.3 Function Documentation	67
	5.1.3 Function Documentation	67
	5.3 libs/core/include/Buffer.h File Reference	_
	5.3.1 Detailed Description	67
	5.4 Buffer.h	67
	5.5 libs/core/include/BufferLooper.h File Reference	68 68
	•	
	5.5.1 Detailed Description	
	·	
	5.7 libs/core/include/BufferLooperCounter.h File Reference	
	5.7.1 Detailed Description	
	5.8 BufferLooperCounter.h	73
	5.9 libs/core/include/DetectorId.h File Reference	73
	5.9.1 Detailed Description	73 70
		73
	5.10 DetectorId.h	74 74
	5.11 libs/core/include/DIFSlowControl.h File Reference	74 74
	5.11.1 Detailed Description	74
	5.11.2 Function Documentation	74
	5.12 DIFSlowControl.h	75
	5.13 libs/core/include/Exception.h File Reference	76 70
	5.13.1 Detailed Description	76 76
	5.14 Exception.h	76
	5.15 libs/core/include/Filesystem.h File Reference	77 77
	o con coeramen describino	

5.15.2 Function Documentation	. 77
5.16 Filesystem.h	. 78
5.17 libs/core/include/Formatters.h File Reference	. 78
5.17.1 Detailed Description	. 78
5.17.2 Function Documentation	. 78
5.18 Formatters.h	. 82
5.19 libs/core/include/Interface.h File Reference	. 82
5.19.1 Detailed Description	. 83
5.19.2 Enumeration Type Documentation	. 83
5.20 Interface.h	. 84
5.21 libs/core/include/Payload.h File Reference	. 85
5.21.1 Detailed Description	. 85
5.22 Payload.h	. 85
5.23 libs/core/include/Payload100.h File Reference	. 86
5.23.1 Detailed Description	. 86
5.24 Payload100.h	. 86
5.25 libs/core/include/Payload150.h File Reference	. 87
5.25.1 Detailed Description	. 87
5.26 Payload150.h	. 88
5.27 libs/core/include/PayloadLoader.h File Reference	. 88
5.27.1 Detailed Description	. 88
5.28 PayloadLoader.h	. 89
5.29 libs/core/include/RawBufferNavigator.h File Reference	. 89
5.29.1 Detailed Description	. 89
5.30 RawBufferNavigator.h	. 89
5.31 libs/core/include/Timer.h File Reference	. 90
5.31.1 Detailed Description	. 90
5.32 Timer.h	. 90
5.33 libs/core/include/Utilities.h File Reference	. 90
5.33.1 Detailed Description	. 91
5.33.2 Function Documentation	. 91
5.34 Utilities.h	. 91
5.35 libs/core/include/Version.h File Reference	. 91
5.35.1 Detailed Description	. 92
5.36 Version.h	. 92
5.37 libs/core/include/Words.h File Reference	. 92
5.37.1 Detailed Description	. 92
5.37.2 Enumeration Type Documentation	. 92
5.38 Words.h	. 93
5.39 libs/core/src/Bits.cc File Reference	
5.39.1 Detailed Description	. 93
5.39.2 Function Documentation	93

5.40 Bits.cc	94
5.41 libs/core/src/BufferLooperCounter.cc File Reference	94
5.42 BufferLooperCounter.cc	94
5.43 libs/core/src/DIFSlowControl.cc File Reference	94
5.43.1 Detailed Description	95
5.43.2 Function Documentation	95
5.44 DIFSlowControl.cc	95
5.45 libs/core/src/Filesystem.cc File Reference	98
5.45.1 Detailed Description	98
5.45.2 Function Documentation	99
5.46 Filesystem.cc	99
5.47 libs/core/src/Formatters.cc File Reference	100
5.47.1 Detailed Description	100
5.47.2 Function Documentation	100
5.48 Formatters.cc	104
5.49 libs/core/src/Payload100.cc File Reference	105
5.49.1 Detailed Description	106
5.49.2 Enumeration Type Documentation	106
5.50 Payload100.cc	109
5.51 libs/core/src/Payload150.cc File Reference	112
5.51.1 Detailed Description	113
5.51.2 Enumeration Type Documentation	113
5.52 Payload150.cc	116
5.53 libs/core/src/RawBufferNavigator.cc File Reference	118
5.53.1 Detailed Description	118
5.54 RawBufferNavigator.cc	118
5.55 libs/core/src/Version.cc File Reference	118
5.55.1 Detailed Description	118
5.56 Version.cc	119
5.57 libs/interface/Dump/include/textDump.h File Reference	119
5.57.1 Detailed Description	
5.58 textDump.h	119
5.59 libs/interface/Dump/src/textDump.cc File Reference	120
5.59.1 Detailed Description	120
5.60 textDump.cc	120
5.61 libs/interface/LCIO/include/LCIOWriter.h File Reference	
5.61.1 Detailed Description	121
5.62 LCIOWriter.h	
5.63 libs/interface/LCIO/src/LCIOWriter.cc File Reference	122
5.63.1 Detailed Description	122
5.64 LCIOWriter.cc	122
5.65 libs/interface/RawDataReader/include/RawdataReader.h File Reference	123

5.65.1 Detailed Description	124
5.66 RawdataReader.h	124
5.67 libs/interface/RawDataReader/src/RawdataReader.cc File Reference	124
5.67.1 Detailed Description	125
5.68 RawdataReader.cc	125
5.69 libs/interface/ROOT/include/DIF.h File Reference	126
5.69.1 Detailed Description	127
5.69.2 Typedef Documentation	127
5.70 DIF.h	127
5.71 libs/interface/ROOT/include/DIFLinkDef.h File Reference	128
5.71.1 Detailed Description	128
5.72 DIFLinkDef.h	128
5.73 libs/interface/ROOT/include/Event.h File Reference	128
5.73.1 Detailed Description	128
5.73.2 Typedef Documentation	129
5.74 Event.h	129
5.75 libs/interface/ROOT/include/EventLinkDef.h File Reference	129
5.75.1 Detailed Description	129
5.76 EventLinkDef.h	130
5.77 libs/interface/ROOT/include/Hit.h File Reference	130
5.77.1 Detailed Description	130
5.78 Hit.h	130
5.79 libs/interface/ROOT/include/HitLinkDef.h File Reference	131
5.79.1 Detailed Description	131
5.80 HitLinkDef.h	131
5.81 libs/interface/ROOT/include/ROOTWriter.h File Reference	131
5.82 ROOTWriter.h	132
5.83 libs/interface/ROOT/src/DIF.cc File Reference	132
5.83.1 Detailed Description	132
5.84 DIF.cc	133
5.85 libs/interface/ROOT/src/Event.cc File Reference	133
5.85.1 Detailed Description	133
5.86 Event.cc	133
5.87 libs/interface/ROOT/src/Hit.cc File Reference	134
5.87.1 Detailed Description	134
5.88 Hit.cc	134
5.89 libs/interface/ROOT/src/ROOTWriter.cc File Reference	135
5.89.1 Detailed Description	135
5.90 ROOTWriter.cc	135

1 Hierarchical Index

1.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

Butter	4
Payload	40
Payload100	43
Payload150	47
BufferLooper < SOURCE, DESTINATION >	7
BufferLooperCounter	12
DIFPtr	17
DIFSlowControl	19
Exception	23
Interface	29
InterfaceReader	33
RawdataReader	53
InterfaceWriter	34
LCIOWriter	36
ROOTWriter	56
textDump	60
PayloadLoader	50
RawBufferNavigator	51
Timer TObject	63
DIF	14
Event	22
Hit semver::version	25
Version	63

2 Class Index

2.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

3 File Index 3

Buffer	4
BufferLooper< SOURCE, DESTINATION >	7
BufferLooperCounter	12
DIF	14
DIFPtr M3 MICROROC and HARDROC2 dataformat	17
DIFSlowControl	19
Event	22
Exception	23
Hit	25
Interface	29
InterfaceReader	33
InterfaceWriter	34
LCIOWriter	36
Payload	40
Payload100	43
Payload150	47
PayloadLoader	50
RawBufferNavigator Class to navigate in the raw data buffer parse the header and send the payload as Buffer	51
RawdataReader	53
ROOTWriter	56
textDump	60
Timer	63
Version	63
3 File Index	
3.1 File List	
Here is a list of all files with brief descriptions:	
libs/core/include/Bits.h	65
libs/core/include/Buffer.h	67
libs/core/include/BufferLooper.h	68

3

libs/core/include/BufferLooperCounter.h	72
libs/core/include/DetectorId.h	73
libs/core/include/DIFSlowControl.h	74
libs/core/include/Exception.h	76
libs/core/include/Filesystem.h	77
libs/core/include/Formatters.h	78
libs/core/include/Interface.h	82
libs/core/include/Payload.h	85
libs/core/include/Payload100.h	86
libs/core/include/Payload150.h	87
libs/core/include/PayloadLoader.h	88
libs/core/include/RawBufferNavigator.h	89
libs/core/include/Timer.h	90
libs/core/include/Utilities.h	90
libs/core/include/Version.h	91
libs/core/include/Words.h	92
libs/core/src/Bits.cc	93
libs/core/src/BufferLooperCounter.cc	94
libs/core/src/DIFSlowControl.cc	94
libs/core/src/Filesystem.cc	98
libs/core/src/Formatters.cc	100
libs/core/src/Payload100.cc	105
libs/core/src/Payload150.cc	112
libs/core/src/RawBufferNavigator.cc	118
libs/core/src/Version.cc	118
libs/interface/Dump/include/textDump.h	119
libs/interface/Dump/src/textDump.cc	120
libs/interface/LCIO/include/LCIOWriter.h	121
libs/interface/LCIO/src/LCIOWriter.cc	122
libs/interface/RawDataReader/include/RawdataReader.h	123
libs/interface/RawDataReader/src/RawdataReader.cc	124
libs/interface/ROOT/include/DIF.h	126

4 Class Documentation 5


libs/interface/ROOT/include/DIFLinkDef.h	128
libs/interface/ROOT/include/Event.h	128
libs/interface/ROOT/include/EventLinkDef.h	129
libs/interface/ROOT/include/Hit.h	130
libs/interface/ROOT/include/HitLinkDef.h	131
libs/interface/ROOT/include/ROOTWriter.h	131
libs/interface/ROOT/src/DIF.cc	132
libs/interface/ROOT/src/Event.cc	133
libs/interface/ROOT/src/Hit.cc	134
libs/interface/ROOT/src/ROOTWriter.cc	135

4 Class Documentation

4.1 Buffer Class Reference

#include <libs/core/include/Buffer.h>

Inheritance diagram for Buffer:

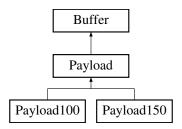

Public Member Functions

- Buffer ()
- virtual \sim Buffer ()
- Buffer (const bit8_t b[], const std::size_t &i)
- Buffer (const char b[], const std::size_t &i)
- template<typename T >
 - Buffer (const std::vector< T > &rawdata)
- template<typename T , std::size_t N>
 - Buffer (const std::array< T, N > &rawdata)
- std::size_t size () const
- std::size_t capacity () const
- bool empty ()
- void set (unsigned char *b)
- void set (const Buffer &buffer)
- bit8 t * begin () const
- bit8_t * end () const
- bit8_t & operator[] (const std::size_t &pos)
- bit8_t & operator[] (const std::size_t &pos) const
- void setSize (const std::size_t &size)

4.1.1 Detailed Description

Definition at line 14 of file Buffer.h.

4.1.2 Constructor & Destructor Documentation

```
4.1.2.1 Buffer() [1/5] Buffer::Buffer ( ) [inline]
Definition at line 17 of file Buffer.h.
00017 : m_Buffer(nullptr), m_Size(0), m_Capacity(0) {}
4.1.2.2 \sim Buffer() virtual Buffer::\sim Buffer() [inline], [virtual]
Definition at line 18 of file Buffer.h.
00018 {}
4.1.2.3 Buffer() [2/5] Buffer::Buffer (
             const bit8_t b[],
             const std::size_t & i ) [inline]
Definition at line 19 of file Buffer.h.
00019 : m_Buffer(const_cast<bit8_t*>(&b[0])), m_Size(i), m_Capacity(i) {}
4.1.2.4 Buffer() [3/5] Buffer::Buffer (
             const char b[],
             const std::size_t & i ) [inline]
Definition at line 20 of file Buffer.h.
00020 : m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const bit8_t*>(&b[0]))), m_Size(i * sizeof(char)), m_Capacity(i * sizeof(char)) {}
4.1.2.5 Buffer() [4/5] template<typename T >
Buffer::Buffer (
             const std::vector< T > & rawdata ) [inline]
Definition at line 21 of file Buffer.h.
```

```
4.1.2.6 Buffer() [5/5] template<typename T , std::size_t N>
Buffer::Buffer (
              const std::array< T, N > & rawdata ) [inline]
Definition at line 22 of file Buffer.h.
00022 : m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const_bit8_t*>(rawdata.data())))),
     m_Size(rawdata.size() * sizeof(T)), m_Capacity(rawdata.size() * sizeof(T)) {}
4.1.3 Member Function Documentation
4.1.3.1 begin() bit8_t * Buffer::begin ( ) const [inline]
Definition at line 35 of file Buffer.h.
00035 { return m_Buffer; }
4.1.3.2 capacity() std::size_t Buffer::capacity ( ) const [inline]
Definition at line 25 of file Buffer.h.
00025 { return m_Capacity; }
4.1.3.3 empty() bool Buffer::empty ( ) [inline]
Definition at line 27 of file Buffer.h.
00027 { return m_Size == 0; }
4.1.3.4 end() bit8_t * Buffer::end ( ) const [inline]
Definition at line 36 of file Buffer.h.
00036 { return m_Buffer + m_Size; }
4.1.3.5 operator[]() [1/2] bit8_t & Buffer::operator[] (
              const std::size_t & pos ) [inline]
Definition at line 37 of file Buffer.h.
00037 { return m_Buffer[pos]; }
```

```
4.1.3.6 operator[]() [2/2] bit8_t & Buffer::operator[] (
               const std::size_t & pos ) const [inline]
Definition at line 38 of file Buffer.h.
00038 { return m_Buffer[pos]; }
4.1.3.7 set() [1/2] void Buffer::set (
               const Buffer & buffer ) [inline]
Definition at line 29 of file Buffer.h.
         m_Buffer = buffer.begin();
m_Size = buffer.size();
m_Capacity = buffer.capacity();
00031
00032
00033
00034 }
4.1.3.8 set() [2/2] void Buffer::set (
               unsigned char *\ b ) [inline]
Definition at line 28 of file Buffer.h.
00028 { m_Buffer = b; }
4.1.3.9 setSize() void Buffer::setSize (
               const std::size_t & size ) [inline]
Definition at line 40 of file Buffer.h.
00040 { m_Size = size; }
4.1.3.10 size() std::size_t Buffer::size ( ) const [inline]
Definition at line 24 of file Buffer.h.
00024 { return m_Size; }
```

The documentation for this class was generated from the following file:

• libs/core/include/Buffer.h

4.2 BufferLooper < SOURCE, DESTINATION > Class Template Reference

#include <libs/core/include/BufferLooper.h>

Public Member Functions

- BufferLooper (SOURCE &source, DESTINATION &dest, bool debug=false)
- void addSink (const spdlog::sink_ptr &sink, const spdlog::level::level_enum &level=spdlog::get_level())
- void loop (const std::uint32_t &m_NbrEventsToProcess=0)
- void printAllCounters ()
- std::shared_ptr< spdlog::logger > log ()
- void setDetectorIDs (const std::vector< DetectorID > &detectorIDs)

4.2.1 Detailed Description

```
template<typename SOURCE, typename DESTINATION> class BufferLooper< SOURCE, DESTINATION >
```

Definition at line 27 of file BufferLooper.h.

4.2.2 Constructor & Destructor Documentation

```
4.2.2.1 BufferLooper() template<typename SOURCE , typename DESTINATION >
BufferLooper< SOURCE, DESTINATION >::BufferLooper (
                SOURCE & source,
                DESTINATION & dest,
                bool debug = false ) [inline]
Definition at line 30 of file BufferLooper.h.
                                                                                     : m_Source(source),
      m_Destination(dest), m_Debug(debug)
00031
           m_Logger = spdlog::create<spdlog::sinks::null_sink_mt>("streamout");
if(!spdlog::get("streamout")) {    spdlog::register_logger(m_Logger);  }
00032
00033
00034
          m Source.setLogger(m Logger);
00035
           m Destination.setLogger(m Logger);
00036
```

4.2.3 Member Function Documentation

```
4.2.3.1 addSink() template<typename SOURCE , typename DESTINATION >
void BufferLooper< SOURCE, DESTINATION >::addSink (
             const spdlog::sink_ptr & sink,
              const spdlog::level::level_enum & level = spdlog::qet_level() ) [inline]
Definition at line 38 of file BufferLooper.h.
00039
         sink->set level(level);
00040
00041
         m_Sinks.push_back(sink);
00042
         m_Logger = std::make_shared<spdlog::logger>("streamout", begin(m_Sinks), end(m_Sinks));
00043
         m_Source.setLogger(m_Logger);
00044
         m_Destination.setLogger(m_Logger);
00045
```

```
4.2.3.2 log() template<typename SOURCE , typename DESTINATION >
std::shared_ptr< spdlog::logger > BufferLooper< SOURCE, DESTINATION >::log ( ) [inline]
Definition at line 234 of file BufferLooper.h.
00234 { return m_Logger; }
4.2.3.3 loop() template<typename SOURCE , typename DESTINATION >
void BufferLooper< SOURCE, DESTINATION >::loop (
            const std::uint32_t & m_NbrEventsToProcess = 0 ) [inline]
Definition at line 47 of file BufferLooper.h.
00048
         // clang-format off
00049
00050
        fmt::print(fg(fmt::color::medium_orchid) | fmt::emphasis::bold,
00052 " SSSSSSSSSSSSSS
     tttt\n"
00054 "S:::::SSSSSS::::::S t::::t
     t::::t\n"
00055 "S:::::S
                SSSSSSS t::::t
     t:::::t\n"
               00056 "S:::::S
mmmmmm mmmmmm 00057 "S:::::S +...
              \texttt{m} :::::: \texttt{mm} \quad \texttt{oo} :::::: \texttt{oo} \quad \texttt{u} :::: \texttt{u} \qquad \texttt{u} :::: \texttt{ut} :::: \texttt{t} \backslash \texttt{n} \texttt{"}
     mm::::::m
00058 " S::::SSSS
                  t:::::eeeaaaaaaaaa::::a
a::::a
m:::::mmm::::::mo::::o
     m::::m m::::mo::::o
S:::::S t:::::t ttttttr::::r
                                                      e::::::e
                                                                      a::::a a:::::a m:::::m
m::::m m::::mo::::o o::::ou:::::uuuu:::::u t:::::t ttttt\n"
00064 "SSSSSSS S::::S t:::::tttt:::::r e:::::e
                                                                      a::::a
                                                                              a:::::a m:::::m
     m::::m m::::mo:::::00000:::::0u:::::::::::uu
                                                  t:::::tttt::::t\n"
00065 "S::::::SSSSSS:::::S tt::::::::tr:::::r
                                                       e::::::eeeeeeeea:::::aaaa::::::a m::::m
     \texttt{m::::m} \qquad \texttt{m::::mo:::::::::::o} \quad \texttt{u:::::::::::u}
                                                   tt:::::::t\n"
ee::::::::: a::::::aa:::am::::m
            tt::::::::tt\n"
     m::::m
00067 " SSSSSSSSSSSSS
                          tttttttttt rrrrrr
                                                          eeeeeeeeee aaaaaaaaa aaammmmmm
                                                   ttttttttttt {}\n"
            mmmmmm
                   00000000000
                                    uuuuuuu uuuu
00068 "\n",
00069 \ \text{fmt::format(fg(fmt::color::red)} \ | \ \text{fmt::emphasis::bold, "v(}", \ \text{streamout\_version.to\_string()));} \\
00070
       // clang-format on
        00071
        log() -> info("Streamout Version : {}", streamout_version.to_string());
log() -> info("Using InterfaceReader {} version {}", m_Source.getName(),
00072
     m Source.getVersion().to string());
00074
        log()->info("Using InterfaceWriter {} version {}", m_Destination.getName(),
    m_Destination.getVersion().to_string());
00075
00076
         if (!m Destination.checkCompatibility(m Source.getName(), m Source.getVersion().to string()))
          log()->critical("{} version {} is not compatible with {} version {} ! ", m_Source.getName(),
00078
     \verb|m_Source.getVersion().to_string(), \verb|m_Destination.getName(), \verb|m_Destination.getVersion().to_string())|; \\
          log()->info("Compatible Interfaces for {} are", m_Destination.getName());
for(std::map<std::string, std::string>::iterator it = m_Destination.getCompatibility().begin();
00079
08000
     it != m_Destination.getCompatibility().end(); ++it) { log()->info("{} version {}", it->first,
     it->second); }
00081
          std::exit(-1);
00082
00083
        if(!m_DetectorIDs.empty())
00084
00085
          std::string ids;
00086
          for(std::vector<DetectorID>::const_iterator it = m_DetectorIDs.cbegin(); it !=
     m_DetectorIDs.cend(); ++it) ids += std::to_string(static_cast<std::uint16_t>(*it)) + ";";
00087
          log()->info("Detector ID(s) other than {} will be ignored", ids);
00088
00089
        RawBufferNavigator bufferNavigator;
00090
00091
        Timer
                        timer;
00092
        timer.start();
```

```
00093
         m_Source.start();
          m_Destination.start();
00094
00095
          while(m_Source.nextEvent() && m_NbrEventsToProcess >= m_NbrEvents)
00096
00097
           m Destination.setEventNumber(m Source.getEventNumber());
00098 /*************
00099 /*** START EVENT ***/
00100
           m_Source.startEvent();
00101
            m_Destination.startEvent();
00102 /**************
00103
00104
00105
           m_Logger->warn("===*** Event {} ***===", m_NbrEvents);
           while (m_Source.nextDIFbuffer())
00106
00107
00108
              const Buffer& buffer = m_Source.getBuffer();
00109
00110
             bufferNavigator.setBuffer(buffer);
00111
              if(std::find(m_DetectorIDs.begin(), m_DetectorIDs.end(),
     static_cast<DetectorID>(bufferNavigator.getDetectorID())) == m_DetectorIDs.end())
00112
             {
00113
               m_Logger->debug("Ignoring detector ID : {}", bufferNavigator.getDetectorID());
00114
               continue;
00115
00116
00117
             std::int32_t idstart = bufferNavigator.getStartOfPayload();
              if(m_Debug && idstart == -1) m_Logger->info(to_hex(buffer));
00118
00119
             c.DIFStarter[idstart]++;
00120
00121 /*************
00122 /*** START DIF ***/
00123
             m_Source.startDIF();
00124
             m_Destination.startDIF();
00125 /***************
00126
00127
             PayloadLoader payloadLoader;
00128
             std::unique_ptr<Payload>& d = payloadLoader.getPayload(bufferNavigator.getDetectorID());
00130
              if(d == nullptr)
00131
             {
00132
               \label{eq:m_logger} $$m_logger->error("streamout don't know how to parse the payload for detector_id {} !
     SKIPPING !", bufferNavigator.getDetectorID());
00133
               continue;
00134
              }
00135
00136
              // This is really a big error so skip DIF entirely if exception occurs
00137
              try
00138
             {
00139
               d->setBuffer(bufferNavigator.getPavload());
                m_Logger->info("Parsing payload DIF_ID {} (detector_id {})", d->getDIFid(),
00140
     bufferNavigator.getDetectorID());
00141
00142
              catch(const Exception& e)
00143
              {
               m_Logger->error("{}", e.what());
00144
00145
               continue;
00146
00147
              if(buffer.end() != d->end()) m_Logger->error("DIF BUFFER END {} {} ", fmt::ptr(buffer.end()),
     fmt::ptr(d->end()));
00149
             assert(buffer.end() == d->end());
00150
00151
              c.DIFPtrValueAtReturnedPos[d->begin()[d->getEndOfDIFData() - 3]]++;
             assert(d->begin()[d->getEndOfDIFData() - 3] == 0xa0);
00152
00153
00154
              c.SizeAfterDIFPtr[d->getSizeAfterDIFPtr()]++;
00155
              m\_Destination.processDIF(*d);
              for(std::size_t i = 0; i < d->getNumberOfFrames(); ++i)
00156
00157
             {
00158
00159
                m_Source.startFrame();
00160
                m_Destination.startFrame();
00161
                11
                m_Destination.processFrame(*d, i);
00162
                for(std::size_t j = 0; j < static_cast<std::size_t>(Hardware::NUMBER_PAD); ++j)
00163
00164
00165
                  if(d->getThresholdStatus(i, j) != 0)
00166
00167
                    m_Source.startPad();
00168
                    m_Destination.startPad();
                    m_Destination.processPadInFrame(*d, i, j);
00169
00170
                    m_Source.endPad();
00171
                    m_Destination.endPad();
00172
00173
00174
00175
                m Source.endFrame();
```

```
m_Destination.endFrame();
00177
00178
             ^{\prime} // If I want SlowControl I need to check for it first, If there is an error then it's not a
00179
     big deal just continue and say is bad SlowControl
00180
             /*try
00181
00182 d.setSCBuffer();
00183
00184 catch(const Exception& e)
00185 {
00186 m Logger->error("{}", e.what());
00187 }
00188
00189 bool processSC = false;
00190 if(d.hasSlowControl())
00191
00192 c.hasSlowControl++;
00193 processSC = true;
00194
00195 if (d.badSCData())
00196 {
00197 c.hasBadSlowControl++;
00198 processSC = false;
00199
00200 if(processSC) { m_Destination.processSlowControl(d.getSCBuffer()); }*/
00201
00202
              // Buffer eod = d.getEndOfAllData();
00203
              // c.SizeAfterAllData[eod.size()]++;
              // bit8_t* debug_variable_3 = eod.end();
00204
              // if(buffer.end() != debug_variable_3) m_Logger->info("END DATA BUFFER END {} {}",
00205
     fmt::ptr(buffer.end()), fmt::ptr(debug_variable_3));
00206
             // assert(buffer.end() == debug_variable_3);
              // if(eod.size() != 0) m_Logger->info("End of Data remaining stuff : {}", to_hex(eod)); */
00207
00208
             /*int nonzeroCount = 0;
00209
00210 for(bit8_t* it = eod.begin(); it != eod.end(); it++)
00211 if(static_cast<int>(*it) != 0) nonzeroCount++;
00212 c.NonZeroValusAtEndOfData[nonzeroCount]++; */
00213
00214
             11
00215
             m_Source.endDIF();
00216
00217
             m_Destination.endDIF();
00218
00219
              // end of DIF while loop
00220
           m_Logger->warn("===*** Event {} ***===", m_NbrEvents);
00221
           m_NbrEvents++;
00222 /**************/
00223 /*** END EVENT ***/
           m_Source.endEvent();
00225
           m_Destination.endEvent();
00226 /*************/
00227
       } // end of event while loop
         m_Destination.end();
00228
00229
         m Source.end();
00230
         timer.stop();
          fmt::print(fg(fmt::color::green) | fmt::emphasis::bold, "=== elapsed time {}ms ({}ms/event)
00231
     ===\n", timer.getElapsedTime() / 1000, timer.getElapsedTime() / (1000 * m_NbrEvents));
00232 }
4.2.3.4 printAllCounters() template<typename SOURCE , typename DESTINATION >
void BufferLooper< SOURCE, DESTINATION >::printAllCounters ( ) [inline]
Definition at line 233 of file BufferLooper.h.
00233 { c.printAllCounters(); }
4.2.3.5 setDetectorIDs() template<typename SOURCE , typename DESTINATION >
void BufferLooper< SOURCE, DESTINATION >::setDetectorIDs (
              const std::vector< DetectorID > & detectorIDs ) [inline]
Definition at line 236 of file BufferLooper.h.
00236 { m_DetectorIDs = detectorIDs; }
```

The documentation for this class was generated from the following file:

• libs/core/include/BufferLooper.h

4.3 BufferLooperCounter Struct Reference

#include <libs/core/include/BufferLooperCounter.h>

Public Member Functions

- void printCounter (const std::string &description, const std::map< int, int > &m, const std::ios_base::fmtflags &base=std::ios_base::dec)
- void printAllCounters ()

Public Attributes

- int hasSlowControl = 0
- int hasBadSlowControl = 0
- std::map< int, int > DIFStarter
- std::map< int, int > DIFPtrValueAtReturnedPos
- std::map< int, int > SizeAfterDIFPtr
- std::map< int, int > SizeAfterAllData
- std::map< int, int > NonZeroValusAtEndOfData

4.3.1 Detailed Description

Definition at line 12 of file BufferLooperCounter.h.

4.3.2 Member Function Documentation

4.3.2.1 printAllCounters() void BufferLooperCounter::printAllCounters ()

Definition at line 11 of file BufferLooperCounter.cc.

```
00012 {
00013    fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, "BUFFER LOOP FINAL STATISTICS : \n");
00014    printCounter("Start of DIF header", DIFStarter);
00015    printCounter("Value after DIF data are processed", DIFPtrValueAtReturnedPos, std::ios_base::hex);
00016    printCounter("Size remaining in buffer after end of DIF data", SizeAfterDIFPtr);
00017    fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, "Number of Slow Control found {} out of which {} are bad\n", hasSlowControl, hasBadSlowControl);
00018    printCounter("Size remaining after all of data have been processed", SizeAfterAllData);
00019    printCounter("Number on non zero values in end of data buffer", NonZeroValusAtEndOfData);
00020 }
```

Definition at line 22 of file BufferLooperCounter.cc.

```
00023 {
00024
           std::string out{"statistics for " + description + " : \n"};
           for(std::map<int, int>::const_iterator it = m.begin(); it != m.end(); it++)
00025
00026
             if(it != m.begin()) out += ",";
out += " [";
00027
00028
             switch(base)
00029
00030
               case std::ios_base::dec:    out += to_dec(static_cast<std::uint32_t>(it->first)); break;
case std::ios_base::hex:    out += to_hex(static_cast<std::uint32_t>(it->first)); break;
case std::ios_base::oct:    out += to_oct(static_cast<std::uint32_t>(it->first)); break;
00031
00032
00033
00034
                default: out += to_dec(static_cast<std::uint32_t>(it->first)); break;
00035
00036
             out += "]=" + std::to_string(it->second);
00037
00038
         out += "\n";
00039
          fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, out);
00040 }
```

4.3.3 Member Data Documentation

4.3.3.1 DIFPtrValueAtReturnedPos std::map<int, int> BufferLooperCounter::DIFPtrValueAt↔ ReturnedPos

Definition at line 18 of file BufferLooperCounter.h.

4.3.3.2 DIFStarter std::map<int, int> BufferLooperCounter::DIFStarter

Definition at line 17 of file BufferLooperCounter.h.

4.3.3.3 hasBadSlowControl int BufferLooperCounter::hasBadSlowControl = 0

Definition at line 16 of file BufferLooperCounter.h.

4.3.3.4 hasSlowControl int BufferLooperCounter::hasSlowControl = 0

Definition at line 15 of file BufferLooperCounter.h.

4.4 DIF Class Reference 15

4.3.3.5 NonZeroValusAtEndOfData std::map<int, int> BufferLooperCounter::NonZeroValusAtEnd↔ OfData

Definition at line 21 of file BufferLooperCounter.h.

4.3.3.6 SizeAfterAllData std::map<int, int> BufferLooperCounter::SizeAfterAllData

Definition at line 20 of file BufferLooperCounter.h.

4.3.3.7 SizeAfterDIFPtr std::map<int, int> BufferLooperCounter::SizeAfterDIFPtr

Definition at line 19 of file BufferLooperCounter.h.

The documentation for this struct was generated from the following files:

- libs/core/include/BufferLooperCounter.h
- libs/core/src/BufferLooperCounter.cc

4.4 DIF Class Reference

#include <libs/interface/ROOT/include/DIF.h>

Inheritance diagram for DIF:



Public Member Functions

- void clear ()
- void addHit (const Hit &)
- void setID (const std::uint8_t &)
- std::uint8_t getID () const
- void setDTC (const std::uint32_t &)
- std::uint32_t getDTC () const
- void setGTC (const std::uint32_t &)
- std::uint32_t getGTC () const
- void setDIFBCID (const std::uint32_t &)
- std::uint32_t getDIFBCID () const
- void setAbsoluteBCID (const std::uint64_t &)
- std::uint64_t getAbsoluteBCID () const
- std::vector< Hit >::const_iterator cbegin () const
- std::vector< Hit >::const_iterator cend () const

4.4.1 Detailed Description

Definition at line 16 of file DIF.h.

4.4.2 Member Function Documentation

```
4.4.2.1 addHit() void DIF::addHit (
               const Hit & hit )
Definition at line 10 of file DIF.cc.
00010 { m_Hits.push_back(hit); }
4.4.2.2 cbegin() std::vector< Hit >::const_iterator DIF::cbegin ( ) const
Definition at line 32 of file DIF.cc. 00032 { return m_Hits.cbegin(); }
4.4.2.3 cend() std::vector< Hit >::const_iterator DIF::cend ( ) const
Definition at line 34 of file DIF.cc.
00034 { return m_Hits.cend(); }
4.4.2.4 clear() void DIF::clear ()
Definition at line 36 of file DIF.cc.
00036 { m_Hits.clear(); }
4.4.2.5 getAbsoluteBCID() std::uint64_t DIF::getAbsoluteBCID ( ) const
Definition at line 30 of file DIF.cc.
00030 { return m_AbsoluteBCID; }
4.4.2.6 getDIFBCID() std::uint32_t DIF::getDIFBCID ( ) const
Definition at line 26 of file DIF.cc.
00026 { return m_DIFBCID; }
```

4.4 DIF Class Reference 17

```
4.4.2.7 getDTC() std::uint32_t DIF::getDTC ( ) const
Definition at line 18 of file DIF.cc.
00018 { return m_DTC; }
4.4.2.8 getGTC() std::uint32_t DIF::getGTC ( ) const
Definition at line 22 of file DIF.cc.
00022 { return m_GTC; }
\textbf{4.4.2.9} \quad \textbf{getID()} \quad \texttt{std::uint8\_t DIF::getID ()} \quad \texttt{const}
Definition at line 14 of file DIF.cc.
00014 { return m_ID; }
4.4.2.10 setAbsoluteBCID() void DIF::setAbsoluteBCID (
               const std::uint64_t & absolutebcid )
Definition at line 28 of file DIF.cc.
00028 { m_AbsoluteBCID = absolutebcid; }
4.4.2.11 setDIFBCID() void DIF::setDIFBCID (
               const std::uint32_t & difbcid )
Definition at line 24 of file DIF.cc.
00024 { m_DIFBCID = difbcid; }
4.4.2.12 setDTC() void DIF::setDTC (
               const std::uint32_t & dtc )
Definition at line 16 of file DIF.cc.
00016 { m_DTC = dtc; }
4.4.2.13 setGTC() void DIF::setGTC (
               const std::uint32_t & gtc )
Definition at line 20 of file DIF.cc.
00020 { m_GTC = gtc; }
```

The documentation for this class was generated from the following files:

- libs/interface/ROOT/include/DIF.h
- libs/interface/ROOT/src/DIF.cc

4.5 DIFPtr Class Reference

M3 MICROROC and HARDROC2 dataformat.

```
#include <libs/core/include/Payload100.h>
```

4.5.1 Detailed Description

M3 MICROROC and HARDROC2 dataformat.

Data from the DAQ (once at the beginning of the file):

```
(1 fois par fichier) [Données venant de la DAQ]
data format version (8 bits)
daq software version (16 bits)
SDCC firmware version (16 bits)
DIF firmware version (16 bits)
timestamp (32bits) (secondes depuis le 01/01/1970) (3 timestamp (32bits) (milliseconde)
```

Explication:

- data format version = la version du format de données utilisée, c'est la version 13
- daq software version = la version du soft d'acquisition labview ou Xdaq
- SDCC firmware version = la version du code VHDL de la carte SDCC
- DIF firmware version = la version du code VHDL de la carte DIF
- timestamp = secondes et milliseconde depuis le 01/01/1970

Figure 1 Data from the DAQ (once at the beginning of the file)

Data from the DIF analog or/and digital (loop):



Figure 2 Data from the DIF analog or/and digital

Data from the DAQ (slowcontrol):

```
(1 fois par slow control, c'est à dire 1 fois par fichier par DIF) [Données venant de la DAQ]

SC Header (0x81)

DIF ID (8 bits)

ASIC Header (8 bits)

Size SC ASIC [74 ou 109 selon le chip]

SC ASIC (n x 8bits)

DIF ID (8 bits)

ASIC Header (8 bits)

Size SC ASIC [74 ou 109 selon le chip]

SC ASIC (n x 8bits)

Size SC ASIC [74 ou 109 selon le chip]

SC ASIC (n x 8bits)

In= 74 ou 109 selon le chip]

SC Trailer (0xA1)
```

Explication:

- SC Header (0xB1) / SC Trailer (0xA1) = balise pour repérer les infos sur le Slow Control
- DIF ID = identité de la DIF qui envoient les data
- Size SC ASIC = taille de la trame SC d'un CHIP (MR=74 byte, HR = 109 byte)
- ASIC header (8 bits) : header dans le SC
- SC ASIC (n x 8bits) : de 1 a 48 par DIF moins ceux qui sont bypassés

Figure 3 Data from the DAQ (slowcontrol)

The documentation for this class was generated from the following file:

libs/core/include/Payload100.h

4.6 DIFSlowControl Class Reference

```
#include <libs/core/include/DIFSlowControl.h>
```

Public Member Functions

- DIFSlowControl (const std::uint8_t &version, const std::uint8_t &DIFid, unsigned char *buf)
 Constructor.
- std::uint8_t getDIFId ()

get DIF id

std::map< int, std::map< std::string, int > > getChipsMap ()

Get chips map.

• std::map< std::string, int > getChipSlowControl (const int &asicid)

Get one chip map.

• int getChipSlowControl (const std::int8_t &asicid, const std::string ¶m)

Get one Chip value.

- $std::map < int, std::map < std::string, int > >::const_iterator cbegin () const$
- std::map< int, std::map< std::string, int > >::const_iterator cend () const

4.6.1 Detailed Description

Definition at line 13 of file DIFSlowControl.h.

4.6.2 Constructor & Destructor Documentation

```
4.6.2.1 DIFSlowControl() DIFSlowControl::DIFSlowControl ( const std::uint8_t & version, const std::uint8_t & DIFid, unsigned char * buf )
```

Constructor.

Parameters

version	Data format version
DIFid	DIF id
buf	Pointer to the Raw data buffer

Definition at line 7 of file DIFSlowControl.cc.

```
m_Version(version), m_DIFId(DIfId), m_AsicType(2)
80000
00009
        if(cbuf[0] != 0xb1) return;
00010
        int header_shift{6};
        if (m_Version < 8) m_NbrAsic = cbuf[5];</pre>
00011
00012
        else
00013
        m_DIFId
00014
                      = cbuf[1];
00015
         m_NbrAsic
                      = cbuf[2];
         header_shift = 3;
00016
00017
00018
       int size_hardroc1 = m_NbrAsic * 72 + header_shift + 1;
00019
       if(cbuf[size_hardroc1 - 1] != 0xa1) size_hardroc1 = 0;
00020
00021
       int size_hardroc2 = m_NbrAsic * 109 + header_shift + 1;
        if(cbuf[size_hardroc2 - 1] != 0xa1) size_hardroc2 = 0;
00022
       if(size_hardroc1 != 0)
00023
00024
00025
         FillHR1(header_shift, cbuf);
00026
         m_AsicType = 1;
00027
00028
       else if(size_hardroc2 != 0)
         FillHR2(header_shift, cbuf);
00029
00030
       else
00031
         return;
00032 }
```

4.6.3 Member Function Documentation

```
4.6.3.1 cbegin() std::map< int, std::map< std::string, int > >::const_iterator DIFSlow← Control::cbegin () const [inline]
```

Definition at line 47 of file DIFSlowControl.h.

```
00047 { return m_MapSC.cbegin(); }
```

```
4.6.3.2 cend() std::map< int, std::map< std::string, int > >::const_iterator DIFSlowControl \leftarrow ::cend ( ) const [inline]
```

Definition at line 49 of file DIFSlowControl.h.

```
00049 { return m_MapSC.cend(); }
```

Get one chip map.

Parameters

```
asicid ASIC ID
```

Returns

a map of <string (parameter name), int (parameter value) >

Definition at line 38 of file DIFSlowControl.cc.

```
00038 { return m_MapSC[asicid]; }
```

4.6.3.4 getChipSlowControl() [2/2] int DIFSlowControl::getChipSlowControl (const std::int8_t & asicid, const std::string & param) [inline]

Get one Chip value.

Parameters

asicid	ASic ID
param	Parameter name

Definition at line 40 of file DIFSlowControl.cc.

```
00040 { return getChipSlowControl(asicid)[param]; }
```

```
4.6.3.5 getChipsMap() std::map< int, std::map< std::string, int >> DIFSlowControl::get\leftarrow ChipsMap ( ) [inline]
```

Get chips map.

Returns

a map of < Asic Id, map of < string (parameter name),int (parameter value) >

Definition at line 36 of file DIFSlowControl.cc.

```
00036 { return m_MapSC; }
```

00034 { return m_DIFId; }

4.6.3.6 getDIFId() std::uint8_t DIFSlowControl::getDIFId () [inline] get DIF id Definition at line 34 of file DIFSlowControl.cc.

The documentation for this class was generated from the following files:

- libs/core/include/DIFSlowControl.h
- libs/core/src/DIFSlowControl.cc

4.7 Event Class Reference

#include <libs/interface/ROOT/include/Event.h>

Inheritance diagram for Event:



Public Member Functions

- std::uint32_t getEventNumber ()
- void setEventNumber (const std::uint32_t &evtNbr)
- void clear ()
- void addDIF (const DIF &dif)
- std::map< std::uint8_t, DIF >::const_iterator cbegin () const
- std::map< std::uint8_t, DIF >::const_iterator cend () const

4.7.1 Detailed Description

Definition at line 15 of file Event.h.

4.7.2 Member Function Documentation

```
4.7.2.2 cbegin() std::map< std::uint8_t, DIF >::const_iterator Event::cbegin ( ) const
Definition at line 22 of file Event.cc.
00022 { return DIFs.cbegin(); }
4.7.2.3 cend() std::map< std::uint8_t, DIF >::const_iterator Event::cend ( ) const
Definition at line 24 of file Event.cc.
00024 { return DIFs.cend(); }
4.7.2.4 clear() void Event::clear ( )
Definition at line 18 of file Event.cc.
00018 { DIFs.clear(); }
4.7.2.5 getEventNumber() std::uint32_t Event::getEventNumber ( )
Definition at line 8 of file Event.cc.
00009 {
00010
       return m_EventNumber;
00011 }
4.7.2.6 setEventNumber() void Event::setEventNumber (
              const std::uint32_t & evtNbr )
Definition at line 13 of file Event.cc.
00014 {
00015
       m_EventNumber=evtNbr;
00016 }
```

The documentation for this class was generated from the following files:

- libs/interface/ROOT/include/Event.h
- libs/interface/ROOT/src/Event.cc

4.8 Exception Class Reference

#include <libs/core/include/Exception.h>

Public Member Functions

- virtual const char * what () const noexcept
- Exception (const std::string &message)
- Exception (const std::int32_t &error, const std::string &message)
- std::int32_t error ()
- std::string message ()

4.8.1 Detailed Description

Definition at line 11 of file Exception.h.

4.8.2 Constructor & Destructor Documentation

```
4.8.2.1 Exception() [1/2] Exception::Exception (
              const std::string & message ) [inline], [explicit]
Definition at line 15 of file Exception.h.
00015 : m_Message(message) { constructWhat(); }
4.8.2.2 Exception() [2/2] Exception::Exception (
              const std::int32_t & error,
              const std::string & message ) [inline]
Definition at line 16 of file Exception.h.
00016 : m_Error(error), m_Message(message) { constructWhat(); }
4.8.3 Member Function Documentation
4.8.3.1 error() std::int32_t Exception::error ( ) [inline]
Definition at line 17 of file Exception.h.
00017 { return m_Error; }
4.8.3.2 message() std::string Exception::message ( ) [inline]
Definition at line 18 of file Exception.h.
00018 { return m_Message; }
4.8.3.3 what() virtual const char * Exception::what ( ) const [inline], [virtual], [noexcept]
Definition at line 14 of file Exception.h.
00014 { return m_What.c_str(); }
```

libs/core/include/Exception.h

The documentation for this class was generated from the following file:

4.9 Hit Class Reference

#include <libs/interface/ROOT/include/Hit.h>

Inheritance diagram for Hit:



Public Member Functions

- void clear ()
- void setDIF (const std::uint8_t &)
- void setASIC (const std::uint8_t &)
- void setChannel (const std::uint8_t &)
- void setThreshold (const std::uint8_t &)
- void setDTC (const std::uint32_t &)
- void setGTC (const std::uint32 t &)
- void setDIFBCID (const std::uint32_t &)
- void setFrameBCID (const std::uint32_t &)
- void setTimestamp (const std::uint32_t &)
- void setAbsoluteBCID (const std::uint64_t &)
- std::uint8_t getDIFid () const
- std::uint8_t getASICid () const
- std::uint8_t getChannel () const
- std::uint8_t getThreshold () const
- std::uint32_t getDTC () const
- std::uint32_t getGTC () const
- std::uint32_t getDIFBCID () const
- std::uint32_t getFrameBCID () const
- std::uint32_t getTimestamp () const
- std::uint64_t getAbsoluteBCID () const

4.9.1 Detailed Description

Definition at line 10 of file Hit.h.

4.9.2 Member Function Documentation

4.9 Hit Class Reference 27

4.9.2.1 clear() void Hit::clear () Definition at line 7 of file Hit.cc. 00009 m_DIF m_ASIC = 0; 00010 00011 m_Channel = 0; $m_{\text{Threshold}} = 0;$ 00012 00013 m_DTC = 0; 00014 m_GTC 00015 m_DIFBCID = 0; 00016 m_FrameBCID 00017 m_Timestamp = 0; 00018 m_AbsoluteBCID = 0; 00019 } 4.9.2.2 getAbsoluteBCID() std::uint64_t Hit::getAbsoluteBCID () const Definition at line 59 of file Hit.cc. 00059 { return m_AbsoluteBCID; } 4.9.2.3 getASICid() std::uint8_t Hit::getASICid () const Definition at line 43 of file Hit.cc. 00043 { return m_ASIC; } 4.9.2.4 getChannel() std::uint8_t Hit::getChannel () const Definition at line 45 of file Hit.cc. 00045 { return m_Channel; } 4.9.2.5 getDIFBCID() std::uint32_t Hit::getDIFBCID () const Definition at line 53 of file Hit.cc. 00053 { return m_DIFBCID; } 4.9.2.6 getDIFid() std::uint8_t Hit::getDIFid () const Definition at line 41 of file Hit.cc. 00041 { return m_DIF; }

4.9.2.7 getDTC() std::uint32_t Hit::getDTC () const

Definition at line 49 of file Hit.cc. 00049 { return m_DTC; }

```
4.9.2.8 getFrameBCID() std::uint32_t Hit::getFrameBCID ( ) const
Definition at line 55 of file Hit.cc.
00055 { return m_FrameBCID; }
4.9.2.9 getGTC() std::uint32_t Hit::getGTC ( ) const
Definition at line 51 of file Hit.cc.
00051 { return m_GTC; }
\textbf{4.9.2.10} \quad \textbf{getThreshold()} \quad \texttt{std::uint8\_t Hit::getThreshold ()} \quad \texttt{const}
Definition at line 47 of file Hit.cc.
00047 { return m_Threshold; }
\textbf{4.9.2.11} \quad \textbf{getTimestamp()} \quad \texttt{std::uint32\_t Hit::getTimestamp ()} \quad \texttt{const}
Definition at line 57 of file Hit.cc.
00057 { return m_Timestamp; }
4.9.2.12 setAbsoluteBCID() void Hit::setAbsoluteBCID (
                const std::uint64_t & absolutebcid )
Definition at line 39 of file Hit.cc.
00039 { m_AbsoluteBCID = absolutebcid; }
4.9.2.13 setASIC() void Hit::setASIC (
                const std::uint8_t & asic )
Definition at line 23 of file Hit.cc.
00023 { m_ASIC = asic; }
4.9.2.14 setChannel() void Hit::setChannel (
                const std::uint8_t & channel )
Definition at line 25 of file Hit.cc.
00025 { m_Channel = channel; }
```

4.9 Hit Class Reference 29

```
4.9.2.15 setDIF() void Hit::setDIF (
              const std::uint8_t & dif )
Definition at line 21 of file Hit.cc.
00021 { m_DIF = dif; }
4.9.2.16 setDIFBCID() void Hit::setDIFBCID (
              const std::uint32_t & difbcid )
Definition at line 33 of file Hit.cc.
00033 { m_DIFBCID = difbcid; }
4.9.2.17 setDTC() void Hit::setDTC (
              const std::uint32_t & dtc )
Definition at line 29 of file Hit.cc.
00029 { m_DTC = dtc; }
4.9.2.18 setFrameBCID() void Hit::setFrameBCID (
              const std::uint32_t & framebcid )
Definition at line 35 of file Hit.cc.
00035 { m_FrameBCID = framebcid; }
4.9.2.19 setGTC() void Hit::setGTC (
              const std::uint32_t & gtc )
Definition at line 31 of file Hit.cc.
00031 { m_GTC = gtc; }
4.9.2.20 setThreshold() void Hit::setThreshold (
              const std::uint8_t & threshold )
Definition at line 27 of file Hit.cc.
00027 { m_Threshold = threshold; }
4.9.2.21 setTimestamp() void Hit::setTimestamp (
              const std::uint32_t & timestamp )
Definition at line 37 of file Hit.cc.
00037 { m_Timestamp = timestamp; }
```


The documentation for this class was generated from the following files:

- libs/interface/ROOT/include/Hit.h
- libs/interface/ROOT/src/Hit.cc

4.10 Interface Class Reference

#include <libs/core/include/Interface.h>

Inheritance diagram for Interface:

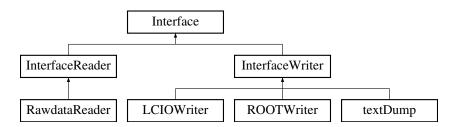

Public Member Functions

- Interface (const std::string &name, const std::string &version, const InterfaceType &type)
- virtual ∼Interface ()=default
- virtual void startEvent ()
- virtual void endEvent ()
- virtual void startDIF ()
- virtual void endDIF ()
- virtual void startFrame ()
- virtual void endFrame ()
- virtual void startPad ()
- virtual void endPad ()
- std::shared_ptr< spdlog::logger > & log ()
- void setLogger (const std::shared_ptr< spdlog::logger > &logger)
- std::string getName ()
- Version getVersion ()
- std::uint32 t getEventNumber ()
- void setEventNumber (const std::uint32_t &nbr)
- std::uint32_t getRunNumber ()
- void setRunNumber (const std::uint32_t &nbr)

Protected Attributes

- std::uint32_t m_EventNumber {0}
- std::uint32_t m_RunNumber {0}

4.10.1 Detailed Description

Definition at line 38 of file Interface.h.

4.10.2 Constructor & Destructor Documentation

```
4.10.2.1 Interface() Interface::Interface (
              const std::string & name,
              const std::string & version,
              const InterfaceType & type ) [inline]
Definition at line 41 of file Interface.h.
00041 : m_Name(name), m_Version(version) \{\}
4.10.2.2 \simInterface() virtual Interface::\simInterface ( ) [virtual], [default]
4.10.3 Member Function Documentation
4.10.3.1 endDIF() virtual void Interface::endDIF ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 46 of file Interface.h.
00046 {}
4.10.3.2 endEvent() virtual void Interface::endEvent ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 44 of file Interface.h.
00044 {}
4.10.3.3 endFrame() virtual void Interface::endFrame ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 48 of file Interface.h.
00048 {}
4.10.3.4 endPad() virtual void Interface::endPad ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 50 of file Interface.h.
00050 {}
```

```
4.10.3.5 getEventNumber() std::uint32_t Interface::getEventNumber ( ) [inline]
Definition at line 55 of file Interface.h.
00055 {return m_EventNumber;}
\textbf{4.10.3.6} \quad \textbf{getName()} \quad \texttt{std::string Interface::getName ( )} \quad \texttt{[inline]}
Definition at line 53 of file Interface.h.
00053 { return m_Name; }
\textbf{4.10.3.7} \quad \textbf{getRunNumber()} \quad \texttt{std::uint32\_t Interface::getRunNumber ()} \quad \texttt{[inline]}
Definition at line 57 of file Interface.h.
00057 {return m_RunNumber;}
4.10.3.8 getVersion() Version Interface::getVersion ( ) [inline]
Definition at line 54 of file Interface.h.
00054 { return m_Version; }
4.10.3.9 log() std::shared_ptr< spdlog::logger > & Interface::log ( ) [inline]
Definition at line 51 of file Interface.h.
00051 { return m_Logger; }
4.10.3.10 setEventNumber() void Interface::setEventNumber (
               const std::uint32_t & nbr ) [inline]
Definition at line 56 of file Interface.h.
00056 {m_EventNumber=nbr;}
4.10.3.11 setLogger() void Interface::setLogger (
               const std::shared_ptr< spdlog::logger > & logger ) [inline]
Definition at line 52 of file Interface.h.
00052 { m_Logger = logger; }
```

```
4.10.3.12 setRunNumber() void Interface::setRunNumber (
              const std::uint32_t & nbr ) [inline]
Definition at line 58 of file Interface.h.
00058 {m_RunNumber=nbr;}
4.10.3.13 startDIF() virtual void Interface::startDIF ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 45 of file Interface.h.
4.10.3.14 startEvent() virtual void Interface::startEvent ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 43 of file Interface.h.
00043 {}
4.10.3.15 startFrame() virtual void Interface::startFrame ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 47 of file Interface.h.
00047 {}
4.10.3.16 startPad() virtual void Interface::startPad ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 49 of file Interface.h.
00049 {}
4.10.4 Member Data Documentation
```

4.10.4.1 m_EventNumber std::uint32_t Interface::m_EventNumber {0} [protected]

Generated by Doxygen

Definition at line 60 of file Interface.h.

```
4.10.4.2 m_RunNumber std::uint32_t Interface::m_RunNumber {0} [protected]
```

Definition at line 61 of file Interface.h.


The documentation for this class was generated from the following file:

• libs/core/include/Interface.h

4.11 InterfaceReader Class Reference

```
#include <libs/core/include/Interface.h>
```

Inheritance diagram for InterfaceReader:

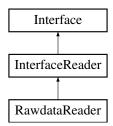

Public Member Functions

- InterfaceReader (const std::string &name, const std::string &version)
- virtual \sim InterfaceReader ()=default

Protected Attributes

• Buffer m_Buffer

4.11.1 Detailed Description

Definition at line 69 of file Interface.h.

4.11.2 Constructor & Destructor Documentation

4.11.2.2 ~InterfaceReader() virtual InterfaceReader::~InterfaceReader () [virtual], [default]

4.11.3 Member Data Documentation

4.11.3.1 m_Buffer Buffer InterfaceReader::m_Buffer [protected]

Definition at line 76 of file Interface.h.


The documentation for this class was generated from the following file:

• libs/core/include/Interface.h

4.12 InterfaceWriter Class Reference

#include <libs/core/include/Interface.h>

Inheritance diagram for InterfaceWriter:

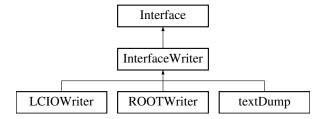

Public Member Functions

- InterfaceWriter (const std::string &name, const std::string &version)
- void addCompatibility (const std::string &name, const std::string &version)
- std::map< std::string, std::string > getCompatibility ()
- bool checkCompatibility (const std::string &name, const std::string &version)
- virtual \sim InterfaceWriter ()=default

Additional Inherited Members

4.12.1 Detailed Description

Definition at line 79 of file Interface.h.

4.12.2 Constructor & Destructor Documentation

```
4.12.2.1 InterfaceWriter() InterfaceWriter::InterfaceWriter (
              const std::string & name,
              const std::string & version ) [inline]
Definition at line 82 of file Interface.h.
00082 : Interface(name, version, InterfaceType::Writer) {}
4.12.2.2 ~InterfaceWriter() virtual InterfaceWriter::~InterfaceWriter ( ) [virtual], [default]
4.12.3 Member Function Documentation
4.12.3.1 addCompatibility() void InterfaceWriter::addCompatibility (
              const std::string & name,
              const std::string & version ) [inline]
Definition at line 84 of file Interface.h.
00084 { m_Compatible[name] = version; }
\textbf{4.12.3.2} \quad \textbf{checkCompatibility()} \quad \texttt{bool InterfaceWriter::} \texttt{checkCompatibility ()}
              const std::string & name,
              const std::string & version ) [inline]
Definition at line 88 of file Interface.h.
00089
00090
          if(m_Compatible.find(name) != m_Compatible.end())
00091
00092
                           ran = semver::range::detail::range(m_Compatible[name]);
00093
            semver::version ver = semver::version(version);
00094
            if(ran.satisfies(ver, false)) return true;
00095
00096
            return false;
00097
00098
         else
00099
           return false;
00100
```

4.12.3.3 getCompatibility() std::map< std::string, std::string > InterfaceWriter::getCompatibility

The documentation for this class was generated from the following file:

libs/core/include/Interface.h


Definition at line 86 of file Interface.h. 00086 { return m_Compatible; }

() [inline]

4.13 LCIOWriter Class Reference

#include <libs/interface/LCIO/include/LCIOWriter.h>

Inheritance diagram for LCIOWriter:

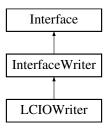

Public Member Functions

- LCIOWriter ()
- void setFilename (const std::string &)
- void start ()
- void processDIF (const Payload &)
- void processFrame (const Payload &, const std::uint32_t &frameIndex)
- void processPadInFrame (const Payload &, const std::uint32_t &frameIndex, const std::uint32_t &channel←
 Index)
- void processSlowControl (const Buffer &)
- void end ()
- virtual void startEvent ()
- virtual void endEvent ()
- virtual void startDIF ()
- virtual void endDIF ()
- virtual void startFrame ()
- virtual void endFrame ()
- virtual void startPad ()
- virtual void endPad ()

Additional Inherited Members

4.13.1 Detailed Description

Definition at line 19 of file LCIOWriter.h.

4.13.2 Constructor & Destructor Documentation

4.13.3 Member Function Documentation

```
4.13.3.1 end() void LCIOWriter::end ()
Definition at line 38 of file LCIOWriter.cc.
00038 { m_LCWriter->close(); }
4.13.3.2 endDIF() void LCIOWriter::endDIF ( ) [virtual]
Reimplemented from Interface.
Definition at line 95 of file LCIOWriter.cc.
00095 {}
4.13.3.3 endEvent() void LCIOWriter::endEvent ( ) [virtual]
Reimplemented from Interface.
Definition at line 87 of file LCIOWriter.cc.
00089 m_LCEvent->addCollection(m_CollectionVec, "DHCALRawHits");
00090 m_LCWriter->writeEvent(m_LCEvent.get());
00091 }
4.13.3.4 endFrame() void LCIOWriter::endFrame ( ) [virtual]
Reimplemented from Interface.
Definition at line 99 of file LCIOWriter.cc.
00099 {}
4.13.3.5 endPad() void LCIOWriter::endPad ( ) [virtual]
Reimplemented from Interface.
Definition at line 103 of file LCIOWriter.cc.
00103 {}
```

```
4.13.3.6 processDIF() void LCIOWriter::processDIF (
               const Payload & d )
Definition at line 40 of file LCIOWriter.cc.
                      parameter_name = "DIF" + std::to_string(d.getDIFid()) + "_Triggers";
00042
        std::string
00043
        EVENT::IntVec parameters;
00044
        {\tt parameters.push\_back(d.getDTC());}
00045
        parameters.push_back(d.getGTC());
00046
        parameters.push_back(d.getBCID());
        parameters.push_back(d.getAbsoluteBCID() & 0xFFFFFF);
00048
       parameters.push_back((d.getAbsoluteBCID() » 24) & 0xFFFFFF);
00049
        parameters.push_back(0);
00050
00051 parameters.push_back(0);
00052 m_Collection**
        parameters.push_back(0);
       m_CollectionVec->parameters().setValues("DIF" + std::to_string(d.getDIFid()) + "_Triggers",
     parameters);
00053 }
4.13.3.7 processFrame() void LCIOWriter::processFrame (
               const Payload & d,
               const std::uint32_t & frameIndex )
Definition at line 55 of file LCIOWriter.cc.
4.13.3.8 processPadInFrame() void LCIOWriter::processPadInFrame (
               const Payload & d,
               const std::uint32_t & frameIndex,
               const std::uint32_t & channelIndex )
Definition at line 57 of file LCIOWriter.cc.
00058 {
00059
        m_LCEvent->setTimeStamp(d.getAbsoluteBCID()*200);
00060
        m_LCEvent->setRunNumber(getRunNumber());
00061
        IMPL::RawCalorimeterHitImpl* hit = new IMPL::RawCalorimeterHitImpl;
                                      ID0 = channelIndex;
00062
00063
                                           = ID0 « 8;
00064
        ID0 += d.getASICid(frameIndex);
        ID0 = ID0 « 8;
ID0 += d.getDIFid();
00065
00066
00067
        hit->setCellID0(ID0);
        hit->setAmplitude(d.getThresholdStatus(frameIndex, channelIndex));
hit->setTimeStamp(d.getFrameTimeToTrigger(frameIndex));
00068
00070
        m_CollectionVec->addElement(hit);
00071 }
4.13.3.9 processSlowControl() void LCIOWriter::processSlowControl (
               const Buffer & ) [inline]
```

Generated by Doxygen

00030 { ; }

Definition at line 30 of file LCIOWriter.h.

4.13.3.11 start() void LCIOWriter::start ()

Definition at line 22 of file LCIOWriter.cc.

```
00023
00024
        m_LCWriter->open(m_Filename, EVENT::LCIO::WRITE_NEW);
00025
        std::unique_ptr<IMPL::LCRunHeaderImpl> runHdr(new IMPL::LCRunHeaderImpl);
        std::string filename_ = filename(m_Filename);
std::size_t beginn = filename_.find_last_of("_R");
00026
00027
00028
         if (beginn==std::string::npos) beginn = filename_.find_last_of('_');
00029
        filename_=filename_.substr(beginn+1);
00030
        setRunNumber(stoi(filename_));
00031
        runHdr->setRunNumber(getRunNumber());
00032
        runHdr->setDetectorName (m_DetectorName);
00033
        std::string description("data collected with SDHCAL prototype");
00034
        runHdr->setDescription(description);
00035
        m_LCWriter->writeRunHeader(runHdr.get());
00036 }
```

4.13.3.12 startDIF() void LCIOWriter::startDIF () [virtual]

Reimplemented from Interface.

Definition at line 93 of file LCIOWriter.cc.

00093 {}

4.13.3.13 startEvent() void LCIOWriter::startEvent () [virtual]

Reimplemented from Interface.

Definition at line 73 of file LCIOWriter.cc.

```
00075
        m_LCEvent = std::make_unique<IMPL::LCEventImpl>();
00076
        m_LCEvent->setEventNumber(getEventNumber());
00077
        m_LCEvent->setDetectorName(m_DetectorName);
00078
        m_LCEvent->setWeight(1);
        m_CollectionVec = new IMPL::LCCollectionVec(EVENT::LCIO::RAWCALORIMETERHIT);
IMPL::LCFlagImpl flag(0);
00079
00080
00081
        // flag.setBit(EVENT::LCIO::RCHBIT_ID1);
00082
        flag.setBit(EVENT::LCIO::RCHBIT_TIME);
00083
        {\tt m\_CollectionVec->setFlag(flag.getFlag());}
        m_CollectionVec->parameters().setValue(EVENT::LCIO::CellIDEncoding, "dif:8,asic:8,channel:6");
00084
00085 }
```

$\textbf{4.13.3.14} \quad \textbf{startFrame()} \quad \texttt{void LCIOWriter::startFrame ()} \quad \texttt{[virtual]}$

Reimplemented from Interface.

Definition at line 97 of file LCIOWriter.cc.

00097 {}

4.13.3.15 startPad() void LCIOWriter::startPad () [virtual]

Reimplemented from Interface.

Definition at line 101 of file LCIOWriter.cc.


The documentation for this class was generated from the following files:

- libs/interface/LCIO/include/LCIOWriter.h
- libs/interface/LCIO/src/LCIOWriter.cc

4.14 Payload Class Reference

#include <libs/core/include/Payload.h>

Inheritance diagram for Payload:

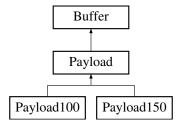

Public Member Functions

- Payload (const std::int32 t &detector id)
- void setBuffer (const Buffer &buffer)
- std::uint32_t getEndOfDIFData () const
- std::uint32_t getSizeAfterDIFPtr () const
- virtual std::uint32_t getNumberOfFrames () const =0
- virtual std::uint32_t getThresholdStatus (const std::uint32_t &, const std::uint32_t &) const =0
- virtual std::uint32_t getDIFid () const =0
- virtual std::uint32_t getDTC () const =0
- virtual std::uint32_t getGTC () const =0
- virtual std::uint32_t getBCID () const =0
- virtual std::uint64_t getAbsoluteBCID () const =0
- virtual std::uint32_t getASICid (const std::uint32_t &) const =0
- virtual std::uint32_t getFrameBCID (const std::uint32_t &) const =0
- virtual std::uint32_t getFrameTimeToTrigger (const std::uint32_t &) const =0
- virtual ∼Payload ()

Protected Member Functions

virtual void parsePayload ()=0

Protected Attributes

- std::int32_t m_DetectorID {-1}
- std::uint32_t theGetFramePtrReturn_ {0}

4.14.1 Detailed Description

Definition at line 11 of file Payload.h.

4.14.2 Constructor & Destructor Documentation

4.14.3 Member Function Documentation

```
4.14.3.1 getAbsoluteBCID() virtual std::uint64_t Payload::getAbsoluteBCID ( ) const [pure virtual]
```

Implemented in Payload100, and Payload150.

```
4.14.3.2 getASICid() virtual std::uint32_t Payload::getASICid ( const std::uint32_t & ) const [pure virtual]
```

Implemented in Payload100, and Payload150.

```
4.14.3.3 getBCID() virtual std::uint32_t Payload::getBCID ( ) const [pure virtual]
```

Implemented in Payload100, and Payload150.

```
4.14.3.4 getDIFid() virtual std::uint32_t Payload::getDIFid ( ) const [pure virtual]
Implemented in Payload100, and Payload150.
4.14.3.5 getDTC() virtual std::uint32_t Payload::getDTC ( ) const [pure virtual]
Implemented in Payload100, and Payload150.
4.14.3.6 getEndOfDIFData() std::uint32_t Payload::getEndOfDIFData () const [inline]
Definition at line 43 of file Payload.h.
00043 { return theGetFramePtrReturn_; }
4.14.3.7 getFrameBCID() virtual std::uint32_t Payload::getFrameBCID (
             const std::uint32_t & ) const [pure virtual]
Implemented in Payload100, and Payload150.
4.14.3.8 getFrameTimeToTrigger() virtual std::uint32_t Payload::getFrameTimeToTrigger (
             const std::uint32_t & ) const [pure virtual]
Implemented in Payload100, and Payload150.
4.14.3.9 getGTC() virtual std::uint32_t Payload::getGTC ( ) const [pure virtual]
Implemented in Payload100, and Payload150.
4.14.3.10 getNumberOfFrames() virtual std::uint32_t Payload::getNumberOfFrames ( ) const
[pure virtual]
Implemented in Payload100, and Payload150.
4.14.3.11 getSizeAfterDIFPtr() std::uint32_t Payload::getSizeAfterDIFPtr ( ) const [inline]
Definition at line 45 of file Payload.h.
00045 { return size() - theGetFramePtrReturn_; }
```

Implemented in Payload100, and Payload150.

4.14.3.13 parsePayload() virtual void Payload::parsePayload () [protected], [pure virtual]

```
4.14.3.14 setBuffer() void Payload::setBuffer ( const Buffer & buffer ) [inline]
```

Definition at line 37 of file Payload.h.

4.14.4 Member Data Documentation

```
4.14.4.1 m_DetectorID std::int32_t Payload::m_DetectorID {-1} [protected]
```

Definition at line 33 of file Payload.h.

 $\textbf{4.14.4.2} \quad \textbf{theGetFramePtrReturn} \quad \texttt{std::uint32_t Payload::theGetFramePtrReturn} \quad \texttt{\{0\}} \quad \texttt{[protected]}$

Definition at line 34 of file Payload.h.


The documentation for this class was generated from the following file:

• libs/core/include/Payload.h

4.15 Payload100 Class Reference

#include <libs/core/include/Payload100.h>

Inheritance diagram for Payload100:

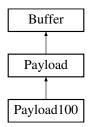

Public Member Functions

- Payload100 ()
- bool hasTemperature () const
- · bool hasAnalogReadout () const
- virtual std::uint32_t getNumberOfFrames () const final
- virtual std::uint32_t getThresholdStatus (const std::uint32_t &, const std::uint32_t &) const final
- virtual std::uint32_t getDIFid () const final
- virtual std::uint32_t getDTC () const final
- virtual std::uint32 t getGTC () const final
- virtual std::uint32_t getBCID () const final
- virtual std::uint64_t getAbsoluteBCID () const final
- virtual std::uint32_t getASICid (const std::uint32_t &) const final
- virtual std::uint32_t getFrameBCID (const std::uint32_t &) const final
- virtual std::uint32_t getFrameTimeToTrigger (const std::uint32_t &) const final
- virtual ~Payload100 ()

Additional Inherited Members

4.15.1 Detailed Description

Definition at line 27 of file Payload100.h.

4.15.2 Constructor & Destructor Documentation

```
4.15.2.1 Payload100() Payload100::Payload100 ( ) [inline]
```

```
Definition at line 30 of file Payload100.h. 00030 : Payload(100) {}
```

```
4.15.2.2 \simPayload100() Payload100::\simPayload100 ( ) [virtual]
```

```
Definition at line 193 of file Payload100.cc. 00193 \ \{\}
```

4.15.3 Member Function Documentation

```
4.15.3.1 getAbsoluteBCID() std::uint64_t Payload100::getAbsoluteBCID ( ) const [inline],
[final], [virtual]
Implements Payload.
Definition at line 176 of file Payload100.cc.
00177
00178
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
     Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER};
00179
        std::uint64_t LBC = ((begin()[shift] < 16) | (begin()[shift + 1] < 8) | (begin()[shift + 2])) *
     16777216ULL + ((begin()[shift + 3] « 16) | (begin()[shift + 4] « 8) | (begin()[shift + 5]));
00180
       return LBC;
00181 }
4.15.3.2 getASICid() std::uint32_t Payload100::getASICid (
              const std::uint32_t & i ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 183 of file Payload100.cc.
00183 { return m_Frames[i][0] & 0xFF; }
4.15.3.3 getBCID() std::uint32_t Payload100::getBCID ( ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 170 of file Payload100.cc.
00171 {
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
     Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID};
       return (begin()[shift] « 16) + (begin()[shift + 1] « 8) + begin()[shift + 2];
00174 }
4.15.3.4 getDIFid() std::uint32_t Payload100::getDIFid ( ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 152 of file Payload100.cc.
00153 {
00154
       std::uint32_t shift{+Size::GLOBAL_HEADER};
       return begin()[shift] & 0xFF;
00155
00156 }
4.15.3.5 getDTC() std::uint32_t Payload100::getDTC ( ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 158 of file Payload100.cc.
00159 {
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF};
00160
       return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift
00161
      + 3];
00162 }
```

```
4.15.3.6 getFrameBCID() std::uint32_t Payload100::getFrameBCID (
                               const std::uint32_t & i ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 185 of file Payload100.cc.
00186 {
                std::uint32_t shift{+Size::MICROROC_HEADER};
00187
00188
                return GrayToBin((m_Frames[i][shift] « 16) + (m_Frames[i][shift + 1] « 8) + m_Frames[i][shift + 2]);
00189 }
4.15.3.7 getFrameTimeToTrigger() std::uint32_t Payload100::getFrameTimeToTrigger (
                               const std::uint32_t & i ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 191 of file Payload100.cc.
00191 { return getBCID() - getFrameBCID(i); }
4.15.3.8 getGTC() std::uint32_t Payload100::getGTC ( ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 164 of file Payload100.cc.
00165 {
00166
                std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
            Size::INFORMATION_COUNTER;
00167
                return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift
            + 3];
00168 }
4.15.3.9 getNumberOfFrames() std::uint32_t Payload100::getNumberOfFrames ( ) const [inline],
[final], [virtual]
Implements Payload.
Definition at line 142 of file Payload100.cc.
00142 { return m_Frames.size(); }
4.15.3.10 getThresholdStatus() std::uint32_t Payload100::getThresholdStatus (
                               const std::uint32_t & i,
                              Implements Payload.
Definition at line 144 of file Payload100.cc.
00144 \ \{ \ return \ (((std::uint32\_t)getFrameLevel(i, ipad, 1))) \ | \ ((std::uint32\_t)getFrameLevel(i, ipad, 0)) \ | \ was a substitute of the context o
            1): }
```

4.15.3.11 hasAnalogReadout() bool Payload100::hasAnalogReadout () const [inline]

```
Definition at line 114 of file Payload100.cc.
00114 { return getNumberLines() != 0; }
```

4.15.3.12 hasTemperature() bool Payload100::hasTemperature () const [inline]


The documentation for this class was generated from the following files:

- libs/core/include/Payload100.h
- libs/core/src/Payload100.cc

4.16 Payload150 Class Reference

#include <libs/core/include/Payload150.h>

Inheritance diagram for Payload150:

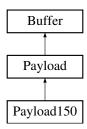

Public Member Functions

- Payload150 ()
- virtual std::uint32 t getNumberOfFrames () const final
- virtual std::uint32_t getThresholdStatus (const std::uint32_t &, const std::uint32_t &) const final
- virtual std::uint32_t getDIFid () const final
- · virtual std::uint32_t getDTC () const final
- virtual std::uint32_t getGTC () const final
- · virtual std::uint32_t getBCID () const final
- virtual std::uint64_t getAbsoluteBCID () const final
- virtual std::uint32_t getASICid (const std::uint32_t &) const final
- virtual std::uint32_t getFrameBCID (const std::uint32_t &) const final
- virtual std::uint32_t getFrameTimeToTrigger (const std::uint32_t &) const final
- virtual ∼Payload150 ()

Additional Inherited Members

4.16.1 Detailed Description

Definition at line 10 of file Payload150.h.

4.16.2 Constructor & Destructor Documentation

```
4.16.2.1 Payload150() Payload150::Payload150 () [inline]
Definition at line 13 of file Payload150.h.
00013 : Payload(150) {}
4.16.2.2 ~Payload150() Payload150::~Payload150 ( ) [virtual]
Definition at line 136 of file Payload150.cc.
00136 {}
4.16.3 Member Function Documentation
4.16.3.1 getAbsoluteBCID() std::uint64_t Payload150::getAbsoluteBCID ( ) const [inline],
[final], [virtual]
Implements Payload.
Definition at line 106 of file Payload150.cc.
         std::uint32_t shift{Size::GLOBAL_HEADER + Size::PMR_ID_SHIFT + Size::PMR_NBASIC_SHIFT +
      Size::PMR_FORMAT_SHIFT + Size::PMR_GTC_SHIFT};

std::uint64_t LBC = ((begin()[shift] « 8) | (begin()[shift + 1])) * 16777216ULL + ((begin()[shift + 2] « 24) | (begin()[shift + 3] « 16) | (begin()[shift + 4] « 8) | begin()[shift + 5]);
-=, | (b
ouil0 return LBC;
00111 }
4.16.3.2 getASICid() std::uint32_t Payload150::getASICid (
                const std::uint32_t & i ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 126 of file Payload150.cc.
00126 { return m_Frames[i][0] & 0xFF; }
4.16.3.3 getBCID() std::uint32_t Payload150::getBCID () const [inline], [final], [virtual]
Implements Payload.
Definition at line 120 of file Payload150.cc.
         std::uint32_t shift{Size::GLOBAL_HEADER + Size::PMR_ID_SHIFT + Size::PMR_NBASIC_SHIFT +
00122
      Size::PMR_FORMAT_SHIFT + Size::PMR_GTC_SHIFT + Size::PMR_ABCID_SHIFT};

return (begin()[shift] « 16) + (begin()[shift + 1] « 8) + begin()[shift + 2];
00123
00124 }
```

```
4.16.3.4 getDIFid() std::uint32_t Payload150::getDIFid () const [inline], [final], [virtual]
Implements Payload.
Definition at line 94 of file Payload150.cc.
00095 {
00096
       std::uint32_t shift{+Size::GLOBAL_HEADER};
00097
       return begin()[shift] & 0xFF;
00098 }
4.16.3.5 getDTC() std::uint32_t Payload150::getDTC() const [inline], [final], [virtual]
Implements Payload.
Definition at line 113 of file Payload150.cc.
00115
        // MAYBE NOR USEFUL
00116
       std::uint32_t shift{};
       return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift
00117
      + 3];
00118 }
4.16.3.6 getFrameBCID() std::uint32_t Payload150::getFrameBCID (
              const std::uint32_t & i ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 128 of file Payload150.cc.
      std::uint32_t shift{+Size::MICROROC_HEADER};
00131
       return GrayToBin((m_Frames[i][shift] « 16) + (m_Frames[i][shift + 1] « 8) + m_Frames[i][shift + 2]);
00132 }
4.16.3.7 getFrameTimeToTrigger() std::uint32_t Payload150::getFrameTimeToTrigger (
              const std::uint32_t & i ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 134 of file Payload150.cc.
00134 { return getBCID() - getFrameBCID(i); }
4.16.3.8 getGTC() std::uint32_t Payload150::getGTC ( ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 100 of file Payload150.cc.
00101 {
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::PMR_ID_SHIFT + Size::PMR_NBASIC_SHIFT +
     Size::PMR_FORMAT_SHIFT};
00103
       return (begin()[shift] « 16) + (begin()[shift + 1] « 8) + begin()[shift + 2];
00104 }
```

```
4.16.3.9 getNumberOfFrames() std::uint32_t Payload150::getNumberOfFrames ( ) const [inline], [final], [virtual]
```

Implements Payload.

Definition at line 84 of file Payload150.cc.

```
00084 { return m_Frames.size(); }
```

Implements Payload.

```
Definition at line 86 of file Payload150.cc.

00086 { return (((std::uint32_t)getFrameLevel(i, ipad, 1))) | ((std::uint32_t)getFrameLevel(i, ipad, 0) «
```

The documentation for this class was generated from the following files:

- libs/core/include/Payload150.h
- libs/core/src/Payload150.cc

4.17 PayloadLoader Class Reference

#include <libs/core/include/PayloadLoader.h>

Public Member Functions

- PayloadLoader ()=default
- std::unique_ptr< Payload > & getPayload (const std::int32_t &detector_id)

4.17.1 Detailed Description

Definition at line 14 of file PayloadLoader.h.

4.17.2 Constructor & Destructor Documentation

4.17.2.1 PayloadLoader() PayloadLoader::PayloadLoader () [default]

4.17.3 Member Function Documentation

The documentation for this class was generated from the following file:

libs/core/include/PayloadLoader.h

4.18 RawBufferNavigator Class Reference

class to navigate in the raw data buffer parse the header and send the payload as Buffer

```
#include <libs/core/include/RawBufferNavigator.h>
```

Public Member Functions

- RawBufferNavigator ()
- ∼RawBufferNavigator ()=default
- void setBuffer (const Buffer &)
- std::uint32_t getDetectorID ()
- · bool findStartOfPayload ()
- std::int32_t getStartOfPayload ()
- bool validPayload ()
- · Buffer getPayload ()

Static Public Member Functions

static void startAt (const int &start)

4.18.1 Detailed Description

class to navigate in the raw data buffer parse the header and send the payload as Buffer

the RawBufferNavigator navigate in the raw data buffer and parse the header and send the payload as Buffer.

The buffer structure consists of :

- the detector id (std::int32_t)
- · the datasource id (std::int32_t)
- the event id (std::int32_t)
- the bunch crossing id (std::int64_t)
- the payload char array of (buffer size 20) Based on

Author

Laurent Mirabito

Version

1.0

Date

May 2016

Definition at line 24 of file RawBufferNavigator.h.

4.18.2 Constructor & Destructor Documentation

```
4.18.2.1 RawBufferNavigator() RawBufferNavigator::RawBufferNavigator ()
Definition at line 14 of file RawBufferNavigator.cc.
00014 {}
4.18.2.2 ~RawBufferNavigator() RawBufferNavigator::~RawBufferNavigator () [default]
4.18.3 Member Function Documentation
\textbf{4.18.3.1} \quad \textbf{findStartOfPayload()} \quad \texttt{bool RawBufferNavigator::findStartOfPayload ()} \\
\textbf{4.18.3.2} \quad \textbf{getDetectorID()} \quad \texttt{std::uint32\_t} \quad \texttt{RawBufferNavigator::getDetectorID} \quad \textbf{()}
Definition at line 21 of file RawBufferNavigator.cc.
00021 { return m_Buffer[0]; }
4.18.3.3 getPayload() Buffer RawBufferNavigator::getPayload ()
Definition at line 28 of file RawBufferNavigator.cc.
00028 { return Buffer(&(m_Buffer.begin()[m_StartPayload]), m_Buffer.size() - m_StartPayload); }
4.18.3.4 getStartOfPayload() std::int32_t RawBufferNavigator::getStartOfPayload ( )
Definition at line 23 of file RawBufferNavigator.cc.
00024 {
        return m_StartPayload;
00026 }
4.18.3.5 setBuffer() void RawBufferNavigator::setBuffer (
               const Buffer & b )
Definition at line 16 of file RawBufferNavigator.cc.
00017 {
00018 m_Buffer
                            = b;
00019 }
```

```
4.18.3.6 startAt() void RawBufferNavigator::startAt ( const int & start ) [static]
```

Definition at line 9 of file RawBufferNavigator.cc.

```
00011 if(start >= 0) m_StartPayload = start;
00012 }
```

4.18.3.7 validPayload() bool RawBufferNavigator::validPayload ()


The documentation for this class was generated from the following files:

- libs/core/include/RawBufferNavigator.h
- libs/core/src/RawBufferNavigator.cc

4.19 RawdataReader Class Reference

#include <libs/interface/RawDataReader/include/RawdataReader.h>

Inheritance diagram for RawdataReader:



Public Member Functions

- RawdataReader (const char *fileName)
- void start ()
- void end ()
- float getFileSize ()
- void openFile (const std::string &fileName)
- void closeFile ()
- bool nextEvent ()
- bool nextDIFbuffer ()
- const Buffer & getBuffer ()
- virtual ∼RawdataReader ()

Static Public Member Functions

• static void setDefaultBufferSize (const std::size_t &size)

Additional Inherited Members

4.19.1 Detailed Description

Definition at line 17 of file RawdataReader.h.

4.19.2 Constructor & Destructor Documentation

4.19.3 Member Function Documentation

```
4.19.3.1 closeFile() void RawdataReader::closeFile ( )
```

Definition at line 46 of file RawdataReader.cc.

```
4.19.3.2 end() void RawdataReader::end ( )
```

```
Definition at line 25 of file RawdataReader.cc. 00025 { closeFile(); }
```

```
4.19.3.3 getBuffer() const Buffer & RawdataReader::getBuffer ( )
```

Definition at line 121 of file RawdataReader.cc.

```
00122 {
00123 uncompress();
00124 return m_Buffer;
00125 }
```

4.19.3.4 getFileSize() float RawdataReader::getFileSize ()

Definition at line 129 of file RawdataReader.cc.

```
00129 { return m_FileSize; }
```

4.19.3.5 nextDIFbuffer() bool RawdataReader::nextDIFbuffer ()

Definition at line 94 of file RawdataReader.cc.

```
00095 {
00096
00097
         static int DIF_processed{0};
00098
          if (DIF_processed >= m_NumberOfDIF)
00099
00100
00101
          DIF_processed = 0;
00102
           return false;
00103
00104
         else
00105
00106
          DIF_processed++;
00107
           std::uint32_t bsize{0};
00108
           m_FileStream.read(reinterpret_cast<char*>(&bsize), sizeof(std::uint32_t));
00109
           m_FileStream.read(reinterpret_cast<char*>(&m_buf[0]), bsize);
00110
           m_Buffer = Buffer(m_buf);
00111
00112
00113
       catch(const std::ios_base::failure& e)
00114
00115
         log()->error("Caught an ios_base::failure in openFile : {}", e.what());
00116
         return false;
00117
00118
       return true;
00119 }
```

4.19.3.6 nextEvent() bool RawdataReader::nextEvent ()

Definition at line 80 of file RawdataReader.cc.

```
00081 {
00082
00083
             m_FileStream.read(reinterpret_cast<char*>(&m_EventNumber), sizeof(std::uint32_t));
m_FileStream.read(reinterpret_cast<char*>(&m_NumberOfDIF), sizeof(std::uint32_t));
00084
00085
00086
00087
           catch(const std::ios_base::failure& e)
00088
00089
             return false;
00090
00091
           return true:
00092 }
```

Definition at line 59 of file RawdataReader.cc.

```
00061
00062
00063
         m_FileStream.rdbuf()->pubsetbuf(0, 0);
00064
         m_FileStream.exceptions(std::ifstream::failbit | std::ifstream::badbit);
00065
         m_FileStream.open(fileName.c_str(), std::ios::in | std::ios::binary | std::ios::ate); // Start at
     the end to directly calculate the size of the file then come back to beginning
00066
         m_FileStream.rdbuf()->pubsetbuf(0, 0);
00067
          if (m_FileStream.is_open())
00068
00069
           setFileSize(m_FileStream.tellg());
00070
           m_FileStream.seekg(0, std::ios::beg);
00071
00072
00073
       catch(const std::ios_base::failure& e)
00074
00075
         log()->error("Caught an ios_base::failure in openFile : {}", e.what());
00076
00077 }
00078 }
```

```
4.19.3.8 setDefaultBufferSize() void RawdataReader::setDefaultBufferSize ( const std::size_t & size ) [static]
```

Definition at line 15 of file RawdataReader.cc.

```
00015 { m_BufferSize = size; }
```

```
4.19.3.9 start() void RawdataReader::start ()
```

Definition at line 23 of file RawdataReader.cc.

```
00023 { openFile(m_Filename); }
```


The documentation for this class was generated from the following files:

- libs/interface/RawDataReader/include/RawdataReader.h
- libs/interface/RawDataReader/src/RawdataReader.cc

4.20 ROOTWriter Class Reference

#include <libs/interface/ROOT/include/ROOTWriter.h>

Inheritance diagram for ROOTWriter:

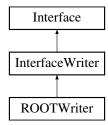

Public Member Functions

- ROOTWriter ()
- void setFilename (const std::string &)
- void start ()
- void processDIF (const Payload &)
- void processFrame (const Payload &, const std::uint32_t &frameIndex)
- void processPadInFrame (const Payload &, const std::uint32_t &frameIndex, const std::uint32_t &channel← Index)
- void processSlowControl (const Buffer &)
- void end ()
- virtual void startEvent ()
- virtual void endEvent ()
- virtual void startDIF ()
- virtual void endDIF ()
- virtual void startFrame ()
- virtual void endFrame ()
- virtual void startPad ()
- virtual void endPad ()

Additional Inherited Members

4.20.1 Detailed Description

Definition at line 17 of file ROOTWriter.h.

4.20.2 Constructor & Destructor Documentation

```
4.20.2.1 ROOTWriter() ROOTWriter::ROOTWriter ( )

Definition at line 10 of file ROOTWriter.cc.
00010 : InterfaceWriter("ROOTWriter", "1.0.0") { addCompatibility("RawdataReader", ">=1.0.0"); }
```

4.20.3 Member Function Documentation

```
4.20.3.1 end() void ROOTWriter::end ( )
```

Definition at line 19 of file ROOTWriter.cc.

```
4.20.3.2 endDIF() void ROOTWriter::endDIF ( ) [virtual]
```

Reimplemented from Interface.

Definition at line 76 of file ROOTWriter.cc.

4.20.3.3 endEvent() void ROOTWriter::endEvent () [virtual]

Reimplemented from Interface.

Definition at line 64 of file ROOTWriter.cc.

4.20.3.4 endFrame() void ROOTWriter::endFrame () [virtual]

Reimplemented from Interface.

Definition at line 88 of file ROOTWriter.cc.

4.20.3.5 endPad() void ROOTWriter::endPad () [virtual]

Reimplemented from Interface.

Definition at line 96 of file ROOTWriter.cc.

00096 {}

4.20.3.6 processDIF() void ROOTWriter::processDIF (const Payload & d)

Definition at line 30 of file ROOTWriter.cc.

```
00031 {
00032     m_DIF->setID(d.getDIFid());
00033     m_DIF->setDTC(d.getDTC());
00034     m_DIF->setGTC(d.getGTC());
00035     m_DIF->setDIFBCID(d.getBCID());
00036     m_DIF->setAbsoluteBCID(d.getAbsoluteBCID());
00037 }
```

```
4.20.3.7 processFrame() void ROOTWriter::processFrame (
               const Payload & d,
               const std::uint32_t & frameIndex )
Definition at line 39 of file ROOTWriter.cc.
00040 {
        m_Hit->setDIF(d.getDIFid());
00042
        m_Hit->setASIC(d.getASICid(frameIndex));
00043
        m_Hit->setDTC(d.getDTC());
00044
        m_Hit->setGTC(d.getGTC());
       m_Hit->setDIFBCID(d.getBCID());
m_Hit->setAbsoluteBCID(d.getAbsoluteBCID());
00045
00046
00047
       m_Hit->setFrameBCID(d.getFrameBCID(frameIndex));
00048
       m_Hit->setTimestamp(d.getFrameTimeToTrigger(frameIndex));
00049 }
4.20.3.8 processPadInFrame() void ROOTWriter::processPadInFrame (
               const Payload & d,
               const std::uint32_t & frameIndex,
               const std::uint32_t & channelIndex )
Definition at line 51 of file ROOTWriter.cc.
00052 {
00053
        m_Hit->setChannel(channelIndex);
       m_Hit->setThreshold(static_cast<std::uint8_t>(d.getThresholdStatus(frameIndex, channelIndex)));
00055 }
4.20.3.9 processSlowControl() void ROOTWriter::processSlowControl (
               const Buffer & ) [inline]
Definition at line 28 of file ROOTWriter.h.
00028 { ; }
4.20.3.10 setFilename() void ROOTWriter::setFilename (
               const std::string & filename )
Definition at line 8 of file ROOTWriter.cc.
00008 { m_Filename = filename; }
4.20.3.11 start() void ROOTWriter::start ( )
Definition at line 12 of file ROOTWriter.cc.
        m_File = TFile::Open(m_Filename.c_str(), "RECREATE", m_Filename.c_str(),
00014
ROOT::CompressionSettings(ROOT::kZLIB, 5));

00015 m_Tree = new TTree("RawData", "Raw SDHCAL data tree");
00016
       m_Tree->Branch("Events", &m_Event, 512000, 99);
00017 }
```

4.20.3.12 startDIF() void ROOTWriter::startDIF () [virtual]

Reimplemented from Interface.

Definition at line 70 of file ROOTWriter.cc.

4.20.3.13 startEvent() void ROOTWriter::startEvent () [virtual]

Reimplemented from Interface.

Definition at line 57 of file ROOTWriter.cc.

```
00058 {
00059    m_Event = new Event();
00060    m_Event->setEventNumber(getEventNumber());
00061    // m_Event->clear();
00062 }
```

$\textbf{4.20.3.14} \quad \textbf{startFrame()} \quad \texttt{void ROOTWriter::startFrame ()} \quad \texttt{[virtual]}$

Reimplemented from Interface.

Definition at line 82 of file ROOTWriter.cc.

```
00083 {
00084    m_Hit = new Hit();
00085    // m_Hit->clear();
00086 }
```

4.20.3.15 startPad() void ROOTWriter::startPad () [virtual]

Reimplemented from Interface.

```
Definition at line 94 of file ROOTWriter.cc.
```


The documentation for this class was generated from the following files:

- libs/interface/ROOT/include/ROOTWriter.h
- libs/interface/ROOT/src/ROOTWriter.cc

4.21 textDump Class Reference

#include <libs/interface/Dump/include/textDump.h>

Inheritance diagram for textDump:



Public Member Functions

- textDump ()
- void start ()
- void processDIF (const Payload &)
- void processFrame (const Payload &, uint32_t frameIndex)
- void processPadInFrame (const Payload &, uint32_t frameIndex, uint32_t channelIndex)
- void processSlowControl (Buffer)
- void end ()
- std::shared_ptr< spdlog::logger > & print ()
- void setLevel (const spdlog::level::level enum &level)

Additional Inherited Members

4.21.1 Detailed Description

Definition at line 14 of file textDump.h.

4.21.2 Constructor & Destructor Documentation

```
4.21.2.1 textDump() textDump::textDump ( )
```

```
Definition at line 7 of file textDump.cc.
```

4.21.3 Member Function Documentation

```
4.21.3.1 end() void textDump::end ( )
```

```
Definition at line 31 of file textDump.cc.
```

```
00031 { print()->info("textDump end of report"); }
```

```
4.21.3.2 print() std::shared_ptr< spdlog::logger > & textDump::print ( ) [inline]
```

```
Definition at line 24 of file textDump.h.
```

```
00024 { return m_InternalLogger; }
```

```
4.21.3.3 processDIF() void textDump::processDIF (
               const Payload & d)
Definition at line 17 of file textDump.cc.
00017 { print()->info("DIF_ID : {}, DTC : {}, DTF BCID {}, Absolute BCID : {}, Nbr frames {}",
      d.getDIFid(), d.getDTC(), d.getGTC(), d.getBCID(), d.getAbsoluteBCID(), d.getNumberOfFrames()); }
4.21.3.4 processFrame() void textDump::processFrame (
               const Payload & d,
               uint32_t frameIndex )
Definition at line 19 of file textDump.cc.
00020 {
      print()->info("\tDisplaying frame number {}: ASIC ID {}, Frame BCID {}, Frame Time To Trigger
(a.k.a timestamp) is {}", frameIndex, d.getASICid(frameIndex), d.getFrameBCID(frameIndex),
00021
      d.getFrameTimeToTrigger(frameIndex));
00022 }
4.21.3.5 processPadInFrame() void textDump::processPadInFrame (
               const Payload & d,
               uint32_t frameIndex,
               uint32_t channelIndex )
Definition at line 24 of file textDump.cc.
00026
        if(d.getThresholdStatus(frameIndex, channelIndex) > 0) { print()->info("\t\tChannel {}, Threshold
      {}", channelIndex, d.getThresholdStatus(frameIndex, channelIndex)); }
00027 }
4.21.3.6 processSlowControl() void textDump::processSlowControl (
               Buffer )
Definition at line 29 of file textDump.cc.
00029 { print()->error("textDump::processSlowControl not implemented yet."); }
4.21.3.7 setLevel() void textDump::setLevel (
               const spdlog::level::level_enum & level ) [inline]
Definition at line 25 of file textDump.h.
00025 { m_InternalLogger->set_level(level); }
4.21.3.8 start() void textDump::start ()
Definition at line 15 of file textDump.cc.
00015 { print()->info("Will dump bunch of DIF data"); }
```

The documentation for this class was generated from the following files:

- libs/interface/Dump/include/textDump.h
- libs/interface/Dump/src/textDump.cc

4.22 Timer Class Reference

```
#include <libs/core/include/Timer.h>
```

Public Member Functions

- void start ()
- void stop ()
- float getElapsedTime ()

4.22.1 Detailed Description

Definition at line 9 of file Timer.h.

4.22.2 Member Function Documentation

```
4.22.2.1 getElapsedTime() float Timer::getElapsedTime ( ) [inline]

Definition at line 14 of file Timer.h.
00014 { return std::chrono::duration_cast<std::chrono::microseconds>(m_StopTime - m_StartTime).count(); }

4.22.2.2 start() void Timer::start ( ) [inline]

Definition at line 12 of file Timer.h.
00012 { m_StartTime = std::chrono::high_resolution_clock::now(); }

4.22.2.3 stop() void Timer::stop ( ) [inline]

Definition at line 13 of file Timer.h.
00013 { m_StopTime = std::chrono::high_resolution_clock::now(); }
```


The documentation for this class was generated from the following file:

• libs/core/include/Timer.h

4.23 Version Class Reference

```
#include <libs/core/include/Version.h>
```

Inheritance diagram for Version:

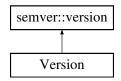

Public Member Functions

- Version (const std::uint8_t &mj, const std::uint8_t &mn, const std::uint8_t &pt, const semver::prerelease &prt=semver::prerelease::none, const std::uint8_t &prn=0) noexcept
- Version (const std::string_view &str)
- · Version ()=default
- std::uint8_t getMajor ()
- std::uint8_t getMinor ()
- std::uint8_t getPatch ()
- std::string getPreRelease ()
- std::uint8_t getPreReleaseNumber ()

4.23.1 Detailed Description

Definition at line 11 of file Version.h.

4.23.2 Constructor & Destructor Documentation

4.23.3 Member Function Documentation

```
4.23.3.1 getMajor() std::uint8_t Version::getMajor ( )
Definition at line 9 of file Version.cc.
00009 { return major; }
4.23.3.2 getMinor() std::uint8_t Version::getMinor ( )
Definition at line 11 of file Version.cc.
00011 { return minor; }
4.23.3.3 getPatch() std::uint8_t Version::getPatch ( )
Definition at line 13 of file Version.cc.
00013 { return patch; }
4.23.3.4 getPreRelease() std::string Version::getPreRelease ( )
Definition at line 15 of file Version.cc.
00016 {
         switch (prerelease_type)
00018
          case semver::prerelease::alpha: return "alpha";
case semver::prerelease::beta: return "beta";
case semver::prerelease::rc: return "rc";
00019
00020
00021
          case semver::prerelease::none: return "";
default: return "";
00023
00024 }
00025 }
4.23.3.5 getPreReleaseNumber() std::uint8_t Version::getPreReleaseNumber ( )
Definition at line 27 of file Version.cc.
```

The documentation for this class was generated from the following files:

• libs/core/include/Version.h

00027 { return prerelease_number; }

• libs/core/src/Version.cc

5 File Documentation

5.1 libs/core/include/Bits.h File Reference

```
#include <cstdint>
#include <iosfwd>
```

Typedefs

```
using bit8_t = std::uint8_t
using bit16_t = std::uint16_t
using bit32_t = std::uint32_t
using bit64_t = std::uint64_t
```

Functions

std::ostream & operator << (std::ostream &os, const bit8_t &c)
 Stream operator to print bit8_t aka std::uint8_t and not char or unsigned char.

5.1.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Bits.h.

5.1.2 Typedef Documentation

```
5.1.2.1 bit16_t using bit16_t = std::uint16_t
```

Definition at line 11 of file Bits.h.

```
5.1.2.2 bit32_t using bit32_t = std::uint32_t
```

Definition at line 12 of file Bits.h.

```
5.1.2.3 bit64_t using bit64_t = std::uint64_t
```

Definition at line 13 of file Bits.h.

```
5.1.2.4 bit8_t using bit8_t = std::uint8_t
```

Definition at line 10 of file Bits.h.

5.1.3 Function Documentation

```
5.1.3.1 operator << () std::ostream & operator << ( std::ostream & os, const bit8_t & c )
```

Stream operator to print bit8_t aka std::uint8_t and not char or unsigned char.

```
Definition at line 8 of file Bits.cc.
00008 { return os « c + 0; }
```

5.2 Bits.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include <cstdint>
00008 #include <iosfwd>
00009
00010 using bit8_t = std::uint8_t; /*<! type to represent 8bits words (1 byte) */
00011 using bit16_t = std::uint16_t; /*<! type to represent 16bits words (2 bytes) */
00012 using bit32_t = std::uint32_t; /*<! type to represent 32bits words (4 bytes) */
00013 using bit64_t = std::uint64_t; /*<! type to represent 64bits words (8 bytes) */
00014
00016 std::ostream& operator (std::ostream& os, const bit8_t& c);</pre>
```

5.3 libs/core/include/Buffer.h File Reference

```
#include "Bits.h"
#include <array>
#include <string>
#include <vector>
```

Classes

• class Buffer

5.3.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde A.Pingault L.Mirabito

See also

```
https://github.com/apingault/Trivent4HEP
```

Definition in file Buffer.h.

5.4 Buffer.h 69

5.4 Buffer.h

```
Go to the documentation of this file.
00006 #pragma once
00007
00008 #include "Bits.h"
00009
00010 #include <array>
00011 #include <string>
00012 #include <vector>
00013
00014 class Buffer
00015 {
00016 public:
00017
        Buffer(): m_Buffer(nullptr), m_Size(0), m_Capacity(0) {}
        virtual ~Buffer() {}
       Buffer(const bit8_t b[], const std::size_t& i) : m_Buffer(const_cast<bit8_t*>(&b[0])), m_Size(i),
00019
      m_Capacity(i) {}
        Buffer(const char b[], const std::size_t& i) : m_Buffer(const_cast<br/>bit8_t*>(reinterpret_cast<const</pre>
\label{linear_bit_bit_size} bit8\_t*>(&b[0]))), \ m\_Size(i * sizeof(char)), \ m\_Capacity(i * sizeof(char)) \ \{\}\\ 00021 \ \ template<typename T> Buffer(const std::vector<T>& rawdata) :
      m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const bit8_t*>(rawdata.data()))), m_Size(rawdata.size())
       * sizeof(T)), m_Capacity(rawdata.capacity() * sizeof(T)) {}
00022 template<typename T, std::size_t N> Buffer(const std::array<T, N>& rawdata) :
       \texttt{m\_Buffer(const\_cast<bit8\_t*>(reinterpret\_cast<const\_bit8\_t*>(rawdata.data()))), \ \texttt{m\_Size(rawdata.size())} } 
      * sizeof(T)), m_Capacity(rawdata.size() * sizeof(T)) {}
00023
        std::size_t size()const { return m_Size; }
00025
        std::size_t capacity()const { return m_Capacity; }
00026
00027
        bool empty() { return m_Size == 0; }
        void set(unsigned char* b) { m_Buffer = b; }
00028
00029
        void set(const Buffer& buffer)
00030
00031
         m_Buffer = buffer.begin();
00032
          m_Size
                      = buffer.size();
00033
         m_Capacity = buffer.capacity();
00034
00035
        bit8 t* begin()const { return m Buffer; }
00036
        bit8_t* end()const { return m_Buffer + m_Size; }
00037
        bit8_t& operator[](const std::size_t& pos) { return m_Buffer[pos]; }
00038
        bit8_t& operator[](const std::size_t& pos)const { return m_Buffer[pos]; }
00039
00040
        void setSize(const std::size_t& size) { m_Size = size; }
00041
00042 private:
00043 bit8_t*
                    m_Buffer{nullptr};
        std::size_t m_Size{0};
00044
00045 std::size_t m_Capacity{0};
00046 };
```

5.5 libs/core/include/BufferLooper.h File Reference

```
#include "AppVersion.h"
#include "BufferLooperCounter.h"
#include "DetectorId.h"
#include "Formatters.h"
#include "PayloadLoader.h"
#include "RawBufferNavigator.h"
#include "Timer.h"
#include "Words.h"
#include <algorithm>
#include <cassert>
#include <fmt/color.h>
#include <map>
#include <memory>
#include <spdlog/sinks/null_sink.h>
#include <spdlog/spdlog.h>
#include <string>
#include <vector>
```

Classes

class BufferLooper< SOURCE, DESTINATION >

5.5.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file BufferLooper.h.

5.6 BufferLooper.h

```
00001
00005 #pragma once
00006
00007 #include "AppVersion.h"
00008 #include "BufferLooperCounter.h"
00009 #include "DetectorId.h"
00010 #include "Formatters.h"
00011 #include "PayloadLoader.h"
00012 #include "RawBufferNavigator.h"
00013 #include "Timer.h"
00014 #include "Words.h"
00015
00016 #include <algorithm>
00017 #include <cassert>
00018 #include <fmt/color.h>
00019 #include <map>
00020 #include <memory>
00021 #include <spdlog/sinks/null_sink.h>
00022 #include <spdlog/spdlog.h>
00023 #include <string>
00024 #include <vector>
00025 // function to loop on buffers
00026
00027 template<typename SOURCE, typename DESTINATION> class BufferLooper
00028 (
00029 public:
00030
        BufferLooper(SOURCE& source, DESTINATION& dest, bool debug = false) : m_Source(source),
     m_Destination(dest), m_Debug(debug)
00031
          m_Logger = spdlog::create<spdlog::sinks::null_sink_mt>("streamout");
if(!spdlog::get("streamout")) {    spdlog::register_logger(m_Logger);    }
00032
00033
00034
          m Source.setLogger(m Logger);
00035
          m_Destination.setLogger(m_Logger);
00036
00037
00038
        void addSink(const spdlog::sink_ptr& sink, const spdlog::level_:level_enum& level =
     spdlog::get_level())
00039
00040
          sink->set level(level);
00041
          m_Sinks.push_back(sink);
00042
          m_Logger = std::make_shared<spdlog::logger>("streamout", begin(m_Sinks), end(m_Sinks));
00043
          m_Source.setLogger(m_Logger);
00044
          m_Destination.setLogger(m_Logger);
00045
00046
        void loop(const std::uint32_t& m_NbrEventsToProcess = 0)
00048
00049
          // clang-format off
00050
          fmt::print(fg(fmt::color::medium_orchid) | fmt::emphasis::bold,
    "\n"
00051
00052 " SSSSSSSSSSSSSS
      tttt\n"
ttt:::t\n"
00054 "S:::::SSSSSS::::::S t:::::t
      t::::t\n"
00055 "S:::::S
                    SSSSSSS t::::t
      t::::t\n"
```

5.6 BufferLooper.h 71

```
00056 "S:::::S
            mmmmmmm
mmmmmmm
     mmmmmmm
00057 "S:::::S
                                                    ee::::::ee a::::::a
    mm::::::m \quad m::::::mm \quad oo:::::::oo \ u::::u \qquad u::::ut::::::::t \backslash n"
u::::ut::::::::::t\n"
00059 " SS:::::SSSSStttttt:::::tttttt rr:::::rrrrr:::::re:::::e
                                                             e::::e
        r:::::re:::::eeeee:::::e aaaaaaa:::::a
                       o::::ou::::u u::::
:::::t ++**
00062 "
              S:::::S t:::::t
    m::::m m::::mo::::o
                                     u::::u t::::t\n"
00063 "
              S:::::S t:::::t ttttttr::::r
                                                  e:::::e
                                                                 a::::a
m::::m m::::mo::::o o::::ou:::::uuuu:::::u
00064 "SSSSSSS S:::::S t:::::tttt:::::tr:::::r
                                               t::::t tttttt\n"
                                                                 a::::a a:::::a m::::m
                                                  e::::::e
           t:::::tttt::::t\n"
    m::::m
e::::::eeeeeeeea::::aaaaa:::::a m::::m
    tt::::::::t\n"
tt:::::::::ttr:::::r
                                                    tt:::::::tt\n"
                                                     eeeeeeeeeee aaaaaaaaa aaaammmmmm
                                              ttttttttttt {}\n"
    mmmmmm
           mmmmmm 0000000000
                                 uuuuuuuu uuuu
00068 "\n",
00069 fmt::format(fg(fmt::color::red) | fmt::emphasis::bold, "v(}", streamout_version.to_string()));
00070
        // clang-format on
00071
        log() ->info("Streamout Version : {}", streamout_version.to_string());
log() ->info("Using InterfaceReader {} version {}", m_Source.getName(),
00072
00073
    m_Source.getVersion().to_string());
        log()->info("Using InterfaceWriter {} version {}", m_Destination.getName(),
    m_Destination.getVersion().to_string());
00075
00076
        if(!m_Destination.checkCompatibility(m_Source.getName(), m_Source.getVersion().to_string()))
00077
         log()->critical("{} version {} is not compatible with {} version {} ! ", m_Source.getName(),
00078
    m_Source.getVersion().to_string(), m_Destination.getName(), m_Destination.getVersion().to_string());
00079
         log()->info("Compatible Interfaces for {} are", m_Destination.getName());
          for(std::map<std::string, std::string>::iterator it = m_Destination.getCompatibility().begin();
08000
    it != m_Destination.getCompatibility().end(); ++it) { log()->info("{} version {}", it->first,
    it->second): }
00081
         std::exit(-1):
00082
00083
        if(!m_DetectorIDs.empty())
00084
00085
         std::string ids;
00086
         for(std::vector<DetectorID>::const_iterator it = m_DetectorIDs.cbegin(); it !=
    m_DetectorIDs.cend(); ++it) ids += std::to_string(static_cast/std::uint16_t>(*it)) + ";";
log()->info("Detector ID(s) other than {} will be ignored", ids);
00087
00088
00089
        00090
        RawBufferNavigator bufferNavigator;
00091
        Timer
                      timer;
00092
        timer.start();
00093
        m Source.start();
        m_Destination.start();
00094
00095
        while (m Source.nextEvent() && m NbrEventsToProcess >= m NbrEvents)
00096
00097
         m_Destination.setEventNumber(m_Source.getEventNumber());
00098 /**************/
00099 /*** START EVENT ***/
00100
         m_Source.startEvent();
00101
         m_Destination.startEvent();
00102 /****************
00103
00104
         m Logger->warn("===*** Event {} ***===", m NbrEvents);
00105
00106
         while(m Source.nextDIFbuffer())
00107
         {
00108
           const Buffer& buffer = m_Source.getBuffer();
00109
00110
           bufferNavigator.setBuffer(buffer);
           if(std::find(m_DetectorIDs.begin(), m_DetectorIDs.end(),
00111
    static cast<DetectorID>(bufferNavigator.getDetectorID())) == m DetectorIDs.end())
00112
           {
00113
            m_Logger->debug("Ignoring detector ID : {}", bufferNavigator.getDetectorID());
00114
            continue;
00115
           }
00116
           std::int32 t idstart = bufferNavigator.getStartOfPayload();
00117
00118
           if(m_Debug && idstart == -1) m_Logger->info(to_hex(buffer));
00119
           c.DIFStarter[idstart]++;
00120
00121 /**********
00122 /*** START DIF ***/
          m Source.startDIF();
00123
```

```
00124
             m_Destination.startDIF();
00125 /**************
00126
00127
              PayloadLoader payloadLoader;
00128
00129
              std::unique ptr<Payload>& d = payloadLoader.getPayload(bufferNavigator.getDetectorID());
00130
              if(d == nullptr)
00131
              {
00132
                m\_logger->error("streamout don't know how to parse the payload for detector_id {} !
     SKIPPING !", bufferNavigator.getDetectorID());
00133
               continue:
00134
00135
00136
              // This is really a big error so skip DIF entirely if exception occurs
00137
00138
                d->setBuffer(bufferNavigator.getPayload());
00139
                m_Logger->info("Parsing payload DIF_ID {} (detector_id {})", d->getDIFid(),
00140
     bufferNavigator.getDetectorID());
00141
             }
00142
              catch (const Exception& e)
00143
              {
00144
                m_Logger->error("{}", e.what());
00145
                continue;
00146
              }
00148
              if(buffer.end() != d->end()) m_Logger->error("DIF BUFFER END {} {} ", fmt::ptr(buffer.end()),
     fmt::ptr(d->end()));
00149
             assert(buffer.end() == d->end());
00150
00151
              c.DIFPtrValueAtReturnedPos[d->begin()[d->getEndOfDIFData() - 3]]++;
00152
              assert(d->begin()[d->getEndOfDIFData() - 3] == 0xa0);
00153
00154
              c.SizeAfterDIFPtr[d->getSizeAfterDIFPtr()]++;
00155
              m\_Destination.processDIF(*d);
              for(std::size_t i = 0; i < d->getNumberOfFrames(); ++i)
00156
00157
              {
00158
00159
                m_Source.startFrame();
00160
                m_Destination.startFrame();
00161
                m_Destination.processFrame(*d, i);
00162
00163
                for(std::size_t j = 0; j < static_cast<std::size_t>(Hardware::NUMBER_PAD); ++j)
00164
00165
                  if (d->getThresholdStatus(i, j) != 0)
00166
00167
                   m_Source.startPad();
00168
                    m_Destination.startPad();
                    m_Destination.processPadInFrame(*d, i, i);
00169
00170
                    m_Source.endPad();
00171
                    m_Destination.endPad();
00172
00173
00174
                11
00175
                m_Source.endFrame();
00176
                m Destination.endFrame();
00178
00179
              // If I want SlowControl I need to check for it first, If there is an error then it's not a
     big deal just continue and say is bad SlowControl
00180
              /*try
00181 {
00182 d.setSCBuffer();
00183 }
00184 catch(const Exception& e)
00185 {
00186 m_Logger->error("{}", e.what());
00187
00188
00189 bool processSC = false;
00190 if(d.hasSlowControl())
00191
00192 c.hasSlowControl++;
00193 processSC = true;
00194
00195 if(d.badSCData())
00196 {
00197 c.hasBadSlowControl++;
00198 processSC = false;
00199
00200 if(processSC) { m Destination.processSlowControl(d.getSCBuffer()); }*/
              // Buffer eod = d.getEndOfAllData();
00202
00203
              // c.SizeAfterAllData[eod.size()]++;
              // bit8_t* debug_variable_3 = eod.end();
00204
              // if(buffer.end() != debug_variable_3) m_Logger->info("END DATA BUFFER END {} {}",
00205
      fmt::ptr(buffer.end()), fmt::ptr(debug_variable_3));
```

```
// assert(buffer.end() == debug_variable_3);
00207
             // if(eod.size() != 0) m_Logger->info("End of Data remaining stuff : {}", to_hex(eod));*/
00208
00209
             /*int nonzeroCount = 0;
00210 for(bit8_t* it = eod.begin(); it != eod.end(); it++)
00211 if(static_cast<int>(*it) != 0) nonzeroCount++;
00212 c.NonZeroValusAtEndOfData[nonzeroCount]++; */
00213
00214
00215
             11
             m_Source.endDIF();
00216
00217
             m Destination.endDIF();
00218
        } // end of DIF while loop
m_Logger->warn("===*** Event {} ***===", m_NbrEvents);
m_NbrEvents++;
00219
00220
00221
00222 /***********
00223 /*** END EVENT ***/
00224 m_Source.endEvent();
           m_Destination.endEvent();
===\n", timer.getElapsedTime() / 1000, timer.getElapsedTime() / (1000 * m_NbrEvents));
00232 }
00233
00234
       void
                                       printAllCounters() { c.printAllCounters(); }
       std::shared_ptr<spdlog::logger> log() { return m_Logger; }
00235
00236
       void setDetectorIDs (const std::vector<DetectorID>& detectorIDs) { m_DetectorIDs = detectorIDs; }
00237
00238 private:
00239 std::vector<DetectorID>
                                       m_DetectorIDs;
       std::shared_ptr<spdlog::logger> m_Logger{nullptr};
00240
       std::vector<spdlog::sink_ptr> m_Sinks;
00241
       BufferLooperCounter
                                       c;
00243
       SOURCE&
                                       m_Source{nullptr};
00244
       DESTINATION&
                                     m_Destination{nullptr};
00245
       bool
                                      m_Debug{false};
00246
       std::uint32 t
                                      m_NbrEvents{1};
00247 1:
```

5.7 libs/core/include/BufferLooperCounter.h File Reference

```
#include <ios>
#include <map>
#include <memory>
#include <string>
```

Classes

• struct BufferLooperCounter

5.7.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file BufferLooperCounter.h.

5.8 BufferLooperCounter.h

Go to the documentation of this file.

```
00005 #pragma once
00006
00007 #include <ios>
00008 #include <map>
00009 #include <memory>
00010 #include <string>
00011
00012 struct BufferLooperCounter
00013 {
00014 public:
                               hasSlowControl
00015
        int
00016
                               hasBadSlowControl = 0;
        int
        std::map<int, int> DIFStarter;
00018
        std::map<int, int> DIFPtrValueAtReturnedPos;
        std::map<int, int> SizeAfterDIFPtr;
std::map<int, int> SizeAfterAllData;
00019
00020
00021 std::map<int, int> NonZeroValusAtEndOfData;
00022
00023
         void printCounter(const std::string& description, const std::map<int, int>& m, const
std::ios_base::fmtflags& base = std::ios_base::dec);
00024     void printAllCounters();
00025 };
```

5.9 libs/core/include/DetectorId.h File Reference

#include <cstdint>

Enumerations

enum class DetectorID: std::uint16_t { HARDROC = 100 , HARDROC_NEW = 150 , RUNHEADER = 255 }

5.9.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DetectorId.h.

5.9.2 Enumeration Type Documentation

$\textbf{5.9.2.1} \quad \textbf{DetectorID} \quad \texttt{enum class DetectorID} : \quad \texttt{std::uint16_t} \quad \texttt{[strong]}$

Enumerator

HARDROC	
HARDROC_NEW	
RUNHEADER	

5.10 DetectorId.h 75

Definition at line 9 of file Detectorld.h.

5.10 DetectorId.h

Go to the documentation of this file.

```
00001

00005 #pragma once

00006

00007 #include <cstdint>

00008

00009 enum class DetectorID : std::uint16_t

00010 {

00011 HARDROC = 100,

00012 HARDROC_NEW = 150,

00013 RUNHEADER = 255

00014 };
```

5.11 libs/core/include/DIFSlowControl.h File Reference

```
#include <bitset>
#include <cstdint>
#include <iosfwd>
#include <map>
#include <string>
```

Classes

class DIFSlowControl

Functions

• std::string to_string (const DIFSlowControl &c)

5.11.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIFSlowControl.h.

5.11.2 Function Documentation

```
5.11.2.1 to_string() std::string to_string ( const DIFSlowControl & c )
```

Definition at line 256 of file DIFSlowControl.cc.

5.12 DIFSlowControl.h

```
00001
00005 #pragma once
00006
00007 #include <bitset>
00008 #include <cstdint>
00009 #include <iosfwd>
00010 #include <map>
00011 #include <string>
00012
00013 class DIFSlowControl
00014 {
00015 public:
00017
00022
        DIFSlowControl(const std::uint8_t& version, const std::uint8_t& DIFid, unsigned char* buf);
00023
00025
        std::uint8_t getDIFId();
00026
00028
00031
        std::map<int, std::map<std::string, int> getChipsMap();
00032
00034
00038
        std::map<std::string, int> getChipSlowControl(const int& asicid);
00039
00041
00045
        int getChipSlowControl(const std::int8_t& asicid, const std::string& param);
00046
00047
        std::map<int, std::map<std::string, int»::const_iterator cbegin()const { return m_MapSC.cbegin(); }
00048
        std::map<int, std::map<std::string, int>::const_iterator cend()const { return m_MapSC.cend(); }
00049
00050
00051 private:
00053
        DIFSlowControl() = delete;
00055
        void FillHR1(const int& header_shift, unsigned char* cbuf);
        void FillHR2(const int& header_shift, unsigned char* cbuf);
void FillAsicHR1(const std::bitset<72 * 8>& bs);
00057
00059
00061
        void FillAsicHR2(const std::bitset<109 * 8>& bs);
00062
00063
        unsigned int
00064
        unsigned int
                                                    m_Version{0};
00065
        unsigned int
                                                    m_AsicType{0}; // asicType_
00066
        unsigned int
                                                    m_NbrAsic{0};
00067
       std::map<int, std::map<std::string, int> m_MapSC;
00068 };
00069
00070 std::string to_string(const DIFSlowControl& c);
00071 /* void setSCBuffer()
00072 {
00073 if(!hasSlowControl()) return;
00074 if(m_SCbuffer.size() != 0) return; // deja fait
00075 if (m_BadSlowControl) return;
00076 m_SCbuffer.set(&(begin()[getEndOfDIFData()]));
00077 // compute Slow Control size
00078 std::size_t maxsize{size() - getEndOfDIFData() + 1}; // should I +1 here ?
// SC Header
00081 uint32_t
                  chipSize{m_SCbuffer[3]};
00082 while((dif_ID != 0xal && m_SCbuffer[k] != 0xal && k < maxsize) || (dif_ID == 0xal && m_SCbuffer[k + 2]
      == chipSize && k < maxsize))
00083 (
00084 k += 2; // DIF ID + ASIC Header
00085 uint32_t scsize = m_SCbuffer[k];
00086 if(scsize != 74 && scsize != 109)
00087 {
```

5.13 libs/core/include/Exception.h File Reference

```
#include <cstdint>
#include <exception>
#include <string>
```

Classes

class Exception

5.13.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Exception.h.

5.14 Exception.h

```
00001
00005 #pragma once
00006
00007 #include <cstdint>
00008 #include <exception>
00009 #include <string>
00010
00011 class Exception
00013 public:
00014 virtual const char* what() const noexcept { return m_What.c_str(); }
00015 explicit Exception(const std::string& message) : m_Message(message) { constructWhat(); }
         Exception(const std::int32_t& error, const std::string& message) : m_Error(error),
00016
      m_Message(message) { constructWhat(); }
00017 std::int32_t error() { return m_Error; }
00018 std::string message() { return m_Message; }
00019
00020 private:
00021 void constructWhat()
00022
00023
           if(m_Error == 0) m_What = m_Message;
00024
00025
             m_What = std::string("Error ") + std::to_string(m_Error) + std::string(" : ") + m_Message;
00026
        std::string m_What;
00027
00028
        std::string m_Message;
std::int32_t m_Error{0};
00029
00030 };
```

5.15 libs/core/include/Filesystem.h File Reference

```
#include <string>
```

Functions

- std::string path (const std::string &)
- std::string extension (const std::string &)
- std::string filename (const std::string &)

5.15.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Filesystem.h.

5.15.2 Function Documentation

Definition at line 7 of file Filesystem.cc.

std::size_t pos = file.find_last_of("\\/");
return (std::string::npos == pos) ? "" : file.substr(0, pos);

00008 {

00009 00010 00011 }

```
5.15.2.1 extension() std::string extension (
            const std::string & file )
Definition at line 13 of file Filesystem.cc.
      std::size_t position = file.find_last_of(".");
return (std::string::npos == position || position == 0) ? "" : file.substr(position + 1);
00015
00016
00017 }
5.15.2.2 filename() std::string filename (
            const std::string & file )
Definition at line 19 of file Filesystem.cc.
00020 {
- 1);
00024 }
5.15.2.3 path() std::string path (
            const std::string & file )
```

5.16 Filesystem.h 79

5.16 Filesystem.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include <string>
00008
00009 std::string path(const std::string&);
00010 std::string extension(const std::string&);
00011 std::string filename(const std::string&);
```

5.17 libs/core/include/Formatters.h File Reference

```
#include "Bits.h"
#include <iosfwd>
#include <string>
```

Functions

```
    std::string to dec (const Buffer &b, const std::size t &begin=0, const std::size t &end=-1)

std::string to_dec (const bit8_t &)

    std::string to_dec (const bit16_t &)

    std::string to_dec (const bit32_t &)

    std::string to dec (const bit64 t &)

    std::string to_hex (const Buffer &b, const std::size_t &begin=0, const std::size_t &end=-1)

std::string to_hex (const bit8_t &)

    std::string to_hex (const bit16_t &)

std::string to_hex (const bit32_t &)

    std::string to_hex (const bit64_t &)

• std::string to_bin (const Buffer &b, const std::size_t &begin=0, const std::size_t &end=-1)
std::string to_bin (const bit8_t &)

    std::string to_bin (const bit16_t &)

    std::string to_bin (const bit32_t &)

• std::string to_bin (const bit64_t &)

    std::string to_oct (const Buffer &b, const std::size_t &begin=0, const std::size_t &end=-1)

    std::string to_oct (const bit8_t &)

    std::string to_oct (const bit16_t &)

    std::string to_oct (const bit32_t &)

std::string to_oct (const bit64_t &)
```

5.17.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Formatters.h.

5.17.2 Function Documentation

```
5.17.2.1 to_bin() [1/5] std::string to_bin (
               const bit16_t & b )
Definition at line 71 of file Formatters.cc.
00071 { return fmt::format("{:#016b}", b); }
5.17.2.2 to_bin() [2/5] std::string to_bin (
               const bit32_t & b )
Definition at line 73 of file Formatters.cc.
00073 { return fmt::format("{:#032b}", b); }
5.17.2.3 to_bin() [3/5] std::string to_bin (
               const bit64_t & b )
Definition at line 75 of file Formatters.cc.
00075 { return fmt::format("{:#064b}", b); }
5.17.2.4 to_bin() [4/5] std::string to_bin (
               const bit8_t & b )
Definition at line 69 of file Formatters.cc.
00069 { return fmt::format("{:#08b}", b); }
5.17.2.5 to_bin() [5/5] std::string to_bin (
               const Buffer & b,
               const std::size_t & begin = 0,
               const std::size_t & end = -1)
Definition at line 56 of file Formatters.cc.
00057 {
       std::size_t iend = end;
00059
        <u>if(iend == -1) iend = b.size();</u>
00060
        std::string ret;
00061
        for(std::size_t k = begin; k < iend; k++)</pre>
       ret += to_bin(b[k]);
ret += " - ";
}
00062
00063
00064
00065
00066
       return ret;
00067 }
5.17.2.6 to_dec() [1/5] std::string to_dec (
               const bit16_t & b )
Definition at line 29 of file Formatters.cc.
00029 { return fmt::format("{:#d}", b); }
```

```
5.17.2.7 to_dec() [2/5] std::string to_dec (
               const bit32_t & b )
Definition at line 31 of file Formatters.cc.
00031 { return fmt::format("{:#d}", b); }
5.17.2.8 to dec() [3/5] std::string to_dec (
               const bit64_t & b )
Definition at line 33 of file Formatters.cc.
00033 { return fmt::format("{:#d}", b); }
5.17.2.9 to_dec() [4/5] std::string to_dec (
               const bit8_t & b )
Definition at line 27 of file Formatters.cc.
00027 { return fmt::format("{:#d}", b); }
5.17.2.10 to_dec() [5/5] std::string to_dec (
               const Buffer & b,
               const std::size_t & begin = 0,
               const std::size_t & end = -1)
Definition at line 14 of file Formatters.cc.
00015 {
        std::size_t iend = end;
00017
        if(iend == -1) iend = b.size();
       std::string ret;
for(std::size_t k = begin; k < iend; k++)</pre>
00018
00019
00020
       ret += to_dec(b[k]);
ret += " - ";
00021
00022
00023
00024
       return ret;
00025 }
5.17.2.11 to_hex() [1/5] std::string to_hex (
               const bit16_t & b )
Definition at line 50 of file Formatters.cc.
00050 { return fmt::format("{:#04x}", b); }
5.17.2.12 to_hex() [2/5] std::string to_hex (
               const bit32_t & b )
Definition at line 52 of file Formatters.cc.
00052 { return fmt::format("{:#08x}", b); }
```

```
5.17.2.13 to_hex() [3/5] std::string to_hex (
               const bit64_t & b )
Definition at line 54 of file Formatters.cc.
00054 { return fmt::format("{:#016x}", b); }
5.17.2.14 to_hex() [4/5] std::string to_hex (
               const bit8_t & b )
Definition at line 48 of file Formatters.cc.
00048 { return fmt::format("{:#02x}", b); }
5.17.2.15 to_hex() [5/5] std::string to_hex (
               const Buffer & b,
               const std::size_t & begin = 0,
               const std::size_t & end = -1)
Definition at line 35 of file Formatters.cc.
00036 {
       std::size_t iend = end;
if(iend == -1) iend = b.size();
std::string ret;
00037
00038
00039
       for(std::size_t k = begin; k < iend; k++)</pre>
00040
00045 return ret;
00046 }
5.17.2.16 to_oct() [1/5] std::string to_oct (
               const bit16_t & b )
Definition at line 92 of file Formatters.cc.
00092 { return fmt::format("{:#080}", b); }
5.17.2.17 to_oct() [2/5] std::string to_oct (
               const bit32_t & b )
Definition at line 94 of file Formatters.cc.
00094 { return fmt::format("{:#0160}", b); }
5.17.2.18 to_oct() [3/5] std::string to_oct (
               const bit64_t & b )
Definition at line 96 of file Formatters.cc.
00096 { return fmt::format("{:#0320}", b); }
```

5.18 Formatters.h 83

```
5.17.2.19 to_oct() [4/5] std::string to_oct (
               const bit8_t & b )
Definition at line 90 of file Formatters.cc.
00090 { return fmt::format("{:#040}", b); }
5.17.2.20 to_oct() [5/5] std::string to_oct (
               const Buffer & b,
               const std::size_t & begin = 0,
               const std::size_t & end = -1)
Definition at line 77 of file Formatters.cc.
        std::size_t iend = end;
08000
        if(iend == -1) iend = b.size();
00081
        std::string ret;
        for(std::size_t k = begin; k < iend; k++)</pre>
00082
00083
00084
        ret += to_oct(b[k]);
ret += " - ";
00086
00087
       return ret;
00088 }
```

5.18 Formatters.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include "Bits.h"
80000
00009 #include <iosfwd>
00010 #include <string>
00011
00012 class Buffer;
00014 std::string to_dec(const Buffer& b, const std::size_t& begin = 0, const std::size_t& end = -1);
00015 std::string to_dec(const bit8_t&);
00016 std::string to_dec(const bit16_t&);
00017 std::string to_dec(const bit32_t&);
00018 std::string to_dec(const bit64_t&);
00020 std::string to_hex(const Buffer& b, const std::size_t& begin = 0, const std::size_t& end = -1);
00021 std::string to_hex(const bit8_t&);
00022 std::string to_hex(const bit16_t&);
00023 std::string to_hex(const bit32_t&);
00024 std::string to_hex(const bit64_t&);
00025
00026 std::string to_bin(const Buffer& b, const std::size_t& begin = 0, const std::size_t& end = -1);
00027 std::string to_bin(const bit8_t&);
00028 std::string to_bin(const bit16_t&);
00029 std::string to_bin(const bit32_t&);
00030 std::string to_bin(const bit64_t&);
00031
00032 std::string to_oct(const Buffer& b, const std::size_t& begin = 0, const std::size_t& end = -1);
00033 std::string to_oct(const bit8_t&);
00034 std::string to_oct(const bit16_t&);
00035 std::string to_oct(const bit32_t&);
00036 std::string to_oct(const bit64_t&);
```

5.19 libs/core/include/Interface.h File Reference

```
#include "AppVersion.h"
#include "Buffer.h"
#include "Version.h"
```

```
#include <map>
#include <memory>
#include <semver.hpp>
#include <spdlog/logger.h>
#include <string>
```

Classes

- · class Interface
- · class InterfaceReader
- · class InterfaceWriter

Enumerations

enum class InterfaceType { Unknown = 0 , Reader = 1 , Writer = 2 }
 template class should implement void SOURCE::start(); bool SOURCE::next(); void SOURCE::end(); const Buffer&
 SOURCE::getBuffer();

5.19.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Interface.h.

5.19.2 Enumeration Type Documentation

5.19.2.1 InterfaceType enum class InterfaceType [strong]

template class should implement void SOURCE::start(); bool SOURCE::next(); void SOURCE::end(); const Buffer& SOURCE::getBuffer();

void DESTINATION::begin(); void DESTINATION::processDIF(const DIFPtr&); void DESTINATION::process Frame(const DIFPtr&,const std::uint32_t& frameIndex); void DESTINATION::processPadInFrame(const DIFPtr&,const std::uint32_t& frameIndex,const std::uint32_t& channelIndex); void DESTINATION::processSlowControl(const Buffer&); void DESTINATION::end();

Enumerator

Unknown	
Reader	
Writer	

Definition at line 31 of file Interface.h.

5.20 Interface.h 85

5.20 Interface.h

```
00001
00004 #pragma once
00005
00006 #include "AppVersion.h"
00007 #include "Buffer.h"
00008 #include "Version.h"
00009
00010 #include <map>
00011 #include <memory>
00012 #include <semver.hpp>
00013 #include <spdlog/logger.h>
00014 #include <string>
00015
00031 enum class InterfaceType
00032 {
00033 Unknown = 0,
      Reader = 1,
Writer = 2
00034
00035
00036 };
00037
00038 class Interface
00039 {
00040 public:
        Interface(const std::string& name, const std::string& version, const InterfaceType& type) :
     m_Name(name), m_Version(version) {}
00042
       virtual ~Interface() = default;
00043
       virtual void
                                          startEvent() {}
00044
       virtual void
                                          endEvent() {}
00045
       virtual void
                                          startDIF() {}
00046
       virtual void
                                          endDIF() {}
00047
       virtual void
                                          startFrame() {}
00048
       virtual void
                                          endFrame() {}
00049
       virtual void
                                          startPad() {}
00050
                                          endPad() {}
       virtual void
00051
       std::shared_ptr<spdlog::logger>& log() { return m_Logger; }
00052
        void
                                          setLogger(const std::shared_ptr<spdlog::logger>& logger) { m_Logger
= logger; }
00053 std::string
                                          getName() { return m_Name; }
00054
        Version
                                          getVersion() { return m_Version; }
getEventNumber() { return m_EventNumber; }
00055
        std::uint32 t
00056
                                          setEventNumber(const std::uint32_t& nbr) {m_EventNumber=nbr;}
        void
00057
                                          getRunNumber() {return m_RunNumber;}
        std::uint32_t
00058
                                          setRunNumber(const std::uint32_t& nbr){m_RunNumber=nbr;}
00059 protected:
00060
       std::uint32_t
                            m_EventNumber{0};
00061
        std::uint32_t
                            m_RunNumber{0};
00062 private:
       std::shared_ptr<spdlog::logger> m_Logger{nullptr};
00064
        std::string
                                         m_Name;
00065
        Version
                                         m_Version;
00066
       InterfaceType
                                         m_Type{InterfaceType::Unknown};
00067 };
00068
00069 class InterfaceReader: public Interface
00070 {
00071 public:
00072
        InterfaceReader(const std::string& name, const std::string& version) : Interface(name, version,
     InterfaceType::Reader) {}
      virtual ~InterfaceReader() = default;
00074
00075 protected:
00076
       Buffer m_Buffer;
00077 };
00078
00079 class InterfaceWriter : public Interface
00080 {
00081 public:
       InterfaceWriter(const std::string& name, const std::string& version) : Interface(name, version,
      InterfaceType::Writer) {}
00083
00084
       void addCompatibility(const std::string& name, const std::string& version) { m_Compatible[name] =
     version; }
00085
```

```
std::map<std::string, std::string> getCompatibility() { return m_Compatible; }
00087
00088
        bool checkCompatibility(const std::string& name, const std::string& version)
00089
00090
         if (m_Compatible.find(name) != m_Compatible.end())
00091
         {
00092
                           ran = semver::range::detail::range(m_Compatible[name]);
00093
            semver::version ver = semver::version(version);
00094
            if(ran.satisfies(ver, false)) return true;
00095
00096
             return false:
00097
         }
00098
         else
           return false;
00099
00100
00101
        virtual ~InterfaceWriter() = default;
00102
00103 private:
       std::map<std::string, std::string> m_Compatible;
00105 };
```

5.21 libs/core/include/Payload.h File Reference

```
#include "Buffer.h"
#include "Exception.h"
#include <fmt/format.h>
```

Classes

· class Payload

5.21.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Payload.h.

5.22 Payload.h

```
00001
00004 #pragma once
00006 #include "Buffer.h"
00007 #include "Exception.h"
80000
00009 #include <fmt/format.h>
00010
00011 class Payload : public Buffer
00012 {
00013 public:
00014
       explicit Payload(const std::int32_t& detector_id) {}
                        setBuffer(const Buffer& buffer);
00015
       void
       std::uint32_t
                              getEndOfDIFData() const;
00016
                              getSizeAfterDIFPtr() const;
       std::uint32_t
00018
       virtual std::uint32_t getNumberOfFrames() const
00019
       virtual std::uint32_t getThresholdStatus(const std::uint32_t&, const std::uint32_t&) const = 0;
00020
       virtual std::uint32_t getDIFid() const
                                                                                                       = 0;
00021
       virtual std::uint32_t getDTC() const
virtual std::uint32_t getGTC() const
                                                                                                       = 0;
00022
                                                                                                       = 0;
00023
       virtual std::uint32_t getBCID() const
                                                                                                       = 0;
                                                                                                       = 0;
00024
       virtual std::uint64_t getAbsoluteBCID() const
```

```
virtual std::uint32_t getASICid(const std::uint32_t&) const
                                                                                                   = 0;
00026
       virtual std::uint32_t getFrameBCID(const std::uint32_t&) const
00027
       virtual std::uint32_t getFrameTimeToTrigger(const std::uint32_t&) const
                                                                                                    = 0;
00028
00029
       virtual ~Payload() {}
00030
00031 protected:
00032
       virtual void parsePayload() = 0;
00033
       std::int32_t m_DetectorID{-1};
00034
       std::uint32_t theGetFramePtrReturn_{0};
00035 };
00036
00037 inline void Payload::setBuffer(const Buffer& buffer)
00038 {
00039
       set (buffer);
00040
       parsePayload();
00041 }
00042
00043 inline std::uint32_t Payload::getEndOfDIFData()const { return theGetFramePtrReturn_; }
00045 inline std::uint32_t Payload::getSizeAfterDIFPtr()const { return size() - theGetFramePtrReturn_; }
```

5.23 libs/core/include/Payload100.h File Reference

```
#include "Payload.h"
#include <vector>
```

Classes

· class Payload100

5.23.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Payload100.h.

5.24 Payload100.h

```
00001
00005 #pragma once
00006 #include "Payload.h"
00008 #include <vector>
00009
00027 class Payload100 : public Payload
00028 {
00029 public:
00030 Payload100(): Payload(100) {}
00031
                              hasTemperature() const;
00032
                               hasAnalogReadout() const;
00033
        virtual std::uint32_t getNumberOfFrames() const final;
00034
       virtual std::uint32_t getThresholdStatus(const std::uint32_t&, const std::uint32_t&) const final;
        virtual std::uint32_t getDIFid() const final;
00035
        virtual std::uint32_t getDTC() const final;
00037
        virtual std::uint32_t getGTC() const final;
00038
        virtual std::uint32_t getBCID() const final;
00039
        virtual std::uint64_t getAbsoluteBCID() const final;
00040
        virtual std::uint32_t getASICid(const std::uint32_t&) const final;
       virtual std::uint32_t getFrameBCID(const std::uint32_ts) const final;
virtual std::uint32_t getFrameTimeToTrigger(const std::uint32_ts) const final;
00041
00042
       virtual ~Payload100();
```

```
00044
00045 bool hasAnalogReadout() const;
00046
00047 bool hasSlowControl() const;
00048
00049 float getTemperatureDIF() const;
00051 float getTemperatureASU1() const;
00052
00053 float getTemperatureASU2() const;
00054
00055 Buffer getSlowControl() const;
00056
00057 std::vector<bit8_t*> getFramesVector() const;
00058
00059 std::vector<br/>bit8_t*> getLinesVector() const;
00060
00061 bool
                   hasLine(const std::uint32_t&) const;
00062
00063 bit8_t*
                   getFramePtr(const std::uint32_t&) const;
00064
00065 std::uint32_t getDIF_CRC() const;
00066
00067 private:
00068
00069 std::uint32_t getTASU1() const;
00070 std::uint32_t getTASU2() const;
00071 std::uint32_t getTDIF() const;
00072 */
00073
00074 private:
00075
                             getFrameLevel(const std::uint32_t&, const std::uint32_t&)
       bool
00076 std::uint16_t
                            m_Version{13};
00077 std::vector<bit8_t*> m_Lines;
00078
       std::vector<bit8_t*> m_Frames;
                       _____parsePayload() final;
parseAnalogLing(-
00079 virtual void
00080 std::uint32_t
00081 std::uint32_t
                             parseAnalogLine(const std::uint32_t& idx);
                             getNumberLines() const;
00082 };
```

5.25 libs/core/include/Payload150.h File Reference

```
#include "Payload.h"
#include <vector>
```

Classes

• class Payload150

5.25.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Payload150.h.

5.26 Payload150.h 89

5.26 Payload150.h

Go to the documentation of this file.

```
00005 #pragma once
00006 #include "Payload.h"
00007
00008 #include <vector>
00009
00010 class Payload150 : public Payload
00011 {
00012 public:
00013
         Payload150() : Payload(150) {}
00014
         virtual std::uint32_t getNumberOfFrames() const final;
        virtual std::uint32_t getThresholdStatus(const std::uint32_t&, const std::uint32_t&) const final;
virtual std::uint32_t getDIFid() const final;
virtual std::uint32_t getDTC() const final;
00015
00016
00018
        virtual std::uint32_t getGTC() const final;
00019
        virtual std::uint32_t getBCID() const final;
00020
        virtual std::uint64_t getAbsoluteBCID() const final;
        virtual std::uint32_t getASICid(const std::uint32_t&) const final;
00021
00022
        virtual std::uint32_t getFrameBCID(const std::uint32_t&) const final;
virtual std::uint32_t getFrameTimeToTrigger(const std::uint32_t&) const final;
00023
        virtual ~Payload150();
00025
00026 private:
00027
        bool
                                  getFrameLevel(const std::uint32_t&, const std::uint32_t&, const std::uint32_t&)
      const;
00028 std::vector<bit8_t*> m_Frames;
00029 virtual void parsePayl
                                parsePayload() final;
00030 };
```

5.27 libs/core/include/PayloadLoader.h File Reference

```
#include "Payload.h"
#include "Payload100.h"
#include "Payload150.h"
#include <cstdint>
#include <memory>
```

Classes

· class PayloadLoader

5.27.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file PayloadLoader.h.

5.28 PayloadLoader.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include "Payload.h"
00008 #include "Payload100.h"
00009 #include "Payload150.h"
00010
00011 #include <cstdint>
00012 #include <memory>
00013
00014 class PayloadLoader
00015 {
00016 public:
         PayloadLoader() = default;
00017
00018
         std::unique_ptr<Payload>& getPayload(const std::int32_t& detector_id)
00019
           switch (detector_id)
00021
           {
             case 100: payload = std::make_unique<Payload100>(); break;
case 150: payload = std::make_unique<Payload150>(); break;
00022
00023
00024
00025
           return payload;
00026
00027
00028 private:
00029 std::unique_ptr<Payload> payload{nullptr};
00030 };
```

5.29 libs/core/include/RawBufferNavigator.h File Reference

```
#include "Buffer.h"
```

Classes

· class RawBufferNavigator

class to navigate in the raw data buffer parse the header and send the payload as Buffer

5.29.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file RawBufferNavigator.h.

5.30 RawBufferNavigator.h

```
00001
00005 #pragma once
00006
00007 #include "Buffer.h"
00008
00024 class RawBufferNavigator
00025 {
00026 public:
00027 static void startAt(const int& start);
00028 RawBufferNavigator();
00029 ~RawBufferNavigator();
00029 void setBuffer(const Buffer&);
```

5.31 libs/core/include/Timer.h File Reference

```
#include <chrono>
```

Classes

class Timer

5.31.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Timer.h.

5.32 Timer.h

Go to the documentation of this file.

```
00001
00005
00006
00006
00006
00007
#include <chrono>
00008
00009 class Timer
00010 {
00012    void start() { m_StartTime = std::chrono::high_resolution_clock::now(); }
00013    void stop() { m_StopTime = std::chrono::high_resolution_clock::now(); }
00014    float getElapsedTime() { return std::chrono::duration_cast<std::chrono::microseconds>(m_StopTime - m_StartTime).count(); }
00015
00016 private:
00017    std::chrono::time_point<std::chrono::high_resolution_clock> m_StartTime;
00018    std::chrono::time_point<std::chrono::high_resolution_clock> m_StopTime;
00019 };
```

5.33 libs/core/include/Utilities.h File Reference

```
#include <cstdint>
```

Functions

std::uint64_t GrayToBin (const std::uint64_t &n)

5.33.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Utilities.h.

5.33.2 Function Documentation

```
5.33.2.1 GrayToBin() std::uint64_t GrayToBin ( const std::uint64_t & n ) [inline]
```

Definition at line 9 of file Utilities.h.

```
00010 {
00011
        std::uint64_t ish{1};
00012
        std::uint64_t anss{n};
00013
        std::uint64_t idiv{0};
00014
        std::uint64_t ishmax{sizeof(std::uint64_t) * 8};
00015
        while(true)
00016
        idiv = anss » ish;
anss ^= idiv;
if(idiv <= 1 || ish == ishmax) return anss;</pre>
00017
00018
00019
00020
          ish «= 1;
00021 }
00022 }
```

5.34 Utilities.h

Go to the documentation of this file.

```
00005 #pragma once
00006
00007 #include <cstdint>
80000
00009 inline std::uint64_t GrayToBin(const std::uint64_t& n)
00010 {
00011 std::uint64_t ish{1};
00012
       std::uint64_t anss{n};
00013
       std::uint64_t idiv{0};
00014
       std::uint64_t ishmax{sizeof(std::uint64_t) * 8};
00015
       while(true)
00016
       {
00017
         idiv = anss » ish;
       anss ^= idiv;
if(idiv <= 1 || ish == ishmax) return anss;
00018
00019
         ish «= 1;
00020
00021
00022 }
```

5.35 libs/core/include/Version.h File Reference

```
#include <cstdint>
#include <semver.hpp>
#include <string>
```

5.36 Version.h 93

Classes

class Version

5.35.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Version.h.

5.36 Version.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include <cstdint>
00008 #include <semver.hpp>
00009 #include <string>
00010
00011 class Version : public semver::version
00012 {
00013 public:
        Version(const std::uint8_t& mj, const std::uint8_t& mn, const std::uint8_t& pt, const
     semver::prerelease& prt = semver::prerelease::none, const std::uint8_t& prn = 0) noexcept :
      semver::version(mj, mn, pt, prt, prn) {}
00015 explicit Version(const std::string_view& str) : semver::version(str) {}
00016 Version() = default;
00017 std::uint8_t getMajor();
00018 std::uint8_t getMinor();
00019
        std::uint8_t getPatch();
00020 std::string getPreRelease();
00021
        std::uint8_t getPreReleaseNumber();
00022 };
```

5.37 libs/core/include/Words.h File Reference

Enumerations

• enum class Hardware : std::uint8_t { NUMBER_PAD = 64 }

5.37.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Words.h.

5.37.2 Enumeration Type Documentation

5.37.2.1 Hardware enum class Hardware : std::uint8_t [strong]

Enumerator

```
NUMBER PAD
```

Definition at line 8 of file Words.h.

```
00009 {
00010 NUMBER_PAD = 64,
00011 };
```

5.38 Words.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 // TODO(flagarde): SUPPRESS THIS ***
00008 enum class Hardware : std::uint8_t
00009 {
00010 NUMBER_PAD = 64,
00011 };
```

5.39 libs/core/src/Bits.cc File Reference

```
#include "Bits.h"
```

Functions

std::ostream & operator << (std::ostream &os, const bit8_t &c)
 Stream operator to print bit8_t aka std::uint8_t and not char or unsigned char.

5.39.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Bits.cc.

5.39.2 Function Documentation

```
5.39.2.1 operator<<() std::ostream & operator<< ( std::ostream & os, const bit8_t & c )
```

Stream operator to print bit8_t aka std::uint8_t and not char or unsigned char.

```
Definition at line 8 of file Bits.cc. 00008 { return os « c + 0; }
```

5.40 Bits.cc 95

5.40 Bits.cc

Go to the documentation of this file.

```
00001
00006 #include "Bits.h"
00007
00008 std::ostream& operator«(std::ostream& os, const bit8_t& c) { return os « c + 0; }
```

5.41 libs/core/src/BufferLooperCounter.cc File Reference

```
#include "BufferLooperCounter.h"
#include "Formatters.h"
#include <fmt/color.h>
```

5.42 BufferLooperCounter.cc

```
Go to the documentation of this file.
```

```
00001
00005 #include "BufferLooperCounter.h"
00007 #include "Formatters.h"
00008
00009 #include <fmt/color.h>
00010
00011 void BufferLooperCounter::printAllCounters()
00012 {
00013
        fmt::print(fg(fmt::color::crimson) \ | \ fmt::emphasis::bold, \ "BUFFER LOOP FINAL STATISTICS : \ \ \ \ \ "");
        printCounter("Start of DIF header", DIFStarter);
printCounter("Value after DIF data are processed", DIFPtrValueAtReturnedPos, std::ios_base::hex);
00014
00015
        printCounter("Size remaining in buffer after end of DIF data", SizeAfterDIFPtr);
00016
        fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, "Number of Slow Control found {} out of
00017
      which {} are bad\n", hasSlowControl, hasBadSlowControl);
00018
        printCounter("Size remaining after all of data have been processed", SizeAfterAllData);
00019
        printCounter("Number on non zero values in end of data buffer", NonZeroValusAtEndOfData);
00020 }
00021
00022 void BufferLooperCounter::printCounter(const std::string& description, const std::map<int, int>& m,
      const std::ios_base::fmtflags& base)
00023 {
00024
        std::string out{"statistics for " + description + " : n};
00025
        for(std::map<int, int>::const_iterator it = m.begin(); it != m.end(); it++)
00026
          if(it != m.begin()) out += ",";
out += " [";
00027
00028
00029
          switch(base)
00030
00031
             case std::ios_base::dec: out += to_dec(static_cast<std::uint32_t>(it->first)); break;
            case std::ios_base::hex:    out += to_hex(static_cast<std::uint32_t>(it->first)); break;
case std::ios_base::oct:    out += to_oct(static_cast<std::uint32_t>(it->first)); break;
00032
00033
00034
             default: out += to_dec(static_cast<std::uint32_t>(it->first)); break;
00035
00036
          out += "]=" + std::to_string(it->second);
00037
        out += "\n";
00038
        fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, out);
00039
00040 }
```

5.43 libs/core/src/DIFSlowControl.cc File Reference

```
#include "DIFSlowControl.h"
```

Functions

std::string to_string (const DIFSlowControl &c)

5.43.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIFSlowControl.cc.

5.43.2 Function Documentation

```
5.43.2.1 to_string() std::string to_string ( const DIFSlowControl & c )
```

Definition at line 256 of file DIFSlowControl.cc.

5.44 DIFSlowControl.cc

```
00001
00005 #include "DIFSlowControl.h"
00006
00007 DIFSlowControl::DIFSlowControl(const std::uint8_t& version, const std::uint8_t& DIfId, unsigned char*
      cbuf) : m_Version(version), m_DIFId(DIfId), m_AsicType(2)
00008 {
        if(cbuf[0] != 0xb1) return;
00009
00010
        int header_shift{6};
00011
        if (m_Version < 8) m_NbrAsic = cbuf[5];</pre>
00012
        else
00013
                     = cbuf[1];
= cbuf[2];
00014
         m_DIFId
00015
          m_NbrAsic
         header_shift = 3;
00016
00017
00018
       int size_hardroc1 = m_NbrAsic * 72 + header_shift + 1;
00019
        if(cbuf[size_hardroc1 - 1] != 0xa1) size_hardroc1 = 0;
00020
00021
        int size_hardroc2 = m_NbrAsic * 109 + header_shift + 1;
00022
        if(cbuf[size_hardroc2 - 1] != 0xa1) size_hardroc2 = 0;
00023
        if(size_hardroc1 != 0)
00024
       {
00025
        FillHR1(header_shift, cbuf);
00026
         m_AsicType = 1;
00027
00028
        else if(size_hardroc2 != 0)
         FillHR2(header_shift, cbuf);
00029
00030
       else
00031
         return;
00032 }
00033
00034 inline std::uint8_t DIFSlowControl::getDIFId() { return m_DIFId; }
00035
00036 inline std::map<int, std::map<std::string, int» DIFSlowControl::getChipsMap() { return m MapSC; }
00037
00038 inline std::map<std::string, int> DIFSlowControl::getChipSlowControl(const int& asicid) { return
      m_MapSC[asicid]; }
00039
```

```
00040 inline int DIFSlowControl::getChipSlowControl(const std::int8_t& asicid, const std::string& param) {
      return getChipSlowControl(asicid)[param]; }
00041
00042 void DIFSlowControl::FillHR1(const int& header_shift, unsigned char* cbuf)
00043 {
00044
        int nasic{cbuf[header shift - 1]}:
        int idx{header_shift};
00046
        for (int k = 0; k < nasic; k++)
00047
00048
          std::bitset<72 * 8> bs;
          // printf("%x %x \n",cbuf[idx+k*72+69],cbuf[idx+k*72+70]);
00049
00050
          for (int 1 = 71; 1 >= 0; 1--)
00051
00052
            // printf("%d %x : %d -->",l,cbuf[idx+k*72+1],(71-1)*8);
00053
            for (int m = 0; m < 8; m++)</pre>
00054
              if(((1 \ll m) \& cbuf[idx + k * 72 + 1]) != 0) bs.set((71 - 1) * 8 + m, 1);
00055
00056
              els
00057
                bs.set((71 - 1) * 8 + m, 0);
              // printf("%d",(int) bs[(71-1)*8+m]);
00058
00059
00060
            // printf("\n");
00061
00062
          FillAsicHR1(bs):
00063
       }
00064 }
00065
00066 void DIFSlowControl::FillHR2(const int& header_shift, unsigned char* cbuf)
00067 {
00068
        // int scsize1=cbuf[header_shift-1] *109+(header_shift-1) +2;
00069
        int nasic{cbuf[header_shift - 1]};
        int idx{header_shift};
// std::cout«" DIFSlowControl::FillHR nasic "«nasic«std::endl;
00070
00071
00072
        for(int k = 0; k < nasic; k++)
00073
          std::bitset<109 * 8> bs;
00074
          // printf("%x %x \n",cbuf[idx+k*109+69],cbuf[idx+k*109+70]);
for(int 1 = 108; 1 >= 0; 1--)
00075
00077
          {
00078
            // printf("%d %x : %d -->",1,cbuf[idx+k*109+1],(71-1)*8);
00079
            for (int m = 0; m < 8; m++)
00080
              if(((1 \le m) \le chiffidx + k \le 109 + 11)) != 0) bs.set((108 - 1) \le 8 + m. 1):
00081
00082
              else
                bs.set((108 - 1) \star 8 + m, 0);
00083
              // printf("%d",(int) bs[(71-1)*8+m]);
00084
00085
00086
            // printf("\n");
00087
          FillAsicHR2(bs);
00088
00089
       }
00090 }
00091
00092 void DIFSlowControl::FillAsicHR1(const std::bitset<72 * 8>& bs)
00093 {
00094
        // Asic Id
00095
        int asicid{0};
       for(int j = 0; j < 8; j++)
  if(bs[j + 9] != 0) asicid += (1 « (7 - j));</pre>
00096
00097
00098
        std::map<std::string, int> mAsic;
        // Slow Control
00099
        mAsic["SSCO"]
00100
                               = static_cast<int>(bs[575]);
00101
        mAsic["SSC1"]
                               = static_cast<int>(bs[574]);
        mAsic["SSC2"]
                                = static_cast<int>(bs[573]);
00102
00103
        mAsic["Choix_caisson"] = static_cast<int>(bs[572]);
       mAsic["SW_50k"]
mAsic["SW_100k"]
00104
                              = static_cast<int>(bs[571]);
00105
                               = static_cast<int>(bs[570]);
       mAsic["SW_100f"]
                               = static cast<int>(bs[569]);
00106
00107
       mAsic["SW_50f"]
                               = static cast<int>(bs[568]);
00108
00109
        mAsic["Valid_DC"] = static_cast<int>(bs[567]);
00110
        mAsic["ON_Discri"] = static_cast<int>(bs[566]);
        mAsic["ON_Fsb"]
                           = static_cast<int>(bs[565]);
00111
        mAsic["ON_Otaq"]
                           = static_cast<int>(bs[564]);
00112
       mAsic["ON_W"]
mAsic["ON_Ss"]
                          = static_cast<int>(bs[563]);
00113
00114
                          = static_cast<int>(bs[562]);
00115
        mAsic["ON_Buf"]
                           = static_cast<int>(bs[561]);
00116
        mAsic["ON_Paf"]
                          = static_cast<int>(bs[560]);
00117
        // Gain
        for(int i = 0; i < 64; i++)
00118
00119
00120
          int gain{0};
          00121
00122
00123
00124
00125
```

```
00126
00127
         mAsic["ON_Otabg"] = static_cast<int>(bs[111]);
mAsic["ON_Dac"] = static_cast<int>(bs[110]);
00128
00129
         mAsic["ON_Otadac"] = static_cast<int>(bs[109]);
00130
00131
         // DAC
         int dac1{0};
00132
         for(int j = 0; j < 10; j++)
if(bs[j + 99] != 0) dac1 += (1 « j);
00133
00134
         mAsic["DAC1"] = dac1;
00135
         int dac0{0};
00136
         for(int j = 0; j < 10; j++)
if(bs[j + 89] != 0) dac0 += (1 « j);</pre>
00137
00138
         mAsic["DAC0"]
00139
                                     = dac0;
00140
         mAsic["EN_Raz_Ext"]
                                       = static_cast<int>(bs[23]);
         mAsic["EN_Raz_Int"] = static_cast<int>(bs[22]);
mAsic["EN_Out_Raz_Int"] = static_cast<int>(bs[21]);
00141
00142
         mAsic["EN_Trig_Ext"]
                                       = static_cast<int>(bs[20]);
00143
         mAsic["EN_Trig_Int"]
                                       = static_cast<int>(bs[19]);
00145
         mAsic["EN_Out_Trig_Int"] = static_cast<int>(bs[18]);
         mAsic["Bypass_Chip"]
                                       = static_cast<int>(bs[17]);
00146
                                       = static_cast<int>(asicid);
00147
         mAsic["HardrocHeader"]
         mAsic["EN_Out_Discri"]
00148
                                       = static_cast<int>(bs[8]);
         mAsic["EN_Transmit_On"] = static_cast<int>(bs[7]);
00149
00150
         mAsic["EN_Dout"]
                                       = static_cast<int>(bs[6]);
         mAsic["EN_RamFull"]
00151
                                       = static_cast<int>(bs[5]);
00152
         m_MapSC[asicid]
                                       = mAsic;
00153 }
00154
00155 void DIFSlowControl::FillAsicHR2(const std::bitset<109 * 8>& bs)
00156 {
00157
         int asicid{0};
         for(int j = 0; j < 8; j++)
  if(bs[j + (108 - 7) * 8 + 2] != 0) asicid += (1 « (7 - j));</pre>
00158
00159
00160
         std::map<std::string, int> mAsic;
00161
         for (int i = 0; i < 64; i++)
00162
00163
           int gain{0};
00164
            int mask{0};
00165
           mAsic["Channel_" + std::to_string(i) + "_" + "cTest"] = bs[i];
           masic("Channel_" + std::to_string(i) + "_" + "clest"] = bs[i
for(int j = 0; j < 8; j++)
    if(bs[64 + i * 8 + j] != 0) gain += (1 « j);
masic("Channel_" + std::to_string(i) + "_" + "Gain"] = gain;
for(int j = 0; j < 3; j++)
    if(bs[8 * 77 + 2 + i * 3 + j] != 0) mask += (1 « j);
masic["Channel_" + std::to_string(i) + "_" + "Mask"] = mask;</pre>
00166
00167
00168
00169
00170
00171
00172
00173
         mAsic["PwrOnPA"] = static\_cast < int > (bs[8 * 72]);
         mAsic["Cmdb3SS"] = static_cast<int>(bs[8 * 72 + 1]);
00174
         mAsic["Cmdb2SS"] = static_cast<int>(bs[8 * 72 + 2]);
00175
         mAsic["Cmdb1SS"] = static_cast<int>(bs[8 * 72 + 3]);
00177
         mAsic["Cmdb0SS"] = static_cast<int>(bs[8 * 72 + 4]);
         mAsic["SwSsc0"] = static_cast<int>(bs[8 * 72 + 5]);
mAsic["SwSsc1"] = static_cast<int>(bs[8 * 72 + 6]);
00178
00179
         mAsic["SwSsc2"] = static_cast<int>(bs[8 * 72 + 7]);
00180
00181
         mAsic["PwrOnBuff"] = static_cast<int>(bs[8 * 73]);
         mAsic["PwronSS"] = static_cast<int>(bs[8 * 73 + 1]);
mAsic["PwronW"] = static_cast<int>(bs[8 * 73 + 2]);
00183
00184
         mAsic["Cmdb3Fsb2"] = static\_cast < int > (bs[8 * 73 + 3]);
00185
         mAsic["Cmdb2Fsb2"] = static_cast<int>(bs[8 * 73 + 4]);
00186
         mAsic["Cmdb1Fsb2"] = static_cast<int>(bs[8 * 73 + 5]);
00187
00188
         mAsic["Cmdb0Fsb2"] = static_cast<int>(bs[8 * 73 + 6]);
         mAsic["Sw50k2"]
                               = static_cast<int>(bs[8 * 73 + 7]);
00189
00190
00191
         mAsic["Sw100k2"]
                               = static_cast<int>(bs[8 \star 74]);
         mAsic["Sw100f2"]
                               = static_cast<int>(bs[8 * 74 + 1]);
00192
                               = static_cast<int>(bs[8 * 74 + 2]);
         mAsic["Sw50f2"]
00193
         mAsic["Cmdb3Fsb1"] = static_cast<int>(bs[8 * 74 + 3]);
00194
         mAsic["Cmdb2Fsb1"] = static_cast<int>(bs[8 * 74 + 4]);
00195
00196
         mAsic["Cmdb1Fsb1"] = static\_cast < int > (bs[8 * 74 + 5]);
         mAsic["Cmdb0Fsb1"] = static_cast<int>(bs[8 * 74 + 6]);
00197
         mAsic["Sw50k1"]
                               = static_cast<int>(bs[8 * 74 + 7]);
00198
00199
                               = static_cast<int>(bs[8 * 75]);
00200
         mAsic["Sw100k1"]
         mAsic["Sw100f1"]
                                = static_cast<int>(bs[8 * 75 + 1]);
00201
00202
         mAsic["Sw50f1"]
                                = static_cast<int>(bs[8 * 75 + 2]);
00203
         mAsic["Sel0"]
mAsic["Sel11"]
                                = static_cast<int>(bs[8 * 75 + 3]);
00204
                                = static_cast<int>(bs[8 * 75 + 4]);
         mAsic["PwrOnFsb"] = static_cast<int>(bs[8 * 75 + 5]);
00205
         mAsic["PwrOnFsb1"] = static_cast<int>(bs[8 * 75 + 6]);
00206
00207
         mAsic["PwrOnFsb2"] = static_cast<int>(bs[8 * 75 + 7]);
00208
00209
         mAsic["Sw50k0"]
                                  = static_cast<int>(bs[8 * 76]);
         mAsic["Sw100k0"]
mAsic["Sw100f0"]
                                  = static_cast<int>(bs[8 * 76 + 1]);
= static_cast<int>(bs[8 * 76 + 2]);
00210
00211
00212
         mAsic["Sw50f0"]
                                  = static_cast<int>(bs[8 * 76 + 3]);
```

```
mAsic["EnOtaQ"] = static_cast<int>(bs[8 * 76 + 4]);
mAsic["OtaQ_PwrADC"] = static_cast<int>(bs[8 * 76 + 5]);
00213
00214
         mAsic["Discri_PwrA"] = static_cast<int>(bs[8 * 76 + 6]);
00215
00216
         mAsic["Discri2"]
                                  = static_cast<int>(bs[8 \star 76 + 7]);
00217
                               = static_cast<int>(bs[8 * 77]);
00218
         mAsic["Discri1"]
         mAsic["RS_or_Discri"] = static_cast<int>(bs[8 * 77 + 1]);
00219
00220
00221
         mAsic["Header"] = asicid;
00222
          for (int i = 0; i < 3; i++)
00223
00224
           int B = 0:
          for (int j = 0; j < 10; j++)
if (bs[8 * 102 + 2 + i * 10 + j] != 0) B += (1 « j);
00225
00226
00227
            mAsic["B" + std::to_string(i)] = B;
00228
00229
         mAsic["Smalldac"] = static_cast<int>(bs[8 * 106]);
mAsic["DacSw"] = static_cast<int>(bs[8 * 106 + 1]);
00230
00231
         mAsic["OtagBgSw"] = static_cast<int>(bs[8 * 106 + 2]);
00232
         mAsic["Trig2b"] = static_cast<int>(bs[8 * 106 + 3]);
mAsic["Trig0b"] = static_cast<int>(bs[8 * 106 + 4]);
mAsic["Trig0b"] = static_cast<int>(bs[8 * 106 + 5]);
00233
00234
00235
         mAsic["EnTrigOut"] = static_cast<int>(bs[8 * 106 + 6]);
00236
00237
         mAsic["Discroror"] = static_cast<int>(bs[8 * 106 + 7]);
00238
         mAsic["TrigExtVal"] = static_cast<int>(bs[8 * 107]);
mAsic["RazChnIntVal"] = static_cast<int>(bs[8 * 107 + 1]);
00239
00240
         mAsic["RazChnExtVal"] = static_cast<int>(bs[8 * 107 + 2]);
00241
                              = static_cast<int>(bs[8 * 107 + 3]);
= static_cast<int>(bs[8 * 107 + 4]);
         mAsic["ScOn"]
00242
00243
         mAsic["CLKMux"]
00244
         // EnOCDout1b EnOCDout2b EnOCTransmitOn1b EnOCTransmitOn2b
00245
                                                                                          EnOCChipsatb SelStartReadout
SelEndReadout
00250
        mAsic["EnOCTransmitOn1b"] = static_cast<int>(bs[8 * 108 + 5]);
00250 mAsic["EnoCDout2b"] = static_cast<int>(bs[8 * 108 + 6]);
00252 mAsic["EnoCDout1b"] = static_cast<int>(bs[8 * 108 + 7]);
00253 m_MapSC[asicid] = mAsic;
00254 }
00255
00256 std::string to_string(const DIFSlowControl& c)
00257 {
00258 std::string ret;
00259
         for(std::map<int, std::map<std::string, int»::const_iterator it = c.cbegin(); it != c.cend(); it++)</pre>
00260
          ret += "ASIC " + std::to_string(it->first) + " :\n";
00261
       for (std::map<std::string, int>::const_iterator jt = (it->second).begin(); jt != (it->second).end(); jt++) ret += jt->first + " : " + std::to_string(jt->second) + "\n";
00262
00263
00264
         return ret;
00265 }
```

5.45 libs/core/src/Filesystem.cc File Reference

#include "Filesystem.h"

Functions

- std::string path (const std::string &file)
- std::string extension (const std::string &file)
- std::string filename (const std::string &file)

5.45.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Filesystem.cc.

5.45.2 Function Documentation

```
5.45.2.1 extension() std::string extension (
              const std::string & file )
Definition at line 13 of file Filesystem.cc.
return (std::string::npos == position || position == 0) ? "" : file.substr(position + 1);
00017 }
5.45.2.2 filename() std::string filename (
              const std::string & file )
Definition at line 19 of file Filesystem.cc.
       std::size_t position = file.find_last_of(".");
00022 std::size_t pos
                          = file.find_last_of("\\/");
00023 return (std::string::npos == pos) ? file.substr(0, position) : file.substr(pos + 1, position - pos - 1);
00024 }
5.45.2.3 path() std::string path (
              const std::string & file )
Definition at line 7 of file Filesystem.cc.
00008 {
       std::size_t pos = file.find_last_of("\\/");
return (std::string::npos == pos) ? "" : file.substr(0, pos);
00009
00011 }
```

5.46 Filesystem.cc

```
00001
00005 #include "Filesystem.h"
00006
00007 std::string path(const std::string& file)
80000
          std::size_t pos = file.find_last_of("\\/");
return (std::string::npos == pos) ? "" : file.substr(0, pos);
00009
00011 }
00012
00013 std::string extension(const std::string& file)
00014 {
00015 std::size_t position = file.find_last_of(".");
00016 return (std::string::npos == position || position == 0) ? "" : file.substr(position + 1);
00017 }
00018
00019 std::string filename(const std::string& file)
00020 {
00021
         std::size_t position = file.find_last_of(".");
std::size_t pos = file.find_last_of("\\/");
return (std::string::npos == pos) ? file.substr(0, position) : file.substr(pos + 1, position - pos
00022
00023
00024 }
```

5.47 libs/core/src/Formatters.cc File Reference

```
#include "Formatters.h"
#include "Bits.h"
#include "Buffer.h"
#include "Words.h"
#include <fmt/format.h>
```

Functions

```
• std::string to dec (const Buffer &b, const std::size t &begin, const std::size t &end)

    std::string to_dec (const bit8_t &b)

• std::string to_dec (const bit16_t &b)

    std::string to dec (const bit32 t &b)

• std::string to dec (const bit64 t &b)

    std::string to hex (const Buffer &b, const std::size t &begin, const std::size t &end)

std::string to_hex (const bit8_t &b)

    std::string to_hex (const bit16_t &b)

    std::string to_hex (const bit32_t &b)

• std::string to hex (const bit64 t &b)

    std::string to_bin (const Buffer &b, const std::size_t &begin, const std::size_t &end)

• std::string to_bin (const bit8_t &b)

    std::string to bin (const bit16 t &b)

    std::string to_bin (const bit32_t &b)

• std::string to_bin (const bit64_t &b)

    std::string to oct (const Buffer &b, const std::size t &begin, const std::size t &end)

    std::string to oct (const bit8 t &b)

    std::string to_oct (const bit16_t &b)

• std::string to_oct (const bit32_t &b)

    std::string to_oct (const bit64_t &b)
```

5.47.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Formatters.cc.

5.47.2 Function Documentation

```
5.47.2.2 to_bin() [2/5] std::string to_bin (
               const bit32_t & b )
Definition at line 73 of file Formatters.cc.
00073 { return fmt::format("{:#032b}", b); }
5.47.2.3 to_bin() [3/5] std::string to_bin (
               const bit64_t & b )
Definition at line 75 of file Formatters.cc.
00075 { return fmt::format("{:#064b}", b); }
5.47.2.4 to_bin() [4/5] std::string to_bin (
               const bit8_t & b )
Definition at line 69 of file Formatters.cc.
00069 { return fmt::format("{:#08b}", b); }
5.47.2.5 to_bin() [5/5] std::string to_bin (
               const Buffer & b,
               const std::size_t & begin,
               const std::size_t & end )
Definition at line 56 of file Formatters.cc.
00057 {
00058
        std::size_t iend = end;
00059
        if(iend == -1) iend = b.size();
       std::string ret;
for(std::size_t k = begin; k < iend; k++)
00060
00061
00062
        ret += to_bin(b[k]);
ret += " - ";
00063
00064
00065
00066
       return ret;
00067 }
5.47.2.6 to_dec() [1/5] std::string to_dec (
               const bit16_t & b )
Definition at line 29 of file Formatters.cc.
00029 { return fmt::format("{:#d}", b); }
5.47.2.7 to_dec() [2/5] std::string to_dec (
               const bit32_t & b )
Definition at line 31 of file Formatters.cc.
```

00031 { return fmt::format("{:#d}", b); }

```
5.47.2.8 to_dec() [3/5] std::string to_dec (
               const bit64_t & b )
Definition at line 33 of file Formatters.cc.
00033 { return fmt::format("{:#d}", b); }
5.47.2.9 to dec() [4/5] std::string to_dec (
               const bit8_t & b )
Definition at line 27 of file Formatters.cc.
00027 { return fmt::format("{:#d}", b); }
5.47.2.10 to_dec() [5/5] std::string to_dec (
               const Buffer & b,
               const std::size_t & begin,
               const std::size_t & end )
Definition at line 14 of file Formatters.cc.
       std::size_t iend = end;
if(iend == -1) iend = b.size();
std::string ret;
00016
00017
00018
00019
       for(std::size_t k = begin; k < iend; k++)</pre>
00024 return ret;
00025 }
5.47.2.11 to_hex() [1/5] std::string to_hex (
               const bit16_t & b )
Definition at line 50 of file Formatters.cc.
00050 { return fmt::format("{:#04x}", b); }
5.47.2.12 to_hex() [2/5] std::string to_hex (
               const bit32_t & b )
Definition at line 52 of file Formatters.cc.
00052 { return fmt::format("{:#08x}", b); }
5.47.2.13 to_hex()[3/5] std::string to_hex (
               const bit64_t & b )
Definition at line 54 of file Formatters.cc.
00054 { return fmt::format("{:#016x}", b); }
```

```
5.47.2.14 to_hex() [4/5] std::string to_hex (
                const bit8_t & b )
Definition at line 48 of file Formatters.cc.
00048 { return fmt::format("{:#02x}", b); }
5.47.2.15 to hex() [5/5] std::string to_hex (
                const Buffer & b,
                const std::size_t & begin,
                const std::size_t & end )
Definition at line 35 of file Formatters.cc.
        std::size_t iend = end;
if(iend == -1) iend = b.size();
std::string ret;
for(std::size_t k = begin; k < iend; k++)</pre>
00037
00038
00039
00040
00041
        ret += to_hex(b[k]);
ret += " - ";
00042
00043
00044 }
00045 return ret;
00046 }
5.47.2.16 to_oct() [1/5] std::string to_oct (
                const bit16_t & b )
Definition at line 92 of file Formatters.cc.
00092 { return fmt::format("{:#080}", b); }
5.47.2.17 to_oct() [2/5] std::string to_oct (
                const bit32_t & b )
Definition at line 94 of file Formatters.cc.
00094 { return fmt::format("{:#0160}", b); }
5.47.2.18 to_oct() [3/5] std::string to_oct (
                const bit64_t & b )
Definition at line 96 of file Formatters.cc.
00096 { return fmt::format("{:#0320}", b); }
5.47.2.19 to_oct() [4/5] std::string to_oct (
                const bit8_t & b )
Definition at line 90 of file Formatters.cc.
00090 { return fmt::format("{:#040}", b); }
```

5.48 Formatters.cc 105

```
5.47.2.20 to_oct() [5/5] std::string to_oct (
              const Buffer & b,
              const std::size_t & begin,
               const std::size_t & end )
Definition at line 77 of file Formatters.cc.
00078
        std::size_t iend = end;
08000
        if (iend == -1) iend = b.size();
00081
        std::string ret;
00082
        for(std::size_t k = begin; k < iend; k++)</pre>
00083
00084
         ret += to_oct(b[k]);
00085
         ret += " - ";
00086
00087
       return ret;
00088 }
```

5.48 Formatters.cc

```
00001
00006 #include "Formatters.h"
00007
00008 #include "Bits.h"
00009 #include "Buffer.h"
00010 #include "Words.h"
00011
00012 #include <fmt/format.h>
00013
00014 std::string to_dec(const Buffer& b, const std::size_t& begin, const std::size_t& end)
00015 {
00016
        std::size_t iend = end;
        if(iend == -1) iend = b.size();
00017
00018
        std::string ret;
00019
        for(std::size_t k = begin; k < iend; k++)</pre>
       ret += to_dec(b[k]);
ret += " - ";
}
00020
00021
00022
00023
00024
        return ret:
00025 }
00026
00027 std::string to_dec(const bit8_t& b) { return fmt::format("{:#d}", b); }
00028
00029 std::string to_dec(const bit16_t& b) { return fmt::format("{:#d}", b); }
00030
00031 std::string to_dec(const bit32_t& b) { return fmt::format("{:#d}", b); }
00032
00033 std::string to_dec(const bit64_t& b) { return fmt::format("{:#d}", b); }
00034
00035 std::string to_hex(const Buffer& b, const std::size_t& begin, const std::size_t& end)
00036 {
00037
        std::size_t iend = end;
00038
        <u>if</u>(iend == -1) iend = b.size();
00039
        std::string ret;
00040
        for(std::size_t k = begin; k < iend; k++)</pre>
00041
00042
          ret += to hex(b[k]);
        ret += " - ";
00043
00044
00045
        return ret;
00046 }
00047
00048 std::string to_hex(const bit8_t& b) { return fmt::format("{:#02x}", b); }
00049
00050 std::string to_hex(const bit16_t& b) { return fmt::format("{:#04x}", b); }
00051
00052 std::string to_hex(const bit32_t& b) { return fmt::format("{:#08x}", b); }
00053
00054 std::string to_hex(const bit64_t& b) { return fmt::format("{:\#016x}", b); }
00055
00056 std::string to_bin(const Buffer& b, const std::size_t& begin, const std::size_t& end)
00057 {
00058
        std::size_t iend = end;
00059
        if(iend == -1) iend = b.size();
00060
        std::string ret;
for(std::size_t k = begin; k < iend; k++)</pre>
00061
00062
        {
00063
          ret += to_bin(b[k]);
```

```
ret += " - ";
00065
00066
        return ret;
00067 }
00068
00069 std::string to_bin(const bit8_t& b) { return fmt::format("{:#08b}", b); }
00071 std::string to_bin(const bit16_t& b) { return fmt::format("{:#016b}", b); }
00072
00073 std::string to_bin(const bit32_t& b) { return fmt::format("{:#032b}", b); }
00074
00075 std::string to bin(const bit64 t& b) { return fmt::format("{:#064b}", b); }
00076
00077 std::string to_oct(const Buffer& b, const std::size_t& begin, const std::size_t& end)
00078 {
00079
        std::size_t iend = end;
08000
        if(iend == -1) iend = b.size();
        std::string ret;
00081
00082
        for(std::size_t k = begin; k < iend; k++)</pre>
        ret += to_oct(b[k]);
ret += " - ";
00084
00085
00086
00087
       return ret;
00088 }
00090 std::string to_oct(const bit8_t& b) { return fmt::format("{:#040}", b); }
00091
00092 std::string to_oct(const bit16_t& b) { return fmt::format("{:#080}", b); }
00093
00094 std::string to oct(const bit32 t& b) { return fmt::format("{:#0160}", b); }
00095
00096 std::string to_oct(const bit64_t& b) { return fmt::format("{:#0320}", b); }
```

5.49 libs/core/src/Payload100.cc File Reference

```
#include "Payload100.h"
#include "Utilities.h"
```

Enumerations

```
enum class Size : std::uint8_t {
 DATA_FORMAT_VERSION = 1 , DAQ_SOFTWARE_VERSION = 2 , SDCC_FIRMWARE_VERSION = 2 ,
 DIF FIRMWARE VERSION = 2,
 TIMESTAMP_SECONDES = 4, TIMESTAMP_MILLISECONDS = 4, GLOBAL_HEADER = 1, DIF_IF = 1,
 DIF TRIGGER COUNTER = 4, INFORMATION COUNTER = 4, GLOBAL TRIGGER COUNTER = 4,
 ABSOLUTE BCID = 6,
 BCID DIF = 3, NUMBER LINE = 1, TEMP ASU1 = 4, TEMP ASU2 = 4,
 TEMP_DIF = 1, HEADER_LINE = 1, NUMBER_CHIPS = 1, LINE_SIZE = 64 * 2,
 TRAILER LINE = 1, FRAME HEADER = 1, MICROROC HEADER = 1, BCID = 3,
 DATA = 16, FRAME TRAILER = 1, GLOBAL TRAILER = 1, CRC MSB = 1,
 CRC_LSB = 1, SC_HEADER = 1, DIF_ID = 1, ASIC_HEADER = 1,
 SC_ASIC_SIZE = 1, SC_TRAILER = 1, DATA_FORMAT_VERSION = 1, DAQ_SOFTWARE_VERSION = 2
 SDCC_FIRMWARE_VERSION = 2, DIF_FIRMWARE_VERSION = 2, TIMESTAMP_SECONDES = 4,
 TIMESTAMP MILLISECONDS = 4.
 GLOBAL HEADER = 1, PMR ID SHIFT = 1, PMR NBASIC SHIFT = 1, PMR FORMAT SHIFT = 1,
 PMR GTC SHIFT = 3, PMR ABCID SHIFT = 6, PMR BCID SHIFT = 3, PMR LTRG SHIFT = 4,
 HEADER LINE = 1, NUMBER CHIPS = 1, LINE SIZE = 64 * 2, TRAILER LINE = 1,
 FRAME_HEADER = 1, MICROROC_HEADER = 1, BCID = 3, DATA = 16,
 FRAME_TRAILER = 1, GLOBAL_TRAILER = 1, CRC_MSB = 1, CRC_LSB = 1,
 SC_HEADER = 1, DIF_ID = 1, ASIC_HEADER = 1, SC_ASIC_SIZE = 1,
 SC_TRAILER = 1 }
```

```
    enum class Value: std::uint8_t {
        GLOBAL_HEADER = 0xb0 , GLOBAL_HEADER_TEMP = 0xbb , HEADER_LINE = 0xc4 , TRAILER_LINE = 0xd4 ,
        FRAME_HEADER = 0xb4 , FRAME_TRAILER = 0xa3 , FRAME_TRAILER_ERROR = 0xc3 ,
        GLOBAL_TRAILER = 0xa0 ,
        SC_HEADER = 0xb1 , SC_TRAILER = 0xa1 , GLOBAL_HEADER = 0xb0 , GLOBAL_HEADER_TEMP = 0xbb ,
        HEADER_LINE = 0xc4 , TRAILER_LINE = 0xd4 , FRAME_HEADER = 0xb4 , FRAME_TRAILER = 0xa3 ,
        FRAME_TRAILER_ERROR = 0xc3 , GLOBAL_TRAILER = 0xa0 , SC_HEADER = 0xb1 , SC_TRAILER = 0xa1 }
```

5.49.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Payload100.cc.

5.49.2 Enumeration Type Documentation

5.49.2.1 Size enum class Size : std::uint8_t [strong]

Enumerator

DATA_FORMAT_VERSION	
DAQ_SOFTWARE_VERSION	
SDCC_FIRMWARE_VERSION	
DIF_FIRMWARE_VERSION	
TIMESTAMP_SECONDES	
TIMESTAMP_MILLISECONDS	
GLOBAL_HEADER	
DIF_IF	
DIF_TRIGGER_COUNTER	
INFORMATION_COUNTER	
GLOBAL_TRIGGER_COUNTER	
ABSOLUTE_BCID	
BCID_DIF	
NUMBER_LINE	
TEMP_ASU1	
TEMP_ASU2	
TEMP_DIF	
HEADER_LINE	
NUMBER_CHIPS	
LINE_SIZE	
TRAILER_LINE	
FRAME_HEADER	
MICROROC_HEADER	
-	

Enumerator

Litamerator	
BCID	
DATA	
FRAME_TRAILER	
GLOBAL_TRAILER	
CRC_MSB	
CRC_LSB	
SC_HEADER	
DIF ID	
ASIC HEADER	
SC ASIC SIZE	
SC_TRAILER	
DATA FORMAT VERSION	
DAQ SOFTWARE VERSION	
SDCC FIRMWARE VERSION	
DIF FIRMWARE VERSION	
TIMESTAMP SECONDES	
TIMESTAMP MILLISECONDS	
GLOBAL HEADER	
PMR ID SHIFT	
PMR NBASIC SHIFT	
PMR_FORMAT_SHIFT	
PMR_GTC_SHIFT	
PMR_ABCID_SHIFT	
PMR_BCID_SHIFT	
PMR_LTRG_SHIFT	
HEADER_LINE	
NUMBER_CHIPS	
LINE_SIZE	
TRAILER_LINE	
FRAME_HEADER	
MICROROC_HEADER	
BCID	
DATA	
FRAME_TRAILER	
GLOBAL_TRAILER	
CRC_MSB	
CRC_LSB	
SC_HEADER	
DIF_ID	
ASIC_HEADER	
SC_ASIC_SIZE	
SC_TRAILER	

```
00018
           // Payload
           GLOBAL_HEADER
00019
00020
          DIF_IF
          DIF_TRIGGER_COUNTER
                                       = 4,
00021
          INFORMATION_COUNTER = 4,
GLOBAL_TRIGGER_COUNTER = 4,
00022
00023
00024
          ABSOLUTE_BCID
00025
           BCID_DIF
          = 3,
MOMBER_LINE = 1,
TEMP_ASU1 = 4,
TEMP_ASU2 = 4,
TEMP_DIF
HEADER
00026
00027
00028
          TEMP_DIF
HEADER_LINE
NUMBER_CHIPS
LINE_SIZE
TRAILER_LINE
FRAME_HEADER
MICROROC_HEADER
00029
00030
                                         = 1,
00031
00032
                                         = 64 * 2,
                                         = 1,
= 1,
00033
00034
00035
                                         = 1,
00036
          BCID
                                         = 3,
00037
                                         = 16,
00038
          FRAME_TRAILER
                                         = 1,
00039
          GLOBAL_TRAILER
          CRC_MSB
CRC_LSB
00040
                                         = 1,
                                         = 1,
00041
          // Slowcontrol
SC_HEADER
00042
00043
= 1,

00045 ASIC_HEADER = 1,

00046 SC_ASIC_SIZE = 1,

00047 SC_TRAILER = 1
```

5.49.2.2 Value enum class Value : std::uint8_t [strong]

Enumerator

GLOBAL_HEADER	
GLOBAL_HEADER_TEMP	
HEADER_LINE	
TRAILER_LINE	
FRAME_HEADER	
FRAME_TRAILER	
FRAME_TRAILER_ERROR	
GLOBAL_TRAILER	
SC_HEADER	
SC_TRAILER	
GLOBAL_HEADER	
GLOBAL_HEADER_TEMP	
HEADER_LINE	
TRAILER_LINE	
FRAME_HEADER	
FRAME_TRAILER	
FRAME_TRAILER_ERROR	
GLOBAL_TRAILER	
SC_HEADER	
SC_TRAILER	

Definition at line 54 of file Payload100.cc.

```
00055 {
00056 GLOBAL_HEADER = 0xb0,
00057 GLOBAL_HEADER_TEMP = 0xcb,
00058 HEADER_LINE = 0xc4,
00059 TRAILER_LINE = 0xd4,
```

```
00060 FRAME_HEADER = 0xb4,

00061 FRAME_TRAILER = 0xa3,

00062 FRAME_TRAILER_ERROR = 0xc3,

00063 GLOBAL_TRAILER = 0xa0,

00064 SC_HEADER = 0xb1,

00065 SC_TRAILER = 0xa1
```

5.50 Payload100.cc

```
00001
00005 #include "Payload100.h"
00006
00007 #include "Utilities.h"
80000
00009 enum class Size : std::uint8_t
00010 {
        // Header
        DATA_FORMAT_VERSION = 1,
DAQ_SOFTWARE_VERSION = 2,
00012
       DATA_FORMAT_VERSION
00013
        SDCC_FIRMWARE_VERSION = 2,
00014
        DIF_FIRMWARE_VERSION = 2,
TIMESTAMP_SECONDES = 4,
TIMESTAMP_MILLISECONDS = 4,
00015
00016
00017
00018
        // Payload
00019
        GLOBAL_HEADER
00020
        DIF_IF
                                = 1,
        DIF_TRIGGER_COUNTER = 4,
INFORMATION_COUNTER = 4,
00021
00022
00023
        GLOBAL_TRIGGER_COUNTER = 4,
        ABSOLUTE_BCID
00024
00025
        BCID_DIF
        NUMBER_LINE
00026
                                = 4,
00027
        TEMP_ASU1
        TEMP_ASU2
TEMP_DIF
                                = 4.
00028
00029
                                = 1,
00030
        HEADER_LINE
00031
        NUMBER_CHIPS
00032
        LINE_SIZE
                                = 64 * 2,
        TRAILER_LINE
                                = 1,
00033
                                = 1,
00034
        FRAME HEADER
00035
        MICROROC_HEADER
                                = 1,
00036
                                = 3,
        DATA
00037
00038
        FRAME_TRAILER
00039
        GLOBAL_TRAILER
                                = 1,
        CRC_MSB
CRC_LSB
00040
00041
                                = 1.
00042
        // Slowcontrol
00043
        SC_HEADER
00044
        DIF_ID
                                = 1,
00045
        ASIC_HEADER
                                = 1,
                                = 1,
00046
        SC_ASIC_SIZE
00047
        SC TRAILER
                                = 1
00048 };
00049
00050 static inline std::uint32_t operator+(const Size& a, const Size& b) { return
      static_cast<std::uint32_t>(a) + static_cast<std::uint32_t>(b); }
00051 static inline std::uint32_t operator+(const std::uint32_t& a, const Size& b) { return a +
      static_cast<std::uint32_t>(b); }
00052 static inline std::uint32_t operator+(const Size& a) { return static_cast<std::uint32_t>(a); }
00053
00054 enum class Value : std::uint8_t
00055 {
00056
       GLOBAL_HEADER
                             = 0xb0.
       GLOBAL_HEADER_TEMP = 0xbb,
HEADER_LINE = 0xc4,
00057
                        = 0xc4,= 0xd4,
00058
00059
        TRAILER_LINE
00060
        FRAME_HEADER
                            = 0xa3,
00061
        FRAME_TRAILER
        FRAME_TRAILER_ERROR = 0xc3,
00062
        GLOBAL_TRAILER = 0xa0,
00063
00064
        SC_HEADER
                             = 0xb1.
                             = 0xa1
00065
        SC_TRAILER
00066 };
00067
00068 inline void Payload100::parsePayload()
00069 {
00070
       m_Frames.clear();
00071
        m Lines.clear();
       std::uint32_t fshift{static_cast<std::uint32_t>(Size::GLOBAL_HEADER)}; // Pass Global Header
```

5.50 Payload100.cc 111

```
00073
        if (m_Version >= 13)
00074
00075
         // Pass DIF_ID, DIF Trigger counter, Information counter, Global Trigger counter, Absolute BCID,
     BCID DIF, NB line
         fshift += Size::DIF_IF + Size::DIF_TRIGGER_COUNTER + Size::INFORMATION_COUNTER
00076
      Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID + Size::BCID_DIF + Size::NUMBER_LINE;
00077
         // If has temperature infos then pass Temp ASU 1, Temp ASU 2, Temp DIF
00078
          if(hasTemperature()) fshift += Size::TEMP_ASU1 + Size::TEMP_ASU2 + Size::TEMP_DIF;
00079
          // If has AnalogReadout pass them
08000
          if(hasAnalogReadout()) fshift = parseAnalogLine(fshift); // to be implemented
       }
00081
00082
        else
00083
         throw Exception(fmt::format("Version {} is not implemented", m_Version));
00084
00085
        while (static_cast<std::uint8_t>(begin()[fshift]) !=
      static_cast<std::uint8_t>(Value::GLOBAL_TRAILER))
00086
00087
          // If I found a FRAME HEADER there is 2 cases :
00088
          // 1) Nothing inside so FRAME_TRAILER comes just after
          // 2) Come MICROROC Header, BCID, DATA max 128 times
00089
00090
          if(static_cast<std::uint8_t>(begin()[fshift]) == static_cast<std::uint8_t>(Value::FRAME_HEADER))
00091
00092
            fshift += +Size::FRAME HEADER;
            if(static_cast<std::uint8_t>(begin()[fshift]) == static_cast<std::uint8_t>(Value::FRAME_TRAILER)
00093
      || static_cast<std::uint8_t>(begin()[fshift]) =
      static_cast<std::uint8_t>(Value::FRAME_TRAILER_ERROR)) { fshift += +Size::FRAME_TRAILER; }
00094
00095
00096
             while(static_cast<std::uint8_t>(begin()[fshift]) !=
      static_cast<std::uint8_t>(Value::FRAME_TRAILER) && static_cast<std::uint8_t>(begin()[fshift]) !=
      static_cast<std::uint8_t>(Value::FRAME_TRAILER ERROR))
00097
              {
00098
                m_Frames.push_back(&begin()[fshift]);
00099
                fshift += Size::MICROROC_HEADER + Size::BCID + Size::DATA;
00100
00101
              fshift += +Size::FRAME TRAILER;
00102
            }
00103
         }
00104
        // Pass Global trailer
00105
00106
       fshift += +Size::GLOBAL_TRAILER;
        // Pass CRC MSB, CRC LSB \,
00107
       fshift += Size::CRC MSB + Size::CRC LSB:
00108
       theGetFramePtrReturn_ = fshift;
00109
00110 }
00111
00112 inline bool Payload100::hasTemperature()const { return (static_cast<std::uint8_t>(begin()[0]) ==
      static_cast<std::uint8_t>(Value::GLOBAL_HEADER_TEMP)); }
00113
00114 inline bool Payload100::hasAnalogReadout()const { return getNumberLines() != 0; }
00115
00116 inline std::uint32_t Payload100::getNumberLines()const
00117 {
00118
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
     Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID + Size::BCID_DIF};
00119
        return ((begin()[shift] » 4) & 0x5);
00120 }
00121
00122 inline std::uint32_t Payload100::parseAnalogLine(const std::uint32_t& idx)
00123 {
00124
       std::uint32 t fshift{idx}:
00125
        // Pass Header line
00126
        if(static_cast<std::uint8_t>(begin()[fshift]) != static_cast<std::uint8_t>(Value::HEADER_LINE))
     return fshift;
00127
00128
         fshift += +Size::HEADER_LINE;
00129
        while (static_cast<std::uint8_t>(begin()[fshift]) != static_cast<std::uint8_t>(Value::TRAILER_LINE))
00130
00131
         m Lines.push back(&begin()[fshift]);
00132
          // Get Number of CHIPS
00133
          std::uint32_t nchip{begin()[fshift]};
00134
          // Pass Number of CHIPS, NB Asicline \star 64 \star 16 \mathrm{bits}
00135
          fshift += +Size::NUMBER_CHIPS + static_cast<std::uint32_t>(Size::LINE_SIZE) * nchip;
00136
        // Pass Trailer line
00137
       fshift += +Size::TRAILER_LINE;
00138
        return fshift;
00139
00140 }
00141
00142 inline std::uint32 t Payload100::getNumberOfFrames()const { return m Frames.size(); }
00143
00144 inline std::uint32_t Payload100::getThresholdStatus(const std::uint32_t& i, const std::uint32_t&
      ipad)const { return (((std::uint32_t)getFrameLevel(i, ipad, 1))) | ((std::uint32_t)getFrameLevel(i,
      ipad, 0) « 1); }
00145
00146 inline bool Payload100::getFrameLevel(const std::uint32_t& i, const std::uint32_t& ipad, const
      std::uint32 t& ilevel)const
```

```
std::uint32_t shift{Size::MICROROC_HEADER + Size::BCID};
00148
        return ((m_Frames[i][shift + ((3 - ipad / 16) * 4 + (ipad % 16) / 4)] » (7 - (((ipad % 16) % 4) * 2
00149
     + ilevel))) & 0x1);
00150 }
00151
00152 inline std::uint32_t Payload100::getDIFid()const
00153 {
00154 std::uint32_t shift{+Size::GLOBAL_HEADER};
00155
        return begin()[shift] & 0xFF;
00156 }
00157
00158 inline std::uint32_t Payload100::getDTC()const
00159 {
00160
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF};
00161
       return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift
      + 31;
00162 }
00163
00164 inline std::uint32_t Payload100::getGTC()const
00165 {
00166
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
     Size::INFORMATION_COUNTER};
       return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift
00167
      + 3];
00168 }
00169
00170 inline std::uint32_t Payload100::getBCID()const
00171 {
00172
       std::uint32 t shift{Size::GLOBAL HEADER + Size::DIF IF + Size::DIF TRIGGER COUNTER +
     Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID};
       return (begin()[shift] « 16) + (begin()[shift + 1] « 8) + begin()[shift + 2];
00174 }
00175
00176 inline std::uint64_t Payload100::getAbsoluteBCID()const
00177 {
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
00178
     Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER};
        std::uint64_t LBC = ((begin()[shift] < 16) | (begin()[shift + 1] < 8) | (begin()[shift + 2])) *
     16777216ULL + ((begin()[shift + 3] « 16) | (begin()[shift + 4] « 8) | (begin()[shift + 5]));
00180
       return LBC;
00181 }
00182
00183 inline std::uint32_t Payload100::getASICid(const std::uint32_t& i)const { return m_Frames[i][0] &
00184
00185 inline std::uint32_t Payload100::getFrameBCID(const std::uint32_t& i)const
00186 {
       std::uint32 t shift{+Size::MICROROC HEADER};
00187
00188
       return GrayToBin((m_Frames[i][shift] « 16) + (m_Frames[i][shift + 1] « 8) + m_Frames[i][shift + 2]);
00189 }
00190
00191 inline std::uint32_t Payload100::getFrameTimeToTrigger(const std::uint32_t& i)const { return getBCID()
      - getFrameBCID(i); }
00192
00193 Payload100::~Payload100() {}
00195 inline bool Payload100::hasSlowControl() const { return theGetFramePtrReturn != size(); }
00196
00197 inline std::uint32_t Payload100::getTASU1() const
00198 {
00199 std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
      Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID + Size::BCID_DIF +
      Size::NUMBER LINE };
00200 return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift +
      3];
00201 }
00202
00203 inline std::uint32_t Payload100::getTASU2() const
00204 {
00205 std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
      Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID + Size::BCID_DIF +
      Size::NUMBER_LINE + Size::TEMP_ASU1};
00206 return (begin()[shift]   424) + (begin()[shift + 1]   416) + (begin()[shift + 2]   8) + begin()[shift + 2]
      3];
00207 }
00208
00209 inline std::uint32_t Payload100::getTDIF() const
00210
00211 std::uint32 t shift{Size::GLOBAL HEADER + Size::DIF TF + Size::DIF TRIGGER COUNTER +
      Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID + Size::BCID_DIF + Size::NUMBER_LINE + Size::TEMP_ASU1 + Size::TEMP_ASU2};
00212 return begin()[shift];
00213 }
00214
00215 inline float Payload100::getTemperatureDIF() const
00216 {
```

```
00217 if(!hasTemperature()) throw Exception("Don't have TemperatureDIF information");
00218 return 0.508 * getTDIF() - 9.659;
00219
00220
00221 inline float Payload100::getTemperatureASU1() const
00222
00223 if(!hasTemperature()) throw Exception("Don't have TemperatureASU1 information");
00224 return (getTASU1() » 3) * 0.0625;
00225 }
00226
00227 inline float Payload100::getTemperatureASU2() const
00228
00229 if(!hasTemperature()) throw Exception("Don't have TemperatureASU2 information");
00230 return (getTASU2() » 3) * 0.0625;
00231 }
00232
00233 inline Buffer Pavload100::getSlowControl() const
00234
00235 if(hasSlowControl()) return Buffer(&begin()[getEndOfDIFData()], size() - getEndOfDIFData());
00236 else
00237 return Buffer();
00238 }
00239
00240 inline std::vector<br/>bit8_t*> Payload100::getFramesVector() const { return m_Frames; }
00241
00242 inline std::vector<br/>bit8_t*> Payload100::getLinesVector() const { return m_Lines; }
00244 inline bool Payload100::hasLine(const std::uint32_t& line) const
00245
00246 std::uint32 t shift{Size::GLOBAL HEADER + Size::DIF IF + Size::DIF TRIGGER COUNTER +
     Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID + Size::BCID_DIF};
00247 return ((begin()[shift] » line) & 0x1);
00248 }
00249
00250 inline bit8_t* Payload100::getFramePtr(const std::uint32_t& i) const { return m_Frames[i]; }
00251
00252 inline std::uint32 t Payload100::getDIF CRC() const
00254 std::uint32_t shift{getEndOfDIFData() - (Size::CRC_MSB + Size::CRC_LSB)};
00255 return (begin()[shift] « 8) + begin()[shift + 1];
00256
00257
00258 */
```

5.51 libs/core/src/Payload150.cc File Reference

```
#include "Payload150.h"
#include "Utilities.h"
```

Enumerations

```
enum class Size : std::uint8 t {
 DATA_FORMAT_VERSION = 1 , DAQ_SOFTWARE_VERSION = 2 , SDCC_FIRMWARE_VERSION = 2 ,
 DIF FIRMWARE VERSION = 2,
 TIMESTAMP_SECONDES = 4, TIMESTAMP_MILLISECONDS = 4, GLOBAL_HEADER = 1, DIF_IF = 1,
 DIF_TRIGGER_COUNTER = 4 , INFORMATION_COUNTER = 4 , GLOBAL_TRIGGER_COUNTER = 4 ,
 ABSOLUTE\_BCID = 6,
 BCID_DIF = 3, NUMBER_LINE = 1, TEMP_ASU1 = 4, TEMP_ASU2 = 4,
 TEMP_DIF = 1, HEADER_LINE = 1, NUMBER_CHIPS = 1, LINE_SIZE = 64 * 2,
 TRAILER_LINE = 1, FRAME_HEADER = 1, MICROROC_HEADER = 1, BCID = 3,
 DATA = 16 , FRAME_TRAILER = 1 , GLOBAL_TRAILER = 1 , CRC_MSB = 1 ,
 CRC_LSB = 1, SC_HEADER = 1, DIF_ID = 1, ASIC_HEADER = 1,
 SC ASIC SIZE = 1, SC TRAILER = 1, DATA FORMAT VERSION = 1, DAQ SOFTWARE VERSION = 2
 SDCC_FIRMWARE_VERSION = 2 , DIF_FIRMWARE_VERSION = 2 , TIMESTAMP_SECONDES = 4 ,
 TIMESTAMP MILLISECONDS = 4,
 GLOBAL HEADER = 1, PMR ID SHIFT = 1, PMR NBASIC SHIFT = 1, PMR FORMAT SHIFT = 1,
 PMR_GTC_SHIFT = 3, PMR_ABCID_SHIFT = 6, PMR_BCID_SHIFT = 3, PMR_LTRG_SHIFT = 4,
```

```
HEADER_LINE = 1 , NUMBER_CHIPS = 1 , LINE_SIZE = 64 * 2 , TRAILER_LINE = 1 ,
FRAME_HEADER = 1 , MICROROC_HEADER = 1 , BCID = 3 , DATA = 16 ,
FRAME_TRAILER = 1 , GLOBAL_TRAILER = 1 , CRC_MSB = 1 , CRC_LSB = 1 ,
SC_HEADER = 1 , DIF_ID = 1 , ASIC_HEADER = 1 , SC_ASIC_SIZE = 1 ,
SC_TRAILER = 1 }
• enum class Value : std::uint8_t {
GLOBAL_HEADER = 0xb0 , GLOBAL_HEADER_TEMP = 0xbb , HEADER_LINE = 0xc4 , TRAILER_LINE = 0xd4 ,
FRAME_HEADER = 0xb4 , FRAME_TRAILER = 0xa3 , FRAME_TRAILER_ERROR = 0xc3 ,
GLOBAL_TRAILER = 0xa0 ,
SC_HEADER = 0xb1 , SC_TRAILER = 0xa1 , GLOBAL_HEADER = 0xb0 , GLOBAL_HEADER_TEMP = 0xbb ,
HEADER_LINE = 0xc4 , TRAILER_LINE = 0xd4 , FRAME_HEADER = 0xb4 , FRAME_TRAILER = 0xa3 ,
FRAME_TRAILER_ERROR = 0xc3 , GLOBAL_TRAILER = 0xa0 , SC_HEADER = 0xb1 , SC_TRAILER = 0xa1 }
```

5.51.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Payload150.cc.

5.51.2 Enumeration Type Documentation

5.51.2.1 Size enum class Size : std::uint8_t [strong]

Enumerator

DATA_FORMAT_VERSION	
DAQ_SOFTWARE_VERSION	
SDCC_FIRMWARE_VERSION	
DIF_FIRMWARE_VERSION	
TIMESTAMP_SECONDES	
TIMESTAMP_MILLISECONDS	
GLOBAL_HEADER	
DIF_IF	
DIF_TRIGGER_COUNTER	
INFORMATION_COUNTER	
GLOBAL_TRIGGER_COUNTER	
ABSOLUTE_BCID	
BCID_DIF	
NUMBER_LINE	
TEMP_ASU1	
TEMP_ASU2	
TEMP_DIF	
HEADER_LINE	
NUMBER_CHIPS	
·	

Enumerator

LINE_SIZE TRAILER_LINE FRAME_HEADER MICROROC_HEADER BCID DATA FRAME_TRAILER GLOBAL_TRAILER CRC_MSB CRC_LSB SC_HEADER DIF_ID ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION DIF_FIRMWARE_VERSION TIMESTAMP SECONDES
FRAME_HEADER MICROROC_HEADER BCID DATA FRAME_TRAILER GLOBAL_TRAILER CRC_MSB CRC_LSB SC_HEADER DIF_ID ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION DIF_FIRMWARE_VERSION
MICROROC_HEADER BCID DATA FRAME_TRAILER GLOBAL_TRAILER CRC_MSB CRC_LSB SC_HEADER DIF_ID ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION DIF_FIRMWARE_VERSION
MICROROC_HEADER BCID DATA FRAME_TRAILER GLOBAL_TRAILER CRC_MSB CRC_LSB SC_HEADER DIF_ID ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION DIF_FIRMWARE_VERSION
BCID DATA FRAME_TRAILER GLOBAL_TRAILER CRC_MSB CRC_LSB SC_HEADER DIF_ID ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION DIF_FIRMWARE_VERSION
DATA FRAME_TRAILER GLOBAL_TRAILER CRC_MSB CRC_LSB SC_HEADER DIF_ID ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION DIF_FIRMWARE_VERSION
FRAME_TRAILER GLOBAL_TRAILER CRC_MSB CRC_LSB SC_HEADER DIF_ID ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION DIF_FIRMWARE_VERSION
GLOBAL_TRAILER CRC_MSB CRC_LSB SC_HEADER DIF_ID ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION DIF_FIRMWARE_VERSION
CRC_MSB CRC_LSB CRC_LSB SC_HEADER DIF_ID ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION DIF_FIRMWARE_VERSION
CRC_LSB SC_HEADER DIF_ID ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION SDCC_FIRMWARE_VERSION DIF_FIRMWARE_VERSION
SC_HEADER DIF_ID ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION SDCC_FIRMWARE_VERSION DIF_FIRMWARE_VERSION
DIF_ID ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION SDCC_FIRMWARE_VERSION DIF_FIRMWARE_VERSION
ASIC_HEADER SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION SDCC_FIRMWARE_VERSION DIF_FIRMWARE_VERSION
SC_ASIC_SIZE SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION SDCC_FIRMWARE_VERSION DIF_FIRMWARE_VERSION
SC_TRAILER DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION SDCC_FIRMWARE_VERSION DIF_FIRMWARE_VERSION
DATA_FORMAT_VERSION DAQ_SOFTWARE_VERSION SDCC_FIRMWARE_VERSION DIF_FIRMWARE_VERSION
DAQ_SOFTWARE_VERSION SDCC_FIRMWARE_VERSION DIF_FIRMWARE_VERSION
SDCC_FIRMWARE_VERSION DIF_FIRMWARE_VERSION
SDCC_FIRMWARE_VERSION DIF_FIRMWARE_VERSION
DIF_FIRMWARE_VERSION
LIMIES LAND SECONDINES
TIMESTAMP MILLISECONDS
GLOBAL_HEADER
PMR_ID_SHIFT
PMR_NBASIC_SHIFT
PMR_FORMAT_SHIFT
PMR_GTC_SHIFT
PMR_ABCID_SHIFT
PMR_BCID_SHIFT
PMR_LTRG_SHIFT
HEADER_LINE
NUMBER_CHIPS
LINE SIZE
TRAILER LINE
FRAME HEADER
MICROROC HEADER
BCID
DATA
FRAME TRAILER
GLOBAL_TRAILER
CRC_MSB
CRC_LSB
CRC_LSB SC_HEADER
SC_HEADER
SC_HEADER DIF_ID

Definition at line 9 of file Payload150.cc. $_{\tt 00010}$ $\ \{$

```
00011
           // Header
          // Header

DATA_FORMAT_VERSION = 1,
DAQ_SOFTWARE_VERSION = 2,
SDCC_FIRMWARE_VERSION = 2,
DIF_FIRMWARE_VERSION = 2,
TIMESTAMP_SECONDES = 4,
TIMESTAMP_MILLISECONDS = 4,
00012
00013
00014
00015
00016
00017
00018
           // Payload
          GLOBAL_HEADER
PMR_ID_SHIFT
PMR_NBASIC_SHIFT
PMR_FORMAT_SHIFT
00019
00020
00021
00022
           PMR_GTC_SHIFT
PMR_ABCID_SHIFT
00023
00024
00025
           PMR_BCID_SHIFT
                                           = 4,
00026
           PMR_LTRG_SHIFT
00027
           HEADER_LINE
NUMBER_CHIPS
00028
                                           = 1,
00029
00030
           LINE_SIZE
           TRAILER_LINE
                                           = 1,
00031
00032
00033
           FRAME_HEADER
MICROROC_HEADER
                                           = 1,
                                           = 3,
00034
           BCID
00035
           DATA
                                           = 16,
00036
           FRAME_TRAILER
                                           = 1,
00037
           GLOBAL_TRAILER
           CRC_MSB
CRC_LSB
                                           = 1,
= 1,
00038
00039
           // Slowcontrol
SC_HEADER
00040
00041
                                           = 1,
           DIF_ID
ASIC_HEADER
00042
                                           = 1,
00043
                                          = 1,
= 1
00044
           SC_ASIC_SIZE
00045 5
          SC_TRAILER
```

5.51.2.2 Value enum class Value : std::uint8_t [strong]

Enumerator

GLOBAL_HEADER	
GLOBAL_HEADER_TEMP	
HEADER_LINE	
TRAILER_LINE	
FRAME_HEADER	
FRAME_TRAILER	
FRAME_TRAILER_ERROR	
GLOBAL_TRAILER	
SC_HEADER	
SC_TRAILER	
GLOBAL_HEADER	
GLOBAL_HEADER_TEMP	
HEADER_LINE	
TRAILER_LINE	
FRAME_HEADER	
FRAME_TRAILER	
FRAME_TRAILER_ERROR	
GLOBAL_TRAILER	
SC_HEADER	
SC_TRAILER	

Definition at line 48 of file Payload150.cc.

5.52 Payload150.cc 117

```
00049 {
00050
        GLOBAL_HEADER
                               = 0xb0,
        GLOBAL_HEADER_TEMP = 0xbb,
00051
        HEADER_LINE = 0xc4,
00052
                              = 0xd4.
00053
        TRATLER LINE
        FRAME_HEADER = 0xb4,
FRAME_TRAILER = 0xa3,
00054
00056
        FRAME_TRAILER_ERROR = 0xc3,
        GLOBAL_TRAILER = 0xa0,
SC_HEADER = 0xb1,
SC_TRAILER = 0xa1
00057
00058
00059
        SC_TRAILER
00060 };
```

5.52 Payload150.cc

```
00001
00005 #include "Payload150.h"
00007 #include "Utilities.h"
80000
00009 enum class Size : std::uint8_t
00010 {
00011
        // Header
        DATA_FORMAT_VERSION = 1,
DAQ_SOFTWARE_VERSION = 2,
00012
00013
        SDCC_FIRMWARE_VERSION = 2,
00014
        DIF_FIRMWARE_VERSION = 2,
TIMESTAMP_SECONDES = 4,
TIMESTAMP_MILLISECONDS = 4,
00015
00016
00017
00018
        // Pavload
        GLOBAL_HEADER
00019
00020
        PMR_ID_SHIFT
        PMR_NBASIC_SHIFT
00021
                                = 1,
                                = 1,
00022
        PMR_FORMAT_SHIFT
        PMR_GTC_SHIFT
PMR_ABCID_SHIFT
                                = 3,
00023
00024
                                = 6,
00025
        PMR_BCID_SHIFT
00026
        PMR_LTRG_SHIFT
00027
        HEADER_LINE
00028
                                 = 1,
        NUMBER_CHIPS
00029
                                = 1.
        LINE_SIZE
00030
                                 = 64 * 2,
        TRAILER_LINE
00031
                                 = 1,
                                = 1,
00032
        FRAME_HEADER
00033
        MICROROC_HEADER
00034
        BCID
                                 = 3,
        DATA
00035
                                 = 16,
        FRAME_TRAILER
00036
                                 = 1.
        GLOBAL_TRAILER
00037
                                = 1.
        CRC_MSB
00038
                                 = 1,
00039
        CRC_LSB
        // Slowcontrol
SC_HEADER
00040
                                = 1,
00041
00042
        DIF_ID
ASIC_HEADER
                                = 1,
00043
                                = 1,
00044
        SC_ASIC_SIZE
00045
       SC_TRAILER
00046 };
00047
00048 enum class Value : std::uint8 t
00049 {
00050 GLOBAL_HEADER
00051 GLOBAL_HEADER_
        GLOBAL_HEADER_TEMP = 0xbb,
                       = 0xc4,
= 0xd4,
00052
       HEADER_LINE
00053
        TRAILER LINE
       FRAME_HEADER
FRAME_TRAILER
00054
                            = 0xb4,
= 0xa3,
00055
00056
       FRAME_TRAILER_ERROR = 0xc3,
00057
        GLOBAL_TRAILER = 0xa0,
00058
        SC_HEADER
                             = 0xb1,
00059
       SC TRAILER
                             = 0xa1
00060 };
00061
00062 static inline std::uint32_t operator+(const Size& a, const Size& b) { return
      static_cast<std::uint32_t>(a) + static_cast<std::uint32_t>(b); }
00063 static inline std::uint32_t operator+(const std::uint32_t& a, const Size& b) { return a +
      static_cast<std::uint32_t>(b); }
00064 static inline std::uint32_t operator+(const Size& a) { return static_cast<std::uint32_t>(a); }
00065
00066 inline void Payload150::parsePayload()
00067 {
```

```
00068
       m_Frames.clear();
       std::uint32_t fshift{static_cast<std::uint32_t>(Size::GLOBAL_HEADER)}; // Pass Global Header
00069
00070
        // Pass DIF_ID, DIF Trigger counter, Information counter, Global Trigger counter, Absolute BCID,
     BCID DIF, NB line
00071
       fshift += Size::PMR ID SHIFT + Size::PMR NBASIC SHIFT + Size::PMR FORMAT SHIFT + Size::PMR GTC SHIFT
      + Size::PMR_ABCID_SHIFT + Size::PMR_BCID_SHIFT + Size::PMR_LTRG_SHIFT;
       while(static_cast<std::uint8_t>(begin()[fshift]) !=
     static_cast<std::uint8_t>(Value::GLOBAL_TRAILER))
00073
00074
         m_Frames.push_back(&begin()[fshift]);
00075
         fshift += Size::MICROROC HEADER + Size::BCID + Size::DATA;
00076
00077
       // Pass Global trailer
00078
       fshift += +Size::GLOBAL_TRAILER;
00079
        // Pass CRC MSB, CRC LSB
00080
        fshift += Size::CRC_MSB + Size::CRC_LSB;
00081
       theGetFramePtrReturn_ = fshift;
00082 }
00083
00084 inline std::uint32_t Payload150::getNumberOfFrames()const { return m_Frames.size(); }
00085
00086 inline std::uint32_t Payload150::getThresholdStatus(const std::uint32_t& i, const std::uint32_t&
      ipad)const { return (((std::uint32_t)getFrameLevel(i, ipad, 1))) | ((std::uint32_t)getFrameLevel(i,
      ipad, 0) « 1); }
00087
00088 inline bool Payload150::getFrameLevel(const std::uint32_t& i, const std::uint32_t& ipad, const
      std::uint32_t& ilevel)const
00089 {
00090
       std::uint32_t shift{Size::MICROROC_HEADER + Size::BCID};
       return ((m_Frames[i][shift + ((3 - ipad / 16) * 4 + (ipad % 16) / 4)] » (7 - (((ipad % 16) % 4) * 2
00091
      + ilevel))) & 0x1);
00092 }
00093
00094 inline std::uint32_t Payload150::getDIFid()const
00095 {
       std::uint32_t shift{+Size::GLOBAL HEADER};
00096
00097
       return begin()[shift] & 0xFF;
00099
00100 inline std::uint32_t Payload150::getGTC()const
00101 {
00102
       std::uint32 t shift{Size::GLOBAL HEADER + Size::PMR ID SHIFT + Size::PMR NBASIC SHIFT +
     Size::PMR_FORMAT_SHIFT};
00103
        return (begin()[shift] « 16) + (begin()[shift + 1] « 8) + begin()[shift + 2];
00104 }
00105
00106 inline std::uint64_t Payload150::getAbsoluteBCID()const
00107 {
       std::uint32 t shift{Size::GLOBAL HEADER + Size::PMR ID SHIFT + Size::PMR NBASIC SHIFT +
00108
     Size::PMR_FORMAT_SHIFT + Size::PMR_GTC_SHIFT};
std::uint64_t LBC = ((begin()[shift] « 8) | (begin()[shift + 1])) * 16777216ULL + ((begin()[shift +
00109
     2] « 24) | (begin()[shift + 3] « 16) | (begin()[shift + 4] « 8) | begin()[shift + 5]);
        return LBC;
00110
00111 }
00112
00113 inline std::uint32 t Payload150::getDTC()const
00114 {
00115
       // MAYBE NOR USEFUL
       std::uint32_t shift{};
00116
00117
        return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift
     + 3];
00118 }
00119
00120 inline std::uint32 t Payload150::getBCID()const
00121 {
00122
        std::uint32_t shift{Size::GLOBAL_HEADER + Size::PMR_ID_SHIFT + Size::PMR_NBASIC_SHIFT +
     Size::PMR_FORMAT_SHIFT + Size::PMR_GTC_SHIFT + Size::PMR_ABCID_SHIFT};
        return (begin()[shift] « 16) + (begin()[shift + 1] « 8) + begin()[shift + 2];
00123
00124 }
00125
00126 inline std::uint32_t Payload150::getASICid(const std::uint32_t& i)const { return m_Frames[i][0] &
      0xFF; }
00127
00128 inline std::uint32 t Payload150::getFrameBCID(const std::uint32 t& i)const
00129 {
00130
       std::uint32_t shift{+Size::MICROROC_HEADER};
00131
        return GrayToBin((m_Frames[i][shift] « 16) + (m_Frames[i][shift + 1] « 8) + m_Frames[i][shift + 2]);
00132 }
00133
00134 inline std::uint32 t Payload150::getFrameTimeToTrigger(const std::uint32 t& i)const { return getBCID()
      - getFrameBCID(i); }
00135
00136 Payload150::~Payload150() {}
```

5.53 libs/core/src/RawBufferNavigator.cc File Reference

```
#include "RawBufferNavigator.h"
```

5.53.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file RawBufferNavigator.cc.

5.54 RawBufferNavigator.cc

Go to the documentation of this file.

```
00005 #include "RawBufferNavigator.h"
00006
00007 std::int32_t RawBufferNavigator::m_StartPayload{20};
80000
00009 void RawBufferNavigator::startAt(const int& start)
00010 {
00011
        if(start >= 0) m_StartPayload = start;
00012 }
00013
00014 RawBufferNavigator::RawBufferNavigator() {}
00015
00016 void RawBufferNavigator::setBuffer(const Buffer& b)
00017 {
       m_Buffer
00018
00019 }
00020
00021 std::uint32_t RawBufferNavigator::getDetectorID() { return m_Buffer[0]; }
00022
00023 std::int32_t RawBufferNavigator::getStartOfPayload()
00024 {
00025
        return m_StartPayload;
00026 }
00027
00028 Buffer RawBufferNavigator::getPayload() { return Buffer(&(m_Buffer.begin()[m_StartPayload]),
      m_Buffer.size() - m_StartPayload); }
```

5.55 libs/core/src/Version.cc File Reference

```
#include "Version.h"
```

5.55.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Version.cc.

5.56 Version.cc

Go to the documentation of this file.

```
00001
00005 #include "Version.h"
00006
00007 const static Version streamout_version;
00008
00009 std::uint8_t Version::getMajor() { return major; }
00010
00011 std::uint8_t Version::getMinor() { return minor; }
00012
00013 std::uint8_t Version::getPatch() { return patch; }
00014
00015 std::string Version::getPreRelease()
00016 {
00017
         switch (prerelease_type)
00018
          case semver::prerelease::alpha: return "alpha";
case semver::prerelease::beta: return "beta";
case semver::prerelease::rc: return "rc";
case semver::prerelease::none: return "";
00019
00020
00021
00022
00023
            default: return "";
00024 }
00025 }
00026
00027 std::uint8_t Version::getPreReleaseNumber() {    return prerelease_number; }
```

5.57 libs/interface/Dump/include/textDump.h File Reference

```
#include "Interface.h"
#include "Payload.h"
#include "spdlog/sinks/stdout_color_sinks.h"
#include <memory>
#include <spdlog/logger.h>
```

Classes

class textDump

5.57.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file textDump.h.

5.58 textDump.h

```
00001
00005 #pragma once
00006
00007 #include "Interface.h"
00008 #include "Payload.h"
00009 #include "spdlog/sinks/stdout_color_sinks.h"
00011 #include <memory>
00012 #include <spdlog/logger.h>
00013
```

```
00014 class textDump : public InterfaceWriter
00015 {
00016 public:
00017
       textDump();
00018
       void
                                         start();
00019
                                         processDIF(const Payload&);
       void
00020
       void
                                         processFrame(const Payload&, uint32_t frameIndex);
00021
                                         processPadInFrame(const Payload&, uint32_t frameIndex, uint32_t
     channelIndex);
00022
       void
                                         processSlowControl(Buffer);
00023
       void
                                         end();
00024
       std::shared_ptr<spdlog::logger>& print() { return m_InternalLogger; }
00025
       void
                                         setLevel(const spdlog::level::level enum& level) {
     m_InternalLogger->set_level(level); }
00026
00027 private:
00028
       // This class is a dumb class to print on terminal so we need the logger + the standard one given by
     the interface.
       std::shared_ptr<spdlog::logger> m_InternalLogger{nullptr};
00030 };
```

5.59 libs/interface/Dump/src/textDump.cc File Reference

```
#include "textDump.h"
```

5.59.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file textDump.cc.

5.60 textDump.cc

```
00001
00005 #include "textDump.h"
00006
00007 textDump::textDump() : InterfaceWriter("textDump", "1.0.0")
00008 {
00009
        m_InternalLogger = std::make_shared<spdlog::logger>("textDump",
      std::make_shared<spdlog::sinks::stdout_color_sink_mt>());
00010 m_InternalLogger->set_level(spdlog::level::trace);
00011 addCompatibility("RawdataReader", ">=1.0.0");
        addCompatibility("RawdataReader", ">=1.0.0");
addCompatibility("DIFdataExample", ">=1.0.0");
00013 }
00014
00015 void textDump::start() { print()->info("Will dump bunch of DIF data"); }
00016
00017 void textDump::processDIF(const Payload& d) { print()->info("DIF_ID : {}, DTC : {}, GTC : {}, DIF BCID
      {}, Absolute BCID: {}, Nbr frames {}", d.getDIFid(), d.getDTC(), d.getGTC(), d.getBCID(),
      d.getAbsoluteBCID(), d.getNumberOfFrames()); }
00018
00019 void textDump::processFrame(const Payload& d, uint32_t frameIndex)
00020 {
        print()->info("\tDisplaying frame number {}: ASIC ID {}, Frame BCID {}, Frame Time To Trigger
00021
      (a.k.a timestamp) is {}", frameIndex, d.getASICid(frameIndex), d.getFrameBCID(frameIndex),
      d.getFrameTimeToTrigger(frameIndex));
00022 }
00023
00024 void textDump::processPadInFrame(const Payload& d, uint32_t frameIndex, uint32_t channelIndex)
00025 {
00026
        if(d.getThresholdStatus(frameIndex, channelIndex) > 0) { print()->info("\t\tChannel {}, Threshold
      {}", channelIndex, d.getThresholdStatus(frameIndex, channelIndex)); }
00027 }
00028
00029 void textDump::processSlowControl(Buffer) { print()->error("textDump::processSlowControl not
      implemented yet."); }
00031 void textDump::end() { print()->info("textDump end of report"); }
```

5.61 libs/interface/LCIO/include/LCIOWriter.h File Reference

```
#include "EVENT/LCIO.h"
#include "IMPL/LCCollectionVec.h"
#include "IMPL/LCEventImpl.h"
#include "IMPL/RawCalorimeterHitImpl.h"
#include "IO/LCWriter.h"
#include "Interface.h"
#include "Payload.h"
#include <memory>
#include <string>
#include <vector>
```

Classes

· class LCIOWriter

5.61.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file LCIOWriter.h.

5.62 LCIOWriter.h

```
00001
00005 #pragma once
00006
00007 #include "EVENT/LCIO.h"
00007 #include "EVENT/LCTO.h"
00008 #include "IMPL/LCCollectionVec.h"
00009 #include "IMPL/LCEventImpl.h"
00010 #include "IMPL/RawCalorimeterHitImpl.h"
00011 #include "IO/LCWriter.h"
00012 #include "Interface.h"
00013 #include "Payload.h"
00014
00015 #include <memory>
00016 #include <string>
00017 #include <vector>
00018
00019 class LCIOWriter: public InterfaceWriter
00020 {
00021 public:
00022
         LCIOWriter();
00023
         void setFilename(const std::string&);
00024
00025
00026
         void start();
00027
         void processDIF(const Payload&);
00028
         void processFrame(const Payload&, const std::uint32_t& frameIndex);
00029
         void processPadInFrame(const Payload&, const std::uint32_t& frameIndex, const std::uint32_t&
      channelIndex);
00030
         void processSlowControl(const Buffer&) { ; }
00031
         void end();
00032
00033
         virtual void startEvent();
00034
         virtual void endEvent();
00035
         virtual void startDIF();
00036
         virtual void endDIF();
00037
         virtual void startFrame();
00038
        virtual void endFrame();
```

```
virtual void startPad();
00040
       virtual void endPad();
00041
00042 private:
00043 std::unique_ptr<IO::LCWriter>
                                               m_LCWriter{nullptr};
        std::unique_ptr<IMPL::LCEventImpl> m_LCEventfaullptr;
IMPL::LCCollectionVec* m_CollectionVec{nullptr};
00044
        IMPL::LCCollectionVec*
00046
        std::string
                                               m_DetectorName{"SDHCAL_prototype"};
00047 std::string
                                               m_Filename;
00048 };
```

5.63 libs/interface/LCIO/src/LCIOWriter.cc File Reference

```
#include "LCIOWriter.h"
#include "IMPL/LCFlagImpl.h"
#include "IMPL/LCParametersImpl.h"
#include "IMPL/LCRunHeaderImpl.h"
#include "IOIMPL/LCFactory.h"
#include "LCIOSTLTypes.h"
#include "Filesystem.h"
```

5.63.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file LCIOWriter.cc.

5.64 LCIOWriter.cc

```
00001
00009 #include "LCIOWriter.h"
00010
00011 #include "IMPL/LCFlagImpl.h"
00012 #include "IMPL/LCParametersImpl.h"
00013 #include "IMPL/LCRunHeaderImpl.h"
00014 #include "IOIMPL/LCFactory.h"
00015 #include "LCIOSTLTypes.h
00016 #include "Filesystem.h"
00017
00018 void LCIOWriter::setFilename(const std::string& filename) { m_Filename = filename; }
00019
00020 LCIOWriter::LCIOWriter() : InterfaceWriter("LCIOWriter", "1.0.0"),
      m_LCWriter(IOIMPL::LCFactory::getInstance()->createLCWriter()) { addCompatibility("RawdataReader",
      ">=1.0.0"); }
00021
00022 void LCIOWriter::start()
00023 {
       m_LCWriter->open(m_Filename, EVENT::LCIO::WRITE_NEW);
00024
        std::unique_ptr<IMPL::LCRunHeaderImpl> runHdr(new IMPL::LCRunHeaderImpl);
00025
       std::string filename_ = filename(m_Filename);
std::size_t beginn = filename_.find_last_of("_R");
00026
00028
        if(beginn==std::string::npos) beginn = filename_.find_last_of('_');
00029
       filename_=filename_.substr(beginn+1);
00030
       setRunNumber(stoi(filename_));
       runHdr->setRunNumber(getRunNumber());
00031
00032
        runHdr->setDetectorName(m_DetectorName);
00033
        std::string description("data collected with SDHCAL prototype");
00034
        runHdr->setDescription(description);
00035
       m_LCWriter->writeRunHeader(runHdr.get());
00036 }
00037
00038 void LCIOWriter::end() { m_LCWriter->close(); }
```

```
00040 void LCIOWriter::processDIF(const Payload& d)
00041 {
        std::string
00042
                      parameter_name = "DIF" + std::to_string(d.getDIFid()) + "_Triggers";
        EVENT::IntVec parameters;
00043
        parameters.push_back(d.getDTC());
00044
00045
        parameters.push back(d.getGTC());
        parameters.push_back(d.getBCID());
00047
        parameters.push_back(d.getAbsoluteBCID() & 0xFFFFFF);
00048
        parameters.push_back((d.getAbsoluteBCID() » 24) & 0xFFFFFF);
00049
        parameters.push_back(0);
00050
        parameters.push_back(0);
00051
        parameters.push_back(0);
        m_CollectionVec->parameters().setValues("DIF" + std::to_string(d.getDIFid()) + "_Triggers",
00052
      parameters);
00053 }
00054
00055 void LCIOWriter::processFrame(const Payload& d, const std::uint32_t& frameIndex) {}
00056
00057 void LCIOWriter::processPadInFrame(const Payload& d, const std::uint32_t& frameIndex, const
      std::uint32_t& channelIndex)
00058 {
00059
        m\_LCEvent->setTimeStamp(d.getAbsoluteBCID()*200);
00060
        m_LCEvent->setRunNumber(getRunNumber());
        IMPL::RawCalorimeterHitImpl* hit = new IMPL::RawCalorimeterHitImpl;
00061
00062
                                      ID0 = channelIndex;
        int
                                           = ID0 « 8;
00063
00064
        ID0 += d.getASICid(frameIndex);
00065
        ID0 = ID0 \ll 8;
00066
        ID0 += d.getDIFid();
00067
        hit->setCellID0(ID0);
        hit->setAmplitude(d.getThresholdStatus(frameIndex, channelIndex));
hit->setTimeStamp(d.getFrameTimeToTrigger(frameIndex));
00068
00069
00070
        m_CollectionVec->addElement(hit);
00071 }
00072
00073 void LCIOWriter::startEvent()
00074 {
       m_LCEvent = std::make_unique<IMPL::LCEventImpl>();
00076
        m_LCEvent->setEventNumber(getEventNumber());
00077
        m_LCEvent->setDetectorName(m_DetectorName);
00078
        m_LCEvent->setWeight(1);
        m_CollectionVec = new IMPL::LCCollectionVec(EVENT::LCIO::RAWCALORIMETERHIT);
IMPL::LCFlagImpl flag(0);
00079
00080
00081
        // flag.setBit(EVENT::LCIO::RCHBIT_ID1);
        flag.setBit(EVENT::LCIO::RCHBIT_TIME);
00082
        m_CollectionVec->setFlag(flag.getFlag());
00083
00084
       m_CollectionVec->parameters().setValue(EVENT::LCIO::CellIDEncoding, "dif:8,asic:8,channel:6");
00085 }
00086
00087 void LCIOWriter::endEvent()
00088 {
00089
        m_LCEvent->addCollection(m_CollectionVec, "DHCALRawHits");
00090
        m_LCWriter->writeEvent(m_LCEvent.get());
00091 }
00092
00093 void LCIOWriter::startDIF() {}
00094
00095 void LCIOWriter::endDIF() {}
00096
00097 void LCIOWriter::startFrame() {}
00098
00099 void LCIOWriter::endFrame() {}
00101 void LCIOWriter::startPad() {}
00102
00103 void LCIOWriter::endPad() {}
```

5.65 libs/interface/RawDataReader/include/RawdataReader.h File Reference

```
#include "Interface.h"
#include <array>
#include <cstdint>
#include <fstream>
#include <string>
#include <vector>
```

5.66 RawdataReader.h 125

Classes

· class RawdataReader

5.65.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file RawdataReader.h.

5.66 RawdataReader.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include "Interface.h"
80000
00009 #include <arrav>
00010 #include <cstdint>
00011 #include <fstream>
00012 #include <string>
00013 #include <vector>
00014
00015 class Buffer;
00016
00017 class RawdataReader : public InterfaceReader
00018 {
00019 public:
00020
        explicit RawdataReader(const char* fileName);
        void start();
void end();
00021
00022
                end();
getFileSize();
openFile(const std::string& fileName);
closeFile();
nextEvent();
00023
        float
00024
        void
00025
00026
        bool
00027
        bool
                        nextDIFbuffer();
        const Buffer& getBuffer();
virtual ~RawdataReader() { closeFile(); }
00028
00029
00030
        static void setDefaultBufferSize(const std::size_t& size);
00031
00032 private:
        void uncompress();
std::ifstream m_FileStream;
00033 void
00034 std::
00035
                              setFileSize(const std::size t& size);
        void
        static std::size_t m_BufferSize;
00036
        std::size_t m_FileSize{0};
std::uint32 t m NumberOfDIF{
00037
00038
        std::uint32_t
                               m_NumberOfDIF{0};
00039
        std::vector<bit8_t> m_buf;
00040
        std::string
                             m_Filename;
00041 };
```

5.67 libs/interface/RawDataReader/src/RawdataReader.cc File Reference

```
#include "RawdataReader.h"
#include "Exception.h"
#include <cstring>
#include <stdexcept>
#include <zlib.h>
```

5.67.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file RawdataReader.cc.

5.68 RawdataReader.cc

```
00001
00004 #include "RawdataReader.h"
00005
00006 #include "Exception.h"
00007
00008 #include <cstring>
00009 #include <stdexcept>
00010 #include <zlib.h>
00011
00013 std::size_t RawdataReader::m_BufferSize = 0x100000;
00014
00015 void RawdataReader::setDefaultBufferSize(const std::size_t& size) { m_BufferSize = size; }
00016
00017 RawdataReader::RawdataReader(const char* fileName) : InterfaceReader("RawdataReader", "1.0.0")
00018 {
00019
       m buf.reserve(m BufferSize);
       m_Filename = fileName;
00020
00021 }
00022
00023 void RawdataReader::start() { openFile(m_Filename); }
00024
00025 void RawdataReader::end() { closeFile(); }
00026
00027 void RawdataReader::uncompress()
00028 {
00029
       static const std::size_t size_buffer{0x20000};
                                 shift{3 * sizeof(std::uint32_t) + sizeof(std::uint64_t)};
00030
       std::size t
                                 obuf[size_buffer];
00031
        static bit8 t
                                 size_buffer_end{0x20000}; // NOLINT(runtime/int)
00032
        unsigned long
00033
       std::int8_t
                                 rc = ::uncompress(obuf, &size_buffer_end, &m_Buffer[shift], m_Buffer.size()
     - shift);
00034
        switch(rc)
00035
00036
         case Z OK: break;
         case Z_MEM_ERROR: throw Exception(Z_MEM_ERROR, "Not enough memory"); break;
case Z_BUF_ERROR: throw Exception(Z_BUF_ERROR, "Not enough room in the output buffer"); break;
00037
00038
          case Z_DATA_ERROR: throw Exception(Z_DATA_ERROR, "The input data was corrupted or incomplete");
00039
     break;
00040
         default: throw Exception("The input data was corrupted or incomplete"); break;
00041
00042
       memcpy(&m_Buffer[shift], obuf, size_buffer_end);
00043
       m_Buffer.setSize(size_buffer_end + shift);
00044 }
00045
00046 void RawdataReader::closeFile()
00047 {
00048
00050
          if(m_FileStream.is_open()) m_FileStream.close();
00051
00052
        catch(const std::ios_base::failure& e)
00053
00054
          log()->error("Caught an ios base::failure in closeFile : {} {} ", e.what(), e.code().value());
00055
          throw;
00056
00057 }
00058
00059 void RawdataReader::openFile(const std::string& fileName)
00060 {
00061
00062
00063
          m_FileStream.rdbuf() -> pubsetbuf(0, 0);
00064
          m_FileStream.exceptions(std::ifstream::failbit | std::ifstream::badbit);
00065
          m_FileStream.open(fileName.c_str(), std::ios::in | std::ios::binary | std::ios::ate); // Start at
     the end to directly calculate the size of the file then come back to beginning
00066
        m_FileStream.rdbuf()->pubsetbuf(0, 0);
00067
          if (m_FileStream.is_open())
```

```
{
00069
            setFileSize(m_FileStream.tellg());
00070
            m_FileStream.seekg(0, std::ios::beg);
00071
00072
00073
        catch (const std::ios base::failure& e)
00075
          log()->error("Caught an ios_base::failure in openFile : {}", e.what());
00076
00077
00078 }
00079
00080 bool RawdataReader::nextEvent()
00081 {
00082
00083
         m_FileStream.read(reinterpret_cast<char*>(&m_EventNumber), sizeof(std::uint32_t));
00084
00085
         m_FileStream.read(reinterpret_cast<char*>(&m_NumberOfDIF), sizeof(std::uint32_t));
00086
       catch(const std::ios_base::failure& e)
88000
00089
         return false;
00090
00091
       return true;
00092 }
00093
00094 bool RawdataReader::nextDIFbuffer()
00095 {
00096
00097
00098
         static int DIF_processed{0};
00099
          if(DIF_processed >= m_NumberOfDIF)
00100
00101
           DIF_processed = 0;
00102
           return false;
00103
00104
         else
00105
00106
           DIF_processed++;
00107
           std::uint32_t bsize{0};
00108
           m_FileStream.read(reinterpret_cast<char*>(&bsize), sizeof(std::uint32_t));
           m_FileStream.read(reinterpret_cast<char*>(&m_buf[0]), bsize);
00109
00110
           m_Buffer = Buffer(m_buf);
00111
         }
00112
00113
        catch(const std::ios_base::failure& e)
00114
00115
         log()->error("Caught an ios_base::failure in openFile : {}", e.what());
00116
         return false;
00117
00118
       return true;
00119 }
00120
00121 const Buffer& RawdataReader::getBuffer()
00122 {
00123
       uncompress();
        return m_Buffer;
00125 }
00126
00127 void RawdataReader::setFileSize(const std::size_t& size) { m_FileSize = size; }
00128
00129 float RawdataReader::getFileSize() { return m FileSize; }
```

5.69 libs/interface/ROOT/include/DIF.h File Reference

```
#include "Hit.h"
#include <TObject.h>
#include <cstdint>
#include <map>
#include <vector>
```

Classes

• class DIF

Typedefs

using Hits_const_iterator = std::vector< Hit >::const_iterator

5.69.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIF.h.

5.69.2 Typedef Documentation

```
5.69.2.1 Hits_const_iterator using Hits_const_iterator = std::vector<Hit>::const_iterator
```

Definition at line 14 of file DIF.h.

5.70 DIF.h

```
00005 #pragma once
00006
00007 #include "Hit.h"
80000
00009 #include <TObject.h>
00010 #include <cstdint>
00011 #include <map>
00012 #include <vector>
00013
00014 using Hits_const_iterator = std::vector<Hit>::const_iterator;
00015
00016 class DIF : public TObject
00017 {
00018 public:
00019
       void
                                         clear();
00020
                                         addHit(const Hit&);
       void
                                         setID(const std::uint8_t&);
00021
       void
00022
       std::uint8_t
                                         getID() const;
00023
       void
                                         setDTC(const std::uint32_t&);
00024
       std::uint32_t
                                         getDTC() const;
00025
        void
                                         setGTC(const std::uint32_t&);
                                         getGTC() const;
setDIFBCID(const std::uint32_t&);
        std::uint32_t
00026
00027
        void
00028
       std::uint32_t
                                         getDIFBCID() const;
                                         setAbsoluteBCID(const std::uint64_t&);
00030
        std::uint64_t
                                         getAbsoluteBCID() const;
00031
        std::vector<Hit>::const_iterator cbegin() const;
00032
       std::vector<Hit>::const_iterator cend() const;
00033
00034 private:
00035 std::uint8_t
                        m_ID{0};
00036
       std::uint32_t
                        m_DTC{0};
00037
       std::uint32_t
                         m_GTC{0};
00038
       std::uint32_t
                         m_DIFBCID{0};
00039
       std::uint64_t
                         m_AbsoluteBCID{0};
       std::vector<Hit> m_Hits;
00040
00041
       ClassDef(DIF, 1);
00042 };
```

5.71 libs/interface/ROOT/include/DIFLinkDef.h File Reference

```
#include <vector>
```

5.71.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIFLinkDef.h.

5.72 DIFLinkDef.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006 #include <vector>
00007
00008 #ifdef __CLING__
00009 #pragma link C++ class DIF;
00010 #pragma link C++ class Hit;
00011 #pragma link C++ class std::vector < Hit>;
00012 #endif
```

5.73 libs/interface/ROOT/include/Event.h File Reference

```
#include "DIF.h"
#include <TObject.h>
#include <cstdint>
#include <map>
```

Classes

class Event

Typedefs

• using DIFs_const_iterator = std::map< std::uint8_t, DIF >::const_iterator

5.73.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Event.h.

5.73.2 Typedef Documentation

```
5.73.2.1 DIFs_const_iterator using DIFs_const_iterator = std::map<std::uint8_t, DIF>::const_← iterator
```

Definition at line 13 of file Event.h.

5.74 Event.h

Go to the documentation of this file.

```
00005 #pragma once
00006
00007 #include "DIF.h"
00008
00009 #include <TObject.h>
00010 #include <cstdint>
00011 #include <map>
00012
00013 using DIFs_const_iterator = std::map<std::uint8_t, DIF>::const_iterator;
00014
00015 class Event : public TObject
00016 {
00017 public:
00018
        std::uint32_t
                                                          getEventNumber();
00019
        void
                                                          setEventNumber(const std::uint32_t& evtNbr);
00020
        void
                                                         clear():
00021
                                                         addDIF(const DIF& dif);
        void
        std::map<std::uint8_t, DIF>::const_iterator cbegin() const;
00023
        std::map<std::uint8_t, DIF>::const_iterator cend() const;
00024
00025 private:
00026 std::uint32_t m_EventNumber{0};
00027 std::map<std::uint8_t, DIF> DIFs;
00028 ClassDef(Event, 1);
00029 };
```

5.75 libs/interface/ROOT/include/EventLinkDef.h File Reference

```
#include <cstdint>
#include <map>
#include <vector>
```

5.75.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file EventLinkDef.h.

5.76 EventLinkDef.h 131

5.76 EventLinkDef.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006 #include <cstdint>
00007 #include <map>
00008 #include <vector>
00009 #ifdef __CLING__
00010 #pragma link C++ class DIF;
00011 #pragma link C++ class std::vector < DIF>;
00012 #pragma link C++ class std::vector < Hit>;
00013 #pragma link C++ class std::vector < Hit>;
00014 #pragma link C++ class Event;
00015 #pragma link C++ class std::vector < Event>;
00016 #pragma link C++ class std::vector < Std::vector < Event>;
00016 #pragma link C++ class std::vector < Event>;
00017 #endif
```

5.77 libs/interface/ROOT/include/Hit.h File Reference

```
#include <TObject.h>
#include <cstdint>
```

Classes

· class Hit

5.77.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Hit.h.

5.78 Hit.h

```
00001
00005 #pragma once
00006
00007 #include <TObject.h>
00008 #include <cstdint>
00010 class Hit : public TObject
00011 {
00012 public:
00013
       void
                     clear();
                  setDIF(const std::uint8_t&);
setASIC(const std::uint8_t&);
00014
       void
00015
       void
00016
                     setChannel(const std::uint8_t&);
       void
00017
       void
                     setThreshold(const std::uint8_t&);
00018
       void
                     setDTC(const std::uint32_t&);
                    setGTC(const std::uint32_t&);
00019
       void
00020
                     setDIFBCID(const std::uint32_t&);
       void
                     setFrameBCID(const std::uint32_t&);
00021
        void
00022
                      setTimestamp(const std::uint32_t&);
00023
       void
                      setAbsoluteBCID(const std::uint64_t&);
00024
       std::uint8_t getDIFid() const;
                      getASICid() const;
00025
       std::uint8_t
       std::uint8_t getChannel() const;
00026
00027
       std::uint8_t getThreshold() const;
00028
       std::uint32_t getDTC() const;
```

5.79 libs/interface/ROOT/include/HitLinkDef.h File Reference

5.79.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file HitLinkDef.h.

5.80 HitLinkDef.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006 #ifdef __CLING__
00007 #pragma link C++ class Hit;
00008 #endif
```

5.81 libs/interface/ROOT/include/ROOTWriter.h File Reference

```
#include "Event.h"
#include "Interface.h"
#include "Payload.h"
#include <TFile.h>
#include <TTree.h>
#include <string>
#include <vector>
```

Classes

class ROOTWriter

5.82 ROOTWriter.h 133

5.82 ROOTWriter.h

```
Go to the documentation of this file.
```

```
00006 #pragma once
00007
00008 #include "Event.h"
00009 #include "Interface.h"
00010 #include "Payload.h"
00011
00012 #include <TFile.h>
00013 #include <TTree.h>
00014 #include <string>
00015 #include <vector>
00016
00017 class ROOTWriter : public InterfaceWriter
00018 {
00019 public:
00020 ROOTWriter();
00021
00022
        void setFilename(const std::string&);
00023
00024
        void start();
00025
        void processDIF(const Payload&);
00026
        void processFrame(const Payload&, const std::uint32_t& frameIndex);
00027
        void processPadInFrame(const Payload&, const std::uint32_t& frameIndex, const std::uint32_t&
channelIndex);
00028 void process
00028 void processSlowControl(const Buffer&) { ; } 00029 void end();
00030
00031 virtual void startEvent();
00032 virtual void endEvent();
00033 virtual void startDIF();
00034 virtual void endDIF();
00035 virtual void startFrame(
00036 virtual void endFrame();
        virtual void startFrame();
00037
        virtual void startPad();
00038 virtual void endPad();
00039
00040 private:
                     m_File{nullptr};
00041 TFile*
00042
                     m_Tree{nullptr};
        TTree*
00043
                      m_Event{nullptr};
        Event*
        DIF*
00044
                      m_DIF{nullptr};
00045 Hit*
                      m_Hit{nullptr};
00046
        std::string m_Filename;
00047 };
```

5.83 libs/interface/ROOT/src/DIF.cc File Reference

```
#include "DIF.h"
#include <cstdint>
```

5.83.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIF.cc.

5.84 DIF.cc

Go to the documentation of this file.

```
00001
00006 #include "DIF.h"
00007
00008 #include <cstdint>
00009
00010 void DIF::addHit(const Hit& hit) { m_Hits.push_back(hit); }
00011
00012 void DIF::setID(const std::uint8_t& id) { m_ID = id; }
00013
00014 std::uint8_t DIF::getID()const { return m_ID; }
00016 void DIF::setDTC(const std::uint32_t& dtc) { m_DTC = dtc; }
00017
00018 std::uint32_t DIF::getDTC()const { return m_DTC; }
00019
00020 void DIF::setGTC(const std::uint32 t& gtc) { m GTC = gtc; }
00021
00022 std::uint32_t DIF::getGTC()const { return m_GTC; }
00023
00024 void DIF::setDIFBCID(const std::uint32_t& difbcid) { m_DIFBCID = difbcid; }
00025
00026 std::uint32_t DIF::getDIFBCID()const { return m_DIFBCID; }
00028 void DIF::setAbsoluteBCID(const std::uint64_t& absolutebcid) { m_AbsoluteBCID = absolutebcid; }
00029
00030 std::uint64_t DIF::getAbsoluteBCID()const { return m_AbsoluteBCID; }
00031
00032 std::vector<Hit>::const_iterator DIF::cbegin()const { return m_Hits.cbegin(); }
00033
00034 std::vector<Hit>::const_iterator DIF::cend()const { return m_Hits.cend(); }
00035
00036 void DIF::clear() { m_Hits.clear(); }
```

5.85 libs/interface/ROOT/src/Event.cc File Reference

```
#include "Event.h"
```

5.85.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Event.cc.

5.86 Event.cc

```
00006 #include "Event.h"
00007
00008 std::uint32_t Event::getEventNumber()
00009 {
00010
        return m EventNumber;
00011 }
00012
00013 void Event::setEventNumber(const std::uint32_t& evtNbr)
00014 {
00015
       m EventNumber=evtNbr:
00016 }
00017
00018 void Event::clear() { DIFs.clear(); }
00019
00020 void Event::addDIF(const DIF& dif) { DIFs[dif.getID()] = dif; }
00021
00022 std::map<std::uint8_t, DIF>::const_iterator Event::cbeqin()const { return DIFs.cbeqin(); }
00024 std::map<std::uint8_t, DIF>::const_iterator Event::cend()const { return DIFs.cend(); }
```

5.87 libs/interface/ROOT/src/Hit.cc File Reference

```
#include "Hit.h"
```

5.87.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Hit.cc.

5.88 Hit.cc

```
00006 #include "Hit.h"
00007 void Hit::clear()
00008 {
00009
       m DTF
                       = 0:
00010
       m_ASIC
                       = 0;
00011
       m_Channel
                      = 0;
00012
       m_Threshold
00013
        m_DTC
00014
       m_GTC
                       = 0;
00015
       m_DIFBCID
                      = 0:
       m_FrameBCID
00016
                      = 0;
                       = 0;
00017
        m_Timestamp
00018
       m_AbsoluteBCID = 0;
00019 }
00020
00021 void Hit::setDIF(const std::uint8_t& dif) { m_DIF = dif; }
00022
00023 void Hit::setASIC(const std::uint8 t& asic) { m ASIC = asic; }
00025 void Hit::setChannel(const std::uint8_t& channel) { m_Channel = channel; }
00026
00027 void Hit::setThreshold(const std::uint8_t& threshold) { m_Threshold = threshold; }
00028
00029 void Hit::setDTC(const std::uint32_t& dtc) { m_DTC = dtc; }
00030
00031 void Hit::setGTC(const std::uint32_t& gtc) { m_GTC = gtc; }
00032
00033 void Hit::setDIFBCID(const std::uint32_t& difbcid) { m_DIFBCID = difbcid; }
00034
00035 void Hit::setFrameBCID(const std::uint32_t& framebcid) { m_FrameBCID = framebcid; }
00037 void Hit::setTimestamp(const std::uint32_t& timestamp) { m_Timestamp = timestamp; }
00038
00039 void Hit::setAbsoluteBCID(const std::uint64_t& absolutebcid) { m_AbsoluteBCID = absolutebcid; }
00040
00041 std::uint8_t Hit::getDIFid()const { return m_DIF; }
00042
00043 std::uint8_t Hit::getASICid()const { return m_ASIC; }
00044
00045 std::uint8_t Hit::getChannel()const { return m_Channel; }
00046
00047 std::uint8_t Hit::getThreshold()const { return m_Threshold; }
00048
00049 std::uint32_t Hit::getDTC()const { return m_DTC; }
00050
00051 std::uint32_t Hit::getGTC()const { return m_GTC; }
00052
00053 std::uint32_t Hit::getDIFBCID()const { return m_DIFBCID; }
00054
00055 std::uint32_t Hit::getFrameBCID()const { return m_FrameBCID; }
00056
00057 std::uint32_t Hit::getTimestamp()const { return m_Timestamp; }
00058
00059 std::uint64_t Hit::getAbsoluteBCID()const { return m_AbsoluteBCID; }
```

5.89 libs/interface/ROOT/src/ROOTWriter.cc File Reference

#include "ROOTWriter.h"

5.89.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file ROOTWriter.cc.

5.90 ROOTWriter.cc

```
00006 #include "ROOTWriter.h"
00007
00008 void ROOTWriter::setFilename(const std::string& filename) { m_Filename = filename; }
00009
00010 ROOTWriter::ROOTWriter(): InterfaceWriter("ROOTWriter", "1.0.0") { addCompatibility("RawdataReader",
00011
00012 void ROOTWriter::start()
00013 {
        m_File = TFile::Open(m_Filename.c_str(), "RECREATE", m_Filename.c_str(),
00014
     ROOT::CompressionSettings(ROOT::kZLIB, 5));
00015 m_Tree = new TTree("RawData", "Raw SDHCAL data tree");
00016
       m_Tree->Branch("Events", &m_Event, 512000, 99);
00017 }
00018
00019 void ROOTWriter::end()
00020 {
00021
        if (m_Tree) m_Tree->Write();
00022
        if (m_File)
00023
00024
         m File->Write();
00025
         m_File->Close();
00026
00027
        if (m File) delete m File;
00028 }
00029
00030 void ROOTWriter::processDIF(const Payload& d)
00031 {
00032
       m DIF->setID(d.getDIFid());
00033
       m_DIF->setDTC(d.getDTC());
00034
        m_DIF->setGTC(d.getGTC());
00035
        m_DIF->setDIFBCID(d.getBCID());
00036
        m_DIF->setAbsoluteBCID(d.getAbsoluteBCID());
00037 }
00038
00039 void ROOTWriter::processFrame(const Payload& d, const std::uint32_t& frameIndex)
00040 {
00041
        m_Hit->setDIF(d.getDIFid());
00042
       m_Hit->setASIC(d.getASICid(frameIndex));
00043
       m_Hit->setDTC(d.getDTC());
00044
        m Hit->setGTC(d.getGTC());
00045
       m_Hit->setDIFBCID(d.getBCID());
        m_Hit->setAbsoluteBCID(d.getAbsoluteBCID());
00046
00047
        m_Hit->setFrameBCID(d.getFrameBCID(frameIndex));
00048
        m_Hit->setTimestamp(d.getFrameTimeToTrigger(frameIndex));
00049 }
00050
00051 void ROOTWriter::processPadInFrame(const Payload& d, const std::uint32_t& frameIndex, const
      std::uint32_t& channelIndex)
00052 {
00053
        m_Hit->setChannel(channelIndex);
00054
       m_Hit->setThreshold(static_cast<std::uint8_t>(d.getThresholdStatus(frameIndex, channelIndex)));
00055 }
00056
00057 void ROOTWriter::startEvent()
00058 {
```

5.90 ROOTWriter.cc 137

```
m_Event = new Event();
// m_Event->clear();
00062 }
00063
00064 void ROOTWriter::endEvent()
00065 {
00066 m_Tree->Fill();
00067 if(m_Event) delete m_Event;
00068 }
00069
00070 void ROOTWriter::startDIF()
00071 {
00072  m_DIF = new DIF();
00073  // m_DIF->clear();
00074 }
00075
00076 void ROOTWriter::endDIF()
00077 {
00081
00082 void ROOTWriter::startFrame()
00083 {
00084 m_Hit = new Hit();
00085 // m_Hit->clear();
00086 }
00087
00088 void ROOTWriter::endFrame()
00092 }
00093
00094 void ROOTWriter::startPad() {}
00095
00096 void ROOTWriter::endPad() {}
```