# streamout

Generated by Doxygen 1.9.3

1	Hierarchical Index	1
	1.1 Class Hierarchy	1
2	Class Index	1
	2.1 Class List	1
2	File Index	2
•	3.1 File List	2
_		_
4	Class Documentation	4
	4.1 Buffer Class Reference	4
	4.1.1 Detailed Description	4
	4.1.2 Constructor & Destructor Documentation	4
	4.1.3 Member Function Documentation	5
	4.2 BufferLooper < SOURCE, DESTINATION > Class Template Reference	7
	4.2.1 Detailed Description	7
	4.2.2 Constructor & Destructor Documentation	7
	4.2.3 Member Function Documentation	8
	4.3 BufferLooperCounter Struct Reference	11
	4.3.1 Detailed Description	11
	4.3.2 Member Function Documentation	11
	4.3.3 Member Data Documentation	12
	4.4 DIF Class Reference	13
	4.4.1 Detailed Description	14
	4.4.2 Member Function Documentation	14
	4.5 DIFPtr Class Reference	16
	4.5.1 Detailed Description	16
	4.6 DIFSlowControl Class Reference	18
	4.6.1 Detailed Description	19
	4.6.2 Constructor & Destructor Documentation	19
	4.6.3 Member Function Documentation	19
	4.7 Event Class Reference	21
	4.7.1 Detailed Description	21
	4.7.2 Member Function Documentation	21
	4.8 Exception Class Reference	22
	4.8.1 Detailed Description	22
	4.8.2 Constructor & Destructor Documentation	22
	4.8.3 Member Function Documentation	23
	4.9 Hit Class Reference	23
	4.9.1 Detailed Description	23 24
	4.9.2 Member Function Documentation	24
	4.10 Interface Class Reference	2 <del>4</del> 27
	4.10.1 Detailed Description	28

4.10.2 Constructor & Destructor Documentation	28
4.10.3 Member Function Documentation	28
4.11 InterfaceReader Class Reference	30
4.11.1 Detailed Description	31
4.11.2 Constructor & Destructor Documentation	31
4.11.3 Member Data Documentation	31
4.12 InterfaceWriter Class Reference	32
4.12.1 Detailed Description	32
4.12.2 Constructor & Destructor Documentation	32
4.12.3 Member Function Documentation	32
4.13 PayloadParser Class Reference	33
4.13.1 Detailed Description	34
4.13.2 Constructor & Destructor Documentation	34
4.13.3 Member Function Documentation	35
4.14 RawBufferNavigator Class Reference	41
4.14.1 Detailed Description	41
4.14.2 Constructor & Destructor Documentation	41
4.14.3 Member Function Documentation	41
4.15 RawdataReader Class Reference	43
4.15.1 Detailed Description	44
4.15.2 Constructor & Destructor Documentation	44
4.15.3 Member Function Documentation	44
4.16 ROOTWriter Class Reference	46
4.16.1 Detailed Description	47
4.16.2 Constructor & Destructor Documentation	47
4.16.3 Member Function Documentation	47
4.17 textDump Class Reference	50
4.17.1 Detailed Description	51
4.17.2 Constructor & Destructor Documentation	51
4.17.3 Member Function Documentation	51
4.18 Timer Class Reference	53
4.18.1 Detailed Description	53
4.18.2 Member Function Documentation	53
4.19 Version Class Reference	53
4.19.1 Detailed Description	54
4.19.2 Constructor & Destructor Documentation	54
4.19.3 Member Function Documentation	54
ile Documentation	55
	55
	56
5.1.2 Typedef Documentation	56
	4.10.3 Member Function Documentation 4.11 InterfaceReader Class Reference 4.11.1 Detailed Description 4.11.2 Constructor & Destructor Documentation 4.11.3 Member Data Documentation 4.12.1 InterfaceWriter Class Reference 4.12.1 Detailed Description 4.12.2 Constructor & Destructor Documentation 4.12.3 Member Function Documentation 4.13.1 Detailed Description 4.13 PayloadParser Class Reference 4.13.1 Detailed Description 4.13.2 Constructor & Destructor Documentation 4.13.3 Member Function Documentation 4.14.3 Member Function Documentation 4.14.4 Postructor & Destructor Documentation 4.14.5 Constructor & Destructor Documentation 4.15.2 Constructor & Destructor Documentation 4.16.5 RawdataReader Class Reference 4.15.1 Detailed Description 4.15.2 Constructor & Destructor Documentation 4.16.3 Member Function Documentation 4.16 ROOTWriter Class Reference 4.16.1 Detailed Description 4.16.2 Constructor & Destructor Documentation 4.17 textDump Class Reference 4.17.1 Detailed Description 4.18.2 Member Function Documentation 4.17 textDump Class Reference 4.17.1 Detailed Description 4.18.2 Member Function Documentation 4.18 Timer Class Reference 4.19.1 Detailed Description 4.19 Version Class Reference 4.19.1 Detailed Description 4.19.2 Constructor & Destructor Documentation 4.19 Version Class Reference 4.19.1 Detailed Description 4.19.2 Constructor & Destructor Documentation 4.19 Version Class Reference 4.19.1 Detailed Description 4.19.2 Constructor & Destructor Documentation 4.19 Version Class Reference 4.19.1 Detailed Description 4.19.2 Constructor & Destructor Documentation 4.19 Version Class Reference 4.19.1 Detailed Description 4.19.2 Constructor & Destructor Documentation 4.19 Version Class Reference 5.1.1 Detailed Description

5.1.3 Function Documentation	57
5.2 Bits.h	57
5.3 libs/core/include/Buffer.h File Reference	57
5.3.1 Detailed Description	57
5.4 Buffer.h	58
5.5 libs/core/include/BufferLooper.h File Reference	58
5.5.1 Detailed Description	59
5.6 BufferLooper.h	59
5.7 libs/core/include/BufferLooperCounter.h File Reference	62
5.7.1 Detailed Description	62
5.8 BufferLooperCounter.h	62
5.9 libs/core/include/DetectorId.h File Reference	63
5.9.1 Detailed Description	63
5.9.2 Enumeration Type Documentation	63
5.10 DetectorId.h	63
5.11 libs/core/include/DIFSlowControl.h File Reference	64
5.11.1 Detailed Description	64
5.11.2 Function Documentation	64
5.12 DIFSlowControl.h	65
5.13 libs/core/include/Exception.h File Reference	65
5.13.1 Detailed Description	65
5.14 Exception.h	66
5.15 libs/core/include/Filesystem.h File Reference	66
5.15.1 Detailed Description	66
5.15.2 Function Documentation	66
5.16 Filesystem.h	67
5.17 libs/core/include/Formatters.h File Reference	67
5.17.1 Detailed Description	68
5.17.2 Function Documentation	68
5.18 Formatters.h	72
5.19 libs/core/include/Interface.h File Reference	72
5.19.1 Detailed Description	73
5.19.2 Enumeration Type Documentation	73
5.20 Interface.h	73
5.21 libs/core/include/PayloadParser.h File Reference	75
5.21.1 Detailed Description	75
5.22 PayloadParser.h	75
5.23 libs/core/include/RawBufferNavigator.h File Reference	78
5.23.1 Detailed Description	79
5.24 RawBufferNavigator.h	79
5.25 libs/core/include/Timer.h File Reference	79
5.25.1 Detailed Description	79

5.26 Timer.h	80
5.27 libs/core/include/Utilities.h File Reference	80
5.27.1 Detailed Description	80
5.27.2 Function Documentation	80
5.28 Utilities.h	81
5.29 libs/core/include/Version.h File Reference	81
5.29.1 Detailed Description	81
5.30 Version.h	81
5.31 libs/core/include/Words.h File Reference	82
5.31.1 Detailed Description	82
5.31.2 Enumeration Type Documentation	82
5.32 Words.h	83
5.33 libs/core/src/Bits.cc File Reference	83
5.33.1 Detailed Description	84
5.33.2 Function Documentation	84
5.34 Bits.cc	84
5.35 libs/core/src/BufferLooperCounter.cc File Reference	84
5.36 BufferLooperCounter.cc	84
5.37 libs/core/src/DIFSlowControl.cc File Reference	85
5.37.1 Detailed Description	85
5.37.2 Function Documentation	85
5.38 DIFSlowControl.cc	85
5.39 libs/core/src/Filesystem.cc File Reference	88
5.39.1 Detailed Description	89
5.39.2 Function Documentation	89
5.40 Filesystem.cc	90
5.41 libs/core/src/Formatters.cc File Reference	90
5.41.1 Detailed Description	91
5.41.2 Function Documentation	91
5.42 Formatters.cc	95
5.43 libs/core/src/RawBufferNavigator.cc File Reference	96
5.43.1 Detailed Description	96
5.44 RawBufferNavigator.cc	96
5.45 libs/core/src/Version.cc File Reference	97
5.45.1 Detailed Description	97
5.46 Version.cc	97
5.47 libs/interface/Dump/include/textDump.h File Reference	98
5.47.1 Detailed Description	98
5.48 textDump.h	98
5.49 libs/interface/Dump/src/textDump.cc File Reference	99
5.49.1 Detailed Description	99
5.50 textDump.cc	99

5.51 libs/interface/LCIO/include/LCIOWriter.h File Reference	99
5.51.1 Detailed Description	99
5.52 LCIOWriter.h	100
5.53 libs/interface/LCIO/src/LCIOWriter.cc File Reference	100
5.53.1 Detailed Description	100
5.54 LCIOWriter.cc	100
5.55 libs/interface/RawDataReader/include/RawdataReader.h File Reference	100
5.55.1 Detailed Description	100
5.56 RawdataReader.h	101
5.57 libs/interface/RawDataReader/src/RawdataReader.cc File Reference	101
5.57.1 Detailed Description	101
5.58 RawdataReader.cc	102
5.59 libs/interface/ROOT/include/DIF.h File Reference	103
5.59.1 Detailed Description	103
5.59.2 Typedef Documentation	104
5.60 DIF.h	104
5.61 libs/interface/ROOT/include/DIFLinkDef.h File Reference	104
5.61.1 Detailed Description	104
5.62 DIFLinkDef.h	105
5.63 libs/interface/ROOT/include/Event.h File Reference	105
5.63.1 Detailed Description	105
5.63.2 Typedef Documentation	105
5.64 Event.h	106
5.65 libs/interface/ROOT/include/EventLinkDef.h File Reference	106
5.65.1 Detailed Description	106
5.66 EventLinkDef.h	106
5.67 libs/interface/ROOT/include/Hit.h File Reference	106
5.67.1 Detailed Description	107
5.68 Hit.h	107
5.69 libs/interface/ROOT/include/HitLinkDef.h File Reference	107
5.69.1 Detailed Description	107
5.70 HitLinkDef.h	108
5.71 libs/interface/ROOT/include/ROOTWriter.h File Reference	108
5.72 ROOTWriter.h	108
5.73 libs/interface/ROOT/src/DIF.cc File Reference	109
5.73.1 Detailed Description	109
5.74 DIF.cc	109
5.75 libs/interface/ROOT/src/Event.cc File Reference	109
5.75.1 Detailed Description	109
5.76 Event.cc	110
5.77 libs/interface/ROOT/src/Hit.cc File Reference	110
5.77.1 Detailed Description	110

1 Hierarchical Index

5.78 Hit.cc	110
5.79 libs/interface/ROOT/src/ROOTWriter.cc File Reference	111
5.79.1 Detailed Description	
5.80 ROOTWriter.cc	111
1 Hierarchical Index	
1.1 Class Hierarchy	
This inheritance list is sorted roughly, but not completely, alphabetically:	
Buffer	4
PayloadParser	33
BufferLooper< SOURCE, DESTINATION >	7
BufferLooperCounter	11
DIFPtr	16
DIFSlowControl	18
Exception	22
Interface	27
InterfaceReader	30
RawdataReader	43
InterfaceWriter	32
ROOTWriter	46
textDump	50
RawBufferNavigator	41
<b>Timer</b> TObject	53
DIF	13
Event	21
Hit semver::version	23
Version	53

# 2 Class Index

## 2.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

Buffer	4
BufferLooper< SOURCE, DESTINATION >	7
BufferLooperCounter	11
DIF	13
DIFPtr M3 MICROROC and HARDROC2 dataformat	16
DIFSlowControl	18
Event	21
Exception	22
Hit	23
Interface	27
InterfaceReader	30
InterfaceWriter	32
PayloadParser PayloadParser	33
RawBufferNavigator  Class to navigate in the raw data buffer parse the header and send the payload as Buffer	41
RawdataReader	43
ROOTWriter	46
textDump	50
Timer	53
Version	53
3 File Index	
J HE HIGEX	
3.1 File List	
Here is a list of all files with brief descriptions:	
libs/core/include/Bits.h	55
libs/core/include/Buffer.h	57
libs/core/include/BufferLooper.h	58
libs/core/include/BufferLooperCounter.h	62
libs/core/include/DetectorId.h	63
libs/core/include/DIFSlowControl.h	64
libs/core/include/Exception.h	65

3.1 File List 3


libs/core/include/Filesystem.h	66
libs/core/include/Formatters.h	67
libs/core/include/Interface.h	72
libs/core/include/PayloadParser.h	75
libs/core/include/RawBufferNavigator.h	78
libs/core/include/Timer.h	79
libs/core/include/Utilities.h	80
libs/core/include/Version.h	81
libs/core/include/Words.h	82
libs/core/src/Bits.cc	83
libs/core/src/BufferLooperCounter.cc	84
libs/core/src/DIFSlowControl.cc	85
libs/core/src/Filesystem.cc	88
libs/core/src/Formatters.cc	90
libs/core/src/RawBufferNavigator.cc	96
libs/core/src/Version.cc	97
libs/interface/Dump/include/textDump.h	98
libs/interface/Dump/src/textDump.cc	99
libs/interface/LCIO/include/LCIOWriter.h	99
libs/interface/LCIO/src/LCIOWriter.cc	100
libs/interface/RawDataReader/include/RawdataReader.h	100
libs/interface/RawDataReader/src/RawdataReader.cc	101
libs/interface/ROOT/include/DIF.h	103
libs/interface/ROOT/include/DIFLinkDef.h	104
libs/interface/ROOT/include/Event.h	105
libs/interface/ROOT/include/EventLinkDef.h	106
libs/interface/ROOT/include/Hit.h	106
libs/interface/ROOT/include/HitLinkDef.h	107
libs/interface/ROOT/include/ROOTWriter.h	108
libs/interface/ROOT/src/DIF.cc	109
libs/interface/ROOT/src/Event.cc	109
libs/interface/ROOT/src/Hit.cc	110

## 4 Class Documentation

## 4.1 Buffer Class Reference

#include <libs/core/include/Buffer.h>

Inheritance diagram for Buffer:

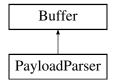

## **Public Member Functions**

- Buffer ()
- virtual ∼Buffer ()
- Buffer (const bit8\_t b[], const std::size\_t &i)
- Buffer (const char b[], const std::size\_t &i)
- template<typename T >

Buffer (const std::vector< T > &rawdata)

- template<typename T, std::size\_t N>
   Buffer (const std::array< T, N > &rawdata)
- std::size\_t size () const
- std::size\_t capacity () const
- void set (unsigned char \*b)
- void set (const Buffer &buffer)
- bit8\_t \* begin () const
- bit8\_t \* end () const
- bit8\_t & operator[] (const std::size\_t &pos)
- bit8\_t & operator[] (const std::size\_t &pos) const
- void setSize (const std::size\_t &size)

## 4.1.1 Detailed Description

Definition at line 14 of file Buffer.h.

## 4.1.2 Constructor & Destructor Documentation

```
4.1.2.1 Buffer() [1/5] Buffer::Buffer ( ) [inline]

Definition at line 17 of file Buffer.h.
00017 : m_Buffer(nullptr), m_Size(0), m_Capacity(0) {}
```

```
4.1.2.2 ~Buffer() virtual Buffer::~Buffer () [inline], [virtual]
Definition at line 18 of file Buffer.h.
4.1.2.3 Buffer() [2/5] Buffer::Buffer (
              const bit8_t b[],
              const std::size_t & i ) [inline]
Definition at line 19 of file Buffer.h.
00019: m_Buffer(const_cast<bit8_t*>(&b[0])), m_Size(i), m_Capacity(i) {}
4.1.2.4 Buffer() [3/5] Buffer::Buffer (
              const char b[],
              const std::size_t & i ) [inline]
Definition at line 20 of file Buffer.h.
00020 : m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const bit8_t*>(&b[0]))), m_Size(i * sizeof(char)),
     m_Capacity(i * sizeof(char)) {}
4.1.2.5 Buffer() [4/5] template<typename T >
Buffer::Buffer (
              const std::vector< T > & rawdata ) [inline]
Definition at line 21 of file Buffer.h.
00021 : m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const bit8_t*>(rawdata.data()))),
     m_Size(rawdata.size() * sizeof(T)), m_Capacity(rawdata.capacity() * sizeof(T)) {}
4.1.2.6 Buffer() [5/5] template<typename T , std::size_t N>
Buffer::Buffer (
              const std::array< T, N > & rawdata ) [inline]
Definition at line 22 of file Buffer.h.
00022 : m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const_bit8_t*>(rawdata.data()))),
     m_Size(rawdata.size() * sizeof(T)), m_Capacity(rawdata.size() * sizeof(T)) {}
4.1.3 Member Function Documentation
4.1.3.1 begin() bit8_t * Buffer::begin ( ) const [inline]
Definition at line 34 of file Buffer.h.
```

00034 { return m\_Buffer; }

```
4.1.3.2 capacity() std::size_t Buffer::capacity ( ) const [inline]
Definition at line 25 of file Buffer.h.
00025 { return m_Capacity; }
4.1.3.3 end() bit8_t * Buffer::end ( ) const [inline]
Definition at line 35 of file Buffer.h.
00035 { return m_Buffer + m_Size; }
4.1.3.4 operator[]() [1/2] bit8_t & Buffer::operator[] (
              const std::size_t & pos ) [inline]
Definition at line 36 of file Buffer.h.
00036 { return m_Buffer[pos]; }
4.1.3.5 operator[]() [2/2] bit8_t & Buffer::operator[] (
              const std::size_t & pos ) const [inline]
Definition at line 37 of file Buffer.h.
00037 { return m_Buffer[pos]; }
4.1.3.6 set() [1/2] void Buffer::set (
              const Buffer & buffer ) [inline]
Definition at line 28 of file Buffer.h.
00029
         m_Buffer = buffer.begin();
m_Size = buffer.size();
00031
4.1.3.7 set() [2/2] void Buffer::set (
              unsigned char *b ) [inline]
Definition at line 27 of file Buffer.h.
00027 { m_Buffer = b; }
4.1.3.8 setSize() void Buffer::setSize (
              const std::size_t & size ) [inline]
Definition at line 39 of file Buffer.h.
00039 { m_Size = size; }
```

```
4.1.3.9 size() std::size_t Buffer::size ( ) const [inline]
Definition at line 24 of file Buffer.h.
00024 { return m_Size; }
```

The documentation for this class was generated from the following file:

· libs/core/include/Buffer.h

## 4.2 BufferLooper < SOURCE, DESTINATION > Class Template Reference

```
#include <libs/core/include/BufferLooper.h>
```

#### **Public Member Functions**

- BufferLooper (SOURCE &source, DESTINATION &dest, bool debug=false)
- void addSink (const spdlog::sink\_ptr &sink, const spdlog::level::level\_enum &level=spdlog::get\_level())
- void loop (const std::uint32\_t &m\_NbrEventsToProcess=0)
- void printAllCounters ()
- std::shared ptr< spdlog::logger > log ()
- void setDetectorIDs (const std::vector< DetectorID > &detectorIDs)

## 4.2.1 Detailed Description

```
template < typename SOURCE, typename DESTINATION > class Buffer Looper < SOURCE, DESTINATION >
```

Definition at line 28 of file BufferLooper.h.

## 4.2.2 Constructor & Destructor Documentation

```
4.2.2.1 BufferLooper() template<typename SOURCE , typename DESTINATION >
BufferLooper< SOURCE, DESTINATION >::BufferLooper (
              SOURCE & source,
              DESTINATION & dest,
              bool debug = false ) [inline]
Definition at line 31 of file BufferLooper.h.
                                                                         : m_Source(source),
      m_Destination(dest), m_Debug(debug)
00032
00033
         m_Logger = spdlog::create<spdlog::sinks::null_sink_mt>("streamout");
00034
         if(!spdlog::get("streamout")) { spdlog::register_logger(m_Logger); }
00035
         m_Source.setLogger(m_Logger);
00036
         m_Destination.setLogger(m_Logger);
00037 }
```

#### 4.2.3 Member Function Documentation

```
4.2.3.1 addSink() template<typename SOURCE , typename DESTINATION >
void BufferLooper< SOURCE, DESTINATION >::addSink (
            const spdlog::sink_ptr & sink,
            const spdlog::level::level_enum & level = spdlog::get_level() ) [inline]
Definition at line 39 of file BufferLooper.h.
00041
        sink->set_level(level);
00042
        m_Sinks.push_back(sink);
00043
        m_Logger = std::make_shared<spdlog::logger>("streamout", begin(m_Sinks), end(m_Sinks));
00044
        m_Source.setLogger(m_Logger);
00045
        m_Destination.setLogger(m_Logger);
00046
4.2.3.2 log() template<typename SOURCE , typename DESTINATION >
std::shared_ptr< spdlog::logger > BufferLooper< SOURCE, DESTINATION >::log ( ) [inline]
Definition at line 222 of file BufferLooper.h.
00222 { return m_Logger; }
4.2.3.3 loop() template<typename SOURCE , typename DESTINATION >
void BufferLooper< SOURCE, DESTINATION >::loop (
            const std::uint32_t & m_NbrEventsToProcess = 0 ) [inline]
START EVENT ///
START DIF ///
START FRAME ///
START FRAME ///
START DIF ///
START EVENT ///
Definition at line 48 of file BufferLooper.h.
00049
        // clang-format off
00050
        fmt::print(fg(fmt::color::medium_orchid) | fmt::emphasis::bold,
00051
              "\n"
00052
00053 " sssssssssssss
    \texttt{tttt} \backslash \texttt{n"}
ttt:::t\n"
00055 "S:::::SSSSSS::::::S t:::::t
     t::::t\n"
00056 "S::::S
               SSSSSSS t::::t
     t::::t\n"
                       00057 "S:::::S
                 ttttttt::::ttttttt
t::::::::::::::::::
                                   r::::rrr:::::: ee::::::ee
                                                                    a:::::::a
    00059 " S::::SSSS
    u::::ut:::::::::t\n"
```

```
00060 " SS:::::SSSSStttttt:::::tttttt
                                                                                           rr::::::rrrrr::::::re:::::e
                                                                                                                                                                 e::::e
                                                                                                                                                                                                  a::::a
o::::ou::::u u::::u
             m:::::mmm::::::mmm::::::o
                                                                                                                                            t::::t\n"
                                                                                                 u::::u t:::::t\n"
                                                                 :::t r::::r
o::::ou::::u u::::r
 00062 "
            " SSSSSS::::S t:::::t
m::::m m::::mo::::o o::::
                                     S:::::S t:::::t r:::::r
:::mo::::o o::::ou::::u u::::u
| 1...:r | e:::::eeeeeeeee
| m...:m | m:::mo::::o | o:::ou::::u | u:::u | t::::t\n" |
| 00064 " | S::::S | t::::t | ttttt::::r | e:::::e |
| m:::m | m:::mo::::o | o:::ou:::::uuuu::::u | t::::t | ttttt\n" |
| 00065 "SSSSSSS | S::::S | t::::tttt::::tr::::r | e::::::e |
| m::::m | m:::mo::::ooooo::::ou::::
                                                                                                                                    e:::::eeeeeeeeee a::::aaaa::::::a m::::m
                                                                                                                                                                          a::::a a:::::a m:::::m
                                                                                                                                                                          a::::a a:::::a m:::::m
             \texttt{m::::m} \quad \texttt{m::::mo:::::ooooo::::ou::::::uu} \quad \texttt{t:::::ttt:::::t} \\ \texttt{n"}
00066 "S:::::SSSSSS:::::S tt::::::::tr:::::r
                                                                                                                                       e::::::eeeeeeeea::::aaaaa:::::a m::::m
             m::::m m::::m oo:
00068 " SSSSSSSSSSSSSSS
                                                                 tttttttttt rrrrrr
                                                                                                                                              eeeeeeeeeee aaaaaaaaa aaammmmmm
                                                                                      uuuuuuuu uuuu ttttttttt {}\m"
            mmmmmm 000000000
 00070 fmt::format(fg(fmt::color::red) | fmt::emphasis::bold, "v{}", streamout_version.to_string()));
 00071
                   // clang-format on
                     00072
                     log() ->info("Streamout Version : {}", streamout_version.to_string());
log() ->info("Using InterfaceReader {} version {}", m_Source.getName(),
00073
00074
            m_Source.getVersion().to_string());
                      log()->info("Using InterfaceWriter {} version {}", m_Destination.getName(),
            m_Destination.getVersion().to_string());
00076
 00077
                      if(!m_Destination.checkCompatibility(m_Source.getName(), m_Source.getVersion().to_string()))
 00078
                         log()->critical("{} version {} is not compatible with {} version {} ! ", m_Source.getName(),
00079
            00080
                          for(std::map<std::string, std::string>::iterator it = m_Destination.getCompatibility().begin();
00081
             it != m_Destination.getCompatibility().end(); ++it) { log()->info("{} version {}", it->first, log()->info("{} version {}", it->first, log()->info("{} version {}", it->first, log()->info("{} version {} versio
             it->second); }
00082
                        std::exit(-1);
 00083
 00084
                      if(!m_DetectorIDs.empty())
 00085
 00086
                          std::string ids;
00087
                         for(std::vector<DetectorID>::const iterator it = m DetectorIDs.cbeqin(); it !=
             \texttt{m\_DetectorIDs.cend(); ++it)} \  \  \, \texttt{ids += std::to\_string(static\_cast < std::uint16\_t > (*it)) + ";"; \\  \  \, \texttt{m\_DetectorIDs.cend(); ++it)} \  \  \, \texttt{ids += std::to\_string(static\_cast < std::uint16\_t > (*it)) + ";"; \\  \  \, \texttt{m\_DetectorIDs.cend(); ++it)} \  \  \, \texttt{ids += std::to\_string(static\_cast < std::uint16\_t > (*it)) + ";"; \\  \  \, \texttt{m\_DetectorIDs.cend(); ++it)} \  \  \, \texttt{ids += std::to\_string(static\_cast < std::uint16\_t > (*it)) + ";"; \\  \  \, \texttt{m\_DetectorIDs.cend(); ++it)} \  \  \, \texttt{ids += std::to\_string(static\_cast < std::uint16\_t > (*it))} \  \  \, \texttt{m\_DetectorIDs.cend(); ++it)} \  \  \  \, \texttt{m\_DetectorIDs.cend(); ++it)} \  \  \, \texttt{m\_DetectorIDs.cend(); ++it
 00088
                         log()->info("Detector ID(s) other than {} will be ignored", ids);
 00089
 00090
 00091
                     RawBufferNavigator bufferNavigator;
 00092
                     Timer
                                                            timer;
 00093
                     timer.start();
 00094
                     m Source.start();
 00095
                     m_Destination.start();
 00096
                     while (m_Source.nextEvent() && m_NbrEventsToProcess >= m_NbrEvents)
 00097
 00099
                        m Source.startEvent();
 00100
                         m_Destination.startEvent();
 00102
                         m_Logger->warn("===*** Event {} ***===", m_NbrEvents);
 00104
                         while (m_Source.nextDIFbuffer())
 00105
 00106
                             const Buffer& buffer = m_Source.getBuffer();
 00107
 00108
                             bufferNavigator.setBuffer(buffer);
 00109
                             if(std::find(m_DetectorIDs.begin(), m_DetectorIDs.end(),
            static_cast<DetectorID (bufferNavigator.getDetectorID())) == m_DetectorIDs.end())</pre>
 00110
 00111
                              m_Logger->debug("Ignoring detector ID : {}", bufferNavigator.getDetectorID());
 00112
                                 continue;
                             }
 00113
 00114
 00115
                             std::int32_t idstart = bufferNavigator.getStartOfPayload();
 00116
                              if(m_Debug && idstart == -1) m_Logger->info(to_hex(buffer));
 00117
                              c.DIFStarter[idstart]++;
 00118
                             if(!bufferNavigator.validPayload())
 00119
                             {
 00120
                                m Logger->error("!bufferNavigator.validBuffer()");
 00121
                                 continue;
 00122
 00123
 00125
                             m Source.startDIF();
                             m Destination.startDTF():
 00126
 00128
                             PayloadParser d;
 00129
                              // This is really a big error so skip DIF entirely if exception occurs
 00130
 00131
                             {
00132
                                d.setBuffer(bufferNavigator.getPayload());
 00133
 00134
                             catch (const Exception& e)
```

```
{
00136
                 m_Logger->error("{}", e.what());
00137
00138
00139
               bit8_t* debug_variable_1 = buffer.end();
               bit8_t* debug_variable_1 = buret.end(),
bit8_t* debug_variable_2 = d.end();
if(debug_variable_1 != debug_variable_2) m_Logger->error("DIF BUFFER END {} {}",
00140
00141
      fmt::ptr(debug_variable_1), fmt::ptr(debug_variable_2));
001/12
               if(m_Debug) assert(debug_variable_1 == debug_variable_2);
00143
00144
               c.DIFPtrValueAtReturnedPos[d.begin()[d.getGetFramePtrReturn()]]++;
00145
               if(m_Debug) assert(d.begin()[d.getGetFramePtrReturn()] == 0xa0);
00146
               c.SizeAfterDIFPtr[d.getSizeAfterDIFPtr()]++;
00147
               m_Destination.processDIF(d);
00148
                for(std::size_t i = 0; i < d.getNumberOfFrames(); ++i)</pre>
00149
00151
                 m Source.startFrame();
00152
                 m Destination.startFrame();
00154
                 m_Destination.processFrame(d, i);
00155
                  for(std::size_t j = 0; j < DU::NUMBER_PAD; ++j)</pre>
00156
00157
                    if(d.getThresholdStatus(i, j) != 0)
00158
                    {
00159
                     m Source.startPad();
00160
                      m_Destination.startPad();
00161
                      m_Destination.processPadInFrame(d, i, j);
00162
                      m_Source.endPad();
00163
                      m_Destination.endPad();
00164
                   }
00165
                 }
00167
                 m Source.endFrame();
00168
                 m Destination.endFrame();
00170
00171
               // If I want SlowControl I need to check for it first, If there is an error then it's not a
      big deal just continue and say is bad SlowControl
00172
               try
00173
               {
00174
                 d.setSCBuffer();
00175
00176
               catch(const Exception& e)
00177
               {
                 m_Logger->error("{}", e.what());
00178
00179
00180
               bool processSC = false;
00181
               if(d.hasSlowControlData())
00182
00183
                 c.hasSlowControl++;
00184
                 processSC = true;
00185
00186
               if(d.badSCData())
00187
               {
00188
                 c.hasBadSlowControl++;
00189
                 processSC = false;
00190
               if(processSC) { m_Destination.processSlowControl(d.getSCBuffer()); }
00191
00192
               Buffer eod = d.getEndOfAllData();
               c.SizeAfterAllData[eod.size()]++;
00194
00195
               bit8_t* debug_variable_3 = eod.end();
00196
               if(debug_variable_1 != debug_variable_3) m_Logger->info("END DATA BUFFER END {} {}",
      fmt::ptr(debug_variable_1), fmt::ptr(debug_variable_3));
    if(m_Debug) assert(debug_variable_1 == debug_variable_3);
00197
00198
               if(eod.size() != 0) m_Logger->info("End of Data remaining stuff : {}", to_hex(eod));
00199
00200
               int nonzeroCount = 0;
               for(bit8_t* it = eod.begin(); it != eod.end(); it++)
  if(static_cast<int>(*it) != 0) nonzeroCount++;
c.NonZeroValusAtEndOfData[nonzeroCount]++;
00201
00202
00203
00205
               m_Source.endDIF();
00206
               m_Destination.endDIF();
00208
                // end of DIF while loop
00209
             m_Logger->warn("===*** Event {} ***===", m_NbrEvents);
00210
             m_NbrEvents++;
00212
             m Source.endEvent();
00213
             m Destination.endEvent();
00215
           } // end of event while loop
00216
           m_Destination.end();
00217
           m_Source.end();
00218
           timer.stop();
           fmt::print(fg(fmt::color::green) | fmt::emphasis::bold, "=== elapsed time {}ms ({}ms/event)
00219
       ===\n", timer.getElapsedTime() / 1000, timer.getElapsedTime() / (1000 * m_NbrEvents));
00220
```

The documentation for this class was generated from the following file:

• libs/core/include/BufferLooper.h

## 4.3 BufferLooperCounter Struct Reference

#include <libs/core/include/BufferLooperCounter.h>

#### **Public Member Functions**

- void printCounter (const std::string &description, const std::map< int, int > &m)
- void printAllCounters ()

## **Public Attributes**

- int hasSlowControl = 0
- int hasBadSlowControl = 0
- std::map< int, int > DIFStarter
- std::map< int, int > DIFPtrValueAtReturnedPos
- std::map< int, int > SizeAfterDIFPtr
- std::map< int, int > SizeAfterAllData
- $\bullet \ \, std::map{<} \ \, int, int {>} \ \, NonZeroValusAtEndOfData$

## 4.3.1 Detailed Description

Definition at line 11 of file BufferLooperCounter.h.

## 4.3.2 Member Function Documentation

#### 4.3.2.1 printAllCounters() void BufferLooperCounter::printAllCounters ( )

Definition at line 10 of file BufferLooperCounter.cc.

```
00011 {
00012    fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, "BUFFER LOOP FINAL STATISTICS : \n");
00013    printCounter("Start of DIF header", DIFStarter);
00014    printCounter("Value after DIF data are processed", DIFPtrValueAtReturnedPos);
00015    printCounter("Size remaining in buffer after end of DIF data", SizeAfterDIFPtr);
00016    fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, "Number of Slow Control found {} out of
        which {} are bad\n", hasSlowControl, hasBadSlowControl);
00017    printCounter("Size remaining after all of data have been processed", SizeAfterAllData);
00018    printCounter("Number on non zero values in end of data buffer", NonZeroValusAtEndOfData);
00019 }
```

Definition at line 21 of file BufferLooperCounter.cc.

```
00022 {
        std::string out{"statistics for " + description + " : \n"};
00023
00024
       for(std::map<int, int>::const_iterator it = m.begin(); it != m.end(); it++)
00025
00026
          if(it != m.begin()) out += ",";
00027
        out += " [" + std::to_string(it->first) + "]=" + std::to_string(it->second);
00028
       out += "\n";
00029
       fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, out);
00030
00031 }
```

#### 4.3.3 Member Data Documentation

**4.3.3.1 DIFPtrValueAtReturnedPos** std::map<int, int> BufferLooperCounter::DIFPtrValueAt↔ ReturnedPos

Definition at line 17 of file BufferLooperCounter.h.

**4.3.3.2 DIFStarter** std::map<int, int> BufferLooperCounter::DIFStarter

Definition at line 16 of file BufferLooperCounter.h.

**4.3.3.3 hasBadSlowControl** int BufferLooperCounter::hasBadSlowControl = 0

Definition at line 15 of file BufferLooperCounter.h.

4.4 DIF Class Reference 13

4.3.3.4 hasSlowControl int BufferLooperCounter::hasSlowControl = 0

Definition at line 14 of file BufferLooperCounter.h.

**4.3.3.5 NonZeroValusAtEndOfData** std::map<int, int> BufferLooperCounter::NonZeroValusAtEnd↔ OfData

Definition at line 20 of file BufferLooperCounter.h.

4.3.3.6 SizeAfterAllData std::map<int, int> BufferLooperCounter::SizeAfterAllData

Definition at line 19 of file BufferLooperCounter.h.

4.3.3.7 SizeAfterDIFPtr std::map<int, int> BufferLooperCounter::SizeAfterDIFPtr

Definition at line 18 of file BufferLooperCounter.h.

The documentation for this struct was generated from the following files:

- libs/core/include/BufferLooperCounter.h
- libs/core/src/BufferLooperCounter.cc

## 4.4 DIF Class Reference

#include <libs/interface/ROOT/include/DIF.h>

Inheritance diagram for DIF:



#### **Public Member Functions**

- void clear ()
- void addHit (const Hit &)
- void setID (const std::uint8\_t &)
- std::uint8\_t getID () const
- void setDTC (const std::uint32\_t &)
- std::uint32\_t getDTC () const
- void setGTC (const std::uint32\_t &)
- std::uint32\_t getGTC () const
- void setDIFBCID (const std::uint32\_t &)
- std::uint32\_t getDIFBCID () const
- void setAbsoluteBCID (const std::uint64\_t &)
- std::uint64 t getAbsoluteBCID () const
- std::vector< Hit >::const\_iterator cbegin () const
- std::vector< Hit >::const\_iterator cend () const

## 4.4.1 Detailed Description

Definition at line 16 of file DIF.h.

## 4.4.2 Member Function Documentation

```
4.4.2.1 addHit() void DIF::addHit (
               const Hit & hit )
Definition at line 10 of file DIF.cc.
00010 { m_Hits.push_back(hit); }
4.4.2.2 cbegin() std::vector< Hit >::const_iterator DIF::cbegin ( ) const
Definition at line 32 of file DIF.cc. 00032 { return m_Hits.cbegin(); }
4.4.2.3 cend() std::vector< Hit >::const_iterator DIF::cend ( ) const
Definition at line 34 of file DIF.cc.
00034 { return m_Hits.cend(); }
4.4.2.4 clear() void DIF::clear ()
Definition at line 36 of file DIF.cc.
00036 { m_Hits.clear(); }
4.4.2.5 getAbsoluteBCID() std::uint64_t DIF::getAbsoluteBCID ( ) const
Definition at line 30 of file DIF.cc.
00030 { return m_AbsoluteBCID; }
4.4.2.6 getDIFBCID() std::uint32_t DIF::getDIFBCID ( ) const
Definition at line 26 of file DIF.cc.
00026 { return m_DIFBCID; }
```

4.4 DIF Class Reference 15

```
4.4.2.7 getDTC() std::uint32_t DIF::getDTC ( ) const
Definition at line 18 of file DIF.cc.
00018 { return m_DTC; }
4.4.2.8 getGTC() std::uint32_t DIF::getGTC ( ) const
Definition at line 22 of file DIF.cc.
00022 { return m_GTC; }
\textbf{4.4.2.9} \quad \textbf{getID()} \quad \texttt{std::uint8\_t DIF::getID ()} \quad \texttt{const}
Definition at line 14 of file DIF.cc.
00014 { return m_ID; }
4.4.2.10 setAbsoluteBCID() void DIF::setAbsoluteBCID (
               const std::uint64_t & absolutebcid )
Definition at line 28 of file DIF.cc.
00028 { m_AbsoluteBCID = absolutebcid; }
4.4.2.11 setDIFBCID() void DIF::setDIFBCID (
               const std::uint32_t & difbcid )
Definition at line 24 of file DIF.cc.
00024 { m_DIFBCID = difbcid; }
4.4.2.12 setDTC() void DIF::setDTC (
               const std::uint32_t & dtc )
Definition at line 16 of file DIF.cc.
00016 { m_DTC = dtc; }
4.4.2.13 setGTC() void DIF::setGTC (
               const std::uint32_t & gtc )
Definition at line 20 of file DIF.cc.
00020 { m_GTC = gtc; }
```

The documentation for this class was generated from the following files:

- libs/interface/ROOT/include/DIF.h
- libs/interface/ROOT/src/DIF.cc

## 4.5 DIFPtr Class Reference

M3 MICROROC and HARDROC2 dataformat.

```
#include <libs/core/include/PayloadParser.h>
```

## 4.5.1 Detailed Description

M3 MICROROC and HARDROC2 dataformat.

Data from the DAQ (once at the beginning of the file):

```
(1 fois par fichier) [Données venant de la DAQ]
data format version (8 bits)
daq software version (16 bits)
SDCC firmware version (16 bits)
DIF firmware version (16 bits)
timestamp (32bits) (secondes depuis le 01/01/1970) (3 timestamp (32bits) (milliseconde)
```

## Explication:

- data format version = la version du format de données utilisée, c'est la version 13
- daq software version = la version du soft d'acquisition labview ou Xdaq
- SDCC firmware version = la version du code VHDL de la carte SDCC
- DIF firmware version = la version du code VHDL de la carte DIF
- timestamp = secondes et milliseconde depuis le 01/01/1970

Figure 1 Data from the DAQ (once at the beginning of the file)

Data from the DIF analog or/and digital (loop):



Figure 2 Data from the DIF analog or/and digital

Data from the DAQ (slowcontrol):

```
(1 fois par slow control, c'est à dire 1 fois par fichier par DIF) [Données venant de la DAQ]

SC Header (0xB1)

DIF ID (8 bits)

ASIC Header (8 bits)

Size SC ASIC [74 ou 109 selon le chip]

DIF ID (8 bits)

ASIC Header (8 bits)

ASIC Header (8 bits)

Size SC ASIC [74 ou 109 selon le chip]

SC ASIC (n x 8bits)

Size SC ASIC [74 ou 109 selon le chip]

SC ASIC (n x 8bits)

In= 74 ou 109 selon le chip]

SC Trailer (0xA1)
```

## Explication:

- SC Header (0xB1) / SC Trailer (0xA1) = balise pour repérer les infos sur le Slow Control
- DIF ID = identité de la DIF qui envoient les data
- Size SC ASIC = taille de la trame SC d'un CHIP (MR=74 byte, HR = 109 byte)
- ASIC header (8 bits) : header dans le SC
- SC ASIC (n x 8bits) : de 1 a 48 par DIF moins ceux qui sont bypassés

Figure 3 Data from the DAQ (slowcontrol)

The documentation for this class was generated from the following file:

libs/core/include/PayloadParser.h

## 4.6 DIFSlowControl Class Reference

```
#include <libs/core/include/DIFSlowControl.h>
```

## **Public Member Functions**

- DIFSlowControl (const std::uint8\_t &version, const std::uint8\_t &DIFid, unsigned char \*buf)
- Constructor.
   std::uint8\_t getDIFId ()

get DIF id

std::map< int, std::map< std::string, int > > getChipsMap ()

Get chips map.

std::map< std::string, int > getChipSlowControl (const int &asicid)

Get one chip map.

• int getChipSlowControl (const std::int8\_t &asicid, const std::string &param)

Get one Chip value.

- $std::map < int, std::map < std::string, int > >::const_iterator cbegin () const$
- std::map< int, std::map< std::string, int > >::const\_iterator cend () const

## 4.6.1 Detailed Description

Definition at line 13 of file DIFSlowControl.h.

## 4.6.2 Constructor & Destructor Documentation

Constructor.

#### **Parameters**

version	Data format version
DIFid	DIF id
buf	Pointer to the Raw data buffer

#### Definition at line 7 of file DIFSlowControl.cc.

```
m_Version(version), m_DIFId(DIfId), m_AsicType(2)
80000
00009
        if(cbuf[0] != 0xb1) return;
00010
        int header_shift{6};
        if (m_Version < 8) m_NbrAsic = cbuf[5];</pre>
00011
00012
        else
00013
        m_DIFId
00014
                      = cbuf[1];
00015
         m_NbrAsic
                      = cbuf[2];
         header_shift = 3;
00016
00017
00018
       int size_hardroc1 = m_NbrAsic * 72 + header_shift + 1;
00019
       if(cbuf[size_hardroc1 - 1] != 0xa1) size_hardroc1 = 0;
00020
00021
       int size_hardroc2 = m_NbrAsic * 109 + header_shift + 1;
        if(cbuf[size_hardroc2 - 1] != 0xa1) size_hardroc2 = 0;
00022
       if(size_hardroc1 != 0)
00023
00024
00025
         FillHR1(header_shift, cbuf);
00026
         m_AsicType = 1;
00027
00028
       else if(size_hardroc2 != 0)
         FillHR2(header_shift, cbuf);
00029
00030
       else
00031
         return;
00032 }
```

## 4.6.3 Member Function Documentation

```
4.6.3.1 cbegin() std::map< int, std::map< std::string, int > > ::const_iterator DIFSlow\leftarrow Control::cbegin () const [inline]
```

## Definition at line 47 of file DIFSlowControl.h.

```
00047 { return m_MapSC.cbegin(); }
```

```
4.6.3.2 cend() std::map< int, std::map< std::string, int > >::const_iterator DIFSlowControl \leftarrow ::cend ( ) const [inline]
```

Definition at line 49 of file DIFSlowControl.h.

```
00049 { return m_MapSC.cend(); }
```

Get one chip map.

#### **Parameters**

```
asicid ASIC ID
```

#### Returns

a map of <string (parameter name), int (parameter value) >

Definition at line 38 of file DIFSlowControl.cc.

```
00038 { return m_MapSC[asicid]; }
```

# **4.6.3.4 getChipSlowControl()** [2/2] int DIFSlowControl::getChipSlowControl ( const std::int8\_t & asicid, const std::string & param ) [inline]

Get one Chip value.

#### **Parameters**

asicid	ASic ID
param	Parameter name

Definition at line 40 of file DIFSlowControl.cc.

```
00040 { return getChipSlowControl(asicid)[param]; }
```

```
4.6.3.5 getChipsMap() std::map< int, std::map< std::string, int >> DIFSlowControl::get\leftarrow ChipsMap ( ) [inline]
```

Get chips map.

Returns

a map of < Asic Id, map of < string (parameter name), int (parameter value) >

Definition at line 36 of file DIFSlowControl.cc.

```
00036 { return m_MapSC; }
```

```
4.6.3.6 getDIFId() std::uint8_t DIFSlowControl::getDIFId ( ) [inline]
get DIF id

Definition at line 34 of file DIFSlowControl.cc.
00034 { return m_DIFId; }
```

The documentation for this class was generated from the following files:

- libs/core/include/DIFSlowControl.h
- libs/core/src/DIFSlowControl.cc

## 4.7 Event Class Reference

```
#include <libs/interface/ROOT/include/Event.h>
```

Inheritance diagram for Event:



## **Public Member Functions**

- void clear ()
- void addDIF (const DIF &dif)
- std::map< std::uint8\_t, DIF >::const\_iterator cbegin () const
- std::map< std::uint8\_t, DIF >::const\_iterator cend () const

## 4.7.1 Detailed Description

Definition at line 15 of file Event.h.

## 4.7.2 Member Function Documentation

```
4.7.2.2 cbegin() std::map< std::uint8_t, DIF >::const_iterator Event::cbegin ( ) const

Definition at line 12 of file Event.cc.
00012 { return DIFs.cbegin(); }

4.7.2.3 cend() std::map< std::uint8_t, DIF >::const_iterator Event::cend ( ) const

Definition at line 14 of file Event.cc.
00014 { return DIFs.cend(); }

4.7.2.4 clear() void Event::clear ( )

Definition at line 8 of file Event.cc.
00008 { DIFs.clear(); }
```

The documentation for this class was generated from the following files:

- libs/interface/ROOT/include/Event.h
- libs/interface/ROOT/src/Event.cc

## 4.8 Exception Class Reference

#include <libs/core/include/Exception.h>

## **Public Member Functions**

- virtual const char \* what () const noexcept
- Exception (const std::string &message)
- Exception (const std::int32\_t &error, const std::string &message)
- std::int32\_t error ()
- std::string message ()

## 4.8.1 Detailed Description

Definition at line 11 of file Exception.h.

## 4.8.2 Constructor & Destructor Documentation

4.9 Hit Class Reference 23

#### 4.8.3 Member Function Documentation

```
4.8.3.1 error() std::int32_t Exception::error ( ) [inline]

Definition at line 17 of file Exception.h.
00017 { return m_Error; }

4.8.3.2 message() std::string Exception::message ( ) [inline]

Definition at line 18 of file Exception.h.
00018 { return m_Message; }
```

4.8.3.3 what() virtual const char \* Exception::what ( ) const [inline], [virtual], [noexcept]

Definition at line 14 of file Exception.h.
00014 { return m\_What.c\_str(); }

The documentation for this class was generated from the following file:

• libs/core/include/Exception.h

## 4.9 Hit Class Reference

#include <libs/interface/ROOT/include/Hit.h>

Inheritance diagram for Hit:



## **Public Member Functions**

- void clear ()
- void setDIF (const std::uint8\_t &)
- void setASIC (const std::uint8\_t &)
- void setChannel (const std::uint8\_t &)
- void setThreshold (const std::uint8 t &)
- void setDTC (const std::uint32\_t &)
- void setGTC (const std::uint32\_t &)
- void setDIFBCID (const std::uint32 t &)
- void setFrameBCID (const std::uint32 t &)
- void setTimestamp (const std::uint32 t &)
- void setAbsoluteBCID (const std::uint64\_t &)
- std::uint8\_t getDIFid () const
- std::uint8\_t getASICid () const
- std::uint8\_t getChannel () const
- std::uint8 t getThreshold () const
- std::uint32\_t getDTC () const
- std::uint32\_t getGTC () const
- std::uint32\_t getDIFBCID () const
- std::uint32\_t getFrameBCID () const
- std::uint32\_t getTimestamp () const
- std::uint64\_t getAbsoluteBCID () const

## 4.9.1 Detailed Description

Definition at line 10 of file Hit.h.

## 4.9.2 Member Function Documentation

#### **4.9.2.1 clear()** void Hit::clear ()

## Definition at line 7 of file Hit.cc.

```
00008 {
00009
        m_DIF
00010
        m_ASIC
00011
        m_Channel
                        = 0;
00012
        m\_Threshold
                        = 0;
00013
        m_DTC
                        = 0;
       m_GTC
00014
                        = 0;
00015
                        = 0;
        m_DIFBCID
00016
       m_FrameBCID
                        = 0;
00017
        m\_Timestamp
        m_AbsoluteBCID = 0;
00018
00019 }
```

## 4.9.2.2 getAbsoluteBCID() std::uint64\_t Hit::getAbsoluteBCID ( ) const

```
Definition at line 59 of file Hit.cc.
00059 { return m_AbsoluteBCID; }
```

4.9 Hit Class Reference 25

```
4.9.2.3 getASICid() std::uint8_t Hit::getASICid ( ) const
Definition at line 43 of file Hit.cc.
00043 { return m_ASIC; }
\textbf{4.9.2.4} \quad \textbf{getChannel()} \quad \texttt{std::uint8\_t Hit::getChannel ( ) const}
Definition at line 45 of file Hit.cc.
00045 { return m_Channel; }
4.9.2.5 getDIFBCID() std::uint32_t Hit::getDIFBCID ( ) const
Definition at line 53 of file Hit.cc.
00053 { return m_DIFBCID; }
4.9.2.6 getDIFid() std::uint8_t Hit::getDIFid ( ) const
Definition at line 41 of file Hit.cc.
00041 { return m_DIF; }
4.9.2.7 getDTC() std::uint32_t Hit::getDTC ( ) const
Definition at line 49 of file Hit.cc.
00049 { return m_DTC; }
4.9.2.8 getFrameBCID() std::uint32_t Hit::getFrameBCID ( ) const
Definition at line 55 of file Hit.cc.
00055 { return m_FrameBCID; }
4.9.2.9 getGTC() std::uint32_t Hit::getGTC ( ) const
Definition at line 51 of file Hit.cc.
00051 { return m_GTC; }
```

```
4.9.2.10 getThreshold() std::uint8_t Hit::getThreshold ( ) const
Definition at line 47 of file Hit.cc.
00047 { return m_Threshold; }
4.9.2.11 getTimestamp() std::uint32_t Hit::getTimestamp ( ) const
Definition at line 57 of file Hit.cc.
00057 { return m_Timestamp; }
4.9.2.12 setAbsoluteBCID() void Hit::setAbsoluteBCID (
               const std::uint64_t & absolutebcid )
Definition at line 39 of file Hit.cc.
00039 { m_AbsoluteBCID = absolutebcid; }
4.9.2.13 setASIC() void Hit::setASIC (
               const std::uint8_t & asic )
Definition at line 23 of file Hit.cc.
00023 { m_ASIC = asic; }
4.9.2.14 setChannel() void Hit::setChannel (
               const std::uint8_t & channel )
Definition at line 25 of file Hit.cc.
00025 { m_Channel = channel; }
4.9.2.15 setDIF() void Hit::setDIF (
               const std::uint8_t & dif )
Definition at line 21 of file Hit.cc.
00021 { m_DIF = dif; }
\textbf{4.9.2.16} \quad \textbf{setDIFBCID()} \quad \texttt{void Hit::setDIFBCID} \ \ \textbf{(}
               const std::uint32_t & difbcid )
Definition at line 33 of file Hit.cc.
00033 { m_DIFBCID = difbcid; }
```

```
4.9.2.17 setDTC() void Hit::setDTC (
              const std::uint32_t & dtc )
Definition at line 29 of file Hit.cc.
00029 { m_DTC = dtc; }
4.9.2.18 setFrameBCID() void Hit::setFrameBCID (
              const std::uint32_t & framebcid )
Definition at line 35 of file Hit.cc.
00035 { m_FrameBCID = framebcid; }
4.9.2.19 setGTC() void Hit::setGTC (
              const std::uint32_t & gtc )
Definition at line 31 of file Hit.cc.
00031 { m_GTC = gtc; }
4.9.2.20 setThreshold() void Hit::setThreshold (
              const std::uint8_t & threshold )
Definition at line 27 of file Hit.cc.
00027 { m_Threshold = threshold; }
4.9.2.21 setTimestamp() void Hit::setTimestamp (
              const std::uint32_t & timestamp )
Definition at line 37 of file Hit.cc.
00037 { m_Timestamp = timestamp; }
```


The documentation for this class was generated from the following files:

- libs/interface/ROOT/include/Hit.h
- libs/interface/ROOT/src/Hit.cc

## 4.10 Interface Class Reference

#include <libs/core/include/Interface.h>

Inheritance diagram for Interface:

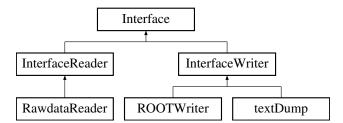

## **Public Member Functions**

- Interface (const std::string &name, const std::string &version, const InterfaceType &type)
- virtual  $\sim$ Interface ()=default
- virtual void startEvent ()
- virtual void endEvent ()
- virtual void startDIF ()
- virtual void endDIF ()
- virtual void startFrame ()
- virtual void endFrame ()
- virtual void startPad ()
- virtual void endPad ()
- std::shared\_ptr< spdlog::logger > & log ()
- void setLogger (const std::shared\_ptr< spdlog::logger > &logger)
- std::string getName ()
- Version getVersion ()

## 4.10.1 Detailed Description

Definition at line 38 of file Interface.h.

## 4.10.2 Constructor & Destructor Documentation

Definition at line 41 of file Interface.h.

```
00041 : m_Name(name), m_Version(version) {}
```

```
4.10.2.2 \simInterface() virtual Interface::\simInterface ( ) [virtual], [default]
```

## 4.10.3 Member Function Documentation

```
4.10.3.1 endDIF() virtual void Interface::endDIF ( ) [inline], [virtual]
```

Reimplemented in ROOTWriter.

```
Definition at line 46 of file Interface.h. 00046 {}
```

```
4.10.3.2 endEvent() virtual void Interface::endEvent ( ) [inline], [virtual]
Reimplemented in ROOTWriter.
Definition at line 44 of file Interface.h.
00044 {}
4.10.3.3 endFrame() virtual void Interface::endFrame ( ) [inline], [virtual]
Reimplemented in ROOTWriter.
Definition at line 48 of file Interface.h.
00048 {}
4.10.3.4 endPad() virtual void Interface::endPad ( ) [inline], [virtual]
Reimplemented in ROOTWriter.
Definition at line 50 of file Interface.h.
00050 {}
4.10.3.5 getName() std::string Interface::getName ( ) [inline]
Definition at line 53 of file Interface.h.
00053 { return m_Name; }
4.10.3.6 getVersion() Version Interface::getVersion ( ) [inline]
Definition at line 54 of file Interface.h.
00054 { return m_Version; }
4.10.3.7 log() std::shared_ptr< spdlog::logger > & Interface::log ( ) [inline]
Definition at line 51 of file Interface.h.
00051 { return m_Logger; }
4.10.3.8 setLogger() void Interface::setLogger (
              const std::shared_ptr< spdlog::logger > & logger ) [inline]
Definition at line 52 of file Interface.h.
00052 { m_Logger = logger; }
```

```
4.10.3.9 startDIF() virtual void Interface::startDIF ( ) [inline], [virtual]
Reimplemented in ROOTWriter.
Definition at line 45 of file Interface.h.
00045 {}
4.10.3.10 startEvent() virtual void Interface::startEvent ( ) [inline], [virtual]
Reimplemented in ROOTWriter.
Definition at line 43 of file Interface.h.
4.10.3.11 startFrame() virtual void Interface::startFrame() [inline], [virtual]
Reimplemented in ROOTWriter.
Definition at line 47 of file Interface.h.
00047 {}
4.10.3.12 startPad() virtual void Interface::startPad ( ) [inline], [virtual]
Reimplemented in ROOTWriter.
Definition at line 49 of file Interface.h.
00049 {}
```


The documentation for this class was generated from the following file:

• libs/core/include/Interface.h

## 4.11 InterfaceReader Class Reference

#include <libs/core/include/Interface.h>

Inheritance diagram for InterfaceReader:

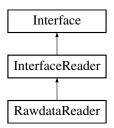

### **Public Member Functions**

- InterfaceReader (const std::string &name, const std::string &version)
- virtual ∼InterfaceReader ()=default

## **Protected Attributes**

• Buffer m\_Buffer

## 4.11.1 Detailed Description

Definition at line 63 of file Interface.h.

#### 4.11.2 Constructor & Destructor Documentation

```
4.11.2.1 InterfaceReader() InterfaceReader::InterfaceReader ( const std::string & name, const std::string & version ) [inline]
```

## Definition at line 66 of file Interface.h.

```
00066 : Interface(name, version, InterfaceType::Reader) {}
```

```
\textbf{4.11.2.2} \quad \sim \textbf{InterfaceReader()} \quad \text{virtual InterfaceReader::} \sim \textbf{InterfaceReader ()} \quad \textbf{[virtual], [default]}
```

## 4.11.3 Member Data Documentation

```
4.11.3.1 m_Buffer Buffer InterfaceReader::m_Buffer [protected]
```

Definition at line 70 of file Interface.h.


The documentation for this class was generated from the following file:

• libs/core/include/Interface.h

## 4.12 InterfaceWriter Class Reference

#include <libs/core/include/Interface.h>

Inheritance diagram for InterfaceWriter:

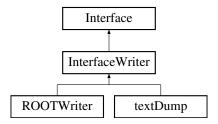

### **Public Member Functions**

- InterfaceWriter (const std::string &name, const std::string &version)
- void addCompatibility (const std::string &name, const std::string &version)
- std::map< std::string, std::string > getCompatibility ()
- bool checkCompatibility (const std::string &name, const std::string &version)
- virtual ∼InterfaceWriter ()=default

## 4.12.1 Detailed Description

Definition at line 73 of file Interface.h.

## 4.12.2 Constructor & Destructor Documentation

```
4.12.2.1 InterfaceWriter() InterfaceWriter::InterfaceWriter (
             const std::string & name,
             const std::string & version ) [inline]
```

## Definition at line 76 of file Interface.h.

```
00076 : Interface(name, version, InterfaceType::Writer) {}
```

 $\textbf{4.12.2.2} \quad \sim \textbf{InterfaceWriter()} \quad \text{virtual InterfaceWriter::} \sim \textbf{InterfaceWriter ()} \quad \text{[virtual], [default]}$ 

## 4.12.3 Member Function Documentation

```
4.12.3.2 checkCompatibility() bool InterfaceWriter::checkCompatibility ( const std::string & name, const std::string & version ) [inline]
```

Definition at line 82 of file Interface.h.

```
00083
00084
       if(m_Compatible.find(name) != m_Compatible.end())
00085
        00086
00087
00088
         if(ran.satisfies(ver, false)) return true;
00089
          return false;
00090
00091
00092
      else
00093
        return false;
00094 }
```

```
4.12.3.3 getCompatibility() std::map< std::string, std::string > InterfaceWriter::getCompatibility
( ) [inline]
```

```
Definition at line 80 of file Interface.h. 00080 { return m_Compatible; }
```


The documentation for this class was generated from the following file:

• libs/core/include/Interface.h

# 4.13 PayloadParser Class Reference

#include <libs/core/include/PayloadParser.h>

Inheritance diagram for PayloadParser:

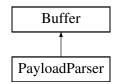

#### **Public Member Functions**

- PayloadParser ()=default
- void setBuffer (const Buffer &buffer)
- std::uint32 t getSizeAfterDIFPtr ()
- bool hasSlowControlData ()
- std::uint32\_t getEndOfDIFData ()
- bool badSCData ()
- std::uint32\_t getGetFramePtrReturn () const
- std::vector< bit8 t \* > & getFramesVector ()
- std::vector< bit8\_t \*> & getLinesVector ()
- std::uint32\_t getID () const
- std::uint32\_t getDTC () const
- std::uint32\_t getGTC () const
- std::uint64\_t getAbsoluteBCID () const
- std::uint32 t getBCID () const
- · std::uint32\_t getLines () const
- bool hasLine (const std::uint32\_t &) const
- std::uint32\_t getTASU1 () const
- std::uint32 t getTASU2 () const
- std::uint32\_t getTDIF () const
- float getTemperatureDIF () const
- float getTemperatureASU1 () const
- float getTemperatureASU2 () const
- bool hasTemperature () const
- bool hasAnalogReadout () const
- std::uint32\_t getNumberOfFrames () const
- bit8\_t \* getFramePtr (const std::uint32\_t &) const
- std::uint32\_t getFrameAsicHeader (const std::uint32\_t &) const
- std::uint32\_t getFrameBCID (const std::uint32\_t &) const
- std::uint32\_t getFrameTimeToTrigger (const std::uint32\_t &) const
- bool getFrameLevel (const std::uint32\_t &, const std::uint32\_t &, const std::uint32\_t &) const
- · std::uint32\_t getDIFid () const
- std::uint32\_t getASICid (const std::uint32\_t &) const
- std::uint32\_t getThresholdStatus (const std::uint32\_t &, const std::uint32\_t &) const
- Buffer getSCBuffer ()
- Buffer getEndOfAllData ()
- std::uint32\_t getDIF\_CRC ()
- void setSCBuffer ()

### 4.13.1 Detailed Description

Definition at line 36 of file PayloadParser.h.

### 4.13.2 Constructor & Destructor Documentation

# **4.13.2.1 PayloadParser()** PayloadParser::PayloadParser () [default]

### 4.13.3 Member Function Documentation

```
4.13.3.1 badSCData() bool PayloadParser::badSCData ( ) [inline]
```

```
Definition at line 55 of file PayloadParser.h.
```

```
00057 setSCBuffer();
00058 return m_BadSCdata;
00059 }
```

### 4.13.3.2 getAbsoluteBCID() std::uint64\_t PayloadParser::getAbsoluteBCID ( ) const [inline]

```
Definition at line 167 of file PayloadParser.h.
```

```
4.13.3.3 getASICid() uint32_t PayloadParser::getASICid ( const std::uint32_t & i ) const [inline]
```

# Definition at line 213 of file PayloadParser.h.

```
00213 { return getFrameAsicHeader(i) & 0xFF; }
```

```
4.13.3.4 getBCID() std::uint32_t PayloadParser::getBCID ( ) const [inline]
```

```
Definition at line 174 of file PayloadParser.h.
```

```
00174 { return (begin()[DU::BCID_SHIFT] « 16) + (begin()[DU::BCID_SHIFT + 1] « 8) + begin()[DU::BCID_SHIFT + 2]; }
```

# 4.13.3.5 getDIF\_CRC() std::uint32\_t PayloadParser::getDIF\_CRC ( ) [inline]

## Definition at line 101 of file PayloadParser.h.

```
00102 {
00103          uint32_t i{getEndOfDIFData()};
00104          uint32_t ret{0};
00105          ret |= ((begin()[i - 2]) « 8);
00106          ret |= begin()[i - 1];
00107          return ret;
00108 }
```

```
4.13.3.6 getDIFid() uint32_t PayloadParser::getDIFid ( ) const [inline]
Definition at line 211 of file PayloadParser.h.
00211 { return getID() & 0xFF; }
4.13.3.7 getDTC() std::uint32_t PayloadParser::getDTC ( ) const [inline]
Definition at line 163 of file PayloadParser.h.
00163 { return (begin() [DU::DTC_SHIFT] « 24) + (begin() [DU::DTC_SHIFT + 1] « 16) + (begin() [DU::DTC_SHIFT + 2] « 8) + begin() [DU::DTC_SHIFT + 3]; }
4.13.3.8 getEndOfAllData() Buffer PayloadParser::getEndOfAllData ( ) [inline]
Definition at line 94 of file PayloadParser.h.
00095
          setSCBuffer();
00097
          if(hasSlowControlData() && !m_BadSCdata) { return Buffer(&(m_SCbuffer.begin()[m_SCbuffer.size()]),
      getSizeAfterDIFPtr() - 3 - m_SCbuffer.size()); }
00098
           return Buffer(&(begin()[getEndOfDIFData()]), getSizeAfterDIFPtr() - 3); // remove the 2 bytes
00099
      for CRC and the DIF trailer
00100
4.13.3.9 getEndOfDIFData() std::uint32_t PayloadParser::getEndOfDIFData ( ) [inline]
Definition at line 53 of file PayloadParser.h.
00053 { return getGetFramePtrReturn() + 3; }
4.13.3.10 getFrameAsicHeader() std::uint32_t PayloadParser::getFrameAsicHeader (
              const std::uint32_t & i ) const [inline]
Definition at line 200 of file PayloadParser.h.
00200 { return getFrameAsicHeaderInternal(theFrames_[i]); }
4.13.3.11 getFrameBCID() std::uint32_t PayloadParser::getFrameBCID (
              const std::uint32_t & i ) const [inline]
Definition at line 202 of file PayloadParser.h.
00202 { return GrayToBin((theFrames_[i][DU::FRAME_BCID_SHIFT] « 16) + (theFrames_[i][DU::FRAME_BCID_SHIFT +
      1] « 8) + theFrames_[i][DU::FRAME_BCID_SHIFT + 2]); }
```

```
4.13.3.12 getFrameLevel() bool PayloadParser::getFrameLevel (
               const std::uint32_t & i,
               const std::uint32_t & ipad,
               const std::uint32_t & ilevel ) const [inline]
Definition at line 206 of file PayloadParser.h.
00207 {
      return ((theFrames_[i][DU::FRAME_DATA_SHIFT + ((3 - ipad / 16) * 4 + (ipad % 16) / 4)] » (7 -
(((ipad % 16) % 4) * 2 + ilevel))) & 0x1);
00208
00209 }
4.13.3.13 getFramePtr() bit8_t * PayloadParser::getFramePtr (
               const std::uint32_t & i ) const [inline]
Definition at line 198 of file PayloadParser.h.
00198 { return theFrames_[i]; }
4.13.3.14 getFramesVector() std::vector< bit8_t * > & PayloadParser::getFramesVector ( ) [inline]
Definition at line 157 of file PayloadParser.h.
00157 { return theFrames_; }
4.13.3.15 getFrameTimeToTrigger() std::uint32_t PayloadParser::getFrameTimeToTrigger (
               const std::uint32_t & i ) const [inline]
Definition at line 204 of file PayloadParser.h.
00204 { return getBCID() - getFrameBCID(i); }
4.13.3.16 getGetFramePtrReturn() std::uint32_t PayloadParser::getGetFramePtrReturn ( ) const
[inline]
Definition at line 155 of file PayloadParser.h.
00155 { return theGetFramePtrReturn_; }
4.13.3.17 getGTC() std::uint32_t PayloadParser::getGTC ( ) const [inline]
Definition at line 165 of file PayloadParser.h.
00165 { return (begin() [DU::GTC_SHIFT] « 24) + (begin() [DU::GTC_SHIFT + 1] « 16) + (begin() [DU::GTC_SHIFT + 2] « 8) + begin() [DU::GTC_SHIFT + 3]; }
```

```
4.13.3.18 getID() std::uint32_t PayloadParser::getID ( ) const [inline]
Definition at line 161 of file PayloadParser.h.
00161 { return begin()[DU::ID_SHIFT]; }
4.13.3.19 getLines() std::uint32_t PayloadParser::getLines ( ) const [inline]
Definition at line 176 of file PayloadParser.h.
00176 { return (begin()[DU::LINES_SHIFT] » 4) & 0x5; }
\textbf{4.13.3.20} \quad \textbf{getLinesVector()} \quad \texttt{std::vector} < \quad \texttt{bit8\_t} \ * \ > \ \texttt{\&} \ \texttt{PayloadParser::getLinesVector} \ ( \ ) \quad \texttt{[inline]}
Definition at line 159 of file PayloadParser.h.
00159 { return theLines_; }
4.13.3.21 getNumberOfFrames() std::uint32_t PayloadParser::getNumberOfFrames ( ) const [inline]
Definition at line 196 of file PayloadParser.h.
00196 { return theFrames_.size(); }
4.13.3.22 getSCBuffer() Buffer PayloadParser::getSCBuffer () [inline]
Definition at line 89 of file PayloadParser.h.
00090 {
00091
           setSCBuffer();
00092
          return m_SCbuffer;
00093
4.13.3.23 getSizeAfterDIFPtr() std::uint32_t PayloadParser::getSizeAfterDIFPtr ( ) [inline]
Definition at line 50 of file PayloadParser.h.
00050 { return size() - getGetFramePtrReturn(); }
4.13.3.24 getTASU1() std::uint32_t PayloadParser::getTASU1 ( ) const [inline]
Definition at line 180 of file PayloadParser.h.
00180 { return (begin()[DU::TASU1_SHIFT] « 24) + (begin()[DU::TASU1_SHIFT + 1] « 16) + (begin()[DU::TASU1_SHIFT + 2] « 8) + begin()[DU::TASU1_SHIFT + 3]; }
```

```
4.13.3.25 getTASU2() std::uint32_t PayloadParser::getTASU2 ( ) const [inline]
Definition at line 182 of file PayloadParser.h.
4.13.3.26 getTDIF() std::uint32_t PayloadParser::getTDIF ( ) const [inline]
Definition at line 184 of file PayloadParser.h.
00184 { return begin()[DU::TDIF_SHIFT]; }
4.13.3.27 qetTemperatureASU1() float PayloadParser::qetTemperatureASU1() const [inline]
Definition at line 188 of file PayloadParser.h.
00188 { return (getTASU1() » 3) * 0.0625; }
4.13.3.28 getTemperatureASU2() float PayloadParser::getTemperatureASU2 ( ) const [inline]
Definition at line 190 of file PayloadParser.h.
00190 { return (getTASU2() » 3) * 0.0625; }
4.13.3.29 getTemperatureDIF() float PayloadParser::getTemperatureDIF ( ) const [inline]
Definition at line 186 of file PayloadParser.h.
00186 { return 0.508 * getTDIF() - 9.659; }
\textbf{4.13.3.30} \quad \textbf{getThresholdStatus()} \quad \texttt{uint32\_t PayloadParser::} \\ \texttt{getThresholdStatus} \ \ \textbf{(}
              const std::uint32_t & i,
              const std::uint32_t & ipad ) const [inline]
Definition at line 215 of file PayloadParser.h.
00215 { return (((std::uint32_t)getFrameLevel(i, ipad, 1)) « 1) | ((std::uint32_t)getFrameLevel(i, ipad,
     0)); }
4.13.3.31 hasAnalogReadout() bool PayloadParser::hasAnalogReadout ( ) const [inline]
Definition at line 194 of file PayloadParser.h.
00194 { return getLines() != 0; }
```

```
4.13.3.32 hasLine() bool PayloadParser::hasLine (
               const std::uint32_t & line ) const [inline]
Definition at line 178 of file PayloadParser.h.
00178 { return ((begin()[DU::LINES_SHIFT] » line) & 0x1); }
4.13.3.33 hasSlowControlData() bool PayloadParser::hasSlowControlData ( ) [inline]
Definition at line 51 of file PayloadParser.h.
00051 { return begin()[getEndOfDIFData()] == 0xb1; }
4.13.3.34 hasTemperature() bool PayloadParser::hasTemperature ( ) const [inline]
Definition at line 192 of file PayloadParser.h.
00192 { return (begin()[0] == DU::START_OF_DIF_TEMP); }
4.13.3.35 setBuffer() void PayloadParser::setBuffer (
               const Buffer & buffer ) [inline]
Definition at line 41 of file PayloadParser.h.
00043
          set (buffer);
00044
          theFrames_.clear();
00045
          theLines_.clear();
00046
          theGetFramePtrReturn_ = getFramePtr();
m BadSCdata = false;
00047
00048
\textbf{4.13.3.36} \quad \textbf{setSCBuffer()} \quad \texttt{void PayloadParser::setSCBuffer ()} \quad \texttt{[inline]}
Definition at line 109 of file PayloadParser.h.
00110
00111
          if(!hasSlowControlData()) return;
00112
          if(m_SCbuffer.size() != 0) return; // deja fait
00113
          if (m BadSCdata) return:
          m_SCbuffer.set(&(begin()[getEndOfDIFData()]));
00114
00115
          // compute Slow Control size
00116
          std::size_t maxsize{size() - getEndOfDIFData() + 1}; // should I +1 here ?
00117
          uint32_t
                      k{1};
                                                                    // SC Header
00118
          uint32_t
                      dif_ID{m_SCbuffer[1]};
          uint32_t chipSize{m_SCbuffer[3]};
while((dif_ID != 0xal && m_SCbuffer[k] != 0xal && k < maxsize) || (dif_ID == 0xal && m_SCbuffer[k]</pre>
00119
          uint32 t
00120
     + 2] == chipSize && k < maxsize))
00121
          {
00122
            k += 2; // DIF ID + ASIC Header
            uint32_t scsize = m_SCbuffer[k];
if(scsize != 74 && scsize != 109)
00123
00124
00125
            {
00126
00127
              m_BadSCdata = true;
00128
              throw Exception(fmt::format("PROBLEM WITH SC SIZE {}", scsize));
00129
00130
            k++;
                           // skip size bit
            k += scsize; // skip the data
00131
00132
00133
          if(m_SCbuffer[k] == 0xal && !m_BadSCdata) m_SCbuffer.setSize(k + 1); // add the trailer
00134
          else
00135
00136
            m_BadSCdata = true;
            throw Exception(fmt::format("PROBLEM SC TRAILER NOT FOUND "));
00137
00138
00139
```

The documentation for this class was generated from the following file:

libs/core/include/PayloadParser.h

## 4.14 RawBufferNavigator Class Reference

class to navigate in the raw data buffer parse the header and send the payload as Buffer

#include <libs/core/include/RawBufferNavigator.h>

#### **Public Member Functions**

- RawBufferNavigator ()
- $\sim$ RawBufferNavigator ()=default
- void setBuffer (const Buffer &)
- std::uint8 t getDetectorID ()
- bool findStartOfPayload ()
- std::int32\_t getStartOfPayload ()
- bool validPayload ()
- Buffer getPayload ()

### **Static Public Member Functions**

• static void StartAt (const int &start)

### 4.14.1 Detailed Description

class to navigate in the raw data buffer parse the header and send the payload as Buffer

Definition at line 13 of file RawBufferNavigator.h.

#### 4.14.2 Constructor & Destructor Documentation

```
4.14.2.1 RawBufferNavigator() RawBufferNavigator::RawBufferNavigator ()
```

Definition at line 16 of file RawBufferNavigator.cc.  ${\tt 00016} \ \ \{\}$ 

**4.14.2.2** ~RawBufferNavigator() RawBufferNavigator::~RawBufferNavigator ( ) [default]

### 4.14.3 Member Function Documentation

```
4.14.3.1 findStartOfPayload() bool RawBufferNavigator::findStartOfPayload ( )
```

```
Definition at line 27 of file RawBufferNavigator.cc.
```

```
00028 {
00029
        if (m_StartPayloadDone == true)
00030
00031
          if (m_StartPayload == -1) return false;
          else
            return true;
00033
00034
00035
        else
00036
00037
          m_StartPayloadDone = true;
00038
          for(std::size_t i = m_Start; i < m_Buffer.size(); i++)</pre>
00039
00040
            if(m_Buffer[i] == DU::START_OF_DIF || m_Buffer[i] == DU::START_OF_DIF_TEMP)
00041
00042
             m_StartPayload = i;
00043
             return true;
          }
00044
00045
00046
          m\_StartPayload = -1;
00047
          return false;
       }
00048
00049 }
```

## 4.14.3.2 getDetectorID() std::uint8\_t RawBufferNavigator::getDetectorID ( )

#### Definition at line 25 of file RawBufferNavigator.cc.

```
00025 { return m_Buffer[0]; }
```

## 4.14.3.3 getPayload() Buffer RawBufferNavigator::getPayload ( )

## Definition at line 59 of file RawBufferNavigator.cc.

```
00059 { return Buffer(&(m_Buffer.begin()[m_StartPayload]), m_Buffer.size() - m_StartPayload); }
```

## 4.14.3.4 getStartOfPayload() std::int32\_t RawBufferNavigator::getStartOfPayload ( )

## Definition at line 51 of file RawBufferNavigator.cc.

```
00052 {
00053     findStartOfPayload();
00054     return m_StartPayload;
00055 }
```

# **4.14.3.5 setBuffer()** void RawBufferNavigator::setBuffer ( const Buffer & b )

## Definition at line 18 of file RawBufferNavigator.cc.


The documentation for this class was generated from the following files:

- · libs/core/include/RawBufferNavigator.h
- libs/core/src/RawBufferNavigator.cc

#### 4.15 RawdataReader Class Reference

#include <libs/interface/RawDataReader/include/RawdataReader.h>

Inheritance diagram for RawdataReader:

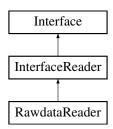

## **Public Member Functions**

- RawdataReader (const char \*fileName)
- void start ()
- · void end ()
- float getFileSize ()
- void openFile (const std::string &fileName)
- void closeFile ()
- bool nextEvent ()
- bool nextDIFbuffer ()
- · const Buffer & getBuffer ()
- virtual ∼RawdataReader ()

#### **Static Public Member Functions**

• static void setDefaultBufferSize (const std::size\_t &size)

### **Additional Inherited Members**

#### 4.15.1 Detailed Description

Definition at line 17 of file RawdataReader.h.

### 4.15.2 Constructor & Destructor Documentation

## 4.15.3 Member Function Documentation

# 4.15.3.1 closeFile() void RawdataReader::closeFile ( )

Definition at line 47 of file RawdataReader.cc.

```
4.15.3.2 end() void RawdataReader::end ( )
```

```
Definition at line 26 of file RawdataReader.cc.
```

#### 4.15.3.3 getBuffer() const Buffer & RawdataReader::getBuffer ()

Definition at line 122 of file RawdataReader.cc.

```
00123 {
00124 uncompress();
00125 return m_Buffer;
00126 }
```

## 4.15.3.4 getFileSize() float RawdataReader::getFileSize ( )

Definition at line 130 of file RawdataReader.cc.

```
00130 { return m_FileSize; }
```

#### 4.15.3.5 nextDIFbuffer() bool RawdataReader::nextDIFbuffer ( )

Definition at line 95 of file RawdataReader.cc.

```
00096 {
00097
00098
         static int DIF_processed{0};
00099
         if (DIF_processed >= m_NumberOfDIF)
00100
00101
00102
          DIF_processed = 0;
00103
           return false;
00104
00105
         else
00106
00107
          DIF_processed++;
00108
           std::uint32_t bsize{0};
00109
           m_FileStream.read(reinterpret_cast<char*>(&bsize), sizeof(std::uint32_t));
00110
           m_FileStream.read(reinterpret_cast<char*>(&m_buf[0]), bsize);
00111
           m_Buffer = Buffer(m_buf);
00112
00113
00114
       catch(const std::ios_base::failure& e)
00115
00116
         log()->error("Caught an ios_base::failure in openFile : {}", e.what());
00117
         return false;
       }
00118
00119
       return true;
00120 }
```

#### 4.15.3.6 nextEvent() bool RawdataReader::nextEvent ( )

Definition at line 81 of file RawdataReader.cc.

```
00082 {
00083
00084
00085
         m_FileStream.read(reinterpret_cast<char*>(&m_EventNumber), sizeof(std::uint32_t));
         m_FileStream.read(reinterpret_cast<char*>(&m_NumberOfDIF), sizeof(std::uint32_t));
00086
88000
       catch(const std::ios_base::failure& e)
00089
00090
         return false;
00091
00092
       return true:
00093 }
```

Definition at line 60 of file RawdataReader.cc.

```
00062
00063
00064
         m_FileStream.rdbuf()->pubsetbuf(0, 0);
00065
         m_FileStream.exceptions(std::ifstream::failbit | std::ifstream::badbit);
00066
         m_FileStream.open(fileName.c_str(), std::ios::in | std::ios::binary | std::ios::ate); // Start at
     the end to directly calculate the size of the file then come back to beginning
00067
         m_FileStream.rdbuf()->pubsetbuf(0, 0);
00068
          if (m_FileStream.is_open())
00069
00070
           setFileSize(m_FileStream.tellg());
00071
           m_FileStream.seekg(0, std::ios::beg);
00072
00073
00074
       catch(const std::ios_base::failure& e)
00075
00076
         log()->error("Caught an ios_base::failure in openFile : {}", e.what());
00077
00078 }
00079 }
```

```
4.15.3.8 setDefaultBufferSize() void RawdataReader::setDefaultBufferSize ( const std::size_t & size ) [static]
```

Definition at line 16 of file RawdataReader.cc.

```
00016 { m_BufferSize = size; }
```

**4.15.3.9 start()** void RawdataReader::start ()

Definition at line 24 of file RawdataReader.cc.

```
00024 { openFile(m_Filename); }
```


The documentation for this class was generated from the following files:

- libs/interface/RawDataReader/include/RawdataReader.h
- libs/interface/RawDataReader/src/RawdataReader.cc

### 4.16 ROOTWriter Class Reference

#include <libs/interface/ROOT/include/ROOTWriter.h>

Inheritance diagram for ROOTWriter:

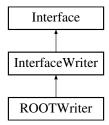

#### **Public Member Functions**

- ROOTWriter ()
- void setFilename (const std::string &)
- void start ()
- void processDIF (const PayloadParser &)
- void processFrame (const PayloadParser &, const std::uint32\_t &frameIndex)
- void processPadInFrame (const PayloadParser &, const std::uint32\_t &frameIndex, const std::uint32\_←
  t &channeIIndex)
- void processSlowControl (const Buffer &)
- void end ()
- virtual void startEvent ()
- virtual void endEvent ()
- virtual void startDIF ()
- virtual void endDIF ()
- virtual void startFrame ()
- virtual void endFrame ()
- virtual void startPad ()
- virtual void endPad ()

## 4.16.1 Detailed Description

Definition at line 18 of file ROOTWriter.h.

## 4.16.2 Constructor & Destructor Documentation

```
4.16.2.1 ROOTWriter() ROOTWriter::ROOTWriter ( )

Definition at line 10 of file ROOTWriter.cc.
00010 : InterfaceWriter("ROOTWriter", "1.0.0") { addCompatibility("RawdataReader", ">=1.0.0"); }
```

## 4.16.3 Member Function Documentation

```
4.16.3.1 end() void ROOTWriter::end ()
```

Definition at line 19 of file ROOTWriter.cc.

```
4.16.3.2 endDIF() void ROOTWriter::endDIF ( ) [virtual]
```

Reimplemented from Interface.

Definition at line 75 of file ROOTWriter.cc.

```
00077 m_Event->addDIF(*m_DIF);
00078 delete m_DIF;
00079 }
```

### 4.16.3.3 endEvent() void ROOTWriter::endEvent ( ) [virtual]

Reimplemented from Interface.

Definition at line 63 of file ROOTWriter.cc.

```
00064 {
00065
       m_Tree->Fill();
00066
       if(m_Event) delete m_Event;
00067 }
```

# 4.16.3.4 endFrame() void ROOTWriter::endFrame ( ) [virtual]

Reimplemented from Interface.

Definition at line 87 of file ROOTWriter.cc.

```
00089 m_DIF->addHit(*m_Hit);
00090 delete m_Hit;
00091 }
```

# 4.16.3.5 endPad() void ROOTWriter::endPad ( ) [virtual]

Reimplemented from Interface.

Definition at line 95 of file ROOTWriter.cc.

```
00095 {}
```

```
4.16.3.6 processDIF() void ROOTWriter::processDIF (
             const PayloadParser & d )
```

Definition at line 30 of file ROOTWriter.cc.

```
00031 {
           m_DIF->setID(d.getDIFid());
00033
            m_DIF->setDTC(d.getDTC());
...__I / SetGIC(d.getGTC());
00035    m_DIF->setDIFBCID(d.getBCID());
00036    m_DIF->setAbsoluteBCID(d.getAbsoluteBCID());
00037 }
           m_DIF->setGTC(d.getGTC());
```

```
4.16.3.7 processFrame() void ROOTWriter::processFrame (
               const PayloadParser & d,
               const std::uint32_t & frameIndex )
Definition at line 39 of file ROOTWriter.cc.
00040 {
        m_Hit->setDIF(d.getDIFid());
00042
        m_Hit->setASIC(d.getASICid(frameIndex));
00043
        m_Hit->setDTC(d.getDTC());
00044
        m_Hit->setGTC(d.getGTC());
       m_Hit->setDIFBCID(d.getBCID());
m_Hit->setAbsoluteBCID(d.getAbsoluteBCID());
00045
00046
00047
       m_Hit->setFrameBCID(d.getFrameBCID(frameIndex));
00048 m_Hit->setTimestamp(d.getFrameTimeToTrigger(frameIndex));
00049 }
4.16.3.8 processPadInFrame() void ROOTWriter::processPadInFrame (
               const PayloadParser & d,
               const std::uint32_t & frameIndex,
               const std::uint32_t & channelIndex )
Definition at line 51 of file ROOTWriter.cc.
00052 {
00053
        m_Hit->setChannel(channelIndex);
       m_Hit->setThreshold(static_cast<std::uint8_t>(d.getThresholdStatus(frameIndex, channelIndex)));
00055 }
4.16.3.9 processSlowControl() void ROOTWriter::processSlowControl (
               const Buffer & ) [inline]
Definition at line 29 of file ROOTWriter.h.
00029 { ; }
4.16.3.10 setFilename() void ROOTWriter::setFilename (
               const std::string & filename )
Definition at line 8 of file ROOTWriter.cc.
00008 { m_Filename = filename; }
4.16.3.11 start() void ROOTWriter::start ( )
Definition at line 12 of file ROOTWriter.cc.
00014
        m_File = TFile::Open(m_Filename.c_str(), "RECREATE", m_Filename.c_str(),
ROOT::CompressionSettings(ROOT::kZLIB, 5));
00015 m_Tree = new TTree("RawData", "Raw SDHCAL data tree");
00016
       m_Tree->Branch("Events", &m_Event, 512000, 99);
00017 }
```

```
4.16.3.12 startDIF() void ROOTWriter::startDIF ( ) [virtual]
```

Reimplemented from Interface.

Definition at line 69 of file ROOTWriter.cc.

```
00070 {
00071 m_DIF = new DIF();
00072 // m_DIF->clear();
00073 }
```

### 4.16.3.13 startEvent() void ROOTWriter::startEvent ( ) [virtual]

Reimplemented from Interface.

Definition at line 57 of file ROOTWriter.cc.

```
00058 {
00059    m_Event = new Event();
00060    // m_Event->clear();
00061 }
```

### 4.16.3.14 startFrame() void ROOTWriter::startFrame ( ) [virtual]

Reimplemented from Interface.

Definition at line 81 of file ROOTWriter.cc.

# 4.16.3.15 startPad() void ROOTWriter::startPad ( ) [virtual]

Reimplemented from Interface.

```
Definition at line 93 of file ROOTWriter.cc.
```


The documentation for this class was generated from the following files:

- libs/interface/ROOT/include/ROOTWriter.h
- libs/interface/ROOT/src/ROOTWriter.cc

# 4.17 textDump Class Reference

#include <libs/interface/Dump/include/textDump.h>

Inheritance diagram for textDump:

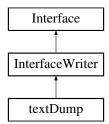

### **Public Member Functions**

- textDump ()
- void start ()
- void processDIF (const PayloadParser &)
- void processFrame (const PayloadParser &, uint32\_t frameIndex)
- void processPadInFrame (const PayloadParser &, uint32\_t frameIndex, uint32\_t channelIndex)
- void processSlowControl (Buffer)
- void end ()
- std::shared ptr< spdlog::logger > & print ()
- void setLevel (const spdlog::level::level\_enum &level)

## 4.17.1 Detailed Description

Definition at line 14 of file textDump.h.

#### 4.17.2 Constructor & Destructor Documentation

```
4.17.2.1 textDump() textDump::textDump ()
```

```
Definition at line 9 of file textDump.cc.
```

## 4.17.3 Member Function Documentation

```
4.17.3.1 end() void textDump::end ( )
```

```
Definition at line 33 of file textDump.cc.
```

```
00033 { print()->info("textDump end of report"); }
```

```
4.17.3.2 print() std::shared_ptr< spdlog::logger > & textDump::print ( ) [inline]
```

```
Definition at line 24 of file textDump.h.
```

```
00024 { return m_InternalLogger; }
```

```
4.17.3.3 processDIF() void textDump::processDIF (
               const PayloadParser & d )
Definition at line 19 of file textDump.cc.
00019 { print()->info("DIF_ID : {}, DTC : {}, DTF BCID {}, Absolute BCID : {}, Nbr frames {}",
      d.getDIFid(), d.getDTC(), d.getGTC(), d.getBCID(), d.getAbsoluteBCID(), d.getNumberOfFrames()); }
4.17.3.4 processFrame() void textDump::processFrame (
               const PayloadParser & d,
               uint32_t frameIndex )
Definition at line 21 of file textDump.cc.
00022 {
      print()->info("\tDisplaying frame number {}: ASIC ID {}, Frame BCID {}, Frame Time To Trigger
(a.k.a timestamp) is {}", frameIndex, d.getASICid(frameIndex), d.getFrameBCID(frameIndex),
00023
      d.getFrameTimeToTrigger(frameIndex));
00024 }
\textbf{4.17.3.5} \quad \textbf{processPadInFrame()} \quad \texttt{void textDump::processPadInFrame ()}
               const PayloadParser & d,
               uint32_t frameIndex,
               uint32_t channelIndex )
Definition at line 26 of file textDump.cc.
00028
        if(d.getThresholdStatus(frameIndex, channelIndex) > 0) { print()->info("\t\tChannel {}, Threshold
      {}", channelIndex, d.getThresholdStatus(frameIndex, channelIndex)); }
00029 }
4.17.3.6 processSlowControl() void textDump::processSlowControl (
               Buffer )
Definition at line 31 of file textDump.cc.
00031 { print()->error("textDump::processSlowControl not implemented yet."); }
4.17.3.7 setLevel() void textDump::setLevel (
               const spdlog::level::level_enum & level ) [inline]
Definition at line 25 of file textDump.h.
00025 { m_InternalLogger->set_level(level); }
4.17.3.8 start() void textDump::start ()
Definition at line 17 of file textDump.cc.
00017 { print()->info("Will dump bunch of DIF data"); }
```

The documentation for this class was generated from the following files:

- libs/interface/Dump/include/textDump.h
- libs/interface/Dump/src/textDump.cc

## 4.18 Timer Class Reference

```
#include <libs/core/include/Timer.h>
```

### **Public Member Functions**

- void start ()
- void stop ()
- float getElapsedTime ()

## 4.18.1 Detailed Description

Definition at line 9 of file Timer.h.

#### 4.18.2 Member Function Documentation

```
4.18.2.1 getElapsedTime() float Timer::getElapsedTime ( ) [inline]

Definition at line 14 of file Timer.h.
00014 { return std::chrono::duration_cast<std::chrono::microseconds>(m_StopTime - m_StartTime).count(); }

4.18.2.2 start() void Timer::start ( ) [inline]

Definition at line 12 of file Timer.h.
00012 { m_StartTime = std::chrono::high_resolution_clock::now(); }

4.18.2.3 stop() void Timer::stop ( ) [inline]

Definition at line 13 of file Timer.h.
00013 { m_StopTime = std::chrono::high_resolution_clock::now(); }
```


The documentation for this class was generated from the following file:

• libs/core/include/Timer.h

## 4.19 Version Class Reference

```
#include <libs/core/include/Version.h>
```

Inheritance diagram for Version:

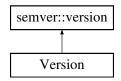

### **Public Member Functions**

- Version (const std::uint8\_t &mj, const std::uint8\_t &mn, const std::uint8\_t &pt, const semver::prerelease &prt=semver::prerelease::none, const std::uint8\_t &prn=0) noexcept
- Version (const std::string\_view &str)
- Version ()=default
- std::uint8\_t getMajor ()
- std::uint8\_t getMinor ()
- std::uint8\_t getPatch ()
- std::string getPreRelease ()
- std::uint8\_t getPreReleaseNumber ()

## 4.19.1 Detailed Description

Definition at line 11 of file Version.h.

#### 4.19.2 Constructor & Destructor Documentation

## 4.19.3 Member Function Documentation

5 File Documentation 55

```
4.19.3.1 getMajor() std::uint8_t Version::getMajor ( )
Definition at line 9 of file Version.cc.
00009 { return major; }
4.19.3.2 getMinor() std::uint8_t Version::getMinor ()
Definition at line 11 of file Version.cc.
00011 { return minor; }
4.19.3.3 getPatch() std::uint8_t Version::getPatch ( )
Definition at line 13 of file Version.cc.
00013 { return patch; }
\textbf{4.19.3.4} \quad \textbf{getPreRelease()} \quad \texttt{std::string Version::getPreRelease ()}
Definition at line 15 of file Version.cc.
00016 {
         switch (prerelease_type)
00018
           case semver::prerelease::alpha: return "alpha";
case semver::prerelease::beta: return "beta";
case semver::prerelease::rc: return "rc";
00019
00020
00021
          case semver::prerelease::none: return "";
default: return "";
00023
00024 }
00025 }
4.19.3.5 getPreReleaseNumber() std::uint8_t Version::getPreReleaseNumber ( )
Definition at line 27 of file Version.cc.
```

The documentation for this class was generated from the following files:

• libs/core/include/Version.h

00027 { return prerelease\_number; }

• libs/core/src/Version.cc

## 5 File Documentation

## 5.1 libs/core/include/Bits.h File Reference

```
#include <cstdint>
#include <iosfwd>
```

## **Typedefs**

```
using bit8_t = std::uint8_t
using bit16_t = std::uint16_t
using bit32_t = std::uint32_t
using bit64_t = std::uint64_t
```

## **Functions**

std::ostream & operator << (std::ostream &os, const bit8\_t &c)</li>
 Stream operator to print bit8\_t aka std::uint8\_t and not char or unsigned char.

## 5.1.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Bits.h.

## 5.1.2 Typedef Documentation

```
5.1.2.1 bit16_t using bit16_t = std::uint16_t
```

Definition at line 11 of file Bits.h.

```
5.1.2.2 bit32_t using bit32_t = std::uint32_t
```

Definition at line 12 of file Bits.h.

```
5.1.2.3 bit64_t using bit64_t = std::uint64_t
```

Definition at line 13 of file Bits.h.

```
5.1.2.4 bit8_t using bit8_t = std::uint8_t
```

Definition at line 10 of file Bits.h.

5.2 Bits.h 57

### 5.1.3 Function Documentation

```
5.1.3.1 operator << () std::ostream & operator << ( std::ostream & os, const bit8_t & c )
```

Stream operator to print bit8\_t aka std::uint8\_t and not char or unsigned char.

```
Definition at line 8 of file Bits.cc. 00008 { return os « c + 0; }
```

### 5.2 Bits.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include <cstdint>
00008 #include <iosfwd>
00009
00010 using bit8_t = std::uint8_t; /*<! type to represent 8bits words (1 byte) */
00011 using bit16_t = std::uint16_t; /*<! type to represent 16bits words (2 bytes) */
00012 using bit32_t = std::uint32_t; /*<! type to represent 32bits words (4 bytes) */
00013 using bit64_t = std::uint64_t; /*<! type to represent 64bits words (8 bytes) */
00014
00016 std::ostream& operator ((std::ostream& os, const bit8_t& c);</pre>
```

## 5.3 libs/core/include/Buffer.h File Reference

```
#include "Bits.h"
#include <array>
#include <string>
#include <vector>
```

## Classes

· class Buffer

### 5.3.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde A.Pingault L.Mirabito

See also

```
https://github.com/apingault/Trivent4HEP
```

Definition in file Buffer.h.

### 5.4 Buffer.h

```
Go to the documentation of this file.
```

```
00001
00006 #pragma once
00007
00008 #include "Bits.h"
00009
00010 #include <array>
00011 #include <string>
00012 #include <vector>
00013
00014 class Buffer
00015 {
00016 public:
00017
        Buffer() : m_Buffer(nullptr), m_Size(0), m_Capacity(0) {}
        virtual ~Buffer() {}
00018
        Buffer(const bit8 t b[], const std::size t& i) : m Buffer(const cast<bit8 t*>(&b[0])), m Size(i),
00019
      m_Capacity(i) {}
         Buffer(const char b[], const std::size_t& i) : m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const
      bit8_t*>(&b[0]))), m_Size(i * sizeof(char)), m_Capacity(i * sizeof(char)) {}
        template<typename T> Buffer(const std::vector<T>& rawdata) :
       \texttt{m\_Buffer(const\_cast<bit8\_t*>(reinterpret\_cast<const\_bit8\_t*>(rawdata.data()))), } \texttt{m\_Size(rawdata.size())} 
* sizeof(T)), m_Capacity(rawdata.capacity() * sizeof(T)) {}
00022   template<typename T, std::size_t N> Buffer(const std::array<T, N>& rawdata) :
    m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const bit8_t*>(rawdata.data()))), m_Size(rawdata.size())
       * sizeof(T)), m_Capacity(rawdata.size() * sizeof(T)) {}
00023
        std::size_t size()const { return m_Size; }
std::size_t capacity()const { return m_Capacity; }
00024
00025
00026
00027
         void set(unsigned char* b) { m_Buffer = b; }
00028
         void set (const Buffer& buffer)
00029
           m_Buffer = buffer.begin();
m_Size = buffer.size();
00030
00031
           m_Capacity = buffer.capacity();
00032
00033
00034
        bit8_t* begin()const { return m_Buffer; }
00035
         bit8_t* end()const { return m_Buffer + m_Size; }
00036
        bit8_t& operator[](const std::size_t& pos) { return m_Buffer[pos]; }
00037
        bit8_t& operator[](const std::size_t& pos)const { return m_Buffer[pos]; }
00038
00039
         void setSize(const std::size t& size) { m Size = size; }
00040
00041 private:
00042
        bit8_t*
                       m_Buffer{nullptr};
00043
         std::size_t m_Size{0};
00044
        std::size_t m_Capacity{0};
00045 };
```

## 5.5 libs/core/include/BufferLooper.h File Reference

```
#include "AppVersion.h"
#include "Buffer.h"
#include "BufferLooperCounter.h"
#include "DetectorId.h"
#include "Formatters.h"
#include "PayloadParser.h"
#include "RawBufferNavigator.h"
#include "Timer.h"
#include "Words.h"
#include <algorithm>
#include <cassert>
#include <fmt/color.h>
#include <map>
#include <memory>
#include <spdlog/sinks/null_sink.h>
#include <spdlog/spdlog.h>
#include <string>
#include <vector>
```

5.6 BufferLooper.h 59

#### **Classes**

class BufferLooper< SOURCE, DESTINATION >

### 5.5.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file BufferLooper.h.

## 5.6 BufferLooper.h

#### Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include "AppVersion.h"
00008 #include "Buffer.h"
00009 #include "BufferLooperCounter.h"
00010 #include "DetectorId.h"
00011 #include "Formatters.h"
00012 #include "PayloadParser.h"
00012 #include 'Tayloadraiser.m'
00013 #include "RawBufferNavigator.h"
00014 #include "Timer.h"
00015 #include "Words.h"
00016
00017 #include <algorithm>
00018 #include <cassert>
00019 #include <fmt/color.h>
00020 #include <map>
00021 #include <memory>
00022 #include <spdlog/sinks/null_sink.h>
00023 #include <spdlog/spdlog.h>
00024 #include <string>
00025 #include <vector>
00026 // function to loop on buffers
00027
00028 template<typename SOURCE, typename DESTINATION> class BufferLooper
00029 {
00030 public:
        BufferLooper(SOURCE& source, DESTINATION& dest, bool debug = false) : m_Source(source),
      m_Destination(dest), m_Debug(debug)
00032
          m_Logger = spdlog::create<spdlog::sinks::null_sink_mt>("streamout");
if(!spdlog::get("streamout")) {    spdlog::register_logger(m_Logger);  }
00033
00034
00035
          m_Source.setLogger(m_Logger);
00036
          m_Destination.setLogger(m_Logger);
00037
00038
00039
        void addSink(const spdlog::sink_ptr& sink, const spdlog::level::level_enum& level =
      spdlog::get_level())
00040
00041
          sink->set_level(level);
00042
          m_Sinks.push_back(sink);
00043
          m_Logger = std::make_shared<spdlog::logger>("streamout", begin(m_Sinks), end(m_Sinks));
00044
          m_Source.setLogger(m_Logger);
00045
          m_Destination.setLogger(m_Logger);
00046
00047
00048
        void loop(const std::uint32_t& m_NbrEventsToProcess = 0)
00049
          // clang-format off
00050
00051
        fmt::print(fg(fmt::color::medium_orchid) | fmt::emphasis::bold,
                   "\n"
00052
00053 " SSSSSSSSSSSSSS
      tttt\n"
ttt:::t\n"
00055 "S:::::SSSSSS::::::S t::::t
      t::::t\n"
00056 "S::::S
                    SSSSSSS t::::t
      t:::::t\n"
```

```
______ eeeeeeeeee aaaaaaaaaaaa uuuuuuutttttt:::::ttttttt\n"
                  ttttttt::::ttttttt rrrrr
00057 "S:::::S
                  ttttttt::::ttttttt rrrrr rrrrrrr
mmmm oooooooooo uuuuuu uuuuuuttt
t::::::::::::::t r::::rrr:::::::rr
mmmmmmm mmmmmmm 00058 "S:::::S
                                                        ee::::::ee a:::::::a
     mm::::::m \quad m::::::mm \quad oo:::::::oo \ u::::u \qquad u::::ut::::::::t \backslash n "
u::::ut::::::::::t\n"
00060 " SS:::::SSSSStttttt:::::tttttt rr:::::rrrrr:::::re:::::e
                                                                 e::::e
     SSS::::::SS t::::t
00061 "
                                     r:::::r
                                                r::::re:::::eeeee:::::e aaaaaaa:::::a
                                               u::::u
                                  o::::ou::::u
                                                          t::::t\n"
    " SSSSS:::S t::::t r::::r rrrrrrre::::::::::::e aa::::::a m:::m m::::m m::::m m::::m t::::t\n"
                        o::::ou::::u u::::

::::t ++**
               S:::::S t:::::t
00063 "
                                                      e:::::eeeeeeeee a::::aaaa::::::a m::::m
     m::::m m::::mo::::o
                                        u::::u t::::t\n"
00064 "
               S:::::S t:::::t ttttttr::::r
                                                      e:::::e
                                                                      a::::a
m::::m m::::mo::::o o::::ou:::::uuuu:::::u
00065 "SSSSSSS S:::::S t:::::tttt:::::tr:::::r
                                                   t::::t tttttt\n"
                                                                      a::::a a:::::a m::::m
                                                      e....
            t \colon \colon \colon \colon \colon t \: t \: t \: t \: t \: \colon \colon \colon t \: \setminus n \: "
     m::::m
e::::::eeeeeeeea::::aaaa:::::a m::::m
     tt:::::::t\n"
tt:::::::::ttr:::::r
     m::::m
            tt::::::::tt\n"
00068 " SSSSSSSSSSSSSS
                          tttttttttt rrrrrr
                                                          eeeeeeeeeee aaaaaaaaa aaaammmmmm
                                                   ttttttttttt {}\n"
    mmmmmm
            mmmmmm 0000000000
                                   uuuuuuuu uuuu
00069 "\n",
00070 fmt::format(fg(fmt::color::red) | fmt::emphasis::bold, "v{}", streamout_version.to_string()));
00071
        // clang-format on
00072
        log() ->info("Streamout Version : {}", streamout_version.to_string());
log() ->info("Using InterfaceReader {} version {}", m_Source.getName(),
00073
00074
    m_Source.getVersion().to_string());
        log()->info("Using InterfaceWriter {} version {}", m_Destination.getName(),
    m_Destination.getVersion().to_string());
00076
00077
        if(!m_Destination.checkCompatibility(m_Source.getName(), m_Source.getVersion().to_string()))
00078
          log()->critical("{} version {} is not compatible with {} version {} ! ", m_Source.getName(),
00079
     m_Source.getVersion().to_string(), m_Destination.getName(), m_Destination.getVersion().to_string());
08000
          log()->info("Compatible Interfaces for {} are", m_Destination.getName());
          for(std::map<std::string, std::string>::iterator it = m_Destination.getCompatibility().begin();
00081
     it->second): }
00082
         std::exit(-1):
00083
00084
        if(!m_DetectorIDs.empty())
00085
00086
          std::string ids;
00087
          for(std::vector<DetectorID>::const_iterator it = m_DetectorIDs.cbegin(); it !=
    m_DetectorIDs.cend(); ++it) ids += std::to_string(static_cast<std::uint16_t>(*it)) + ";";
          log()->info("Detector ID(s) other than {} will be ignored", ids);
00088
00089
00090
        00091
        RawBufferNavigator bufferNavigator;
00092
        Timer
                        timer;
00093
        timer.start();
00094
        m Source.start();
00095
        m Destination.start();
00096
        while (m_Source.nextEvent() && m_NbrEventsToProcess >= m_NbrEvents)
00097
00099
          m Source.startEvent();
00100
          m Destination.startEvent();
00102
00103
          m_Logger->warn("===*** Event {} ***===", m_NbrEvents);
          while (m_Source.nextDIFbuffer())
00104
00105
00106
            const Buffer& buffer = m_Source.getBuffer();
00107
            bufferNavigator.setBuffer(buffer);
00108
            if(std::find(m_DetectorIDs.begin(), m_DetectorIDs.end(),
00109
    static_cast<DetectorID>(bufferNavigator.getDetectorID())) == m_DetectorIDs.end())
00110
           {
00111
             m_Logger->debug("Ignoring detector ID : {}", bufferNavigator.getDetectorID());
00112
00113
00114
00115
            std::int32_t idstart = bufferNavigator.getStartOfPayload();
00116
            if (m_Debug && idstart == -1) m_Logger->info(to_hex(buffer));
00117
            c.DIFStarter[idstart]++;
00118
            if(!bufferNavigator.validPayload())
00119
           {
            m Logger->error("!bufferNavigator.validBuffer()");
00120
             continue;
00122
00123
00125
            m_Source.startDIF();
00126
            m Destination.startDIF();
00128
            PavloadParser d:
```

5.6 BufferLooper.h 61

```
// This is really a big error so skip DIF entirely if exception occurs
00130
00131
00132
                             d.setBuffer(bufferNavigator.getPayload());
00133
00134
                         catch (const Exception& e)
00135
00136
                             m_Logger->error("{}", e.what());
00137
00138
00139
                         bit8_t* debug_variable_1 = buffer.end();
                         bit8_t* debug_variable_2 = d.end();
bit8_t* debug_variable_2 = d.end();
if(debug_variable_1 != debug_variable_2) m_Logger->error("DIF BUFFER END {} {}",
00140
00141
          fmt::ptr(debug_variable_1), fmt::ptr(debug_variable_2));
00142
                         if(m_Debug) assert(debug_variable_1 == debug_variable_2);
00143
                         c.DIFPtrValueAtReturnedPos[d.begin()[d.getGetFramePtrReturn()]]++;
00144
                         if(m_Debug) assert(d.begin()[d.getGetFramePtrReturn()] == 0xa0);
00145
                         c.SizeAfterDIFPtr[d.getSizeAfterDIFPtr()]++;
00146
00147
                         m_Destination.processDIF(d);
00148
                          for(std::size_t i = 0; i < d.getNumberOfFrames(); ++i)</pre>
00149
                         {
00151
                             m_Source.startFrame();
00152
                             m Destination.startFrame();
                             m_Destination.processFrame(d, i);
00154
                             for(std::size_t j = 0; j < DU::NUMBER_PAD; ++j)</pre>
00155
00156
00157
                                 if(d.getThresholdStatus(i, j) != 0)
00158
00159
                                    m Source.startPad();
00160
                                    m Destination.startPad();
00161
                                    m_Destination.processPadInFrame(d, i, j);
00162
                                    m_Source.endPad();
00163
                                    m_Destination.endPad();
00164
                                }
00165
00167
                             m Source.endFrame();
00168
                             m_Destination.endFrame();
00170
                          // If I want SlowControl I need to check for it first, If there is an error then it's not a
00171
         big deal just continue and say is bad SlowControl
00172
00173
                         {
00174
                             d.setSCBuffer();
00175
00176
                          catch(const Exception& e)
00177
00178
                            m_Logger->error("{}", e.what());
00179
00180
                         bool processSC = false;
00181
                          if (d.hasSlowControlData())
00182
00183
                             c.hasSlowControl++;
00184
                             processSC = true;
00185
00186
                         if(d.badSCData())
00188
                             c.hasBadSlowControl++;
00189
                             processSC = false;
00190
                         if(processSC) { m_Destination.processSlowControl(d.getSCBuffer()); }
00191
00192
00193
                         Buffer eod = d.getEndOfAllData();
00194
                         c.SizeAfterAllData[eod.size()]++;
00195
                         bit8_t* debug_variable_3 = eod.end();
00196
                         if(debug_variable_1 != debug_variable_3) m_Logger->info("END DATA BUFFER END {} {}",
          fmt::ptr(debug_variable_1), fmt::ptr(debug_variable_3));
00197
                          if(m_Debug) assert(debug_variable_1 == debug_variable_3);
00198
                         if(eod.size() != 0) m_Logger->info("End of Data remaining stuff : {}", to_hex(eod));
00199
00200
                         int nonzeroCount = 0;
00201
                         for(bit8_t* it = eod.begin(); it != eod.end(); it++)
                             if(static_cast<int>(*it) != 0) nonzeroCount++;
00202
00203
                         c.NonZeroValusAtEndOfData[nonzeroCount]++;
00205
                         m Source.endDIF();
00206
                         m_Destination.endDIF();
00208
                           // end of DIF while loop
00209
                      m_Logger->warn("===*** Event {} ***===", m_NbrEvents);
00210
                     m_NbrEvents++;
00212
                     m_Source.endEvent();
                     m\_Destination.endEvent();
00213
00215
                        // end of event while loop
00216
                  m_Destination.end();
00217
                  m_Source.end();
                  timer.stop();
00218
                  \label{fmt::print(fg(fmt::color::green) | fmt::emphasis::bold, "=== elapsed time {} \{\} ms \ (\{\} ms/event) \} = (\{\} ms/e
00219
           ===\n", timer.getElapsedTime() / 1000, timer.getElapsedTime() / (1000 * m_NbrEvents));
```

```
00220
00221
                                       printAllCounters() { c.printAllCounters(); }
       std::shared_ptr<spdlog::logger> log() { return m_Logger; }
00222
00223
00224
       void setDetectorIDs(const std::vector<DetectorID>& detectorIDs) { m_DetectorIDs = detectorIDs; }
00225
00226 private:
00227
       std::vector<DetectorID>
                                       m_DetectorIDs;
00228
       std::shared_ptr<spdlog::logger> m_Logger{nullptr};
00229
       std::vector<spdlog::sink_ptr>    m_Sinks;
       BufferLooperCounter
00230
                                      c;
                                       m_Source{nullptr};
00231
       SOURCE&
00232
       DESTINATION&
                                       m_Destination{nullptr};
00233 bool
                                       m_Debug{false};
00234
       std::uint32_t
                                       m_NbrEvents{1};
00235 };
```

## 5.7 libs/core/include/BufferLooperCounter.h File Reference

```
#include <map>
#include <memory>
#include <string>
```

#### **Classes**

struct BufferLooperCounter

### 5.7.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file BufferLooperCounter.h.

## 5.8 BufferLooperCounter.h

### Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include <map>
00008 #include <memory>
00009 #include <string>
00010
00011 struct BufferLooperCounter
00012 {
00013 public:
00014 int 00015 int
                              hasSlowControl
                              hasBadSlowControl = 0;
        std::map<int, int> DIFStarter;
std::map<int, int> DIFPtrValueAtReturnedPos;
00016
00018
        std::map<int, int> SizeAfterDIFPtr;
        std::map<int, int> SizeAfterAllbata;
std::map<int, int> NonZeroValusAtEndOfData;
00019
00020
00021
00022
        void printCounter(const std::string& description, const std::map<int, int>& m);
00023
        void printAllCounters();
00024 };
```

5.10 DetectorId.h 63

## 5.9 libs/core/include/Detectorld.h File Reference

```
#include <cstdint>
```

### **Enumerations**

• enum class DetectorID : std::uint16\_t { HARDROC = 100 , HARDROC\_NEW = 150 , RUNHEADER = 255 }

## 5.9.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DetectorId.h.

## 5.9.2 Enumeration Type Documentation

# $\textbf{5.9.2.1} \quad \textbf{DetectorID} \quad \texttt{enum class DetectorID} \ : \quad \texttt{std::uint16\_t} \quad \texttt{[strong]}$

#### Enumerator

HARDROC	
HARDROC_NEW	
RUNHEADER	

Definition at line 9 of file Detectorld.h.

## 5.10 DetectorId.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include <cstdint>
00008
00009 enum class DetectorID : std::uint16_t
00010 {
00011    HARDROC = 100,
00012    HARDROC_NEW = 150,
00013    RUNHEADER = 255
00014 };
```

## 5.11 libs/core/include/DIFSlowControl.h File Reference

```
#include <bitset>
#include <cstdint>
#include <iosfwd>
#include <map>
#include <string>
```

### **Classes**

· class DIFSlowControl

### **Functions**

std::string to\_string (const DIFSlowControl &c)

### 5.11.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIFSlowControl.h.

## 5.11.2 Function Documentation

## Definition at line 256 of file DIFSlowControl.cc.

5.12 DIFSlowControl.h 65

## 5.12 DIFSlowControl.h

```
Go to the documentation of this file.
```

```
00005 #pragma once
00006
00007 #include <bitset>
00008 #include <cstdint>
00009 #include <iosfwd>
00010 #include <map>
00011 #include <string>
00012
00013 class DIFSlowControl
00014 {
00015 public:
00017
00022
        DIFSlowControl(const std::uint8_t& version, const std::uint8_t& DIFid, unsigned char* buf);
00023
00025
        std::uint8_t getDIFId();
00026
00028
00031
        std::map<int, std::map<std::string, int» getChipsMap();
00032
00034
00038
        std::map<std::string, int> getChipSlowControl(const int& asicid);
00039
00041
00045
        int getChipSlowControl(const std::int8_t& asicid, const std::string& param);
00046
        std::map<int, std::map<std::string, int»::const_iterator cbegin()const { return m_MapSC.cbegin(); }</pre>
00048
00049
        std::map<int, std::map<std::string, int>::const_iterator cend()const { return m_MapSC.cend(); }
00050
00051 private:
       DIFSlowControl() = delete;
00053
        void FillHR1(const int& header_shift, unsigned char* cbuf);
       void FillHR2(const int& header_shift, unsigned char* cbuf);
void FillAsicHR1(const std::bitset<72 * 8>& bs);
00057
00059
       void FillAsicHR2(const std::bitset<109 * 8>& bs);
00061
00062
00063
       unsigned int
                                                    m_DIFId{0}:
00064
       unsigned int
                                                    m_Version{0};
00065
       unsigned int
                                                    m_AsicType{0}; // asicType_
00066
        unsigned int
                                                    m_NbrAsic{0};
00067
       std::map<int, std::map<std::string, int» m_MapSC;
00068 };
00069
00070 std::string to_string(const DIFSlowControl& c);
```

## 5.13 libs/core/include/Exception.h File Reference

```
#include <cstdint>
#include <exception>
#include <string>
```

## **Classes**

class Exception

## 5.13.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Exception.h.

# 5.14 Exception.h

### Go to the documentation of this file.

```
00005 #pragma once
00006
00007 #include <cstdint>
00008 #include <exception>
00009 #include <string>
00010
00011 class Exception
00012 {
00013 public:
00019
00020 private:
00021 void constructWhat()
00022 {
       if(m_Error == 0) m_What = m_Message;
00024
00025
           m_What = std::string("Error ") + std::to_string(m_Error) + std::string(" : ") + m_Message;
00026 }
00027 std::string m_What;
00028 std::string m_Message;
00029 std::int32_t m_Error{0};
00030 };
```

## 5.15 libs/core/include/Filesystem.h File Reference

```
#include <string>
```

#### **Functions**

- std::string path (const std::string &)
- std::string extension (const std::string &)
- std::string filename (const std::string &)

### 5.15.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Filesystem.h.

## 5.15.2 Function Documentation

5.16 Filesystem.h 67

```
5.15.2.1 extension() std::string extension (
                const std::string & file )
Definition at line 13 of file Filesystem.cc.
00015
        std::size_t position = file.find_last_of(".");
        return (std::string::npos == position || position == 0) ? "" : file.substr(position + 1);
00016
00017 }
5.15.2.2 filename() std::string filename (
                const std::string & file )
Definition at line 19 of file Filesystem.cc.
00020 {
        std::size_t position = file.find_last_of(".");
std::size_t pos = file.find_last_of("\\/");
00021
00022
00023 return (std::string::npos == pos) ? file.substr(0, position) : file.substr(pos + 1, position - pos - 1);
00024 }
5.15.2.3 path() std::string path (
               const std::string & file )
Definition at line 7 of file Filesystem.cc.
00009 std::size_t pos = file.find_last_of("\\");
00010 return (std::string::npos == pos) ? "" : file.substr(0, pos);
00011 }
```

# 5.16 Filesystem.h

# Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include <string>
00008
00009 std::string path(const std::string&);
00010 std::string extension(const std::string&);
00011 std::string filename(const std::string&);
```

# 5.17 libs/core/include/Formatters.h File Reference

```
#include "Bits.h"
#include <iosfwd>
#include <string>
```

### **Functions**

```
• std::string to_dec (const Buffer &b, const std::size_t &begin=0, const std::size_t &end=-1)
• std::string to_dec (const bit8_t &)
• std::string to dec (const bit16 t &)
• std::string to_dec (const bit32_t &)

    std::string to_dec (const bit64_t &)

    std::string to_hex (const Buffer &b, const std::size_t &begin=0, const std::size_t &end=-1)

• std::string to_hex (const bit8_t &)

    std::string to hex (const bit16 t &)

• std::string to_hex (const bit32_t &)
• std::string to hex (const bit64 t &)

    std::string to_bin (const Buffer &b, const std::size_t &begin=0, const std::size_t &end=-1)

• std::string to_bin (const bit8_t &)

    std::string to_bin (const bit16_t &)

• std::string to bin (const bit32 t &)

    std::string to_bin (const bit64_t &)

    std::string to_oct (const Buffer &b, const std::size_t &begin=0, const std::size_t &end=-1)

• std::string to_oct (const bit8_t &)
• std::string to_oct (const bit16_t &)
• std::string to_oct (const bit32_t &)

    std::string to_oct (const bit64_t &)
```

# 5.17.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Formatters.h.

# 5.17.2 Function Documentation

```
5.17.2.3 to_bin() [3/5] std::string to_bin (
               const bit64_t & b )
Definition at line 75 of file Formatters.cc.
00075 { return fmt::format("{:#064b}", b); }
5.17.2.4 to bin() [4/5] std::string to_bin (
               const bit8_t & b )
Definition at line 69 of file Formatters.cc.
00069 { return fmt::format("{:#08b}", b); }
5.17.2.5 to_bin() [5/5] std::string to_bin (
               const Buffer & b,
               const std::size_t & begin = 0,
               const std::size_t & end = -1)
Definition at line 56 of file Formatters.cc.
       std::size_t iend = end;
if(iend == -1) iend = b.size();
std::string ret;
00058
00059
00060
00061
       for(std::size_t k = begin; k < iend; k++)</pre>
00066 return ret;
00067 }
5.17.2.6 to_dec() [1/5] std::string to_dec (
               const bit16_t & b )
Definition at line 29 of file Formatters.cc.
00029 { return fmt::format("{:#d}", b); }
5.17.2.7 to_dec() [2/5] std::string to_dec (
               const bit32_t & b )
Definition at line 31 of file Formatters.cc.
00031 { return fmt::format("{:#d}", b); }
5.17.2.8 to_dec() [3/5] std::string to_dec (
               const bit64_t & b )
Definition at line 33 of file Formatters.cc.
00033 { return fmt::format("{:#d}", b); }
```

```
5.17.2.9 to_dec() [4/5] std::string to_dec (
                const bit8_t & b )
Definition at line 27 of file Formatters.cc.
00027 { return fmt::format("{:#d}", b); }
5.17.2.10 to_dec() [5/5] std::string to_dec (
                const Buffer & b,
                const std::size_t & begin = 0,
                const std::size_t & end = -1)
Definition at line 14 of file Formatters.cc.
        std::size_t iend = end;
if(iend == -1) iend = b.size();
std::string ret;
for(std::size_t k = begin; k < iend; k++)</pre>
00016
00017
00018
00019
        ret += to_dec(b[k]);
ret += " - ";
00021
00022
00023
00023 }
00024 return ret;
00025 }
5.17.2.11 to_hex() [1/5] std::string to_hex (
                const bit16_t & b )
Definition at line 50 of file Formatters.cc.
00050 { return fmt::format("{:#04x}", b); }
5.17.2.12 to_hex() [2/5] std::string to_hex (
               const bit32_t & b )
Definition at line 52 of file Formatters.cc.
00052 { return fmt::format("{:#08x}", b); }
5.17.2.13 to_hex() [3/5] std::string to_hex (
                const bit64_t & b )
Definition at line 54 of file Formatters.cc.
00054 { return fmt::format("{:#016x}", b); }
5.17.2.14 to_hex() [4/5] std::string to_hex (
                const bit8_t & b )
Definition at line 48 of file Formatters.cc.
00048 { return fmt::format("{:#02x}", b); }
```

```
5.17.2.15 to_hex() [5/5] std::string to_hex (
                const Buffer & b,
                const std::size_t & begin = 0,
                const std::size_t & end = -1 )
Definition at line 35 of file Formatters.cc.
 00036 {
         std::size_t iend = end;
if(iend == -1) iend = b.size();
 00037
 00038
         std::string ret;
00042 ret += to_hex(b[k]);

00043 ret += " - ";

00044 }

00045 return ret;
 00040
         for(std::size_t k = begin; k < iend; k++)</pre>
5.17.2.16 to_oct() [1/5] std::string to_oct (
                const bit16_t & b )
Definition at line 92 of file Formatters.cc.
 00092 { return fmt::format("{:#080}", b); }
5.17.2.17 to_oct() [2/5] std::string to_oct (
                const bit32_t & b )
Definition at line 94 of file Formatters.cc.
00094 { return fmt::format("{:#0160}", b); }
5.17.2.18 to_oct() [3/5] std::string to_oct (
                const bit64_t & b )
Definition at line 96 of file Formatters.cc.
00096 { return fmt::format("{:#0320}", b); }
5.17.2.19 to_oct() [4/5] std::string to_oct (
                const bit8_t & b )
Definition at line 90 of file Formatters.cc.
```

00090 { return fmt::format("{:#040}", b); }

```
5.17.2.20 to_oct() [5/5] std::string to_oct (
                const Buffer & b,
               const std::size_t & begin = 0,
                const std::size_t & end = -1)
Definition at line 77 of file Formatters.cc.
00078 {
00079
        std::size_t iend = end;
        if (iend == -1) iend = b.size();
08000
        std::string ret;
00082
        for(std::size_t k = begin; k < iend; k++)</pre>
       __. \ = be

. ret += to_oct(b[k]);

ret += " - ";

}
00083
00084
00085
00086
00087
        return ret;
00088 }
```

### 5.18 Formatters.h

### Go to the documentation of this file.

```
00005 #pragma once
00006
00007 #include "Bits.h"
80000
00009 #include <iosfwd>
00010 #include <string>
00012 class Buffer;
00013
00014 std::string to_dec(const Buffer& b, const std::size_t& begin = 0, const std::size_t& end = -1);
00015 std::string to_dec(const bit8_t&);
00016 std::string to_dec(const bit16_t&);
00017 std::string to_dec(const bit32_t&);
00018 std::string to_dec(const bit64_t&);
00019
00020 std::string to_hex(const Buffer& b, const std::size_t& begin = 0, const std::size_t& end = -1);
00021 std::string to_hex(const bit8_t&);
00022 std::string to_hex(const bit16_t&);
00023 std::string to_hex(const bit32_t&);
00024 std::string to_hex(const bit64_t&);
00025
00026 std::string to_bin(const Buffer& b, const std::size_t& begin = 0, const std::size_t& end = -1);
00027 std::string to_bin(const bit8_t&);
00028 std::string to_bin(const bit16_t&);
00029 std::string to_bin(const bit32_t&);
00030 std::string to_bin(const bit64_t&);
00031
00032 std::string to_oct(const Buffer& b, const std::size_t& begin = 0, const std::size_t& end = -1);
00033 std::string to_oct(const bit8_t&);
00034 std::string to_oct(const bit16_t&);
00035 std::string to_oct(const bit32_t&);
00036 std::string to_oct(const bit64_t&);
```

### 5.19 libs/core/include/Interface.h File Reference

```
#include "AppVersion.h"
#include "Buffer.h"
#include "Version.h"
#include <map>
#include <memory>
#include <semver.hpp>
#include <spdlog/logger.h>
#include <string>
```

5.20 Interface.h 73

#### **Classes**

- · class Interface
- · class InterfaceReader
- · class InterfaceWriter

### **Enumerations**

enum class InterfaceType { Unknown = 0 , Reader = 1 , Writer = 2 }
 template class should implement void SOURCE::start(); bool SOURCE::next(); void SOURCE::end(); const Buffer& SOURCE::getBuffer();

# 5.19.1 Detailed Description

### Copyright

2022 G.Grenier F.Lagarde

Definition in file Interface.h.

### 5.19.2 Enumeration Type Documentation

```
5.19.2.1 InterfaceType enum class InterfaceType [strong]
```

template class should implement void SOURCE::start(); bool SOURCE::next(); void SOURCE::end(); const Buffer& SOURCE::getBuffer();

void DESTINATION::begin(); void DESTINATION::processDIF(const DIFPtr&); void DESTINATION::process Frame(const DIFPtr&,const std::uint32\_t& frameIndex); void DESTINATION::processPadInFrame(const DIFPtr&,const std::uint32\_t& frameIndex,const std::uint32\_t& channeIIndex); void DESTINATION::processSlowControl(const Buffer&); void DESTINATION::end();

## **Enumerator**

Unknown	
Reader	
Writer	

Definition at line 31 of file Interface.h.

# 5.20 Interface.h

```
00001
00004 #pragma once
00005
00006 #include "AppVersion.h" 00007 #include "Buffer.h"
00008 #include "Version.h"
00010 #include <map>
00011 #include <memory>
00012 #include <semver.hpp>
00013 #include <spdlog/logger.h>
00014 #include <string>
00015
00031 enum class InterfaceType
00032 {
00033
       Unknown = 0,
       Reader = 1,
Writer = 2
00034
00035
00036 };
00037
00038 class Interface
00039 {
00040 public:
       Interface(const std::string& name, const std::string& version, const InterfaceType& type) :
00041
     m_Name(name), m_Version(version) {}
00042 virtual ~Interface() = default;
00043
        virtual void
                                          startEvent() {}
00044
       virtual void
                                          endEvent() {}
00045
       virtual void
                                          startDIF() {}
00046
       virtual void
                                          endDIF() {}
00047
       virtual void
                                          startFrame() {}
00048
       virtual void
                                          endFrame() {}
00049
        virtual void
                                          startPad() {}
00050
        virtual void
                                          endPad() {}
00051
        std::shared_ptr<spdlog::logger>& log() { return m_Logger; }
                                          setLogger(const std::shared_ptr<spdlog::logger>& logger) { m_Logger
00052
        void
      = logger; }
00053 std::string
                                          getName() { return m_Name; }
00054
       Version
                                          getVersion() { return m_Version; }
00055
00056 private:
       std::shared_ptr<spdlog::logger> m_Logger{nullptr};
00057
00058
        std::string
                                         m Name;
00059
                                         m_Version;
        Version
00060
       InterfaceType
                                         m_Type{InterfaceType::Unknown};
00061 };
00062
00063 class InterfaceReader : public Interface
00064 {
00065 public:
00066
       InterfaceReader(const std::string& name, const std::string& version) : Interface(name, version,
     InterfaceType::Reader) {}
00067
       virtual ~InterfaceReader() = default;
00068
00069 protected:
00070
       Buffer m_Buffer;
00071 };
00072
00073 class InterfaceWriter: public Interface
00074 {
00075 public:
00076
       InterfaceWriter(const std::string& name, const std::string& version) : Interface(name, version,
      InterfaceType::Writer) {}
00077
00078
       void addCompatibility(const std::string& name, const std::string& version) { m_Compatible[name] =
00079
        std::map<std::string, std::string> qetCompatibility() {    return m_Compatible; }
00080
00081
        bool checkCompatibility(const std::string& name, const std::string& version)
00083
00084
          if (m_Compatible.find(name) != m_Compatible.end())
00085
00086
                            ran = semver::range::detail::range(m_Compatible[name]);
           auto
00087
            semver::version ver = semver::version(version);
            if(ran.satisfies(ver, false)) return true;
00088
00089
00090
             return false;
00091
00092
          else
00093
            return false;
00094
00095
00096
        virtual ~InterfaceWriter() = default;
00097
00098 private:
00099
        std::map<std::string, std::string> m Compatible;
```

```
00100 };
```

# 5.21 libs/core/include/PayloadParser.h File Reference

```
#include "Bits.h"
#include "Buffer.h"
#include "Exception.h"
#include "Formatters.h"
#include "Utilities.h"
#include "Words.h"

#include <cstdint>
#include <spdlog/spdlog.h>
#include <string>
#include <vector>
```

#### Classes

class PayloadParser

# 5.21.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file PayloadParser.h.

# 5.22 PayloadParser.h

```
00001
00005 #pragma once
00006
00007 #include "Bits.h"
00008 #include "Buffer.h"
00009 #include "Exception.h"
00010 #include "Formatters.h"
00011 #include "Utilities.h"
00012 #include "Words.h"
00013
00014 #include <cstdint>
00015 #include <spdlog/spdlog.h>
00016 #include <string>
00017 #include <vector>
00018
00036 class PayloadParser : public Buffer
00037 {
00038 public:
        PayloadParser() = default;
00040
        void setBuffer(const Buffer& buffer)
00041
00042 {
         set (buffer);
00043
00044
          theFrames_.clear();
00045
          theLines_.clear();
          theGetFramePtrReturn_ = getFramePtr();
m_BadSCdata = false;
00046
00047
          m_BadSCdata
00048
00049
00050
        std::uint32_t getSizeAfterDIFPtr() { return size() - getGetFramePtrReturn(); }
00051
                       hasSlowControlData() { return begin()[getEndOfDIFData()] == 0xb1; }
```

```
00052
00053
        std::uint32_t getEndOfDIFData() { return getGetFramePtrReturn() + 3; }
00054
00055
        bool badSCData()
00056
00057
          setSCBuffer();
00058
          return m_BadSCdata;
00059
00060
00061
        std::uint32 t
                              getGetFramePtrReturn() const;
        std::vector<bit8_t*>& getFramesVector();
00062
00063
        std::vector<bit8_t*>& getLinesVector();
00064
        std::uint32_t
                              getID() const;
                               getDTC() const;
00065
        std::uint32_t
00066
        std::uint32_t
                               getGTC() const;
00067
        std::uint64_t
                               getAbsoluteBCID() const;
                               getBCID() const;
00068
        std::uint32 t
00069
                               getLines() const;
        std::uint32 t
00070
        bool
                               hasLine(const std::uint32_t&) const;
00071
                               getTASU1() const;
        std::uint32_t
00072
        std::uint32_t
                               getTASU2() const;
00073
        std::uint32_t
                               getTDIF() const;
00074
                               getTemperatureDIF() const;
        float
00075
                               getTemperatureASU1() const:
        float.
00076
                               getTemperatureASU2() const;
        float
00077
        bool
                               hasTemperature() const;
00078
                               hasAnalogReadout() const;
        bool
00079
        std::uint32_t
                               getNumberOfFrames() const;
00080
        bit8 t*
                               getFramePtr(const std::uint32_t&) const;
00081
        std::uint32 t
                               getFrameAsicHeader(const std::uint32_t&) const;
00082
        std::uint32 t
                               getFrameBCID(const std::uint32_t&) const;
00083
        std::uint32_t
                               getFrameTimeToTrigger(const std::uint32_t&) const;
                               getFrameLevel(const std::uint32_t&, const std::uint32_t&, const
00084
        bool
      std::uint32_t&) const;
00085
        // Addition by GG
00086
                               getDIFid() const;
        std::uint32 t
00087
                               getASICid(const std::uint32_t&) const;
        std::uint32 t
00088
        std::uint32_t
                               getThresholdStatus(const std::uint32_t&, const std::uint32_t&) const;
00089
        Buffer
                               getSCBuffer()
00090
00091
          setSCBuffer();
00092
         return m_SCbuffer;
00093
00094
        Buffer getEndOfAllData()
00095
00096
          setSCBuffer();
00097
          if(hasSlowControlData() && !m_BadSCdata) { return Buffer(&(m_SCbuffer.begin()[m_SCbuffer.size()]),
      getSizeAfterDIFPtr() - 3 - m_SCbuffer.size()); }
00098
         else
            return Buffer(&(begin()[getEndOfDIFData()]), getSizeAfterDIFPtr() - 3); // remove the 2 bytes
00099
      for CRC and the DIF trailer
00100
00101
        std::uint32_t getDIF_CRC()
00102
          uint32_t i{getEndOfDIFData()};
00103
          uint32_t ret{0};
00104
          ret |= ((begin()[i - 2]) « 8);
00106
          ret |= begin()[i - 1];
00107
          return ret;
00108
        void setSCBuffer()
00109
00110
00111
          if(!hasSlowControlData()) return;
          if(m_SCbuffer.size() != 0) return; // deja fait
00112
00113
          if(m_BadSCdata) return;
00114
          m_SCbuffer.set(&(begin()[getEndOfDIFData()]));
00115
          // compute Slow Control size
          std::size_t maxsize{size() - getEndOfDIFData() + 1}; // should I +1 here ?
00116
                                                                  // SC Header
00117
          uint32_t
                     k{1};
                      dif_ID{m_SCbuffer[1]};
00118
          uint32_t
00119
                      chipSize{m_SCbuffer[3]};
          uint32_t
00120
          while((dif_ID != 0xa1 && m_SCbuffer[k] != 0xa1 && k < maxsize) || (dif_ID == 0xa1 && m_SCbuffer[k]</pre>
     + 2] == chipSize && k < maxsize))
00121
            k += 2; // DIF ID + ASIC Header
uint32_t scsize = m_SCbuffer[k];
00122
00123
            if(scsize != 74 && scsize != 109)
00124
00125
00126
              m BadSCdata = true;
00127
              throw Exception(fmt::format("PROBLEM WITH SC SIZE {}", scsize));
00128
00129
00130
                           // skip size bit
            k += scsize; // skip the data
00131
00132
          if(m_SCbuffer[k] == 0xal && !m_BadSCdata) m_SCbuffer.setSize(k + 1); // add the trailer
00133
00134
          else
```

```
00135
         {
00136
            m BadSCdata = true;
00137
            throw Exception(fmt::format("PROBLEM SC TRAILER NOT FOUND "));
00138
         }
00139
00140
00141 private:
00142
        std::uint16_t
                             m_Version{13};
00143
        std::uint32_t
                             getAnalogPtr(const std::uint32_t& idx = 0);
00144
        std::uint32 t
                             getFrameAsicHeaderInternal(const unsigned char* framePtr) const;
00145
        std::uint32 t
                             getFramePtr();
00146
        std::uint32 t
                             theGetFramePtrReturn {0};
        std::vector<bit8_t*> theFrames_;
00147
00148
        std::vector<bit8_t*> theLines_;
00149
        bool
                            m_BadSCdata{false};
00150
       Buffer
                             m_SCbuffer;
00151 };
00152
00153 inline std::uint32_t PayloadParser::getFrameAsicHeaderInternal(const bit8_t* framePtr)const { return
      (framePtr[DU::FRAME_ASIC_HEADER_SHIFT]); }
00154
00155 inline std::uint32_t PayloadParser::getGetFramePtrReturn()const { return theGetFramePtrReturn_; }
00156
00157 inline std::vector<br/>bit8 t*>& PayloadParser::getFramesVector() { return theFrames ; }
00158
00159 inline std::vector<bit8_t*>& PayloadParser::getLinesVector() { return theLines_; }
00160
00161 inline std::uint32_t PayloadParser::getID()const { return begin()[DU::ID_SHIFT]; }
00162
00163 inline std::uint32_t PayloadParser::getDTC()const { return (begin()[DU::DTC_SHIFT] « 24) +
      (begin()[DU::DTC_SHIFT + 1] « 16) + (begin()[DU::DTC_SHIFT + 2] « 8) + begin()[DU::DTC_SHIFT + 3]; }
00164
00165 inline std::uint32_t PayloadParser::getGTC()const { return (begin()[DU::GTC_SHIFT] « 24) +
      (begin()[DU::GTC_SHIFT + 1] « 16) + (begin()[DU::GTC_SHIFT + 2] « 8) + begin()[DU::GTC_SHIFT + 3]; }
00166
00167 inline std::uint64 t PavloadParser::getAbsoluteBCID()const
00168 {
00169
        std::uint64_t LBC = ((begin()[DU::ABCID_SHIFT] « 16) | (begin()[DU::ABCID_SHIFT + 1] « 8) |
      (begin()[DU::ABCID_SHIFT + 2])) * 16777216ULL /* to shift the value from the 24 first bits*/
                          + ((begin()[DU::ABCID_SHIFT + 3] « 16) | (begin()[DU::ABCID_SHIFT + 4] « 8) |
00170
      (begin()[DU::ABCID_SHIFT + 5]));
00171
        return LBC;
00172 }
00173
00174 inline std::uint32_t PayloadParser::getBCID()const { return (begin()[DU::BCID_SHIFT] « 16) +
      (begin()[DU::BCID_SHIFT + 1] « 8) + begin()[DU::BCID_SHIFT + 2]; }
00175
00176 inline std::uint32_t PayloadParser::getLines()const { return (begin()[DU::LINES_SHIFT] » 4) & 0x5; }
00177
00178 inline bool PayloadParser::hasLine(const std::uint32 t& line)const { return ((begin()[DU::LINES SHIFT]
      » line) & 0x1); }
00179
00180 inline std::uint32_t PayloadParser::getTASU1()const { return (begin()[DU::TASU1_SHIFT] « 24) +
      (begin()[DU::TASU1_SHIFT + 1] « 16) + (begin()[DU::TASU1_SHIFT + 2] « 8) + begin()[DU::TASU1_SHIFT +
      3]; }
00181
00182 inline std::uint32_t PayloadParser::getTASU2()const { return (begin()[DU::TASU2_SHIFT] « 24) +
      (begin()[DU::TASU2 SHIFT + 1] « 16) + (begin()[DU::TASU2 SHIFT + 2] « 8) + begin()[DU::TASU2 SHIFT +
      3]; }
00183
00184 inline std::uint32 t PayloadParser::getTDIF()const { return begin()[DU::TDIF SHIFT]; }
00185
00186 inline float PayloadParser::getTemperatureDIF()const { return 0.508 * getTDIF() - 9.659; }
00187
00188 inline float PayloadParser::getTemperatureASU1()const { return (getTASU1() » 3) * 0.0625; }
00189
00190 inline float PayloadParser::getTemperatureASU2()const { return (getTASU2() » 3) * 0.0625; }
00191
00192 inline bool PayloadParser::hasTemperature()const { return (begin()[0] == DU::START OF DIF TEMP); }
00193
00194 inline bool PayloadParser::hasAnalogReadout()const { return getLines() != 0; }
00195
00196 inline std::uint32_t PayloadParser::getNumberOfFrames()const { return theFrames_.size(); }
00197
00198 inline bit8_t* PayloadParser::getFramePtr(const std::uint32_t& i)const { return theFrames_[i]; }
00199
00200 inline std::uint32_t PayloadParser::getFrameAsicHeader(const std::uint32_t& i)const { return
      getFrameAsicHeaderInternal(theFrames_[i]); }
00201
00202 inline std::uint32_t PayloadParser::getFrameBCID(const std::uint32 t& i)const { return
      GrayToBin((theFrames_[i][DU::FRAME_BCID_SHIFT] « 16) + (theFrames_[i][DU::FRAME_BCID_SHIFT + 1] « 8) +
      theFrames_[i][DU::FRAME_BCID_SHIFT + 2]); }
00203
00204 inline std::uint32_t PayloadParser::getFrameTimeToTrigger(const std::uint32_t& i)const { return
      getBCID() - getFrameBCID(i); }
00205
00206 inline bool PayloadParser::getFrameLevel(const std::uint32 t& i, const std::uint32 t& ipad, const
```

```
std::uint32_t& ilevel)const
00207 {
        return ((theFrames_[i][DU::FRAME_DATA_SHIFT + ((3 - ipad / 16) * 4 + (ipad % 16) / 4)] » (7 -
00208
      (((ipad % 16) % 4) * 2 + ilevel))) & 0x1);
00209 }
00210 // Addition by GG
00211 inline uint32_t PayloadParser::getDIFid()const { return getID() & 0xFF; }
00212
00213 inline uint32_t PayloadParser::getASICid(const std::uint32_t& i)const { return getFrameAsicHeader(i) &
      0xFF; }
00214
00215 inline uint32_t PayloadParser::getThresholdStatus(const std::uint32_t& i, const std::uint32_t&
      ipad)const { return (((std::uint32_t)getFrameLevel(i, ipad, 1)) « 1) |
      ((std::uint32_t)getFrameLevel(i, ipad, 0)); }
00216
00217 inline std::uint32_t PayloadParser::getFramePtr()
00218 {
00219
        std::uint32 t fshift{0};
        if (m_Version >= 13)
00221
00222
         fshift = DU::LINES_SHIFT + 1;
00223
          if(hasTemperature()) fshift = DU::TDIF_SHIFT + 1;
                                                                  // jenlev 1
          if(hasAnalogReadout()) fshift = getAnalogPtr(fshift); // to be implemented
00224
00225
00226
       else
00227
         fshift = DU::BCID_SHIFT + 3;
00228
       if(begin()[fshift] != DU::START_OF_FRAME) { throw Exception(fmt::format("This is not a start of
     frame {}", to_hex(begin()[fshift]))); }
00229
       do {
00230
          if(begin()[fshift] == DU::END_OF_DIF) return fshift;
00231
          if(begin()[fshift] == DU::START_OF_FRAME) fshift++;
00232
          if(begin()[fshift] == DU::END_OF_FRAME)
00233
00234
            fshift++;
00235
           continue;
00236
          std::uint32_t header = getFrameAsicHeaderInternal(&begin()[fshift]);
00237
          if(header == DU::END_OF_FRAME) return (fshift + 2);
00238
00239
          if(header < 1 || header > 48) { throw Exception(fmt::format("{} Header problem {}", header,
     fshift)); }
00240
          theFrames_.push_back(&begin()[fshift]);
00241
          fshift += DU::FRAME_SIZE;
          if(fshift > size()) { throw Exception(fmt::format("fshift {} exceed {}", fshift, size())); }
00242
00243
          if(begin()[fshift] == DU::END_OF_FRAME) fshift++;
00244
       } while(true);
00245 }
00246
00247 inline std::uint32_t PayloadParser::getAnalogPtr(const std::uint32_t& idx)
00248 {
00249
       std::uint32 t fshift{idx};
00250
        if(begin()[fshift] != DU::START_OF_LINES) return fshift;
00251
        fshift++;
00252
        while (begin()[fshift] != DU::END_OF_LINES)
00253
00254
         theLines_.push_back(&begin()[fshift]);
00255
          std::uint32_t nchip{begin()[fshift]};
          fshift += 1 + nchip * 64 * 2;
00257
00258
        return fshift++;
00259 }
```

### 5.23 libs/core/include/RawBufferNavigator.h File Reference

```
#include "Buffer.h"
```

# Classes

· class RawBufferNavigator

class to navigate in the raw data buffer parse the header and send the payload as Buffer

## 5.23.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file RawBufferNavigator.h.

# 5.24 RawBufferNavigator.h

### Go to the documentation of this file.

```
00005 #pragma once
00006
00007 #include "Buffer.h"
80000
00013 class RawBufferNavigator
00014 {
00015 public:
00016 static void StartAt(cc
00017 RawBufferNavigator();
         static void StartAt(const int& start);
         ~RawBufferNavigator() = default;
void setBuffer(const Buffer&);
00018
00019
         std::uint8_t getDetectorID();
bool findStartOfPayload();
00020
00021
00022
          std::int32_t getStartOfPayload();
                   valiαray.c...
getPayload();
00023
          bool
                           validPayload();
         Buffer
00024
00025
00026 private:
00027 static int m_Start;
00028 Buffer m_Buffer;
00029 bool m StartPa
00029 bool m_StartPayloadDone{false};
00030 std::int32_t m_StartPayload{-1}; // -1 Means not found !
00031 };
```

# 5.25 libs/core/include/Timer.h File Reference

#include <chrono>

### **Classes**

class Timer

# 5.25.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Timer.h.

### 5.26 Timer.h

#### Go to the documentation of this file.

# 5.27 libs/core/include/Utilities.h File Reference

```
#include <cstdint>
```

### **Functions**

• std::uint64\_t GrayToBin (const std::uint64\_t &n)

### 5.27.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Utilities.h.

### 5.27.2 Function Documentation

```
5.27.2.1 GrayToBin() std::uint64_t GrayToBin ( const std::uint64_t & n ) [inline]
```

#### Definition at line 9 of file Utilities.h.

```
00010 {
00011
         std::uint64_t ish{1};
00012
         std::uint64_t anss{n};
00013
         std::uint64_t idiv{0};
00014
         std::uint64_t ishmax{sizeof(std::uint64_t) * 8};
00015
        while (true)
00016
          idiv = anss » ish;
anss ^= idiv;
if(idiv <= 1 || ish == ishmax) return anss;</pre>
00017
00018
00019
00020
           ish «= 1;
00021 }
00022 }
```

5.28 Utilities.h 81

# 5.28 Utilities.h

Go to the documentation of this file.

```
00005 #pragma once
00006
00007 #include <cstdint>
80000
00009 inline std::uint64_t GrayToBin(const std::uint64_t& n)
00010 {
00011
       std::uint64_t ish{1};
00012
       std::uint64_t anss{n};
00013
       std::uint64_t idiv{0};
       std::uint64_t ishmax{sizeof(std::uint64_t) * 8};
00014
00015
       while (true)
00016
         idiv = anss » ish;
00018
        anss ^= idiv;
00019
          if(idiv <= 1 || ish == ishmax) return anss;</pre>
00020
         ish «= 1;
00021
00022 }
```

### 5.29 libs/core/include/Version.h File Reference

```
#include <cstdint>
#include <semver.hpp>
#include <string>
```

### **Classes**

· class Version

### 5.29.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Version.h.

# 5.30 Version.h

```
00001
00005 #pragma once
00006
00007 #include <cstdint>
00008 #include <semver.hpp>
00009 #include <string>
00010
00011 class Version : public semver::version
00012 {
00013 public:
00014 Version(const std::uint8_t& mj, const std::uint8_t& mn, const std::uint8_t& pt, const
      semver::prerelease& prt = semver::prerelease::none, const std::uint8_t& prn = 0) noexcept :
      semver::version(mj, mn, pt, prt, prn) {}
explicit Version(const std::string_view& str) : semver::version(str) {}
00016 Version() = default;
00017
        std::uint8_t getMajor();
00018
        std::uint8_t getMinor();
00019
        std::uint8_t getPatch();
00020 std::string getPreRelease();
00021 std::uint8_t getPreReleaseNumber();
00022 };
```

# 5.31 libs/core/include/Words.h File Reference

```
#include <cstdint>
```

### **Enumerations**

```
    enum DU: std::uint8_t {
        START_OF_DIF = 0xB0 , START_OF_DIF_TEMP = 0xBB , END_OF_DIF = 0xA0 , START_OF_LINES = 0xC4 ,
        END_OF_LINES = 0xD4 , START_OF_FRAME = 0xB4 , END_OF_FRAME = 0xA3 , ID_SHIFT = 1 ,
        DTC_SHIFT = 2 , GTC_SHIFT = 10 , ABCID_SHIFT = 14 , BCID_SHIFT = 20 ,
        LINES_SHIFT = 23 , TASU1_SHIFT = 24 , TASU2_SHIFT = 28 , TDIF_SHIFT = 32 ,
        FRAME_ASIC_HEADER_SHIFT = 0 , FRAME_BCID_SHIFT = 1 , FRAME_DATA_SHIFT = 4 , FRAME_SIZE = 20 ,
        NUMBER_PAD = 64 }
```

# 5.31.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Words.h.

# 5.31.2 Enumeration Type Documentation

# $\textbf{5.31.2.1} \quad \textbf{DU} \quad \texttt{enum DU} \; : \quad \texttt{std::uint8\_t}$

### Enumerator

START_OF_DIF	
START_OF_DIF_TEMP	
END_OF_DIF	
START_OF_LINES	
END_OF_LINES	
START_OF_FRAME	
END_OF_FRAME	
ID_SHIFT	
DTC_SHIFT	
GTC_SHIFT	
ABCID_SHIFT	
BCID_SHIFT	
LINES_SHIFT	
TASU1_SHIFT	
TASU2_SHIFT	
TDIF_SHIFT	
FRAME_ASIC_HEADER_SHIFT	
FRAME_BCID_SHIFT	
FRAME_DATA_SHIFT	
FRAME_SIZE	

NUMBER\_PAD

5.32 Words.h 83

## Definition at line 9 of file Words.h.

```
00011
         START_OF_DIF
                             = 0xB0,
         START_OF_DIF_TEMP = 0xBB,
00012
                          = 0xA0,
         END_OF_DIF
START_OF_LINES
00013
00014
                             = 0xC4,
00015
        END_OF_LINES
                             = 0xD4
00016
00017
        START_OF_FRAME = 0xB4,
00018
        END\_OF\_FRAME = 0xA3,
00019
00020
        ID SHIFT
        DTC_SHIFT = 2,
GTC_SHIFT = 10,
00021
00022
00023
         ABCID_SHIFT = 14,
        BCID_SHIFT = 20,
LINES_SHIFT = 23,
00024
00025
        TASU1_SHIFT = 24,
TASU2_SHIFT = 28,
00026
00027
00028
        TDIF_SHIFT = 32,
00029
00030
        FRAME\_ASIC\_HEADER\_SHIFT = 0,
        FRAME_BCID_SHIFT
FRAME_DATA_SHIFT
00031
                              = 1,
= 4,
00032
00033
        FRAME_SIZE
                                    = 20,
00034
00035
        NUMBER_PAD = 64
00036 };
```

### 5.32 Words.h

### Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include <cstdint>
80000
00009 enum DU : std::uint8_t
00010 {
                         = 0xB0,
        START_OF_DIF = 0xB0,
START_OF_DIF_TEMP = 0xBB,
00011
00012
        END_OF_DIF = 0xA0,
START_OF_LINES = 0xC4,
00013
00014
00015
        END_OF_LINES
                            = 0xD4
00016
        START OF FRAME = 0xB4.
00017
00018
        END_OF_FRAME = 0xA3,
00019
00020
        ID_SHIFT
        DTC_SHIFT = 1,
GTC_SHIFT = 2,
00021
00022
        ABCID_SHIFT = 14,
00023
00024
        BCID\_SHIFT = 20,
        LINES_SHIFT = 23,
TASU1_SHIFT = 24,
00025
00026
00027
         TASU2\_SHIFT = 28,
00028
        TDIF_SHIFT = 32,
00029
        FRAME_ASIC_HEADER_SHIFT = 0,
FRAME_BCID_SHIFT = 1,
00030
00031
00032
        FRAME_DATA_SHIFT
        FRAME_SIZE
00034
00035
        NUMBER\_PAD = 64
00036 1:
```

# 5.33 libs/core/src/Bits.cc File Reference

```
#include "Bits.h"
```

### **Functions**

std::ostream & operator << (std::ostream &os, const bit8\_t &c)</li>
 Stream operator to print bit8\_t aka std::uint8\_t and not char or unsigned char.

### 5.33.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Bits.cc.

#### 5.33.2 Function Documentation

```
5.33.2.1 operator << () std::ostream & operator << ( std::ostream & os, const bit8_t & c )
```

Stream operator to print bit8\_t aka std::uint8\_t and not char or unsigned char.

Definition at line 8 of file Bits.cc. 00008 { return os « c + 0; }

#### 5.34 Bits.cc

Go to the documentation of this file.

```
00001
00006 #include "Bits.h"
00007
00008 std::ostream& operator«(std::ostream& os, const bit8_t& c) { return os « c + 0; }
```

# 5.35 libs/core/src/BufferLooperCounter.cc File Reference

```
#include "BufferLooperCounter.h"
#include <fmt/color.h>
#include <fmt/core.h>
```

# 5.36 BufferLooperCounter.cc

```
00001
00005 #include "BufferLooperCounter.h"
00007 #include <fmt/color.h>
00008 #include <fmt/core.h>
00009
00010 void BufferLooperCounter::printAllCounters()
00011 {
         \texttt{fmt::print} (\texttt{fg}(\texttt{fmt::color::crimson}) \; | \; \texttt{fmt::emphasis::bold}, \; \texttt{"BUFFER} \; \texttt{LOOP} \; \texttt{FINAL} \; \texttt{STATISTICS} \; : \; \\ \texttt{n"});
00012
         printCounter("Start of DIF header", DIFStarter);
printCounter("Value after DIF data are processed", DIFPtrValueAtReturnedPos);
00014
00015
         printCounter("Size remaining in buffer after end of DIF data", SizeAfterDIFPtr);
      fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, "Number of Slow Control found {} out of
which {} are bad\n", hasSlowControl, hasBadSlowControl);
00016
         printCounter("Size remaining after all of data have been processed", SizeAfterAllData);
00017
00018
         printCounter("Number on non zero values in end of data buffer", NonZeroValusAtEndOfData);
00019 }
00020
00021 void BufferLooperCounter::printCounter(const std::string& description, const std::map<int, int>& m)
00022 {
         std::string out{"statistics for " + description + " : \n"};
00023
00024
         for(std::map<int, int>::const_iterator it = m.begin(); it != m.end(); it++)
00025
           if(it != m.begin()) out += ",";
out += " [" + std::to_string(it->first) + "]=" + std::to_string(it->second);
00026
00027
00028
00029
         out += "\n";
00030
         fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, out);
00031 }
```

# 5.37 libs/core/src/DIFSlowControl.cc File Reference

```
#include "DIFSlowControl.h"
```

#### **Functions**

std::string to\_string (const DIFSlowControl &c)

### 5.37.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIFSlowControl.cc.

#### 5.37.2 Function Documentation

# Definition at line 256 of file DIFSlowControl.cc.

```
00257 {
00258     std::string ret;
00259     for(std::map<int, std::map<std::string, int»::const_iterator it = c.cbegin(); it != c.cend(); it++)
00260     {
          ret += "ASIC " + std::to_string(it->first) + " :\n";
          for(std::map<std::string, int>::const_iterator jt = (it->second).begin(); jt !=
               (it->second).end(); jt++) ret += jt->first + " : " + std::to_string(jt->second) + "\n";
00263     }
00264     return ret;
00265 }
```

# 5.38 DIFSlowControl.cc

```
00005 #include "DIFSlowControl.h"
00006
00007 DIFSlowControl::DIFSlowControl(const std::uint8_t& version, const std::uint8_t& DIfId, unsigned char*
      cbuf) : m_Version(version), m_DIFId(DIfId), m_AsicType(2)
00008 {
00009
        if(cbuf[0] != 0xb1) return;
00010
        int header_shift{6};
00011
        if (m_Version < 8) m_NbrAsic = cbuf[5];</pre>
00012
00013
        m_DIFId
                     = cbuf[1];
= cbuf[2];
00014
00015
         m NbrAsic
         header_shift = 3;
00016
00017
00018
       int size_hardroc1 = m_NbrAsic * 72 + header_shift + 1;
00019
       if (cbuf[size_hardroc1 - 1] != 0xa1) size_hardroc1 = 0;
00020
00021
       int size_hardroc2 = m_NbrAsic * 109 + header_shift + 1;
00022
       if(cbuf[size_hardroc2 - 1] != 0xal) size_hardroc2 = 0;
       if(size_hardroc1 != 0)
00023
```

```
00024
        {
00025
          FillHR1(header_shift, cbuf);
00026
          m_AsicType = 1;
00027
        else if(size_hardroc2 != 0)
00028
00029
          FillHR2 (header_shift, cbuf);
00030
        else
00031
          return;
00032 }
00033
00034 inline std::uint8_t DIFSlowControl::getDIFId() { return m_DIFId; }
00035
00036 inline std::map<int, std::map<std::string, int» DIFSlowControl::getChipsMap() { return m_MapSC; }
00037
00038 inline std::map<std::string, int> DIFSlowControl::getChipSlowControl(const int& asicid) { return
      m_MapSC[asicid]; }
00039
00040 inline int DIFSlowControl::getChipSlowControl(const std::int8 t& asicid, const std::string& param) {
      return getChipSlowControl(asicid)[param]; }
00041
00042 void DIFSlowControl::FillHR1(const int& header_shift, unsigned char* cbuf)
00043 {
00044
        int nasic{cbuf[header shift - 1]};
00045
        int idx{header_shift};
for(int k = 0; k < nasic; k++)</pre>
00046
00047
00048
          std::bitset<72 * 8> bs;
00049
           // printf("%x %x \n",cbuf[idx+k*72+69],cbuf[idx+k*72+70]);
           for(int 1 = 71; 1 >= 0; 1--)
00050
00051
00052
             // printf("%d %x : %d -->",l,cbuf[idx+k*72+1],(71-1)*8);
00053
             for (int m = 0; m < 8; m++)
00054
00055
               if(((1 < m) & cbuf[idx + k * 72 + 1]) != 0) bs.set((71 - 1) * 8 + m, 1);
00056
               bs.set((71 - 1) * 8 + m, 0);
// printf("%d",(int) bs[(71-1)*8+m]);
00057
00058
00059
00060
             // printf("\n");
00061
00062
          FillAsicHR1(bs);
00063
        }
00064 }
00065
00066 void DIFSlowControl::FillHR2(const int& header_shift, unsigned char* cbuf)
00067 {
00068
         // int scsize1=cbuf[header_shift-1] *109+(header_shift-1) +2;
00069
        int nasic{cbuf[header_shift - 1]};
00070
        int idx{header_shift};
// std::cout«" DIFSlowControl::FillHR nasic "«nasic«std::endl;
00071
00072
         for (int k = 0; k < nasic; k++)
00073
00074
           std::bitset<109 * 8> bs;
           // printf("%x %x \n",cbuf[idx+k*109+69],cbuf[idx+k*109+70]);
for(int 1 = 108; 1 >= 0; 1--)
00075
00076
00077
           {
00078
                 printf("%d %x : %d -->",l,cbuf[idx+k*109+1],(71-1)*8);
00079
             for (int m = 0; m < 8; m++)
00080
               if(((1 \times m) \& cbuf[idx + k * 109 + 1]) != 0) bs.set((108 - 1) * 8 + m, 1);
00081
00082
               else
                 bs.set((108 - 1) \star 8 + m, 0);
00083
00084
               // printf("%d",(int) bs[(71-1)*8+m]);
00085
00086
             // printf("\n");
00087
00088
          FillAsicHR2(bs);
00089
        }
00090 }
00092 void DIFSlowControl::FillAsicHR1(const std::bitset<72 * 8>& bs)
00093 {
00094
         // Asic Id
00095
        int asicid(0):
        for(int j = 0; j < 8; j++)
  if(bs[j + 9] != 0) asicid += (1 « (7 - j));</pre>
00096
00097
00098
        std::map<std::string, int> mAsic;
00099
        // Slow Control
mAsic["SSCO"]
00100
                                 = static_cast<int>(bs[575]);
        mAsic["SSC1"]
00101
                                 = static_cast<int>(bs[574]);
        mAsic["SSC2"]
                                  = static_cast<int>(bs[573]);
00102
00103
        mAsic["Choix_caisson"] = static_cast<int>(bs[572]);
00104
        mAsic["SW_50k"]
                                 = static_cast<int>(bs[571]);
        mAsic["SW_100k"]
00105
                                 = static_cast<int>(bs[570]);
        mAsic["SW_100f"]
00106
                                 = static_cast<int>(bs[569]);
        mAsic["SW 50f"]
                                 = static_cast<int>(bs[568]);
00107
00108
```

5.38 DIFSlowControl.cc 87

```
mAsic["Valid_DC"] = static_cast<int>(bs[567]);
mAsic["ON_Discri"] = static_cast<int>(bs[566]);
00110
          mAsic["ON_Fsb"] = static_cast<int>(bs[565]);
mAsic["ON_Otaq"] = static_cast<int>(bs[564]);
00111
00112
           mAsic["ON_W"]
                                     = static_cast<int>(bs[563]);
00113
           mAsic["ON_Ss"]
                                     = static_cast<int>(bs[562]);
00114
                                   = static_cast<int>(bs[561]);
= static_cast<int>(bs[560]);
           mAsic["ON_Buf"]
00115
00116
           mAsic["ON_Paf"]
00117
           // Gain
00118
           for (int i = 0; i < 64; i++)
00119
            int gain{0};
for(int j = 0; j < 6; j++)
  if(bs[176 + i * 6 + j] != 0) gain += (1 « j);
mAsic["Channel_" + std::to_string(i) + "_" + "Gain"]
mAsic["Channel_" + std::to_string(i) + "_" + "CTest"]</pre>
00120
00121
00122
00123
                                                                                                 = gain;
00124
                                                                                                 = bs[112 + i];
             mAsic["Channel_" + std::to_string(i) + "_" + "Valid_trig"] = static_cast<int>(bs[25 + i]);
00125
00126
          mAsic["ON_Otabg"] = static_cast<int>(bs[111]);
mAsic["ON_Dac"] = static_cast<int>(bs[110]);
mAsic["ON_Otadac"] = static_cast<int>(bs[109]);
00128
00129
00130
00131
           // DAC
           int dac1{0};
for(int j = 0; j < 10; j++)
  if(bs[j + 99] != 0) dac1 += (1 « j);</pre>
00132
00133
00134
00135
           mAsic["DAC1"] = dac1;
00136
           int dac0{0};
          for(int j = 0; j < 10; j++)
  if(bs[j + 89] != 0) dac0 += (1 « j);</pre>
00137
00138
           mAsic["DAC0"]
                                           = dac0;
00139
00140
          mAsic["EN_Raz_Ext"]
                                             = static_cast<int>(bs[23]);
           mAsic["EN_Raz_Int"]
                                              = static_cast<int>(bs[22]);
00141
00142
           mAsic["EN_Out_Raz_Int"] = static_cast<int>(bs[21]);
          mAsic["EN_Trig_Ext"]
mAsic["EN_Trig_Int"]
                                             = static_cast<int>(bs[20]);
00143
                                              = static_cast<int>(bs[19]);
00144
          masic["EN_Out_Trig_Int"] = static_cast<int>(bs[18]);
masic["Bypass_Chip"] = static_cast<int>(bs[17]);
00145
                                             = static_cast<int>(bs[17]);
00147
           mAsic["HardrocHeader"]
                                              = static_cast<int>(asicid);
00148
           mAsic["EN_Out_Discri"]
                                              = static_cast<int>(bs[8]);
00149
           mAsic["EN_Transmit_On"] = static_cast<int>(bs[7]);
          mAsic["EN_Dout"]
00150
                                             = static_cast<int>(bs[6]);
          mAsic["EN RamFull"]
                                             = static_cast<int>(bs[5]);
00151
00152
          m_MapSC[asicid]
                                              = mAsic;
00153 }
00154
00155 void DIFSlowControl::FillAsicHR2(const std::bitset<109 * 8>& bs)
00156 {
00157
           int asicid(0):
          for(int j = 0; j < 8; j++)
  if(bs[j + (108 - 7) * 8 + 2] != 0) asicid += (1 « (7 - j));</pre>
00158
00159
           std::map<std::string, int> mAsic;
00160
00161
           for(int i = 0; i < 64; i++)
00162
             int gain{0};
00163
00164
             int mask{0};
             int mask{0};
mAsic["Channel_" + std::to_string(i) + "_" + "cTest"] = bs[i];
for(int j = 0; j < 8; j++)
    if(bs[64 + i * 8 + j] != 0) gain += (1 « j);
mAsic["Channel_" + std::to_string(i) + "_" + "Gain"] = gain;
for(int j = 0; j < 3; j++)
    if(bs[8 * 77 + 2 + i * 3 + j] != 0) mask += (1 « j);
mAsic["Channel_" + std::to_string(i) + "_" + "Mask"] = mask;</pre>
00166
00167
00168
00169
00170
00171
00172
00173
           mAsic["PwrOnPA"] = static_cast<int>(bs[8 * 72]);
00174
           mAsic["Cmdb3SS"] = static\_cast < int > (bs[8 * 72 + 1]);
           mAsic["Cmdb2SS"] = static_cast<int>(bs[8 * 72 + 2]);
00175
           mAsic["Cmdb1SS"] = static_cast<int>(bs[8 * 72 + 3]);
00176
           mAsic["Cmdb0SS"] = static_cast<int>(bs[8 * 72 + 4]);
00177
          masic["SwSsc0"] = static_cast<int>(bs[8 * 72 + 5]);
mAsic["SwSsc1"] = static_cast<int>(bs[8 * 72 + 6]);
00178
00179
           mAsic["SwSsc2"] = static\_cast < int > (bs[8 * 72 + 7]);
00180
00181
           mAsic["PwrOnBuff"] = static_cast<int>(bs[8 * 73]);
00182
          mAsic["PwrOnSS"] = static_cast<int>(bs[8 * 73 + 1]);
mAsic["PwrOnW"] = static_cast<int>(bs[8 * 73 + 2]);
00183
00184
00185
           mAsic["Cmdb3Fsb2"] = static_cast<int>(bs[8 * 73 + 3]);
           mAsic["Cmdb2Fsb2"] = static_cast<int>(bs[8 * 73 + 4]);
mAsic["Cmdb1Fsb2"] = static_cast<int>(bs[8 * 73 + 5]);
00186
00187
          masic["Cmdb0Fsb2"] = static_cast<int>(bs[8 * 73 + 6]);
masic["Sw50k2"] = static_cast<int>(bs[8 * 73 + 7]);
00188
00189
00190
           mAsic["Sw100k2"] = static_cast<int>(bs[8 * 74]);
mAsic["Sw100f2"] = static_cast<int>(bs[8 * 74 + 1]);
mAsic["Sw50f2"] = static_cast<int>(bs[8 * 74 + 2]);
00191
00192
00193
           mAsic["Cmdb3Fsb1"] = static_cast<int>(bs[8 * 74 + 3]);
00194
00195
          mAsic["Cmdb2Fsb1"] = static_cast<int>(bs[8 * 74 + 4]);
```

```
mAsic["Cmdb1Fsb1"] = static_cast<int>(bs[8 * 74 + 5]);
         mAsic["Cmdb0Fsb1"] = static_cast<int>(bs[8 * 74 + 6]);
00197
00198
         mAsic["Sw50k1"]
                               = static_cast<int>(bs[8 * 74 + 7]);
00199
00200
         mAsic["Sw100k1"]
                             = static_cast<int>(bs[8 * 75]);
        masic["Sw100f1"] = static_cast<int>(bs[8 * 75 + 1]);
masic["Sw50f1"] = static_cast<int>(bs[8 * 75 + 2]);
masic["Sel0"] = static_cast<int>(bs[8 * 75 + 3]);
00201
00202
00203
         mAsic["Sel11"]
00204
                               = static_cast<int>(bs[8 * 75 + 4]);
         mAsic["PwrOnFsb"] = static_cast<int>(bs[8 * 75 + 5]);
00205
        mAsic["PwrOnFsb1"] = static_cast<int>(bs[8 * 75 + 6]);
00206
        mAsic["PwrOnFsb2"] = static_cast<int>(bs[8 * 75 + 7]);
00207
00208
00209
         mAsic["Sw50k0"]
                                 = static_cast<int>(bs[8 * 76]);
00210
         mAsic["Sw100k0"]
                                 = static_cast<int>(bs[8 \star 76 +
         mAsic["Sw100f0"]
mAsic["Sw50f0"]
                               = static_cast<int>(bs[8 * 76 + 2]);
00211
                                 = static_cast<int>(bs[8 \star 76 + 3]);
00212
         mAsic["EnOtaQ"]
                                 = static_cast<int>(bs[8 * 76 + 4]);
00213
         mAsic["OtaQ_PwrADC"] = static_cast<int>(bs[8 * 76 + 5]);
00214
         mAsic["Discri_PwrA"] = static_cast<int>(bs[8 * 76 + 6]);
00215
00216
        mAsic["Discri2"]
                                  = static_cast<int>(bs[8 * 76 + 7]);
00217
        mAsic["Discri1"]
00218
                                  = static_cast<int>(bs[8 * 77]);
        mAsic["RS_or_Discri"] = static_cast<int>(bs[8 * 77 + 1]);
00219
00220
00221
         mAsic["Header"] = asicid;
00222
         for (int i = 0; i < 3; i++)
00223
           int B = 0;
00224
           for (int j = 0; j < 10; j++)
if (bs[8 * 102 + 2 + i * 10 + j] != 0) B += (1 « j);
00225
00226
00227
           mAsic["B" + std::to_string(i)] = B;
00228
00229
        mAsic["Smalldac"] = static_cast<int>(bs[8 * 106]);
mAsic["DacSw"] = static_cast<int>(bs[8 * 106 + 1]);
00230
00231
         mAsic["OtagBgSw"] = static_cast<int>(bs[8 * 106 + 2]);
00232
         mAsic["Trig2b"]
                               = static_cast<int>(bs[8 * 106 + 3]);
                            = static_cast<int>(us[0 * 100 + 4]);
= static_cast<int>(bs[8 * 106 + 4]);
= static_cast<int>(bs[8 * 106 + 5]);
= static_cast<int>(bs[8 * 106 + 6]);
00234
         mAsic["Trig1b"]
00235
         mAsic["Trig0b"]
         mAsic["EnTrigOut"] = static_cast<int>(bs[8 * 106 + 6]);
00236
        mAsic["Discroror"] = static_cast<int>(bs[8 * 106 + 7]);
00237
00238
00239
        mAsic["TrigExtVal"]
                                  = static_cast<int>(bs[8 * 107]);
        mAsic["RazChnIntVal"] = static_cast<int>(bs[8 * 107 + 1]);
00240
00241
         mAsic["RazChnExtVal"] = static\_cast < int > (bs[8 * 107 + 2]);
        mAsic["ScOn"]
                              = static_cast<int>(bs[8 * 107 + 3]);
= static_cast<int>(bs[8 * 107 + 4]);
00242
00243
        mAsic["CLKMux"]
00244
         // EnoCDout1b EnoCDout2b EnoCTransmitOn1b EnoCTransmitOn2b EnoCChipsatb SelStartReadout
00245
      SelEndReadout
00246 mAsic["SelEndReadout"]
                                       = static_cast<int>(bs[8 * 108 + 1]);
         mAsic["SelStartReadout"] = static_cast<int>(bs[8 * 108 + 2]);
00247
        mAsic["EnoCchipsatb"] = static_cast<int>(bs[8 * 108 + 3]);
mAsic["EnoCTransmitOn2b"] = static_cast<int>(bs[8 * 108 + 4]);
00248
00249
00250
        mAsic["EnOCTransmitOn1b"] = static_cast<int>(bs[8 * 108 + 5]);
        mAsic["EnoCDout2b"] = static_cast<int>(bs[8 * 108 + 6]);
mAsic["EnoCDout1b"] = static_cast<int>(bs[8 * 108 + 7]);
00252
00253
        m_MapSC[asicid]
                                      = mAsic;
00254 }
00255
00256 std::string to_string(const DIFSlowControl& c)
00257 {
       std::string ret;
00258
00259
         for(std::map<int, std::map<std::string, int»::const_iterator it = c.cbegin(); it != c.cend(); it++)</pre>
00260
         ret += "ASIC " + std::to_string(it->first) + " :\n";
00261
      for (std::map<std::string, int>::const_iterator jt = (it->second).begin(); jt !=
(it->second).end(); jt++) ret += jt->first + " : " + std::to_string(jt->second) + "\n";
00262
00264
00265 }
```

## 5.39 libs/core/src/Filesystem.cc File Reference

#include "Filesystem.h"

# **Functions**

• std::string path (const std::string &file)

- std::string extension (const std::string &file)
- std::string filename (const std::string &file)

# 5.39.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Filesystem.cc.

#### 5.39.2 Function Documentation

**5.39.2.3 path()** std::string path (

Definition at line 7 of file Filesystem.cc.

const std::string & file )

std::size\_t pos = file.find\_last\_of("\\/");
return (std::string::npos == pos) ? "" : file.substr(0, pos);

00008 {

00009 00010 00011 }

# 5.40 Filesystem.cc

#### Go to the documentation of this file.

```
00005 #include "Filesystem.h"
00006
00007 std::string path(const std::string& file)
00008 {
         std::size_t pos = file.find_last_of("\\/");
return (std::string::npos == pos) ? "" : file.substr(0, pos);
00009
00010
00011 }
00012
00013 std::string extension(const std::string& file)
00014 {
         std::size_t position = file.find_last_of(".");
00015
         return (std::string::npos == position || position == 0) ? "" : file.substr(position + 1);
00016
00017 }
00019 std::string filename(const std::string& file)
00020 {
         std::size_t position = file.find_last_of(".");
std::size_t pos = file.find_last_of("\\/");
return (std::string::npos == pos) ? file.substr(0, position) : file.substr(pos + 1, position - pos
00021
00022
00023
00024 }
```

### 5.41 libs/core/src/Formatters.cc File Reference

```
#include "Formatters.h"
#include "Bits.h"
#include "Buffer.h"
#include "Words.h"
#include <fmt/format.h>
```

#### **Functions**

```
• std::string to_dec (const Buffer &b, const std::size_t &begin, const std::size_t &end)
• std::string to dec (const bit8 t &b)
• std::string to dec (const bit16 t &b)
• std::string to dec (const bit32 t &b)

    std::string to_dec (const bit64_t &b)

    std::string to_hex (const Buffer &b, const std::size_t &begin, const std::size_t &end)

std::string to_hex (const bit8_t &b)

    std::string to_hex (const bit16_t &b)

• std::string to_hex (const bit32_t &b)

    std::string to hex (const bit64 t &b)

    std::string to_bin (const Buffer &b, const std::size_t &begin, const std::size_t &end)

    std::string to_bin (const bit8_t &b)

    std::string to_bin (const bit16_t &b)

• std::string to_bin (const bit32_t &b)
• std::string to bin (const bit64 t &b)

    std::string to_oct (const Buffer &b, const std::size_t &begin, const std::size_t &end)

std::string to_oct (const bit8_t &b)

    std::string to_oct (const bit16_t &b)

    std::string to_oct (const bit32_t &b)

    std::string to oct (const bit64 t &b)
```

# 5.41.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Formatters.cc.

### 5.41.2 Function Documentation

00069 { return fmt::format("{:#08b}", b); }

```
5.41.2.5 to_bin() [5/5] std::string to_bin (
                const Buffer & b,
                const std::size_t & begin,
                const std::size_t & end )
Definition at line 56 of file Formatters.cc.
00057 {
00058
         std::size_t iend = end;
if(iend == -1) iend = b.size();
 00059
 00060
        std::string ret;
00063 ret += to_bin(b[k]);
00064 ret += " - ";
00065 }
00066 return ret;
 00061
         for(std::size_t k = begin; k < iend; k++)</pre>
5.41.2.6 to_dec() [1/5] std::string to_dec (
                const bit16_t & b )
Definition at line 29 of file Formatters.cc.
 00029 { return fmt::format("{:#d}", b); }
5.41.2.7 to_dec() [2/5] std::string to_dec (
                const bit32_t & b )
Definition at line 31 of file Formatters.cc.
00031 { return fmt::format("{:#d}", b); }
5.41.2.8 to_dec() [3/5] std::string to_dec (
                const bit64_t & b )
Definition at line 33 of file Formatters.cc.
00033 { return fmt::format("{:#d}", b); }
5.41.2.9 to_dec() [4/5] std::string to_dec (
                const bit8_t & b )
Definition at line 27 of file Formatters.cc.
00027 { return fmt::format("{:#d}", b); }
```

```
5.41.2.10 to_dec() [5/5] std::string to_dec (
                const Buffer & b,
                const std::size_t & begin,
                const std::size_t & end )
Definition at line 14 of file Formatters.cc.
 00015 {
         std::size_t iend = end;
if(iend == -1) iend = b.size();
 00016
 00017
        std::string ret;
00021 ret += to_dec(b[k]);

00022 ret += " - ";

00023 }

00024 return ret;
 00019
         for(std::size_t k = begin; k < iend; k++)</pre>
5.41.2.11 to_hex() [1/5] std::string to_hex (
                const bit16_t & b )
Definition at line 50 of file Formatters.cc.
 00050 { return fmt::format("{:#04x}", b); }
5.41.2.12 to_hex() [2/5] std::string to_hex (
                const bit32_t & b )
Definition at line 52 of file Formatters.cc.
00052 { return fmt::format("{:#08x}", b); }
5.41.2.13 to_hex() [3/5] std::string to_hex (
                const bit64_t & b )
Definition at line 54 of file Formatters.cc.
00054 { return fmt::format("{:#016x}", b); }
5.41.2.14 to_hex() [4/5] std::string to_hex (
                const bit8_t & b )
Definition at line 48 of file Formatters.cc.
```

00048 { return fmt::format("{:#02x}", b); }

```
5.41.2.15 to_hex() [5/5] std::string to_hex (
                const Buffer & b,
                const std::size_t & begin,
                const std::size_t & end )
Definition at line 35 of file Formatters.cc.
 00036 {
        std::size_t iend = end;
if(iend == -1) iend = b.size();
 00037
 00038
        std::string ret;
00042 ret += to_hex(b[k]);

00043 ret += " - ";

00044 }

00045 return ret;
 00040
         for(std::size_t k = begin; k < iend; k++)</pre>
5.41.2.16 to_oct() [1/5] std::string to_oct (
                const bit16_t & b )
Definition at line 92 of file Formatters.cc.
 00092 { return fmt::format("{:#080}", b); }
5.41.2.17 to_oct() [2/5] std::string to_oct (
                const bit32_t & b )
Definition at line 94 of file Formatters.cc.
00094 { return fmt::format("{:#0160}", b); }
5.41.2.18 to_oct() [3/5] std::string to_oct (
                const bit64_t & b )
Definition at line 96 of file Formatters.cc.
00096 { return fmt::format("{:#0320}", b); }
5.41.2.19 to_oct() [4/5] std::string to_oct (
                const bit8_t & b )
Definition at line 90 of file Formatters.cc.
00090 { return fmt::format("{:#040}", b); }
```

5.42 Formatters.cc 95

```
5.41.2.20 to_oct() [5/5] std::string to_oct (
              const Buffer & b,
              const std::size_t & begin,
               const std::size_t & end )
Definition at line 77 of file Formatters.cc.
00078
        std::size_t iend = end;
08000
        if (iend == -1) iend = b.size();
00081
        std::string ret;
00082
        for(std::size_t k = begin; k < iend; k++)</pre>
00083
00084
         ret += to_oct(b[k]);
00085
         ret += " - ";
00086
00087
       return ret;
00088 }
```

### 5.42 Formatters.cc

```
00001
00006 #include "Formatters.h"
00007
00008 #include "Bits.h"
00009 #include "Buffer.h"
00010 #include "Words.h"
00011
00012 #include <fmt/format.h>
00013
00014 std::string to_dec(const Buffer& b, const std::size_t& begin, const std::size_t& end)
00015 {
00016
        std::size_t iend = end;
        if(iend == -1) iend = b.size();
00017
00018
        std::string ret;
00019
        for(std::size_t k = begin; k < iend; k++)</pre>
       ret += to_dec(b[k]);
ret += " - ";
}
00020
00021
00022
00023
00024
        return ret:
00025 }
00026
00027 std::string to_dec(const bit8_t& b) { return fmt::format("{:#d}", b); }
00028
00029 std::string to_dec(const bit16_t& b) { return fmt::format("{:#d}", b); }
00030
00031 std::string to_dec(const bit32_t& b) { return fmt::format("{:#d}", b); }
00032
00033 std::string to_dec(const bit64_t& b) { return fmt::format("{:#d}", b); }
00034
00035 std::string to_hex(const Buffer& b, const std::size_t& begin, const std::size_t& end)
00036 {
00037
        std::size_t iend = end;
00038
        <u>if</u>(iend == -1) iend = b.size();
00039
        std::string ret;
00040
        for(std::size_t k = begin; k < iend; k++)</pre>
00041
00042
          ret += to hex(b[k]);
        ret += " - ";
00043
00044
00045
        return ret;
00046 }
00047
00048 std::string to_hex(const bit8_t& b) { return fmt::format("{:#02x}", b); }
00049
00050 std::string to_hex(const bit16_t& b) { return fmt::format("{:#04x}", b); }
00051
00052 std::string to_hex(const bit32_t& b) { return fmt::format("{:#08x}", b); }
00053
00054 std::string to_hex(const bit64_t& b) { return fmt::format("{:\#016x}", b); }
00055
00056 std::string to_bin(const Buffer& b, const std::size_t& begin, const std::size_t& end)
00057 {
00058
        std::size_t iend = end;
00059
        if(iend == -1) iend = b.size();
00060
        std::string ret;
for(std::size_t k = begin; k < iend; k++)</pre>
00061
00062
        {
00063
          ret += to_bin(b[k]);
```

```
ret += " - ";
00065
        return ret;
00066
00067 }
00068
00069 std::string to_bin(const bit8_t& b) { return fmt::format("{:#08b}", b); }
00070
00071 std::string to_bin(const bit16_t& b) { return fmt::format("{:#016b}", b); }
00072
00073 std::string to_bin(const bit32_t& b) { return fmt::format("{:#032b}", b); }
00074
00075 std::string to_bin(const bit64_t& b) { return fmt::format("{:#064b}", b); }
00076
00077 std::string to_oct(const Buffer& b, const std::size_t& begin, const std::size_t& end)
00078 {
00079
       std::size_t iend = end;
08000
        if(iend == -1) iend = b.size();
00081
       std::string ret;
00082
       for(std::size_t k = begin; k < iend; k++)</pre>
00083
        ret += to_oct(b[k]);
ret += " - ";
00084
00085
00086
00087
       return ret;
00088 }
00090 std::string to_oct(const bit8_t& b) { return fmt::format("{:#040}", b); }
00091
00092 std::string to_oct(const bit16_t& b) { return fmt::format("{:#080}", b); }
00093
00094 std::string to_oct(const bit32_t& b) { return fmt::format("{:#0160}", b); }
00095
00096 std::string to_oct(const bit64_t& b) { return fmt::format("{:#0320}", b); }
```

# 5.43 libs/core/src/RawBufferNavigator.cc File Reference

```
#include "RawBufferNavigator.h"
#include "Words.h"
```

### 5.43.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file RawBufferNavigator.cc.

# 5.44 RawBufferNavigator.cc

```
00001
00005 #include "RawBufferNavigator.h"
00006
00007 #include "Words.h"
00009 int RawBufferNavigator::m_Start = 92;
00010
00011 void RawBufferNavigator::StartAt(const int& start)
00012 {
        if(start >= 0) m_Start = start;
00013
00014 }
00015
00016 RawBufferNavigator::RawBufferNavigator() {}
00017
00018 void RawBufferNavigator::setBuffer(const Buffer& b)
00019 {
00020 m_Buffer
00021 m_StartPayload
                            = b;
                            = -1;
```

```
00022
       m_StartPayloadDone = false;
00023 }
00024
00025 std::uint8_t RawBufferNavigator::getDetectorID() { return m_Buffer[0]; }
00026
00027 bool RawBufferNavigator::findStartOfPavload()
00029
        if (m_StartPayloadDone == true)
00030
00031
          if (m_StartPayload == -1) return false;
00032
          else
00033
            return true:
00034
00035
        else
00036
          m_StartPayloadDone = true;
for(std::size_t i = m_Start; i < m_Buffer.size(); i++)</pre>
00037
00038
00039
00040
            if(m_Buffer[i] == DU::START_OF_DIF || m_Buffer[i] == DU::START_OF_DIF_TEMP)
00041
            {
00042
              m_StartPayload = i;
00043
              return true;
00044
           }
00045
00046
          m_StartPayload = -1;
00047
          return false;
00048
00049 }
00050
00051 std::int32_t RawBufferNavigator::getStartOfPayload()
00052 {
00053
        findStartOfPayload();
00054
        return m_StartPayload;
00055 }
00056
00057 bool RawBufferNavigator::validPayload() { return m_StartPayload != -1; }
00058
00059 Buffer RawBufferNavigator::getPayload() { return Buffer(&(m_Buffer.begin()[m_StartPayload]),
      m_Buffer.size() - m_StartPayload); }
```

## 5.45 libs/core/src/Version.cc File Reference

#include "Version.h"

### 5.45.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Version.cc.

# 5.46 Version.cc

```
00001
00005 #include "Version.h"
00006
00007 const static Version streamout_version;
00008
00009 std::uint8_t Version::getMajor() { return major; }
00011 std::uint8_t Version::getMinor() { return minor; }
00012
00013 std::uint8_t Version::getPatch() { return patch; }
00014
00015 std::string Version::getPreRelease()
00016 {
00016 switch(prerelease_type)
```

# 5.47 libs/interface/Dump/include/textDump.h File Reference

```
#include "Interface.h"
#include "PayloadParser.h"
#include "spdlog/sinks/stdout_color_sinks.h"
#include <memory>
#include <spdlog/logger.h>
```

#### **Classes**

class textDump

#### 5.47.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file textDump.h.

# 5.48 textDump.h

```
00001
00005 #pragma once
00006
00007 #include "Interface.h"
00008 #include "PayloadParser.h"
00009 #include "spdlog/sinks/stdout_color_sinks.h"
00010
00011 #include <memory>
00012 #include <spdlog/logger.h>
00013
00014 class textDump : public InterfaceWriter
00015 {
00016 public:
00017
       textDump();
00018
       void
00019
                                         processDIF(const PayloadParser&);
       void
00020
                                         processFrame(const PayloadParser&, uint32_t frameIndex);
       void
00021
                                         processPadInFrame(const PayloadParser&, uint32_t frameIndex,
uint32_t channelIndex);
00022 void
                                         processSlowControl(Buffer);
00023
       void
                                         end();
       std::shared_ptr<spdlog::logger>& print() { return m_InternalLogger; }
00024
                                         setLevel(const spdlog::level::level_enum& level) {
00025
     m_InternalLogger->set_level(level); }
00026
00027 private:
00028
       // This class is a dumb class to print on terminal so we need the logger + the standard one given by
     the interface.
00029 std::shared_ptr<spdlog::logger> m_InternalLogger{nullptr};
00030 };
```

# 5.49 libs/interface/Dump/src/textDump.cc File Reference

```
#include "textDump.h"
#include "PayloadParser.h"
```

#### 5.49.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file textDump.cc.

## 5.50 textDump.cc

Go to the documentation of this file.

```
00005 #include "textDump.h"
00006
00007 #include "PayloadParser.h"
80000
00009 textDump::textDump() : InterfaceWriter("textDump", "1.0.0")
00010 {
        m_InternalLogger = std::make_shared<spdlog::logger>("textDump",
      std::make_shared<spdlog::sinks::stdout_color_sink_mt>());
00012 m_InternalLogger->set_level(spdlog::level::trace);
00013 addCompatibility("RawdataReader", ">=1.0.0");
00014 addCompatibility("DIFdataExample", ">=1.0.0");
00016
00017 void textDump::start() { print()->info("Will dump bunch of DIF data"); }
00018
00019 void textDump::processDIF(const PayloadParser& d) { print()->info("DIF_ID : {}, DTC : {}, GTC : {},
      DIF BCID {}, Absolute BCID : {}, Nbr frames {}", d.getDIFid(), d.getDTC(), d.getGTC(), d.getBCID(),
      d.getAbsoluteBCID(), d.getNumberOfFrames()); }
00020
00021 void textDump::processFrame(const PayloadParser& d, uint32_t frameIndex)
00022 {
      print()->info("\tDisplaying frame number {}: ASIC ID {}, Frame BCID {}, Frame Time To Trigger
(a.k.a timestamp) is {}", frameIndex, d.getASICid(frameIndex), d.getFrameBCID(frameIndex),
00023
      d.getFrameTimeToTrigger(frameIndex));
00024 }
00025
00026 void textDump::processPadInFrame(const PayloadParser& d, uint32_t frameIndex, uint32_t channelIndex)
00027 {
00028
         if(d.getThresholdStatus(frameIndex, channelIndex) > 0) { print()->info("\t\tChannel {}, Threshold
      {}", channelIndex, d.getThresholdStatus(frameIndex, channelIndex)); }
00029 }
00030
00031 void textDump::processSlowControl(Buffer) { print()->error("textDump::processSlowControl not
      implemented yet."); }
00033 void textDump::end() { print()->info("textDump end of report"); }
```

# 5.51 libs/interface/LCIO/include/LCIOWriter.h File Reference

# 5.51.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file LCIOWriter.h.

# 5.52 LCIOWriter.h

Go to the documentation of this file.

```
00001
00005 #pragma once
```

# 5.53 libs/interface/LCIO/src/LCIOWriter.cc File Reference

# 5.53.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file LCIOWriter.cc.

# 5.54 LCIOWriter.cc

Go to the documentation of this file.

# 5.55 libs/interface/RawDataReader/include/RawdataReader.h File Reference

```
#include "Interface.h"
#include <array>
#include <cstdint>
#include <fstream>
#include <string>
#include <vector>
```

## Classes

· class RawdataReader

# 5.55.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file RawdataReader.h.

5.56 RawdataReader.h 101

# 5.56 RawdataReader.h

#### Go to the documentation of this file.

```
00005 #pragma once
00006
00007 #include "Interface.h"
80000
00009 #include <arrav>
00010 #include <cstdint>
00011 #include <fstream>
00012 #include <string>
00013 #include <vector>
00014
00015 class Buffer;
00016
00017 class RawdataReader : public InterfaceReader
00018 {
00019 public:
00020
        explicit RawdataReader(const char* fileName);
00021
        void start();
        end();
float     getFileSize();
void     openFile(const std::string& fileName);
void     closeFile();
bool     nextEvent();
bool     nextDIPDuffor()
00022
00023
00024
00025
00026
00027
                        nextDIFbuffer();
        const Buffer& getBuffer();
virtual ~RawdataReader() { closeFile(); }
00028
00029
00030
        static void setDefaultBufferSize(const std::size_t& size);
00031
00032 private:
00033 void
00034 std::
                               uncompress();
        std::ifstream
                               m_FileStream;
00035
                               setFileSize(const std::size t& size);
        void
        static std::size_t m_BufferSize;
                        __urrerSize;
m_FileSize{0};
m_NumberOffTT
00037
        std::size_t
00038
        std::uint32_t
                               m_NumberOfDIF{0};
00039
         std::uint32_t
                               m_EventNumber{0};
        std::vector<bit8_t> m_buf;
00040
00041
        std::string
                              m_Filename;
00042 };
```

# 5.57 libs/interface/RawDataReader/src/RawdataReader.cc File Reference

```
#include "RawdataReader.h"
#include "Exception.h"
#include <cstdint>
#include <cstring>
#include <stdexcept>
#include <zlib.h>
```

### 5.57.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file RawdataReader.cc.

### 5.58 RawdataReader.cc

```
00004 #include "RawdataReader.h"
00005
00006 #include "Exception.h"
00007
00008 #include <cstdint>
00009 #include <cstring>
00010 #include <stdexcept>
00011 #include <zlib.h>
00012
00014 std::size_t RawdataReader::m_BufferSize = 0x100000;
00015
00016 void RawdataReader::setDefaultBufferSize(const std::size t& size) { m BufferSize = size; }
00017
00018 RawdataReader::RawdataReader(const char* fileName) : InterfaceReader("RawdataReader", "1.0.0")
00019 {
00020
        m_buf.reserve(m_BufferSize);
00021
        m_Filename = fileName;
00022 }
00023
00024 void RawdataReader::start() { openFile(m_Filename); }
00025
00026 void RawdataReader::end() { closeFile(); }
00027
00028 void RawdataReader::uncompress()
00029 {
00030
        static const std::size_t size_buffer{0x20000};
00031
        std::size_t
                                  shift{3 * sizeof(std::uint32_t) + sizeof(std::uint64_t)};
00032
        static bit8_t
                                  obuf[size_buffer];
                                  size_buffer_end{0x20000}; // NOLINT(runtime/int)
00033
        unsigned long
00034 std::int8 t
                                  rc = ::uncompress(obuf, &size_buffer_end, &m_Buffer[shift], m_Buffer.size()
      - shift);
00035
        switch(rc)
00036
00037
          case Z_OK: break;
          case Z_MEM_ERROR: throw Exception(Z_MEM_ERROR, "Not enough memory"); break;
case Z_BUF_ERROR: throw Exception(Z_BUF_ERROR, "Not enough room in the output buffer"); break;
00038
00039
00040
          case Z_DATA_ERROR: throw Exception(Z_DATA_ERROR, "The input data was corrupted or incomplete");
00041
                    throw Exception ("The input data was corrupted or incomplete"); break;
00042
00043
        memcpy(&m_Buffer[shift], obuf, size_buffer_end);
        m_Buffer.setSize(size_buffer_end + shift);
00044
00045 }
00046
00047 void RawdataReader::closeFile()
00048 {
00049
00050
00051
          if(m FileStream.is open()) m FileStream.close();
00052
00053
        catch(const std::ios_base::failure& e)
00054
00055
          log()->error("Caught an ios_base::failure in closeFile : {} ", e.what(), e.code().value());
00056
         throw;
00057
00058 }
00059
00060 void RawdataReader::openFile(const std::string& fileName)
00061 {
00062
00063
00064
          m_FileStream.rdbuf()->pubsetbuf(0, 0);
00065
          m_FileStream.exceptions(std::ifstream::failbit | std::ifstream::badbit);
          m_FileStream.open(fileName.c_str(), std::ios::in | std::ios::binary | std::ios::ate); // Start at
00066
      the end to directly calculate the size of the file then come back to beginning
00067
          m_FileStream.rdbuf()->pubsetbuf(0, 0);
00068
          if (m_FileStream.is_open())
00069
          {
00070
            setFileSize(m_FileStream.tellg());
00071
            m_FileStream.seekg(0, std::ios::beg);
00072
00073
00074
        catch (const std::ios base::failure& e)
00075
00076
          log()->error("Caught an ios_base::failure in openFile : {}", e.what());
00077
         throw;
00078
00079 }
08000
00081 bool RawdataReader::nextEvent()
00082 {
00083
```

```
00084
       {
00085
         m_FileStream.read(reinterpret_cast<char*>(&m_EventNumber), sizeof(std::uint32_t));
00086
         m_FileStream.read(reinterpret_cast<char*>(&m_NumberOfDIF), sizeof(std::uint32_t));
00087
00088
       catch(const std::ios_base::failure& e)
00089
00090
         return false;
00091
00092
00093 }
00094
00095 bool RawdataReader::nextDIFbuffer()
00096 {
00097
00098
00099
         static int DIF_processed{0};
         if(DIF_processed >= m_NumberOfDIF)
00100
00101
          DIF_processed = 0;
00102
00103
           return false;
00104
00105
         else
00106
00107
           DIF_processed++;
00108
           std::uint32_t bsize{0};
           m_FileStream.read(reinterpret_cast<char*>(&bsize), sizeof(std::uint32_t));
00109
00110
           m_FileStream.read(reinterpret_cast<char*>(&m_buf[0]), bsize);
00111
           m_Buffer = Buffer(m_buf);
00112
         }
00113
00114
       catch (const std::ios base::failure& e)
00115
00116
         log()->error("Caught an ios_base::failure in openFile : {}", e.what());
00117
         return false;
00118
00119
       return true;
00120 }
00122 const Buffer& RawdataReader::getBuffer()
00123 {
00124
       uncompress();
00125
       return m_Buffer;
00126 }
00127
00128 void RawdataReader::setFileSize(const std::size_t& size) { m_FileSize = size; }
00129
00130 float RawdataReader::getFileSize() { return m_FileSize; }
```

# 5.59 libs/interface/ROOT/include/DIF.h File Reference

```
#include "Hit.h"
#include <TObject.h>
#include <cstdint>
#include <map>
#include <vector>
```

# Classes

· class DIF

# Typedefs

using Hits\_const\_iterator = std::vector< Hit >::const\_iterator

### 5.59.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIF.h.

### 5.59.2 Typedef Documentation

```
5.59.2.1 Hits_const_iterator using Hits_const_iterator = std::vector<Hit>::const_iterator
```

Definition at line 14 of file DIF.h.

## 5.60 DIF.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include "Hit.h"
80000
00009 #include <TObject.h>
00010 #include <cstdint>
00011 #include <map>
00012 #include <vector>
00014 using Hits_const_iterator = std::vector<Hit>::const_iterator;
00015
00016 class DIF : public TObject
00017
00018 public:
00019
       void
                                          clear();
00020
                                          addHit(const Hit&);
        void
00021
        void
                                          setID(const std::uint8_t&);
00022
       std::uint8_t
                                          getID() const;
00023
                                         setDTC(const std::uint32_t&);
getDTC() const;
        void
00024
       std::uint32 t
00025
                                          setGTC(const std::uint32_t&);
        void
00026
        std::uint32_t
                                          getGTC() const;
00027
        void
                                          setDIFBCID(const std::uint32_t&);
                                          getDIFBCID() const;
setAbsoluteBCID(const std::uint64_t&);
00028
        std::uint32_t
00029
        void
00030
                                          getAbsoluteBCID() const;
       std::uint64 t
00031
        std::vector<Hit>::const_iterator cbegin() const;
00032
       std::vector<Hit>::const_iterator cend() const;
00033
00034 private:
00035 std::uint8_t
                         m_ID{0};
                         m_DTC{0};
00036
       std::uint32 t
00037
       std::uint32_t
                         m_GTC{0};
00038
       std::uint32_t
                         m_DIFBCID{0};
00039
       std::uint64_t
                         m_AbsoluteBCID{0};
       std::vector<Hit> m_Hits;
00040
00041
       ClassDef(DIF, 1);
00042 };
```

# 5.61 libs/interface/ROOT/include/DIFLinkDef.h File Reference

#include <vector>

## 5.61.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIFLinkDef.h.

5.62 DIFLinkDef.h

# 5.62 DIFLinkDef.h

### Go to the documentation of this file.

```
00001
00005 #pragma once
00006 #include <vector>
00007
00008 #ifdef __CLING__
00009 #pragma link C++ class DIF;
00010 #pragma link C++ class Hit;
00011 #pragma link C++ class std::vector < Hit>;
00012 #endif
```

# 5.63 libs/interface/ROOT/include/Event.h File Reference

```
#include "DIF.h"
#include <TObject.h>
#include <cstdint>
#include <map>
```

### Classes

class Event

# **Typedefs**

• using DIFs\_const\_iterator = std::map< std::uint8\_t, DIF >::const\_iterator

# 5.63.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Event.h.

# 5.63.2 Typedef Documentation

```
5.63.2.1 DIFs_const_iterator using DIFs_const_iterator = std::map<std::uint8_t, DIF>::const_← iterator
```

Definition at line 13 of file Event.h.

# 5.64 Event.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include "DIF.h"
80000
00009 #include <TObject.h>
00010 #include <cstdint>
00011 #include <map>
00012
00013 using DIFs_const_iterator = std::map<std::uint8_t, DIF>::const_iterator;
00014
00015 class Event : public TObject
00016 {
00017 public:
00018 void
00019 void
                                                               clear();
                                                               addDIF(const DIF& dif);
00020 std::map<std::uint8_t, DIF>::const_iterator cbegin() const;
00021 std::map<std::uint8_t, DIF>::const_iterator cend() const;
00022
00023 private:
00024 std::map<std::uint8_t, DIF> DIFs;
00025 ClassDef(Event, 1);
00026 };
```

### 5.65 libs/interface/ROOT/include/EventLinkDef.h File Reference

```
#include <cstdint>
#include <map>
#include <vector>
```

# 5.65.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file EventLinkDef.h.

# 5.66 EventLinkDef.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006 #include <cstdint>
00007 #include <map>
00008 #include <vector>
00009 #ifdef __CLING__
00010 #pragma link C++ class DIF;
00011 #pragma link C++ class std::vector < DIF>;
00012 #pragma link C++ class std::vector < Hit>;
00013 #pragma link C++ class std::vector < Hit>;
00014 #pragma link C++ class Event;
00015 #pragma link C++ class std::vector < Event>;
00016 #pragma link C++ class std::vector < Std::vector < Event>;
00016 #pragma link C++ class std::vector < Event>;
00016 #pragma link C++ class std::vector < Event>;
00017 #endif
```

# 5.67 libs/interface/ROOT/include/Hit.h File Reference

```
#include <TObject.h>
#include <cstdint>
```

5.68 Hit.h 107

#### **Classes**

· class Hit

### 5.67.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Hit.h.

### 5.68 Hit.h

# Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include <TObject.h>
00008 #include <cstdint>
00009
00010 class Hit : public TObject
          void      clear();
void      setDIF(const std::uint8_t&);
void      setASIC(const std::uint8_t&);
void      setChannel(const std::uint8_t&);
void      setThreshold(const std::uint8_t&);
void      setDTC(const std::uint32_t&);
void      setGTC(const std::uint32_t&);
void      setDIFBCID(const std::uint32_t&);
void      setFrameBCID(const std::uint32_t&);
void      setTimestamp(const std::uint32_t&)
void
00011 {
00012 public:
00013
00015
00016
00017
00018
00019
00020
                              setFrameBCID(const std::uint32_t&);
setTimestamp(const std::uint32_t&);
00021
00022
00023
           void
                                 setAbsoluteBCID(const std::uint64_t&);
           std::uint8_t
std::uint8_t
std::uint8_t
std::uint8_t
std::uint8_t
std::uint8_t
std::uint8_t
00024
00025
00027
00028
           std::uint32_t getDTC() const;
00029
           std::uint32_t getGTC() const;
           std::uint32_t getDIFBCID() const;
std::uint32_t getFrameBCID() const;
00030
00031
00032
          std::uint32_t getTimestamp() const;
00033
           std::uint64_t getAbsoluteBCID() const;
00034
00035 private:
00036 std::uint8_t m_DIF{0};
00037 std::uint8_t m_ASIC{0}
           std::uint8_t m_ASIC{0};
std::uint8_t m_Channel{0};
00038
00039
           std::uint8_t m_Threshold{0};
00040
           std::uint32_t m_DTC{0};
00041
           std::uint32_t m_GTC{0};
00042
           std::uint32_t m_DIFBCID{0};
00043
           std::uint32_t m_FrameBCID{0};
00044
           std::uint32_t m_Timestamp{0};
00045
            std::uint64_t m_AbsoluteBCID{0};
00046
          ClassDef(Hit, 1);
00047 };
```

# 5.69 libs/interface/ROOT/include/HitLinkDef.h File Reference

# 5.69.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file HitLinkDef.h.

### 5.70 HitLinkDef.h

#### Go to the documentation of this file.

```
00001
00005 #pragma once
00006 #ifdef __CLING__
00007 #pragma link C++ class Hit;
00008 #endif
```

#### 5.71 libs/interface/ROOT/include/ROOTWriter.h File Reference

```
#include "Buffer.h"
#include "Event.h"
#include "Interface.h"
#include "PayloadParser.h"
#include <TFile.h>
#include <TTree.h>
#include <string>
#include <vector>
```

#### **Classes**

class ROOTWriter

# 5.72 ROOTWriter.h

```
00006 #pragma once
00007
00008 #include "Buffer.h"
00000 #include "Event.h"
00010 #include "Interface.h"
00011 #include "PayloadParser.h"
00012
00013 #include <TFile.h>
00014 #include <TTree.h>
00015 #include <string>
00016 #include <vector>
00017
00018 class ROOTWriter : public InterfaceWriter
00019 {
00020 public:
00021 ROOTWriter();
00022
00023
        void setFilename(const std::string&);
00024
00025
00026 void processDIF(const PayloadParser&);
00027 void processFrame(const PayloadParser&, const std::uint32_t& frameIndex);
00028 void processPadInFrame(const PayloadParser&, const std::uint32_t& frameIndex, const std::uint32_t&
     channelIndex);
00029 void processSlowControl(const Buffer&) { ; }
00030 void end();
00031
00032
        virtual void startEvent();
00033
        virtual void endEvent();
00034
        virtual void startDIF();
00035
        virtual void endDIF();
00036
        virtual void startFrame();
00037
        virtual void endFrame();
00038
        virtual void startPad();
00039
        virtual void endPad();
00040
00041 private:
00042 TFile*
                    m_File{nullptr};
00043
         TTree*
                      m_Tree{nullptr};
00044
        Event*
                      m_Event{nullptr};
00045
        DTF*
                      m_DIF{nullptr};
00046 Hit* m_Hit{nullp
00047 std::string m_Filename;
                      m Hit {nullptr};
00048 };
```

# 5.73 libs/interface/ROOT/src/DIF.cc File Reference

```
#include "DIF.h"
#include <cstdint>
```

# 5.73.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIF.cc.

### 5.74 DIF.cc

#### Go to the documentation of this file.

```
00006 #include "DIF.h"
00007
00008 #include <cstdint>
00009
00010 void DIF::addHit(const Hit& hit) { m_Hits.push_back(hit); }
00011
00012 void DIF::setID(const std::uint8_t& id) { m_ID = id; }
00013
00014 std::uint8_t DIF::getID()const { return m_ID; }
00015
00016 void DIF::setDTC(const std::uint32_t& dtc) { m_DTC = dtc; }
00017
00018 std::uint32_t DIF::getDTC()const { return m_DTC; }
00019
00020 void DIF::setGTC(const std::uint32_t& gtc) { m_GTC = gtc; }
00021
00022 std::uint32_t DIF::getGTC()const { return m_GTC; }
00023
00024 void DIF::setDIFBCID(const std::uint32_t& difbcid) { m_DIFBCID = difbcid; }
00025
00026 std::uint32_t DIF::getDIFBCID()const { return m_DIFBCID; }
00027
00028 void DIF::setAbsoluteBCID(const std::uint64_t& absolutebcid) { m_AbsoluteBCID = absolutebcid; }
00029
00030 std::uint64_t DIF::getAbsoluteBCID()const { return m_AbsoluteBCID; }
00031
00032 std::vector<Hit>::const_iterator DIF::cbegin()const { return m_Hits.cbegin(); }
00033
00034 std::vector<Hit>::const_iterator DIF::cend()const { return m_Hits.cend(); }
00036 void DIF::clear() { m_Hits.clear(); }
```

### 5.75 libs/interface/ROOT/src/Event.cc File Reference

```
#include "Event.h"
```

# 5.75.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Event.cc.

# 5.76 Event.cc

#### Go to the documentation of this file.

```
00001
00006 #include "Event.h"
00007
00008 void Event::clear() { DIFs.clear(); }
00009
00010 void Event::addDIF(const DIF& dif) { DIFs[dif.getID()] = dif; }
00011
00012 std::map<std::uint8_t, DIF>::const_iterator Event::cbegin()const { return DIFs.cbegin(); }
00013
00014 std::map<std::uint8_t, DIF>::const_iterator Event::cend()const { return DIFs.cend(); }
```

#### 5.77 libs/interface/ROOT/src/Hit.cc File Reference

```
#include "Hit.h"
```

# 5.77.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Hit.cc.

# 5.78 Hit.cc

```
00001
00006 #include "Hit.h"
00007 void Hit::clear()
00008 {
00009
       m DIF
                       = 0;
                       = 0;
00010
       m_ASIC
00011
       m_Channel
00012
        {\tt m\_Threshold}
                       = 0;
00013
       m_DTC
                       = 0:
       m_GTC
00014
                       = 0;
       m_DIFBCID
00015
                       = 0;
00016
       m_FrameBCID
                      = 0;
00017
        m_Timestamp
       m_AbsoluteBCID = 0;
00018
00019 }
00020
00021 void Hit::setDIF(const std::uint8_t& dif) { m_DIF = dif; }
00022
00023 void Hit::setASIC(const std::uint8_t& asic) { m_ASIC = asic; }
00024
00025 void Hit::setChannel(const std::uint8_t& channel) { m_Channel = channel; }
00026
00027 void Hit::setThreshold(const std::uint8_t& threshold) { m_Threshold = threshold; }
00028
00029 void Hit::setDTC(const std::uint32_t& dtc) { m_DTC = dtc; }
00030
00031 void Hit::setGTC(const std::uint32_t& gtc) { m_GTC = gtc; }
00032
00033 void Hit::setDIFBCID(const std::uint32 t& difbcid) { m DIFBCID = difbcid; }
00034
00035 void Hit::setFrameBCID(const std::uint32_t& framebcid) { m_FrameBCID = framebcid; }
00036
00037 void Hit::setTimestamp(const std::uint32_t& timestamp) { m_Timestamp = timestamp; }
00038
00039 void Hit::setAbsoluteBCID(const std::uint64_t& absolutebcid) { m_AbsoluteBCID = absolutebcid; }
00040
00041 std::uint8_t Hit::getDIFid()const { return m_DIF; }
00042
```

```
00043 std::uint8_t Hit::getASICid()const { return m_ASIC; }
00044
00045 std::uint8_t Hit::getChannel()const { return m_Channel; }
00046
00047 std::uint8_t Hit::getThreshold()const { return m_Threshold; }
00048
00049 std::uint32_t Hit::getDTC()const { return m_DTC; }
00050
00051 std::uint32_t Hit::getGTC()const { return m_GTC; }
00052
00053 std::uint32_t Hit::getDIFBCID()const { return m_DIFBCID; }
00054
00055 std::uint32_t Hit::getFrameBCID()const { return m_FrameBCID; }
00056
00057 std::uint32_t Hit::getTimestamp()const { return m_Timestamp; }
00058
00059 std::uint64_t Hit::getAbsoluteBCID()const { return m_AbsoluteBCID; }
```

# 5.79 libs/interface/ROOT/src/ROOTWriter.cc File Reference

```
#include "ROOTWriter.h"
```

### 5.79.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file ROOTWriter.cc.

## 5.80 ROOTWriter.cc

```
00001
00006 #include "ROOTWriter.h"
00007
00008 void ROOTWriter::setFilename(const std::string& filename) { m_Filename = filename; }
00009
00010 ROOTWriter::ROOTWriter() : InterfaceWriter("ROOTWriter", "1.0.0") { addCompatibility("RawdataReader",
      ">=1.0.0"); }
00011
00012 void ROOTWriter::start()
00013 {
        m_File = TFile::Open(m_Filename.c_str(), "RECREATE", m_Filename.c_str(),
00014
     ROOT::CompressionSettings(ROOT::kZLIB, 5));
00015 m_Tree = new TTree("RawData", "Raw SDHCAL data tree");
00016
       m_Tree->Branch("Events", &m_Event, 512000, 99);
00017 }
00018
00019 void ROOTWriter::end()
00020 {
00021
        if (m_Tree) m_Tree->Write();
00022
        if (m_File)
00023
00024
         m_File->Write();
00025
         m_File->Close();
00026
00027
       if (m_File) delete m_File;
00028 }
00029
00030 void ROOTWriter::processDIF(const PayloadParser& d)
00031 {
00032
       m_DIF->setID(d.getDIFid());
00033
        m_DIF->setDTC(d.getDTC());
00034
        m_DIF->setGTC(d.getGTC());
        m_DIF->setDIFBCID(d.getBCID());
00035
00036
       m_DIF->setAbsoluteBCID(d.getAbsoluteBCID());
00037 }
00038
```

```
00039 void ROOTWriter::processFrame(const PayloadParser& d, const std::uint32_t& frameIndex)
00040 {
00041
        m_Hit->setDIF(d.getDIFid());
00042
        m_Hit->setASIC(d.getASICid(frameIndex));
        m_Hit->setDTC(d.getDTC());
00043
        m_Hit->setGTC(d.getGTC());
00044
        m_Hit->setDIFBCID(d.getBCID());
00046
        m_Hit->setAbsoluteBCID(d.getAbsoluteBCID());
00047
        m_Hit->setFrameBCID(d.getFrameBCID(frameIndex));
00048
        m_Hit->setTimestamp(d.getFrameTimeToTrigger(frameIndex));
00049 }
00050
00051 void ROOTWriter::processPadInFrame(const PayloadParser& d, const std::uint32_t& frameIndex, const
      std::uint32_t& channelIndex)
00052 {
00053
        m_Hit->setChannel(channelIndex);
       \verb|m_Hit->setThreshold(static_cast<std::uint8_t>(d.getThresholdStatus(frameIndex, channelIndex)))||
00054
00055 }
00056
00057 void ROOTWriter::startEvent()
00058 {
00059
       m_Event = new Event();
00060
       // m_Event->clear();
00061 }
00062
00063 void ROOTWriter::endEvent()
00064 {
00065 m_Tree->Fill();
00066
       if (m_Event) delete m_Event;
00067 }
00068
00069 void ROOTWriter::startDIF()
00070 {
00071
       m_DIF = new DIF();
00072
       // m_DIF->clear();
00073 }
00074
00075 void ROOTWriter::endDIF()
00076 {
00077 m_Event->addDIF(*m_DIF);
00078 delete m_DIF;
00079 }
00080
00081 void ROOTWriter::startFrame()
00082 {
00083
       m_Hit = new Hit();
00084 // m_Hit->clear();
00085 }
00086
00087 void ROOTWriter::endFrame()
00088 {
00089 m_DIF->addHit(*m_Hit);
00090
       delete m_Hit;
00091 }
00092
00093 void ROOTWriter::startPad() {}
00094
00095 void ROOTWriter::endPad() {}
```