streamout 0.1.0

Generated by Doxygen 1.9.5

1	Hierarchical Index	1
	1.1 Class Hierarchy	1
2	Class Index	1
	2.1 Class List	1
2	File Index	2
J	3.1 File List	2
		_
4	Class Documentation	4
	4.1 Buffer Class Reference	4
	4.1.1 Detailed Description	5
	4.1.2 Constructor & Destructor Documentation	5
	4.1.3 Member Function Documentation	6
	4.2 BufferLooper< SOURCE, DESTINATION > Class Template Reference	7
	4.2.1 Detailed Description	8
	4.2.2 Constructor & Destructor Documentation	8
	4.2.3 Member Function Documentation	8
	4.3 BufferLooperCounter Struct Reference	12
	4.3.1 Detailed Description	12
	4.3.2 Member Function Documentation	12
	4.3.3 Member Data Documentation	13
	4.4 DIF Class Reference	14
	4.4.1 Detailed Description	15
	4.4.2 Member Function Documentation	15
	4.5 DIFPtr Class Reference	17
	4.5.1 Detailed Description	17
	4.6 DIFSlowControl Class Reference	19
	4.6.1 Detailed Description	20
	4.6.2 Constructor & Destructor Documentation	20
	4.6.3 Member Function Documentation	20
	4.7 Event Class Reference	22
	4.7.1 Detailed Description	22
	4.7.2 Member Function Documentation	22
	4.8 Exception Class Reference	23
	4.8.1 Detailed Description	24
	4.8.2 Constructor & Destructor Documentation	24
	4.8.3 Member Function Documentation	24
	4.9 Hit Class Reference	25
	4.9.1 Detailed Description	25
	4.9.2 Member Function Documentation	25
	4.10 Interface Class Reference	29
	4.10.1 Detailed Description	29

4.10.2 Constructor & Destructor Documentation	 . 29
4.10.3 Member Function Documentation	 . 30
4.10.4 Member Data Documentation	 . 32
4.11 InterfaceReader Class Reference	 . 33
4.11.1 Detailed Description	 . 33
4.11.2 Constructor & Destructor Documentation	 . 33
4.11.3 Member Data Documentation	 . 34
4.12 InterfaceWriter Class Reference	 . 34
4.12.1 Detailed Description	 . 34
4.12.2 Constructor & Destructor Documentation	 . 34
4.12.3 Member Function Documentation	 . 35
4.13 LCIOWriter Class Reference	 . 36
4.13.1 Detailed Description	 . 36
4.13.2 Constructor & Destructor Documentation	 . 36
4.13.3 Member Function Documentation	 . 37
4.14 Payload Class Reference	 . 40
4.14.1 Detailed Description	 . 41
4.14.2 Constructor & Destructor Documentation	 . 41
4.14.3 Member Function Documentation	 . 41
4.14.4 Member Data Documentation	 . 43
4.15 Payload100 Class Reference	 . 44
4.15.1 Detailed Description	 . 44
4.15.2 Constructor & Destructor Documentation	 . 44
4.15.3 Member Function Documentation	 . 45
4.16 Payload150 Class Reference	 . 47
4.16.1 Detailed Description	 . 48
4.16.2 Constructor & Destructor Documentation	 . 48
4.16.3 Member Function Documentation	 . 48
4.17 PayloadLoader Class Reference	 . 50
4.17.1 Detailed Description	 . 50
4.17.2 Constructor & Destructor Documentation	 . 51
4.17.3 Member Function Documentation	 . 51
4.18 RawBufferNavigator Class Reference	 . 51
4.18.1 Detailed Description	 . 52
4.18.2 Constructor & Destructor Documentation	 . 52
4.18.3 Member Function Documentation	 . 52
4.19 RawdataReader Class Reference	 . 54
4.19.1 Detailed Description	 . 54
4.19.2 Constructor & Destructor Documentation	 . 54
4.19.3 Member Function Documentation	 . 55
4.20 ROOTWriter Class Reference	 . 57
4.20.1 Detailed Description	 . 58

	4.20.2 Constructor & Destructor Documentation	58
	4.20.3 Member Function Documentation	58
	4.21 textDump Class Reference	61
	4.21.1 Detailed Description	61
	4.21.2 Constructor & Destructor Documentation	61
	4.21.3 Member Function Documentation	62
	4.22 Timer Class Reference	63
	4.22.1 Detailed Description	63
	4.22.2 Member Function Documentation	64
	4.23 Version Class Reference	64
	4.23.1 Detailed Description	65
	4.23.2 Constructor & Destructor Documentation	65
	4.23.3 Member Function Documentation	65
	File Desumentation	cc
ו כ	File Documentation	66
	5.1 libs/core/include/Bits.h File Reference	66
	5.1.1 Detailed Description	67
	5.1.2 Typedef Documentation	67
	5.1.3 Function Documentation	67
	5.2 Bits.h	68
	5.3 libs/core/include/Buffer.h File Reference	68
	5.3.1 Detailed Description	68
	5.4 Buffer.h	68
	5.5 libs/core/include/BufferLooper.h File Reference	69
	5.5.1 Detailed Description	69
	5.6 BufferLooper.h	
	5.7 libs/core/include/BufferLooperCounter.h File Reference	73
	5.7.1 Detailed Description	73
	5.8 BufferLooperCounter.h	73
	5.9 libs/core/include/Detectorld.h File Reference	74
	5.9.1 Detailed Description	74
	5.9.2 Enumeration Type Documentation	74
	5.10 DetectorId.h	74
	5.11 libs/core/include/DIFSlowControl.h File Reference	75
	5.11.1 Detailed Description	75
	5.11.2 Function Documentation	75
	5.12 DIFSlowControl.h	76
	5.13 libs/core/include/Exception.h File Reference	77
	5.13.1 Detailed Description	77
	5.14 Exception.h	77
	5.15 libs/core/include/Filesystem.h File Reference	77
	5 15 1 Detailed Description	78

5.15.2 Function Documentation	. 78
5.16 Filesystem.h	. 78
5.17 libs/core/include/Formatters.h File Reference	. 79
5.17.1 Detailed Description	. 79
5.17.2 Function Documentation	. 79
5.18 Formatters.h	. 83
5.19 libs/core/include/Interface.h File Reference	. 83
5.19.1 Detailed Description	. 84
5.19.2 Enumeration Type Documentation	. 84
5.20 Interface.h	. 84
5.21 libs/core/include/Payload.h File Reference	. 86
5.21.1 Detailed Description	. 86
5.22 Payload.h	. 86
5.23 libs/core/include/Payload100.h File Reference	. 87
5.23.1 Detailed Description	. 87
5.24 Payload100.h	. 87
5.25 libs/core/include/Payload150.h File Reference	. 88
5.25.1 Detailed Description	. 88
5.26 Payload150.h	. 88
5.27 libs/core/include/PayloadLoader.h File Reference	. 89
5.27.1 Detailed Description	. 89
5.28 PayloadLoader.h	. 89
5.29 libs/core/include/RawBufferNavigator.h File Reference	. 90
5.29.1 Detailed Description	. 90
5.30 RawBufferNavigator.h	. 90
5.31 libs/core/include/Timer.h File Reference	. 90
5.31.1 Detailed Description	. 91
5.32 Timer.h	. 91
5.33 libs/core/include/Utilities.h File Reference	. 91
5.33.1 Detailed Description	. 91
5.33.2 Function Documentation	. 91
5.34 Utilities.h	. 92
5.35 libs/core/include/Version.h File Reference	. 92
5.35.1 Detailed Description	. 92
5.36 Version.h	. 93
5.37 libs/core/include/Words.h File Reference	. 93
5.37.1 Detailed Description	. 93
5.37.2 Enumeration Type Documentation	. 93
5.38 Words.h	. 93
5.39 libs/core/src/Bits.cc File Reference	
5.39.1 Detailed Description	. 94
5.39.2 Function Documentation	. 94

5.40 Bits.cc	94
5.41 libs/core/src/BufferLooperCounter.cc File Reference	95
5.42 BufferLooperCounter.cc	95
5.43 libs/core/src/DIFSlowControl.cc File Reference	95
5.43.1 Detailed Description	95
5.43.2 Function Documentation	96
5.44 DIFSlowControl.cc	96
5.45 libs/core/src/Filesystem.cc File Reference	99
5.45.1 Detailed Description	99
5.45.2 Function Documentation	99
5.46 Filesystem.cc	100
5.47 libs/core/src/Formatters.cc File Reference	100
5.47.1 Detailed Description	101
5.47.2 Function Documentation	101
5.48 Formatters.cc	105
5.49 libs/core/src/Payload100.cc File Reference	106
5.49.1 Detailed Description	107
5.49.2 Enumeration Type Documentation	107
5.50 Payload100.cc	110
5.51 libs/core/src/Payload150.cc File Reference	113
5.51.1 Detailed Description	114
5.51.2 Enumeration Type Documentation	114
5.52 Payload150.cc	117
5.53 libs/core/src/RawBufferNavigator.cc File Reference	119
5.53.1 Detailed Description	119
5.54 RawBufferNavigator.cc	119
5.55 libs/core/src/Version.cc File Reference	119
5.55.1 Detailed Description	119
5.56 Version.cc	120
5.57 libs/interface/Dump/include/textDump.h File Reference	120
5.57.1 Detailed Description	120
5.58 textDump.h	120
5.59 libs/interface/Dump/src/textDump.cc File Reference	121
5.59.1 Detailed Description	121
5.60 textDump.cc	121
5.61 libs/interface/LCIO/include/LCIOWriter.h File Reference	122
5.61.1 Detailed Description	122
5.62 LCIOWriter.h	122
5.63 libs/interface/LCIO/src/LCIOWriter.cc File Reference	123
5.63.1 Detailed Description	123
5.64 LCIOWriter.cc	123
5.65 libs/interface/RawDataReader/include/RawdataReader.h File Reference	124

5.65.1 Detailed Description	125
5.66 RawdataReader.h	125
5.67 libs/interface/RawDataReader/src/RawdataReader.cc File Reference	125
5.67.1 Detailed Description	126
5.68 RawdataReader.cc	126
5.69 libs/interface/ROOT/include/DIF.h File Reference	127
5.69.1 Detailed Description	128
5.69.2 Typedef Documentation	128
5.70 DIF.h	128
5.71 libs/interface/ROOT/include/DIFLinkDef.h File Reference	129
5.71.1 Detailed Description	129
5.72 DIFLinkDef.h	129
5.73 libs/interface/ROOT/include/Event.h File Reference	129
5.73.1 Detailed Description	129
5.73.2 Typedef Documentation	130
5.74 Event.h	130
5.75 libs/interface/ROOT/include/EventLinkDef.h File Reference	130
5.75.1 Detailed Description	130
5.76 EventLinkDef.h	131
5.77 libs/interface/ROOT/include/Hit.h File Reference	131
5.77.1 Detailed Description	131
5.78 Hit.h	131
5.79 libs/interface/ROOT/include/HitLinkDef.h File Reference	132
5.79.1 Detailed Description	132
5.80 HitLinkDef.h	132
5.81 libs/interface/ROOT/include/ROOTWriter.h File Reference	132
5.82 ROOTWriter.h	133
5.83 libs/interface/ROOT/src/DIF.cc File Reference	133
5.83.1 Detailed Description	133
5.84 DIF.cc	134
5.85 libs/interface/ROOT/src/Event.cc File Reference	134
5.85.1 Detailed Description	134
5.86 Event.cc	134
5.87 libs/interface/ROOT/src/Hit.cc File Reference	135
5.87.1 Detailed Description	135
5.88 Hit.cc	135
5.89 libs/interface/ROOT/src/ROOTWriter.cc File Reference	136
5.89.1 Detailed Description	136
5.90 ROOTWriter.cc	136

1 Hierarchical Index

1.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

Butter	4
Payload	40
Payload100	44
Payload150	47
BufferLooper< SOURCE, DESTINATION >	7
BufferLooperCounter	12
DIFPtr	17
DIFSlowControl	19
Exception	23
Interface	29
InterfaceReader	33
RawdataReader	54
InterfaceWriter	34
LCIOWriter	36
ROOTWriter	57
textDump	61
PayloadLoader	50
RawBufferNavigator	51
Timer TObject	63
DIF	14
Event	22
Hit semver::version	25
Version	64

2 Class Index

2.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

3 File Index

Buffer	4
BufferLooper < SOURCE, DESTINATION >	7
BufferLooperCounter	12
DIF	14
DIFPtr M3 MICROROC and HARDROC2 dataformat	17
DIFSlowControl	19
Event	22
Exception	23
Hit	25
Interface	29
InterfaceReader	33
InterfaceWriter	34
LCIOWriter	36
Payload	40
Payload100	44
Payload150	47
PayloadLoader	50
RawBufferNavigator Class to navigate in the raw data buffer parse the header and send the payload as Buffer	51
RawdataReader	54
ROOTWriter	57
textDump	61
Timer	63
Version	64
3 File Index	
3.1 File List	
Here is a list of all files with brief descriptions:	
libs/core/include/Bits.h	66
libs/core/include/Buffer.h	68
libs/core/include/BufferLooper.h	69

libs/core/include/BufferLooperCounter.h	73
libs/core/include/DetectorId.h	74
libs/core/include/DIFSlowControl.h	75
libs/core/include/Exception.h	77
libs/core/include/Filesystem.h	77
libs/core/include/Formatters.h	79
libs/core/include/Interface.h	83
libs/core/include/Payload.h	86
libs/core/include/Payload100.h	87
libs/core/include/Payload150.h	88
libs/core/include/PayloadLoader.h	89
libs/core/include/RawBufferNavigator.h	90
libs/core/include/Timer.h	90
libs/core/include/Utilities.h	91
libs/core/include/Version.h	92
libs/core/include/Words.h	93
libs/core/src/Bits.cc	94
libs/core/src/BufferLooperCounter.cc	95
libs/core/src/DIFSlowControl.cc	95
libs/core/src/Filesystem.cc	99
libs/core/src/Formatters.cc	100
libs/core/src/Payload100.cc	106
libs/core/src/Payload150.cc	113
libs/core/src/RawBufferNavigator.cc	119
libs/core/src/Version.cc	119
libs/interface/Dump/include/textDump.h	120
libs/interface/Dump/src/textDump.cc	121
libs/interface/LCIO/include/LCIOWriter.h	122
libs/interface/LCIO/src/LCIOWriter.cc	123
libs/interface/RawDataReader/include/RawdataReader.h	124
libs/interface/RawDataReader/src/RawdataReader.cc	125
libs/interface/ROOT/include/DIF.h	127

4 Class Documentation 5


libs/interface/ROOT/include/DIFLinkDef.h	129
libs/interface/ROOT/include/Event.h	129
libs/interface/ROOT/include/EventLinkDef.h	130
libs/interface/ROOT/include/Hit.h	131
libs/interface/ROOT/include/HitLinkDef.h	132
libs/interface/ROOT/include/ROOTWriter.h	132
libs/interface/ROOT/src/DIF.cc	133
libs/interface/ROOT/src/Event.cc	134
libs/interface/ROOT/src/Hit.cc	135
libs/interface/ROOT/src/ROOTWriter.cc	136

4 Class Documentation

4.1 Buffer Class Reference

#include <libs/core/include/Buffer.h>

Inheritance diagram for Buffer:

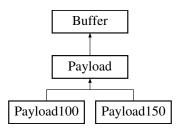

Public Member Functions

- Buffer ()
- virtual \sim Buffer ()
- Buffer (const bit8_t b[], const std::size_t &i)
- Buffer (const char b[], const std::size_t &i)
- template<typename T >
 - Buffer (const std::vector< T > &rawdata)
- • template<typename T , std::size_t N>
 - Buffer (const std::array< T, N > &rawdata)
- std::size_t size () const
- std::size_t capacity () const
- bool empty ()
- void set (unsigned char *b)
- void set (const Buffer &buffer)
- bit8 t * begin () const
- bit8_t * end () const
- bit8_t & operator[] (const std::size_t &pos)
- bit8_t & operator[] (const std::size_t &pos) const
- void setSize (const std::size_t &size)

4.1.1 Detailed Description

Definition at line 14 of file Buffer.h.

4.1.2 Constructor & Destructor Documentation

```
4.1.2.1 Buffer() [1/5] Buffer::Buffer ( ) [inline]
Definition at line 17 of file Buffer.h.
00017 : m_Buffer(nullptr), m_Size(0), m_Capacity(0) {}
4.1.2.2 \sim Buffer() virtual Buffer::\sim Buffer() [inline], [virtual]
Definition at line 18 of file Buffer.h.
00018 {}
4.1.2.3 Buffer() [2/5] Buffer::Buffer (
             const bit8_t b[],
             const std::size_t & i ) [inline]
Definition at line 19 of file Buffer.h.
00019 : m_Buffer(const_cast<bit8_t*>(&b[0])), m_Size(i), m_Capacity(i) {}
4.1.2.4 Buffer() [3/5] Buffer::Buffer (
             const char b[],
             const std::size_t & i ) [inline]
Definition at line 20 of file Buffer.h.
00020 : m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const bit8_t*>(&b[0]))), m_Size(i * sizeof(char)), m_Capacity(i * sizeof(char)) {}
4.1.2.5 Buffer() [4/5] template<typename T >
Buffer::Buffer (
             const std::vector< T > & rawdata ) [inline]
Definition at line 21 of file Buffer.h.
```

```
4.1.2.6 Buffer() [5/5] template<typename T , std::size_t N>
Buffer::Buffer (
              const std::array< T, N > & rawdata ) [inline]
Definition at line 22 of file Buffer.h.
00022 : m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const_bit8_t*>(rawdata.data())))),
     m_Size(rawdata.size() * sizeof(T)), m_Capacity(rawdata.size() * sizeof(T)) {}
4.1.3 Member Function Documentation
4.1.3.1 begin() bit8_t * Buffer::begin ( ) const [inline]
Definition at line 35 of file Buffer.h.
00035 { return m_Buffer; }
4.1.3.2 capacity() std::size_t Buffer::capacity ( ) const [inline]
Definition at line 25 of file Buffer.h.
00025 { return m_Capacity; }
4.1.3.3 empty() bool Buffer::empty ( ) [inline]
Definition at line 27 of file Buffer.h.
00027 { return m_Size == 0; }
4.1.3.4 end() bit8_t * Buffer::end ( ) const [inline]
Definition at line 36 of file Buffer.h.
00036 { return m_Buffer + m_Size; }
4.1.3.5 operator[]() [1/2] bit8_t & Buffer::operator[] (
              const std::size_t & pos ) [inline]
Definition at line 37 of file Buffer.h.
00037 { return m_Buffer[pos]; }
```

```
4.1.3.6 operator[]() [2/2] bit8_t & Buffer::operator[] (
               const std::size_t & pos ) const [inline]
Definition at line 38 of file Buffer.h.
00038 { return m_Buffer[pos]; }
4.1.3.7 set() [1/2] void Buffer::set (
               const Buffer & buffer ) [inline]
Definition at line 29 of file Buffer.h.
         m_Buffer = buffer.begin();
m_Size = buffer.size();
m_Capacity = buffer.capacity();
00031
00032
00033
00034 }
4.1.3.8 set() [2/2] void Buffer::set (
               unsigned char *\ b ) [inline]
Definition at line 28 of file Buffer.h.
00028 { m_Buffer = b; }
4.1.3.9 setSize() void Buffer::setSize (
               const std::size_t & size ) [inline]
Definition at line 40 of file Buffer.h.
00040 { m_Size = size; }
4.1.3.10 size() std::size_t Buffer::size ( ) const [inline]
Definition at line 24 of file Buffer.h.
00024 { return m_Size; }
```

The documentation for this class was generated from the following file:

• libs/core/include/Buffer.h

4.2 BufferLooper < SOURCE, DESTINATION > Class Template Reference

#include <libs/core/include/BufferLooper.h>

Public Member Functions

- BufferLooper (SOURCE &source, DESTINATION &dest, bool debug=false)
- void addSink (const spdlog::sink_ptr &sink, const spdlog::level::level_enum &level=spdlog::get_level())
- void loop (const std::uint32_t &m_NbrEventsToProcess=0)
- void printAllCounters ()
- std::shared_ptr< spdlog::logger > log ()
- void setDetectorIDs (const std::vector< DetectorID > &detectorIDs)

4.2.1 Detailed Description

```
template<typename SOURCE, typename DESTINATION> class BufferLooper< SOURCE, DESTINATION >
```

Definition at line 27 of file BufferLooper.h.

4.2.2 Constructor & Destructor Documentation

```
4.2.2.1 BufferLooper() template<typename SOURCE , typename DESTINATION >
BufferLooper< SOURCE, DESTINATION >::BufferLooper (
                SOURCE & source,
                DESTINATION & dest,
                bool debug = false ) [inline]
Definition at line 30 of file BufferLooper.h.
                                                                                     : m_Source(source),
      m_Destination(dest), m_Debug(debug)
00031
           m_Logger = spdlog::create<spdlog::sinks::null_sink_mt>("streamout");
if(!spdlog::get("streamout")) {    spdlog::register_logger(m_Logger);  }
00032
00033
00034
          m Source.setLogger(m Logger);
00035
           m Destination.setLogger(m Logger);
00036
```

4.2.3 Member Function Documentation

```
4.2.3.1 addSink() template<typename SOURCE , typename DESTINATION >
void BufferLooper< SOURCE, DESTINATION >::addSink (
             const spdlog::sink_ptr & sink,
              const spdlog::level::level_enum & level = spdlog::qet_level() ) [inline]
Definition at line 38 of file BufferLooper.h.
00039
         sink->set level(level);
00040
00041
         m_Sinks.push_back(sink);
00042
         m_Logger = std::make_shared<spdlog::logger>("streamout", begin(m_Sinks), end(m_Sinks));
00043
         m_Source.setLogger(m_Logger);
00044
         m_Destination.setLogger(m_Logger);
00045
```

```
4.2.3.2 log() template<typename SOURCE , typename DESTINATION >
std::shared_ptr< spdlog::logger > BufferLooper< SOURCE, DESTINATION >::log ( ) [inline]
Definition at line 233 of file BufferLooper.h.
00233 { return m_Logger; }
4.2.3.3 loop() template<typename SOURCE , typename DESTINATION >
void BufferLooper< SOURCE, DESTINATION >::loop (
            const std::uint32_t & m_NbrEventsToProcess = 0 ) [inline]
Definition at line 47 of file BufferLooper.h.
00048
         // clang-format off
00049
00050
        fmt::print(fg(fmt::color::medium_orchid) | fmt::emphasis::bold,
00052 " SSSSSSSSSSSSSS
     tttt\n"
00054 "S:::::SSSSSS::::::S t::::t
     t::::t\n"
00055 "S:::::S
                SSSSSSS t::::t
     t:::::t\n"
               00056 "S:::::S
mmmmmm mmmmmm 00057 "S:::::S +...
              \texttt{m} :::::: \texttt{mm} \quad \texttt{oo} :::::: \texttt{oo} \quad \texttt{u} :::: \texttt{u} \qquad \texttt{u} :::: \texttt{ut} :::: \texttt{t} \backslash \texttt{n} \texttt{"}
     mm::::::m
00058 " S::::SSSS
                  t:::::eeeaaaaaaaaa::::a
a::::a
m:::::mmm::::::mo::::o
     m::::m m::::mo::::o
S:::::S t:::::t ttttttr::::r
                                                      e::::::e
                                                                      a::::a a:::::a m:::::m
m::::m m::::mo::::o o::::ou:::::uuuu:::::u t:::::t ttttt\n"
00064 "SSSSSSS S::::S t:::::tttt:::::r e:::::e
                                                                      a::::a
                                                                              a:::::a m:::::m
     m::::m m::::mo:::::00000:::::0u:::::::::::uu
                                                  t:::::tttt::::t\n"
00065 "S::::::SSSSSS:::::S tt::::::::tr:::::r
                                                       e::::::eeeeeeeea:::::aaaa::::::a m::::m
     \texttt{m::::m} \qquad \texttt{m::::mo:::::::::::o} \quad \texttt{u:::::::::::u}
                                                   tt:::::::t\n"
ee::::::::: a::::::aa:::am::::m
            tt::::::::tt\n"
     m::::m
00067 " SSSSSSSSSSSSS
                          tttttttttt rrrrrr
                                                          eeeeeeeeee aaaaaaaaa aaammmmmm
                                                   ttttttttttt {}\n"
            mmmmmm
                   00000000000
                                    uuuuuuu uuuu
00068 "\n",
00069 \ \text{fmt::format(fg(fmt::color::red)} \ | \ \text{fmt::emphasis::bold, "v(}", \ \text{streamout\_version.to\_string()));} \\
00070
       // clang-format on
        00071
        log() -> info("Streamout Version : {}", streamout_version.to_string());
log() -> info("Using InterfaceReader {} version {}", m_Source.getName(),
00072
     m Source.getVersion().to string());
00074
        log()->info("Using InterfaceWriter {} version {}", m_Destination.getName(),
    m_Destination.getVersion().to_string());
00075
00076
         if (!m Destination.checkCompatibility(m Source.getName(), m Source.getVersion().to string()))
          log()->critical("{} version {} is not compatible with {} version {} ! ", m_Source.getName(),
00078
     \verb|m_Source.getVersion().to_string(), \verb|m_Destination.getName(), \verb|m_Destination.getVersion().to_string())|; \\
          log()->info("Compatible Interfaces for {} are", m_Destination.getName());
for(std::map<std::string, std::string>::iterator it = m_Destination.getCompatibility().begin();
00079
08000
     it != m_Destination.getCompatibility().end(); ++it) { log()->info("{} version {}", it->first,
     it->second); }
00081
          std::exit(-1);
00082
00083
        if(!m_DetectorIDs.empty())
00084
00085
          std::string ids;
00086
          for(std::vector<DetectorID>::const_iterator it = m_DetectorIDs.cbegin(); it !=
     m_DetectorIDs.cend(); ++it) ids += std::to_string(static_cast<std::uint16_t>(*it)) + ";";
00087
          log()->info("Detector ID(s) other than {} will be ignored", ids);
00088
00089
        RawBufferNavigator bufferNavigator;
00090
00091
        Timer
                        timer;
00092
        timer.start();
```

```
00093
         m_Source.start();
         m_Destination.start();
00094
00095
          while(m_Source.nextEvent() && m_NbrEventsToProcess >= m_NbrEvents)
00096
00097
           m_Destination.setEventNumber(m_Source.getEventNumber());
00098 /*************
00099 /*** START EVENT ***/
00100
           m_Source.startEvent();
00101
           m_Destination.startEvent();
00102 /**************
00103
           m_Logger->warn("===*** Event {} ***===", m_NbrEvents);
00104
           while (m_Source.nextDIFbuffer())
00105
00106
00107
              const Buffer& buffer = m_Source.getBuffer();
00108
00109
             bufferNavigator.setBuffer(buffer);
              if(std::find(m_DetectorIDs.begin(), m_DetectorIDs.end(),
00110
     static_cast<DetectorID> (bufferNavigator.getDetectorID())) == m_DetectorIDs.end())
00111
             {
00112
               m_Logger->debug("Ignoring detector ID : {}", bufferNavigator.getDetectorID());
00113
             }
00114
00115
             std::int32_t idstart = bufferNavigator.getStartOfPayload();
00116
             if(m_Debug && idstart == -1) m_Logger->info(to_hex(buffer));
00117
00118
             c.DIFStarter[idstart]++;
00119
00120 /************
00121 /*** START DIF ***/
00122
             m_Source.startDIF();
00123
             m_Destination.startDIF();
00124 /**************
00125
00126
             PayloadLoader payloadLoader;
00127
00128
             std::unique_ptr<Payload>& d = payloadLoader.getPayload(bufferNavigator.getDetectorID());
             if(d == nullptr)
             {
               m\_Logger->error("streamout don't know how to parse the payload for detector_id {} !
     SKIPPING !", bufferNavigator.getDetectorID());
00132
               continue;
00133
             }
00134
00135
              // This is really a big error so skip DIF entirely if exception occurs
00136
              try
00137
             {
00138
               d->setBuffer(bufferNavigator.getPayload());
               m_Logger->info("Parsing payload DIF_ID {} (detector_id {})", d->getDIFid(),
00139
     bufferNavigator.getDetectorID());
00140
             }
00141
              catch (const Exception& e)
00142
             {
00143
               m_Logger->error("{}", e.what());
00144
               continue;
             }
00145
00146
              if(buffer.end() != d->end()) m_Logger->error("DIF BUFFER END {} {} ", fmt::ptr(buffer.end()),
00147
     fmt::ptr(d->end()));
00148
             assert(buffer.end() == d->end());
00149
00150
             c.DIFPtrValueAtReturnedPos[d->begin()[d->getEndOfDIFData() - 3]]++;
00151
             assert(d->begin()[d->getEndOfDIFData() - 3] == 0xa0);
00152
00153
              c.SizeAfterDIFPtr[d->getSizeAfterDIFPtr()]++;
00154
              m_Destination.processDIF(*d);
00155
              for(std::size_t i = 0; i < d->getNumberOfFrames(); ++i)
00156
              {
00157
00158
               m_Source.startFrame();
00159
                m_Destination.startFrame();
00160
00161
                m_Destination.processFrame(*d, i);
                for(std::size_t j = 0; j < static_cast<std::size_t>(Hardware::NUMBER_PAD); ++j)
00162
00163
00164
                  if (d->getThresholdStatus(i, j) != 0)
00165
                 {
00166
                   m_Source.startPad();
00167
                    m_Destination.startPad();
00168
                   m Destination.processPadInFrame(*d, i, j);
00169
                    m Source.endPad();
00170
                    m_Destination.endPad();
00171
00172
00173
                11
00174
                m Source.endFrame();
00175
                m Destination.endFrame();
```

00176

//

```
^{'} ^{'} ^{'} // If I want SlowControl I need to check for it first, If there is an error then it's not a
00177
00178
     big deal just continue and say is bad SlowControl
00179
             /*try
00180 {
00181 d.setSCBuffer();
00182 }
00183 catch(const Exception& e)
00184 {
00185 m_Logger->error("{}", e.what());
00186 }
00187
00188 bool processSC = false;
00189 if (d.hasSlowControl())
00190
00191 c.hasSlowControl++;
00192 processSC = true;
00193
00194 if(d.badSCData())
00195 {
00196 c.hasBadSlowControl++;
00197 processSC = false;
00198
00199 if(processSC) { m_Destination.processSlowControl(d.getSCBuffer()); }*/
00201
               // Buffer eod = d.getEndOfAllData();
              // c.SizeAfterAllData[eod.size()]++;
// bit8_t* debug_variable_3 = eod.end();
00202
00203
00204
              // if(buffer.end() != debug_variable_3) m_Logger->info("END DATA BUFFER END {} {} ",
     fmt::ptr(buffer.end()), fmt::ptr(debug_variable_3));
             // assert (buffer.end() == debug_variable_3);
00205
00206
              // if(eod.size() != 0) m_Logger->info("End of Data remaining stuff : {}", to_hex(eod));*/
00207
00208
              /*int nonzeroCount = 0;
00209 for(bit8_t* it = eod.begin(); it != eod.end(); it++)
00210 if(static_cast<int>(*it) != 0) nonzeroCount++;
00211 c.NonZeroValusAtEndOfData[nonzeroCount]++; */
00212
00213
00214
              11
              m_Source.endDIF();
00215
00216
              m Destination.endDIF();
00217
           } // end of DIF while loop
00218
00219
            m_Logger->warn("===*** Event {} ***===", m_NbrEvents);
00220
           m_NbrEvents++;
00221 /*************
00222 /*** END EVENT ***/
00223 m_Source.endEvent();
00224
            m_Destination.endEvent();
00225 /*************/
00226
       } // end of event while loop
00227
         m_Destination.end();
00228
          m Source.end();
        timer.stop();
00229
          fmt::print(fg(fmt::color::green) | fmt::emphasis::bold, "=== elapsed time {}ms ({}ms/event)
      ===\n", timer.getElapsedTime() / 1000, timer.getElapsedTime() / (1000 * m_NbrEvents));
00231 }
\textbf{4.2.3.4} \quad \textbf{printAllCounters()} \quad \texttt{template} < \texttt{typename SOURCE} \text{ , typename DESTINATION} >
void BufferLooper< SOURCE, DESTINATION >::printAllCounters ( ) [inline]
Definition at line 232 of file BufferLooper.h.
00232 { c.printAllCounters(); }
4.2.3.5 setDetectorIDs() template<typename SOURCE , typename DESTINATION >
void BufferLooper< SOURCE, DESTINATION >::setDetectorIDs (
               const std::vector< DetectorID > & detectorIDs ) [inline]
Definition at line 235 of file BufferLooper.h.
00235 { m_DetectorIDs = detectorIDs; }
The documentation for this class was generated from the following file:
```

libs/core/include/BufferLooper.h

4.3 BufferLooperCounter Struct Reference

#include <libs/core/include/BufferLooperCounter.h>

Public Member Functions

- void printCounter (const std::string &description, const std::map< int, int > &m, const std::ios_base::fmtflags &base=std::ios_base::dec)
- void printAllCounters ()

Public Attributes

- int hasSlowControl = 0
- int hasBadSlowControl = 0
- std::map< int, int > DIFStarter
- std::map< int, int > DIFPtrValueAtReturnedPos
- std::map< int, int > SizeAfterDIFPtr
- std::map< int, int > SizeAfterAllData
- std::map< int, int > NonZeroValusAtEndOfData

4.3.1 Detailed Description

Definition at line 12 of file BufferLooperCounter.h.

4.3.2 Member Function Documentation

4.3.2.1 printAllCounters() void BufferLooperCounter::printAllCounters ()

Definition at line 11 of file BufferLooperCounter.cc.

```
00012 {
00013    fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, "BUFFER LOOP FINAL STATISTICS : \n");
00014    printCounter("Start of DIF header", DIFStarter);
00015    printCounter("Value after DIF data are processed", DIFPtrValueAtReturnedPos, std::ios_base::hex);
00016    printCounter("Size remaining in buffer after end of DIF data", SizeAfterDIFPtr);
00017    fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, "Number of Slow Control found {} out of which {} are bad\n", hasSlowControl, hasBadSlowControl);
00018    printCounter("Size remaining after all of data have been processed", SizeAfterAllData);
00019    printCounter("Number on non zero values in end of data buffer", NonZeroValusAtEndOfData);
00020 }
```

Definition at line 22 of file BufferLooperCounter.cc.

```
00023 {
00024
           std::string out{"statistics for " + description + " : \n"};
           for(std::map<int, int>::const_iterator it = m.begin(); it != m.end(); it++)
00025
00026
             if(it != m.begin()) out += ",";
out += " [";
00027
00028
             switch(base)
00029
00030
               case std::ios_base::dec:    out += to_dec(static_cast<std::uint32_t>(it->first)); break;
case std::ios_base::hex:    out += to_hex(static_cast<std::uint32_t>(it->first)); break;
case std::ios_base::oct:    out += to_oct(static_cast<std::uint32_t>(it->first)); break;
00031
00032
00033
00034
                default: out += to_dec(static_cast<std::uint32_t>(it->first)); break;
00035
00036
             out += "]=" + std::to_string(it->second);
00037
00038
         out += "\n";
00039
          fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, out);
00040 }
```

4.3.3 Member Data Documentation

4.3.3.1 DIFPtrValueAtReturnedPos std::map<int, int> BufferLooperCounter::DIFPtrValueAt↔ ReturnedPos

Definition at line 18 of file BufferLooperCounter.h.

4.3.3.2 DIFStarter std::map<int, int> BufferLooperCounter::DIFStarter

Definition at line 17 of file BufferLooperCounter.h.

4.3.3.3 hasBadSlowControl int BufferLooperCounter::hasBadSlowControl = 0

Definition at line 16 of file BufferLooperCounter.h.

4.3.3.4 hasSlowControl int BufferLooperCounter::hasSlowControl = 0

Definition at line 15 of file BufferLooperCounter.h.

4.4 DIF Class Reference 15

4.3.3.5 NonZeroValusAtEndOfData std::map<int, int> BufferLooperCounter::NonZeroValusAtEnd↔ OfData

Definition at line 21 of file BufferLooperCounter.h.

4.3.3.6 SizeAfterAllData std::map<int, int> BufferLooperCounter::SizeAfterAllData

Definition at line 20 of file BufferLooperCounter.h.

4.3.3.7 SizeAfterDIFPtr std::map<int, int> BufferLooperCounter::SizeAfterDIFPtr

Definition at line 19 of file BufferLooperCounter.h.

The documentation for this struct was generated from the following files:

- libs/core/include/BufferLooperCounter.h
- libs/core/src/BufferLooperCounter.cc

4.4 DIF Class Reference

#include <libs/interface/ROOT/include/DIF.h>

Inheritance diagram for DIF:



Public Member Functions

- void clear ()
- void addHit (const Hit &)
- void setID (const std::uint8_t &)
- std::uint8_t getID () const
- void setDTC (const std::uint32_t &)
- std::uint32_t getDTC () const
- void setDetectorID (const std::uint32_t &)
- std::uint8_t getDetectorID () const
- void setGTC (const std::uint32_t &)
- std::uint32_t getGTC () const
- void setDIFBCID (const std::uint32_t &)
- std::uint32_t getDIFBCID () const
- void setAbsoluteBCID (const std::uint64_t &)
- std::uint64_t getAbsoluteBCID () const
- std::vector< Hit >::const_iterator cbegin () const
- std::vector< Hit >::const_iterator cend () const

4.4.1 Detailed Description

Definition at line 16 of file DIF.h.

4.4.2 Member Function Documentation

```
4.4.2.1 addHit() void DIF::addHit (
               const Hit & hit )
Definition at line 10 of file DIF.cc.
00010 { m_Hits.push_back(hit); }
4.4.2.2 cbegin() std::vector< Hit >::const_iterator DIF::cbegin ( ) const
Definition at line 32 of file DIF.cc. 00032 { return m_Hits.cbegin(); }
4.4.2.3 cend() std::vector< Hit >::const_iterator DIF::cend ( ) const
Definition at line 34 of file DIF.cc.
00034 { return m_Hits.cend(); }
4.4.2.4 clear() void DIF::clear ()
Definition at line 36 of file DIF.cc.
00036 { m_Hits.clear(); }
4.4.2.5 getAbsoluteBCID() std::uint64_t DIF::getAbsoluteBCID ( ) const
Definition at line 30 of file DIF.cc.
00030 { return m_AbsoluteBCID; }
4.4.2.6 getDetectorID() std::uint8_t DIF::getDetectorID ( ) const
Definition at line 40 of file DIF.cc.
00040 { return m_DetectorID; }
```

4.4 DIF Class Reference 17

```
4.4.2.7 getDIFBCID() std::uint32_t DIF::getDIFBCID ( ) const
Definition at line 26 of file DIF.cc.
00026 { return m_DIFBCID; }
\textbf{4.4.2.8} \quad \textbf{getDTC()} \quad \texttt{std::uint32\_t DIF::getDTC ()} \quad \texttt{const}
Definition at line 18 of file DIF.cc.
00018 { return m_DTC; }
\textbf{4.4.2.9} \quad \textbf{getGTC()} \quad \texttt{std::uint32\_t DIF::getGTC ()} \quad \texttt{const}
Definition at line 22 of file DIF.cc.
00022 { return m_GTC; }
4.4.2.10 getID() std::uint8_t DIF::getID ( ) const
Definition at line 14 of file DIF.cc.
00014 { return m_ID; }
4.4.2.11 setAbsoluteBCID() void DIF::setAbsoluteBCID (
                const std::uint64_t & absolutebcid )
Definition at line 28 of file DIF.cc.
00028 { m_AbsoluteBCID = absolutebcid; }
4.4.2.12 setDetectorID() void DIF::setDetectorID (
                const std::uint32_t & detector_id )
Definition at line 38 of file DIF.cc.
00038 { m_DetectorID = detector_id; }
4.4.2.13 setDIFBCID() void DIF::setDIFBCID (
                const std::uint32_t & difbcid )
Definition at line 24 of file DIF.cc.
00024 { m_DIFBCID = difbcid; }
```

The documentation for this class was generated from the following files:

- libs/interface/ROOT/include/DIF.h
- libs/interface/ROOT/src/DIF.cc

4.5 DIFPtr Class Reference

M3 MICROROC and HARDROC2 dataformat.

#include <libs/core/include/Payload100.h>

4.5.1 Detailed Description

M3 MICROROC and HARDROC2 dataformat.

Data from the DAQ (once at the beginning of the file):

```
(1 fois par fichier) [Données venant de la DAQ]
data format version (8 bits)
daq software version (16 bits)
SDCC firmware version (16 bits)
DIF firmware version (16 bits)
timestamp (32bits) (secondes depuis le 01/01/1970) (5)
timestamp (32bits) (milliseconde)
```

Explication:

- data format version = la version du format de données utilisée, c'est la version 13
- daq software version = la version du soft d'acquisition labview ou Xdaq
- SDCC firmware version = la version du code VHDL de la carte SDCC
- DIF firmware version = la version du code VHDL de la carte DIF
- timestamp = secondes et milliseconde depuis le 01/01/1970

Figure 1 Data from the DAQ (once at the beginning of the file)

Data from the DIF analog or/and digital (loop):

```
| If Joseph (19) | Connection ventor de la California (California (California
```

Figure 2 Data from the DIF analog or/and digital

Data from the DAQ (slowcontrol):

```
(1 fois par slow control, c'est à dire 1 fois par fichier par DIF) [Données venant de la DAQ]

SC Header (0x81)

DIF ID (8 bits)

ASIC Header (8 bits)

Size SC ASIC [74 ou 109 selon le chip]

SC ASIC (n x 8bits)

DIF ID (8 bits)

ASIC Header (8 bits)

Size SC ASIC [74 ou 109 selon le chip]

SC ASIC (n x 8bits)

Size SC ASIC [74 ou 109 selon le chip]

SC ASIC (n x 8bits)

In= 74 ou 109 selon le chip]

SC Trailer (0xA1)
```

Explication:

- SC Header (0xB1) / SC Trailer (0xA1) = balise pour repérer les infos sur le Slow Control
- DIF ID = identité de la DIF qui envoient les data
- Size SC ASIC = taille de la trame SC d'un CHIP (MR=74 byte, HR = 109 byte)
- ASIC header (8 bits) : header dans le SC
- SC ASIC (n x 8bits) : de 1 a 48 par DIF moins ceux qui sont bypassés

Figure 3 Data from the DAQ (slowcontrol)

The documentation for this class was generated from the following file:

libs/core/include/Payload100.h

4.6 DIFSlowControl Class Reference

```
#include <libs/core/include/DIFSlowControl.h>
```

Public Member Functions

- DIFSlowControl (const std::uint8_t &version, const std::uint8_t &DIFid, unsigned char *buf)
 Constructor.
- std::uint8_t getDIFId ()

get DIF id

std::map< int, std::map< std::string, int > > getChipsMap ()

Get chips map.

• std::map< std::string, int > getChipSlowControl (const int &asicid)

Get one chip map.

• int getChipSlowControl (const std::int8_t &asicid, const std::string ¶m)

Get one Chip value.

- $std::map < int, std::map < std::string, int > >::const_iterator cbegin () const$
- std::map< int, std::map< std::string, int > >::const_iterator cend () const

4.6.1 Detailed Description

Definition at line 13 of file DIFSlowControl.h.

4.6.2 Constructor & Destructor Documentation

```
4.6.2.1 DIFSlowControl() DIFSlowControl::DIFSlowControl ( const std::uint8_t & version, const std::uint8_t & DIFid, unsigned char * buf )
```

Constructor.

Parameters

version	Data format version
DIFid	DIF id
buf	Pointer to the Raw data buffer

Definition at line 7 of file DIFSlowControl.cc.

```
m_Version(version), m_DIFId(DIfId), m_AsicType(2)
80000
00009
        if(cbuf[0] != 0xb1) return;
00010
        int header_shift{6};
        if (m_Version < 8) m_NbrAsic = cbuf[5];</pre>
00011
00012
        else
00013
        m_DIFId
00014
                      = cbuf[1];
00015
         m_NbrAsic
                      = cbuf[2];
         header_shift = 3;
00016
00017
00018
       int size_hardroc1 = m_NbrAsic * 72 + header_shift + 1;
00019
       if(cbuf[size_hardroc1 - 1] != 0xa1) size_hardroc1 = 0;
00020
00021
       int size_hardroc2 = m_NbrAsic * 109 + header_shift + 1;
        if(cbuf[size_hardroc2 - 1] != 0xa1) size_hardroc2 = 0;
00022
       if(size_hardroc1 != 0)
00023
00024
00025
         FillHR1(header_shift, cbuf);
00026
         m_AsicType = 1;
00027
00028
       else if(size_hardroc2 != 0)
         FillHR2(header_shift, cbuf);
00029
00030
       else
00031
         return;
00032 }
```

4.6.3 Member Function Documentation

```
4.6.3.1 cbegin() std::map< int, std::map< std::string, int > >::const_iterator DIFSlow← Control::cbegin () const [inline]
```

Definition at line 47 of file DIFSlowControl.h.

```
00047 { return m_MapSC.cbegin(); }
```

```
4.6.3.2 cend() std::map< int, std::map< std::string, int > >::const_iterator DIFSlowControl \leftarrow ::cend ( ) const [inline]
```

Definition at line 49 of file DIFSlowControl.h.

```
00049 { return m_MapSC.cend(); }
```

Get one chip map.

Parameters

```
asicid ASIC ID
```

Returns

a map of <string (parameter name), int (parameter value) >

Definition at line 38 of file DIFSlowControl.cc.

```
00038 { return m_MapSC[asicid]; }
```

4.6.3.4 getChipSlowControl() [2/2] int DIFSlowControl::getChipSlowControl (const std::int8_t & asicid, const std::string & param) [inline]

Get one Chip value.

Parameters

asicid	ASic ID
param	Parameter name

Definition at line 40 of file DIFSlowControl.cc.

```
00040 { return getChipSlowControl(asicid)[param]; }
```

```
4.6.3.5 getChipsMap() std::map< int, std::map< std::string, int >> DIFSlowControl::get\leftarrow ChipsMap ( ) [inline]
```

Get chips map.

Returns

a map of < Asic Id, map of < string (parameter name),int (parameter value) >

Definition at line 36 of file DIFSlowControl.cc.

```
00036 { return m_MapSC; }
```

00034 { return m_DIFId; }

4.6.3.6 getDIFId() std::uint8_t DIFSlowControl::getDIFId () [inline] get DIF id Definition at line 34 of file DIFSlowControl.cc.

The documentation for this class was generated from the following files:

- libs/core/include/DIFSlowControl.h
- libs/core/src/DIFSlowControl.cc

4.7 Event Class Reference

#include <libs/interface/ROOT/include/Event.h>

Inheritance diagram for Event:



Public Member Functions

- std::uint32_t getEventNumber ()
- void setEventNumber (const std::uint32_t &evtNbr)
- void clear ()
- void addDIF (const DIF &dif)
- std::map< std::uint8_t, DIF >::const_iterator cbegin () const
- std::map< std::uint8_t, DIF >::const_iterator cend () const

4.7.1 Detailed Description

Definition at line 15 of file Event.h.

4.7.2 Member Function Documentation

```
4.7.2.2 cbegin() std::map< std::uint8_t, DIF >::const_iterator Event::cbegin ( ) const
Definition at line 16 of file Event.cc.
00016 { return DIFs.cbegin(); }
4.7.2.3 cend() std::map< std::uint8_t, DIF >::const_iterator Event::cend ( ) const
Definition at line 18 of file Event.cc.
00018 { return DIFs.cend(); }
4.7.2.4 clear() void Event::clear ()
Definition at line 12 of file Event.cc.
00012 { DIFs.clear(); }
4.7.2.5 getEventNumber() std::uint32_t Event::getEventNumber ( )
Definition at line 8 of file Event.cc.
00008 { return m_EventNumber; }
4.7.2.6 setEventNumber() void Event::setEventNumber (
              const std::uint32_t & evtNbr )
Definition at line 10 of file Event.cc.
00010 { m_EventNumber = evtNbr; }
```

The documentation for this class was generated from the following files:

- libs/interface/ROOT/include/Event.h
- libs/interface/ROOT/src/Event.cc

4.8 Exception Class Reference

#include <libs/core/include/Exception.h>

Public Member Functions

- virtual const char * what () const noexcept
- Exception (const std::string &message)
- Exception (const std::int32_t &error, const std::string &message)
- std::int32_t error ()
- std::string message ()

4.8.1 Detailed Description

Definition at line 11 of file Exception.h.

4.8.2 Constructor & Destructor Documentation

```
4.8.2.1 Exception() [1/2] Exception::Exception (
              const std::string & message ) [inline], [explicit]
Definition at line 15 of file Exception.h.
00015 : m_Message(message) { constructWhat(); }
4.8.2.2 Exception() [2/2] Exception::Exception (
              const std::int32_t & error,
              const std::string & message ) [inline]
Definition at line 16 of file Exception.h.
00016 : m_Error(error), m_Message(message) { constructWhat(); }
4.8.3 Member Function Documentation
4.8.3.1 error() std::int32_t Exception::error ( ) [inline]
Definition at line 17 of file Exception.h.
00017 { return m_Error; }
4.8.3.2 message() std::string Exception::message ( ) [inline]
Definition at line 18 of file Exception.h.
00018 { return m_Message; }
4.8.3.3 what() virtual const char * Exception::what ( ) const [inline], [virtual], [noexcept]
Definition at line 14 of file Exception.h.
00014 { return m_What.c_str(); }
```

libs/core/include/Exception.h

The documentation for this class was generated from the following file:

4.9 Hit Class Reference

#include <libs/interface/ROOT/include/Hit.h>

Inheritance diagram for Hit:



Public Member Functions

- void clear ()
- void setDIF (const std::uint8_t &)
- void setASIC (const std::uint8_t &)
- void setChannel (const std::uint8_t &)
- void setThreshold (const std::uint8_t &)
- void setDTC (const std::uint32_t &)
- void setGTC (const std::uint32 t &)
- void setDIFBCID (const std::uint32_t &)
- void setFrameBCID (const std::uint32_t &)
- void setTimestamp (const std::uint32_t &)
- void setAbsoluteBCID (const std::uint64_t &)
- std::uint8_t getDIFid () const
- std::uint8_t getASICid () const
- std::uint8_t getChannel () const
- std::uint8_t getThreshold () const
- std::uint32_t getDTC () const
- std::uint32_t getGTC () const
- std::uint32_t getDIFBCID () const
- std::uint32_t getFrameBCID () const
- std::uint32_t getTimestamp () const
- std::uint64_t getAbsoluteBCID () const

4.9.1 Detailed Description

Definition at line 10 of file Hit.h.

4.9.2 Member Function Documentation

4.9 Hit Class Reference 27

4.9.2.1 clear() void Hit::clear () Definition at line 7 of file Hit.cc. 00009 m_DIF m_ASIC = 0; 00010 00011 m_Channel = 0; $m_{\text{Threshold}} = 0;$ 00012 00013 m_DTC = 0; 00014 m_GTC 00015 m_DIFBCID = 0; 00016 m_FrameBCID 00017 m_Timestamp = 0; 00018 m_AbsoluteBCID = 0; 00019 } 4.9.2.2 getAbsoluteBCID() std::uint64_t Hit::getAbsoluteBCID () const Definition at line 59 of file Hit.cc. 00059 { return m_AbsoluteBCID; } 4.9.2.3 getASICid() std::uint8_t Hit::getASICid () const Definition at line 43 of file Hit.cc. 00043 { return m_ASIC; } 4.9.2.4 getChannel() std::uint8_t Hit::getChannel () const Definition at line 45 of file Hit.cc. 00045 { return m_Channel; } 4.9.2.5 getDIFBCID() std::uint32_t Hit::getDIFBCID () const Definition at line 53 of file Hit.cc. 00053 { return m_DIFBCID; } 4.9.2.6 getDIFid() std::uint8_t Hit::getDIFid () const Definition at line 41 of file Hit.cc. 00041 { return m_DIF; }

4.9.2.7 getDTC() std::uint32_t Hit::getDTC () const

Definition at line 49 of file Hit.cc. 00049 { return m_DTC; }

```
4.9.2.8 getFrameBCID() std::uint32_t Hit::getFrameBCID ( ) const
Definition at line 55 of file Hit.cc.
00055 { return m_FrameBCID; }
4.9.2.9 getGTC() std::uint32_t Hit::getGTC ( ) const
Definition at line 51 of file Hit.cc.
00051 { return m_GTC; }
\textbf{4.9.2.10} \quad \textbf{getThreshold()} \quad \texttt{std::uint8\_t Hit::getThreshold ()} \quad \texttt{const}
Definition at line 47 of file Hit.cc.
00047 { return m_Threshold; }
\textbf{4.9.2.11} \quad \textbf{getTimestamp()} \quad \texttt{std::uint32\_t Hit::getTimestamp ()} \quad \texttt{const}
Definition at line 57 of file Hit.cc.
00057 { return m_Timestamp; }
4.9.2.12 setAbsoluteBCID() void Hit::setAbsoluteBCID (
                const std::uint64_t & absolutebcid )
Definition at line 39 of file Hit.cc.
00039 { m_AbsoluteBCID = absolutebcid; }
4.9.2.13 setASIC() void Hit::setASIC (
                const std::uint8_t & asic )
Definition at line 23 of file Hit.cc.
00023 { m_ASIC = asic; }
4.9.2.14 setChannel() void Hit::setChannel (
                const std::uint8_t & channel )
Definition at line 25 of file Hit.cc.
00025 { m_Channel = channel; }
```

4.9 Hit Class Reference 29

```
4.9.2.15 setDIF() void Hit::setDIF (
              const std::uint8_t & dif )
Definition at line 21 of file Hit.cc.
00021 { m_DIF = dif; }
4.9.2.16 setDIFBCID() void Hit::setDIFBCID (
              const std::uint32_t & difbcid )
Definition at line 33 of file Hit.cc.
00033 { m_DIFBCID = difbcid; }
4.9.2.17 setDTC() void Hit::setDTC (
              const std::uint32_t & dtc )
Definition at line 29 of file Hit.cc.
00029 { m_DTC = dtc; }
4.9.2.18 setFrameBCID() void Hit::setFrameBCID (
              const std::uint32_t & framebcid )
Definition at line 35 of file Hit.cc.
00035 { m_FrameBCID = framebcid; }
4.9.2.19 setGTC() void Hit::setGTC (
              const std::uint32_t & gtc )
Definition at line 31 of file Hit.cc.
00031 { m_{GTC} = gtc; }
4.9.2.20 setThreshold() void Hit::setThreshold (
              const std::uint8_t & threshold )
Definition at line 27 of file Hit.cc.
00027 { m_Threshold = threshold; }
4.9.2.21 setTimestamp() void Hit::setTimestamp (
              const std::uint32_t & timestamp )
Definition at line 37 of file Hit.cc.
00037 { m_Timestamp = timestamp; }
```


The documentation for this class was generated from the following files:

- libs/interface/ROOT/include/Hit.h
- libs/interface/ROOT/src/Hit.cc

4.10 Interface Class Reference

#include <libs/core/include/Interface.h>

Inheritance diagram for Interface:

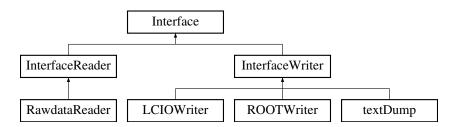

Public Member Functions

- Interface (const std::string &name, const std::string &version, const InterfaceType &type)
- virtual ∼Interface ()=default
- virtual void startEvent ()
- virtual void endEvent ()
- virtual void startDIF ()
- virtual void endDIF ()
- virtual void startFrame ()
- virtual void endFrame ()
- virtual void startPad ()
- virtual void endPad ()
- std::shared_ptr< spdlog::logger > & log ()
- void setLogger (const std::shared_ptr< spdlog::logger > &logger)
- std::string getName ()
- Version getVersion ()
- std::uint32 t getEventNumber ()
- void setEventNumber (const std::uint32_t &nbr)
- std::uint32_t getRunNumber ()
- void setRunNumber (const std::uint32_t &nbr)

Protected Attributes

- std::uint32_t m_EventNumber {0}
- std::uint32_t m_RunNumber {0}

4.10.1 Detailed Description

Definition at line 38 of file Interface.h.

4.10.2 Constructor & Destructor Documentation

```
4.10.2.1 Interface() Interface::Interface (
              const std::string & name,
              const std::string & version,
              const InterfaceType & type ) [inline]
Definition at line 41 of file Interface.h.
00041 : m_Name(name), m_Version(version) \{\}
4.10.2.2 \simInterface() virtual Interface::\simInterface ( ) [virtual], [default]
4.10.3 Member Function Documentation
4.10.3.1 endDIF() virtual void Interface::endDIF ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 46 of file Interface.h.
00046 {}
4.10.3.2 endEvent() virtual void Interface::endEvent ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 44 of file Interface.h.
00044 {}
4.10.3.3 endFrame() virtual void Interface::endFrame ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 48 of file Interface.h.
00048 {}
4.10.3.4 endPad() virtual void Interface::endPad ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 50 of file Interface.h.
00050 {}
```

```
4.10.3.5 getEventNumber() std::uint32_t Interface::getEventNumber ( ) [inline]
Definition at line 55 of file Interface.h.
00055 { return m_EventNumber; }
\textbf{4.10.3.6} \quad \textbf{getName()} \quad \texttt{std::string Interface::getName ()} \quad \texttt{[inline]}
Definition at line 53 of file Interface.h.
00053 { return m_Name; }
\textbf{4.10.3.7} \quad \textbf{getRunNumber()} \quad \texttt{std::uint32\_t Interface::getRunNumber ()} \quad \texttt{[inline]}
Definition at line 57 of file Interface.h.
00057 { return m_RunNumber; }
4.10.3.8 getVersion() Version Interface::getVersion ( ) [inline]
Definition at line 54 of file Interface.h.
00054 { return m_Version; }
4.10.3.9 log() std::shared_ptr< spdlog::logger > & Interface::log ( ) [inline]
Definition at line 51 of file Interface.h.
00051 { return m_Logger; }
4.10.3.10 setEventNumber() void Interface::setEventNumber (
               const std::uint32_t & nbr ) [inline]
Definition at line 56 of file Interface.h.
00056 { m_EventNumber = nbr; }
4.10.3.11 setLogger() void Interface::setLogger (
               const std::shared_ptr< spdlog::logger > & logger ) [inline]
Definition at line 52 of file Interface.h.
00052 { m_Logger = logger; }
```

```
4.10.3.12 setRunNumber() void Interface::setRunNumber (
              const std::uint32_t & nbr ) [inline]
Definition at line 58 of file Interface.h.
00058 { m_RunNumber = nbr; }
4.10.3.13 startDIF() virtual void Interface::startDIF ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 45 of file Interface.h.
4.10.3.14 startEvent() virtual void Interface::startEvent ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 43 of file Interface.h.
00043 {}
4.10.3.15 startFrame() virtual void Interface::startFrame ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 47 of file Interface.h.
00047 {}
4.10.3.16 startPad() virtual void Interface::startPad ( ) [inline], [virtual]
Reimplemented in LCIOWriter, and ROOTWriter.
Definition at line 49 of file Interface.h.
00049 {}
4.10.4 Member Data Documentation
```

4.10.4.1 m_EventNumber std::uint32_t Interface::m_EventNumber {0} [protected]

Generated by Doxygen

Definition at line 61 of file Interface.h.

```
4.10.4.2 m_RunNumber std::uint32_t Interface::m_RunNumber {0} [protected]
```

Definition at line 62 of file Interface.h.


The documentation for this class was generated from the following file:

• libs/core/include/Interface.h

4.11 InterfaceReader Class Reference

```
#include <libs/core/include/Interface.h>
```

Inheritance diagram for InterfaceReader:

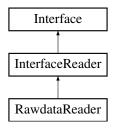

Public Member Functions

- InterfaceReader (const std::string &name, const std::string &version)
- virtual \sim InterfaceReader ()=default

Protected Attributes

• Buffer m_Buffer

4.11.1 Detailed Description

Definition at line 71 of file Interface.h.

4.11.2 Constructor & Destructor Documentation

4.11.2.2 ~InterfaceReader() virtual InterfaceReader::~InterfaceReader () [virtual], [default]

4.11.3 Member Data Documentation

4.11.3.1 m_Buffer Buffer InterfaceReader::m_Buffer [protected]

Definition at line 78 of file Interface.h.


The documentation for this class was generated from the following file:

• libs/core/include/Interface.h

4.12 InterfaceWriter Class Reference

#include <libs/core/include/Interface.h>

Inheritance diagram for InterfaceWriter:

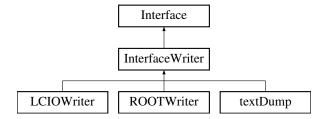

Public Member Functions

- InterfaceWriter (const std::string &name, const std::string &version)
- void addCompatibility (const std::string &name, const std::string &version)
- std::map< std::string, std::string > getCompatibility ()
- bool checkCompatibility (const std::string &name, const std::string &version)
- virtual \sim InterfaceWriter ()=default

Additional Inherited Members

4.12.1 Detailed Description

Definition at line 81 of file Interface.h.

4.12.2 Constructor & Destructor Documentation

```
const std::string & name,
              const std::string & version ) [inline]
Definition at line 84 of file Interface.h.
00084 : Interface(name, version, InterfaceType::Writer) {}
4.12.2.2 ~InterfaceWriter() virtual InterfaceWriter::~InterfaceWriter ( ) [virtual], [default]
4.12.3 Member Function Documentation
4.12.3.1 addCompatibility() void InterfaceWriter::addCompatibility (
              const std::string & name,
              const std::string & version ) [inline]
Definition at line 86 of file Interface.h.
00086 { m_Compatible[name] = version; }
\textbf{4.12.3.2} \quad \textbf{checkCompatibility()} \quad \texttt{bool InterfaceWriter::} \texttt{checkCompatibility ()}
              const std::string & name,
              const std::string & version ) [inline]
Definition at line 90 of file Interface.h.
00091
00092
          if(m_Compatible.find(name) != m_Compatible.end())
00093
00094
                           ran = semver::range::detail::range(m_Compatible[name]);
00095
            semver::version ver = semver::version(version);
00096
            if(ran.satisfies(ver, false)) return true;
00097
00098
            return false;
00099
00100
         else
00101
           return false;
00102
4.12.3.3 getCompatibility() std::map< std::string, std::string > InterfaceWriter::getCompatibility
```

The documentation for this class was generated from the following file:

4.12.2.1 InterfaceWriter() InterfaceWriter::InterfaceWriter (

libs/core/include/Interface.h


Definition at line 88 of file Interface.h.
00088 { return m_Compatible; }

() [inline]

4.13 LCIOWriter Class Reference

#include <libs/interface/LCIO/include/LCIOWriter.h>

Inheritance diagram for LCIOWriter:

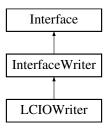

Public Member Functions

- LCIOWriter ()
- void setFilename (const std::string &)
- void start ()
- void processDIF (const Payload &)
- void processFrame (const Payload &, const std::uint32_t &frameIndex)
- void processPadInFrame (const Payload &, const std::uint32_t &frameIndex, const std::uint32_t &channel←
 Index)
- void processSlowControl (const Buffer &)
- void end ()
- virtual void startEvent ()
- virtual void endEvent ()
- virtual void startDIF ()
- virtual void endDIF ()
- virtual void startFrame ()
- virtual void endFrame ()
- virtual void startPad ()
- virtual void endPad ()

Additional Inherited Members

4.13.1 Detailed Description

Definition at line 19 of file LCIOWriter.h.

4.13.2 Constructor & Destructor Documentation

4.13.3 Member Function Documentation

```
4.13.3.1 end() void LCIOWriter::end ()
Definition at line 38 of file LCIOWriter.cc.
00038 { m_LCWriter->close(); }
4.13.3.2 endDIF() void LCIOWriter::endDIF ( ) [virtual]
Reimplemented from Interface.
Definition at line 97 of file LCIOWriter.cc.
00097 {}
4.13.3.3 endEvent() void LCIOWriter::endEvent ( ) [virtual]
Reimplemented from Interface.
Definition at line 89 of file LCIOWriter.cc.
00091 m_LCEvent->addCollection(m_CollectionVec, "DHCALRawHits");
00092 m_LCWriter->writeEvent(m_LCEvent.get());
00093 }
4.13.3.4 endFrame() void LCIOWriter::endFrame ( ) [virtual]
Reimplemented from Interface.
Definition at line 101 of file LCIOWriter.cc.
00101 {}
4.13.3.5 endPad() void LCIOWriter::endPad ( ) [virtual]
Reimplemented from Interface.
Definition at line 105 of file LCIOWriter.cc.
00105 {}
```

```
4.13.3.6 processDIF() void LCIOWriter::processDIF (
               const Payload & d )
Definition at line 40 of file LCIOWriter.cc.
                     parameter_name = "DIF" + std::to_string(d.getDIFid()) + "_Triggers";
00042
        std::string
00043
        EVENT::IntVec parameters;
00044
        parameters.push_back(d.getDTC());
00045
        parameters.push_back(d.getGTC());
00046
        parameters.push_back(d.getBCID());
        parameters.push_back(d.getAbsoluteBCID() & 0xFFFFFF);
00048
        parameters.push_back((d.getAbsoluteBCID() » 24) & 0xFFFFFF);
00049
        parameters.push_back(0);
00050
        parameters.push_back(0);
00051 parameters.push_back(0);
00052 m_CollectionVec->paramet
       m_CollectionVec->parameters().setValues("DIF" + std::to_string(d.getDIFid()) + "_Triggers",
parameters);
00053 parameter_name = "DIF_DetectorID_" + std::to_string(d.getDIFid());
00054
        m_CollectionVec->parameters().setValue(parameter_name, static_cast<int>(d.getDetectorID()));
00055 }
4.13.3.7 processFrame() void LCIOWriter::processFrame (
               const Payload & d,
               const std::uint32_t & frameIndex )
Definition at line 57 of file LCIOWriter.cc.
00057 {}
4.13.3.8 processPadInFrame() void LCIOWriter::processPadInFrame (
               const Payload & d,
               const std::uint32_t & frameIndex,
               const std::uint32_t & channelIndex )
Definition at line 59 of file LCIOWriter.cc.
00060 {
00061
        m LCEvent->setTimeStamp(d.getAbsoluteBCID() * 200);
00062
        m_LCEvent->setRunNumber(getRunNumber());
00063
        IMPL::RawCalorimeterHitImpl* hit = new IMPL::RawCalorimeterHitImpl;
00064
                                     ID0 = channelIndex;
00065
        TDO
                                          = ID0 « 8;
        ID0 += d.getASICid(frameIndex);
ID0 = ID0 « 8;
00066
00067
00068
        ID0 += d.getDIFid();
        hit->setCellID0(ID0);
00070
        hit->setAmplitude(d.getThresholdStatus(frameIndex, channelIndex));
00071
        hit->setTimeStamp(d.getFrameTimeToTrigger(frameIndex));
00072
        m_CollectionVec->addElement(hit);
00073 }
4.13.3.9 processSlowControl() void LCIOWriter::processSlowControl (
               const Buffer & ) [inline]
Definition at line 30 of file LCIOWriter.h.
00030 {;}
```

4.13.3.11 start() void LCIOWriter::start ()

Definition at line 22 of file LCIOWriter.cc.

```
00023 {
         m_LCWriter->open(m_Filename, EVENT::LCIO::WRITE_NEW);
00024
00025
        std::unique_ptr<IMPL::LCRunHeaderImpl> runHdr(new IMPL::LCRunHeaderImpl);
                                                     filename_ = filename(m_Filename);
begin_ = filename_.find_last_of("_R");
00026
        std::string
00027
        std::size_t
                                                     begin_
        if(begin_ == std::string::npos) begin_ = filename_.find_last_of('_');
filename_ = filename_.substr(begin_ + 1);
00028
00029
00030
        setRunNumber(stoi(filename_));
00031
        runHdr->setRunNumber(getRunNumber());
00032
        runHdr->setDetectorName (m_DetectorName);
00033
        std::string description("data collected with SDHCAL prototype");
00034
        runHdr->setDescription(description);
00035
        m_LCWriter->writeRunHeader(runHdr.get());
00036 }
```

4.13.3.12 startDIF() void LCIOWriter::startDIF () [virtual]

Reimplemented from Interface.

Definition at line 95 of file LCIOWriter.cc.

00095 {}

4.13.3.13 startEvent() void LCIOWriter::startEvent () [virtual]

Reimplemented from Interface.

Definition at line 75 of file LCIOWriter.cc.

```
00077
        m_LCEvent = std::make_unique<IMPL::LCEventImpl>();
00078
        m_LCEvent->setEventNumber(getEventNumber());
00079
        m_LCEvent->setDetectorName(m_DetectorName);
        m_LCEvent->setWeight(1);
08000
        m_CollectionVec = new IMPL::LCCollectionVec(EVENT::LCIO::RAWCALORIMETERHIT);
IMPL::LCFlagImpl flag(0);
00081
00082
00083
         // flag.setBit(EVENT::LCIO::RCHBIT_ID1);
00084
        flag.setBit(EVENT::LCIO::RCHBIT_TIME);
00085
        {\tt m\_CollectionVec->setFlag(flag.getFlag());}
       m_CollectionVec->parameters().setValue(EVENT::LCIO::CellIDEncoding, "dif:8,asic:8,channel:6");
00086
00087 }
```

$\textbf{4.13.3.14} \quad \textbf{startFrame()} \quad \texttt{void LCIOWriter::startFrame ()} \quad \texttt{[virtual]}$

Reimplemented from Interface.

Definition at line 99 of file LCIOWriter.cc.

00099 {}

4.13.3.15 startPad() void LCIOWriter::startPad () [virtual]

Reimplemented from Interface.

Definition at line 103 of file LCIOWriter.cc. ${\tt 00103}$ $\{\}$


The documentation for this class was generated from the following files:

- libs/interface/LCIO/include/LCIOWriter.h
- libs/interface/LCIO/src/LCIOWriter.cc

4.14 Payload Class Reference

#include <libs/core/include/Payload.h>

Inheritance diagram for Payload:

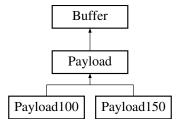

Public Member Functions

- Payload (const std::int32_t &detector_id)
- void setBuffer (const Buffer &buffer)
- std::uint32_t getEndOfDIFData () const
- std::uint32_t getSizeAfterDIFPtr () const
- virtual std::uint32_t getNumberOfFrames () const =0
- virtual std::uint32_t getThresholdStatus (const std::uint32_t &, const std::uint32_t &) const =0
- virtual std::uint32_t getDIFid () const =0
- virtual std::uint32_t getDTC () const =0
- virtual std::uint32_t getGTC () const =0
- virtual std::uint32_t getBCID () const =0
- virtual std::uint64 t getAbsoluteBCID () const =0
- virtual std::uint32_t getASICid (const std::uint32_t &) const =0
- virtual std::uint32_t getFrameBCID (const std::uint32_t &) const =0
- virtual std::uint32_t getFrameTimeToTrigger (const std::uint32_t &) const =0
- std::uint32_t getDetectorID () const
- virtual ∼Payload ()

Protected Member Functions

virtual void parsePayload ()=0

Protected Attributes

```
    std::int32 t m DetectorID {-1}
```

```
std::uint32_t theGetFramePtrReturn_ {0}
```

4.14.1 Detailed Description

Definition at line 11 of file Payload.h.

4.14.2 Constructor & Destructor Documentation

4.14.3 Member Function Documentation

```
4.14.3.1 getAbsoluteBCID() virtual std::uint64_t Payload::getAbsoluteBCID ( ) const [pure virtual]
```

Implemented in Payload100, and Payload150.

```
4.14.3.2 getASICid() virtual std::uint32_t Payload::getASICid ( const std::uint32_t & ) const [pure virtual]
```

Implemented in Payload100, and Payload150.

```
4.14.3.3 getBCID() virtual std::uint32_t Payload::getBCID ( ) const [pure virtual]
```

Implemented in Payload100, and Payload150.

```
4.14.3.4 getDetectorID() std::uint32_t Payload::getDetectorID ( ) const [inline]
Definition at line 29 of file Payload.h.
00029 { return m_DetectorID; }
4.14.3.5 getDIFid() virtual std::uint32_t Payload::getDIFid () const [pure virtual]
Implemented in Payload100, and Payload150.
4.14.3.6 getDTC() virtual std::uint32_t Payload::getDTC ( ) const [pure virtual]
Implemented in Payload100, and Payload150.
4.14.3.7 getEndOfDIFData() std::uint32_t Payload::getEndOfDIFData ( ) const [inline]
Definition at line 45 of file Payload.h.
00045 { return theGetFramePtrReturn_; }
4.14.3.8 getFrameBCID() virtual std::uint32_t Payload::getFrameBCID (
             const std::uint32_t & ) const [pure virtual]
Implemented in Payload100, and Payload150.
4.14.3.9 getFrameTimeToTrigger() virtual std::uint32_t Payload::getFrameTimeToTrigger (
             const std::uint32_t & ) const [pure virtual]
Implemented in Payload100, and Payload150.
4.14.3.10 getGTC() virtual std::uint32_t Payload::getGTC ( ) const [pure virtual]
Implemented in Payload100, and Payload150.
4.14.3.11 getNumberOfFrames() virtual std::uint32_t Payload::getNumberOfFrames ( ) const
[pure virtual]
Implemented in Payload100, and Payload150.
```

```
4.14.3.12 getSizeAfterDIFPtr() std::uint32_t Payload::getSizeAfterDIFPtr () const [inline]
Definition at line 47 of file Payload.h.
00047 { return size() - theGetFramePtrReturn_; }
\textbf{4.14.3.13} \quad \textbf{getThresholdStatus()} \quad \textbf{virtual std::uint32\_t Payload::getThresholdStatus ()}
               const std::uint32_t & ,
               const std::uint32_t & ) const [pure virtual]
Implemented in Payload100, and Payload150.
4.14.3.14 parsePayload() virtual void Payload::parsePayload () [protected], [pure virtual]
4.14.3.15 setBuffer() void Payload::setBuffer (
               const Buffer & buffer ) [inline]
Definition at line 39 of file Payload.h.
00040 {
00041 set(buffer);
00042 parsePayload
       parsePayload();
00043 }
4.14.4 Member Data Documentation
```

```
\textbf{4.14.4.1} \quad \textbf{m\_DetectorID} \quad \texttt{std::int32\_t Payload::m\_DetectorID \{-1\}} \quad [\texttt{protected}]
```

Definition at line 35 of file Payload.h.

4.14.4.2 theGetFramePtrReturn std::uint32_t Payload::theGetFramePtrReturn_ {0} [protected]

Definition at line 36 of file Payload.h.


The documentation for this class was generated from the following file:

· libs/core/include/Payload.h

4.15 Payload100 Class Reference

#include <libs/core/include/Payload100.h>

Inheritance diagram for Payload100:

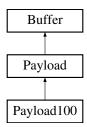

Public Member Functions

- Payload100 ()
- bool hasTemperature () const
- bool hasAnalogReadout () const
- virtual std::uint32 t getNumberOfFrames () const final
- virtual std::uint32_t getThresholdStatus (const std::uint32_t &, const std::uint32_t &) const final
- virtual std::uint32_t getDIFid () const final
- virtual std::uint32_t getDTC () const final
- virtual std::uint32_t getGTC () const final
- virtual std::uint32_t getBCID () const final
- virtual std::uint64_t getAbsoluteBCID () const final
- virtual std::uint32_t getASICid (const std::uint32_t &) const final
- virtual std::uint32_t getFrameBCID (const std::uint32_t &) const final
- virtual std::uint32_t getFrameTimeToTrigger (const std::uint32_t &) const final
- virtual ∼Payload100 ()

Additional Inherited Members

4.15.1 Detailed Description

Definition at line 27 of file Payload100.h.

4.15.2 Constructor & Destructor Documentation

```
4.15.2.1 Payload100() Payload100::Payload100 ( ) [inline]
```

Definition at line 30 of file Payload100.h. 00030 : Payload(100) {}

00155

00156 }

return begin()[shift] & 0xFF;

```
4.15.2.2 ~Payload100() Payload100::~Payload100 ( ) [virtual]
Definition at line 193 of file Payload100.cc.
00193 {}
4.15.3 Member Function Documentation
4.15.3.1 getAbsoluteBCID() std::uint64_t Payload100::getAbsoluteBCID ( ) const [inline],
[final], [virtual]
Implements Payload.
Definition at line 176 of file Payload100.cc.
00177 {
         std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
00178
      Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER);
std::uint64_t LBC = ((begin()[shift] « 16) | (begin()[shift + 1] « 8) | (begin()[shift + 2])) *
16777216ULL + ((begin()[shift + 3] « 16) | (begin()[shift + 4] « 8) | (begin()[shift + 5]));
00180 return LBC;
00181 }
4.15.3.2 getASICid() std::uint32_t Payload100::getASICid (
                 const std::uint32_t & i ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 183 of file Payload100.cc.
00183 { return m_Frames[i][0] & 0xFF; }
4.15.3.3 getBCID() std::uint32_t Payload100::getBCID () const [inline], [final], [virtual]
Implements Payload.
Definition at line 170 of file Payload100.cc.
00171 {
      std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID};
return (begin()[shift] « 16) + (begin()[shift + 1] « 8) + begin()[shift + 2];
00172
00173
00174 }
4.15.3.4 getDIFid() std::uint32_t Payload100::getDIFid ( ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 152 of file Payload100.cc.
00153 {
         std::uint32_t shift{+Size::GLOBAL_HEADER};
00154
```

```
4.15.3.5 getDTC() std::uint32_t Payload100::getDTC() const [inline], [final], [virtual]
Implements Payload.
Definition at line 158 of file Payload100.cc.
00159 {
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF};
00161
       return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift
     + 3];
00162 }
4.15.3.6 getFrameBCID() std::uint32_t Payload100::getFrameBCID (
              const std::uint32_t & i ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 185 of file Payload100.cc.
00186 {
       std::uint32_t shift{+Size::MICROROC_HEADER};
00188
       return GrayToBin((m_Frames[i][shift] « 16) + (m_Frames[i][shift + 1] « 8) + m_Frames[i][shift + 2]);
00189 }
4.15.3.7 getFrameTimeToTrigger() std::uint32_t Payload100::getFrameTimeToTrigger (
              const std::uint32_t & i ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 191 of file Payload100.cc.
00191 { return getBCID() - getFrameBCID(i); }
4.15.3.8 getGTC() std::uint32_t Payload100::getGTC ( ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 164 of file Payload100.cc.
00165 {
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
00166
     Size::INFORMATION_COUNTER;;
     return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift + 3];
00167
00168 }
4.15.3.9 getNumberOfFrames() std::uint32_t Payload100::getNumberOfFrames ( ) const [inline],
[final], [virtual]
Implements Payload.
Definition at line 142 of file Payload100.cc.
00142 { return m_Frames.size(); }
```


The documentation for this class was generated from the following files:

- libs/core/include/Payload100.h
- libs/core/src/Payload100.cc

4.16 Payload150 Class Reference

#include <libs/core/include/Payload150.h>

Inheritance diagram for Payload150:

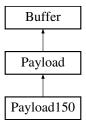

Public Member Functions

- Payload150 ()
- virtual std::uint32_t getNumberOfFrames () const final
- virtual std::uint32_t getThresholdStatus (const std::uint32_t &, const std::uint32_t &) const final
- virtual std::uint32_t getDIFid () const final
- virtual std::uint32_t getDTC () const final
- virtual std::uint32_t getGTC () const final
- virtual std::uint32_t getBCID () const final
- virtual std::uint64_t getAbsoluteBCID () const final
- virtual std::uint32_t getASICid (const std::uint32_t &) const final
- virtual std::uint32 t getFrameBCID (const std::uint32 t &) const final
- virtual std::uint32_t getFrameTimeToTrigger (const std::uint32_t &) const final
- virtual ∼Payload150 ()

Additional Inherited Members

4.16.1 Detailed Description

Definition at line 10 of file Payload150.h.

4.16.2 Constructor & Destructor Documentation

```
4.16.2.1 Payload150() Payload150::Payload150 ( ) [inline]
```

```
Definition at line 13 of file Payload150.h. 00013: Payload(150) {}
```

```
4.16.2.2 ~Payload150() Payload150::~Payload150 () [virtual]
```

```
Definition at line 136 of file Payload150.cc. _{00136-\{\}}
```

4.16.3 Member Function Documentation

```
4.16.3.1 getAbsoluteBCID() std::uint64_t Payload150::getAbsoluteBCID ( ) const [inline], [final], [virtual]
```

Implements Payload.

```
Definition at line 106 of file Payload150.cc.
```

```
4.16.3.2 getASICid() std::uint32_t Payload150::getASICid ( const std::uint32_t & i ) const [inline], [final], [virtual]
```

Implements Payload.

```
Definition at line 126 of file Payload150.cc. 00126 { return m_Frames[i][0] & 0xFF; }
```

```
4.16.3.3 getBCID() std::uint32_t Payload150::getBCID () const [inline], [final], [virtual]
Implements Payload.
Definition at line 120 of file Payload150.cc.
00121 {
      std::uint32_t shift{Size::GLOBAL_HEADER + Size::PMR_ID_SHIFT + Size::PMR_NBASIC_SHIFT +
Size::PMR_FORMAT_SHIFT + Size::PMR_GTC_SHIFT + Size::PMR_ABCID_SHIFT};
return (begin()[shift] « 16) + (begin()[shift + 1] « 8) + begin()[shift + 2];
00122
00123
00124 }
4.16.3.4 getDIFid() std::uint32_t Payload150::getDIFid () const [inline], [final], [virtual]
Implements Payload.
Definition at line 94 of file Payload150.cc.
00095 {
        std::uint32_t shift{+Size::GLOBAL_HEADER};
00096
00097
        return begin()[shift] & 0xFF;
00098 }
4.16.3.5 getDTC() std::uint32_t Payload150::getDTC ( ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 113 of file Payload150.cc.
00114 {
00115
         // MAYBE NOR USEFUL
00116
        std::uint32_t shift{};
        return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift
00117
      + 3];
00118 }
4.16.3.6 getFrameBCID() std::uint32_t Payload150::getFrameBCID (
                const std::uint32_t & i ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 128 of file Payload150.cc.
00130
        std::uint32_t shift{+Size::MICROROC_HEADER};
00131
        return GrayToBin((m_Frames[i][shift] « 16) + (m_Frames[i][shift + 1] « 8) + m_Frames[i][shift + 2]);
00132 }
\textbf{4.16.3.7} \quad \textbf{getFrameTimeToTrigger()} \quad \texttt{std::uint32\_t Payload150::getFrameTimeToTrigger ()} \\
                const std::uint32_t & i ) const [inline], [final], [virtual]
Implements Payload.
Definition at line 134 of file Payload150.cc.
00134 { return getBCID() - getFrameBCID(i); }
```

```
4.16.3.8 getGTC() std::uint32_t Payload150::getGTC ( ) const [inline], [final], [virtual]
```

Implements Payload.

```
Definition at line 100 of file Payload150.cc.
```

```
00101 {
00102    std::uint32_t shift{Size::GLOBAL_HEADER + Size::PMR_ID_SHIFT + Size::PMR_NBASIC_SHIFT +
        Size::PMR_FORMAT_SHIFT};
00103    return (begin()[shift] « 16) + (begin()[shift + 1] « 8) + begin()[shift + 2];
01004 }
```

```
4.16.3.9 getNumberOfFrames() std::uint32_t Payload150::getNumberOfFrames ( ) const [inline], [final], [virtual]
```

Implements Payload.

Definition at line 84 of file Payload150.cc.

```
00084 { return m_Frames.size(); }
```

Implements Payload.

```
Definition at line 86 of file Payload150.cc.
```

```
00086 { return (((std::uint32_t)getFrameLevel(i, ipad, 1))) | ((std::uint32_t)getFrameLevel(i, ipad, 0) « 1); }
```

The documentation for this class was generated from the following files:

- libs/core/include/Payload150.h
- libs/core/src/Payload150.cc

4.17 PayloadLoader Class Reference

#include <libs/core/include/PayloadLoader.h>

Public Member Functions

- PayloadLoader ()=default
- std::unique_ptr< Payload > & getPayload (const std::int32_t &detector_id)

4.17.1 Detailed Description

Definition at line 14 of file PayloadLoader.h.

4.17.2 Constructor & Destructor Documentation

```
4.17.2.1 PayloadLoader() PayloadLoader::PayloadLoader ( ) [default]
```

4.17.3 Member Function Documentation

```
4.17.3.1 getPayload() std::unique_ptr< Payload > & PayloadLoader::getPayload ( const std::int32_t & detector_id ) [inline]
```

Definition at line 18 of file PayloadLoader.h.

The documentation for this class was generated from the following file:

• libs/core/include/PayloadLoader.h

4.18 RawBufferNavigator Class Reference

class to navigate in the raw data buffer parse the header and send the payload as Buffer

```
#include <libs/core/include/RawBufferNavigator.h>
```

Public Member Functions

- RawBufferNavigator ()
- ∼RawBufferNavigator ()=default
- void setBuffer (const Buffer &)
- std::uint32_t getDetectorID ()
- bool findStartOfPayload ()
- std::int32_t getStartOfPayload ()
- bool validPayload ()
- · Buffer getPayload ()

Static Public Member Functions

• static void startAt (const int &start)

4.18.1 Detailed Description

class to navigate in the raw data buffer parse the header and send the payload as Buffer

the RawBufferNavigator navigate in the raw data buffer and parse the header and send the payload as Buffer.

The buffer structure consists of :

- the detector id (std::int32_t)
- the datasource id (std::int32_t)
- the event id (std::int32_t)
- the bunch crossing id (std::int64_t)
- the payload char array of (buffer size 20) Based on

Author

Laurent Mirabito

Version

1.0

Date

May 2016

Definition at line 24 of file RawBufferNavigator.h.

4.18.2 Constructor & Destructor Documentation

```
4.18.2.1 RawBufferNavigator() RawBufferNavigator::RawBufferNavigator ()
```

Definition at line 14 of file RawBufferNavigator.cc.

```
4.18.2.2 ~RawBufferNavigator() RawBufferNavigator::~RawBufferNavigator ( ) [default]
```

4.18.3 Member Function Documentation

4.18.3.1 findStartOfPayload() bool RawBufferNavigator::findStartOfPayload ()

```
4.18.3.2 getDetectorID() std::uint32_t RawBufferNavigator::getDetectorID ( )
Definition at line 18 of file RawBufferNavigator.cc.
00018 { return m_Buffer[0]; }
4.18.3.3 getPayload() Buffer RawBufferNavigator::getPayload ( )
Definition at line 22 of file RawBufferNavigator.cc.
00022 { return Buffer(&(m_Buffer.begin()[m_StartPayload]), m_Buffer.size() - m_StartPayload); }
4.18.3.4 getStartOfPayload() std::int32_t RawBufferNavigator::getStartOfPayload ( )
Definition at line 20 of file RawBufferNavigator.cc.
00020 { return m_StartPayload; }
4.18.3.5 setBuffer() void RawBufferNavigator::setBuffer (
              const Buffer & b )
Definition at line 16 of file RawBufferNavigator.cc.
00016 { m_Buffer = b; }
4.18.3.6 startAt() void RawBufferNavigator::startAt (
              const int & start ) [static]
Definition at line 9 of file RawBufferNavigator.cc.
00010 {
00011
       if(start >= 0) m_StartPayload = start;
00012 }
4.18.3.7 validPayload() bool RawBufferNavigator::validPayload ( )
```


The documentation for this class was generated from the following files:

- libs/core/include/RawBufferNavigator.h
- libs/core/src/RawBufferNavigator.cc

4.19 RawdataReader Class Reference

#include <libs/interface/RawDataReader/include/RawdataReader.h>

Inheritance diagram for RawdataReader:

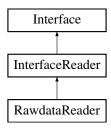

Public Member Functions

- RawdataReader (const char *fileName)
- void start ()
- void end ()
- float getFileSize ()
- void openFile (const std::string &fileName)
- void closeFile ()
- bool nextEvent ()
- bool nextDIFbuffer ()
- const Buffer & getBuffer ()
- virtual ∼RawdataReader ()

Static Public Member Functions

• static void setDefaultBufferSize (const std::size_t &size)

Additional Inherited Members

4.19.1 Detailed Description

Definition at line 17 of file RawdataReader.h.

4.19.2 Constructor & Destructor Documentation

```
4.19.2.2 ~RawdataReader() virtual RawdataReader::~RawdataReader ( ) [inline], [virtual]
```

```
Definition at line 29 of file RawdataReader.h. 00029 { closeFile(); }
```

4.19.3 Member Function Documentation

```
4.19.3.1 closeFile() void RawdataReader::closeFile ( )
```

Definition at line 46 of file RawdataReader.cc.

```
4.19.3.2 end() void RawdataReader::end ( )
```

Definition at line 25 of file RawdataReader.cc.

```
00025 { closeFile(); }
```

```
4.19.3.3 getBuffer() const Buffer & RawdataReader::getBuffer ( )
```

Definition at line 121 of file RawdataReader.cc.

```
00122 {
00123    uncompress();
00124    return m_Buffer;
00125 }
```

4.19.3.4 getFileSize() float RawdataReader::getFileSize ()

Definition at line 129 of file RawdataReader.cc.

```
00129 { return m_FileSize; }
```

4.19.3.5 nextDIFbuffer() bool RawdataReader::nextDIFbuffer ()

Definition at line 94 of file RawdataReader.cc.

```
00095
00096
00097
00098
          static int DIF_processed{0};
00099
           if(DIF_processed >= m_NumberOfDIF)
00100
00101
             DIF_processed = 0;
00102
             return false;
00103
00104
          else
00105
          {
00106
            DIF_processed++;
00107
             std::uint32_t bsize{0};
             m_FileStream.read(reinterpret_cast<char*>(&bsize), sizeof(std::uint32_t));
m_FileStream.read(reinterpret_cast<char*>(&m_buf[0]), bsize);
00108
00109
00110
             m_Buffer = Buffer(m_buf);
00111
00112
00113
        catch(const std::ios_base::failure& e)
00114
00115
           log()->error("Caught an ios base::failure in openFile : {}", e.what());
00116
          return false;
00117
00118
        return true;
00119 }
```

4.19.3.6 nextEvent() bool RawdataReader::nextEvent ()

Definition at line 80 of file RawdataReader.cc.

```
00081 {
00082
00083
             m_FileStream.read(reinterpret_cast<char*>(&m_EventNumber), sizeof(std::uint32_t));
m_FileStream.read(reinterpret_cast<char*>(&m_NumberOfDIF), sizeof(std::uint32_t));
00084
00085
00086
00087
          catch(const std::ios_base::failure& e)
00088
00089
             return false;
00090
00091
           return true;
00092 }
```

```
4.19.3.7 openFile() void RawdataReader::openFile ( const std::string & fileName )
```

Definition at line 59 of file RawdataReader.cc.

```
00060 {
00061
00062
00063
           m_FileStream.rdbuf()->pubsetbuf(0, 0);
00064
           m_FileStream.exceptions(std::ifstream::failbit | std::ifstream::badbit);
00065
            \texttt{m\_FileStream.open(fileName.c\_str(), std::ios::in | std::ios::binary | std::ios::ate);} \quad // \  \, \texttt{Start at} 
      the end to directly calculate the size of the file then come back to beginning m_FileStream.rdbuf()->pubsetbuf(0, 0);
00066
00067
           if (m_FileStream.is_open())
00068
00069
              setFileSize(m_FileStream.tellg());
00070
             m_FileStream.seekg(0, std::ios::beg);
00071
00072
00073
         catch(const std::ios_base::failure& e)
00074
         {
00075
          log()->error("Caught an ios_base::failure in openFile : {}", e.what());
00076
00077
        }
00078 }
```


The documentation for this class was generated from the following files:

- libs/interface/RawDataReader/include/RawdataReader.h
- libs/interface/RawDataReader/src/RawdataReader.cc

4.20 ROOTWriter Class Reference

#include <libs/interface/ROOT/include/ROOTWriter.h>

Inheritance diagram for ROOTWriter:

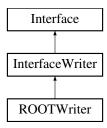

Public Member Functions

- ROOTWriter ()
- void setFilename (const std::string &)
- void start ()
- void processDIF (const Payload &)
- void processFrame (const Payload &, const std::uint32_t &frameIndex)
- void processPadInFrame (const Payload &, const std::uint32_t &frameIndex, const std::uint32_t &channel← Index)
- void processSlowControl (const Buffer &)
- void end ()
- virtual void startEvent ()
- virtual void endEvent ()
- virtual void startDIF ()
- virtual void endDIF ()
- virtual void startFrame ()
- virtual void endFrame ()
- virtual void startPad ()
- virtual void endPad ()

Additional Inherited Members

4.20.1 Detailed Description

Definition at line 17 of file ROOTWriter.h.

4.20.2 Constructor & Destructor Documentation

```
4.20.2.1 ROOTWriter() ROOTWriter::ROOTWriter ( )

Definition at line 10 of file ROOTWriter.cc.
00010 : InterfaceWriter("ROOTWriter", "1.0.0") { addCompatibility("RawdataReader", ">=1.0.0"); }
```

4.20.3 Member Function Documentation

```
4.20.3.1 end() void ROOTWriter::end ( )
```

Definition at line 19 of file ROOTWriter.cc.

```
4.20.3.2 endDIF() void ROOTWriter::endDIF ( ) [virtual]
```

Reimplemented from Interface.

Definition at line 77 of file ROOTWriter.cc.

4.20.3.3 endEvent() void ROOTWriter::endEvent () [virtual]

Reimplemented from Interface.

Definition at line 65 of file ROOTWriter.cc.

```
4.20.3.4 endFrame() void ROOTWriter::endFrame ( ) [virtual]
```

Reimplemented from Interface.

```
Definition at line 89 of file ROOTWriter.cc.
```

```
00090 {
00091    m_DIF->addHit(*m_Hit);
00092    delete m_Hit;
00093 }
```

4.20.3.5 endPad() void ROOTWriter::endPad () [virtual]

Reimplemented from Interface.

Definition at line 97 of file ROOTWriter.cc.

00097 {}

```
4.20.3.6 processDIF() void ROOTWriter::processDIF ( const Payload & d )
```

Definition at line 30 of file ROOTWriter.cc.

```
00031 {
    m_DIF->setDetectorID(d.getDetectorID());
    m_DIF->setID(d.getDIFid());
    m_DIF->setDTC(d.getDTC());
    m_DIF->setGTC(d.getGTC());
    m_DIF->setDIFBCID(d.getBCID());
    m_DIF->setAbsoluteBCID(d.getAbsoluteBCID());
    m_DIF-->setAbsoluteBCID(d.getAbsoluteBCID());
    m_DIF-->setAbsoluteBCID(d.getAbsoluteBCID());
    m_DIF-->setAbsoluteBCID(d.getAbsoluteBCID());
    m_DIF-->setAbsoluteBCID(d.getAbsoluteBCID());
    m_DIF-->setAbsoluteBCID(d.getAbsoluteBCID());
    m_DIF-->setAbsoluteBCID(d.getAbsoluteBCID());
    m_DIF-->setAbsoluteBCID(d.getAbsolu
```

$\textbf{4.20.3.7} \quad \textbf{processFrame()} \quad \texttt{void ROOTWriter::processFrame ()}$

```
const Payload & d,
const std::uint32_t & frameIndex )
```

Definition at line 40 of file ROOTWriter.cc.

```
00041 {
00042
        m_Hit->setDIF(d.getDIFid());
00043
        m_Hit->setASIC(d.getASICid(frameIndex));
00044
        m_Hit->setDTC(d.getDTC());
00045
        m_Hit->setGTC(d.getGTC());
        m_Hit->setDIFBCID(d.getBCID());
m_Hit->setAbsoluteBCID(d.getAbsoluteBCID());
00046
00047
00048
        m_Hit->setFrameBCID(d.getFrameBCID(frameIndex));
        m_Hit->setTimestamp(d.getFrameTimeToTrigger(frameIndex));
00050 }
```

4.20.3.8 processPadInFrame() void ROOTWriter::processPadInFrame (

```
const Payload & d,
const std::uint32_t & frameIndex,
const std::uint32_t & channelIndex )
```

Definition at line 52 of file ROOTWriter.cc.

```
4.20.3.9 processSlowControl() void ROOTWriter::processSlowControl (
               const Buffer & ) [inline]
Definition at line 28 of file ROOTWriter.h.
00028 { ; }
4.20.3.10 setFilename() void ROOTWriter::setFilename (
               const std::string & filename )
Definition at line 8 of file ROOTWriter.cc.
00008 { m_Filename = filename; }
4.20.3.11 start() void ROOTWriter::start ( )
Definition at line 12 of file ROOTWriter.cc.
00013 {
        m_File = TFile::Open(m_Filename.c_str(), "RECREATE", m_Filename.c_str(),
00014
ROOT::CompressionSettings(ROOT::KZLIB, 5));

00015  m_Tree = new TTree("RawData", "Raw SDHCAL data tree");

00016  m_Tree->Branch("Events", &m_Event, 512000, 99);
00017 }
4.20.3.12 startDIF() void ROOTWriter::startDIF () [virtual]
Reimplemented from Interface.
Definition at line 71 of file ROOTWriter.cc.
00072 {
       m_DIF = new DIF();
00074 // m_DIF->clear();
00075 }
4.20.3.13 startEvent() void ROOTWriter::startEvent ( ) [virtual]
Reimplemented from Interface.
Definition at line 58 of file ROOTWriter.cc.
00059 {
        m_Event = new Event();
00061
        m_Event->setEventNumber(getEventNumber());
00062
        // m_Event->clear();
00063 }
4.20.3.14 startFrame() void ROOTWriter::startFrame ( ) [virtual]
Reimplemented from Interface.
Definition at line 83 of file ROOTWriter.cc.
00086
       // m_Hit->clear();
```

00087 }

4.20.3.15 startPad() void ROOTWriter::startPad () [virtual]

Reimplemented from Interface.

Definition at line 95 of file ROOTWriter.cc. 00095 {}


The documentation for this class was generated from the following files:

- libs/interface/ROOT/include/ROOTWriter.h
- libs/interface/ROOT/src/ROOTWriter.cc

4.21 textDump Class Reference

#include <libs/interface/Dump/include/textDump.h>

Inheritance diagram for textDump:

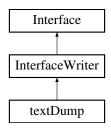

Public Member Functions

- textDump ()
- void start ()
- void processDIF (const Payload &)
- void processFrame (const Payload &, uint32_t frameIndex)
- void processPadInFrame (const Payload &, uint32_t frameIndex, uint32_t channelIndex)
- void processSlowControl (Buffer)
- void end ()
- std::shared_ptr< spdlog::logger > & print ()
- void setLevel (const spdlog::level::level_enum &level)

Additional Inherited Members

4.21.1 Detailed Description

Definition at line 14 of file textDump.h.

4.21.2 Constructor & Destructor Documentation

4.21.2.1 textDump() textDump::textDump ()

```
Definition at line 7 of file textDump.cc.
00007
                                 : InterfaceWriter("textDump", "1.0.0")
00008 {
         m_InternalLogger = std::make_shared<spdlog::logger>("textDump",
00009
       std::make_shared<spdlog::sinks::stdout_color_sink_mt>());
00010 m_InternalLogger->set_level(spdlog::level::trace);
00011 addCompatibility("RawdataReader", ">=1.0.0");
00012 addCompatibility("DIFdataExample", ">=1.0.0");
00013 }
4.21.3 Member Function Documentation
```

```
4.21.3.1 end() void textDump::end ( )
Definition at line 31 of file textDump.cc.
```

00031 { print()->info("textDump end of report"); }

```
4.21.3.2 print() std::shared_ptr< spdlog::logger > & textDump::print ( ) [inline]
```

```
Definition at line 24 of file textDump.h.
00024 { return m_InternalLogger; }
```

```
4.21.3.3 processDIF() void textDump::processDIF (
              const Payload & d )
Definition at line 17 of file textDump.cc.
```

```
00017 { print()->info("DIF_ID : {}, DTC : {}, DIF BCID {}, Absolute BCID : {}, Nbr frames {}",
     d.getDIFid(), d.getDTC(), d.getGTC(), d.getBCID(), d.getAbsoluteBCID(), d.getNumberOfFrames()); }
```

```
4.21.3.4 processFrame() void textDump::processFrame (
             const Payload & d,
             uint32_t frameIndex )
```

```
Definition at line 19 of file textDump.cc.
```

```
00020 {
       print()->info("\tDisplaying frame number {}: ASIC ID {}, Frame BCID {}, Frame Time To Trigger
      (a.k.a timestamp) is {}", frameIndex, d.getASICid(frameIndex), d.getFrameBCID(frameIndex),
      d.getFrameTimeToTrigger(frameIndex));
00022 }
```

```
4.21.3.5 processPadInFrame() void textDump::processPadInFrame (
            const Payload & d,
            uint32_t frameIndex,
            uint32_t channelIndex )
Definition at line 24 of file textDump.cc.
       {}", channelIndex, d.getThresholdStatus(frameIndex, channelIndex)); }
00027 }
4.21.3.6 processSlowControl() void textDump::processSlowControl (
            Buffer )
Definition at line 29 of file textDump.cc.
00029 { print()->error("textDump::processSlowControl not implemented yet."); }
4.21.3.7 setLevel() void textDump::setLevel (
            const spdlog::level::level_enum & level ) [inline]
Definition at line 25 of file textDump.h.
00025 { m_InternalLogger->set_level(level); }
4.21.3.8 start() void textDump::start ( )
Definition at line 15 of file textDump.cc.
00015 { print()->info("Will dump bunch of DIF data"); }
```

The documentation for this class was generated from the following files:

- libs/interface/Dump/include/textDump.h
- libs/interface/Dump/src/textDump.cc

4.22 Timer Class Reference

#include <libs/core/include/Timer.h>

Public Member Functions

- void start ()
- void stop ()
- float getElapsedTime ()

4.22.1 Detailed Description

Definition at line 9 of file Timer.h.

4.22.2 Member Function Documentation

```
4.22.2.1 getElapsedTime() float Timer::getElapsedTime ( ) [inline]

Definition at line 14 of file Timer.h.
00014 { return std::chrono::duration_cast<std::chrono::microseconds>(m_StopTime - m_StartTime).count(); }

4.22.2.2 start() void Timer::start ( ) [inline]

Definition at line 12 of file Timer.h.
00012 { m_StartTime = std::chrono::high_resolution_clock::now(); }

4.22.2.3 stop() void Timer::stop ( ) [inline]

Definition at line 13 of file Timer.h.
00013 { m_StopTime = std::chrono::high_resolution_clock::now(); }
```


• libs/core/include/Timer.h

4.23 Version Class Reference

#include <libs/core/include/Version.h>

The documentation for this class was generated from the following file:

Inheritance diagram for Version:

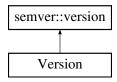

Public Member Functions

- Version (const std::uint8_t &mj, const std::uint8_t &mn, const std::uint8_t &pt, const semver::prerelease &prt=semver::prerelease::none, const std::uint8_t &prn=0) noexcept
- Version (const std::string_view &str)
- Version ()=default
- std::uint8_t getMajor ()
- std::uint8_t getMinor ()
- std::uint8_t getPatch ()
- std::string getPreRelease ()
- std::uint8_t getPreReleaseNumber ()

4.23.1 Detailed Description

Definition at line 11 of file Version.h.

4.23.2 Constructor & Destructor Documentation

```
4.23.2.1 Version() [1/3] Version::Version (
              const std::uint8_t & mj,
              const std::uint8_t & mn,
              const std::uint8_t & pt,
              const semver::prerelease & prt = semver::prerelease::none,
             const std::uint8_t & prn = 0 ) [inline], [noexcept]
Definition at line 14 of file Version.h.
00014 : semver::version(mj, mn, pt, prt, prn) {}
4.23.2.2 Version() [2/3] Version::Version (
              const std::string_view & str ) [inline], [explicit]
Definition at line 15 of file Version.h.
00015 : semver::version(str) {}
4.23.2.3 Version() [3/3] Version::Version ( ) [default]
4.23.3 Member Function Documentation
4.23.3.1 getMajor() std::uint8_t Version::getMajor ( )
Definition at line 9 of file Version.cc.
00009 { return major; }
4.23.3.2 getMinor() std::uint8_t Version::getMinor ( )
Definition at line 11 of file Version.cc.
00011 { return minor; }
```

5 File Documentation 67

```
4.23.3.3 getPatch() std::uint8_t Version::getPatch ( )
Definition at line 13 of file Version.cc.
00013 { return patch; }
```

4.23.3.4 getPreRelease() std::string Version::getPreRelease ()

```
Definition at line 15 of file Version.cc.
```

4.23.3.5 getPreReleaseNumber() std::uint8_t Version::getPreReleaseNumber ()

```
Definition at line 27 of file Version.cc. 00027 { return prerelease_number; }
```

The documentation for this class was generated from the following files:

- libs/core/include/Version.h
- libs/core/src/Version.cc

5 File Documentation

5.1 libs/core/include/Bits.h File Reference

```
#include <cstdint>
#include <iosfwd>
```

Typedefs

```
using bit8_t = std::uint8_t
using bit16_t = std::uint16_t
using bit32_t = std::uint32_t
using bit64_t = std::uint64_t
```

Functions

std::ostream & operator << (std::ostream &os, const bit8_t &c)
 Stream operator to print bit8_t aka std::uint8_t and not char or unsigned char.

5.1.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Bits.h.

5.1.2 Typedef Documentation

```
5.1.2.1 bit16_t using bit16_t = std::uint16_t
```

Definition at line 11 of file Bits.h.

```
5.1.2.2 bit32_t using bit32_t = std::uint32_t
```

Definition at line 12 of file Bits.h.

```
5.1.2.3 bit64_t using bit64_t = std::uint64_t
```

Definition at line 13 of file Bits.h.

```
5.1.2.4 bit8_t using bit8_t = std::uint8_t
```

Definition at line 10 of file Bits.h.

5.1.3 Function Documentation

```
5.1.3.1 operator << () std::ostream & operator << ( std::ostream & os, const bit8_t & c )
```

Stream operator to print bit8_t aka std::uint8_t and not char or unsigned char.

```
Definition at line 8 of file Bits.cc. 00008 { return os « c + 0; }
```

5.2 Bits.h 69

5.2 Bits.h

Go to the documentation of this file.

```
00005 #pragma once
00006
00007 #include <cstdint>
00008 #include <iosfwd>
00009
00010 using bit8_t = std::uint8_t; /*<! type to represent 8bits words (1 byte) */
00011 using bit16_t = std::uint16_t; /*<! type to represent 16bits words (2 bytes) */
00012 using bit32_t = std::uint32_t; /*<! type to represent 32bits words (4 bytes) */
00013 using bit64_t = std::uint64_t; /*<! type to represent 64bits words (8 bytes) */
00014
00016 std::ostream& operator*(std::ostream& os, const bit8_t& c);
```

5.3 libs/core/include/Buffer.h File Reference

```
#include "Bits.h"
#include <array>
#include <string>
#include <vector>
```

Classes

class Buffer

5.3.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde A.Pingault L.Mirabito

See also

https://github.com/apingault/Trivent4HEP

Definition in file Buffer.h.

5.4 Buffer.h

```
00001
00006 #pragma once
00007
00008 #include "Bits.h"
00009
00010 #include <array>
00011 #include <string>
00012 #include <vector>
00013
00014 class Buffer
00015 {
00016 public:
00017    Buffer(): m_Buffer(nullptr), m_Size(0), m_Capacity(0) {}
00018    virtual ~Buffer() {}
00019    Buffer(const bit8_t b[], const std::size_t& i): m_Buffer(const_cast<bit8_t*>(&b[0])), m_Size(i), m_Capacity(i) {}
```

```
Buffer(const char b[], const std::size_t& i) : m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const</pre>
      bit8_t*>(&b[0]))), m_Size(i * sizeof(char)), m_Capacity(i * sizeof(char)) {}
00021 template<typename T> Buffer(const std::vector<T>& rawdata) :
    m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const bit8_t*>(rawdata.data()))), m_Size(rawdata.size())
* sizeof(T)), m_Capacity(rawdata.capacity() * sizeof(T)) {}
00022  template<typename T, std::size_t N> Buffer(const std::array<T, N>& rawdata) :
    m_Buffer(const_cast<bit8_t*>(reinterpret_cast<const bit8_t*>(rawdata.data()))), m_Size(rawdata.size())
       * sizeof(T)), m_Capacity(rawdata.size() * sizeof(T)) {}
00023
00024
00025
         std::size_t size()const { return m_Size; }
         std::size_t capacity()const { return m_Capacity; }
00026
00027
         bool empty() { return m_Size == 0; }
00028
         void set(unsigned char* b) { m_Buffer = b; }
00029
         void set (const Buffer& buffer)
00030
          m_Buffer = buffer.begin();
m_Size = buffer.size();
00031
00032
           m_Capacity = buffer.capacity();
00034
00035
         bit8_t* begin()const { return m_Buffer; }
00036
        bit8_t* end()const { return m_Buffer + m_Size; }
         bit8_t& operator[](const std::size_t& pos) { return m_Buffer[pos]; }
00037
00038
         bit8_t& operator[](const std::size_t& pos)const { return m_Buffer[pos]; }
00039
         void setSize(const std::size_t& size) { m_Size = size; }
00041
00042 private:
00043 bit8_t*
                       m_Buffer{nullptr};
         std::size_t m_Size{0};
00044
00045
         std::size_t m_Capacity{0};
00046 };
```

5.5 libs/core/include/BufferLooper.h File Reference

```
#include "AppVersion.h"
#include "BufferLooperCounter.h"
#include "DetectorId.h"
#include "Formatters.h"
#include "PayloadLoader.h"
#include "RawBufferNavigator.h"
#include "Timer.h"
#include "Words.h"
#include <algorithm>
#include <cassert>
#include <fmt/color.h>
#include <map>
#include <memory>
#include <spdlog/sinks/null_sink.h>
#include <spdlog/spdlog.h>
#include <string>
#include <vector>
```

Classes

class BufferLooper< SOURCE, DESTINATION >

5.5.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file BufferLooper.h.

5.6 BufferLooper.h 71

5.6 BufferLooper.h

```
00005 #pragma once
00006
00007 #include "AppVersion.h"
00008 #include "BufferLooperCounter.h"
00009 #include "DetectorId.h"
00010 #include "Formatters.h"
00011 #include "PayloadLoader.h"
00012 #include "RawBufferNavigator.h"
00013 #include "Timer.h"
00014 #include "Words.h"
00015
00016 #include <algorithm>
00017 #include <cassert
00018 #include <fmt/color.h>
00019 #include <map>
00020 #include <memory>
00021 #include <spdlog/sinks/null sink.h>
00022 #include <spdlog/spdlog.h>
00023 #include <string>
00024 #include <vector>
00025 // function to loop on buffers
00026
00027 template<typename SOURCE, typename DESTINATION> class BufferLooper
00028 1
00029 public:
          BufferLooper(SOURCE& source, DESTINATION& dest, bool debug = false) : m_Source(source),
        m_Destination(dest), m_Debug(debug)
00031
             m_Logger = spdlog::create<spdlog::sinks::null_sink_mt>("streamout");
00032
00033
              if(!spdlog::get("streamout")) { spdlog::register_logger(m_Logger); }
00034
             m Source.setLogger(m Logger);
00035
             m_Destination.setLogger(m_Logger);
00036
00037
00038
          void addSink(const spdlog::sink_ptr& sink, const spdlog::level_:level_enum& level =
       spdlog::get_level())
00039
00040
            sink->set level(level);
00041
             m_Sinks.push_back(sink);
00042
             m_Logger = std::make_shared<spdlog::logger>("streamout", begin(m_Sinks), end(m_Sinks));
00043
             m_Source.setLogger(m_Logger);
00044
             m_Destination.setLogger(m_Logger);
00045
00046
           void loop(const std::uint32_t& m_NbrEventsToProcess = 0)
00047
          {
// clang-format off
//sq/fmt::
00048
00049
00050
             fmt::print(fg(fmt::color::medium_orchid) | fmt::emphasis::bold,
                        "\n"
00051
00052 " SSSSSSSSSSSSSS
ttt:::t\n"
00054 "S:::::SSSSSS::::::S t::::t
        t::::t\n"
00055 "S:::::S
                          SSSSSSS t::::t
        t::::t\n"
                       00056 "S::::S
                     mmmmmmm
        mmmmmmm
u::::ut:::::::t\n"
00059 " SS::::::SSSSStttttt::::::tttttt rr:::::rrrrr:::::re:::::e
" SSS:::::SS t::::t r::::r
m::::mmm:::::mmm:::::mo:::o o:::ou:::u
r::::r
                                        00061 "
| m::::m | m:::mo::::o | o:::ou::::u | u...u | u...u | c...u | u...u |
                                                                                                                 a::::a
                                                                                                                               a:::::a m:::::m
a::::a a:::::a m::::m
                                                                                       e::::::e
                                                                                 t:::::tttt::::t\n"
                   m::::m
e::::::eeeeeeeea:::::aaaa::::::a m::::m
        tt::::::::t\n"
                                                                                   m::::m m::::m oo
00067 " SSSSSSSSSSSSSSSS
                   tttttttttt rrrrrr
                                                                                              eeeeeeeeeee aaaaaaaaa aaammmmmmm
                                                                                      ttttttttttt {}\n"
                   mmmmmm 000000000
                                                        uuuuuuuu uuuu
        mmmmmm
00068 "\n",
```

```
00069 fmt::format(fg(fmt::color::red) | fmt::emphasis::bold, "v{}", streamout_version.to_string()));
00070
                // clang-format on
00071
                log() ->info("Streamout Version : {}", streamout_version.to_string());
log() ->info("Using InterfaceReader {} version {}", m_Source.getName(),
00072
00073
         m Source.getVersion().to string());
                log()->info("Using InterfaceWriter {} version {}", m_Destination.getName(),
         m_Destination.getVersion().to_string());
00075
00076
                 if(!m_Destination.checkCompatibility(m_Source.getName(), m_Source.getVersion().to_string()))
00077
                   \log() ->critical("{} version {} is not compatible with {} version {} ! ", m_Source.getName(),
00078
         m_Source.getVersion().to_string(), m_Destination.getName(), m_Destination.getVersion().to_string());
    log()->info("Compatible Interfaces for {} are", m_Destination.getName());
00079
00080
                    for(std::map<std::string, std::string>::iterator it = m_Destination.getCompatibility().begin();
           it != m\_Destination.getCompatibility().end(); ++it) { log()->info("{} version {}", it->first, log()->info("{} version {}", it->first, log()->info("{} version {} v
         it->second): }
00081
                   std::exit(-1);
00082
00083
                if(!m_DetectorIDs.empty())
00084
00085
                    std::string ids;
00086
                    for(std::vector<DetectorID>::const_iterator it = m_DetectorIDs.cbegin(); it !=
          \texttt{m\_DetectorIDs.cend(); ++it)} \quad \texttt{ids += std::to\_string(static\_cast<std::uint16\_t>(\star it)) + ";";} \\
00087
                   log()->info("Detector ID(s) other than {} will be ignored", ids);
00088
00089
00090
                RawBufferNavigator bufferNavigator;
00091
                Timer
                                               timer;
00092
                timer.start();
00093
                m Source.start();
00094
                m_Destination.start();
00095
                while (m_Source.nextEvent() && m_NbrEventsToProcess >= m_NbrEvents)
00096
00097
                   m_Destination.setEventNumber(m_Source.getEventNumber());
00098 /**************
00099 /*** START EVENT ***/
                   m_Source.startEvent();
00101
                   m_Destination.startEvent();
00102 /***************
00103
00104
                   m Logger->warn("===*** Event {} ***===", m NbrEvents);
00105
                   while(m Source.nextDIFbuffer())
00106
00107
                      const Buffer& buffer = m_Source.getBuffer();
00108
00109
                       bufferNavigator.setBuffer(buffer);
00110
                      if(std::find(m_DetectorIDs.begin(), m_DetectorIDs.end(),
         static_cast<DetectorID>(bufferNavigator.getDetectorID())) == m_DetectorIDs.end())
00111
                      {
00112
                         m_Logger->debug("Ignoring detector ID : {}", bufferNavigator.getDetectorID());
00113
00114
                      }
00115
                       std::int32_t idstart = bufferNavigator.getStartOfPayload();
00116
                       if(m_Debug && idstart == -1) m_Logger->info(to_hex(buffer));
00117
                       c.DIFStarter[idstart]++;
00119
00120 /*************
00121 /*** START DIF ***/
00122
                      m Source.startDIF();
00123
                      m Destination.startDIF();
00124 /**************
00125
00126
                       PayloadLoader payloadLoader;
00127
00128
                       std::unique_ptr<Payload>& d = payloadLoader.getPayload(bufferNavigator.getDetectorID());
00129
                       if(d == nullptr)
00130
                       {
00131
                          \verb|m_Logger->error("streamout don't know how to parse the payload for detector_id {} | !
         SKIPPING !", bufferNavigator.getDetectorID());
00132
                       }
00133
00134
                       // This is really a big error so skip DIF entirely if exception occurs
00135
00136
00137
                       {
                         d->setBuffer(bufferNavigator.getPayload());
00138
00139
                          m_Logger->info("Parsing payload DIF_ID {} (detector_id {})", d->getDIFid(),
        bufferNavigator.getDetectorID());
00140
                      }
                       catch(const Exception& e)
00141
00142
                      {
00143
                          m_Logger->error("{}", e.what());
00144
                         continue;
00145
00146
```

5.6 BufferLooper.h 73

```
if(buffer.end() != d->end()) m_Logger->error("DIF BUFFER END {} {}", fmt::ptr(buffer.end()),
     fmt::ptr(d->end()));
00148
             assert(buffer.end() == d->end());
00149
00150
             c.DIFPtrValueAtReturnedPos[d->begin()[d->getEndOfDIFData() - 3]]++;
             assert(d->begin()[d->getEndOfDIFData() - 3] == 0xa0);
00151
00152
00153
             c.SizeAfterDIFPtr[d->getSizeAfterDIFPtr()]++;
00154
             m_Destination.processDIF(*d);
00155
             for(std::size_t i = 0; i < d->getNumberOfFrames(); ++i)
00156
             {
               11
00157
00158
               m Source.startFrame();
00159
               m_Destination.startFrame();
00160
               m_Destination.processFrame(*d, i);
00161
00162
               for(std::size_t j = 0; j < static_cast<std::size_t>(Hardware::NUMBER_PAD); ++j)
00163
00164
                 if (d->getThresholdStatus(i, j) != 0)
00165
                 {
00166
                   m Source.startPad();
00167
                   m_Destination.startPad();
00168
                   m\_Destination.processPadInFrame(*d, i, j);
00169
                   m Source.endPad():
00170
                   m_Destination.endPad();
00171
                 }
00172
00173
00174
               m_Source.endFrame();
00175
               m_Destination.endFrame();
00176
00177
             // If I want SlowControl I need to check for it first, If there is an error then it's not a
00178
     big deal just continue and say is bad SlowControl
00179
             /*try
00180 {
00181 d.setSCBuffer();
00182 }
00183 catch(const Exception& e)
00184 {
00185 m_Logger->error("{}", e.what());
00186 }
00187
00188 bool processSC = false;
00189 if(d.hasSlowControl())
00190 {
00191 c.hasSlowControl++;
00192 processSC = true;
00193
00194 if (d.badSCData())
00195
00196 c.hasBadSlowControl++;
00197 processSC = false;
00198
00199 if (processSC) { m_Destination.processSlowControl(d.getSCBuffer()); } */
00200
             // Buffer eod = d.getEndOfAllData();
00202
             // c.SizeAfterAllData[eod.size()]++;
             // bit8_t* debug_variable_3 = eod.end();
00203
00204
             // if(buffer.end() != debug_variable_3) m_Logger->info("END DATA BUFFER END {} {}",
     00205
00206
00208
             /*int nonzeroCount = 0;
00209 for(bit8_t* it = eod.begin(); it != eod.end(); it++)
00210 if(static_cast<int>(*it) != 0) nonzeroCount++;
00211 c.NonZeroValusAtEndOfData[nonzeroCount]++; */
00212
00213
00214
             11
00215
             m_Source.endDIF();
00216
             m_Destination.endDIF();
00217
             //
00218
              // end of DIF while loop
00219
           m_Logger->warn("===*** Event {} ***===", m_NbrEvents);
00220
           m_NbrEvents++;
00221 /**************/
00222 /*** END EVENT ***/
00223
           m Source.endEvent():
00224
           m_Destination.endEvent();
00225 /**************
00226
        } // end of event while loop
00227
         m_Destination.end();
00228
         m_Source.end();
00229
         timer.stop();
00230
         fmt::print(fq(fmt::color::green) | fmt::emphasis::bold, "=== elapsed time {}ms ({}ms/event)
```

```
===\n", timer.getElapsedTime() / 1000, timer.getElapsedTime() / (1000 * m_NbrEvents));
00231
00232
       void
                                       printAllCounters() { c.printAllCounters(); }
       std::shared_ptr<spdlog::logger> log() { return m_Logger; }
00233
00234
00235
       void setDetectorIDs(const std::vector<DetectorID>& detectorIDs) { m_DetectorIDs = detectorIDs; }
00236
00237 private:
00238 std::vector<DetectorID>
                                       m_DetectorIDs;
00239
       std::shared_ptr<spdlog::logger> m_Logger{nullptr};
       std::vector<spdlog::sink_ptr> m_Sinks;
00240
00241
       BufferLooperCounter
                                       c;
00242
       SOURCE&
                                       m_Source{nullptr};
00243
       DESTINATION&
                                       m_Destination{nullptr};
00244
       bool
                                       m_Debug{false};
00245 std::uint32_t
                                       m_NbrEvents{1};
00246 };
```

5.7 libs/core/include/BufferLooperCounter.h File Reference

```
#include <ios>
#include <map>
#include <memory>
#include <string>
```

Classes

struct BufferLooperCounter

5.7.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file BufferLooperCounter.h.

5.8 BufferLooperCounter.h

```
00001
00005 #pragma once
00006
00007 #include <ios>
00008 #include <map>
00009 #include <memory>
00010 #include <string>
00011
00012 struct BufferLooperCounter
00013 {
00014 public:
00015 int
00016 int
                               hasSlowControl
                               hasBadSlowControl = 0;
00017
        std::map<int, int> DIFStarter;
        std::map<int, int> DIFFtrValueAtReturnedPos;
std::map<int, int> SizeAfterDIFPtr;
00018
00020 std::map<int, int> SizeAfterAllData;
00021
        std::map<int, int> NonZeroValusAtEndOfData;
00022
      void printCounter(const std::string& description, const std::map<int, int>& m, const
std::ios_base::fmtflags& base = std::ios_base::dec);
00023
00024 void printAllCounters();
00025 };
```

5.10 DetectorId.h 75

5.9 libs/core/include/Detectorld.h File Reference

```
#include <cstdint>
```

Enumerations

• enum class DetectorID : std::uint16_t { HARDROC = 100 , HARDROC_NEW = 150 , RUNHEADER = 255 }

5.9.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DetectorId.h.

5.9.2 Enumeration Type Documentation

$\textbf{5.9.2.1} \quad \textbf{DetectorID} \quad \texttt{enum class DetectorID}: \quad \texttt{std::uint16_t} \quad \texttt{[strong]}$

Enumerator

HARDROC	
HARDROC_NEW	
RUNHEADER	

Definition at line 9 of file Detectorld.h.

5.10 DetectorId.h

```
00001
00005 #pragma once
00006
00007 #include <cstdint>
00008
00009 enum class DetectorID : std::uint16_t
00010 {
00011    HARDROC = 100,
00012    HARDROC_NEW = 150,
00013    RUNHEADER = 255
00014 };
```

5.11 libs/core/include/DIFSlowControl.h File Reference

```
#include <bitset>
#include <cstdint>
#include <iosfwd>
#include <map>
#include <string>
```

Classes

· class DIFSlowControl

Functions

std::string to_string (const DIFSlowControl &c)

5.11.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIFSlowControl.h.

5.11.2 Function Documentation

Definition at line 256 of file DIFSlowControl.cc.

5.12 DIFSlowControl.h 77

5.12 DIFSlowControl.h

```
00001
00005 #pragma once
00006
00007 #include <bitset>
00008 #include <cstdint>
00009 #include <iosfwd>
00010 #include <map>
00011 #include <string>
00012
00013 class DIFSlowControl
00014 {
00015 public:
00017
00022
        DIFSlowControl(const std::uint8_t& version, const std::uint8_t& DIFid, unsigned char* buf);
00023
00025
        std::uint8 t getDIFId();
00026
00028
00031
        std::map<int, std::map<std::string, int» getChipsMap();
00032
00034
00038
        std::map<std::string, int> getChipSlowControl(const int& asicid);
00039
00041
00045
       int getChipSlowControl(const std::int8 t& asicid, const std::string& param);
00046
00047
       std::map<int, std::map<std::string, int»::const_iterator cbegin()const { return m_MapSC.cbegin(); }</pre>
00048
00049
        std::map<int, std::map<std::string, int»::const_iterator cend()const { return m_MapSC.cend(); }
00050
00051 private:
       DIFSlowControl() = delete;
00053
        void FillHR1(const int& header_shift, unsigned char* cbuf);
       void FillHR2(const int& header_shift, unsigned char* cbuf);
void FillAsicHR1(const std::bitset<72 * 8>& bs);
00057
00059
00061
       void FillAsicHR2(const std::bitset<109 * 8>& bs);
00062
00063
                                                  m DTFTd{0}:
       unsigned int
00064
       unsigned int
                                                  m_Version{0};
00065
       unsigned int
                                                  m_AsicType{0}; // asicType_
00066
       unsigned int
                                                  m_NbrAsic{0};
00067
       std::map<int, std::map<std::string, int» m_MapSC;
00068 };
00069
00070 std::string to_string(const DIFSlowControl& c);
00071 /* void setSCBuffer()
00072
00073 if(!hasSlowControl()) return;
00074 if(m_SCbuffer.size() != 0) return; // deja fait 00075 if(m_BadSlowControl) return;
00076 m_SCbuffer.set(&(begin()[getEndOfDIFData()]));
00077 // compute Slow Control size
00078 std::size_t maxsize{size() - getEndOfDIFData() + 1}; // should I +1 here ?
// SC Header
== chipSize && k < maxsize))
00083 {
00084 k += 2; // DIF ID + ASIC Header
00085 uint32_t scsize = m_SCbuffer[k];
00086 if(scsize != 74 && scsize != 109)
00087 {
00088 k
00089 m_BadSlowControl = true;
00090 throw Exception(fmt::format("PROBLEM WITH SC SIZE {}", scsize));
00091
00092 k++; // skip size bit 00093 k += scsize; // skip the data
00094
00095 if(m_SCbuffer[k] == 0xal && !m_BadSlowControl) m_SCbuffer.setSize(k + 1); // add the trailer
00096 else
00097 {
00098 m BadSlowControl = true;
00099 throw Exception(fmt::format("PROBLEM SC TRAILER NOT FOUND "));
00100
00101 }*/
```

5.13 libs/core/include/Exception.h File Reference

```
#include <cstdint>
#include <exception>
#include <string>
```

Classes

class Exception

5.13.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Exception.h.

5.14 Exception.h

Go to the documentation of this file.

```
00005 #pragma once
00006
00007 #include <cstdint>
00008 #include <exception>
00009 #include <string>
00010
00012 {
00013 public:
00014 virtual const char* what() const noexcept { return m_What.c_str(); }
00015 explicit Exception(const std::string& message) : m_Message(message) { constructWhat(); }
00016 Exception(const std::int32_t& error, const std::string& message) : m_Error(error),
m_Message(message) { constructWhat(); }
00017    std::int32_t error() { return m_Error; }
00018    std::string message() { return m_Message; }
00019
00020 private:
00021 void constructWhat()
00023
               if(m_Error == 0) m_What = m_Message;
00024
                  m_What = std::string("Error ") + std::to_string(m_Error) + std::string(" : ") + m_Message;
00025
00026
00027 std::string m_What;
00028 std::string m_Message;
00029 std::int32_t m_Error{0};
00030 };
```

5.15 libs/core/include/Filesystem.h File Reference

```
#include <string>
```

Functions

- std::string path (const std::string &)
- std::string extension (const std::string &)
- std::string filename (const std::string &)

5.16 Filesystem.h 79

5.15.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Filesystem.h.

5.15.2 Function Documentation

```
5.15.2.1 extension() std::string extension (
                                                      const std::string & file )
 Definition at line 13 of file Filesystem.cc.
 00015 std::size_t position = file.find_last_of(".");
                             return (std::string::npos == position || position == 0) ? "" : file.substr(position + 1);
00016
00017 }
5.15.2.2 filename() std::string filename (
                                                      const std::string & file )
Definition at line 19 of file Filesystem.cc.
00020 {
vocation of the control of the 
00024 }
5.15.2.3 path() std::string path (
                                                       const std::string & file )
Definition at line 7 of file Filesystem.cc.
 80000
                           std::size_t pos = file.find_last_of("\\");
return (std::string::npos == pos) ? "" : file.substr(0, pos);
 00009
00010
00011 }
```

5.16 Filesystem.h

```
00001
00005 #pragma once
00006
00007 #include <string>
00008
00009 std::string path(const std::string&);
00010 std::string extension(const std::string&);
00011 std::string filename(const std::string&);
```

5.17 libs/core/include/Formatters.h File Reference

```
#include "Bits.h"
#include <iosfwd>
#include <string>
```

Functions

```
    std::string to dec (const Buffer &b, const std::size t &begin=0, const std::size t &end=-1)

• std::string to_dec (const bit8_t &)
• std::string to_dec (const bit16_t &)

    std::string to dec (const bit32 t &)

• std::string to_dec (const bit64_t &)
• std::string to_hex (const Buffer &b, const std::size_t &begin=0, const std::size_t &end=-1)

    std::string to_hex (const bit8_t &)

• std::string to_hex (const bit16_t &)

    std::string to hex (const bit32 t &)

    std::string to_hex (const bit64_t &)

• std::string to_bin (const Buffer &b, const std::size_t &begin=0, const std::size_t &end=-1)
std::string to_bin (const bit8_t &)
• std::string to_bin (const bit16_t &)
• std::string to bin (const bit32 t &)
• std::string to_bin (const bit64_t &)

    std::string to_oct (const Buffer &b, const std::size_t &begin=0, const std::size_t &end=-1)

    std::string to_oct (const bit8_t &)

• std::string to_oct (const bit16_t &)
• std::string to oct (const bit32 t &)

    std::string to_oct (const bit64_t &)
```

5.17.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Formatters.h.

5.17.2 Function Documentation

```
5.17.2.2 to_bin() [2/5] std::string to_bin (
               const bit32_t & b )
Definition at line 73 of file Formatters.cc.
00073 { return fmt::format("{:#032b}", b); }
5.17.2.3 to bin() [3/5] std::string to_bin (
               const bit64_t & b )
Definition at line 75 of file Formatters.cc.
00075 { return fmt::format("{:#064b}", b); }
5.17.2.4 to_bin() [4/5] std::string to_bin (
               const bit8_t & b )
Definition at line 69 of file Formatters.cc.
00069 { return fmt::format("{:#08b}", b); }
5.17.2.5 to_bin() [5/5] std::string to_bin (
               const Buffer & b,
               const std::size_t & begin = 0,
               const std::size_t & end = -1)
Definition at line 56 of file Formatters.cc.
00057 {
        std::size_t iend = end;
00059
        if(iend == -1) iend = b.size();
       std::string ret;
for(std::size_t k = begin; k < iend; k++)</pre>
00060
00061
00062
        ret += to_bin(b[k]);
ret += " - ";
00063
00064
00065
00066
       return ret;
00067 }
5.17.2.6 to_dec() [1/5] std::string to_dec (
               const bit16_t & b )
Definition at line 29 of file Formatters.cc.
00029 { return fmt::format("{:#d}", b); }
5.17.2.7 to_dec() [2/5] std::string to_dec (
               const bit32_t & b )
Definition at line 31 of file Formatters.cc.
00031 { return fmt::format("{:#d}", b); }
```

```
5.17.2.8 to_dec() [3/5] std::string to_dec (
               const bit64_t & b )
Definition at line 33 of file Formatters.cc.
00033 { return fmt::format("{:#d}", b); }
5.17.2.9 to dec() [4/5] std::string to_dec (
               const bit8_t & b )
Definition at line 27 of file Formatters.cc.
00027 { return fmt::format("{:#d}", b); }
5.17.2.10 to_dec() [5/5] std::string to_dec (
               const Buffer & b,
               const std::size_t & begin = 0,
               const std::size_t & end = -1)
Definition at line 14 of file Formatters.cc.
00015 {
       std::size_t iend = end;
if(iend == -1) iend = b.size();
std::string ret;
00016
00017
00018
       for(std::size_t k = begin; k < iend; k++)</pre>
00019
00024 return ret;
00025 }
5.17.2.11 to_hex() [1/5] std::string to_hex (
              const bit16_t & b )
Definition at line 50 of file Formatters.cc.
00050 { return fmt::format("{:#04x}", b); }
5.17.2.12 to_hex() [2/5] std::string to_hex (
               const bit32_t & b )
Definition at line 52 of file Formatters.cc.
00052 { return fmt::format("{:#08x}", b); }
5.17.2.13 to_hex() [3/5] std::string to_hex (
               const bit64_t & b )
Definition at line 54 of file Formatters.cc.
00054 { return fmt::format("{:#016x}", b); }
```

```
5.17.2.14 to_hex() [4/5] std::string to_hex (
               const bit8_t & b )
Definition at line 48 of file Formatters.cc.
00048 { return fmt::format("{:#02x}", b); }
5.17.2.15 to_hex() [5/5] std::string to_hex (
               const Buffer & b,
               const std::size_t & begin = 0,
               const std::size_t & end = -1)
Definition at line 35 of file Formatters.cc.
        std::size_t iend = end;
if(iend == -1) iend = b.size();
00037
00038
        std::string ret;
for(std::size_t k = begin; k < iend; k++)</pre>
00039
00040
00041
        ret += to_hex(b[k]);
ret += " - ";
00042
00043
00044 }
00045 return ret;
00046 }
5.17.2.16 to_oct() [1/5] std::string to_oct (
               const bit16_t & b )
Definition at line 92 of file Formatters.cc.
00092 { return fmt::format("{:#080}", b); }
5.17.2.17 to_oct() [2/5] std::string to_oct (
               const bit32_t & b )
Definition at line 94 of file Formatters.cc.
00094 { return fmt::format("{:#0160}", b); }
5.17.2.18 to_oct() [3/5] std::string to_oct (
               const bit64_t & b )
Definition at line 96 of file Formatters.cc.
00096 { return fmt::format("{:#0320}", b); }
5.17.2.19 to_oct() [4/5] std::string to_oct (
               const bit8_t & b )
Definition at line 90 of file Formatters.cc.
00090 { return fmt::format("{:#040}", b); }
```

```
5.17.2.20 to_oct() [5/5] std::string to_oct (
                const Buffer & b,
               const std::size_t & begin = 0,
                const std::size_t & end = -1)
Definition at line 77 of file Formatters.cc.
00078 {
00079
        std::size_t iend = end;
        if (iend == -1) iend = b.size();
08000
        std::string ret;
00082
        for(std::size_t k = begin; k < iend; k++)</pre>
       __. \ = be

. ret += to_oct(b[k]);

ret += " - ";

}
00083
00084
00085
00086
00087
        return ret;
00088 }
```

5.18 Formatters.h

Go to the documentation of this file.

```
00005 #pragma once
00006
00007 #include "Bits.h"
80000
00009 #include <iosfwd>
00010 #include <string>
00012 class Buffer;
00013
00014 std::string to_dec(const Buffer& b, const std::size_t& begin = 0, const std::size_t& end = -1);
00015 std::string to_dec(const bit8_t&);
00016 std::string to_dec(const bit16_t&);
00017 std::string to_dec(const bit32_t&);
00018 std::string to_dec(const bit64_t&);
00019
00020 std::string to_hex(const Buffer& b, const std::size_t& begin = 0, const std::size_t& end = -1);
00021 std::string to_hex(const bit8_t&);
00022 std::string to_hex(const bit16_t&);
00023 std::string to_hex(const bit32_t&);
00024 std::string to_hex(const bit64_t&);
00025
00026 std::string to_bin(const Buffer& b, const std::size_t& begin = 0, const std::size_t& end = -1);
00027 std::string to_bin(const bit8_t&);
00028 std::string to_bin(const bit16_t&);
00029 std::string to_bin(const bit32_t&);
00030 std::string to_bin(const bit64_t&);
00031
00032 std::string to_oct(const Buffer& b, const std::size_t& begin = 0, const std::size_t& end = -1);
00033 std::string to_oct(const bit8_t&);
00034 std::string to_oct(const bit16_t&);
00035 std::string to_oct(const bit32_t&);
00036 std::string to_oct(const bit64_t&);
```

5.19 libs/core/include/Interface.h File Reference

```
#include "AppVersion.h"
#include "Buffer.h"
#include "Version.h"
#include <map>
#include <memory>
#include <semver.hpp>
#include <spdlog/logger.h>
#include <string>
```

5.20 Interface.h 85

Classes

- · class Interface
- · class InterfaceReader
- · class InterfaceWriter

Enumerations

enum class InterfaceType { Unknown = 0 , Reader = 1 , Writer = 2 }
 template class should implement void SOURCE::start(); bool SOURCE::next(); void SOURCE::end(); const Buffer&
 SOURCE::getBuffer();

5.19.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Interface.h.

5.19.2 Enumeration Type Documentation

```
5.19.2.1 InterfaceType enum class InterfaceType [strong]
```

template class should implement void SOURCE::start(); bool SOURCE::next(); void SOURCE::end(); const Buffer& SOURCE::getBuffer();

void DESTINATION::begin(); void DESTINATION::processDIF(const DIFPtr&); void DESTINATION::process Frame(const DIFPtr&,const std::uint32_t& frameIndex); void DESTINATION::processPadInFrame(const DIFPtr&,const std::uint32_t& frameIndex,const std::uint32_t& channelIndex); void DESTINATION::processSlowControl(const Buffer&); void DESTINATION::end();

Enumerator

Unknown	
Reader	
Writer	

Definition at line 31 of file Interface.h.

5.20 Interface.h

```
00001
00004 #pragma once
00005
00006 #include "AppVersion.h" 00007 #include "Buffer.h"
00008 #include "Version.h"
00010 #include <map>
00011 #include <memory>
00012 #include <semver.hpp>
00013 #include <spdlog/logger.h>
00014 #include <string>
00015
00031 enum class InterfaceType
00032 {
00033
       Unknown = 0,
       Reader = 1,
Writer = 2
00034
00035
00036 };
00037
00038 class Interface
00039 {
00040 public:
       Interface(const std::string& name, const std::string& version, const InterfaceType& type) :
00041
     m_Name(name), m_Version(version) {}
00042 virtual ~Interface() = default;
00043
        virtual void
                                          startEvent() {}
00044
       virtual void
                                          endEvent() {}
00045
       virtual void
                                          startDIF() {}
00046
       virtual void
                                          endDIF() {}
00047
                                          startFrame() {}
       virtual void
00048
       virtual void
                                          endFrame() {}
00049
                                          startPad() {}
        virtual void
00050
        virtual void
                                          endPad() {}
00051
        std::shared_ptr<spdlog::logger>& log() { return m_Logger; }
                                          setLogger(const std::shared_ptr<spdlog::logger>& logger) { m_Logger
00052
        void
      = logger; }
00053
                                          getName() { return m_Name; }
        std::string
00054
        Version
                                          getVersion() { return m_Version; }
00055
        std::uint32_t
                                          getEventNumber() { return m_EventNumber; }
00056
        void
                                          setEventNumber(const std::uint32_t& nbr) { m_EventNumber = nbr; }
00057
        std::uint32 t
                                          getRunNumber() { return m_RunNumber; }
00058
                                          setRunNumber(const std::uint32_t& nbr) { m_RunNumber = nbr; }
        void
00059
00060 protected:
00061
        std::uint32_t m_EventNumber{0};
00062
        std::uint32_t m_RunNumber{0};
00063
00064 private:
00065 std::shared_ptr<spdlog::logger> m_Logger{nullptr};
00066
        std::string
                                         m_Name;
00067
                                         m_Version;
        Version
00068
       InterfaceType
                                         m_Type{InterfaceType::Unknown};
00069 };
00070
00071 class InterfaceReader: public Interface
00072 {
00073 public:
        InterfaceReader(const std::string& name, const std::string& version) : Interface(name, version,
     InterfaceType::Reader) {}
00075
       virtual ~InterfaceReader() = default;
00076
00077 protected:
00078
       Buffer m_Buffer;
00079 };
08000
00081 class InterfaceWriter: public Interface
00082 {
00083 public:
00084
        InterfaceWriter(const std::string& name, const std::string& version) : Interface(name, version,
      InterfaceType::Writer) {}
00085
00086
        void addCompatibility(const std::string& name, const std::string& version) { m_Compatible[name] =
     version; }
00087
        std::map<std::string, std::string> getCompatibility() { return m_Compatible; }
00089
00090
        bool checkCompatibility(const std::string& name, const std::string& version)
00091
00092
          if (m Compatible.find(name) != m Compatible.end())
00093
00094
                            ran = semver::range::detail::range(m_Compatible[name]);
00095
            semver::version ver = semver::version(version);
            if(ran.satisfies(ver, false)) return true;
00096
            else
00097
00098
              return false;
00099
          }
```

5.21 libs/core/include/Payload.h File Reference

```
#include "Buffer.h"
#include "Exception.h"
#include <fmt/format.h>
```

Classes

· class Payload

5.21.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Payload.h.

5.22 Payload.h

```
00001
00004 #pragma once
00005
00006 #include "Buffer.h"
00007 #include "Exception.h"
00008
00009 #include <fmt/format.h>
00010
00011 class Payload : public Buffer
00012 {
00013 public:
00014
        explicit Payload(const std::int32_t& detector_id) : m_DetectorID(detector_id) {}
00015
                        setBuffer(const Buffer& buffer);
getEndOfDIFData() const;
        void
00016
       std::uint32_t
                                getSizeAfterDIFPtr() const;
        std::uint32_t
00018
        virtual std::uint32_t getNumberOfFrames() const
00019
        virtual std::uint32_t getThresholdStatus(const std::uint32_t&, const std::uint32_t&) const = 0;
00020
       virtual std::uint32_t getDIFid() const
        virtual std::uint32_t getDTC() const
virtual std::uint32_t getGTC() const
                                                                                                             = 0;
00021
00022
                                                                                                             = 0;
        virtual std::uint32_t getBCID() const
00024
        virtual std::uint64_t getAbsoluteBCID() const
00025
        virtual std::uint32_t getASICid(const std::uint32_t&) const
                                                                                                             = 0;
00026
        virtual std::uint32_t getFrameBCID(const std::uint32_t&) const
00027
        virtual std::uint32_t getFrameTimeToTrigger(const std::uint32_t&) const
                                                                                                             = 0;
00028
        std::uint32_t getDetectorID()const { return m_DetectorID; }
00030
00031
        virtual ~Payload() {}
00032
00033 protected:
00034 virtual void parsePayload() = 0;
00035 std::int32_t m_DetectorID{-1};
       std::uint32_t theGetFramePtrReturn_{0};
```

```
00037 };
00038
00039 inline void Payload::setBuffer(const Buffer& buffer)
00040 {
00041    set(buffer);
00042    parsePayload();
00043 }
00044
00045 inline std::uint32_t Payload::getEndOfDIFData()const { return theGetFramePtrReturn_; }
00046
00047 inline std::uint32_t Payload::getSizeAfterDIFPtr()const { return size() - theGetFramePtrReturn_; }
```

5.23 libs/core/include/Payload100.h File Reference

```
#include "Payload.h"
#include <vector>
```

Classes

class Payload100

5.23.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Payload100.h.

5.24 Payload100.h

```
00001
00005 #pragma once
00006 #include "Payload.h"
00007
00008 #include <vector>
00009
00027 class Payload100 : public Payload
00028 {
00029 public:
00030
       Payload100() : Payload(100) {}
00031
        bool
                              hasTemperature() const;
00032
                               hasAnalogReadout() const;
        bool
       virtual std::uint32_t getNumberOfFrames() const final;
00033
       virtual std::uint32_t getThresholdStatus(const std::uint32_t&, const std::uint32_t&) const final;
00035
        virtual std::uint32_t getDIFid() const final;
00036
       virtual std::uint32_t getDTC() const final;
00037
       virtual std::uint32_t getGTC() const final;
       virtual std::uint32_t getBCID() const final;
virtual std::uint64_t getAbsoluteBCID() const final;
00038
00039
        virtual std::uint32_t getASICid(const std::uint32_t&) const final;
00040
00041
        virtual std::uint32_t getFrameBCID(const std::uint32_t&) const final;
00042
        virtual std::uint32_t getFrameTimeToTrigger(const std::uint32_t&) const final;
00043
        virtual ~Payload100();
00044
00045 bool hasAnalogReadout() const;
00046
00047 bool hasSlowControl() const;
00048
00049 float getTemperatureDIF() const;
00050
00051 float getTemperatureASU1() const;
00053 float getTemperatureASU2() const;
```

```
00054
00055 Buffer getSlowControl() const;
00056
00057 std::vector<bit8_t*> getFramesVector() const;
00058
00059 std::vector<bit8_t*> getLinesVector() const;
00060
00061 bool
                   hasLine(const std::uint32_t&) const;
00062
00063 bit8 t*
                   getFramePtr(const std::uint32_t&) const;
00064
00065 std::uint32_t getDIF_CRC() const;
00066
00067 private:
00068
00069 std::uint32_t getTASU1() const;
00070 std::uint32_t getTASU2() const;
00071 std::uint32_t getTDIF() const;
00073
00074 private:
00075
       bool
                             getFrameLevel(const std::uint32_t&, const std::uint32_t&, const std::uint32_t&)
     const;
00076 std::uint16_t
                            m_Version{13};
00077
       std::vector<bit8_t*> m_Lines;
       std::vector<bit8_t*> m_Frames;
00079
       virtual void
                            parsePayload() final;
00080 std::uint32_t
                             parseAnalogLine(const std::uint32_t& idx);
00081
       std::uint32_t
                             getNumberLines() const;
00082 };
```

5.25 libs/core/include/Payload150.h File Reference

```
#include "Payload.h"
#include <vector>
```

Classes

class Payload150

5.25.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Payload150.h.

5.26 Payload150.h

```
00001
00005 #pragma once
00006 #include "Payload.h"
00007
00008 #include vector>
00009
00010 class Payload150 : public Payload
00011 {
00012 public:
00013    Payload150() : Payload(150) {}
00014    virtual std::uint32_t getNumberOfFrames() const final;
00015    virtual std::uint32_t getThresholdStatus(const std::uint32_t&, const std::uint32_t&) const final;
00016    virtual std::uint32_t getDIFid() const final;
00017    virtual std::uint32_t getDTC() const final;
```

```
virtual std::uint32_t getGTC() const final;
       virtual std::uint32_t getBCID() const final;
00020
       virtual std::uint64_t getAbsoluteBCID() const final;
00021 virtual std::uint32_t getASICid(const std::uint32_t&) const final;
       virtual std::uint32_t getFrameBCID(const std::uint32_t&) const final;
00022
       virtual std::uint32_t getFrameTimeToTrigger(const std::uint32_t&) const final;
00023
       virtual ~Payload150();
00025
00026 private:
00027
       bool
                             getFrameLevel(const std::uint32_t&, const std::uint32_t&, const std::uint32_t&)
     const;
00028 std::vector<bit8_t*> m_Frames;
00029 virtual void parsePayl
                           parsePayload() final;
00030 };
```

5.27 libs/core/include/PayloadLoader.h File Reference

```
#include "Payload.h"
#include "Payload100.h"
#include "Payload150.h"
#include <cstdint>
#include <memory>
```

Classes

· class PayloadLoader

5.27.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file PayloadLoader.h.

5.28 PayloadLoader.h

```
00005 #pragma once
00006
00007 #include "Payload.h"
00008 #include "Payload100.h"
00009 #include "Payload150.h"
00010
00011 #include <cstdint>
00012 #include <memory>
00013
00014 class PayloadLoader
00015 {
00016 public:
       PayloadLoader() = default;
00017
00018
         std::unique_ptr<Payload>& getPayload(const std::int32_t& detector_id)
00019
00020
           switch (detector_id)
00021
             case 100: payload = std::make_unique<Payload100>(); break;
case 150: payload = std::make_unique<Payload150>(); break;
00022
00024
00025
           return payload;
00026 }
00027
00028 private:
00029
        std::unique_ptr<Payload> payload{nullptr};
```

5.29 libs/core/include/RawBufferNavigator.h File Reference

```
#include "Buffer.h"
```

Classes

· class RawBufferNavigator

class to navigate in the raw data buffer parse the header and send the payload as Buffer

5.29.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file RawBufferNavigator.h.

5.30 RawBufferNavigator.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include "Buffer.h"
80000
00024 class RawBufferNavigator
00025 {
00026 public:
00027 static void startAt(co
00028 RawBufferNavigator();
         static void startAt(const int& start);
00029
         ~RawBufferNavigator() = default;
00030
         void
                          setBuffer(const Buffer&);
         std::uint32_t getDetectorID();
00031
         bool findStartOfPayload();

std::int32_t getStartOfPayload();

bool validPayload();

Buffer getPayload();
00032
00033
00035
00036
00037 private:
00038 Buffer m_Buffer;
00039 static std::int32_t m_StartPayload;
00040 };
```

5.31 libs/core/include/Timer.h File Reference

```
#include <chrono>
```

Classes

class Timer

5.31.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Timer.h.

5.32 Timer.h

Go to the documentation of this file.

5.33 libs/core/include/Utilities.h File Reference

```
#include <cstdint>
```

Functions

• std::uint64_t GrayToBin (const std::uint64_t &n)

5.33.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Utilities.h.

5.33.2 Function Documentation

5.34 Utilities.h 93

Definition at line 9 of file Utilities.h.

```
00011
        std::uint64_t ish{1};
00012
        std::uint64_t anss{n};
        std::uint64_t idiv{0};
std::uint64_t ishmax{sizeof(std::uint64_t) * 8};
00013
00014
00015
        while (true)
00016
00017
          idiv = anss » ish;
         anss ^= idiv;
if(idiv <= 1 || ish == ishmax) return anss;
00018
00019
00020
          ish «= 1;
00021 }
00022 }
```

5.34 Utilities.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include <cstdint>
80000
00009 inline std::uint64_t GrayToBin(const std::uint64_t& n)
00010 {
00011 std::uint64_t ish{1};
00012 std::uint64_t anss{n};
00013 std::uint64_t idiv{0};
00014
        std::uint64_t ishmax{sizeof(std::uint64_t) * 8};
00015
        while (true)
00016
        idiv = anss » ish;
anss ^= idiv;
00017
00018
00019
           if(idiv <= 1 || ish == ishmax) return anss;</pre>
00020
          ish «= 1;
00021
00022 }
```

5.35 libs/core/include/Version.h File Reference

```
#include <cstdint>
#include <semver.hpp>
#include <string>
```

Classes

· class Version

5.35.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Version.h.

5.36 Version.h

Go to the documentation of this file.

5.37 libs/core/include/Words.h File Reference

Enumerations

• enum class Hardware : std::uint8_t { NUMBER_PAD = 64 }

5.37.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Words.h.

5.37.2 Enumeration Type Documentation

```
5.37.2.1 Hardware enum class Hardware : std::uint8_t [strong]
```

Enumerator

```
NUMBER PAD
```

Definition at line 8 of file Words.h.

```
00009 {
00010 NUMBER_PAD = 64,
00011 };
```

5.38 Words.h

```
00001

00005 #pragma once

00006

00007 // TODO(flagarde): SUPPRESS THIS ***

00008 enum class Hardware : std::uint8_t

00009 {

00010 NUMBER_PAD = 64,

00011 };
```

5.39 libs/core/src/Bits.cc File Reference

```
#include "Bits.h"
```

Functions

std::ostream & operator << (std::ostream &os, const bit8_t &c)
 Stream operator to print bit8_t aka std::uint8_t and not char or unsigned char.

5.39.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Bits.cc.

5.39.2 Function Documentation

```
5.39.2.1 operator << () std::ostream & operator << ( std::ostream & os, const bit8_t & c )
```

Stream operator to print bit8_t aka std::uint8_t and not char or unsigned char.

```
Definition at line 8 of file Bits.cc.
00008 { return os « c + 0; }
```

5.40 Bits.cc

```
00001
00006 #include "Bits.h"
00007
00008 std::ostream& operator«(std::ostream& os, const bit8_t& c) { return os « c + 0; }
```

5.41 libs/core/src/BufferLooperCounter.cc File Reference

```
#include "BufferLooperCounter.h"
#include "Formatters.h"
#include <fmt/color.h>
```

5.42 BufferLooperCounter.cc

Go to the documentation of this file.

```
00001
00005 #include "BufferLooperCounter.h"
00006
00007 #include "Formatters.h"
80000
00009 #include <fmt/color.h>
00010
00011 void BufferLooperCounter::printAllCounters()
00012 {
        fmt::print(fg(fmt::color::crimson) \mid fmt::emphasis::bold, "BUFFER LOOP FINAL STATISTICS : \n");
00013
        printCounter("Start of DIF header", DIFStarter);
00015
        printCounter("Value after DIF data are processed", DIFPtrValueAtReturnedPos, std::ios_base::hex);
00016
        printCounter("Size remaining in buffer after end of DIF data", SizeAfterDIFPtr);
00017
        fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, "Number of Slow Control found {} out of
      which {} are bad\n", hasSlowControl, hasBadSlowControl);
printCounter("Size remaining after all of data have been processed", SizeAfterAllData);
00018
        printCounter("Number on non zero values in end of data buffer", NonZeroValusAtEndOfData);
00019
00020 }
00021
00022 void BufferLooperCounter::printCounter(const std::string& description, const std::map<int, int>& m,
      const std::ios_base::fmtflags& base)
00023 {
00024
        std::string out{"statistics for " + description + " : \n"};
00025
        for(std::map<int, int>::const_iterator it = m.begin(); it != m.end(); it++)
00026
          if(it != m.begin()) out += ",";
out += " [";
00027
00028
           switch(base)
00029
00030
00031
             case std::ios_base::dec: out += to_dec(static_cast<std::uint32_t>(it->first)); break;
             case std::ios_base::hex:    out += to_hex(static_cast<std::uint32_t>(it->first)); break;
case std::ios_base::oct:    out += to_oct(static_cast<std::uint32_t>(it->first)); break;
00032
00033
             default: out += to_dec(static_cast<std::uint32_t>(it->first)); break;
00034
00035
00036
          out += "]=" + std::to_string(it->second);
00037
00038
        out += "\n";
00039
        fmt::print(fg(fmt::color::crimson) | fmt::emphasis::bold, out);
00040 }
```

5.43 libs/core/src/DIFSlowControl.cc File Reference

```
#include "DIFSlowControl.h"
```

Functions

std::string to_string (const DIFSlowControl &c)

5.43.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIFSlowControl.cc.

5.44 DIFSlowControl.cc 97

5.43.2 Function Documentation

```
5.43.2.1 to_string() std::string to_string (
                 const DIFSlowControl & c )
Definition at line 256 of file DIFSlowControl.cc.
00258
         std::string ret;
00259
         for(std::map<int, std::map<std::string, int>::const_iterator it = c.cbegin(); it != c.cend(); it++)
00260
           ret += "ASIC " + std::to_string(it->first) + " :\n";
00261
      for(std::map<std::string, int>::const_iterator jt = (it->second).begin(); jt !=
(it->second).end(); jt++) ret += jt->first + " : " + std::to_string(jt->second) +
00262
                                                                    + std::to_string(jt->second) + "\n";
00263
00264
00265 }
```

5.44 DIFSlowControl.cc

```
00001
00005 #include "DIFSlowControl.h"
00006
00007 DIFSlowControl::DIFSlowControl(const std::uint8_t& version, const std::uint8_t& DIfId, unsigned char*
      cbuf) : m_Version(version), m_DIFId(DIfId), m_AsicType(2)
00008 {
00009
        if(cbuf[0] != 0xb1) return;
00010
        int header shift{6}:
00011
        if (m_Version < 8) m_NbrAsic = cbuf[5];</pre>
00012
        else
00013
       {
        m_DIFId
                     = cbuf[1];
= cbuf[2];
00014
00015
         m NbrAsic
         header_shift = 3;
00016
00017
00018
        int size_hardroc1 = m_NbrAsic * 72 + header_shift + 1;
       if(cbuf[size_hardroc1 - 1] != 0xal) size_hardroc1 = 0;
00019
00020
00021
        int size_hardroc2 = m_NbrAsic * 109 + header_shift + 1;
00022
        if (cbuf[size_hardroc2 - 1] != 0xa1) size_hardroc2 = 0;
00023
        if(size_hardroc1 != 0)
00024
       {
FillHR1(header_shift, cbuf);
1.
00025
00026
        m_AsicType = 1;
00027
00028
       else if(size_hardroc2 != 0)
00029
         FillHR2(header_shift, cbuf);
00030
       else
00031
00032 }
00033
00034 inline std::uint8_t DIFSlowControl::getDIFId() { return m_DIFId; }
00035
00036 inline std::map<int, std::map<std::string, int» DIFSlowControl::getChipsMap() { return m_MapSC; }
00038 inline std::map<std::string, int> DIFSlowControl::getChipSlowControl(const int& asicid) { return
      m_MapSC[asicid]; }
00039
00040 inline int DIFSlowControl::getChipSlowControl(const std::int8 t& asicid, const std::string& param) {
      return getChipSlowControl(asicid)[param]; }
00042 void DIFSlowControl::FillHR1(const int& header_shift, unsigned char* cbuf)
00043 {
00044
        int nasic{cbuf[header_shift - 1]};
00045
        int idx{header_shift};
00046
        for (int k = 0; k < nasic; k++)
00047
00048
         std::bitset<72 * 8> bs;
00049
          // printf("%x %x n",cbuf[idx+k*72+69],cbuf[idx+k*72+70]);
00050
          for(int 1 = 71; 1 >= 0; 1--)
00051
00052
            // printf("%d %x : %d -->",l,cbuf[idx+k*72+1],(71-1)*8);
00053
            for (int m = 0; m < 8; m++)
00054
```

```
if(((1 \ll m) \& cbuf[idx + k * 72 + 1]) != 0) bs.set((71 - 1) * 8 + m, 1);
00056
                 bs.set((71 - 1) * 8 + m, 0);
00057
               // printf("%d",(int) bs[(71-1)*8+m]);
00058
00059
00060
             // printf("\n");
00062
          FillAsicHR1(bs);
00063
       }
00064 }
00065
00066 void DIFSlowControl::FillHR2(const int& header shift, unsigned char* cbuf)
00067 {
        // int scsize1=cbuf[header_shift-1] *109+(header_shift-1) +2;
00068
00069
        int nasic{cbuf[header_shift - 1]};
        int idx{header_shift};
// std::cout«" DIFSlowControl::FillHR nasic "«nasic«std::endl;
00070
00071
00072
        for (int k = 0; k < nasic; k++)
00074
          std::bitset<109 * 8> bs;
          // printf("%x %x \n",cbuf[idx+k*109+69],cbuf[idx+k*109+70]);
for(int 1 = 108; 1 >= 0; 1--)
00075
00076
00077
00078
            // printf("%d %x : %d -->",l,cbuf[idx+k*109+1],(71-1)*8);
00079
             for (int m = 0; m < 8; m++)
00080
00081
               if(((1 \times m) \& cbuf[idx + k * 109 + 1]) != 0) bs.set((108 - 1) * 8 + m, 1);
00082
                bs.set((108 - 1) \star 8 + m, 0);
00083
00084
               // printf("%d",(int) bs[(71-1)*8+m]);
00085
00086
             // printf("\n");
00087
00088
          FillAsicHR2(bs);
00089
       }
00090 }
00091
00092 void DIFSlowControl::FillAsicHR1(const std::bitset<72 * 8>& bs)
00093 {
00094
        // Asic Id
00095
        int asicid{0};
        for (int j = 0; j < 8; j++)

if (bs[j + 9] != 0) asicid += (1 « (7 - j));
00096
00097
00098
        std::map<std::string, int> mAsic;
        // Slow Control
00099
00100
        mAsic["SSC0"]
                                 = static_cast<int>(bs[575]);
        mAsic["SSC1"]
mAsic["SSC2"]
00101
                                 = static_cast<int>(bs[574]);
00102
                                 = static_cast<int>(bs[573]);
        mAsic["Choix_caisson"] = static_cast<int>(bs[572]);
00103
        mAsic["SW_50k"]
                                = static_cast<int>(bs[571]);
00104
        mAsic["SW_100k"]
                                 = static_cast<int>(bs[570]);
00105
00106
        mAsic["SW_100f"]
                                 = static_cast<int>(bs[569]);
00107
        mAsic["SW_50f"]
                                 = static_cast<int>(bs[568]);
00108
        mAsic["Valid_DC"] = static_cast<int>(bs[567]);
00109
        mAsic["ON_Discri"] = static_cast<int>(bs[566]);
00110
                           = static_cast<int>(bs[565]);
        mAsic["ON_Fsb"]
00111
00112
        mAsic["ON_Otaq"]
                            = static_cast<int>(bs[564]);
        mAsic["ON_W"]
mAsic["ON_Ss"]
00113
                            = static_cast<int>(bs[563]);
00114
                            = static_cast<int>(bs[562]);
        mAsic["ON Buf"]
00115
                            = static_cast<int>(bs[561]);
        mAsic["ON_Paf"]
                            = static_cast<int>(bs[560]);
00116
00117
        // Gain
        for (int i = 0; i < 64; i++)
00118
00119
00120
          int gain{0};
          00121
00122
00123
00124
00125
00126
00127
        mAsic["ON_Otabg"] = static_cast<int>(bs[111]);
mAsic["ON_Dac"] = static_cast<int>(bs[110]);
mAsic["ON_Otadac"] = static_cast<int>(bs[109]);
00128
00129
00130
00131
        // DAC
00132
        int dac1{0};
        for(int j = 0; j < 10; j++)
if(bs[j + 99] != 0) dac1 += (1 « j);
00133
00134
        mAsic["DAC1"] = dac1;
00135
00136
        int dac0{0};
        for(int j = 0; j < 10; j++)

if(bs[j + 89] != 0) dac0 += (1 « j);
00137
00138
        mAsic["DACO"]
mAsic["EN_Raz_Ext"]
                               = dac0;
00139
                                  = static_cast<int>(bs[23]);
00140
00141
        mAsic["EN_Raz_Int"]
                                  = static cast<int>(bs[22]);
```

```
mAsic["EN_Out_Raz_Int"] = static_cast<int>(bs[21]);
                                  = static_cast<int>(bs[2]);
= static_cast<int>(bs[19]);
        mAsic["EN_Trig_Ext"]
00143
00144
        mAsic["EN_Trig_Int"]
        mAsic["EN_Out_Trig_Int"] = static_cast<int>(bs[18]);
00145
        mAsic["Bypass_Chip"]
00146
                                    = static_cast<int>(bs[17]);
        mAsic["HardrocHeader"]
                                     = static_cast<int>(asicid);
00147
        mAsic["EN_Out_Discri"]
                                     = static_cast<int>(bs[8]);
        mAsic["EN_Transmit_On"] = static_cast<int>(bs[7]);
00149
00150
        mAsic["EN_Dout"]
                                     = static_cast<int>(bs[6]);
        mAsic["EN_RamFull"]
00151
                                    = static_cast<int>(bs[5]);
        m_MapSC[asicid]
                                    = mAsic:
00152
00153 }
00154
00155 void DIFSlowControl::FillAsicHR2(const std::bitset<109 * 8>& bs)
00156 {
00157
        int asicid{0};
        for(int j = 0; j < 8; j++)
   if(bs[j + (108 - 7) * 8 + 2] != 0) asicid += (1 « (7 - j));
std::map<std::string, int> mAsic;
00158
00159
00160
00161
         for (int i = 0; i < 64; i++)
00162
00163
          int gain{0};
00164
          int mask{0};
          masic["Channel_" + std::to_string(i) + "_" + "cTest"] = bs[i];
for(int j = 0; j < 8; j++)
    if(bs[64 + i * 8 + j] != 0) gain += (1 « j);
mAsic["Channel_" + std::to_string(i) + "_" + "Gain"] = gain;</pre>
00165
00166
00167
00168
          for(int j = 0; j < 3; j++)
   if(bs[8 * 77 + 2 + i * 3 + j] != 0) mask += (1 « j);
mAsic["Channel_" + std::to_string(i) + "_" + "Mask"] = mask;</pre>
00169
00170
00171
00172
00173
        mAsic["PwrOnPA"] = static_cast<int>(bs[8 * 72]);
00174
        mAsic["Cmdb3SS"] = static_cast<int>(bs[8 * 72 + 1]);
00175
        mAsic["Cmdb2SS"] = static_cast < int > (bs[8 * 72 + 2]);
        mAsic["Cmdb1SS"] = static_cast<int>(bs[8 * 72 + 3]);
00176
        mAsic["Cmdb0SS"] = static_cast<int>(bs[8 * 72 + 4]);
00177
        mAsic["SwSsc0"] = static_cast<int>(bs[8 * 72 + 5]);
mAsic["SwSsc1"] = static_cast<int>(bs[8 * 72 + 6]);
00178
00180
        mAsic["SwSsc2"] = static cast < int > (bs[8 * 72 + 7]);
00181
00182
        mAsic["PwrOnBuff"] = static_cast<int>(bs[8 * 73]);
        mAsic["PwrOnSS"] = static_cast < int > (bs[8 * 73 + 1]);
00183
        mAsic["PwrOnW"]
                              = static_cast<int>(bs[8 * 73 + 2]);
00184
        mAsic["Cmdb3Fsb2"] = static_cast<int>(bs[8 * 73 + 3]);
00185
        mAsic["Cmdb2Fsb2"] = static_cast<int>(bs[8 * 73 + 4]);
00186
00187
        mAsic["Cmdb1Fsb2"] = static_cast < int > (bs[8 * 73 + 5]);
00188
        mAsic["Cmdb0Fsb2"] = static_cast<int>(bs[8 * 73 + 6]);
00189
        mAsic["Sw50k2"]
                              = static cast<int>(bs[8 * 73 + 7]);
00190
        mAsic["Sw100k2"]
00191
                            = static cast<int>(bs[8 * 74]);
00192
        mAsic["Sw100f2"] = static_cast<int>(bs[8 * 74 + 1]);
00193
        mAsic["Sw50f2"]
                             = static_cast<int>(bs[8 * 74 + 2]);
00194
        mAsic["Cmdb3Fsb1"] = static_cast < int > (bs[8 * 74 + 3]);
        \texttt{mAsic["Cmdb2Fsb1"] = static\_cast<int>(bs[8 * 74 + 4]);}
00195
        mAsic["Cmdb1Fsb1"] = static_cast<int>(bs[8 * 74 + 5]);
00196
        mAsic["Cmdb0Fsb1"] = static_cast<int>(bs[8 * 74 + 6]);
00197
        mAsic["Sw50k1"]
00198
                             = static_cast<int>(bs[8 * 74 + 7]);
00199
        mAsic["Sw100k1"] = static_cast<int>(bs[8 * 75]);
mAsic["Sw100f1"] = static_cast<int>(bs[8 * 75 + 1]);
00200
00201
        mAsic["Sw50f1"]
                            = static_cast<int>(bs[8 * 75 + 2]);
00202
        mAsic["Sel0"]
                              = static_cast<int>(bs[8 * 75 + 3]);
00203
00204
        mAsic["Sel11"]
                              = static_cast<int>(bs[8 * 75 + 4]);
        mAsic["PwrOnFsb"] = static_cast<int>(bs[8 * 75 + 5]);
00205
00206
        mAsic["PwrOnFsb1"] = static_cast<int>(bs[8 * 75 + 6]);
        mAsic["PwrOnFsb2"] = static_cast<int>(bs[8 * 75 + 7]);
00207
00208
00209
        mAsic["Sw50k0"]
                                = static cast<int>(bs[8 * 76]);
        mAsic["Sw100k0"]
00210
                                = static_cast<int>(bs[8 * 76 + 1]);
        mAsic["Sw100f0"]
                                = static_cast<int>(bs[8 * 76 + 2]);
00211
00212
        mAsic["Sw50f0"]
                                = static_cast<int>(bs[8 * 76 + 3]);
00213
        mAsic["EnOtaO"]
                                = static_cast < int > (bs[8 * 76 + 4]);
        mAsic["OtaQ_PwrADC"] = static_cast<int>(bs[8 * 76 + 5]);
00214
        mAsic["Discri_PwrA"] = static_cast<int>(bs[8 * 76 + 6]);
00215
00216
        mAsic["Discri2"]
                                = static cast<int>(bs[8 * 76 + 7]);
00217
00218
        mAsic["Discri1"]
                                 = static_cast<int>(bs[8 * 77]);
00219
        mAsic["RS_or_Discri"] = static_cast<int>(bs[8 * 77 + 1]);
00220
        mAsic["Header"] = asicid;
00221
        for (int i = 0; i < 3; i++)
00222
00223
           int B = 0;
00224
           for(int j = 0; j < 10; j++)
if(bs[8 * 102 + 2 + i * 10 + j] != 0) B += (1 « j);
00225
00226
          mAsic["B" + std::to_string(i)] = B;
00227
00228
```

```
00229
00230
         mAsic["Smalldac"] = static_cast<int>(bs[8 * 106]);
         mAsic["DacSw"] = static_cast<int>(bs[8 * 106 + 1]);
mAsic["OtagBgSw"] = static_cast<int>(bs[8 * 106 + 2]);
00231
00232
         mAsic["Trig2b"] = static_cast<int>(bs[8 * 106 + 3]);
00233
         mAsic["Trig1b"]
00234
                               = static_cast<int>(bs[8 * 106 + 4]);
                            = static_cast<int>(bs[8 * 106 + 5]);
         mAsic["Trig0b"]
00236
         mAsic["EnTrigOut"] = static_cast<int>(bs[8 * 106 + 6]);
00237
         mAsic["DiscrOrOr"] = static_cast<int>(bs[8 * 106 + 7]);
00238
         mAsic["TrigExtVal"]
00239
                                  = static_cast<int>(bs[8 \star 107]);
        mAsic["RazChnIntVal"] = static_cast<int>(bs[8 * 107 + 1]);
00240
         mAsic["RazChnExtVal"] = static_cast<int>(bs[8 * 107 + 2]);
00241
                                 = static_cast<int>(bs[8 * 107 + 3]);
= static_cast<int>(bs[8 * 107 + 4]);
00242
         mAsic["ScOn"]
00243
         mAsic["CLKMux"]
00244
         // EnOCDout1b EnOCDout2b EnOCTransmitOn1b EnOCTransmitOn2b EnOCChipsatb SelStartReadout
00245
      SelEndReadout
00246 mAsic["SelEndReadout"]
                                       = static_cast<int>(bs[8 * 108 + 1]);
        mAsic["SelStartReadout"] = static_cast<int>(bs[8 * 108 + 2]);
mAsic["EnOCChipsatb"] = static_cast<int>(bs[8 * 108 + 3]);
mAsic["EnOCTransmitOn2b"] = static_cast<int>(bs[8 * 108 + 4]);
00247
00248
00249
        mAsic["EnOCTransmitOn1b"] = static_cast<int>(bs[8 * 108 + 5]);
00250
         mAsic["EnOCDout2b"]
                                   = static_cast<int>(bs[8 * 108 + 6]);
= static_cast<int>(bs[8 * 108 + 7]);
00251
00252
        mAsic["EnOCDout1b"]
00253
        m_MapSC[asicid]
                                       = mAsic;
00254 }
00255
00256 std::string to_string(const DIFSlowControl& c)
00257 {
00258
         std::string ret:
00259
         for(std::map<int, std::map<std::string, int*::const_iterator it = c.cbegin(); it != c.cend(); it++)</pre>
00260
           ret += "ASIC " + std::to_string(it->first) + " :\n";
00261
      for(std::map<std::string, int>::const_iterator jt = (it->second).begin(); jt !=
(it->second).end(); jt++) ret += jt->first + " : " + std::to_string(jt->second) + "\n";
00262
00263
00264
         return ret;
00265 }
```

5.45 libs/core/src/Filesystem.cc File Reference

```
#include "Filesystem.h"
```

Functions

- std::string path (const std::string &file)
- std::string extension (const std::string &file)
- std::string filename (const std::string &file)

5.45.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Filesystem.cc.

5.45.2 Function Documentation

5.46 Filesystem.cc 101

```
5.45.2.1 extension() std::string extension (
               const std::string & file )
Definition at line 13 of file Filesystem.cc.
        std::size_t position = file.find_last_of(".");
00015
        return (std::string::npos == position || position == 0) ? "" : file.substr(position + 1);
00016
00017 }
5.45.2.2 filename() std::string filename (
                const std::string & file )
Definition at line 19 of file Filesystem.cc.
00021
        std::size_t position = file.find_last_of(".");
00022 std::size_t pos = file.find_last_of("\/\");
00023 return (std::string::npos == pos) ? file.substr(0, position) : file.substr(pos + 1, position - pos
      - 1);
00024 }
5.45.2.3 path() std::string path (
               const std::string & file )
Definition at line 7 of file Filesystem.cc.
} 80000
        std::size_t pos = file.find_last_of("\\");
return (std::string::npos == pos) ? "" : file.substr(0, pos);
00009
00010
00011 }
5.46 Filesystem.cc
Go to the documentation of this file.
00001
00005 #include "Filesystem.h"
00006
00007 std::string path(const std::string& file)
00009 std::size_t pos = file.find_last_of("\\");
00010 return (std::string::npos == pos) ? "" : file.substr(0, pos);
00011 }
00012
00013 std::string extension(const std::string& file)
00014 {
00015 std::size_t position = file.find_last_of(".");
00016
        return (std::string::npos == position || position == 0) ? "" : file.substr(position + 1);
00017 }
```

return (std::string::npos == pos) ? file.substr(0, position) : file.substr(pos + 1, position - pos

5.47 libs/core/src/Formatters.cc File Reference

std::size_t position = file.find_last_of(".");
std::size_t pos = file.find_last_of("\\/");

00019 std::string filename(const std::string& file)

```
#include "Formatters.h"
#include "Bits.h"
#include "Buffer.h"
#include "Words.h"
#include <fmt/format.h>
```

00018

00020 {

00023

00024 }

00022 std::size_t pos

- 1);

Functions

```
• std::string to_dec (const Buffer &b, const std::size_t &begin, const std::size_t &end)
• std::string to_dec (const bit8_t &b)
• std::string to dec (const bit16 t &b)
• std::string to_dec (const bit32_t &b)

    std::string to_dec (const bit64_t &b)

    std::string to_hex (const Buffer &b, const std::size_t &begin, const std::size_t &end)

• std::string to_hex (const bit8_t &b)

    std::string to hex (const bit16 t &b)

• std::string to_hex (const bit32_t &b)
• std::string to hex (const bit64 t &b)

    std::string to_bin (const Buffer &b, const std::size_t &begin, const std::size_t &end)

• std::string to_bin (const bit8_t &b)

    std::string to_bin (const bit16_t &b)

• std::string to_bin (const bit32_t &b)

    std::string to_bin (const bit64_t &b)

• std::string to_oct (const Buffer &b, const std::size_t &begin, const std::size_t &end)
std::string to_oct (const bit8_t &b)
• std::string to_oct (const bit16_t &b)

    std::string to_oct (const bit32_t &b)

    std::string to_oct (const bit64_t &b)
```

5.47.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Formatters.cc.

5.47.2 Function Documentation

```
5.47.2.3 to_bin() [3/5] std::string to_bin (
                                           const bit64_t & b )
 Definition at line 75 of file Formatters.cc.
 00075 { return fmt::format("{:#064b}", b); }
5.47.2.4 to bin() [4/5] std::string to_bin (
                                           const bit8_t & b )
 Definition at line 69 of file Formatters.cc.
 00069 { return fmt::format("{:#08b}", b); }
5.47.2.5 to_bin() [5/5] std::string to_bin (
                                           const Buffer & b,
                                           const std::size_t & begin,
                                           const std::size_t & end )
Definition at line 56 of file Formatters.cc.
                      std::size_t iend = end;
if(iend == -1) iend = b.size();
std::string ret;
 00058
 00059
 00060
clipmed | c
                      for(std::size_t k = begin; k < iend; k++)</pre>
00066 return ret;
00067 }
5.47.2.6 to_dec() [1/5] std::string to_dec (
                                           const bit16_t & b )
 Definition at line 29 of file Formatters.cc.
 00029 { return fmt::format("{:#d}", b); }
5.47.2.7 to_dec() [2/5] std::string to_dec (
                                           const bit32_t & b )
Definition at line 31 of file Formatters.cc.
 00031 { return fmt::format("{:#d}", b); }
5.47.2.8 to_dec() [3/5] std::string to_dec (
                                           const bit64_t & b )
Definition at line 33 of file Formatters.cc.
 00033 { return fmt::format("{:#d}", b); }
```

```
5.47.2.9 to_dec() [4/5] std::string to_dec (
                const bit8_t & b )
Definition at line 27 of file Formatters.cc.
00027 { return fmt::format("{:#d}", b); }
5.47.2.10 to_dec() [5/5] std::string to_dec (
                const Buffer & b,
                const std::size_t & begin,
                const std::size_t & end )
Definition at line 14 of file Formatters.cc.
        std::size_t iend = end;
if(iend == -1) iend = b.size();
std::string ret;
for(std::size_t k = begin; k < iend; k++)</pre>
00016
00017
00018
00019
        ret += to_dec(b[k]);
ret += " - ";
00021
00022
00023 }
00024 return ret;
00025 }
5.47.2.11 to_hex() [1/5] std::string to_hex (
                const bit16_t & b )
Definition at line 50 of file Formatters.cc.
00050 { return fmt::format("{:#04x}", b); }
5.47.2.12 to_hex() [2/5] std::string to_hex (
                const bit32_t & b )
Definition at line 52 of file Formatters.cc.
00052 { return fmt::format("{:#08x}", b); }
5.47.2.13 to_hex() [3/5] std::string to_hex (
                const bit64_t & b )
Definition at line 54 of file Formatters.cc.
00054 { return fmt::format("{:#016x}", b); }
5.47.2.14 to_hex() [4/5] std::string to_hex (
                const bit8_t & b )
Definition at line 48 of file Formatters.cc.
00048 { return fmt::format("{:#02x}", b); }
```

```
5.47.2.15 to_hex() [5/5] std::string to_hex (
                const Buffer & b,
                const std::size_t & begin,
                const std::size_t & end )
Definition at line 35 of file Formatters.cc.
 00036 {
         std::size_t iend = end;
if(iend == -1) iend = b.size();
 00037
 00038
         std::string ret;
00042 ret += to_hex(b[k]);

00043 ret += " - ";

00044 }

00045 return ret;
 00040
         for(std::size_t k = begin; k < iend; k++)</pre>
5.47.2.16 to_oct() [1/5] std::string to_oct (
                const bit16_t & b )
Definition at line 92 of file Formatters.cc.
 00092 { return fmt::format("{:#080}", b); }
5.47.2.17 to_oct() [2/5] std::string to_oct (
                const bit32_t & b )
Definition at line 94 of file Formatters.cc.
00094 { return fmt::format("{:#0160}", b); }
5.47.2.18 to_oct() [3/5] std::string to_oct (
                const bit64_t & b )
Definition at line 96 of file Formatters.cc.
00096 { return fmt::format("{:#0320}", b); }
5.47.2.19 to_oct() [4/5] std::string to_oct (
                const bit8_t & b )
Definition at line 90 of file Formatters.cc.
```

00090 { return fmt::format("{:#040}", b); }

```
5.47.2.20 to_oct() [5/5] std::string to_oct (
               const Buffer & b,
              const std::size_t & begin,
               const std::size_t & end )
Definition at line 77 of file Formatters.cc.
00078 {
        std::size_t iend = end;
08000
        if (iend == -1) iend = b.size();
00081
        std::string ret;
00082
        for(std::size_t k = begin; k < iend; k++)</pre>
00083
00084
         ret += to_oct(b[k]);
00085
         ret += " - ";
00086
00087
        return ret;
00088 }
```

5.48 Formatters.cc

```
00001
00006 #include "Formatters.h"
00007
00008 #include "Bits.h"
00000 #include "Buffer.h"
00010 #include "Words.h"
00011
00012 #include <fmt/format.h>
00013
00014 std::string to_dec(const Buffer& b, const std::size_t& begin, const std::size_t& end)
00015 {
00016
        std::size_t iend = end;
        if(iend == -1) iend = b.size();
00017
00018
        std::string ret;
00019
        for(std::size_t k = begin; k < iend; k++)</pre>
       ret += to_dec(b[k]);
ret += " - ";
}
00020
00021
00022
00023
00024
        return ret:
00025 }
00026
00027 std::string to_dec(const bit8_t& b) { return fmt::format("{:#d}", b); }
00028
00029 std::string to_dec(const bit16_t& b) { return fmt::format("{:#d}", b); }
00030
00031 std::string to_dec(const bit32_t& b) { return fmt::format("{:#d}", b); }
00032
00033 std::string to_dec(const bit64_t& b) { return fmt::format("{:#d}", b); }
00034
00035 std::string to_hex(const Buffer& b, const std::size_t& begin, const std::size_t& end)
00036 {
00037
        std::size_t iend = end;
00038
        if (iend == -1) iend = b.size();
00039
        std::string ret;
00040
        for(std::size_t k = begin; k < iend; k++)</pre>
00041
00042
          ret += to hex(b[k]);
        ret += " - ";
00043
00044
00045
        return ret;
00046 }
00047
00048 std::string to_hex(const bit8_t& b) { return fmt::format("{:#02x}", b); }
00049
00050 std::string to_hex(const bit16_t& b) { return fmt::format("{:#04x}", b); }
00051
00052 std::string to_hex(const bit32_t& b) { return fmt::format("{:#08x}", b); }
00053
00054 std::string to_hex(const bit64_t& b) { return fmt::format("{:\#016x}", b); }
00055
00056 std::string to_bin(const Buffer& b, const std::size_t& begin, const std::size_t& end)
00057 {
        std::size_t iend = end;
00058
00059
        if(iend == -1) iend = b.size();
        std::string ret;
for(std::size_t k = begin; k < iend; k++)</pre>
00060
00061
00062
       {
00063
          ret += to_bin(b[k]);
```

```
ret += " - ";
00064
00065
00066
00067 }
00068
00069 std::string to bin(const bit8 t& b) { return fmt::format("{:#08b}", b); }
00071 std::string to_bin(const bit16_t& b) { return fmt::format("{:#016b}", b); }
00072
00073 std::string to_bin(const bit32_t& b) { return fmt::format("{:#032b}", b); }
00074
00075 std::string to_bin(const bit64_t& b) { return fmt::format("{:#064b}", b); }
00076
00077 std::string to_oct(const Buffer& b, const std::size_t& begin, const std::size_t& end)
00078 {
        std::size_t iend = end;
00079
08000
        if(iend == -1) iend = b.size();
00081
        std::string ret;
00082
        for(std::size_t k = begin; k < iend; k++)</pre>
        ret += to_oct(b[k]);
ret += " - ";
00084
00085
00086
00087
        return ret;
00088 }
00090 std::string to_oct(const bit8_t& b) { return fmt::format("{:#040}", b); }
00091
00092 std::string to_oct(const bit16_t& b) { return fmt::format("{:#080}", b); }
00093
00094 std::string to oct(const bit32 t& b) { return fmt::format("{:#0160}", b); }
00095
00096 std::string to_oct(const bit64_t& b) { return fmt::format("{:#0320}", b); }
```

5.49 libs/core/src/Payload100.cc File Reference

```
#include "Payload100.h"
#include "Utilities.h"
```

Enumerations

```
enum class Size : std::uint8_t {
 DATA_FORMAT_VERSION = 1 , DAQ_SOFTWARE_VERSION = 2 , SDCC_FIRMWARE_VERSION = 2 ,
 DIF FIRMWARE VERSION = 2,
 TIMESTAMP_SECONDES = 4, TIMESTAMP_MILLISECONDS = 4, GLOBAL_HEADER = 1, DIF_IF = 1,
 DIF TRIGGER COUNTER = 4, INFORMATION COUNTER = 4, GLOBAL TRIGGER COUNTER = 4,
 ABSOLUTE BCID = 6,
 BCID DIF = 3, NUMBER LINE = 1, TEMP ASU1 = 4, TEMP ASU2 = 4,
 TEMP_DIF = 1, HEADER_LINE = 1, NUMBER_CHIPS = 1, LINE_SIZE = 64 * 2,
 TRAILER LINE = 1, FRAME HEADER = 1, MICROROC HEADER = 1, BCID = 3,
 DATA = 16, FRAME TRAILER = 1, GLOBAL TRAILER = 1, CRC MSB = 1,
 CRC_LSB = 1, SC_HEADER = 1, DIF_ID = 1, ASIC_HEADER = 1,
 SC_ASIC_SIZE = 1, SC_TRAILER = 1, DATA_FORMAT_VERSION = 1, DAQ_SOFTWARE_VERSION = 2
 SDCC_FIRMWARE_VERSION = 2, DIF_FIRMWARE_VERSION = 2, TIMESTAMP_SECONDES = 4,
 TIMESTAMP MILLISECONDS = 4.
 GLOBAL HEADER = 1, PMR ID SHIFT = 1, PMR NBASIC SHIFT = 1, PMR FORMAT SHIFT = 1,
 PMR_GTC_SHIFT = 3, PMR_ABCID_SHIFT = 6, PMR_BCID_SHIFT = 3, PMR_LTRG_SHIFT = 4,
 HEADER LINE = 1, NUMBER CHIPS = 1, LINE SIZE = 64 * 2, TRAILER LINE = 1,
 FRAME_HEADER = 1, MICROROC_HEADER = 1, BCID = 3, DATA = 16,
 FRAME_TRAILER = 1, GLOBAL_TRAILER = 1, CRC_MSB = 1, CRC_LSB = 1,
 SC_HEADER = 1, DIF_ID = 1, ASIC_HEADER = 1, SC_ASIC_SIZE = 1,
 SC_TRAILER = 1 }
```

```
    enum class Value: std::uint8_t {
        GLOBAL_HEADER = 0xb0, GLOBAL_HEADER_TEMP = 0xbb, HEADER_LINE = 0xc4, TRAILER_LINE = 0xd4,
        FRAME_HEADER = 0xb4, FRAME_TRAILER = 0xa3, FRAME_TRAILER_ERROR = 0xc3,
        GLOBAL_TRAILER = 0xa0,
        SC_HEADER = 0xb1, SC_TRAILER = 0xa1, GLOBAL_HEADER = 0xb0, GLOBAL_HEADER_TEMP = 0xbb,
        HEADER_LINE = 0xc4, TRAILER_LINE = 0xd4, FRAME_HEADER = 0xb4, FRAME_TRAILER = 0xa3,
        FRAME_TRAILER_ERROR = 0xc3, GLOBAL_TRAILER = 0xa0, SC_HEADER = 0xb1, SC_TRAILER = 0xa1}
```

5.49.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Payload100.cc.

5.49.2 Enumeration Type Documentation

5.49.2.1 Size enum class Size : std::uint8_t [strong]

Enumerator

5.171	
DATA_FORMAT_VERSION	
DAQ_SOFTWARE_VERSION	
SDCC_FIRMWARE_VERSION	
DIF_FIRMWARE_VERSION	
TIMESTAMP_SECONDES	
TIMESTAMP_MILLISECONDS	
GLOBAL_HEADER	
DIF_IF	
DIF_TRIGGER_COUNTER	
INFORMATION_COUNTER	
GLOBAL_TRIGGER_COUNTER	
ABSOLUTE_BCID	
BCID_DIF	
NUMBER_LINE	
TEMP_ASU1	
TEMP_ASU2	
TEMP_DIF	
HEADER_LINE	
NUMBER_CHIPS	
LINE_SIZE	
TRAILER_LINE	
FRAME_HEADER	
MICROROC_HEADER	

Enumerator

	_
BCID	
DATA	
FRAME_TRAILER	
GLOBAL_TRAILER	
CRC_MSB	
CRC_LSB	
SC_HEADER	
DIF_ID	
ASIC_HEADER	
SC_ASIC_SIZE	
SC_TRAILER	
DATA FORMAT VERSION	
DAQ SOFTWARE VERSION	
SDCC FIRMWARE VERSION	
DIF FIRMWARE VERSION	
TIMESTAMP SECONDES	
TIMESTAMP MILLISECONDS	
GLOBAL HEADER	
PMR ID SHIFT	
PMR_NBASIC_SHIFT	
PMR_FORMAT_SHIFT	
PMR_GTC_SHIFT	
PMR_ABCID_SHIFT	
PMR_BCID_SHIFT	
PMR_LTRG_SHIFT	
HEADER_LINE	
NUMBER_CHIPS	
LINE_SIZE	
TRAILER_LINE	
FRAME_HEADER	
MICROROC_HEADER	
BCID	
DATA	
FRAME_TRAILER	
GLOBAL_TRAILER	
CRC MSB	
CRC_LSB	
SC HEADER	
DIF ID	
ASIC HEADER	
SC ASIC SIZE	
SC TRAILER	\vdash
30_I TAILEN	

```
Definition at line 9 of file Payload100.cc. 00010~\{\\00011~//~Header
                      // Header
DATA_FORMAT_VERSION = 1,
DAQ_SOFTWARE_VERSION = 2,
SDCC_FIRMWARE_VERSION = 2,
DIF_FIRMWARE_VERSION = 2,
TIMESTAMP_SECONDES = 4,
TIMESTAMP_MILLISECONDS = 4,
 00012
 00013
 00014
00015
00016
00017
```

```
00018
           // Payload
           GLOBAL_HEADER
00019
          DIF_IF = 1,
DIF_TRIGGER_COUNTER = 4,
INFORMATION_COUNTER = 4,
GLOBAL_TRIGGER_COUNTER = 4,
00020
00021
00022
00023
00024
           ABSOLUTE_BCID
          BCID_DIF
NUMBER_LINE
00025
                                       = 1,
= 4,
00026
          TEMP_ASU1
TEMP_ASU2
TEMP_DIF
00027
00028
                                           = 4,
                                           = 1,
00029
00030
           HEADER_LINE
                                           = 1,
           HEADER_LINE
NUMBER_CHIPS
00031
          TRAILER_LINE
FRAME_HEADER
MICROPO
                                           = 64 * 2,
= 1,
= 1,
00032
00033
00034
00035
           MICROROC_HEADER
                                           = 1,
00036
                                           = 3,
00037
           DATA
                                           = 16,
00038
           FRAME_TRAILER
          FRAME_IRALLER
GLOBAL_TRAILER
CRC_MSB
CRC_LSB
// Slowcontrol
SC_HEADER
DIF ID
00039
                                           = 1,
                                           = 1,
                                           = 1,
00041
00042
00043
00044
          DIF_ID
                                           = 1,
                                    = 1,
= 1,
= 1,
00045 ASIC_HEADER
00046 SC_ASIC_SIZE
00047 SC_TRAILER
00048 };
```

5.49.2.2 Value enum class Value : std::uint8_t [strong]

Enumerator

GLOBAL_HEADER	
GLOBAL_HEADER_TEMP	
HEADER_LINE	
TRAILER_LINE	
FRAME_HEADER	
FRAME_TRAILER	
FRAME_TRAILER_ERROR	
GLOBAL_TRAILER	
SC_HEADER	
SC_TRAILER	
GLOBAL_HEADER	
GLOBAL_HEADER_TEMP	
HEADER_LINE	
TRAILER_LINE	
FRAME_HEADER	
FRAME_TRAILER	
FRAME_TRAILER_ERROR	
GLOBAL_TRAILER	
SC_HEADER	
SC_TRAILER	

Definition at line 54 of file Payload100.cc.

```
00055 {
00056 GLOBAL_HEADER = 0xb0,
00057 GLOBAL_HEADER_TEMP = 0xbb,
00058 HEADER_LINE = 0xc4,
00059 TRAILER_LINE = 0xd4,
```

5.50 Payload100.cc 111

```
00060 FRAME_HEADER = 0xb4,

00061 FRAME_TRAILER = 0xa3,

00062 FRAME_TRAILER_ERROR = 0xc3,

00063 GLOBAL_TRAILER = 0xa0,

00064 SC_HEADER = 0xb1,

00065 SC_TRAILER = 0xa1
```

5.50 Payload100.cc

```
00001
00005 #include "Payload100.h"
00006
00007 #include "Utilities.h"
80000
00009 enum class Size : std::uint8_t
00010 {
        // Header
        DATA_FORMAT_VERSION = 1,
DAQ_SOFTWARE_VERSION = 2,
00012
       DATA_FORMAT_VERSION
00013
       SDCC_FIRMWARE_VERSION = 2,
00014
       DIF_FIRMWARE_VERSION = 2,
TIMESTAMP_SECONDES = 4,
TIMESTAMP_MILLISECONDS = 4,
00015
00016
00017
00018
        // Payload
00019
        GLOBAL_HEADER
00020
        DIF_IF
                                = 1,
       DIF_TRIGGER_COUNTER = 4,
INFORMATION_COUNTER = 4,
00021
00022
00023
        GLOBAL_TRIGGER_COUNTER = 4,
        ABSOLUTE_BCID
00024
00025
        BCID_DIF
       NUMBER_LINE
00026
                               = 4,
00027
        TEMP_ASU1
       TEMP_ASU2
TEMP_DIF
                                = 4.
00028
00029
                                = 1,
        HEADER_LINE
00031
        NUMBER_CHIPS
00032
        LINE_SIZE
                                = 64 * 2,
        TRAILER_LINE
                                = 1,
00033
                                = 1,
        FRAME HEADER
00034
        MICROROC_HEADER
00035
                                = 1,
00036
00037
00038
        FRAME_TRAILER
00039
        GLOBAL_TRAILER
                                = 1,
       CRC_MSB
CRC_LSB
00040
00041
                                = 1,
00042
       // Slowcontrol
00043
        SC_HEADER
00044
       DIF_ID
00045
       ASIC_HEADER
                                = 1,
                                = 1,
00046
        SC_ASIC_SIZE
       SC TRAILER
                                = 1
00047
00048 };
00049
00050 static inline std::uint32_t operator+(const Size& a, const Size& b) { return
      static_cast<std::uint32_t>(a) + static_cast<std::uint32_t>(b); }
00051 static inline std::uint32_t operator+(const std::uint32_t% a, const Size& b) { return a +
      static_cast<std::uint32_t>(b); }
00052 static inline std::uint32_t operator+(const Size& a) { return static_cast<std::uint32_t>(a); }
00053
00054 enum class Value : std::uint8_t
00055 {
00056
       GLOBAL_HEADER
       GLOBAL_HEADER_TEMP = 0xbb,
HEADER_LINE = 0xc4,
00057
                       = 0xc4,= 0xd4,
00058
00059
        TRAILER_LINE
00060
       FRAME_HEADER
00061
        FRAME_TRAILER
       FRAME_TRAILER_ERROR = 0xc3,
00062
        GLOBAL_TRAILER = 0xa0,
00063
00064
        SC_HEADER
                            = 0xb1.
                            = 0xa1
00065
        SC_TRAILER
00066 };
00067
00068 inline void Payload100::parsePayload()
00069 {
00070 m_Frames.clear();
00071
       m Lines.clear();
       std::uint32_t fshift{static_cast<std::uint32_t>(Size::GLOBAL_HEADER)}; // Pass Global Header
```

```
00073
        if (m_Version >= 13)
00074
         // Pass DIF_ID, DIF Trigger counter, Information counter, Global Trigger counter, Absolute BCID,
00075
     BCID DIF, NB line
         fshift += Size::DIF_IF + Size::DIF_TRIGGER_COUNTER + Size::INFORMATION_COUNTER
00076
      Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID + Size::BCID_DIF + Size::NUMBER_LINE;
00077
         // If has temperature infos then pass Temp ASU 1, Temp ASU 2, Temp DIF
00078
          if(hasTemperature()) fshift += Size::TEMP_ASU1 + Size::TEMP_ASU2 + Size::TEMP_DIF;
00079
          // If has AnalogReadout pass them
08000
          if(hasAnalogReadout()) fshift = parseAnalogLine(fshift); // to be implemented
       }
00081
00082
        else
00083
         throw Exception(fmt::format("Version {} is not implemented", m_Version));
00084
00085
        while (static_cast<std::uint8_t>(begin()[fshift]) !=
      static_cast<std::uint8_t>(Value::GLOBAL_TRAILER))
00086
00087
          // If I found a FRAME HEADER there is 2 cases :
00088
          // 1) Nothing inside so FRAME_TRAILER comes just after
          // 2) Come MICROROC Header, BCID, DATA max 128 times
00089
00090
          if(static_cast<std::uint8_t>(begin()[fshift]) == static_cast<std::uint8_t>(Value::FRAME_HEADER))
00091
00092
            fshift += +Size::FRAME HEADER;
            if(static_cast<std::uint8_t>(begin()[fshift]) == static_cast<std::uint8_t>(Value::FRAME_TRAILER)
00093
      || static_cast<std::uint8_t>(begin()[fshift]) ==
      static_cast<std::uint8_t>(Value::FRAME_TRAILER_ERROR)) { fshift += +Size::FRAME_TRAILER; }
00094
00095
00096
             while(static_cast<std::uint8_t>(begin()[fshift]) !=
      static_cast<std::uint8_t>(Value::FRAME_TRAILER) && static_cast<std::uint8_t>(begin()[fshift]) !=
      static cast<std::uint8 t>(Value::FRAME TRAILER ERROR))
00097
              {
00098
                m_Frames.push_back(&begin()[fshift]);
00099
                fshift += Size::MICROROC_HEADER + Size::BCID + Size::DATA;
00100
              fshift += +Size::FRAME TRAILER;
00101
00102
            }
         }
00103
00104
00105
        // Pass Global trailer
00106
       fshift += +Size::GLOBAL_TRAILER;
        // Pass CRC MSB, CRC LSB \,
00107
        fshift += Size::CRC MSB + Size::CRC LSB:
00108
00109
       theGetFramePtrReturn_ = fshift;
00110 }
00111
00112 inline bool Payload100::hasTemperature()const { return (static_cast<std::uint8_t>(begin()[0]) ==
      static_cast<std::uint8_t>(Value::GLOBAL_HEADER_TEMP)); }
00113
00114 inline bool Payload100::hasAnalogReadout()const { return getNumberLines() != 0; }
00115
00116 inline std::uint32_t Payload100::getNumberLines()const
00117 {
00118
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
     Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID + Size::BCID_DIF};
00119
        return ((begin()[shift] » 4) & 0x5);
00120 }
00121
00122 inline std::uint32_t Payload100::parseAnalogLine(const std::uint32_t& idx)
00123 {
00124
       std::uint32 t fshift{idx}:
00125
        // Pass Header line
00126
        if(static_cast<std::uint8_t>(begin()[fshift]) != static_cast<std::uint8_t>(Value::HEADER_LINE))
     return fshift;
00127
00128
         fshift += +Size::HEADER_LINE;
        while(static_cast<std::uint8_t>(begin()[fshift]) != static_cast<std::uint8_t>(Value::TRAILER_LINE))
00129
00130
00131
         m Lines.push back(&begin()[fshift]);
          // Get Number of CHIPS
00132
00133
          std::uint32_t nchip{begin()[fshift]};
00134
          // Pass Number of CHIPS, NB Asicline \star 64 \star 16 \mathrm{bits}
00135
          fshift += +Size::NUMBER_CHIPS + static_cast<std::uint32_t>(Size::LINE_SIZE) * nchip;
00136
        // Pass Trailer line
00137
        fshift += +Size::TRAILER_LINE;
00138
00139
        return fshift;
00140 }
00141
00142 inline std::uint32 t Payload100::getNumberOfFrames()const { return m Frames.size(); }
00143
00144 inline std::uint32_t Payload100::getThresholdStatus(const std::uint32_t& i, const std::uint32_t&
      ipad)const { return (((std::uint32_t)getFrameLevel(i, ipad, 1))) | ((std::uint32_t)getFrameLevel(i,
      ipad, 0) « 1); }
00145
00146 inline bool Payload100::getFrameLevel(const std::uint32_t& i, const std::uint32_t& ipad, const
      std::uint32 t& ilevel)const
```

5.50 Payload100.cc 113

```
00147 {
       std::uint32_t shift{Size::MICROROC_HEADER + Size::BCID};
00148
        return ((m_Frames[i][shift + ((3 - ipad / 16) * 4 + (ipad % 16) / 4)] » (7 - (((ipad % 16) % 4) * 2
00149
     + ilevel))) & 0x1);
00150 }
00151
00152 inline std::uint32_t Payload100::getDIFid()const
00153 {
00154 std::uint32_t shift{+Size::GLOBAL_HEADER};
00155
        return begin()[shift] & 0xFF;
00156 }
00157
00158 inline std::uint32_t Payload100::getDTC()const
00159 {
00160
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF};
00161
        return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift
      + 31;
00162 }
00163
00164 inline std::uint32_t Payload100::getGTC()const
00165 {
00166
       std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
     Size::INFORMATION_COUNTER};
       return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift
00167
      + 3];
00168 }
00169
00170 inline std::uint32_t Payload100::getBCID()const
00171 {
00172
       std::uint32 t shift{Size::GLOBAL HEADER + Size::DIF IF + Size::DIF TRIGGER COUNTER +
     Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID};
       return (begin()[shift] « 16) + (begin()[shift + 1] « 8) + begin()[shift + 2];
00174 }
00175
00176 inline std::uint64_t Payload100::getAbsoluteBCID()const
00177 {
        std::uint32 t shift{Size::GLOBAL HEADER + Size::DIF IF + Size::DIF TRIGGER COUNTER +
00178
     Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER};
        std::uint64_t LBC = ((begin()[shift] « 16) | (begin()[shift + 1] « 8) | (begin()[shift + 2])) *
     16777216ULL + ((begin()[shift + 3] « 16) | (begin()[shift + 4] « 8) | (begin()[shift + 5]));
00180
        return LBC;
00181 }
00182
00183 inline std::uint32_t Payload100::getASICid(const std::uint32_t& i)const { return m_Frames[i][0] &
00184
00185 inline std::uint32_t Payload100::getFrameBCID(const std::uint32_t& i)const
00186 {
        std::uint32 t shift{+Size::MICROROC HEADER};
00187
00188
        return GrayToBin((m_Frames[i][shift] « 16) + (m_Frames[i][shift + 1] « 8) + m_Frames[i][shift + 2]);
00189 }
00190
00191 inline std::uint32_t Payload100::getFrameTimeToTrigger(const std::uint32_t& i)const { return getBCID()
      - getFrameBCID(i); }
00192
00193 Payload100::~Payload100() {}
00195 inline bool Payload100::hasSlowControl() const { return theGetFramePtrReturn != size(); }
00196
00197 inline std::uint32_t Payload100::getTASU1() const
00198 {
00199 std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
      Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID + Size::BCID_DIF +
      Size::NUMBER LINE };
00200 return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift +
      3];
00201 }
00202
00203 inline std::uint32_t Payload100::getTASU2() const
00205 std::uint32_t shift{Size::GLOBAL_HEADER + Size::DIF_IF + Size::DIF_TRIGGER_COUNTER +
      Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID + Size::BCID_DIF +
      Size::NUMBER_LINE + Size::TEMP_ASU1};
00206 return (begin()[shift]   24) + (begin()[shift + 1]   16) + (begin()[shift + 2]   8) + begin()[shift +
      3];
00207 }
00208
00209 inline std::uint32_t Payload100::getTDIF() const
00210
00211 std::uint32 t shift{Size::GLOBAL HEADER + Size::DIF TF + Size::DIF TRIGGER COUNTER +
      Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID + Size::BCID_DIF + Size::NUMBER_LINE + Size::TEMP_ASU1 + Size::TEMP_ASU2};
00212 return begin()[shift];
00213 }
00214
00215 inline float Payload100::getTemperatureDIF() const
00216 {
```

```
00217 if(!hasTemperature()) throw Exception("Don't have TemperatureDIF information");
00218 return 0.508 * getTDIF() - 9.659;
00219
00220
00221 inline float Payload100::getTemperatureASU1() const
00222
00223 if(!hasTemperature()) throw Exception("Don't have TemperatureASU1 information");
00224 return (getTASU1() » 3) * 0.0625;
00225 }
00226
00227 inline float Payload100::getTemperatureASU2() const
00228
00229 if(!hasTemperature()) throw Exception("Don't have TemperatureASU2 information");
00230 return (getTASU2() » 3) * 0.0625;
00231 }
00232
00233 inline Buffer Pavload100::getSlowControl() const
00234
00235 if(hasSlowControl()) return Buffer(&begin()[getEndOfDIFData()], size() - getEndOfDIFData());
00236 else
00237 return Buffer();
00238 }
00239
00240 inline std::vector<br/>bit8_t*> Payload100::getFramesVector() const { return m_Frames; }
00241
00242 inline std::vector<br/>bit8_t*> Payload100::getLinesVector() const { return m_Lines; }
00243
00244 inline bool Payload100::hasLine(const std::uint32_t& line) const
00245
00246 std::uint32 t shift{Size::GLOBAL HEADER + Size::DIF IF + Size::DIF TRIGGER COUNTER +
     Size::INFORMATION_COUNTER + Size::GLOBAL_TRIGGER_COUNTER + Size::ABSOLUTE_BCID + Size::BCID_DIF};
00247 return ((begin()[shift] » line) & 0x1);
00248 }
00249
00250 inline bit8_t* Payload100::getFramePtr(const std::uint32_t& i) const { return m_Frames[i]; }
00251
00252 inline std::uint32 t Payload100::getDIF CRC() const
00254 std::uint32_t shift{getEndOfDIFData() - (Size::CRC_MSB + Size::CRC_LSB)};
00255 return (begin()[shift] « 8) + begin()[shift + 1];
00256
00257
00258 */
```

5.51 libs/core/src/Payload150.cc File Reference

```
#include "Payload150.h"
#include "Utilities.h"
```

Enumerations

```
enum class Size : std::uint8 t {
 DATA_FORMAT_VERSION = 1 , DAQ_SOFTWARE_VERSION = 2 , SDCC_FIRMWARE_VERSION = 2 ,
 DIF FIRMWARE VERSION = 2,
 TIMESTAMP_SECONDES = 4, TIMESTAMP_MILLISECONDS = 4, GLOBAL_HEADER = 1, DIF_IF = 1,
 DIF_TRIGGER_COUNTER = 4, INFORMATION_COUNTER = 4, GLOBAL_TRIGGER_COUNTER = 4,
 ABSOLUTE\_BCID = 6,
 BCID_DIF = 3, NUMBER_LINE = 1, TEMP_ASU1 = 4, TEMP_ASU2 = 4,
 TEMP_DIF = 1, HEADER_LINE = 1, NUMBER_CHIPS = 1, LINE_SIZE = 64 * 2,
 TRAILER_LINE = 1, FRAME_HEADER = 1, MICROROC_HEADER = 1, BCID = 3,
 DATA = 16 , FRAME_TRAILER = 1 , GLOBAL_TRAILER = 1 , CRC_MSB = 1 ,
 CRC_LSB = 1, SC_HEADER = 1, DIF_ID = 1, ASIC_HEADER = 1,
 SC ASIC SIZE = 1, SC TRAILER = 1, DATA FORMAT VERSION = 1, DAQ SOFTWARE VERSION = 2
 SDCC_FIRMWARE_VERSION = 2 , DIF_FIRMWARE_VERSION = 2 , TIMESTAMP_SECONDES = 4 ,
 TIMESTAMP MILLISECONDS = 4,
 GLOBAL HEADER = 1, PMR ID SHIFT = 1, PMR NBASIC SHIFT = 1, PMR FORMAT SHIFT = 1,
 PMR_GTC_SHIFT = 3, PMR_ABCID_SHIFT = 6, PMR_BCID_SHIFT = 3, PMR_LTRG_SHIFT = 4,
```

```
HEADER_LINE = 1, NUMBER_CHIPS = 1, LINE_SIZE = 64 * 2, TRAILER_LINE = 1,
FRAME_HEADER = 1, MICROROC_HEADER = 1, BCID = 3, DATA = 16,
FRAME_TRAILER = 1, GLOBAL_TRAILER = 1, CRC_MSB = 1, CRC_LSB = 1,
SC_HEADER = 1, DIF_ID = 1, ASIC_HEADER = 1, SC_ASIC_SIZE = 1,
SC_TRAILER = 1}
• enum class Value : std::uint8_t {
GLOBAL_HEADER = 0xb0 , GLOBAL_HEADER_TEMP = 0xbb , HEADER_LINE = 0xc4 , TRAILER_LINE = 0xd4 ,
FRAME_HEADER = 0xb4 , FRAME_TRAILER = 0xa3 , FRAME_TRAILER_ERROR = 0xc3 ,
GLOBAL_TRAILER = 0xa0 ,
SC_HEADER = 0xb1 , SC_TRAILER = 0xa1 , GLOBAL_HEADER = 0xb0 , GLOBAL_HEADER_TEMP = 0xbb ,
HEADER_LINE = 0xc4 , TRAILER_LINE = 0xd4 , FRAME_HEADER = 0xb4 , FRAME_TRAILER = 0xa3 ,
FRAME_TRAILER_ERROR = 0xc3 , GLOBAL_TRAILER = 0xa0 , SC_HEADER = 0xb1 , SC_TRAILER = 0xa1 }
```

5.51.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Payload150.cc.

5.51.2 Enumeration Type Documentation

5.51.2.1 Size enum class Size : std::uint8_t [strong]

Enumerator

DATA_FORMAT_VERSION	
DAQ_SOFTWARE_VERSION	
SDCC_FIRMWARE_VERSION	
DIF_FIRMWARE_VERSION	
TIMESTAMP_SECONDES	
TIMESTAMP_MILLISECONDS	
GLOBAL_HEADER	
DIF_IF	
DIF_TRIGGER_COUNTER	
INFORMATION_COUNTER	
GLOBAL_TRIGGER_COUNTER	
ABSOLUTE_BCID	
BCID_DIF	
NUMBER_LINE	
TEMP_ASU1	
TEMP_ASU2	
TEMP_DIF	
HEADER_LINE	
NUMBER_CHIPS	

Enumerator

Enumerator
LINE_SIZE
TRAILER_LINE
FRAME_HEADER
MICROROC HEADER
BCID
DATA
FRAME TRAILER
GLOBAL TRAILER
CRC MSB
CRC_LSB
SC HEADER
_
DIF_ID
ASIC_HEADER
SC_ASIC_SIZE
SC_TRAILER
DATA_FORMAT_VERSION
DAQ_SOFTWARE_VERSION
SDCC_FIRMWARE_VERSION
DIF_FIRMWARE_VERSION
TIMESTAMP_SECONDES
TIMESTAMP MILLISECONDS
GLOBAL HEADER
PMR ID SHIFT
PMR NBASIC SHIFT
PMR_FORMAT_SHIFT
PMR_GTC_SHIFT
PMR ABCID SHIFT
PMR BCID SHIFT
PMR_LTRG_SHIFT
HEADER_LINE
NUMBER_CHIPS
LINE_SIZE
TRAILER_LINE
FRAME_HEADER
MICROROC_HEADER
BCID
DATA
FRAME_TRAILER
GLOBAL_TRAILER
CRC_MSB
CRC_LSB
SC HEADER
DIF ID
ASIC HEADER
SC_ASIC_SIZE
SC TRAILER
30_I DAILER

Definition at line 9 of file Payload150.cc. $_{\tt 00010}$ $\ \{$

```
00011
           // Header
          // Header

DATA_FORMAT_VERSION = 1,
DAQ_SOFTWARE_VERSION = 2,
SDCC_FIRMWARE_VERSION = 2,
DIF_FIRMWARE_VERSION = 2,
TIMESTAMP_SECONDES = 4,
TIMESTAMP_MILLISECONDS = 4,
00012
00013
00014
00015
00016
00018
          // Payload
          GLOBAL_HEADER
00019
          PMR_ID_SHIFT
PMR_NBASIC_SHIFT
PMR_FORMAT_SHIFT
00020
00021
00022
          PMR_GTC_SHIFT
PMR_ABCID_SHIFT
00023
00024
00025
           PMR_BCID_SHIFT
00026
          PMR_LTRG_SHIFT
00027
          HEADER_LINE
NUMBER_CHIPS
00028
                                           = 1,
00029
00030
           LINE_SIZE
          TRAILER_LINE
FRAME_HEADER
                                           = 1,
= 1,
00031
          MICROROC_HEADER
BCID
00032
00033
                                           = 1,
                                           = 3,
00034
00035
           DATA
                                           = 16,
00036
           FRAME_TRAILER
                                           = 1,
00037
           GLOBAL_TRAILER
          CRC_MSB
CRC_LSB
00038
                                           = 1,
00039
          // Slowcontrol
SC_HEADER
00040
00041
          DIF_ID
ASIC_HEADER
00042
                                           = 1,
00043
00044 SC_ASIC_SIZE
00045 SC_TRAILER
          SC_ASIC_SIZE
00046 };
```

5.51.2.2 Value enum class Value : std::uint8_t [strong]

Enumerator

GLOBAL_HEADER	
GLOBAL_HEADER_TEMP	
HEADER_LINE	
TRAILER_LINE	
FRAME_HEADER	
FRAME_TRAILER	
FRAME_TRAILER_ERROR	
GLOBAL_TRAILER	
SC_HEADER	
SC_TRAILER	
GLOBAL_HEADER	
GLOBAL_HEADER_TEMP	
HEADER_LINE	
TRAILER_LINE	
FRAME_HEADER	
FRAME_TRAILER	
FRAME_TRAILER_ERROR	
GLOBAL_TRAILER	
SC_HEADER	
SC_TRAILER	

Definition at line 48 of file Payload150.cc.

```
00049 {
00050
        GLOBAL_HEADER
                            = 0xb0,
        GLOBAL_HEADER_TEMP = 0xbb,
00051
        HEADER\_LINE = 0xc4,
00052
                            = 0xd4.
00053
        TRATLER LINE
       FRAME_HEADER = 0xb4,
FRAME_TRAILER = 0xa3,
00054
00055
00056
        FRAME\_TRAILER\_ERROR = 0xc3,
        GLOBAL_TRAILER = 0xa0,
SC_HEADER = 0xb1,
00057
00058
        SC_HEADER
                      = 0xa1
       SC_TRAILER
00059
00060 };
```

5.52 Payload150.cc

```
00001
00005 #include "Payload150.h"
00007 #include "Utilities.h"
80000
00009 enum class Size : std::uint8_t
00010 {
        // Header
00011
        DATA_FORMAT_VERSION
        DATA_FORMAT_VERSION = 1,
DAQ_SOFTWARE_VERSION = 2,
00012
00013
        SDCC_FIRMWARE_VERSION = 2,
00014
00015
        DIF_FIRMWARE_VERSION = 2,
        TIMESTAMP_SECONDES = 4,
TIMESTAMP_MILLISECONDS = 4,
00016
00017
00018
        // Payload
        GLOBAL_HEADER
00020
        PMR_ID_SHIFT
        PMR_NBASIC_SHIFT
00021
                                = 1,
                                = 1,
00022
        PMR FORMAT SHIFT
        PMR_GTC_SHIFT
PMR_ABCID_SHIFT
                                = 3.
00023
00024
                                = 6,
00025
        PMR_BCID_SHIFT
00026
        PMR_LTRG_SHIFT
                                = 4,
00027
        HEADER_LINE
00028
                                = 1.
        NUMBER_CHIPS
00029
                                = 1.
00030
        LINE_SIZE
                                = 64 * 2,
        TRAILER_LINE
                                = 1,
                                = 1,
00032
        FRAME_HEADER
00033
        MICROROC_HEADER
00034
        BCID
                                = 3,
00035
        DATA
                                = 16,
        FRAME_TRAILER
00036
                                = 1.
        GLOBAL_TRAILER
00037
                                = 1.
00038
        CRC_MSB
00039
        CRC_LSB
                                = 1,
        // Slowcontrol
SC_HEADER
00040
                                = 1,
00041
00042
        DIF_ID
ASIC_HEADER
                                = 1,
00043
                                = 1,
00044
        SC_ASIC_SIZE
00045
        SC_TRAILER
00046 };
00047
00048 enum class Value : std::uint8 t
00049 {
00050 GLOBAL_HEADER
00051 GLOBAL_HEADER_
        GLOBAL_HEADER_TEMP = 0xbb,
                       = 0xc4,= 0xd4,
00052
        HEADER_LINE
00053
        TRAILER LINE
       FRAME_HEADER
FRAME_TRAILER
00054
                            = 0xb4,
= 0xa3,
00055
00056
        FRAME_TRAILER_ERROR = 0xc3,
00057
        GLOBAL\_TRAILER = 0xa0,
00058
        SC_HEADER
                             = 0xb1,
00059
       SC TRAILER
                             = 0xa1
00060 };
00061
00062 static inline std::uint32_t operator+(const Size& a, const Size& b) { return
      static_cast<std::uint32_t>(a) + static_cast<std::uint32_t>(b); }
00063 static inline std::uint32_t operator+(const std::uint32_t& a, const Size& b) { return a +
      static_cast<std::uint32_t>(b); }
00064 static inline std::uint32_t operator+(const Size& a) { return static_cast<std::uint32_t>(a); }
00065
00066 inline void Payload150::parsePayload()
00067 {
```

5.52 Payload150.cc 119

```
00068
       m_Frames.clear();
       std::uint32_t fshift{static_cast<std::uint32_t>(Size::GLOBAL_HEADER)}; // Pass Global Header
00069
00070
        // Pass DIF_ID, DIF Trigger counter, Information counter, Global Trigger counter, Absolute BCID,
     BCID DIF, NB line
00071
       fshift += Size::PMR_ID_SHIFT + Size::PMR_NBASIC_SHIFT + Size::PMR_FORMAT_SHIFT + Size::PMR_GTC_SHIFT
      + Size::PMR_ABCID_SHIFT + Size::PMR_BCID_SHIFT + Size::PMR_LTRG_SHIFT;
       while(static_cast<std::uint8_t>(begin()[fshift]) !=
     static_cast<std::uint8_t>(Value::GLOBAL_TRAILER))
00073
00074
         m_Frames.push_back(&begin()[fshift]);
00075
         fshift += Size::MICROROC_HEADER + Size::BCID + Size::DATA;
00076
00077
       // Pass Global trailer
       fshift += +Size::GLOBAL_TRAILER;
00078
00079
        // Pass CRC MSB, CRC LSB
00080
        fshift += Size::CRC_MSB + Size::CRC_LSB;
00081
       theGetFramePtrReturn_ = fshift;
00082 }
00083
00084 inline std::uint32_t Payload150::getNumberOfFrames()const { return m_Frames.size(); }
00085
00086 inline std::uint32_t Payload150::getThresholdStatus(const std::uint32_t& i, const std::uint32_t&
      ipad)const { return (((std::uint32_t)getFrameLevel(i, ipad, 1))) | ((std::uint32_t)getFrameLevel(i,
      ipad, 0) « 1); }
00087
00088 inline bool Payload150::getFrameLevel(const std::uint32_t& i, const std::uint32_t& ipad, const
      std::uint32_t& ilevel)const
00089 {
00090
       std::uint32_t shift{Size::MICROROC_HEADER + Size::BCID};
       return ((m_Frames[i][shift + ((3 - ipad / 16) * 4 + (ipad % 16) / 4)] » (7 - (((ipad % 16) % 4) * 2
00091
      + ilevel))) & 0x1);
00092 }
00093
00094 inline std::uint32_t Payload150::getDIFid()const
00095 {
00096
       std::uint32_t shift{+Size::GLOBAL_HEADER};
00097
       return begin()[shift] & 0xFF;
00099
00100 inline std::uint32_t Payload150::getGTC()const
00101 {
00102
       std::uint32 t shift{Size::GLOBAL HEADER + Size::PMR ID SHIFT + Size::PMR NBASIC SHIFT +
     Size::PMR_FORMAT_SHIFT};
00103
        return (begin()[shift] « 16) + (begin()[shift + 1] « 8) + begin()[shift + 2];
00104 }
00105
00106 inline std::uint64_t Payload150::getAbsoluteBCID()const
00107 {
       std::uint32 t shift{Size::GLOBAL HEADER + Size::PMR ID SHIFT + Size::PMR NBASIC SHIFT +
00108
     Size::PMR_FORMAT_SHIFT + Size::PMR_GTC_SHIFT};
std::uint64_t LBC = ((begin()[shift] « 8) | (begin()[shift + 1])) * 16777216ULL + ((begin()[shift +
00109
     2] « 24) | (begin()[shift + 3] « 16) | (begin()[shift + 4] « 8) | begin()[shift + 5]);
        return LBC;
00110
00111 }
00112
00113 inline std::uint32 t Payload150::getDTC()const
00114 {
00115
        // MAYBE NOR USEFUL
       std::uint32_t shift{};
00116
00117
        return (begin()[shift] « 24) + (begin()[shift + 1] « 16) + (begin()[shift + 2] « 8) + begin()[shift
     + 31;
00118 }
00119
00120 inline std::uint32 t Payload150::getBCID()const
00121 {
00122
        std::uint32_t shift{Size::GLOBAL_HEADER + Size::PMR_ID_SHIFT + Size::PMR_NBASIC_SHIFT +
     Size::PMR_FORMAT_SHIFT + Size::PMR_GTC_SHIFT + Size::PMR_ABCID_SHIFT};
       return (begin()[shift] « 16) + (begin()[shift + 1] « 8) + begin()[shift + 2];
00123
00124 }
00125
00126 inline std::uint32_t Payload150::getASICid(const std::uint32_t& i)const { return m_Frames[i][0] &
      0xFF; }
00127
00128 inline std::uint32_t Payload150::getFrameBCID(const std::uint32_t& i)const
00129 {
00130
       std::uint32_t shift{+Size::MICROROC_HEADER};
00131
        return GrayToBin((m_Frames[i][shift] « 16) + (m_Frames[i][shift + 1] « 8) + m_Frames[i][shift + 2]);
00132 }
00133
00134 inline std::uint32_t Payload150::getFrameTimeToTrigger(const std::uint32_t& i)const { return getBCID()
      - getFrameBCID(i); }
00135
00136 Payload150::~Payload150() {}
```

5.53 libs/core/src/RawBufferNavigator.cc File Reference

```
#include "RawBufferNavigator.h"
```

5.53.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file RawBufferNavigator.cc.

5.54 RawBufferNavigator.cc

Go to the documentation of this file.

```
00005 #include "RawBufferNavigator.h"
00006
00007 std::int32_t RawBufferNavigator::m_StartPayload{20};
80000
00009 void RawBufferNavigator::startAt(const int& start)
00010 {
00011
        if(start >= 0) m_StartPayload = start;
00012 }
00013
00014 RawBufferNavigator::RawBufferNavigator() {}
00015
00016 void RawBufferNavigator::setBuffer(const Buffer& b) { m_Buffer = b; }
00017
00018 std::uint32_t RawBufferNavigator::getDetectorID() { return m_Buffer[0]; }
00019
00020 std::int32_t RawBufferNavigator::getStartOfPayload() {    return m_StartPayload; }
00021
00022 Buffer RawBufferNavigator::getPayload() { return Buffer(&(m_Buffer.begin()[m_StartPayload]),
      m_Buffer.size() - m_StartPayload); }
```

5.55 libs/core/src/Version.cc File Reference

```
#include "Version.h"
```

5.55.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Version.cc.

5.56 Version.cc 121

5.56 Version.cc

```
Go to the documentation of this file.
```

```
00005 #include "Version.h"
00006
00007 const static Version streamout_version;
00008
00009 std::uint8_t Version::getMajor() { return major; }
00010
00011 std::uint8_t Version::getMinor() { return minor; }
00012
00013 std::uint8_t Version::getPatch() { return patch; }
00014
00015 std::string Version::getPreRelease()
00016 {
00017
          switch (prerelease_type)
00018
          case semver::prerelease::alpha: return "alpha";
case semver::prerelease::beta: return "beta";
case semver::prerelease::rc: return "rc";
case semver::prerelease::none: return "";
00019
00020
00021
00023
            default: return "";
00024 }
00025 }
00026
00027 std::uint8_t Version::getPreReleaseNumber() { return prerelease_number; }
```

5.57 libs/interface/Dump/include/textDump.h File Reference

```
#include "Interface.h"
#include "Payload.h"
#include "spdlog/sinks/stdout_color_sinks.h"
#include <memory>
#include <spdlog/logger.h>
```

Classes

class textDump

5.57.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file textDump.h.

5.58 textDump.h

```
00001
00005 #pragma once
00006
00007 #include "Interface.h"
00008 #include "Payload.h"
00009 #include "spdlog/sinks/stdout_color_sinks.h"
00011 #include <memory>
00012 #include <spdlog/logger.h>
00013
```

```
00014 class textDump : public InterfaceWriter
00016 public:
00017
       textDump();
00018
       void
                                         start();
00019
                                         processDIF(const Payload&);
       void
                                         processFrame(const Payload&, uint32_t frameIndex);
00020
       void
00021
                                         processPadInFrame(const Payload&, uint32_t frameIndex, uint32_t
     channelIndex);
00022
       void
                                         processSlowControl(Buffer);
00023
       void
                                         end();
00024
       std::shared_ptr<spdlog::logger>& print() { return m_InternalLogger; }
00025
                                         setLevel(const spdlog::level::level_enum& level) {
       void
     m_InternalLogger->set_level(level); }
00026
00027 private:
00028
       // This class is a dumb class to print on terminal so we need the logger + the standard one given by
     the interface.
       std::shared_ptr<spdlog::logger> m_InternalLogger{nullptr};
00030 1:
```

5.59 libs/interface/Dump/src/textDump.cc File Reference

```
#include "textDump.h"
```

5.59.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file textDump.cc.

5.60 textDump.cc

```
00001
00005 #include "textDump.h"
00006
00007 textDump::textDump() : InterfaceWriter("textDump", "1.0.0")
00008 {
00009
       m_InternalLogger = std::make_shared<spdlog::logger>("textDump",
     std::make_shared<spdlog::sinks::stdout_color_sink_mt>());
00010 m_InternalLogger->set_level(spdlog::level::trace);
       addCompatibility("RawdataReader", ">=1.0.0");
addCompatibility("DIFdataExample", ">=1.0.0");
00013 }
00014
00015 void textDump::start() { print()->info("Will dump bunch of DIF data"); }
00016
00017 void textDump::processDIF(const Payload& d) { print()->info("DIF_ID : {}, DTC : {}, GTC : {}, DIF BCID
      {}, Absolute BCID: {}, Nbr frames {}", d.getDIFid(), d.getDTC(), d.getGTC(), d.getBCID(),
      d.getAbsoluteBCID(), d.getNumberOfFrames()); }
00018
00019 void textDump::processFrame(const Payload& d, uint32_t frameIndex)
00020 {
       print()->info("\tDisplaying frame number {}: ASIC ID {}, Frame BCID {}, Frame Time To Trigger
00021
      (a.k.a timestamp) is {}", frameIndex, d.getASICid(frameIndex), d.getFrameBCID(frameIndex),
      d.getFrameTimeToTrigger(frameIndex));
00022 }
00023
00024 void textDump::processPadInFrame(const Payload& d, uint32_t frameIndex, uint32_t channelIndex)
00025 {
00026
        if(d.getThresholdStatus(frameIndex, channelIndex) > 0) { print()->info("\t\tChannel {}, Threshold
     {}", channelIndex, d.getThresholdStatus(frameIndex, channelIndex)); }
00027 }
00028
00029 void textDump::processSlowControl(Buffer) { print()->error("textDump::processSlowControl not
      implemented yet."); }
00031 void textDump::end() { print()->info("textDump end of report"); }
```

5.61 libs/interface/LCIO/include/LCIOWriter.h File Reference

```
#include "EVENT/LCIO.h"
#include "IMPL/LCCollectionVec.h"
#include "IMPL/LCEventImpl.h"
#include "IMPL/RawCalorimeterHitImpl.h"
#include "IO/LCWriter.h"
#include "Interface.h"
#include "Payload.h"
#include <memory>
#include <string>
#include <vector>
```

Classes

· class LCIOWriter

5.61.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file LCIOWriter.h.

5.62 LCIOWriter.h

```
00001
00005 #pragma once
00006
00007 #include "EVENT/LCIO.h"
00008 #include "IMPL/LCCollectionVec.h"
00009 #include "IMPL/LCEventImpl.h"
00010 #include "IMPL/RawCalorimeterHitImpl.h"
00011 #include "IO/LCWriter.h"
00012 #include "Interface.h"
00013 #include "Payload.h"
00014
00015 #include <memory>
00016 #include <string>
00017 #include <vector>
00018
00019 class LCIOWriter: public InterfaceWriter
00020 {
00021 public:
00022
        LCIOWriter();
00023
00024
       void setFilename(const std::string&);
00025
00026
        void start();
        void processDIF(const Payload&);
00028
        void processFrame(const Payload&, const std::uint32_t& frameIndex);
00029
        void processPadInFrame(const Payload&, const std::uint32_t& frameIndex, const std::uint32_t&
      channelIndex);
00030
        void processSlowControl(const Buffer&) { ; }
        void end();
00032
00033
        virtual void startEvent();
00034
       virtual void endEvent();
00035
        virtual void startDIF();
00036
       virtual void endDIF();
00037
       virtual void startFrame();
00038
       virtual void endFrame();
```

5.63 libs/interface/LCIO/src/LCIOWriter.cc File Reference

```
#include "LCIOWriter.h"
#include "Filesystem.h"
#include "IMPL/LCFlagImpl.h"
#include "IMPL/LCParametersImpl.h"
#include "IMPL/LCRunHeaderImpl.h"
#include "IOIMPL/LCFactory.h"
#include "LCIOSTLTypes.h"
```

5.63.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file LCIOWriter.cc.

5.64 LCIOWriter.cc

```
00001
00009 #include "LCIOWriter.h"
00010
00011 #include "Filesystem.h"
00012 #include "IMPL/LCFlagImpl.h"
00013 #include "IMPL/LCParametersImpl.h"
00014 #include "IMPL/LCRunHeaderImpl.h"
00015 #include "IOIMPL/LCFactory.h
00016 #include "LCIOSTLTypes.h"
00017
00018 void LCIOWriter::setFilename(const std::string& filename) { m_Filename = filename; }
00019
00020 LCIOWriter::LCIOWriter(): InterfaceWriter("LCIOWriter", "1.0.0"),
      m_LCWriter(IOIMPL::LCFactory::getInstance()->createLCWriter()) { addCompatibility("RawdataReader",
      ">=1.0.0"); }
00021
00022 void LCIOWriter::start()
00023 {
00024 m_LCWriter->open(m_Filename, EVENT::LCIO::WRITE_NEW);
00025
        std::unique_ptr<IMPL::LCRunHeaderImpl> runHdr(new IMPL::LCRunHeaderImpl);
                                                   filename_ = filename(m_Filename);
begin_ = filename_.find_last_of("_R");
00026
       std::string
00027
       std::size_t
                                                  begin_
       if(begin_ == std::string::npos) begin_ = filename_.find_last_of('_');
filename_ = filename_.substr(begin_ + 1);
00028
00029
00030
       setRunNumber(stoi(filename_));
00031
       runHdr->setRunNumber(getRunNumber());
       runHdr->setDetectorName(m_DetectorName);
00033
       std::string description("data collected with SDHCAL prototype");
00034
        runHdr->setDescription(description);
00035
       m_LCWriter->writeRunHeader(runHdr.get());
00036 }
00037
00038 void LCIOWriter::end() { m_LCWriter->close(); }
```

```
00040 void LCIOWriter::processDIF(const Payload& d)
00041 {
00042
        std::string
                     parameter_name = "DIF" + std::to_string(d.getDIFid()) + "_Triggers";
00043
        EVENT::IntVec parameters;
        parameters.push_back(d.getDTC());
00044
00045
        parameters.push back(d.getGTC());
       parameters.push_back(d.getBCID());
00047
        parameters.push_back(d.getAbsoluteBCID() & 0xFFFFFF);
00048
        parameters.push_back((d.getAbsoluteBCID() » 24) & 0xFFFFFF);
00049
        parameters.push_back(0);
00050
        parameters.push_back(0);
00051
        parameters.push_back(0);
00052
       m_CollectionVec->parameters().setValues("DIF" + std::to_string(d.getDIFid()) + "_Triggers",
     parameters);
00053
       parameter_name = "DIF_DetectorID_" + std::to_string(d.getDIFid());
00054
        m_CollectionVec->parameters().setValue(parameter_name, static_cast<int>(d.getDetectorID()));
00055 3
00056
00057 void LCIOWriter::processFrame(const Payload& d, const std::uint32_t& frameIndex) {}
00058
00059 void LCIOWriter::processPadInFrame(const Payload& d, const std::uint32 t& frameIndex, const
      std::uint32_t& channelIndex)
00060 {
00061
        m_LCEvent->setTimeStamp(d.getAbsoluteBCID() * 200);
00062
        m_LCEvent->setRunNumber(getRunNumber());
        IMPL::RawCalorimeterHitImpl* hit = new IMPL::RawCalorimeterHitImpl;
00063
00064
                                     ID0 = channelIndex;
                                          = ID0 « 8;
00065
        TDO
00066
        ID0 += d.getASICid(frameIndex);
        ID0 = ID0 « 8;
00067
        ID0 += d.getDIFid();
00068
00069
        hit->setCellID0(ID0);
00070
        hit->setAmplitude(d.getThresholdStatus(frameIndex, channelIndex));
00071
        hit->setTimeStamp(d.getFrameTimeToTrigger(frameIndex));
00072
        m_CollectionVec->addElement(hit);
00073 }
00074
00075 void LCIOWriter::startEvent()
00076 {
00077
       m_LCEvent = std::make_unique<IMPL::LCEventImpl>();
00078
       m_LCEvent->setEventNumber(getEventNumber());
00079
       m_LCEvent->setDetectorName(m_DetectorName);
       m\_LCEvent->setWeight(1);
08000
       m_CollectionVec = new IMPL::LCCollectionVec(EVENT::LCIO::RAWCALORIMETERHIT);
IMPL::LCFlagImpl flag(0);
00081
00082
00083
        // flag.setBit(EVENT::LCIO::RCHBIT_ID1);
00084
       flag.setBit(EVENT::LCIO::RCHBIT_TIME);
00085
        m_CollectionVec->setFlag(flag.getFlag());
       m_CollectionVec->parameters().setValue(EVENT::LCIO::CellIDEncoding, "dif:8,asic:8,channel:6");
00086
00087 }
00088
00089 void LCIOWriter::endEvent()
00090 {
00091
       m_LCEvent->addCollection(m_CollectionVec, "DHCALRawHits");
00092
       m_LCWriter->writeEvent(m_LCEvent.get());
00093 }
00095 void LCIOWriter::startDIF() {}
00096
00097 void LCIOWriter::endDIF() {}
00098
00099 void LCIOWriter::startFrame() {}
00100
00101 void LCIOWriter::endFrame() {}
00102
00103 void LCIOWriter::startPad() {}
00104
00105 void LCIOWriter::endPad() {}
```

5.65 libs/interface/RawDataReader/include/RawdataReader.h File Reference

```
#include "Interface.h"
#include <array>
#include <cstdint>
#include <fstream>
#include <string>
#include <vector>
```

Classes

· class RawdataReader

5.65.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file RawdataReader.h.

5.66 RawdataReader.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006
00007 #include "Interface.h"
80000
00009 #include <arrav>
00010 #include <cstdint>
00011 #include <fstream>
00012 #include <string>
00013 #include <vector>
00014
00015 class Buffer;
00016
00017 class RawdataReader : public InterfaceReader
00018 {
00019 public:
00020
        explicit RawdataReader(const char* fileName);
        void start();
void end();
00021
00022
        void end();
float getFileSize();
void openFile(const std::string& fileName);
void closeFile();
bool nextEvent();
00023
00024
00025
00026
00027
        bool
                       nextDIFbuffer();
        const Buffer& getBuffer();
virtual ~RawdataReader() { closeFile(); }
00028
00029
00030
       static void setDefaultBufferSize(const std::size_t& size);
00031
00032 private:
        void uncompress();
std::ifstream m_FileStream;
00033 void
00034 std::
00035
                              setFileSize(const std::size_t& size);
        void
        static std::size_t m_BufferSize;
00036
        std::size_t m_FileSize{0};
00037
00038
        std::uint32_t
                               m_NumberOfDIF{0};
00039
        std::vector<bit8_t> m_buf;
00040
       std::string
                            m_Filename;
00041 };
```

5.67 libs/interface/RawDataReader/src/RawdataReader.cc File Reference

```
#include "RawdataReader.h"
#include "Exception.h"
#include <cstring>
#include <stdexcept>
#include <zlib.h>
```

5.68 RawdataReader.cc 127

5.67.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file RawdataReader.cc.

5.68 RawdataReader.cc

```
00001
00004 #include "RawdataReader.h"
00005
00006 #include "Exception.h"
00007
00008 #include <cstring>
00009 #include <stdexcept>
00010 #include <zlib.h>
00011
00013 std::size_t RawdataReader::m_BufferSize = 0x100000;
00014
00015 void RawdataReader::setDefaultBufferSize(const std::size_t& size) { m_BufferSize = size; }
00016
00017 RawdataReader::RawdataReader(const char* fileName) : InterfaceReader("RawdataReader", "1.0.0")
00018 {
00019
       m buf.reserve(m BufferSize);
       m_Filename = fileName;
00020
00021 }
00022
00023 void RawdataReader::start() { openFile(m_Filename); }
00024
00025 void RawdataReader::end() { closeFile(); }
00026
00027 void RawdataReader::uncompress()
00028 {
00029
       static const std::size_t size_buffer{0x20000};
                                 shift{3 * sizeof(std::uint32_t) + sizeof(std::uint64_t)};
00030
       std::size t
                                 obuf[size_buffer];
00031
       static bit8 t
                                 size_buffer_end{0x20000}; // NOLINT(runtime/int)
00032
       unsigned long
00033 std::int8_t
                                 rc = ::uncompress(obuf, &size_buffer_end, &m_Buffer[shift], m_Buffer.size()
     - shift);
00034
        switch(rc)
00035
00036
         case Z OK: break;
         case Z_MEM_ERROR: throw Exception(Z_MEM_ERROR, "Not enough memory"); break;
case Z_BUF_ERROR: throw Exception(Z_BUF_ERROR, "Not enough room in the output buffer"); break;
00037
00038
          case Z_DATA_ERROR: throw Exception(Z_DATA_ERROR, "The input data was corrupted or incomplete");
00039
     break;
00040
         default: throw Exception("The input data was corrupted or incomplete"); break;
00041
00042
       memcpy(&m_Buffer[shift], obuf, size_buffer_end);
00043
       m_Buffer.setSize(size_buffer_end + shift);
00044 }
00045
00046 void RawdataReader::closeFile()
00047 {
00048
        {
00050
          if(m_FileStream.is_open()) m_FileStream.close();
00051
00052
        catch(const std::ios_base::failure& e)
00053
00054
          log()->error("Caught an ios base::failure in closeFile : {} {} ", e.what(), e.code().value());
00055
          throw;
00056
00057 }
00058
00059 void RawdataReader::openFile(const std::string& fileName)
00060 {
00061
00062
00063
          m_FileStream.rdbuf()->pubsetbuf(0, 0);
00064
          m_FileStream.exceptions(std::ifstream::failbit | std::ifstream::badbit);
00065
          m_FileStream.open(fileName.c_str(), std::ios::in | std::ios::binary | std::ios::ate); // Start at
     the end to directly calculate the size of the file then come back to beginning
00066
         m_FileStream.rdbuf()->pubsetbuf(0, 0);
00067
          if (m_FileStream.is_open())
```

```
{
00069
            setFileSize(m_FileStream.tellg());
00070
            m_FileStream.seekg(0, std::ios::beg);
00071
00072
00073
        catch (const std::ios base::failure& e)
00075
          log()->error("Caught an ios_base::failure in openFile : {}", e.what());
00076
00077
00078 }
00079
00080 bool RawdataReader::nextEvent()
00081 {
00082
00083
         m_FileStream.read(reinterpret_cast<char*>(&m_EventNumber), sizeof(std::uint32_t));
00084
00085
         m_FileStream.read(reinterpret_cast<char*>(&m_NumberOfDIF), sizeof(std::uint32_t));
00086
00087
       catch(const std::ios_base::failure& e)
88000
00089
         return false;
00090
00091
       return true;
00092 }
00094 bool RawdataReader::nextDIFbuffer()
00095 {
00096
00097
       {
00098
         static int DIF_processed{0};
00099
          if(DIF_processed >= m_NumberOfDIF)
00100
00101
           DIF_processed = 0;
00102
           return false;
00103
00104
         else
00105
00106
           DIF_processed++;
00107
           std::uint32_t bsize{0};
00108
           m_FileStream.read(reinterpret_cast<char*>(&bsize), sizeof(std::uint32_t));
           m_FileStream.read(reinterpret_cast<char*>(&m_buf[0]), bsize);
00109
00110
           m_Buffer = Buffer(m_buf);
00111
         }
00112
00113
        catch(const std::ios_base::failure& e)
00114
         log()->error("Caught an ios_base::failure in openFile : {}", e.what());
00115
00116
         return false;
00117
00118
       return true;
00119 }
00120
00121 const Buffer& RawdataReader::getBuffer()
00122 {
00123
       uncompress();
       return m_Buffer;
00125 }
00126
00127 void RawdataReader::setFileSize(const std::size_t& size) { m_FileSize = size; }
00128
00129 float RawdataReader::getFileSize() { return m FileSize; }
```

5.69 libs/interface/ROOT/include/DIF.h File Reference

```
#include "Hit.h"
#include <TObject.h>
#include <cstdint>
#include <map>
#include <vector>
```

Classes

• class DIF

5.70 DIF.h 129

Typedefs

using Hits_const_iterator = std::vector< Hit >::const_iterator

5.69.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIF.h.

5.69.2 Typedef Documentation

```
5.69.2.1 Hits_const_iterator using Hits_const_iterator = std::vector<Hit>::const_iterator
```

Definition at line 14 of file DIF.h.

5.70 DIF.h

```
00005 #pragma once
00006
00007 #include "Hit.h"
80000
00009 #include <TObject.h>
00010 #include <cstdint>
00011 #include <map>
00012 #include <vector>
00013
00014 using Hits_const_iterator = std::vector<Hit>::const_iterator;
00015
00016 class DIF : public TObject
00017 {
00018 public:
00019
        void
                                         clear();
00020
                                         addHit(const Hit&);
00021
                                         setID(const std::uint8_t&);
00022
       std::uint8_t
                                         getID() const;
00023
        void
                                         setDTC(const std::uint32_t&);
00024
                                         getDTC() const;
       std::uint32 t
00025
                                         setDetectorID(const std::uint32_t&);
       void
00026
                                         getDetectorID() const;
       std::uint8_t
00027
                                         setGTC(const std::uint32_t&);
00028
        std::uint32_t
                                         getGTC() const;
00029
        void
                                         setDIFBCID(const std::uint32_t&);
        std::uint32_t
00030
                                         getDIFBCID() const;
                                         setAbsoluteBCID(const std::uint64_t&);
00031
        void
00032
        std::uint64_t
                                         getAbsoluteBCID() const;
00033
        std::vector<Hit>::const_iterator cbegin() const;
00034
       std::vector<Hit>::const_iterator cend() const;
00035
00036 private:
                         m_DetectorID{0};
00037
       std::uint8 t
00038
       std::uint8_t
                        m_ID{0};
00039
       std::uint32_t
                         m_DTC{0};
00040
       std::uint32_t
                         m_GTC{0};
00041
       std::uint32_t
                         m_DIFBCID{0};
00042
       std::uint64 t
                         m_AbsoluteBCID{0};
00043
       std::vector<Hit> m_Hits;
00044
       ClassDef(DIF, 1);
00045 };
```

5.71 libs/interface/ROOT/include/DIFLinkDef.h File Reference

```
#include <vector>
```

5.71.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIFLinkDef.h.

5.72 DIFLinkDef.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006 #include <vector>
00007
00008 #ifdef __CLING__
00009 #pragma link C++ class DIF;
00010 #pragma link C++ class Hit;
00011 #pragma link C++ class std::vector < Hit>;
00012 #endif
```

5.73 libs/interface/ROOT/include/Event.h File Reference

```
#include "DIF.h"
#include <TObject.h>
#include <cstdint>
#include <map>
```

Classes

class Event

Typedefs

• using DIFs_const_iterator = std::map< std::uint8_t, DIF >::const_iterator

5.73.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Event.h.

5.74 Event.h 131

5.73.2 Typedef Documentation

```
5.73.2.1 DIFs_const_iterator using DIFs_const_iterator = std::map<std::uint8_t, DIF>::const_← iterator
```

Definition at line 13 of file Event.h.

5.74 Event.h

Go to the documentation of this file.

```
00005 #pragma once
00006
00007 #include "DIF.h"
00008
00009 #include <TObject.h>
00010 #include <cstdint>
00011 #include <map>
00012
00013 using DIFs_const_iterator = std::map<std::uint8_t, DIF>::const_iterator;
00014
00015 class Event : public TObject
00016 {
00017 public:
00018
       std::uint32_t
                                                        getEventNumber();
00019
        void
                                                        setEventNumber(const std::uint32_t& evtNbr);
00020
        void
                                                        clear():
00021
                                                        addDIF(const DIF& dif);
        void
       std::map<std::uint8_t, DIF>::const_iterator cbegin() const;
00023
        std::map<std::uint8_t, DIF>::const_iterator cend() const;
00024
00025 private:
00026 std::uint32_t m_Eve
00027 std::map<std::uint8_t, DIF> DIFs;
00028 ClassDef(Event, 1);
                                       m_EventNumber{0};
00029 };
```

5.75 libs/interface/ROOT/include/EventLinkDef.h File Reference

```
#include <cstdint>
#include <map>
#include <vector>
```

5.75.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file EventLinkDef.h.

5.76 EventLinkDef.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006 #include <cstdint>
00007 #include <map>
00008 #include <vector>
00009 #ifdef __CLING__
00010 #pragma link C++ class DIF;
00011 #pragma link C++ class std::vector < DIF>;
00012 #pragma link C++ class Hit;
00013 #pragma link C++ class std::vector < Hit>;
00014 #pragma link C++ class std::vector < Hit>;
00015 #pragma link C++ class std::vector < Event>;
00016 #pragma link C++ class std::vector < Event>;
00017 #pragma link C++ class std::wector < Event>;
00019 #pragma link C++ class std::wector < Event>;
00010 #pragma link C++ class std::wector < Event>;
00011 #pragma link C++ class std::wector < Event>;
00011 #pragma link C++ class std::wector < Event>;
00011 #pragma link C++ class std::wector < Event>;
```

5.77 libs/interface/ROOT/include/Hit.h File Reference

```
#include <TObject.h>
#include <cstdint>
```

Classes

· class Hit

5.77.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Hit.h.

5.78 Hit.h

```
00001
00005 #pragma once
00006
00007 #include <TObject.h>
00008 #include <cstdint>
00010 class Hit : public TObject
00011 {
00012 public:
00013
         void
                           clear();
                       setDIF(const std::uint8_t&);
setASIC(const std::uint8_t&);
00014
          void
00015
          void
                         setASIC(const std::uint8_t&);
setChannel(const std::uint8_t&);
setThreshold(const std::uint8_t&);
setDTC(const std::uint32_t&);
setGTC(const std::uint32_t&);
setDIFBCID(const std::uint32_t&);
00016
         void
00017
         void
00018
         void
00019
         void
00020
         void
00021
                           setFrameBCID(const std::uint32_t&);
          void
00022
          void
                           setTimestamp(const std::uint32_t&);
00023
         void
                            setAbsoluteBCID(const std::uint64_t&);
         std::uint8_t getDIFid() const;
00024
                           getASICid() const;
00025
         std::uint8_t
         std::uint8_t getChannel() const;
00026
        std::uint8_t getThreshold() const;
00028
        std::uint32_t getDTC() const;
```

```
std::uint32_t getGTC() const;
00030
          std::uint32_t getDIFBCID() const;
00031
          std::uint32_t getFrameBCID() const;
00032 std::uint32_t getTimestamp() const;
00033 std::uint64_t getAbsoluteBCID() con
          std::uint64_t getAbsoluteBCID() const;
00034
00035 private:
00036 std::uint8_t m_DIF{0};

00037 std::uint8_t m_ASIC{0};

00038 std::uint8_t m_Channel{0};

00039 std::uint8_t m_Threshold{0};
         std::uint32_t m_DTC{0};
std::uint32_t m_GTC{0};
00040
00040
00041
00042
          std::uint32_t m_DIFBCID{0};
00043
          std::uint32_t m_FrameBCID{0};
00044
          std::uint32_t m_Timestamp{0};
00045 std::uint64_t m_Al
00046 ClassDef(Hit, 1);
          std::uint64_t m_AbsoluteBCID{0};
00047 };
```

5.79 libs/interface/ROOT/include/HitLinkDef.h File Reference

5.79.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file HitLinkDef.h.

5.80 HitLinkDef.h

Go to the documentation of this file.

```
00001
00005 #pragma once
00006 #ifdef __CLING__
00007 #pragma link C++ class Hit;
00008 #endif
```

5.81 libs/interface/ROOT/include/ROOTWriter.h File Reference

```
#include "Event.h"
#include "Interface.h"
#include "Payload.h"
#include <TFile.h>
#include <TTree.h>
#include <string>
#include <vector>
```

Classes

class ROOTWriter

5.82 ROOTWriter.h

```
Go to the documentation of this file.
```

```
00006 #pragma once
00007
00008 #include "Event.h"
00009 #include "Interface.h"
00010 #include "Payload.h"
00011
00012 #include <TFile.h>
00013 #include <TTree.h>
00014 #include <string>
00015 #include <vector>
00016
00017 class ROOTWriter : public InterfaceWriter
00018 {
00019 public:
00020 ROOTWriter();
00021
00022
        void setFilename(const std::string&);
00023
00024
        void start();
00025
        void processDIF(const Payload&);
00026
        void processFrame(const Payload&, const std::uint32_t& frameIndex);
00027 void processPadInFrame(const Payload&, const std::uint32_t& frameIndex, const std::uint32_t&
channelIndex);
00028 void process
00028 void processSlowControl(const Buffer&) { ; } 00029 void end();
00030
00031 virtual void startEvent();
00032 virtual void endEvent();
00033 virtual void startDIF();
00034 virtual void endDIF();
00035 virtual void startFrame();
00036 virtual void endFrame();
00037
        virtual void startPad();
00038 virtual void endPad();
00039
00040 private:
                     m_File{nullptr};
00041 TFile*
00042
                     m_Tree{nullptr};
        TTree*
00043
                      m_Event{nullptr};
        Event*
        DIF*
00044
                      m_DIF{nullptr};
00045 Hit*
                      m_Hit{nullptr};
00046
        std::string m_Filename;
00047 };
```

5.83 libs/interface/ROOT/src/DIF.cc File Reference

```
#include "DIF.h"
#include <cstdint>
```

5.83.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file DIF.cc.

5.84 DIF.cc 135

5.84 DIF.cc

Go to the documentation of this file.

```
00001
00006 #include "DIF.h"
00007
00008 #include <cstdint>
00009
00010 void DIF::addHit(const Hit& hit) { m_Hits.push_back(hit); }
00011
00012 void DIF::setID(const std::uint8_t& id) { m_ID = id; }
00013
00014 std::uint8_t DIF::getID()const { return m_ID; }
00015
00016 void DIF::setDTC(const std::uint32_t& dtc) { m_DTC = dtc; }
00017
00018 std::uint32_t DIF::getDTC()const { return m_DTC; }
00019
00020 void DIF::setGTC(const std::uint32_t& gtc) { m_GTC = gtc; }
00021
00022 std::uint32_t DIF::getGTC()const { return m_GTC; }
00023
00024 void DIF::setDIFBCID(const std::uint32_t& difbcid) { m_DIFBCID = difbcid; }
00025
00026 std::uint32_t DIF::getDIFBCID()const { return m_DIFBCID; }
00027
00028 void DIF::setAbsoluteBCID(const std::uint64_t& absolutebcid) { m_AbsoluteBCID = absolutebcid; }
00029
00030 std::uint64_t DIF::qetAbsoluteBCID()const { return m_AbsoluteBCID; }
00031
00032 std::vector<Hit>::const_iterator DIF::cbegin()const { return m_Hits.cbegin(); }
00033
00034 std::vector<Hit>::const_iterator DIF::cend()const { return m_Hits.cend(); }
00035
00036 void DIF::clear() { m_Hits.clear(); }
00037
00038 void DIF::setDetectorID(const std::uint32_t& detector_id) { m_DetectorID = detector_id; }
00039
00040 std::uint8_t DIF::getDetectorID()const { return m_DetectorID; }
```

5.85 libs/interface/ROOT/src/Event.cc File Reference

```
#include "Event.h"
```

5.85.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Event.cc.

5.86 Event.cc

```
00001
00006 #include "Event.h"
00007
00008 std::uint32_t Event::getEventNumber() { return m_EventNumber; }
00009
00010 void Event::setEventNumber(const std::uint32_t& evtNbr) { m_EventNumber = evtNbr; }
00011
00012 void Event::clear() { DIFs.clear(); }
00013
00014 void Event::addDIF(const DIF& dif) { DIFs[dif.getID()] = dif; }
00015
00016 std::map<std::uint8_t, DIF>::const_iterator Event::cbegin()const { return DIFs.cbegin(); }
00017
00018 std::map<std::uint8_t, DIF>::const_iterator Event::cend()const { return DIFs.cend(); }
```

5.87 libs/interface/ROOT/src/Hit.cc File Reference

```
#include "Hit.h"
```

5.87.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file Hit.cc.

5.88 Hit.cc

```
00006 #include "Hit.h"
00007 void Hit::clear()
00008 {
00009
       m DTF
                       = 0:
00010
       m_ASIC
                       = 0;
00011
       m_Channel
                       = 0;
00012
        m\_Threshold
00013
        m_DTC
                       = 0:
00014
       m_GTC
                       = 0;
00015
       m_DIFBCID
                       = 0:
       m_FrameBCID
00016
                      = 0;
00017
        m_Timestamp
                         0;
00018
       m_AbsoluteBCID = 0;
00019 }
00020
00021 void Hit::setDIF(const std::uint8_t& dif) { m_DIF = dif; }
00022
00023 void Hit::setASIC(const std::uint8 t& asic) { m ASIC = asic; }
00024
00025 void Hit::setChannel(const std::uint8_t& channel) { m_Channel = channel; }
00026
00027 void Hit::setThreshold(const std::uint8_t& threshold) { m_Threshold = threshold; }
00028
00029 void Hit::setDTC(const std::uint32_t& dtc) { m_DTC = dtc; }
00030
00031 void Hit::setGTC(const std::uint32_t& gtc) { m_GTC = gtc; }
00032
00033 void Hit::setDIFBCID(const std::uint32_t& difbcid) { m_DIFBCID = difbcid; }
00034
00035 void Hit::setFrameBCID(const std::uint32_t& framebcid) { m_FrameBCID = framebcid; }
00037 void Hit::setTimestamp(const std::uint32_t& timestamp) { m_Timestamp = timestamp; }
00038
00039 void Hit::setAbsoluteBCID(const std::uint64_t& absolutebcid) { m_AbsoluteBCID = absolutebcid; }
00040
00041 std::uint8_t Hit::getDIFid()const { return m_DIF; }
00042
00043 std::uint8_t Hit::getASICid()const { return m_ASIC; }
00044
00045 std::uint8_t Hit::getChannel()const { return m_Channel; }
00046
00047 std::uint8_t Hit::getThreshold()const { return m_Threshold; }
00048
00049 std::uint32_t Hit::getDTC()const { return m_DTC; }
00050
00051 std::uint32_t Hit::getGTC()const { return m_GTC; }
00052
00053 std::uint32_t Hit::getDIFBCID()const { return m_DIFBCID; }
00054
00055 std::uint32_t Hit::getFrameBCID()const { return m_FrameBCID; }
00056
00057 std::uint32_t Hit::getTimestamp()const { return m_Timestamp; }
00058
00059 std::uint64_t Hit::getAbsoluteBCID()const { return m_AbsoluteBCID; }
```

5.89 libs/interface/ROOT/src/ROOTWriter.cc File Reference

```
#include "ROOTWriter.h"
```

5.89.1 Detailed Description

Copyright

2022 G.Grenier F.Lagarde

Definition in file ROOTWriter.cc.

5.90 ROOTWriter.cc

```
00006 #include "ROOTWriter.h"
00007
00008 void ROOTWriter::setFilename(const std::string& filename) { m_Filename = filename; }
00009
00010 ROOTWriter::ROOTWriter(): InterfaceWriter("ROOTWriter", "1.0.0") { addCompatibility("RawdataReader",
00011
00012 void ROOTWriter::start()
00013 {
        m_File = TFile::Open(m_Filename.c_str(), "RECREATE", m_Filename.c_str(),
00014
     ROOT::CompressionSettings(ROOT::kZLIB, 5));
00015 m_Tree = new TTree("RawData", "Raw SDHCAL data tree");
00016
       m_Tree->Branch("Events", &m_Event, 512000, 99);
00017 }
00018
00019 void ROOTWriter::end()
00020 {
00021
        if (m_Tree) m_Tree->Write();
00022
        if (m_File)
00023
00024
         m File->Write();
00025
         m_File->Close();
00026
00027
        if (m File) delete m File;
00028 }
00029
00030 void ROOTWriter::processDIF(const Payload& d)
00031 {
00032
       m DIF->setDetectorID(d.getDetectorID());
00033
       m_DIF->setID(d.getDIFid());
00034
        m_DIF->setDTC(d.getDTC());
00035
        m_DIF->setGTC(d.getGTC());
00036
        m_DIF->setDIFBCID(d.getBCID());
00037
        m_DIF->setAbsoluteBCID(d.getAbsoluteBCID());
00038 }
00039
00040 void ROOTWriter::processFrame(const Payload& d, const std::uint32_t& frameIndex)
00041 {
00042
       m_Hit->setDIF(d.getDIFid());
00043
       m_Hit->setASIC(d.getASICid(frameIndex));
        m_Hit->setDTC(d.getDTC());
00044
00045
       m_Hit->setGTC(d.getGTC());
00046
        m_Hit->setDIFBCID(d.getBCID());
00047
        m_Hit->setAbsoluteBCID(d.getAbsoluteBCID());
00048
        m_Hit->setFrameBCID(d.getFrameBCID(frameIndex));
00049
        m_Hit->setTimestamp(d.getFrameTimeToTrigger(frameIndex));
00050 }
00051
00052 void ROOTWriter::processPadInFrame(const Payload& d, const std::uint32_t& frameIndex, const
      std::uint32_t& channelIndex)
00053 {
00054
        m_Hit->setChannel(channelIndex);
00055
        \verb|m_Hit->setThreshold(static_cast<std::uint8_t>(d.getThresholdStatus(frameIndex)))||
00056 }
00057
00058 void ROOTWriter::startEvent()
```

```
00059 {
00060 m_Event = new Event();

00061 m_Event->setEventNumber(getEventNumber());

00062 // m_Event->clear();

00063 }
00064
00065 void ROOTWriter::endEvent()
00066 {
00070
00071 void ROOTWriter::startDIF()
00072 {
00073 m_DIF = new DIF();
00074 // m_DIF->clear();
00075 }
00076
00077 void ROOTWriter::endDIF()
00078 {
00079 m_Event->addDIF(*m_DIF);
00080 delete m_DIF;
00081 }
00082
00083 void ROOTWriter::startFrame()
00084 {
00085
        m_Hit = new Hit();
00085 | m_Hit - New Hit();
00086 | // m_Hit->clear();
00087 }
00088
00089 void ROOTWriter::endFrame()
00090 {
00091 m_DIF->addHit(*m_Hit);
00092 delete m_Hit;
00093 }
00094
00095 void ROOTWriter::startPad() {}
00097 void ROOTWriter::endPad() {}
```